



Operating Instructions, 90 kW–315 kW D-frame

VLT® AutomationDrive FC 300

Safety

Safety

⚠ WARNING

HIGH VOLTAGE!

Frequency converters contain high voltage when connected to AC mains input power. Installation, start up, and maintenance should be performed by qualified personnel only. Failure to perform installation, start up, and maintenance by qualified personnel could result in death or serious injury.

High Voltage

Frequency converters are connected to hazardous mains voltages. Extreme care should be taken to protect against shock. Only trained personnel familiar with electronic equipment should install, start, or maintain this equipment.

⚠ WARNING

UNINTENDED START!

When the frequency converter is connected to AC mains, the motor may start at any time. The frequency converter, motor, and any driven equipment must be in operational readiness. Failure to be in operational readiness when the frequency converter is connected to AC mains could result in death, serious injury, equipment, or property damage.

Unintended Start

When the frequency converter is connected to the AC mains, the motor may be started by means of an external switch, a serial bus command, an input reference signal, or a cleared fault condition. Use appropriate cautions to guard against an unintended start.

⚠ WARNING

DISCHARGE TIME!

Frequency converters contain DC-link capacitors that can remain charged even when the frequency converter is not powered. To avoid electrical hazards, disconnect AC mains, any permanent magnet type motors, and any remote DC-link power supplies, including battery backups, UPS and DC-link connections to other frequency converters. Wait for the capacitors to fully discharge before performing any service or repair work. The amount of wait time is listed in the *Discharge Time* table. Failure to wait the specified time after power has been removed before doing service or repair could result in death or serious injury.

Voltage [V]	Power range [kW]	Minimum waiting time [min]
3x400	90-250	20
3x400	110-315	20
3x500	110-315	20
3x500	132-355	20
3x525	75-250	20
3x525	90-315	20
3x690	90-250	20
3x690	110-315	20

Discharge Time

Approvals

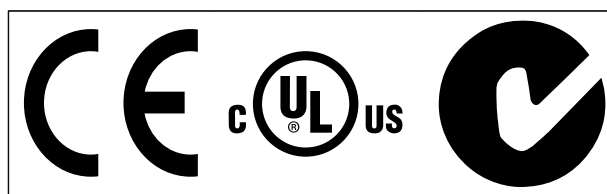


Table 1.2

Contents

1 Introduction	4
1.1 Product Overview	4
1.1.2 Extended Options Cabinets	4
1.2 Purpose of the Manual	5
1.3 Additional Resources	6
1.4 Product Overview	6
1.5 Internal Controller Functions	6
1.6 Frame Sizes and Power Ratings	7
2 Installation	8
2.1 Planning the Installation Site	8
2.2 Pre-Installation Check List	8
2.3 Mechanical Installation	8
2.3.1 Cooling	8
2.3.2 Lifting	9
2.3.3 Wall Mounting - IP21 (NEMA 1) and IP54 (NEMA 12) Units	9
2.4 Electrical Installation	10
2.4.1 General Requirements	10
2.4.2 Earth (Grounding) Requirements	13
2.4.2.1 Leakage Current (>3.5 mA)	13
2.4.2.2 Earthing (Grounding) IP20 Enclosures	14
2.4.2.3 Earthing (Grounding) IP21/54 Enclosures	14
2.4.3 Motor Connection	14
2.4.3.1 Terminal Locations: D1h-D4h	15
2.4.3.2 Terminal Locations: D5h-D8h	18
2.4.4 Motor Cable	26
2.4.5 Motor Rotation Check	26
2.4.6 AC Mains Connection	26
2.5 Control Wiring Connection	27
2.5.1 Access	27
2.5.2 Using Screened Control Cables	27
2.5.3 Earthing (Grounding) of Screened Control Cables	27
2.5.4 Control Terminal Types	28
2.5.5 Wiring to Control Terminals	29
2.5.6 Control Terminal Functions	29
2.6 Serial Communication	30
2.7 Optional Equipment	30
2.7.1 Load Share Terminals	30
2.7.2 Regeneration Terminals	30

2.7.3 Anti-condensation Heater	30
2.7.4 Brake Chopper	30
2.7.5 Mains Shield	30
2.7.6 Mains Disconnect	31
2.7.7 Contactor	31
2.7.8 Circuit Breaker	31
3 Start Up and Commissioning	32
3.1 Pre-start	32
3.2 Applying Power	33
3.3 Basic Operational Programming	33
3.4 Local-control Test	34
3.5 System Start Up	35
4 User Interface	36
4.1 Local Control Panel	36
4.1.1 LCP Layout	36
4.1.2 Setting LCP Display Values	37
4.1.3 Display	37
4.1.4 Navigation Keys	38
4.1.5 Operation Keys	38
4.2 Back Up and Copying Parameter Settings	38
4.2.1 Uploading Data to the LCP	39
4.2.2 Downloading Data from the LCP	39
4.3 Restoring Default Settings	39
4.3.1 Recommended Initialisation	39
4.3.2 Manual Initialisation	39
5 Programming	40
5.1 Introduction	40
5.2 Programming Example	40
5.3 Control Terminal Programming Examples	42
5.4 International/North American Default Parameter Settings	42
5.5 Parameter Menu Structure	43
5.6 Remote Programming with MCT 10 Set-up Software	48
6 Application Examples	49
6.1 Introduction	49
6.2 Application Examples	49
7 Status Messages	54
7.1 Status Display	54

7.2 Status Message Definitions Table	54
8 Warnings and Alarms	57
8.1 System Monitoring	57
8.2 Warning and Alarm Types	57
8.2.1 Warnings	57
8.2.2 Alarm Trip	57
8.2.3 Alarm Trip-lock	57
8.3 Warning and Alarm Displays	57
8.4 Warning and Alarm Definitions	59
8.5 Fault Messages	61
9 Basic Troubleshooting	68
9.1 Start Up and Operation	68
10 Specifications	71
10.1 Power-dependent Specifications	71
10.2 General Technical Data	74
10.3 Fuse Tables	78
10.3.1 Protection	78
10.3.2 Fuse Selection	78
10.3.3 Short Circuit Current Rating (SCCR)	79
10.3.4 Connection Tightening Torques	79
Index	80

1 Introduction

1

1.1 Product Overview

1.1.1 Interior Views

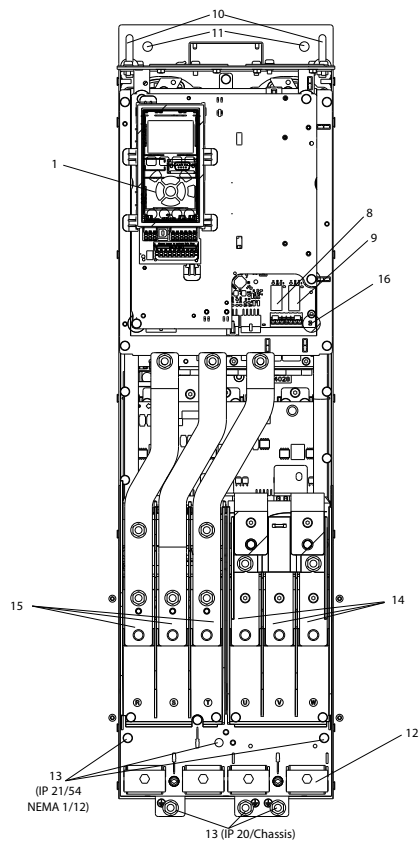


Illustration 1.1 D1 Interior Components

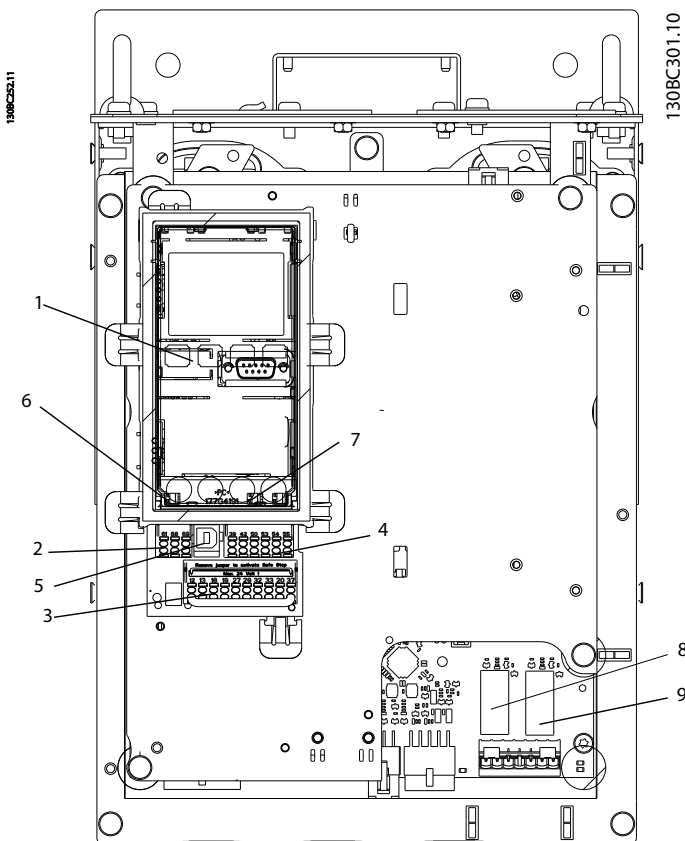


Illustration 1.2 Close-up View: LCP and Control Functions

1	LCP (Local Control Panel)	9	Relay 2 (04, 05, 06)
2	RS-485 serial bus connector	10	Lifting ring
3	Digital I/O and 24 V power supply	11	Mounting slot
4	Analog I/O connector	12	Cable clamp (PE)
5	USB connector	13	Earth (ground)
6	Serial bus terminal switch	14	Motor output terminals 96 (U), 97 (V), 98 (W)
7	Analog switches (A53), (A54)	15	Mains input terminals 91 (L1), 92 (L2), 93 (L3)
8	Relay 1 (01, 02, 03)	16	TB5 (IP21/54 only). Terminal block for anti-condensation heater

Table 1.1

NOTE

For location of TB6 (terminal block for contactor), see **2.4.3.2 Terminal Locations: D5h-D8h**.


1.1.2 Extended Options Cabinets

If a frequency converter is ordered with one of the following options, it is supplied with an options cabinet that makes it taller.

- Brake chopper
- Mains disconnect

- Contactor
- Mains disconnect with contactor
- Circuit breaker

Illustration 1.3 shows an example of a frequency converter with an options cabinet. Table 1.2 lists the variants for the frequency converters that include input options.

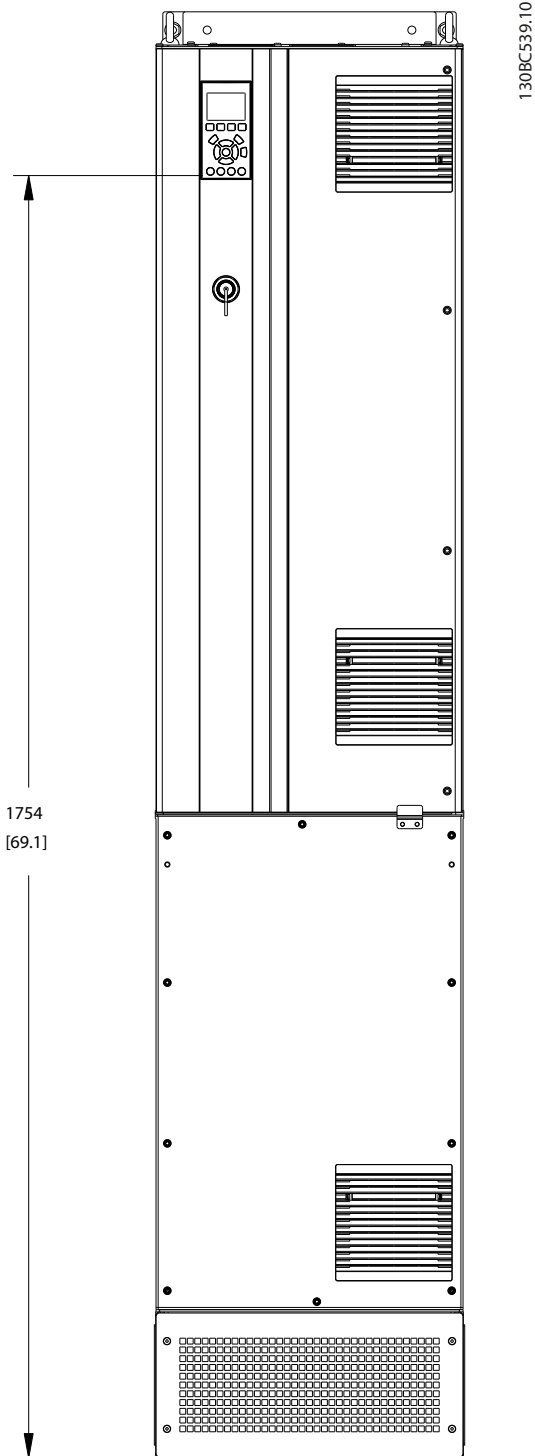

Options unit designations	Extension cabinets	Possible options
D5h	D1h enclosure with short extension	Brake, Disconnect
D6h	D1h enclosure with tall extension	Contactor, Contactor with Disconnect, Circuit Breaker
D7h	D2h enclosure with short extension	Brake, Disconnect
D8h	D2h enclosure with tall extension	Contactor, Contactor with Disconnect, Circuit Breaker

Table 1.2

The D7h and D8h frequency converters (D2h plus options cabinet), include a 200 mm pedestal for floor mounting.

There is a safety latch on the front cover of the options cabinet. If the frequency converter is supplied with a mains disconnect or circuit breaker, the safety latch prevents the cabinet door from being opened while the frequency converter is energized. Before opening the door of the frequency converter, the disconnect or circuit breaker must be opened (to de-energize the frequency converter) and the cover of the options cabinet must be removed.

For frequency converters purchased with a disconnect, contactor or circuit breaker, the name plate label includes a type code for a replacement that does not include the option. If there is a problem with the frequency converter, it is replaced independent of the options.

Refer to 2.7 *Optional Equipment* for more detailed descriptions of the input options and other options that may be added to the frequency converter.

1.2 Purpose of the Manual

This manual is intended to provide detailed information for the installation and start up of the frequency converter. provides requirements for mechanical and electrical installation, including input, motor, control and serial communications wiring and control terminal functions. 3 *Start Up and Commissioning* provides detailed procedures for start up, basic operational programming, and functional testing. The remaining chapters provide supplementary details. These details include user interface, detailed programming, application examples, start-up troubleshooting, and specifications.

Illustration 1.3 D7h Enclosure

1

1.3 Additional Resources

Other resources are available to understand advanced frequency converter functions and programming.

- The *VLT® Programming Guide* provides greater detail on working with parameters and many application examples.
- The *VLT® Design Guide* is intended to provide detailed capabilities and functionality to design motor control systems.
- Supplemental publications and manuals are available from Danfoss. See <http://www.danfoss.com/BusinessAreas/Drives-Solutions/Documentations/Technical+Documentation.htm> for listings.
- Optional equipment is available that may change some of the procedures described. Reference the instructions supplied with those options for specific requirements. Contact the local Danfoss supplier or visit the Danfoss website: <http://www.danfoss.com/BusinessAreas/DrivesSolutions/Documentations/Technical+Documentation.htm>, for downloads or additional information.

1.4 Product Overview

A frequency converter is an electronic motor controller that converts AC mains input into a variable AC waveform output. The frequency and voltage of the output are regulated to control the motor speed or torque. The frequency converter can vary the speed of the motor in response to system feedback, such as position sensors on a conveyor belt. The frequency converter can also regulate the motor by responding to remote commands from external controllers.

In addition, the frequency converter monitors the system and motor status, issues warnings or alarms for fault conditions, starts and stops the motor, optimizes energy efficiency, and offers many more control, monitoring, and efficiency functions. Operation and monitoring functions are available as status indications to an outside control system or serial communication network.

1.5 Internal Controller Functions

Illustration 1.4 is a block diagram of the frequency converter's internal components. See *Table 1.3* for their functions.

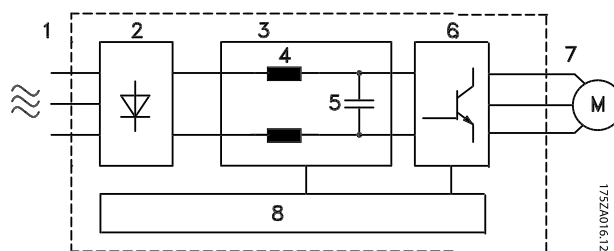


Illustration 1.4 Frequency Converter Block Diagram

Area	Title	Functions
1	Mains input	<ul style="list-style-type: none"> • Three-phase AC mains power supply to the frequency converter
2	Rectifier	<ul style="list-style-type: none"> • The rectifier bridge converts the AC input to DC current to supply inverter power
3	DC bus	<ul style="list-style-type: none"> • Intermediate DC-bus circuit handles the DC current
4	DC reactors	<ul style="list-style-type: none"> • Filter the intermediate DC circuit voltage • Provide line transient protection • Reduce RMS current • Raise the power factor reflected back to the line • Reduce harmonics on the AC input
5	Capacitor bank	<ul style="list-style-type: none"> • Stores the DC power • Provides ride-through protection for short power losses
6	Inverter	<ul style="list-style-type: none"> • Converts the DC into a controlled PWM AC waveform for a controlled variable output to the motor
7	Output to motor	<ul style="list-style-type: none"> • Regulated three-phase output power to the motor
8	Control circuitry	<ul style="list-style-type: none"> • Input power, internal processing, output, and motor current are monitored to provide efficient operation and control • User interface and external commands are monitored and performed • Status output and control can be provided

Table 1.3 Frequency Converter Internal Components

1.6 Frame Sizes and Power Ratings

kW High Overload	75	90	110	132	160	200	250	315	315
kW Normal Overload	90	110	132	160	200	250	315	355	400
400 V		D3h	D3h	D3h	D4h	D4h	D4h		
500 V			D3h	D3h	D3h	D4h	D4h	D4h	
525 V	D3h	D3h	D3h	D4h	D4h	D4h	D4h		
690 V		D3h	D3h	D3h	D4h	D4h	D4h		D4h

Table 1.4 kW Rated Frequency Converters

HP High Overload	100	125	150	200	250	300	350	350
HP Normal Overload	125	150	200	250	300	350	400	450
460 V		D3h	D3h	D3h	D4h	D4h		D4h
575 V	D3h	D3h	D3h	D4h	D4h	D4h	D4h	

Table 1.5 HP Rated Frequency Converters

1

2 Installation

2.1 Planning the Installation Site

2

NOTE

Before performing the installation it is important to plan the installation of the frequency converter. Neglecting this may result in extra work during and after installation.

Select the best possible operation site by considering the following (see details on the following pages and the respective Design Guides):

- Ambient operating temperature
- Installation method
- How to cool the unit
- Position of the frequency converter
- Cable routing
- Ensure the power source supplies the correct voltage and necessary current
- Ensure that the motor current rating is within the maximum current from the frequency converter
- If the frequency converter is without built-in fuses, ensure that the external fuses are rated correctly

Voltage [V]	Altitude restrictions
380-500	At altitudes above 3 km, contact Danfoss regarding PELV
525-690	At altitudes above 2 km, contact Danfoss regarding PELV

Table 2.1 Installation in High Altitudes

2.2 Pre-Installation Check List

- Before unpacking the frequency converter, ensure the packaging is intact. If any damage has occurred, immediately contact the shipping company to claim the damage.
- Before unpacking the frequency converter, locate it as close as possible to the final installation site
- Compare the model number on the nameplate to what was ordered to verify the proper equipment
- Ensure each of the following are rated for the same voltage:
 - Mains (power)
 - Frequency converter
 - Motor
- Ensure that frequency converter output current rating is equal to or greater than motor full load current for peak motor performance

- Motor size and frequency converter power must match for proper overload protection
- If frequency converter rating is less than motor, full motor output cannot be achieved

2.3 Mechanical Installation

2.3.1 Cooling

- Top and bottom clearance for air cooling must be provided. Generally, 225 mm (9 in) is required.
- Improper mounting can result in over heating and reduced performance
- Derating for temperatures starting between 45 °C (113 °F) and 50 °C (122 °F) and elevation 1000 m (3300 ft) above sea level must be considered. See *VLT® Design Guide* for detailed information.

The high power frequency converters utilise a back-channel cooling concept that removes heatsink cooling air, which carries approximately 90% of the heat out of the back channel of the frequency converters. The back-channel air can be redirected from the panel or room using one of the kits below.

Duct cooling

A back-channel cooling kit is available to direct the heatsink cooling air out of the panel when an IP20/chassis frequency converters is installed in a Rittal enclosure. Use of this kit reduces the heat in the panel and smaller door fans can be specified on the enclosure.

Cooling out the back (top and bottom covers)

The back channel cooling air can be ventilated out of the room so that the heat from the back channel is not dissipated into the control room.

A door fan(s) is required on the enclosure to remove the heat not contained in the backchannel of the frequency converters and any additional losses generated by other components inside the enclosure. The total required air flow must be calculated so that the appropriate fans can be selected.

Airflow

The necessary airflow over the heat sink must be secured.
The flow rate is shown in *Table 2.2*.

The fan runs for the following reasons:

- AMA
- DC Hold
- Pre-Mag
- DC Brake
- 60% of nominal current is exceeded
- Specific heatsink temperature exceeded (power size dependent)
- Specific Power Card ambient temperature exceeded (power size dependent)
- Specific Control Card ambient temperature exceeded

Frame	Door fan/top fan	Heatsink fan
D1h/D3h	102 m³/hr (60 CFM)	420 m³/hr (250 CFM)
D2h/D4h	204 m³/hr (120 CFM)	840 m³/hr (500 CFM)

Table 2.2 Airflow

2.3.2 Lifting

Always lift the frequency converter using the dedicated lifting eyes. Use a bar to avoid bending the lifting holes.

CAUTION

The angle from the top of the frequency converter to the lifting cables should be 60° or greater.

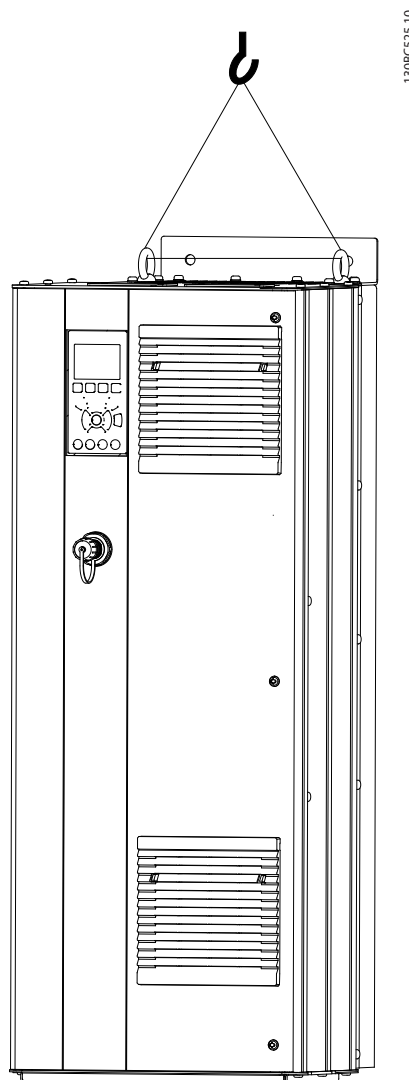


Illustration 2.1 Recommended Lifting Method

2.3.3 Wall Mounting - IP21 (NEMA 1) and IP54 (NEMA 12) Units

Consider the following before selecting the final installation site:

- Free space for cooling
- Access to open the door
- Cable entry from the bottom

2.4 Electrical Installation

2.4.1 General Requirements

This section contains detailed instructions for wiring the frequency converter. The following tasks are described:

- Wiring the motor to the frequency converter output terminals
- Wiring the AC mains to the frequency converter input terminals
- Connecting control and serial communication wiring
- After power has been applied, checking input and motor power; programming control terminals for their intended functions

⚠ WARNING

EQUIPMENT HAZARD!

Rotating shafts and electrical equipment can be hazardous. All electrical work must conform to national and local electrical codes. It is strongly recommended that installation, start up, and maintenance be performed only by trained and qualified personnel. Failure to follow these guidelines could result in death or serious injury.

CAUTION

WIRING ISOLATION!

Run input power, motor wiring and control wiring in three separate metallic conduits or use separated shielded cable for high frequency noise isolation. Failure to isolate power, motor and control wiring could result in less than optimum frequency converter and associated equipment performance.

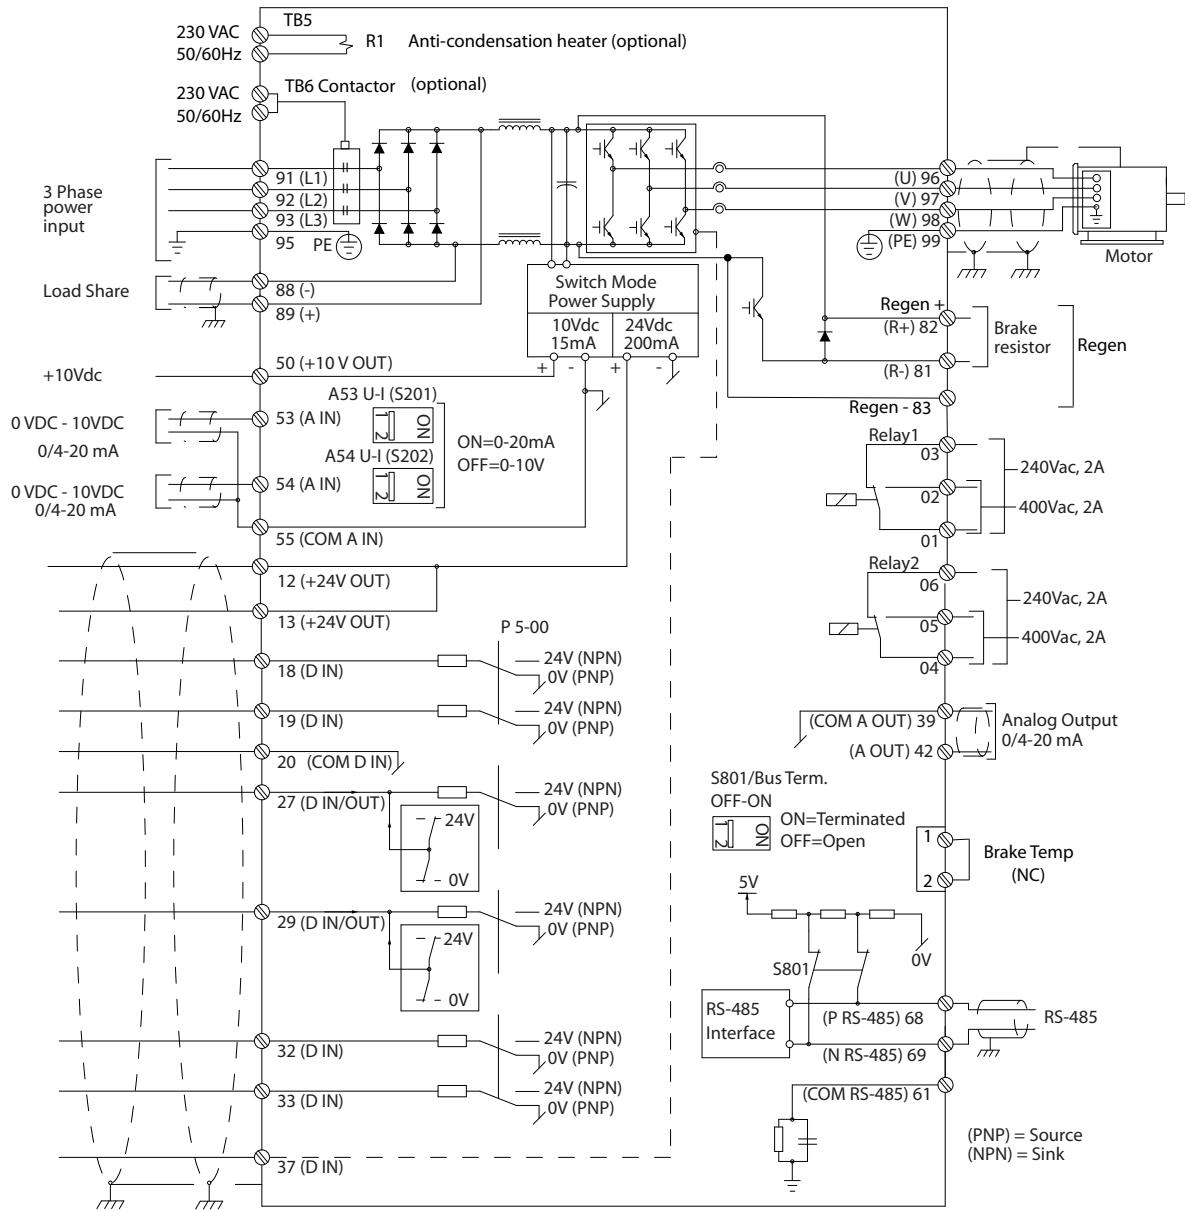


Illustration 2.2 Interconnect Diagram

2

For your safety, comply with the following requirements

- Electronic controls equipment is connected to hazardous mains voltage. Extreme care should be taken to protect against electrical hazards when applying power to the unit.
- Run motor cables from multiple frequency converters multiple frequency converters separately. Induced voltage from output motor cables run together can charge equipment capacitors even with the equipment turned off and locked out.
- Field wiring terminals are not intended to receive a conductor one size larger.

Overload and Equipment Protection

- An electronically activated function within the frequency converter provides overload protection for the motor. The overload calculates the level of increase to activate timing for the trip (controller output stop) function. The higher the current draw, the quicker the trip response. The overload provides Class 20 motor protection. See *8 Warnings and Alarms* for details on the trip function.
- Because the motor wiring carries high frequency current, it is important that wiring for mains, motor power, and control are run separately. Use metallic conduit or separated shielded wire. See *Illustration 2.3*. Failure to isolate power, motor, and control wiring could result in less than optimum equipment performance.
- All frequency converters must be provided with short-circuit and over-current protection. Input fusing is required to provide this protection, see *Illustration 2.4*. If not factory supplied, fuses must be provided by the installer as part of installation. See maximum fuse ratings in *10.3.1 Protection*.

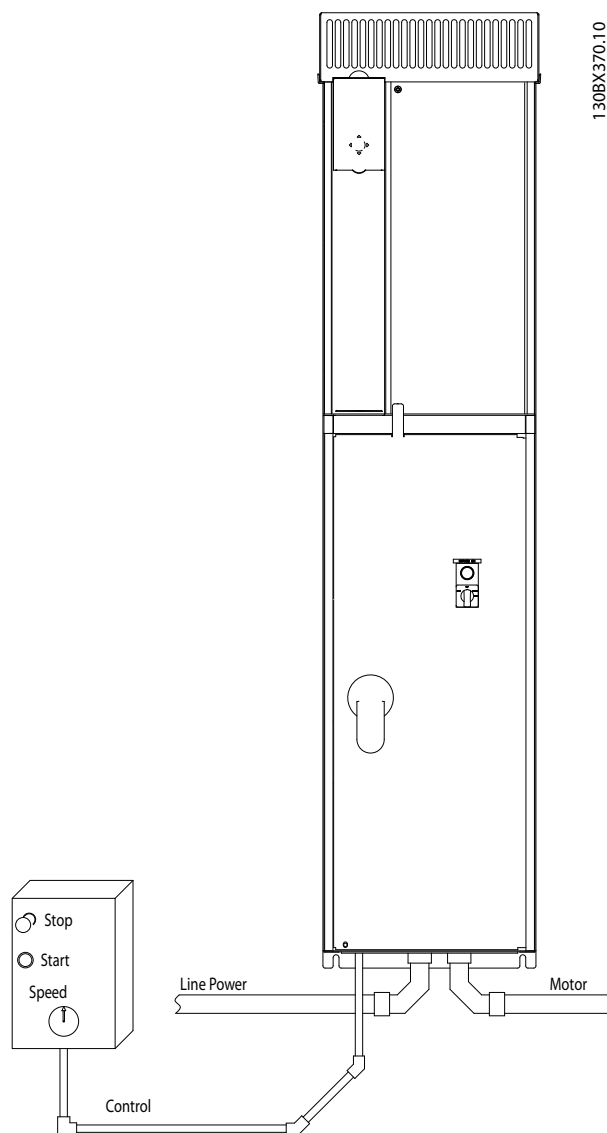


Illustration 2.3 Example of Proper Electrical Installation Using Conduit

- All frequency converters must be provided with short-circuit and over-current protection. Input fusing is required to provide this protection, see *Illustration 2.4*. If not factory supplied, fuses must be provided by the installer as part of installation. See maximum fuse ratings in *10.3.1 Protection*.

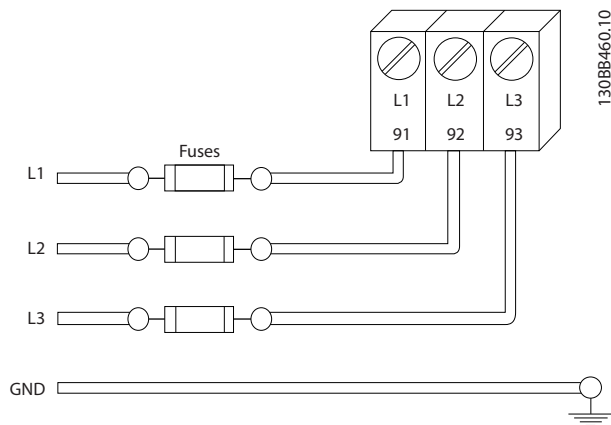


Illustration 2.4 Frequency Converter Fuses

Wire Type and Ratings

- All wiring must comply with local and national regulations regarding cross-section and ambient temperature requirements.
- Danfoss recommends that all power connections be made with a minimum 75 °C rated copper wire.

2.4.2 Earth (Grounding) Requirements

⚠ WARNING

EARTHING (GROUNDING) HAZARD!

For operator safety, it is important to earth (ground) the frequency converter properly in accordance with national and local electrical codes as well as instructions contained within this document. Do not use conduit connected to the frequency converter as a replacement for proper grounding. Earth (ground) currents are higher than 3.5 mA. Failure to earth (ground) the frequency converter properly could result in death or serious injury.

NOTE

It is the responsibility of the user or certified electrical installer to ensure correct earthing (grounding) of the equipment in accordance with national and local electrical codes and standards.

- Follow all local and national electrical codes to earth (ground) electrical equipment properly
- Proper protective earthing (grounding) for equipment with earth (ground) currents higher

than 3.5 mA must be established, see *2.4.2.1 Leakage Current (>3.5 mA)*

- A dedicated earth wire (ground wire) is required for input power, motor power and control wiring
- Use the clamps provided with the equipment for proper earth connections (ground connections)
- Do not earth (ground) one frequency converter to another in a “daisy chain” fashion
- Keep the earth (ground) wire connections as short as possible
- Using high-strand wire to reduce electrical noise is recommended
- Follow motor manufacturer wiring requirements

2.4.2.1 Leakage Current (>3.5 mA)

Follow national and local codes regarding protective earthing of equipment with a leakage current >3.5 mA. Frequency converter technology implies high frequency switching at high power. This will generate a leakage current in the earth connection. A fault current in the frequency converter at the output power terminals might contain a DC component, which can charge the filter capacitors and cause a transient earth current. The earth leakage current depends on various system configurations including RFI filtering, screened motor cables, and frequency converter power.

EN/IEC61800-5-1 (Power Drive System Product Standard) requires special care if the leakage current exceeds 3.5 mA. Earthing (grounding) must be reinforced in one of the following ways:

- Earth (ground) wire of at least 10 mm²
- Two separate earth (ground) wires both complying with the dimensioning rules

See EN 60364-5-54 § 543.7 for further information.

Using RCDs

Where residual current devices (RCDs)—also known as earth leakage circuit breakers (ELCBs)—are used, comply with the following: residual current devices (RCDs)

- Use RCDs of type B only, which are capable of detecting AC and DC currents
- Use RCDs with an inrush delay to prevent faults due to transient earth currents
- Dimension RCDs according to the system configuration and environmental considerations

2.4.2.2 Earthing (Grounding) IP20 Enclosures

The frequency converter can be earthed (grounded) using conduit or shielded cable. For earthing (grounding) of the power connections, use the dedicated earthing (grounding) points as shown in *Illustration 2.6*.

2

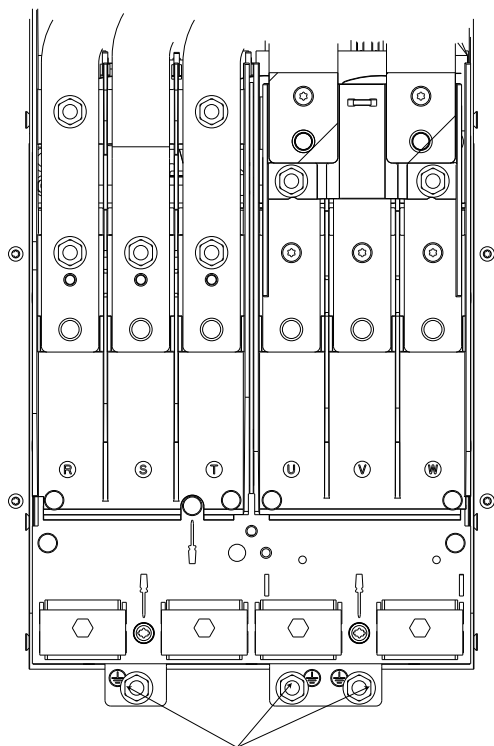


Illustration 2.5 Earthing (Grounding) Points for IP20 (Chassis) Enclosures

2.4.2.3 Earthing (Grounding) IP21/54 Enclosures

The frequency converter can be earthed (grounded) using conduit or shielded cable. For earthing (grounding) of the power connections, use the dedicated earthing (grounding) points as shown in *Illustration 2.6*.

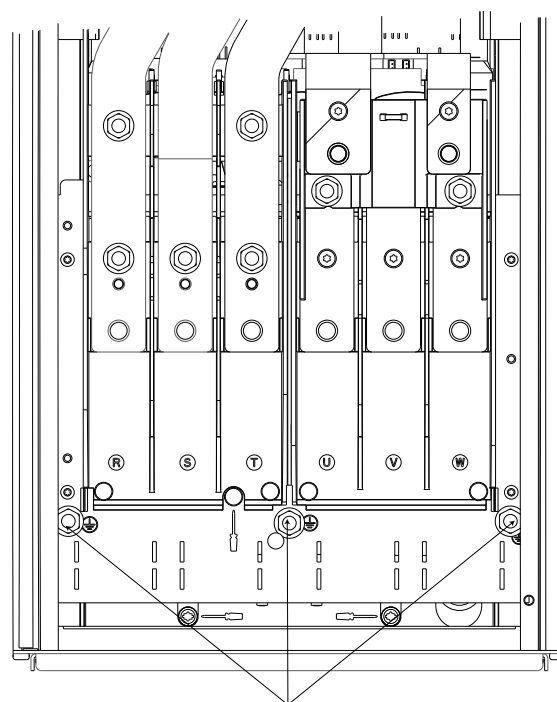


Illustration 2.6 Earthing (Grounding) for IP21/54 Enclosures.

2.4.3 Motor Connection

⚠ WARNING

INDUCED VOLTAGE!

Run output motor cables from multiple frequency converters separately. Induced voltage from output motor cables run together can charge equipment capacitors even with the equipment turned off and locked out. Failure to run output motor cables separately could result in death or serious injury.

- For maximum cable sizes, see 10.1 *Power-dependent Specifications*
- Comply with local and national electrical codes for cable sizes
- Gland plates are provided at the base of IP21/54 and higher (NEMA1/12) units
- Do not install power factor correction capacitors between the frequency converter and the motor
- Do not wire a starting or pole-changing device between the frequency converter and the motor
- Connect the 3-phase motor wiring to terminals 96 (U), 97 (V), and 98 (W)
- Earth (ground) the cable in accordance with the instructions provided

- Torque terminals in accordance with the information provided in 10.3.4 Connection Tightening Torques
- Follow motor manufacturer wiring requirements

2.4.3.1 Terminal Locations: D1h-D4h

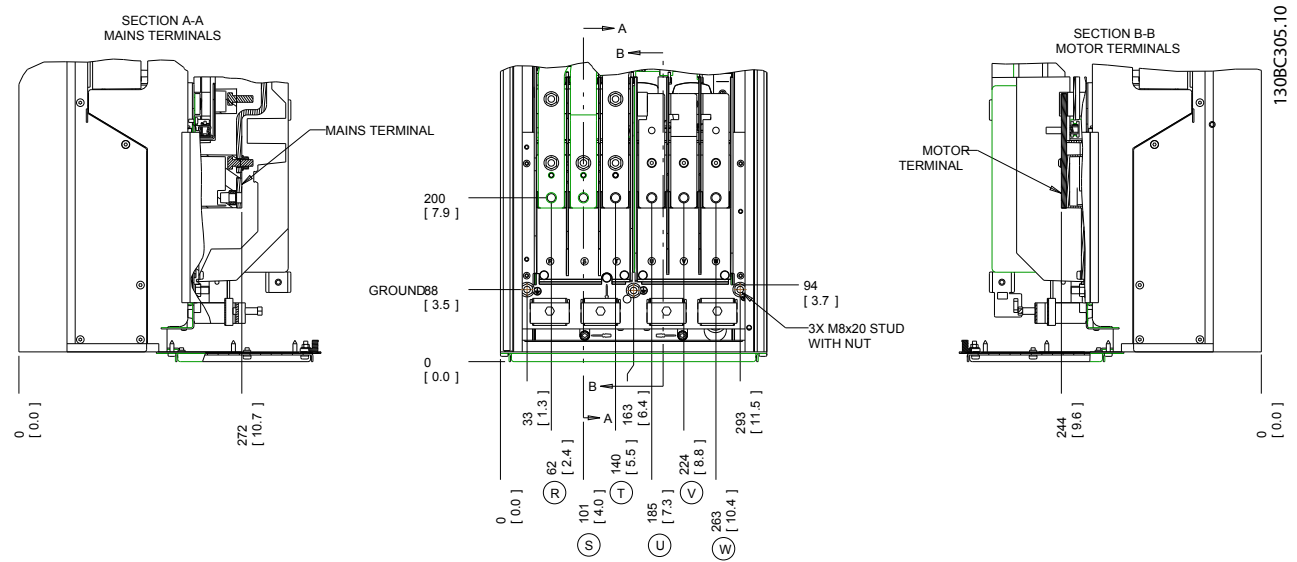


Illustration 2.7 Terminal Locations D1h

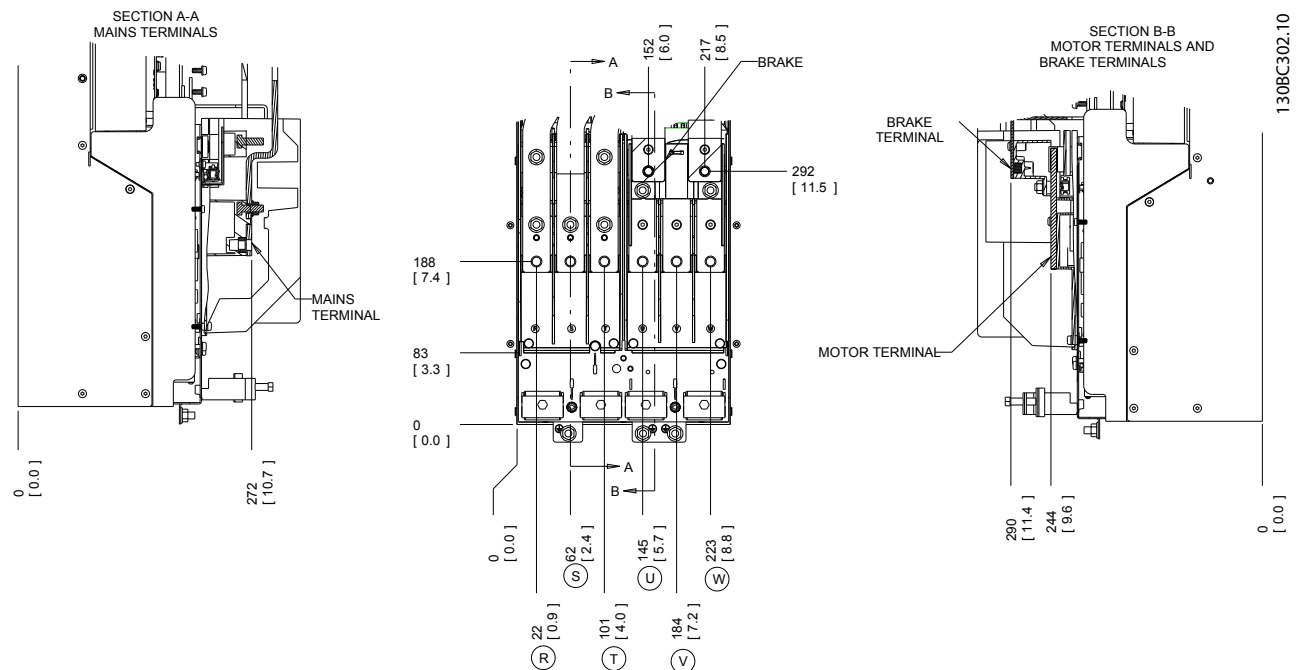


Illustration 2.8 Terminal Locations D3h

2

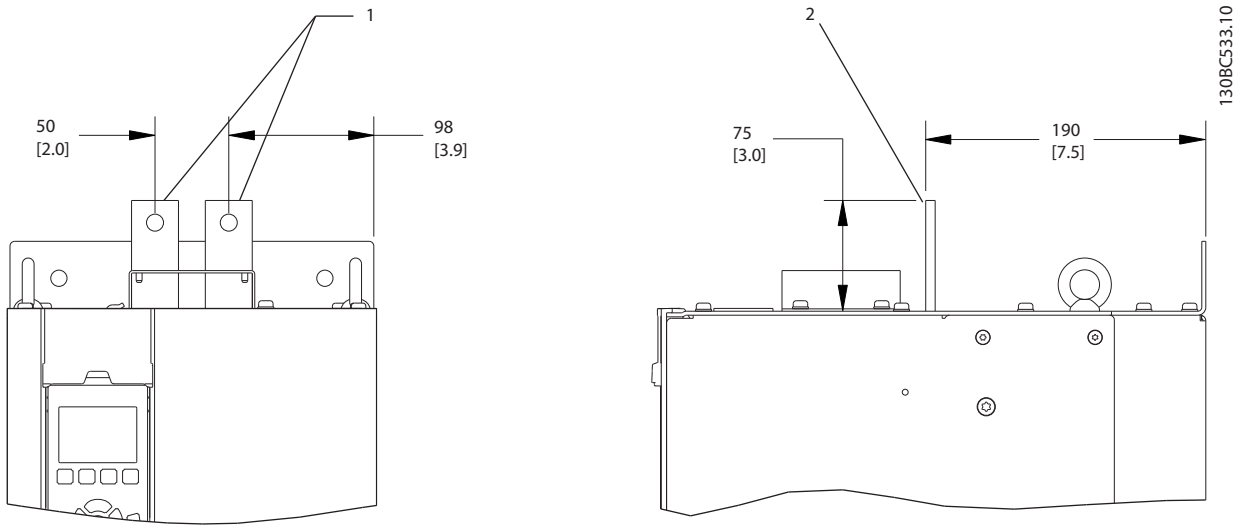


Illustration 2.9 Loadshare and Regeneration Terminals, D3h

1	Front view
2	Side view

Table 2.3

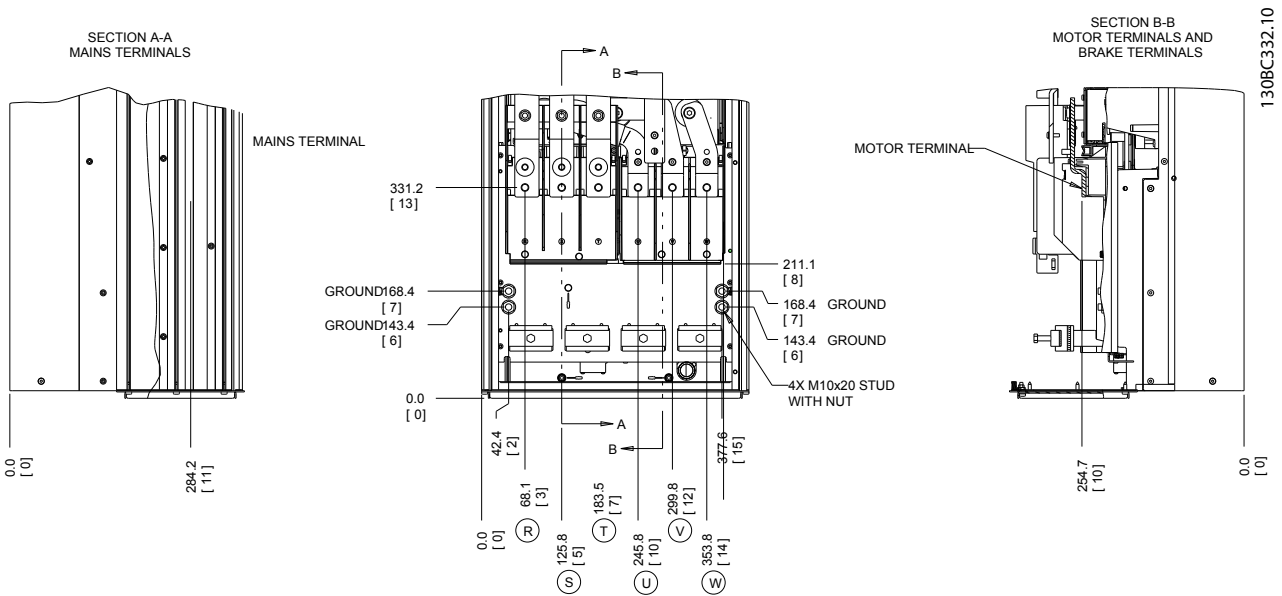


Illustration 2.10 Terminal Locations D2h

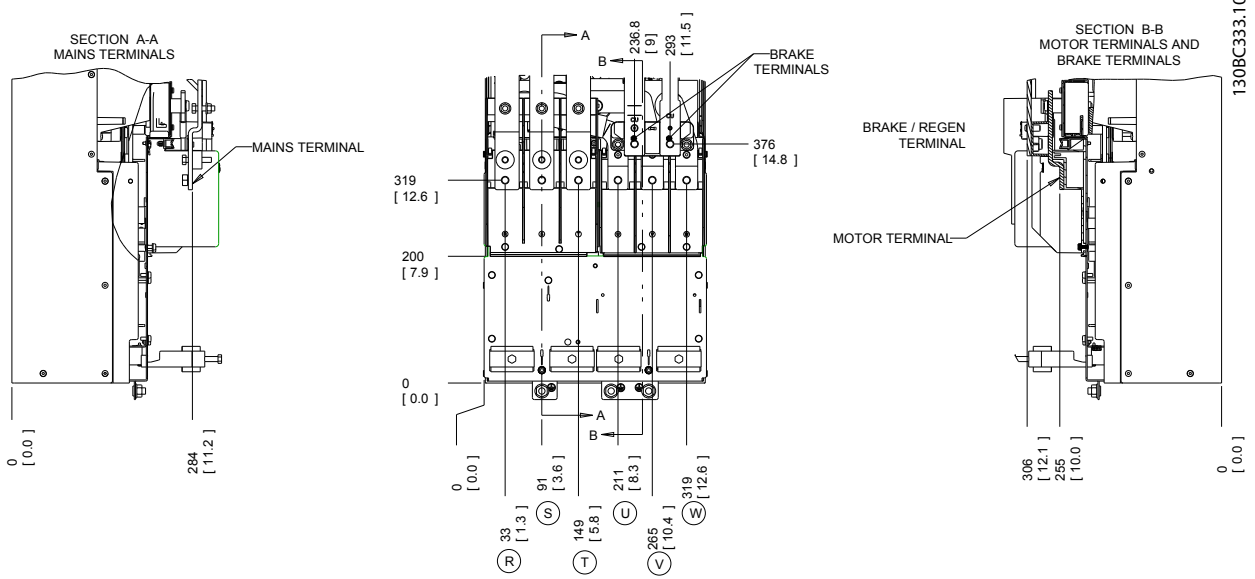


Illustration 2.11 Terminal Locations D4h

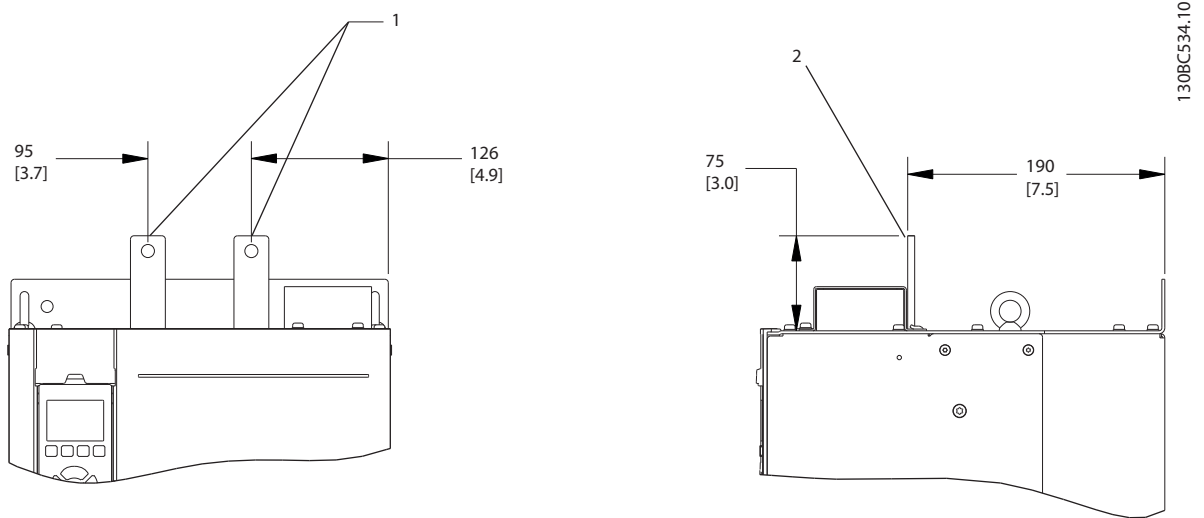


Illustration 2.12 Load share and Regeneration Terminals, D4h

1	Front view
2	Side view

Table 2.4

2.4.3.2 Terminal Locations: D5h-D8h

2

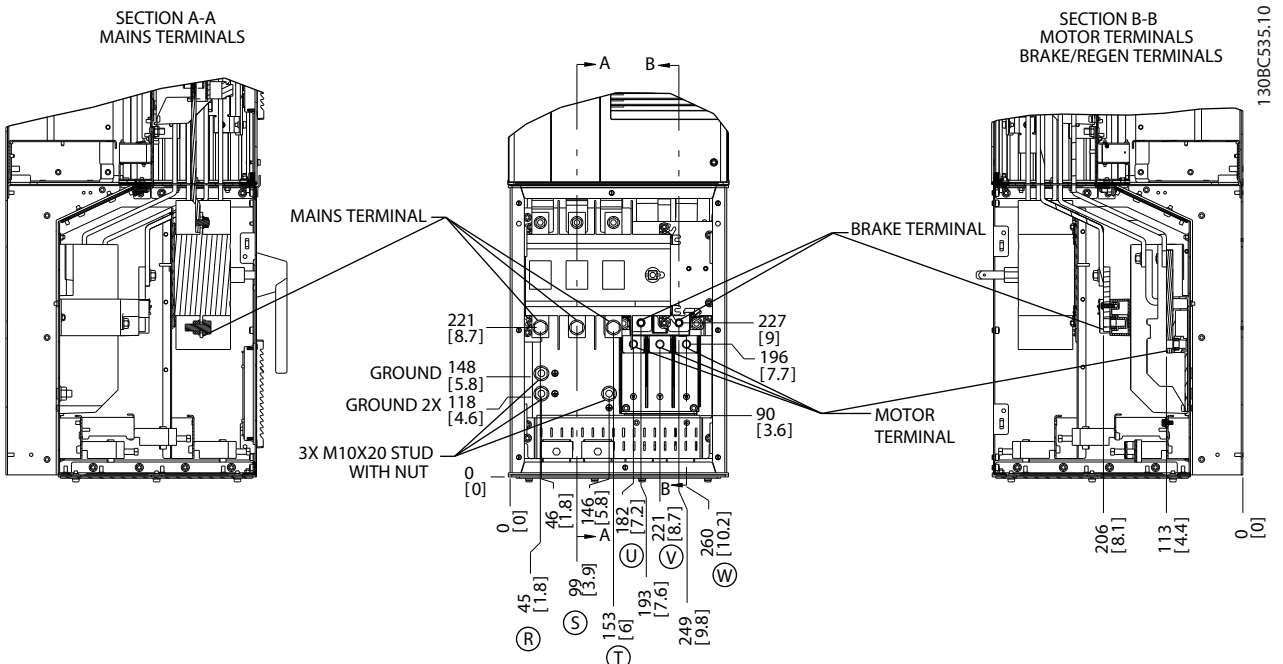


Illustration 2.13 Terminal Locations, D5h with Disconnect Option

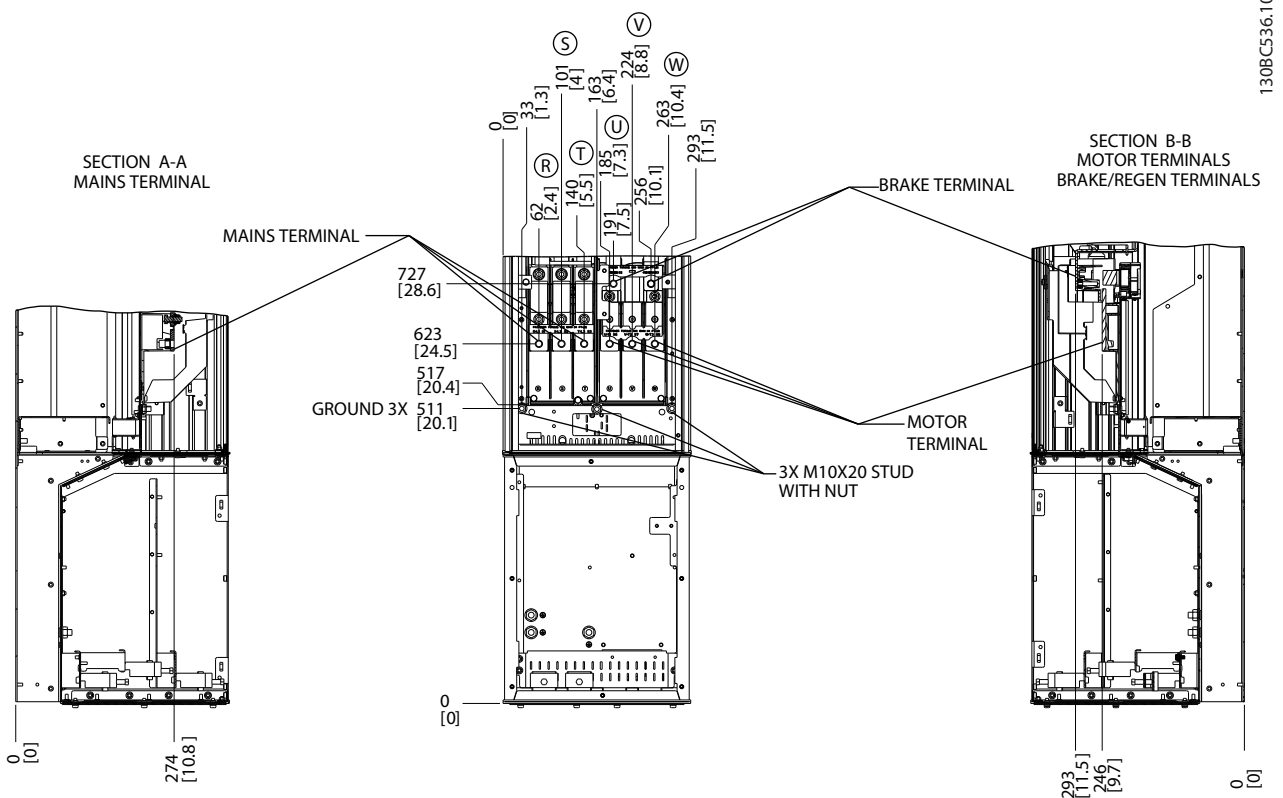


Illustration 2.14 Terminal Locations, D5h with Brake Option

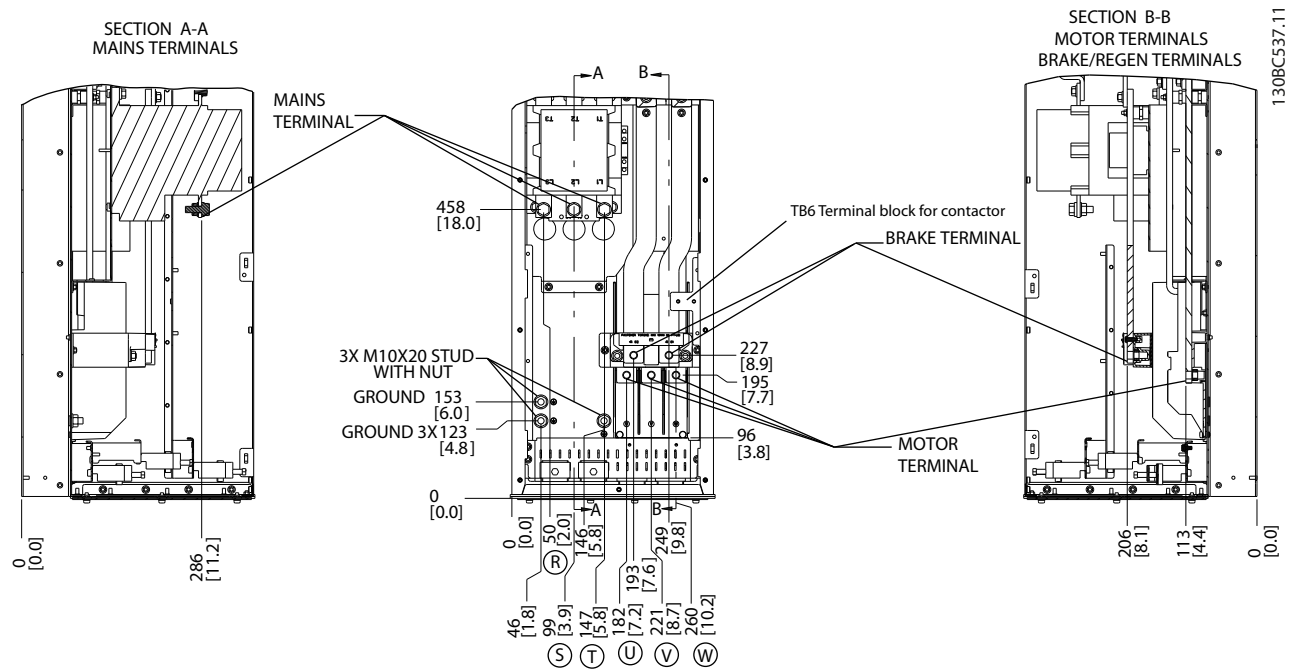


Illustration 2.15 Terminal Locations, D6h with Contactor Option

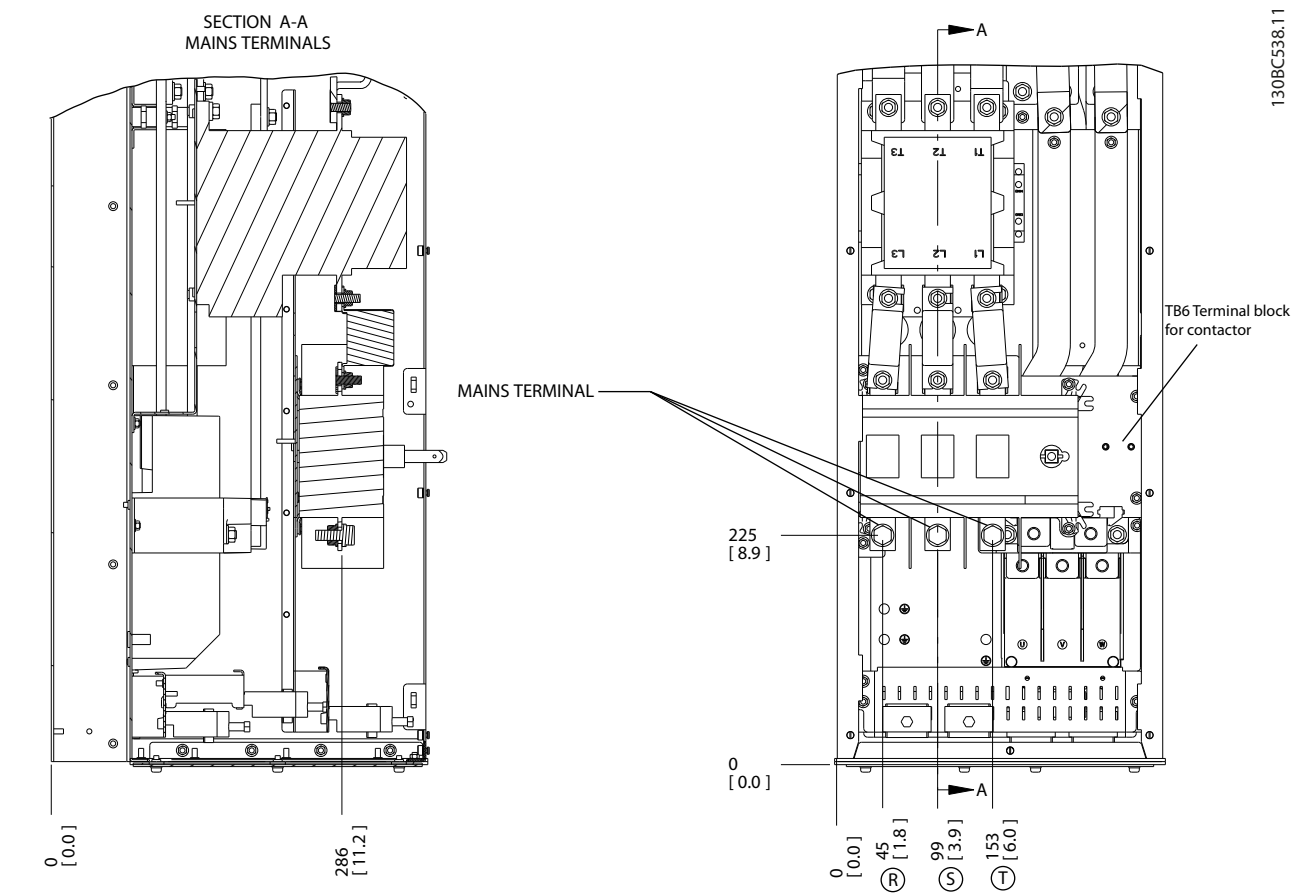


Illustration 2.16 Terminal Locations, D6h with Contactor and Disconnect Options

2


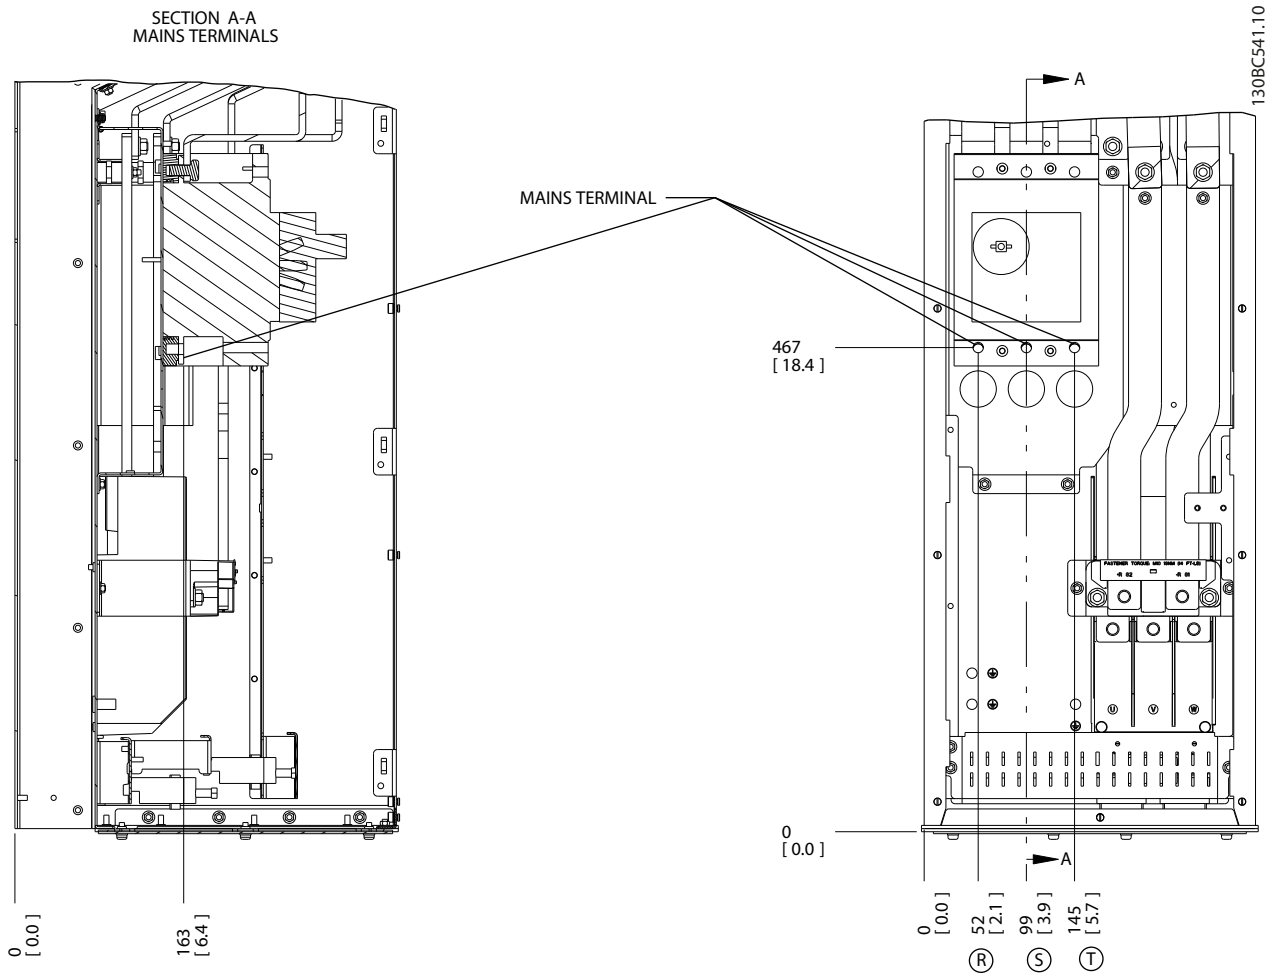


Illustration 2.17 Terminal Locations, D6h with Circuit Breaker Option

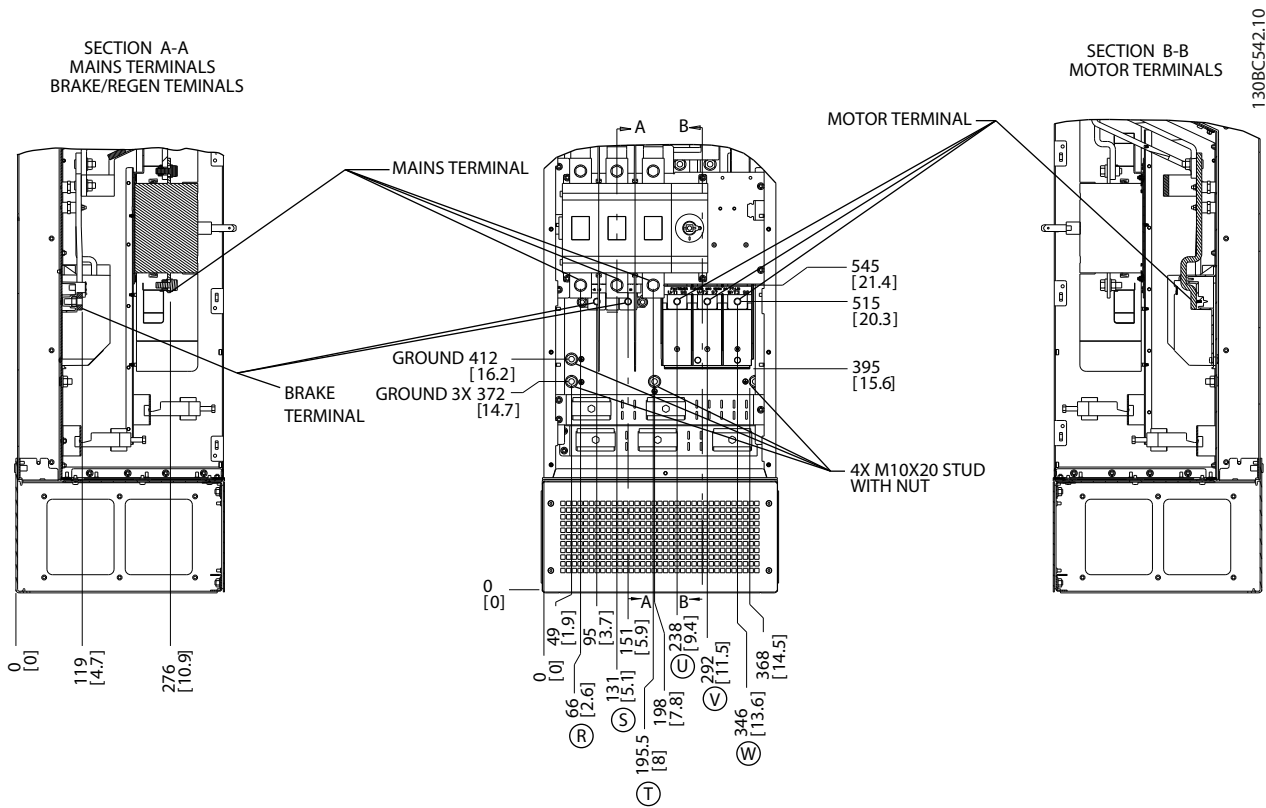

1308C542.10

2

Illustration 2.18 Terminal Locations, D7h with Disconnect Option

2


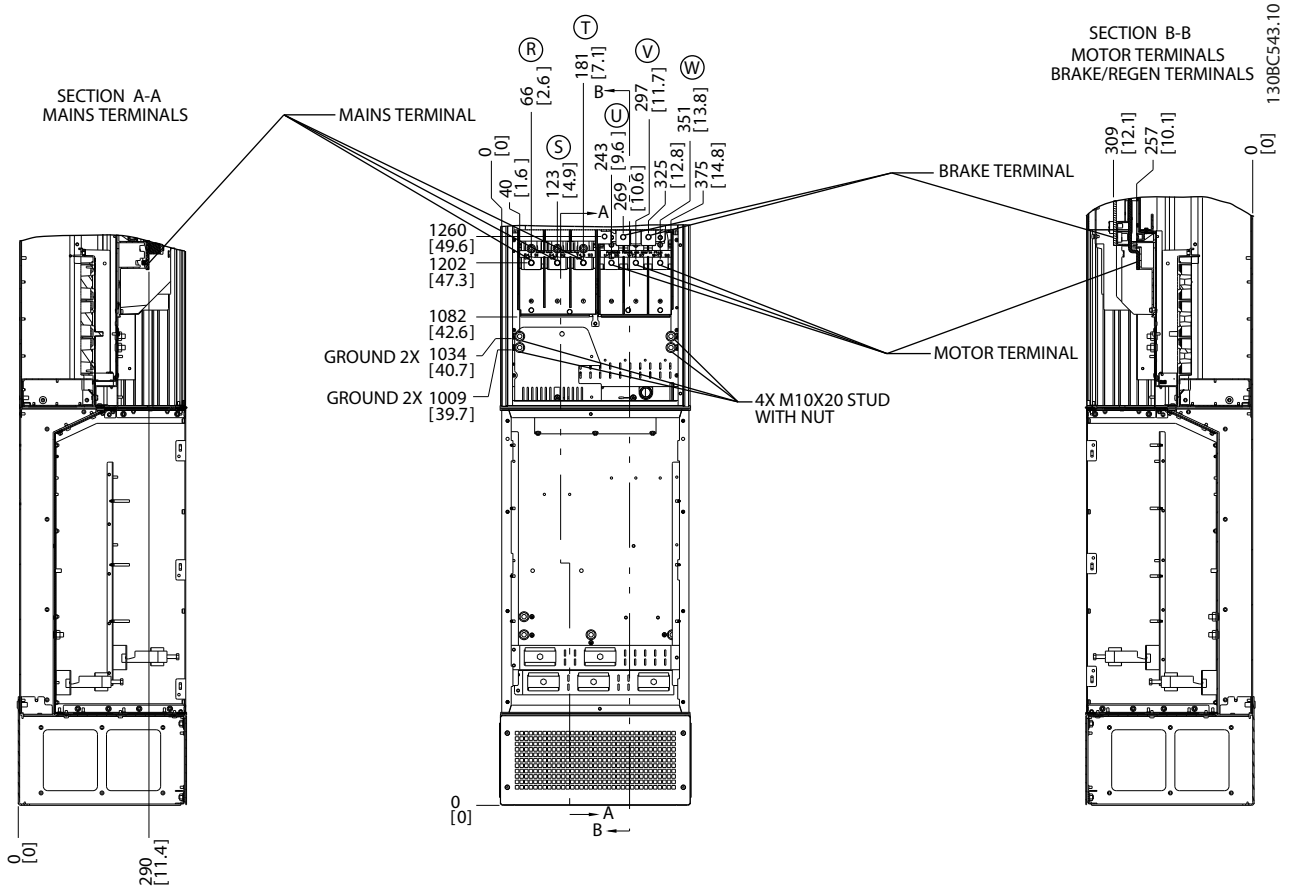


Illustration 2.19 Terminal Locations, D7h with Brake Option

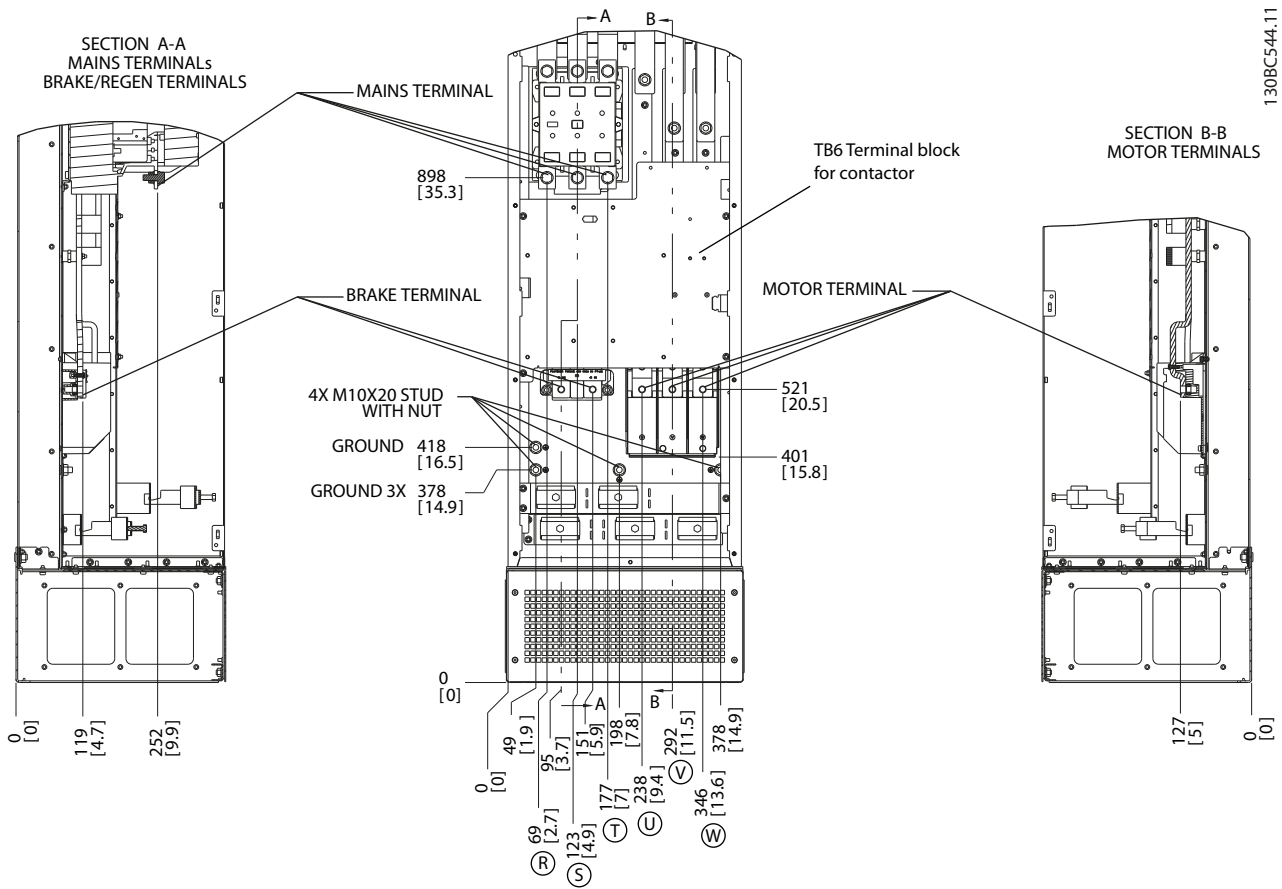

2

Illustration 2.20 Terminal Locations, D8h with Contactor Option

2


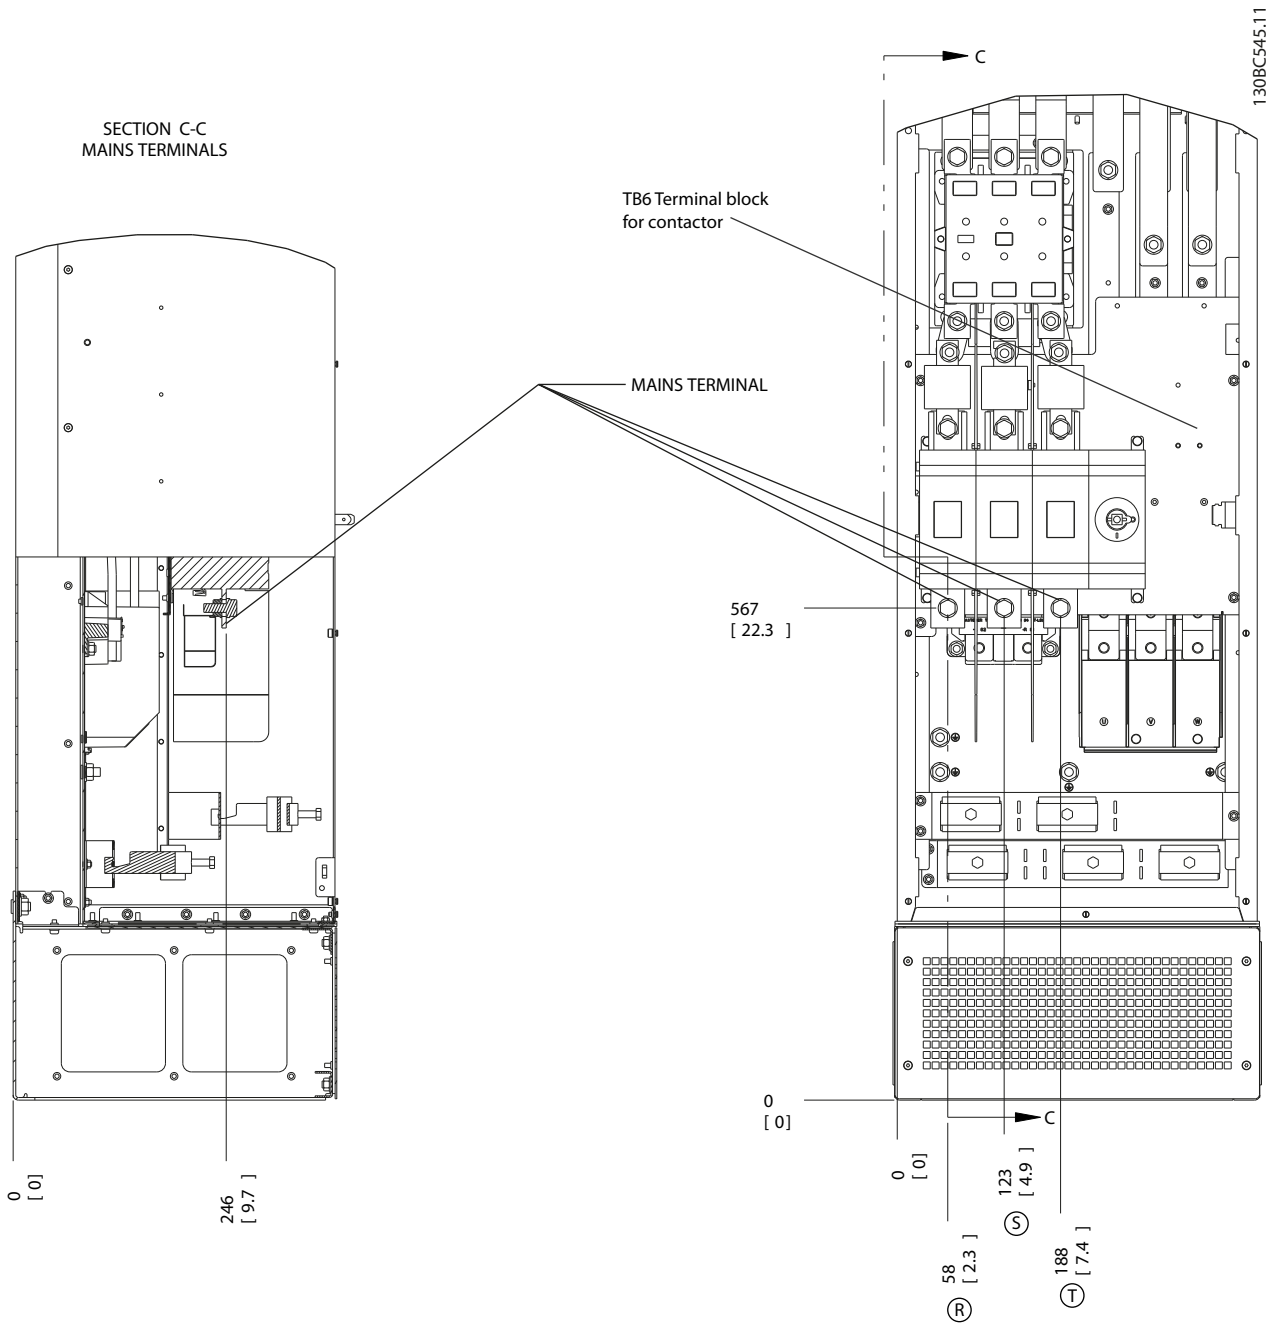


Illustration 2.21 Terminal Locations, D8h with Contactor and Disconnect Options

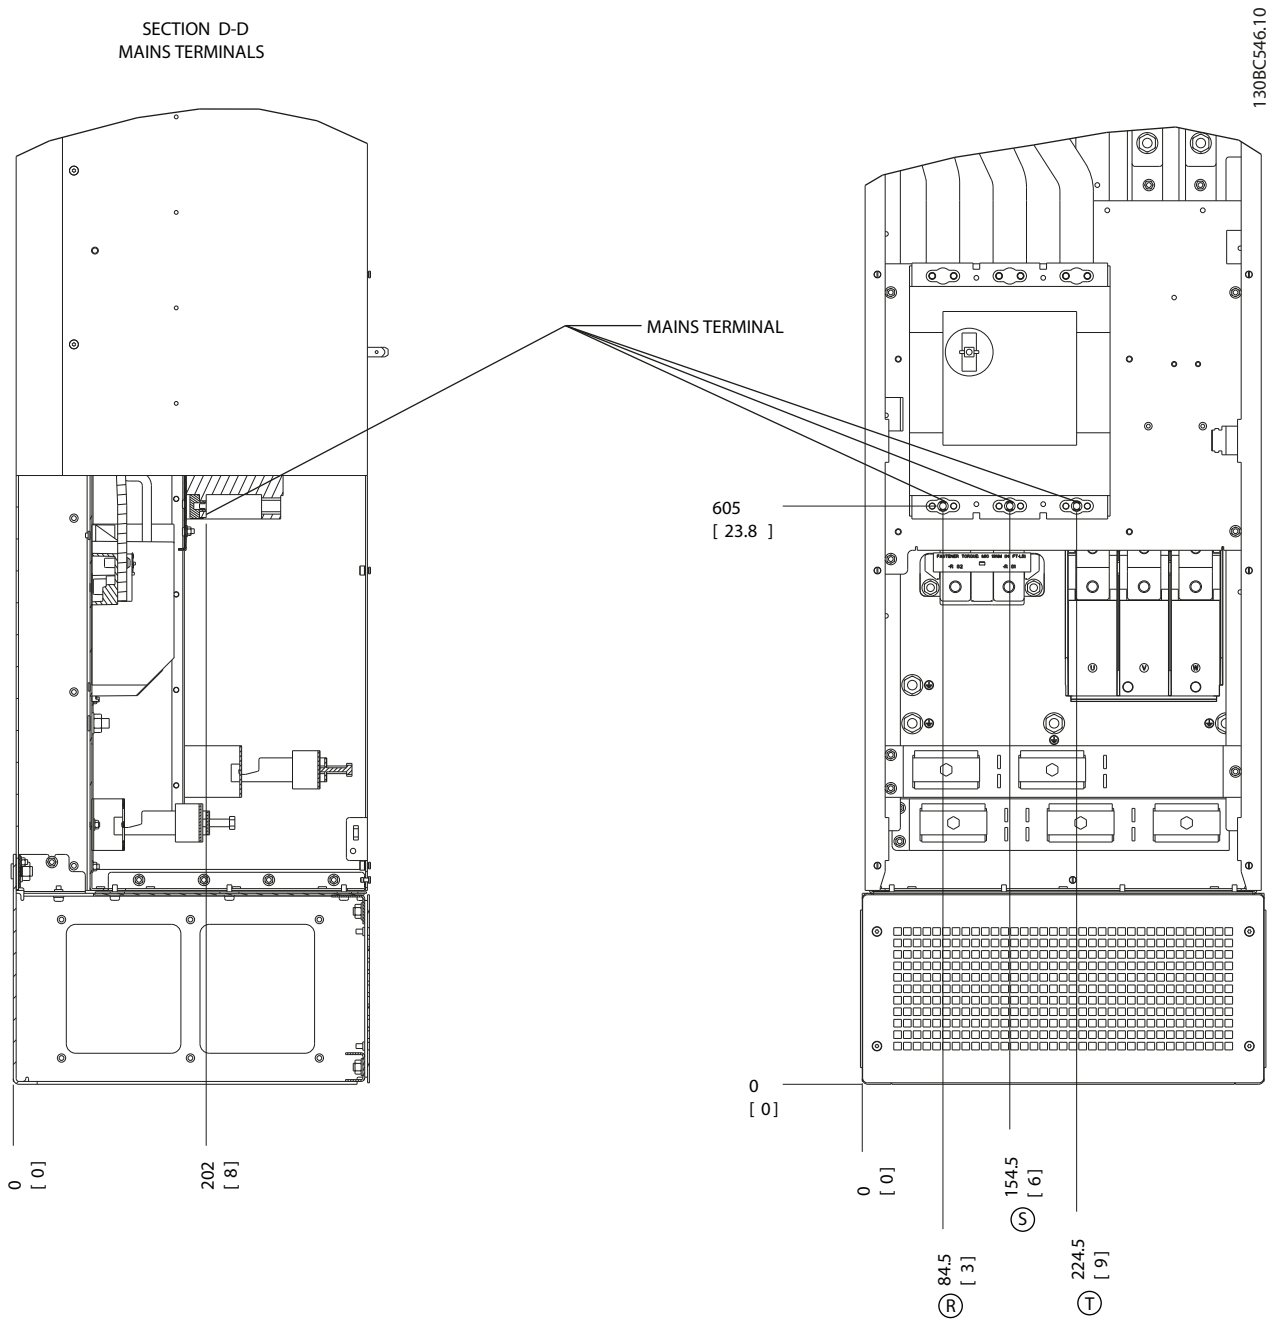

130BC546.10

2

Illustration 2.22 Terminal Locations, D8h with Circuit Breaker Option

2.4.4 Motor Cable

The motor must be connected to terminals U/T1/96, V/ T2/97, W/T3/98. Earth (ground) to terminal 99. All types of three-phase asynchronous standard motors can be used with a frequency converter unit. The factory setting is for clockwise rotation with the frequency converter output connected as follows:

Terminal no.	Function
96, 97, 98, 99	Mains U/T1, V/T2, W/T3 Earth (ground)

Table 2.5

2.4.5 Motor Rotation Check

The direction of rotation can be changed by switching two phases in the motor cable or by changing the setting of 4-10 Motor Speed Direction.

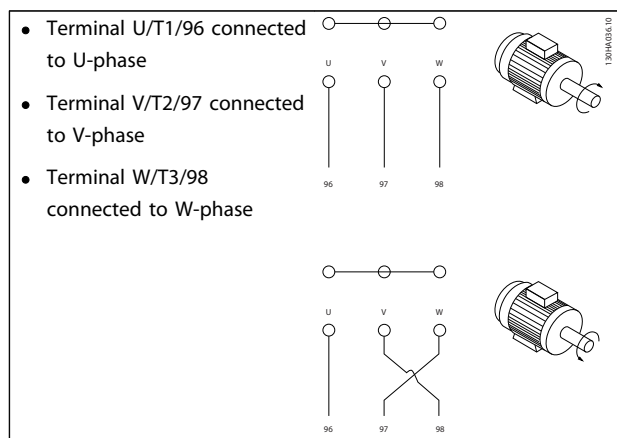


Table 2.6

A motor rotation check can be performed using 1-28 Motor Rotation Check and following the steps shown in the display.

2.4.6 AC Mains Connection

- Size wiring is based upon the input current of the frequency converter
- Comply with local and national electrical codes for cable sizes
- Connect 3-phase AC input power wiring to terminals L1, L2, and L3 (see Illustration 2.23)

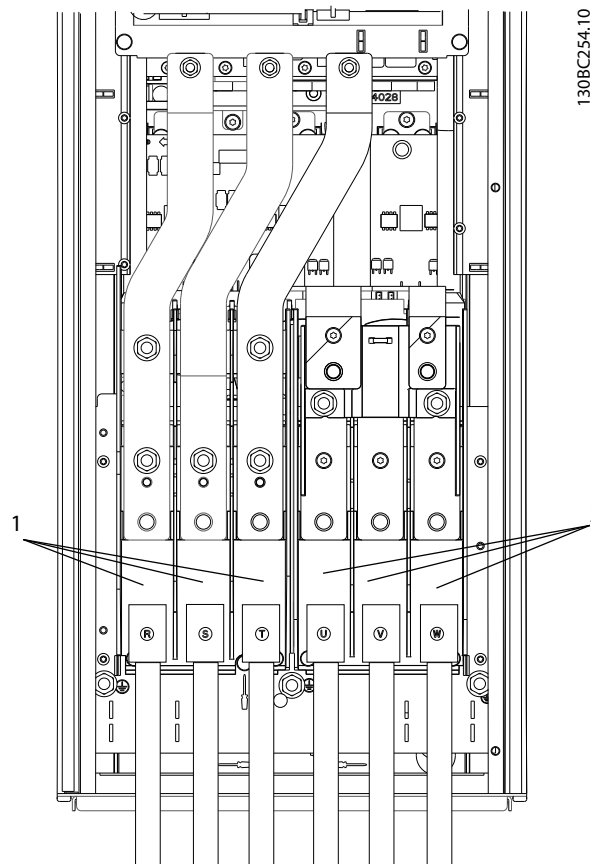


Illustration 2.23 Connecting to AC Mains

1	Mains connection
2	Motor connection

Table 2.7

- Earth (ground) the cable in accordance with the instructions provided
- All frequency converters may be used with an isolated input source as well as with earth (ground) reference power lines. When supplied from an isolated mains source (IT mains or floating delta) or TT/TN-S mains with a grounded leg (grounded delta), set 14-50 RFI Filter to OFF. When off, the internal RFI filter capacitors between the chassis and the intermediate circuit are isolated to avoid damage to the intermediate circuit and to reduce earth (ground) capacity currents in accordance with IEC 61800-3.

2.5 Control Wiring Connection

- Isolate control wiring from high power components in the frequency converter
- If the frequency converter is connected to a thermistor, for PELV isolation, optional thermistor control wiring must be reinforced/double insulated. A 24 V DC supply voltage is recommended.

2.5.1 Access

All terminals to the control cables are located underneath the LCP on the inside of the frequency converter. To access, open the door (IP21/54) or remove the front panel (IP20).

2.5.2 Using Screened Control Cables

Danfoss recommends braided screened/armoured cables to optimise EMC immunity of the control cables and the EMC emission from the motor cables.

The ability of a cable to reduce the incoming and outgoing radiation of electric noise depends on the transfer impedance (Z_T). The screen of a cable is normally designed to reduce the transfer of electric noise; however, a screen with a lower transfer impedance (Z_T) value is more effective than a screen with a higher transfer impedance (Z_T).

Transfer impedance (Z_T) is rarely stated by cable manufacturers but it is often possible to estimate transfer impedance (Z_T) by assessing the physical design of the cable.

Transfer impedance (Z_T) can be assessed on the basis of the following factors:

- The conductivity of the screen material
 - The contact resistance between the individual screen conductors
 - The screen coverage, i.e. the physical area of the cable covered by the screen - often stated as a percentage value
 - Screen type, i.e. braided or twisted pattern
- a. Aluminium-clad with copper wire
 - b. Twisted copper wire or armoured steel wire cable
 - c. Single-layer braided copper wire with varying percentage screen coverage. This is the typical Danfoss reference cable.
 - d. Double-layer braided copper wire

- e. Twin layer of braided copper wire with a magnetic, screened/armoured intermediate layer
- f. Cable that runs in copper tube or steel tube
- g. Lead cable with 1.1 mm wall thickness

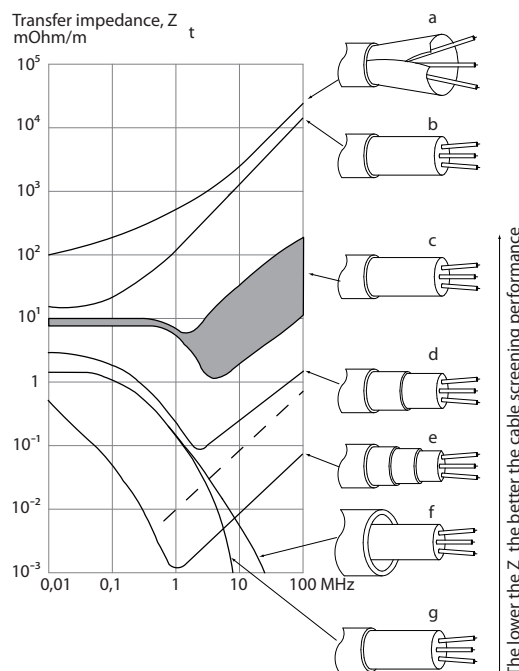


Illustration 2.24

2.5.3 Earthing (Grounding) of Screened Control Cables

Correct screening

The preferred method in most cases is to secure control and serial communication cables with screening clamps provided at both ends to ensure best possible high frequency cable contact. If the earth (ground) potential between the frequency converter and the PLC is different, electric noise may occur that will disturb the entire system. Solve this problem by fitting an equalizing cable next to the control cable. Minimum cable cross section: 16 mm².

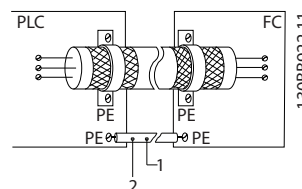


Illustration 2.25

1	Min. 16 mm ²
2	Equalizing cable

Table 2.8

50/60 Hz earth (ground) loops

With very long control cables, earth loops (ground loops) may occur. To eliminate earth (ground) loops, connect one end of the screen-to-earth (ground) with a 100 nF capacitor (keeping leads short).

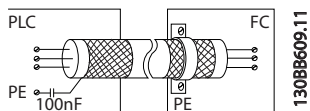


Illustration 2.26

Avoid EMC noise on serial communication

This terminal is connected to earth (ground) via an internal RC link. Use twisted-pair cables to reduce interference between conductors. The recommended method is shown below:

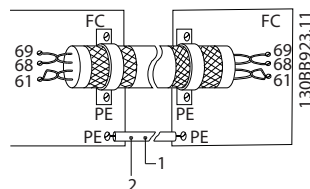


Illustration 2.27

1	Min. 16 mm ²
2	Equalizing cable

Table 2.9

Alternatively, the connection to terminal 61 can be omitted:

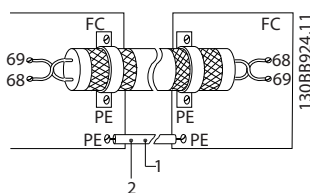


Illustration 2.28

1	Min. 16 mm ²
2	Equalizing cable

Table 2.10

2.5.4 Control Terminal Types

Terminal functions and default settings are summarized in 2.5.6 *Control Terminal Functions*.

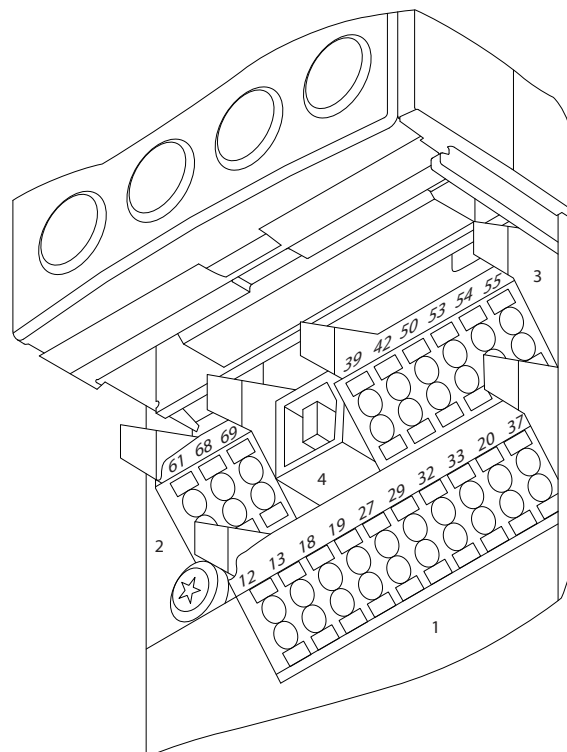


Illustration 2.29 Control Terminal Locations

- **Connector 1** provides four programmable digital input terminals, two additional digital terminals programmable as either input or output, a 24 V DC terminal supply voltage, and a common for optional customer supplied 24 V DC voltage
- **Connector 2** terminals (+)68 and (-)69 are for an RS-485 serial communications connection
- **Connector 3** provides two analog inputs, one analog output, 10 V DC supply voltage, and commons for the inputs and output
- **Connector 4** is a USB port available for use with the MCT 10 Set-up Software
- Also provided are two Form C relay outputs that are in various locations depending upon the frequency converter configuration and size
- Some options available for ordering with the unit may provide additional terminals. See the manual provided with the equipment option

2.5.5 Wiring to Control Terminals

Terminal plugs can be removed for easy access.

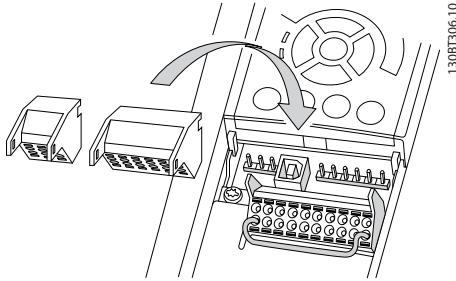


Illustration 2.30 Removal of Control Terminals

2.5.6 Control Terminal Functions

Frequency converter functions are commanded by receiving control input signals.

- Each terminal must be programmed for the function it will be supporting in the parameters associated with that terminal. See *5 Programming* and *6 Application Examples* for terminals and associated parameters.
- It is important to confirm that the control terminal is programmed for the correct function. See *5 Programming* for details on accessing parameters and programming.
- The default terminal programming is intended to initiate frequency converter functioning in a typical operational mode

2.5.6.1 Terminal 53 and 54 Switches

- Analog input terminals 53 and 54 can select either voltage (-10 to 10 V) or current (0/4-20 mA) input signals
- Remove power to the frequency converter before changing switch positions
- Set switches A53 and A54 to select the signal type. U selects voltage, I selects current
- The switches are accessible when the LCP has been removed (see *Illustration 2.31*).

NOTE

Some option cards available for the unit may cover these switches and must be removed to change switch settings. Always remove power to the unit before removing option cards.

- Terminal 53 default is for a speed reference signal in open loop set in *16-61 Terminal 53 Switch Setting*
- Terminal 54 default is for a feedback signal in closed loop set in *16-63 Terminal 54 Switch Setting*

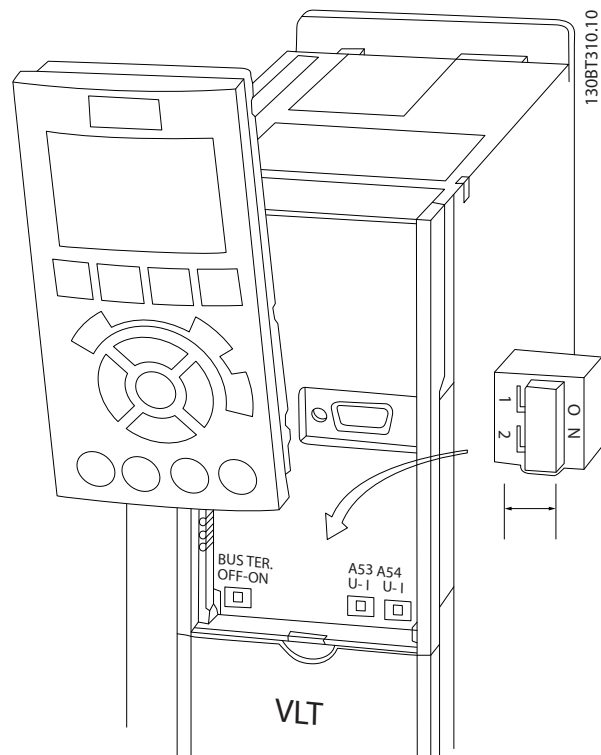


Illustration 2.31 Location of Terminals 53 and 54 Switches and Bus Termination Switch

2.6 Serial Communication

RS-485 is a two-wire bus interface compatible with multi-drop network topology, i.e. nodes can be connected as a bus, or via drop cables from a common trunk line. A total of 32 nodes can be connected to one network segment. Repeaters divide network segments. Each repeater functions as a node within the segment in which it is installed. Each node connected within a given network must have a unique node address across all segments. Terminate each segment at both ends, using either the termination switch (S801) of the frequency converter or a biased termination resistor network. Always use screened twisted pair (STP) cable for bus cabling, and always follow good common installation practice.

Low-impedance earth (ground) connection of the screen at every node is important, including at high frequencies. Thus, connect a large surface of the screen to earth (ground), for example with a cable clamp or a conductive cable gland. It may be necessary to apply potential-equalizing cables to maintain the same earth (ground) potential throughout the network. Particularly in installations with long cables.

To prevent impedance mismatch, always use the same type of cable throughout the entire network. When connecting a motor to the frequency converter, always use screened motor cable.

Cable	Screened twisted pair (STP)
Impedance	120 Ω
Max. cable length	1200 m (including drop lines) 500 m station-to-station

Table 2.11

2.7 Optional Equipment

2.7.1 Load Share Terminals

Load share terminals enable the connection of the DC circuits of several frequency converters. Load share terminals are available in IP20 frequency converters and extend out the top of the frequency converter. A terminal cover, supplied with the frequency converter, must be installed to maintain the IP20 rating of the enclosure. *Illustration 2.32* shows both the covered and uncovered terminals.

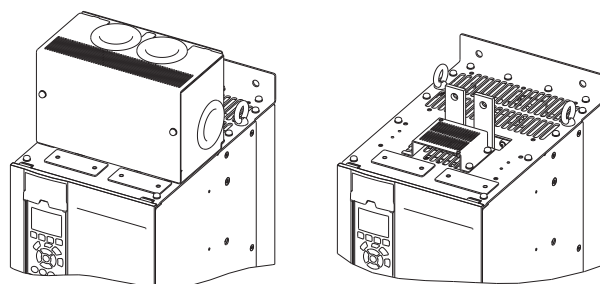


Illustration 2.32 Load Share or Regeneration Terminal with Cover (L) and without Cover (R)

2.7.2 Regeneration Terminals

Regen (regeneration) terminals can be supplied for applications that have a regenerative load. A regenerative unit, supplied by a third party, connects to the regen terminals so that power can be regenerated back into the mains, resulting in energy savings. Regen terminals are available in IP20 frequency converters and extend out the top of the frequency converter. A terminal cover, supplied with the frequency converter, must be installed to maintain the IP20 rating of the enclosure. *Illustration 2.32* shows both the covered and uncovered terminals.

2.7.3 Anti-condensation Heater

An anti-condensation heater can be installed inside the frequency converter to prevent condensation from forming inside the enclosure when the unit is turned off. The heater is controlled by customer-supplied 230 V AC. For best results, operate the heater only when the unit is not running and turn the heater off when the unit is running.

2.7.4 Brake Chopper

A brake chopper can be supplied for applications that have a regenerative load. The brake chopper connects to a brake resistor, which consumes the braking energy, preventing an overvoltage fault on the DC bus. The braking chopper is automatically activated when the DC bus voltage exceeds a specified level, depending on the nominal voltage of the frequency converter.

2.7.5 Mains Shield

The mains shield is a Lexan cover installed inside the enclosure to provide protection according to VBG-4 accident-prevention requirements.

2.7.6 Mains Disconnect

The disconnect option is available in both varieties of option cabinets. The position of the disconnect changes based on the size of the options cabinet and whether or not other options are present. *Table 2.12* provides more detail about which disconnects are used.

Voltage [V]	Frequency Converter Model	Disconnect Manufacturer and Type
380–500	N90KT5–N132T5	ABB OT400U03
	N160T5–N250T5	ABB OT600U03
525–690	N55KT7–N132T7	ABB OT400U03
	N200T7–N315T7	ABB OT600U03

Table 2.12

2.7.7 Contactor

The contactor is powered by a customer-supplied 230 V AC 50/60 Hz signal.

Voltage [V]	Frequency Converter Model	Contactor Manufacturer and Type	IEC Utilization Category
380–500	N90KT5–N132T5	GE CK95BE311N	AC-3
	N160T5–N200T5	GE CK11CE311N	AC-3
	N250T5	GE CK11CE311N	AC-1
525–690	N55KT7–N132T7	GE CK95BE311N	AC-3
	N160T7–N315T7	GE CK11CE311N	AC-3

Table 2.13

NOTE

In applications requiring UL listing, when the frequency converter is supplied with a contactor, the customer must provide external fusing to maintain the UL rating of the frequency converter and a short circuit current rating of 100,000 A. See *10.3 Fuse Tables* for fuse recommendations.

2.7.8 Circuit Breaker

Table 2.14 provides details on the type of circuit breaker provided as an option with the various units and power ranges.

Voltage [V]	Frequency Converter Model	Circuit Breaker Manufacturer and Type
380–500	N90KT5–N110T5	ABB T5L400TW
	N132T5	ABB T5LQ400TW
	N160T5	ABB T6L600TW
	N200T5	ABB T6LQ600TW
	N250T5	ABB T6LQ800TW
525–690	N55KT7–N132T7	ABB T5L400TW
	N160T7–N250T7	ABB T6L600TW
	N315T7	ABB T6LQ600TW

Table 2.14

3 Start Up and Commissioning

3.1 Pre-start

CAUTION

Before applying power to the unit, inspect the entire installation as detailed in *Table 3.1*. Check mark those items when completed.

3

Inspect for	Description	<input type="checkbox"/>
Auxiliary equipment	<ul style="list-style-type: none"> Look for auxiliary equipment, switches, disconnects, or input fuses/circuit breakers that may reside on the input power side of the frequency converter or output side to the motor. Ensure that they are ready for full speed operation. Check function and installation of any sensors used for feedback to the frequency converter Remove power factor correction caps on motor(s), if present 	<input type="checkbox"/>
Cable routing	<ul style="list-style-type: none"> Ensure that input power, motor wiring, and control wiring are separated or in three separate metallic conduits for high frequency noise isolation 	<input type="checkbox"/>
Control wiring	<ul style="list-style-type: none"> Check for broken or damaged wires and loose connections Check that control wiring is isolated from power and motor wiring for noise immunity Check the voltage source of the signals, if necessary The use of shielded cable or twisted pair is recommended. Ensure that the shield is terminated correctly 	<input type="checkbox"/>
Cooling clearance	<ul style="list-style-type: none"> Measure that top and bottom clearance is adequate to ensure proper air flow for cooling 	<input type="checkbox"/>
EMC considerations	<ul style="list-style-type: none"> Check for proper installation regarding electromagnetic compatibility 	<input type="checkbox"/>
Environmental considerations	<ul style="list-style-type: none"> See equipment label for the maximum ambient operating temperature limits Humidity levels must be 5-95% non-condensing 	<input type="checkbox"/>
Fusing and circuit breakers	<ul style="list-style-type: none"> Check for proper fusing or circuit breakers Check that all fuses are inserted firmly and in operational condition and that all circuit breakers are in the open position 	<input type="checkbox"/>
Earthing (Grounding)	<ul style="list-style-type: none"> The unit requires an earth wire (ground wire) from its chassis to the building earth (ground) Check for good earth connections (ground connections) that are tight and free of oxidation Earthing (grounding) to conduit or mounting the back panel to a metal surface is not a suitable earth (ground) 	<input type="checkbox"/>
Input and output power wiring	<ul style="list-style-type: none"> Check for loose connections Check that motor and mains are in separate conduit or separated screened cables 	<input type="checkbox"/>
Panel interior	<ul style="list-style-type: none"> Inspect that the unit interior is free of dirt, metal chips, moisture, and corrosion 	<input type="checkbox"/>
Switches	<ul style="list-style-type: none"> Ensure that all switch and disconnect settings are in the proper positions 	<input type="checkbox"/>
Vibration	<ul style="list-style-type: none"> Check that the unit is mounted solidly or that shock mounts are used, as necessary Check for an unusual amount of vibration 	<input type="checkbox"/>

Table 3.1 Start Up Check List

3.2 Applying Power

⚠ WARNING

HIGH VOLTAGE!

Frequency converters contain high voltage when connected to AC mains. Installation, start-up and maintenance should be performed by qualified personnel only. Failure to perform installation, start-up and maintenance by qualified personnel could result in death or serious injury.

⚠ WARNING

UNINTENDED START!

When the frequency converter is connected to AC mains, the motor may start at any time. The frequency converter, motor, and any driven equipment must be in operational readiness. Failure to be in operational readiness when the frequency converter is connected to AC mains could result in death, serious injury, equipment, or property damage.

1. Confirm input voltage is balanced within 3%. If not, correct input voltage imbalance before proceeding. Repeat procedure after voltage correction.
2. Ensure optional equipment wiring, if present, matches installation application.
3. Ensure that all operator devices are in the OFF position. Panel doors closed or cover mounted.
4. Apply power to the unit. DO NOT start the frequency converter at this time. For units with a disconnect switch, turn to the ON position to apply power to the frequency converter.

NOTE

If the status line at the bottom of the LCP reads **AUTO REMOTE COAST**, this indicates that the unit is ready to operate but is missing an input signal on terminal 27.

3.3 Basic Operational Programming

Frequency converters require basic operational programming before running for best performance. Basic operational programming requires entering motor-nameplate data for the motor being operated and the minimum and maximum motor speeds. Parameter settings recommended are intended for start up and checkout purposes. Application settings may vary. See 4.1 *Local Control Panel* for detailed instructions on entering data through the LCP.

Enter data with power ON, but before operating the frequency converter. There are two ways of programming the frequency converter: either by using the Smart Application Set-up (SAS) or by using the procedure described further down. The SAS is a quick wizard for setting up the most commonly used applications. At first power-up and after a reset the SAS appears on the LCP. Follow the instructions that appear on the successive screens for setting-up the applications listed. SAS can also be found under the Quick Menu. [Info] can be used throughout the Smart Set-up to see help information for various selections, settings, and messages.

NOTE

The start conditions will be ignored while in the wizard.

NOTE

If no action is taken after first power-up or reset, the SAS screen will automatically disappear after 10 minutes.

When not using the SAS, enter data in accordance with the following procedure.

1. Press [Main Menu] twice on the LCP.
2. Press the navigation keys to scroll to parameter group 0-** *Operation/Display* and press [OK].

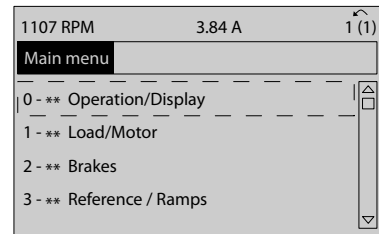


Illustration 3.1

3. Press the navigation keys to scroll to parameter group 0-0* *Basic Settings* and press [OK].

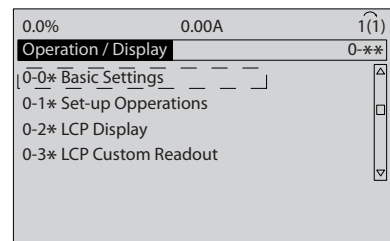


Illustration 3.2

- Press the navigation keys to scroll to *0-03 Regional Settings* and press [OK].

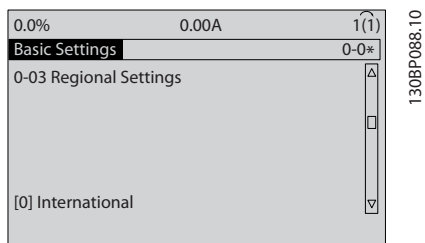


Illustration 3.3

- Press the navigation keys to select *International* or *North America* as appropriate and press [OK]. (This changes the default settings for a number of basic parameters. See 5.5 *Parameter Menu Structure* for a complete list.)
- Press [Quick Menu] on the LCP.
- Press the navigation keys to scroll to parameter group *Q2 Quick Setup* and press [OK].

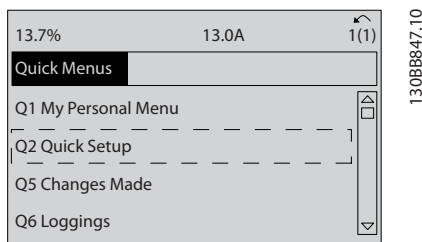


Illustration 3.4

- Select language and press [OK]. Then enter the motor data in *1-20 Motor Power [kW]* / *1-21 Motor Power [HP]* to *1-25 Motor Nominal Speed*. The information can be found on the motor nameplate.
 - 1-20 Motor Power [kW]* or *1-21 Motor Power [HP]*
 - 1-22 Motor Voltage*
 - 1-23 Motor Frequency*
 - 1-24 Motor Current*
 - 1-25 Motor Nominal Speed*

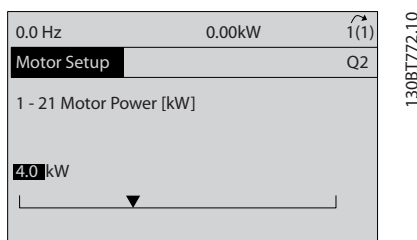


Illustration 3.5

- A jumper wire should be in place between control terminals 12 and 27. If this is the case, leave *5-12 Terminal 27 Digital Input* at factory default. Otherwise select *No Operation*. For frequency converters with an optional bypass, no jumper wire is required.
- 3-02 Minimum Reference*
- 3-03 Maximum Reference*
- 3-41 Ramp 1 Ramp Up Time*
- 3-42 Ramp 1 Ramp Down Time*
- 3-13 Reference Site*. Linked to *Hand/Auto** Local Remote.

This concludes the quick set-up procedure. Press [Status] to return to the operational display.

3.4 Local-control Test

CAUTION

MOTOR START!

Ensure that the motor, system and any attached equipment are ready for start. It is the responsibility of the user to ensure safe operation under any condition. Failure to ensure that the motor, system, and any attached equipment is ready for start could result in personal injury or equipment damage.

NOTE

The [Hand On] key provides a local start command to the frequency converter. The [Off] key provides the stop function.

When operating in local mode, [▲] and [▼] increase and decrease the speed output of the frequency converter. [←] and [→] move the display cursor in the numeric display.

- Press [Hand On].
- Accelerate the frequency converter by pressing [▲] to full speed. Moving the cursor left of the decimal point provides quicker input changes.
- Note any acceleration problems.
- Press [Off].
- Note any deceleration problems.

If acceleration problems were encountered

- If warnings or alarms occur, see 8 *Warnings and Alarms*
- Check that motor data is entered correctly
- Increase the ramp-up time accel time in *3-41 Ramp 1 Ramp Up Time*
- Increase current limit in *4-18 Current Limit*
- Increase torque limit in *4-16 Torque Limit Motor Mode*

If deceleration problems were encountered

- If warnings or alarms occur, see *8 Warnings and Alarms*.
- Check that motor data is entered correctly.
- Increase the ramp-down time decel time in *3-42 Ramp 1 Ramp Down Time*.
- Enable overvoltage control in *2-17 Over-voltage Control*.

NOTE

The OVC algorithm does not work when using PM motors.

See *4.1.1 Local Control Panel* for resetting the frequency converter after a trip.

NOTE

3.2 Applying Power to 3.3 Basic Operational Programming conclude the procedures for applying power to the frequency converter, basic programming, set-up and functional testing.

3.5 System Start Up

The procedure in this section requires user-wiring and application programming to be completed. See *6 Application Examples* for application set-up information. The following procedure is recommended after application set-up by the user is completed.

CAUTION

MOTOR START!

Ensure that the motor, system, and any attached equipment is ready for start. It is the responsibility of the user to ensure safe operation under any condition. Failure to do so could result in personal injury or equipment damage.

1. Press [Auto On].
2. Ensure that external control functions are properly wired to the frequency converter and all programming is completed.
3. Apply an external run command.
4. Adjust the speed reference throughout the speed range.
5. Remove the external run command.
6. Note any problem.

If warnings or alarms occur, see *8 Warnings and Alarms*.

4 User Interface

4.1 Local Control Panel

The local control panel (LCP) is the combined display and keypad on the front of the unit. The LCP is the user interface to the frequency converter.


The LCP has several user functions.

- Start, stop, and control speed when in local control
- Display operational data, status, warnings and cautions
- Programming frequency converter functions
- Manually reset the frequency converter after a fault when auto-reset is inactive

An optional numeric LCP (NLCP) is also available. The NLCP operates in a manner similar to the LCP. See the *Programming Guide*, for details on use of the NLCP.

4.1.1 LCP Layout

The LCP is divided into four functional groups (see *Illustration 4.1*).

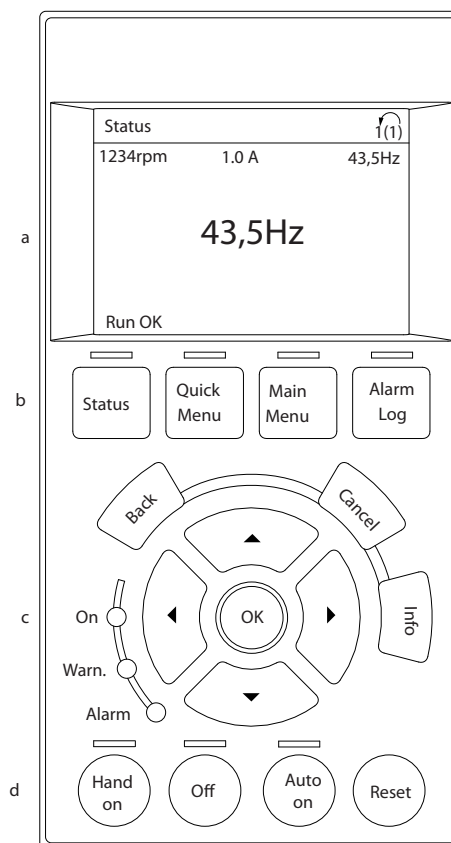

130BC362.10

Illustration 4.1 LCP

- Display area.
- Display menu keys for changing the display to show status options, programming, or error message history.
- Navigation keys for programming functions, moving the display cursor, and speed control in local operation. Also included are the status indicator lights.
- Operational mode keys and reset.

4.1.2 Setting LCP Display Values

The display area is activated when the frequency converter receives power from mains voltage, a DC bus terminal, or an external 24 V DC supply.

The information displayed on the LCP can be customized for user application.

- Each display readout has a parameter associated with it
- Options are selected in the quick menu Q3-13 *Display Settings*
- Display 2 has an alternate larger display option
- The frequency converter status at the bottom line of the display is generated automatically and is not selectable

Display	Parameter number	Default setting
1.1	0-20	Motor RPMs
1.2	0-21	Motor current
1.3	0-22	Motor power (kW)
2	0-23	Motor frequency
3	0-24	Reference in percent

Table 4.1

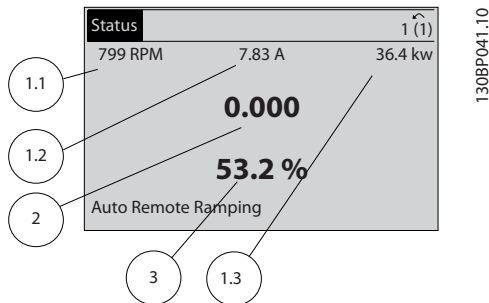


Illustration 4.2

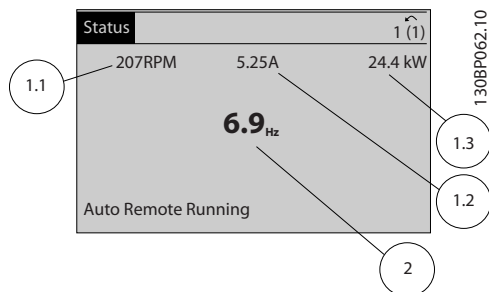


Illustration 4.3

4.1.3 Display

Menu keys are used for menu access for parameter set-up, toggling through status display modes during normal operation, and viewing fault log data.





Illustration 4.4

Key	Function
Status	Shows operational information. <ul style="list-style-type: none"> • In Auto mode, press to toggle between status read-out displays • Press repeatedly to scroll through each status display • Press [Status] plus [▲] or [▼] to adjust the display brightness • The symbol in the upper right corner of the display shows the direction of motor rotation and which set-up is active. This is not programmable.
Quick Menu	Allows access to programming parameters for initial set up instructions and many detailed application instructions. <ul style="list-style-type: none"> • Press to access Q2 <i>Quick Setup</i> for sequenced instructions to program the basic frequency controller set up • Follow the sequence of parameters as presented for the function set up
Main Menu	Allows access to all programming parameters. <ul style="list-style-type: none"> • Press twice to access top-level index • Press once to return to the last location accessed • Press to enter a parameter number for direct access to that parameter
Alarm Log	Displays a list of current warnings, the last 10 alarms, and the maintenance log. <ul style="list-style-type: none"> • For details about the frequency converter before it entered the alarm mode, select the alarm number using the navigation keys and press [OK].

Table 4.2

4.1.4 Navigation Keys

Navigation keys are used for programming functions and moving the display cursor. The navigation keys also provide speed control in local (hand) operation. Three frequency converter status indicator lights are also located in this area.

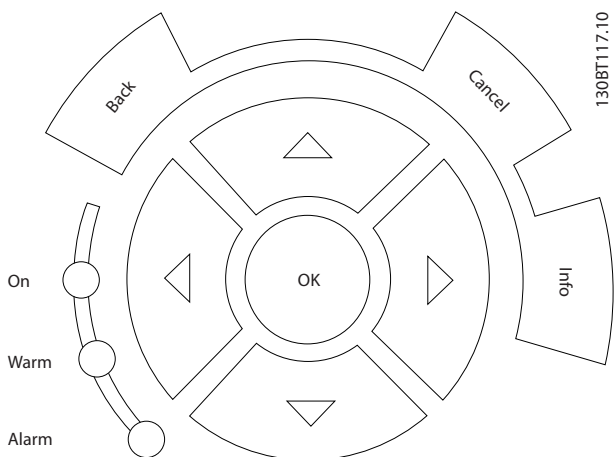

130BT117.10

Illustration 4.5

Key	Function
Back	Reverts to the previous step or list in the menu structure.
Cancel	Cancels the last change or command as long as the display mode has not changed.
Info	Press for a definition of the function being displayed.
Navigation Keys	Use the four navigation keys to move between items in the menu.
OK	Use to access parameter groups or to enable a choice.


Table 4.3

Light	Indicator	Function
Green	ON	The ON light activates when the frequency converter receives power from mains voltage, a DC bus terminal, or an external 24 V supply.
Yellow	WARN	When warning conditions are met, the yellow WARN light comes on and text appears in the display area identifying the problem.
Red	ALARM	A fault condition causes the red alarm light to flash and an alarm text is displayed.

Table 4.4

4.1.5 Operation Keys

Operation keys are found at the bottom of the LCP.

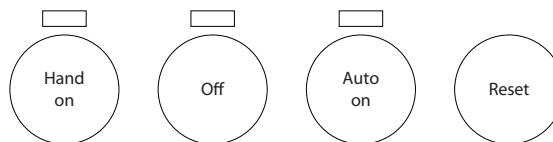

130BF046.10

Illustration 4.6

Key	Function
Hand On	Starts the frequency converter in local control. <ul style="list-style-type: none"> Use the navigation keys to control frequency converter speed An external stop signal by control input or serial communication overrides the local hand on
Off	Stops the motor but does not remove power to the frequency converter.
Auto On	Puts the system in remote operational mode. <ul style="list-style-type: none"> Responds to an external start command by control terminals or serial communication Speed reference is from an external source
Reset	Resets the frequency converter manually after a fault has been cleared.

Table 4.5

4.2 Back Up and Copying Parameter Settings

Programming data is stored internally in the frequency converter.

- The data can be uploaded into the LCP memory as a storage back up
- Once stored in the LCP, the data can be downloaded back into the frequency converter
- Data can also be downloaded into other frequency converters by connecting the LCP into those units and downloading the stored settings. (This is a quick way to program multiple units with the same settings).
- Initialisation of the frequency converter to restore factory default settings does not change data stored in the LCP memory

⚠ WARNING**UNINTENDED START!**

When the frequency converter is connected to AC mains, the motor may start at any time. The frequency converter, motor, and any driven equipment must be in operational readiness. Failure to be in operational readiness when the frequency converter is connected to AC mains could result in death, serious injury, or equipment or property damage.

4.2.1 Uploading Data to the LCP

1. Press [Off] to stop the motor before uploading or downloading data.
2. Go to *0-50 LCP Copy*.
3. Press [OK].
4. Select *All to LCP*.
5. Press [OK]. A progress bar shows the uploading process.
6. Press [Hand On] or [Auto On] to return to normal operation.

4.2.2 Downloading Data from the LCP

1. Press [Off] to stop the motor before uploading or downloading data.
2. Go to *0-50 LCP Copy*.
3. Press [OK].
4. Select *All from LCP*.
5. Press [OK]. A progress bar shows the downloading process.
6. Press [Hand On] or [Auto On] to return to normal operation.

4.3 Restoring Default Settings

CAUTION

Initialisation restores the unit to factory default settings. Any programming, motor data, localization, and monitoring records will be lost. Uploading data to the LCP provides a backup before initialisation.

Restoring the frequency converter parameter settings back to default values is done by initialisation of the frequency converter. Initialisation can be through *14-22 Operation Mode* or manually.

- Initialisation using *14-22 Operation Mode* does not change frequency converter data such as operating hours, serial communication selections,

personal menu settings, fault log, alarm log, and other monitoring functions

- Using *14-22 Operation Mode* is generally recommended
- Manual initialisation erases all motor, programming, localization, and monitoring data and restores factory default settings

4.3.1 Recommended Initialisation

1. Press [Main Menu] twice to access parameters.
2. Scroll to *14-22 Operation Mode*.
3. Press [OK].
4. Scroll to *Initialisation*.
5. Press [OK].
6. Remove power to the unit and wait for the display to turn off.
7. Apply power to the unit.

Default parameter settings are restored during start up. This may take slightly longer than normal.

8. Alarm 80 is displayed.
9. Press [Reset] to return to operation mode.

4.3.2 Manual Initialisation

1. Remove power to the unit and wait for the display to turn off.
2. Press and hold [Status], [Main Menu], and [OK] at the same time and apply power to the unit.

Factory default parameter settings are restored during start up. This may take slightly longer than normal.

Manual initialisation does not the following frequency converter information

- *15-00 Operating Hours*
- *15-03 Power Up's*
- *15-04 Over Temp's*
- *15-05 Over Volt's*

5 Programming

5.1 Introduction

The frequency converter is programmed for its application functions using parameters. Parameters are accessed by pressing either [Quick Menu] or [Main Menu] on the LCP. (See 4.1 *Local Control Panel* for details on using the LCP function keys). Parameters may also be accessed through a PC using the MCT 10 Set-up Software (see 5.6.1 *Remote Programming with MCT 10 Set-up Software*).

The quick menu is intended for initial start up (Q2-** *Quick Set Up*) and detailed instructions for common frequency converter applications (Q3-** *Function Set Up*). Step-by-step instructions are provided. These instructions enable the user to walk through the parameters used for programming applications in their proper sequence. Data entered in a parameter can change the options available in the parameters following that entry. The quick menu presents easy guidelines for getting most systems up and running.

The main menu accesses all parameters and allows for advanced frequency converter applications.

5.2 Programming Example


Here is an example for programming the frequency converter for a common application in open loop using the quick menu.

- This procedure programs the frequency converter to receive a 0-10 V DC analog control signal on input terminal 53
- The frequency converter will respond by providing 20-50 Hz output to the motor proportional to the input signal (0-10 V DC=20-50 Hz)

This is a common pump or fan application.

Press [Quick Menu] and select the following parameters using the navigation keys to scroll to the titles and press [OK] after each action.


1. Q3 Function Setups
2. Parameter Data Set

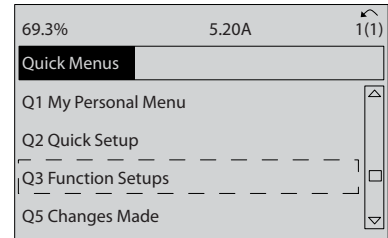

130BT112.10

Illustration 5.1


3. Q3-2 Open Loop Settings

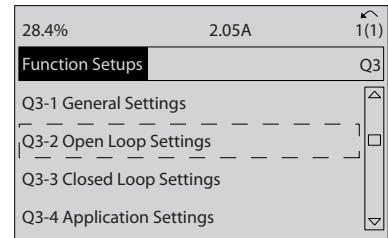

130BT760.10

Illustration 5.2


4. Q3-21 Analog Reference

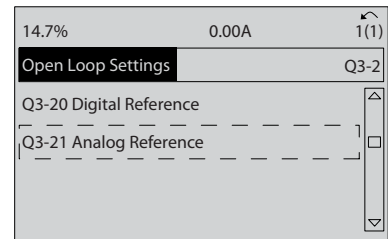

130BT761.10

Illustration 5.3


5. 3-02 Minimum Reference. Set minimum internal frequency converter reference to 0 Hz. (This sets the minimum frequency converter speed at 0 Hz).

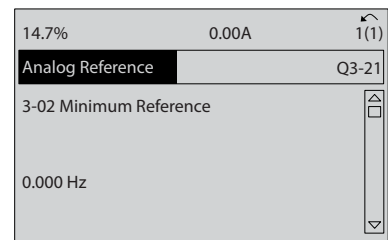

130BT762.10

Illustration 5.4


6. **3-03 Maximum Reference.** Set maximum internal frequency converter reference to 60 Hz. (This sets the maximum frequency converter speed at 60 Hz. Note that 50/60 Hz is a regional variation).

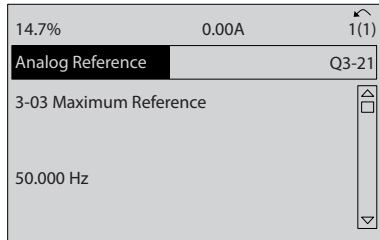

130BT763.11

Illustration 5.5


7. **6-10 Terminal 53 Low Voltage.** Set minimum external voltage reference on terminal 53 at 0 V. (This sets the minimum input signal at 0 V).

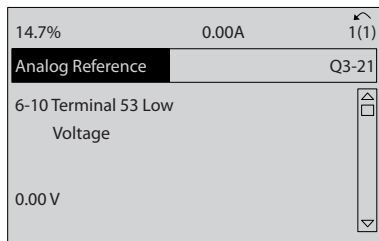

130BT764.10

Illustration 5.6


8. **6-11 Terminal 53 High Voltage.** Set maximum external voltage reference on terminal 53 at 10 V. (This sets the maximum input signal at 10 V).

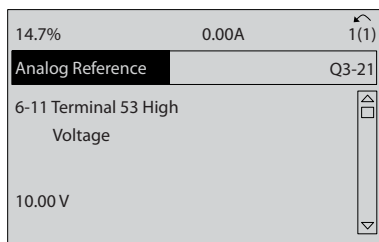

130BT765.10

Illustration 5.7


9. **6-14 Terminal 53 Low Ref./Feedb. Value.** Set minimum speed reference on terminal 53 at 20 Hz. (This tells the frequency converter that the minimum voltage received on terminal 53 (0 V) equals 20 Hz output).

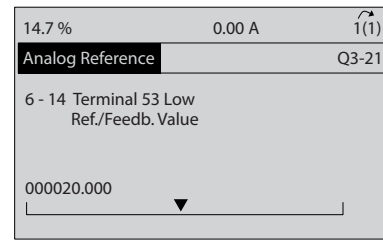

130BT773.11

Illustration 5.8

10. **6-15 Terminal 53 High Ref./Feedb. Value.** Set maximum speed reference on terminal 53 at 50 Hz. (This tells the frequency converter that the maximum voltage received on terminal 53 (10 V) equals 50 Hz output).

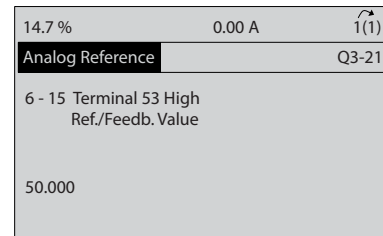

130BT774.11


Illustration 5.9

With an external device providing a 0-10 V control signal connected to frequency converter terminal 53, the system is now ready for operation.

NOTE

The scroll bar on the right in the last illustration of the display is at the bottom, indicating the procedure is complete.

Illustration 5.10 shows the wiring connections used to enable this set up.

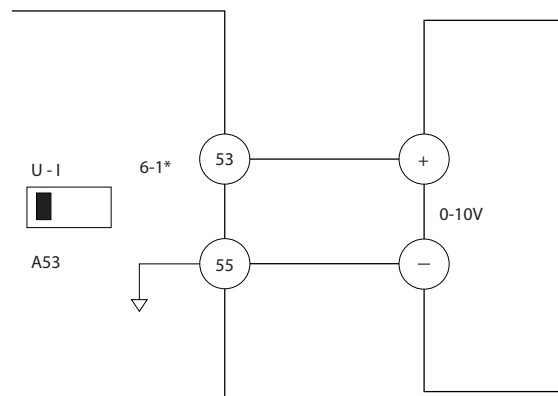

130BB482.10

Illustration 5.10 Wiring Example for External Device Providing 0-10 V Control Signal

5.3 Control Terminal Programming Examples

Control terminals can be programmed.

- Each terminal has specified functions it is capable of performing
- Parameters associated with the terminal enable the function
- For proper frequency converter functioning, the control terminals must be
 - wired properly
 - programmed for the intended function
 - receiving a signal

See *Table 5.1* for control terminal parameter number and default setting. (Default setting can change based on the selection in *0-03 Regional Settings*).

The following example shows accessing Terminal 18 to see the default setting.

1. Press [Main Menu] twice, scroll to parameter group 5-** *Digital In/Out Parameter Data Set* and press [OK].

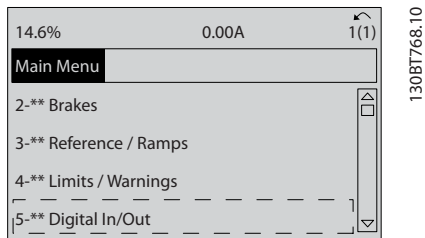


Illustration 5.11

2. Scroll to parameter group 5-1* *Digital Inputs* and press [OK].

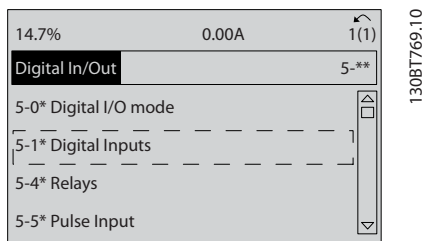


Illustration 5.12

3. Scroll to 5-10 *Terminal 18 Digital Input*. Press [OK] to access function choices. The default setting *Start* is shown.

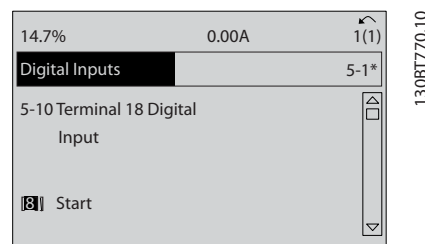


Illustration 5.13

5.4 International/North American Default Parameter Settings

Setting *0-03 Regional Settings* [0] *International* or [1] *North America* changes the default settings for some parameters. *Table 5.1* lists those parameters that are affected.

Parameter	International default parameter value	North American default parameter value
0-03 Regional Settings	International	North America
0-71 Date Format	DD-MM-YYYY	MM/DD/YYYY
0-72 Time Format	24 h	12 h
1-20 Motor Power [kW]	See Note 1	See Note 1
1-21 Motor Power [HP]	See Note 2	See Note 2
1-22 Motor Voltage	230 V/400 V/575 V	208 V/460 V/575 V
1-23 Motor Frequency	50 Hz	60 Hz
3-03 Maximum Reference	50 Hz	60 Hz
3-04 Reference Function	Sum	External/Preset
4-13 Motor Speed High Limit [RPM]	1500 RPM	1800 RPM
4-14 Motor Speed High Limit [Hz]	50 Hz	60 Hz
4-19 Max Output Frequency	100 Hz	120 Hz
4-53 Warning Speed High	1500 RPM	1800 RPM
5-12 Terminal 27 Digital Input	Coast inverse	External interlock
5-40 Function Relay	Alarm	No alarm
6-15 Terminal 53 High Ref./Feedb. Value	50	60
6-50 Terminal 42 Output	Speed 0-HighLim	Speed 4-20 mA
14-20 Reset Mode	Manual reset	Infinite auto reset

Parameter	International default parameter value	North American default parameter value
22-85 Speed at Design Point [RPM] See Note 3	1500 RPM	1800 RPM
22-86 Speed at Design Point [Hz]	50 Hz	60 Hz
24-04 Fire Mode Max Reference	50 Hz	60 Hz

Table 5.1 International/North American Default Parameter Settings

5.5 Parameter Menu Structure

Establishing the correct programming for applications often requires setting functions in several related parameters. These parameter settings provide the frequency converter with system details it needs to operate properly. System details may include such things as input and output signal types, programming terminals, minimum and maximum signal ranges, custom displays, automatic restart, and other features.

- See the LCP display to view detailed parameter programming and setting options
- Press [Info] in any menu location to view additional details for that function
- Press and hold [Main Menu] to enter a parameter number for direct access to that parameter
- Details for common application set ups are provided in *6 Application Examples*

5.5.1 Main Menu Structure

Code	Operation / Display	Code	Function	Code	Function	Code	Function
0-0*	Basic Settings	1-00	Load and Motor General Settings	1-90	Motor Thermal Protection	4-17	Torque Limit
0-01	Language	1-01	Configuration Mode	1-91	Motor External Fan	4-18	Current Limit
0-02	Motor Speed Unit	1-03	Torque Characteristics	1-93	Thermistor Source	4-19	Max Output Frequency
0-03	Regional Settings	2-0*	DC Brake	2-00	DC Hold/Preheat Current	4-50	Adj. Warnings
0-04	Operating State at Power-up	1-10	Motor Selection	2-01	DC Brake Current	4-51	Warning Current Low
0-05	Local Mode Unit	1-11	WC+ PM	2-02	DC Braking Time	4-52	Warning Current High
0-1*	Set-up Operations	1-14	Damping Gain	2-03	DC Brake Cut In Speed [RPM]	4-53	Warning Speed High
0-10	Active Set-up	1-15	Low Speed Filter Time Const.	2-04	DC Brake Cut In Speed [Hz]	4-54	Warning Reference Low
0-11	Programming Set-up	1-16	High Speed Filter Time Const.	2-06	Parking Current	4-55	Warning Reference High
0-12	This Set-up Linked to	1-17	Voltage filter time const.	2-07	Parking Time	4-56	Warning Feedback Low
0-13	Readout: Linked Set-ups	1-20	Motor Data	2-1*	Brake Energy Funct.	4-57	Warning Feedback High
0-14	Readout: Prog. Set-ups / Channel	1-21	Motor Power [kW]	2-10	Brake Function	4-58	Missing Motor Phase Function
0-2*	LCP Display	1-22	Motor Voltage	2-11	Brake Resistor (ohm)	4-60	Speed Bypass
0-20	Display Line 1.1 Small	1-23	Motor Frequency	2-12	Brake Power Limit (kW)	4-61	Bypass Speed From [RPM]
0-21	Display Line 1.2 Small	1-24	Motor Current	2-13	Brake Power Monitoring	4-62	Bypass Speed From [Hz]
0-22	Display Line 1.3 Small	1-26	Motor Cont. Rated Torque	2-15	Brake Check	4-63	Bypass Speed To [Hz]
0-23	Display Line 2 Large	1-28	Motor Rotation Check	2-16	AC brake Max. Current	4-64	Semi-Auto Bypass Set-up
0-24	Display Line 3 Large	1-29	Automatic Motor Adaptation (AMA)	2-17	Over-voltage Control	5-5*	Digital In/Out
0-25	My Personal Menu	1-3*	Adv. Motor Data	3-0*	Reference / Ramps	5-0*	Digital I/O mode
0-30	LCP Custom Readout	1-30	Stator Resistance (Rs)	3-01	Minimum Reference	5-00	Digital I/O Mode
0-31	Custom Readout Unit	1-31	Motor Resistance (Rr)	3-02	Maximum Reference	5-01	Terminal 27 Mode
0-32	Custom Readout Min Value	1-35	Main Reactance (Xh)	3-03	Reference Function	5-02	Terminal 29 Mode
0-33	Custom Readout Max Value	1-36	Iron Loss Resistance (Re)	3-1*	References	5-1*	Digital Inputs
0-37	Display Text 1	1-37	Motor Poles	3-10	Preset Reference	5-10	Terminal 18 Digital Input
0-38	Display Text 2	1-40	Back EMF at 1000 RPM	3-11	Jog Speed [Hz]	5-11	Terminal 19 Digital Input
0-39	Display Text 3	1-50	Motor Magn. Setting	3-13	Reference Site	5-12	Terminal 27 Digital Input
0-40	[Hand on] Key on LCP	1-51	Motor Magnetisation at Zero Speed	3-14	Preset Relative Reference	5-13	Terminal 29 Digital Input
0-41	[Off] Key on LCP	1-52	Min Speed Normal Magnetising [RPM]	3-15	Reference 1 Source	5-15	Terminal 32 Digital Input
0-42	[Auto on] Key on LCP	1-58	Flystart Test Pulses Current	3-16	Reference 2 Source	5-16	Terminal 33 Digital Input
0-43	[Reset] Key on LCP	1-59	Flystart Test Pulses Frequency	3-17	Reference 3 Source	5-17	Terminal X30/2 Digital Input
0-44	[Drive Bypass] Key on LCP	1-60	High Speed Load Compensation	3-19	Jog Speed [RPM]	5-18	Terminal X30/3 Digital Input
0-45	[Copy/Save] Key on LCP	1-61	Low Speed Load Compensation	3-4*	Ramp 1	5-19	Terminal X30/4 Digital Input
0-50	LCP Copy	1-62	Slip Compensation	3-41	Ramp 1 Ramp Up Time	5-3*	Terminal 37 Safe Stop
0-51	Set-up Copy	1-63	Slip Compensation Time Constant	3-42	Ramp 1 Ramp Down Time	5-30	Digital Outputs
0-6*	Password	1-64	Resonance Dampening	3-5*	Ramp 2	5-31	Terminal 27 Digital Output
0-60	Main Menu Password	1-65	Resonance Dampening Time Constant	3-51	Ramp 2 Ramp Up Time	5-32	Terminal 29 Digital Output
0-61	Access to Main Menu w/o Password	1-66	Min. Current at Low Speed	3-52	Ramp 2 Ramp Down Time	5-33	Term X30/6 Digi Out (MCB 101)
0-65	Personal Menu Password	1-7*	Start Adjustments	3-8*	Other Ramps	5-35	Term X30/7 Digi Out (MCB 101)
0-66	Access to Personal Menu w/o Password	1-70	PM Startmode	3-80	Jog Ramp Time	5-4*	Relays
0-7*	Clock Settings	1-71	Start Delay	3-81	Quick Stop Ramp Time	5-40	Function Relay
0-70	Date and Time	1-73	Flying Start	3-82	Starting Ramp Up Time	5-41	On Delay, Relay
0-71	Date Format	1-77	Compressor Start Max Speed [RPM]	3-90	Step Size	5-42	Off Delay, Relay
0-72	Time Format	1-78	Compressor Start Max Speed [Hz]	3-91	Ramp Time	5-5*	Pulse Input
0-74	DST/Summertime	1-79	Compressor Start Max Time to Trip	3-92	Power Restore	5-50	Term. 29 Low Frequency
0-76	DST/Summertime Start	1-8*	Stop Adjustments	3-93	Maximum Limit	5-51	Term. 29 High Frequency
0-77	DST/Summertime End	1-80	Function at Stop	3-94	Minimum Limit	5-52	Term. 29 Low Ref./Feedb. Value
0-79	Clock Fault	1-81	Min Speed for Function at Stop [RPM]	3-95	Ramp Delay	5-53	Term. 29 High Ref./Feedb. Value
0-81	Working Days	1-82	Min Speed for Function at Stop [Hz]	4-1*	Motor Limits / Warnings	5-54	Term. 29 High Ref./Feedb. Value
0-82	Additional Working Days	1-86	Trip Speed Low [RPM]	4-10	Motor Speed Direction	5-55	Pulse Filter Time Constant #29
0-83	Additional Non-Working Days	1-87	Trip Speed Low [Hz]	4-11	Motor Speed Low Limit [RPM]	5-56	Term. 33 Low Frequency
0-89	Date and Time Readout	1-88	Trip Speed High [Hz]	4-12	Motor Speed Low Limit [Hz]	5-57	Term. 33 High Frequency
		1-89	Motor Temperature	4-13	Motor Speed High Limit [RPM]	5-58	Term. 33 High Ref./Feedb. Value
				4-14	Motor Speed High Limit [Hz]	5-59	Term. 33 High Ref./Feedb. Value
				4-16	Torque Limit Motor Mode	5-6*	Pulse Output
						5-60	Terminal 27 Pulse Output Variable
						5-61	Pulse Output Max Freq #27
						5-62	Terminal 29 Pulse Output Variable
						5-63	Terminal 29 Pulse Output Variable
5-55	Pulse Output Max Freq #29	6-10	Terminal 53 Low Voltage	6-10	Terminal 53 Low Voltage	6-10	Terminal 53 Low Voltage
5-66	Terminal X30/6 Pulse Output Variable	6-11	Terminal 53 High Voltage	6-11	Terminal 53 High Voltage	6-11	Terminal 53 High Voltage
5-68	Pulse Output Max Freq #X30/6	6-12	Terminal 53 Low Current	6-12	Terminal 53 Low Current	6-12	Terminal 53 Low Current
5-8*	I/O Options	6-13	Terminal 53 High Current	6-13	Terminal 53 High Current	6-13	Terminal 53 High Current
5-80	AHF Cap Reconnect Delay	6-14	Terminal 53 Low Ref./Feedb. Value	6-14	Terminal 53 Low Ref./Feedb. Value	6-14	Terminal 53 Low Ref./Feedb. Value
5-9*	Bus Controlled	6-15	Terminal 53 High Ref./Feedb. Value	6-15	Terminal 53 High Ref./Feedb. Value	6-15	Terminal 53 High Ref./Feedb. Value
5-90	Digital & Relay Bus Control	6-16	Terminal 53 Filter Time Constant	6-16	Terminal 53 Filter Time Constant	6-16	Terminal 53 Filter Time Constant
5-93	Pulse Out #27 Bus Control	6-17	Terminal 53 Live Zero	6-17	Terminal 53 Live Zero	6-17	Terminal 53 Live Zero
5-94	Pulse Out #27 Timeout Preset	6-20	Terminal 54 Low Voltage	6-20	Terminal 54 Low Voltage	6-20	Terminal 54 Low Voltage
5-95	Pulse Out #29 Bus Control	6-21	Terminal 54 High Voltage	6-21	Terminal 54 High Voltage	6-21	Terminal 54 High Voltage
5-96	Pulse Out #29 Timeout Preset	6-22	Terminal 54 Low Current	6-22	Terminal 54 Low Current	6-22	Terminal 54 Low Current
5-97	Pulse Out #X30/6 Bus Control	6-23	Terminal 54 High Current	6-23	Terminal 54 High Current	6-23	Terminal 54 High Current
5-98	Pulse Out #X30/6 Timeout Preset	6-24	Terminal 54 Low Ref./Feedb. Value	6-24	Terminal 54 Low Ref./Feedb. Value	6-24	Terminal 54 Low Ref./Feedb. Value
6-6*	Analog In/Out	6-25	Terminal 54 High Ref./Feedb. Value	6-25	Terminal 54 High Ref./Feedb. Value	6-25	Terminal 54 High Ref./Feedb. Value
6-60	Analog I/O Mode	6-26	Terminal 54 Filter Time Constant	6-26	Terminal 54 Filter Time Constant	6-26	Terminal 54 Filter Time Constant
6-00	Live Zero Timeout Time	6-27	Terminal 54 Live Zero	6-27	Terminal 54 Live Zero	6-27	Terminal 54 Live Zero
6-01	Live Zero Timeout Function	6-30	Terminal X30/11 Low Voltage	6-30	Terminal X30/11 Low Voltage	6-30	Terminal X30/11 Low Voltage
6-02	Fire Mode Live Zero Timeout Function	6-31	Terminal X30/11 High Voltage	6-31	Terminal X30/11 High Voltage	6-31	Terminal X30/11 High Voltage
6-1*	Analog Input 53	6-34	Term. X30/11 Low Ref./Feedb. Value	6-34	Term. X30/11 Low Ref./Feedb. Value	6-34	Term. X30/11 Low Ref./Feedb. Value
6-10	Terminal 53 Low Voltage	6-35	Term. X30/11 High Ref./Feedb. Value	6-35	Term. X30/11 High Ref./Feedb. Value	6-35	Term. X30/11 High Ref./Feedb. Value
6-11	Terminal 53 High Voltage	6-36	Term. X30/11 Filter Time Constant	6-36	Term. X30/11 Filter Time Constant	6-36	Term. X30/11 Filter Time Constant
6-12	Terminal 53 Low Current	6-37	Term. X30/11 Live Zero	6-37	Term. X30/11 Live Zero	6-37	Term. X30/11 Live Zero
6-13	Terminal 53 High Current	6-40	Terminal X30/12 Low Voltage	6-40	Terminal X30/12 Low Voltage	6-40	Terminal X30/12 Low Voltage
6-14	Terminal 53 Low Ref./Feedb. Value	6-41	Terminal X30/12 High Voltage	6-41	Terminal X30/12 High Voltage	6-41	Terminal X30/12 High Voltage
6-15	Terminal 53 High Ref./Feedb. Value	6-44	Term. X30/12 Low Ref./Feedb. Value	6-44	Term. X30/12 Low Ref./Feedb. Value	6-44	Term. X30/12 Low Ref./Feedb. Value
6-16	Terminal 53 Filter Time Constant	6-45	Term. X30/12 High Ref./Feedb. Value	6-45	Term. X30/12 High Ref./Feedb. Value	6-45	Term. X30/12 High Ref./Feedb. Value
6-17	Terminal 53 Live Zero	6-46	Term. X30/12 Filter Time Constant	6-46	Term. X30/12 Filter Time Constant	6-46	Term. X30/12 Filter Time Constant
6-20	Terminal 54 Low Voltage	6-47	Term. X30/12 Live Zero	6-47	Term. X30/12 Live Zero	6-47	Term. X30/12 Live Zero
6-21	Terminal 54 High Voltage	6-50	Terminal 42 Output	6-50	Terminal 42 Output	6-50	Terminal 42 Output
6-22	Terminal 54 Low Current	6-51	Terminal 42 Output Min Scale	6-51	Terminal 42 Output Min Scale	6-51	Terminal 42 Output Min Scale
6-23	Terminal 54 High Current	6-52	Terminal 42 Output Max Scale	6-52	Terminal 42 Output Max Scale	6-52	Terminal 42 Output Max Scale
6-24	Terminal 54 Low Ref./Feedb. Value	6-53	Terminal 42 Output Bus Control	6-53	Terminal 42 Output Bus Control	6-53	Terminal 42 Output Bus Control
6-25	Terminal 54 High Ref./Feedb. Value	6-54	Terminal 42 Output Timeout Preset	6-54	Terminal 42 Output Timeout Preset	6-54	Terminal 42 Output Timeout Preset
6-26	Terminal 54 Filter Time Constant	6-55	Analog Output Filter	6-55	Analog Output Filter	6-55	Analog Output Filter
6-27	Terminal 54 Live Zero	6-6*	Analog Output X30/8	6-60	Terminal X30/8 Output	6-60	Terminal X30/8 Output

6-61	Terminal X30/8 Min. Scale	9-00	Setpoint	10-39	Devicenet F Parameters	12-94	Broadcast Storm Protection	14-55	Output Filter
6-62	Terminal X30/8 Max. Scale	9-07	Actual Value	11-0* LonWorks ID	11-0* LonWorks ID	12-95	Broadcast Storm Filter	14-59	Actual Number of Inverter Units
6-63	Terminal X30/8 Output Bus Control	9-15	PCD Write Configuration	11-00	Neuron ID	12-96	Port Config	14-6* Auto Derate	
6-64	Terminal X30/8 Output Timeout Preset	9-16	PCD Read Configuration	11-01	Neuron ID	12-98	Interface Counters	14-60	Function at Over Temperature
8-*	Comm. and Options	9-18	Node Address	11-1* LON Functions	11-1* LON Functions	12-99	Media Counters	14-61	Function at Inverter Overload
8-0*	General Settings	9-22	Telegram Selection	11-10	Drive Profile	13-* Smart Logic		14-62	Inv. Overload Derate Current
8-01	Control Site	9-23	Parameters for Signals	11-15	LON Warning Word	13-0* SLC Settings		15-0* Drive Information	
8-02	Control Source	9-27	Parameter Edit	11-17	XIF Revision	13-00	SL Controller Mode	15-0* Operating Data	
8-03	Control Timeout Time	9-28	Process Control	11-18	LonWorks Revision	13-01	Start Event	15-00	Operating Hours
8-04	Control Timeout Function	9-44	Fault Message Counter	11-2* LON Param. Access	11-20	Stop Event	13-02	Running Hours	
8-05	End-of-Timeout Function	9-45	Fault Code	11-21	Store Data Values	13-03	Reset SLC	15-01	Running Hours
8-06	Reset Control Timeout	9-47	Fault Number	12-* Ethernet		13-03	Reset SLC	15-02	kWh Counter
8-07	Diagnosis Trigger	9-52	Fault Situation Counter	12-0* IP Settings		13-1* Comparators		15-03	Power Up's
8-08	Readout Filtering	9-53	Profibus Warning Word	12-00	IP Address Assignment	13-10	Comparator Operand	15-04	Over Temp's
8-09	Communication Charset	9-63	Actual Baud Rate	12-01	IP Address	13-11	Comparator Operator	15-05	Over Volt's
8-1*	Control Settings	9-64	Device Identification	12-02	Subnet Mask	13-12	Comparator Value	15-06	Reset kWh Counter
8-10	Control Profile	9-65	Profile Number	12-03	Default Gateway	13-2* Timers		15-07	Reset Running Hours Counter
8-13	Configurable Status Word STW	9-67	Control Word 1	12-04	DHCP Server	13-20	SL Controller Timer	15-08	Number of Starts
8-3*	FC Port Settings	9-68	Status Word 1	12-05	DHCP Server	13-4* Logic Rules		15-1* Data Log Settings	
8-30	Protocol	9-71	Profibus Save Data Values	12-05	Lease Expires	13-40	Logic Rule Boolean 1	15-10	Logging Source
8-31	Address	9-72	ProfibusDriveReset	12-06	Name Servers	13-41	Logic Rule Operator 1	15-11	Logging Interval
8-32	Baud Rate	9-75	DO Identification	12-07	Domain Name	13-42	Logic Rule Boolean 2	15-12	Trigger Event
8-33	Parity / Stop Bits	9-80	Defined Parameters (1)	12-08	Host Name	13-43	Logic Rule Operator 2	15-13	Logging Mode
8-34	Estimated cycle time	9-81	Defined Parameters (2)	12-09	Physical Address	13-44	Logic Rule Boolean 3	15-14	Samples Before Trigger
8-35	Minimum Response Delay	9-82	Defined Parameters (3)	12-1* Ethernet Link Parameters		13-5* States		15-2* Historic Log	
8-36	Maximum Response Delay	9-83	Defined Parameters (4)	12-10	Link Status	13-51	SL Controller Event	15-20	Historic Log: Event
8-37	Maximum Inter-Char Delay	9-84	Defined Parameters (5)	12-11	Link Duration	13-52	SL Controller Action	15-21	Historic Log: Value
8-4*	FC MC protocol set	9-90	Changed Parameters (1)	12-12	Auto Negotiation	14-0* Inverter Switching		15-22	Historic Log: Time
8-40	Telegram Selection	9-91	Changed Parameters (2)	12-13	Link Speed	14-00	Switching Pattern	15-3* Alarm Log	
8-42	PCD write configuration	9-92	Changed Parameters (3)	12-2* Process Data		14-01	Switching Frequency	15-30	Alarm Log: Error Code
8-43	PCD read configuration	9-93	Changed Parameters (4)	12-20	Control Instance	14-03	Overmodulation	15-31	Alarm Log: Value
8-5*	Digital/Bus	9-94	Changed Parameters (5)	12-21	Process Data Config Write	14-04	PWM Random	15-32	Alarm Log: Time
8-50	Coasting Select	9-99	Profibus Revision Counter	12-22	Process Data Config Read	14-1* Mains On/Off		15-33	Alarm Log: Date and Time
8-52	DC Brake Select	10-* CAN Fieldbus		12-27	Primary Master	14-10	Mains Failure	15-4* Drive Identification	
8-53	Start Select	10-00	Common Settings	12-28	Store Data Values	14-11	Mains Voltage at Mains Fault	15-40	FC Type
8-54	Reversing Select	10-01	CAN Protocol	12-29	Store Always	14-12	Function at Mains Imbalance	15-41	Power Section
8-55	Set-up Select	10-01	Baud Rate Select	12-3* EtherNet/IP		14-2* Reset Functions		15-42	Voltage
8-56	Preset Reference Select	10-02	MAC ID	12-30	Warning Parameter	14-20	Reset Mode	15-43	Software Version
8-7*	BACnet	10-05	Readout Transmit Error Counter	12-31	Net Reference	14-21	Automatic Restart Time	15-44	Ordered Typecode String
8-70	BACnet Device Instance	10-06	Readout Receive Error Counter	12-32	Net Control	14-22	Operation Mode	15-45	Actual Typecode String
8-72	MS/TP Max Masters	10-07	Readout Bus Off Counter	12-33	CIP Revision	14-23	Typecode Setting	15-46	Frequency Converter Ordering No
8-73	MS/TP Max Info Frames	10-1* DeviceNet		12-34	CIP Product Code	14-25	Trip Delay at Torque Limit	15-47	Power Card Ordering No
8-74	"I-Am" Service	10-10	Process Data Type Selection	12-35	EDS Parameter	14-26	Trip Delay at Inverter Fault	15-48	LCP Id No
8-75	Initialisation Password	10-11	Process Data Config Write	12-37	COS Inhibit Timer	14-28	Production Settings	15-49	SW ID Control Card
8-8*	FC Port Diagnostics	10-12	Process Data Config Read	12-38	COS Filter	14-29	Service Code	15-50	SW ID Power Card
8-80	Bus Message Count	10-13	Warning Parameter	12-4* Modbus TCP		14-3* Current Limit Ctrl.		15-51	Frequency Converter Serial Number
8-81	Bus Error Count	10-14	Net Reference	12-40	Status Parameter	14-30	Current Lim Ctrl, Proportional Gain	15-53	Power Card Serial Number
8-82	Slave Messages Rcvd	10-15	Net Control	12-41	Slave Message Count	14-31	Current Lim Ctrl, Integration Time	15-55	Vendor URL
8-83	Slave Error Count	10-2* COS Filters		12-42	Slave Exception Message Count	14-32	Current Lim Ctrl, Filter Time	15-56	Vendor Name
8-84	Slave Messages Sent	10-20	COS Filter 1	12-8* Other Ethernet Services		14-4* Energy Optimising		15-59	CSV Filename
8-85	Slave Timeout Errors	10-21	COS Filter 2	12-80	FTP Server	14-40	VT Level	15-6* Option Ident	
8-88	Diagnosis / Feedback	10-22	COS Filter 3	12-81	HTTP Server	14-41	AEO Minimum Magnetisation	15-60	Option Mounted
8-9*	Bus Jog / Feedback	10-23	COS Filter 4	12-82	SMTP Service	14-42	Minimum AEO Frequency	15-61	Option SW Version
8-91	Bus Jog 1 Speed	10-3* Parameter Access		12-89	Transparent Socket Channel Port	14-5* Environment		15-62	Option Ordering No
8-94	Bus Jog 2 Speed	10-30	Array Index	12-90	Cable Diagnostic	14-50	RFI Filter	15-63	Option Serial No
8-95	Bus Feedback 1	10-31	Store Data Values	12-91	Auto Cross Over	14-51	DC Link Compensation	15-70	Option in Slot A
8-96	Bus Feedback 2	10-32	Devicenet Revision	12-92	IGMP Snooping	14-52	Fan Control	15-72	Option in Slot B
9-*	Profibus	10-33	Store Always	12-93	Cable Error Length			15-73	Slot B Option SW Version
		10-34	Devicenet Product Code						

15-74	Option in Slot C0	16-63	Terminal 54 Switch Setting	20-06	Feedback 3 Source	21-19	Ext. 1 Output [%]	22-37	High Speed [Hz]
15-75	Slot C0 Option SW Version	16-64	Analog Input 54	20-07	Feedback 3 Conversion	21-2*	Ext. CL 1 PID	22-38	High Speed Power [kW]
15-76	Option in Slot C1	16-65	Analog Output 42 [mA]	20-08	Feedback 3 Source Unit	21-20	Ext. 1 Normal/Inverse Control	22-39	High Speed Power [HP]
15-77	Slot C1 Option SW Version	16-66	Digital Output [bin]	20-12	Reference/Feedback Unit	21-21	Ext. 1 Proportional Gain	22-4*	Sleep Mode
15-8*	Operating Data II	16-67	Pulse Input #29 [Hz]	20-13	Minimum Reference/Feedb.	21-22	Ext. 1 Integral Time	22-40	Minimum Run Time
15-80	Fan Running Hours	16-68	Pulse Input #33 [Hz]	20-14	Maximum Reference/Feedb.	21-23	Ext. 1 Differentiation Time	22-41	Minimum Sleep Time
15-81	Preset Fan Running Hours	16-69	Pulse Output #27 [Hz]	20-2*	Feedback/Setpoint	21-24	Ext. 1 Dif. Gain Limit	22-42	Wake-up Speed [RPM]
15-9*	Parameter Info	16-70	Pulse Output #29 [Hz]	20-20	Feedback Function	21-3*	Ext. CL 2 Ref/Fb.	22-43	Wake-up Speed [Hz]
15-92	Defined Parameters	16-71	Relay Output [bin]	20-21	Setpoint 1	21-30	Ext. 2 Ref./Feedback Unit	22-44	Wake-up Ref./FB Difference
15-93	Modified Parameters	16-72	Counter A	20-22	Setpoint 2	21-31	Ext. 2 Minimum Reference	22-45	Setpoint Boost
15-98	Drive Identification	16-73	Counter B	20-23	Setpoint 3	21-32	Ext. 2 Maximum Reference	22-46	Maximum Boost Time
15-99	Parameter Metadata	16-75	Analog In X30/11	20-3*	Feedb. Adv. Conv.	21-33	Ext. 2 Reference Source	22-5*	End of Curve
16-0*	Data Readouts	16-76	Analog In X30/12	20-30	Refrigerant	21-34	Ext. 2 Feedback Source	22-50	End of Curve Function
16-1*	General Status	16-77	Analog Out X30/8 [mA]	20-31	User Defined Refrigerant A1	21-35	Ext. 2 Setpoint	22-51	End of Curve Delay
16-00	Control Word	16-8*	Fieldbus & FC Port	20-32	User Defined Refrigerant A2	21-37	Ext. 2 Reference [Unit]	22-6*	Broken Belt Detection
16-01	Reference [Unit]	16-80	Fieldbus CTW 1	20-33	User Defined Refrigerant A3	21-38	Ext. 2 Feedback [Unit]	22-60	Broken Belt Function
16-02	Reference [%]	16-82	Fieldbus REF 1	20-34	Duct 1 Area [m ²]	21-39	Ext. 2 Output [%]	22-61	Broken Belt Torque
16-03	Status Word	16-84	Comm. Option STW	20-35	Duct 1 Area [in ²]	21-4*	Ext. CL 2 PID	22-62	Broken Belt Delay
16-05	Main Actual Value [%]	16-85	FC Port CTW 1	20-36	Duct 2 Area [m ²]	21-40	Ext. 2 Normal/Inverse Control	22-7*	Short Cycle Protection
16-09	Custom Readout	16-86	FC Port REF 1	20-37	Duct 2 Area [in ²]	21-41	Ext. 2 Proportional Gain	22-75	Short Cycle Protection
16-1*	Motor Status	16-9*	Diagnosis Readouts	20-38	Air Density Factor [%]	21-42	Ext. 2 Integral Time	22-76	Interval between Starts
16-10	Power [kW]	16-90	Alarm Word	20-6*	Sensorless	21-43	Ext. 2 Differentiation Time	22-77	Minimum Run Time
16-11	Power [hp]	16-91	Alarm Word 2	20-60	Sensorless Unit	21-44	Ext. 2 Dif. Gain Limit	22-78	Minimum Run Time Override
16-12	Motor Voltage	16-92	Warning Word	20-69	Sensorless Information	21-5*	Ext. CL 3 Ref/Fb.	22-79	Minimum Run Time Override Value
16-13	Frequency	16-93	Warning Word 2	20-7*	PID Autotuning	21-50	Ext. 3 Ref./Feedback Unit	22-8*	Flow Compensation
16-14	Motor Current	16-94	Ext. Status Word	20-70	Closed Loop Type	21-51	Ext. 3 Minimum Reference	22-80	Flow Compensation
16-15	Frequency [%]	16-95	Ext. Status Word 2	20-71	PID Performance	21-52	Ext. 3 Maximum Reference	22-81	Square-linear Curve Approximation
16-16	Torque [Nm]	16-96	Maintenance Word	20-72	PID Output Change	21-53	Ext. 3 Reference Source	22-82	Work Point Calculation
16-17	Speed [RPM]	18-*	Info & Readouts	20-73	Minimum Feedback Level	21-54	Ext. 3 Feedback Source	22-83	Speed at No-Flow [RPM]
16-18	Motor Thermal	18-0*	Maintenance Log	20-74	Maximum Feedback Level	21-55	Ext. 3 Setpoint	22-84	Speed at No-Flow [Hz]
16-22	Torque [%]	18-00	Maintenance Log: Item	20-79	PID Autotuning	21-57	Ext. 3 Reference [Unit]	22-85	Speed at Design Point [RPM]
16-26	Power Filtered [kW]	18-01	Maintenance Log: Action	20-8*	PID Basic Settings	21-58	Ext. 3 Feedback [Unit]	22-86	Speed at Design Point [Hz]
16-27	Power Filtered [hp]	18-02	Maintenance Log: Time	20-81	PID Start Speed [RPM]	21-59	Ext. 3 Output [%]	22-87	Pressure at Rated Speed
16-3*	Drive Status	18-1*	Fire Mode Log	20-82	PID Start Speed [Hz]	21-6*	Ext. CL 3 PID	22-88	Pressure at Design Point
16-30	DC Link Voltage	18-10	Fire Mode Log: Event	20-83	PID Start Speed [Hz]	21-60	Ext. 3 Normal/Inverse Control	22-89	Flow at Design Point
16-32	Brake Energy /s	18-11	Fire Mode Log: Time	20-84	On Reference Bandwidth	21-61	Ext. 3 Proportional Gain	22-90	Flow at Rated Speed
16-33	Brake Energy /2 min	18-12	Fire Mode Log: Date and Time	20-9*	PID Controller	21-62	Ext. 3 Integral Time	23-*	Time-based Functions
16-34	Heatsink Temp.	18-3*	Inputs & Outputs	20-91	PID Anti Windup	21-63	Ext. 3 Differentiation Time	23-00	ON Time
16-35	Inverter Thermal	18-30	Analog Input X42/1	20-93	PID Proportional Gain	21-64	Ext. 3 Dif. Gain Limit	23-01	ON Action
16-36	Inv. Nom. Current	18-31	Analog Input X42/3	20-94	PID Integral Time	22-0*	Miscellaneous	23-02	OFF Time
16-37	Inv. Max. Current	18-32	Analog Input X42/5	20-95	PID Differentiation Time	22-00	External Interlock Delay	23-03	OFF Action
16-38	SL Controller State	18-33	Analog Out X42/7 [V]	20-96	PID Diff. Gain Limit	22-01	Power Filter Time	23-04	Occurrence
16-39	Control Card Temp.	18-34	Analog Out X42/9 [V]	21-0*	Ext. CL Autotuning	22-2*	No-Flow Detection	23-0*	Timed Actions Settings
16-40	Logging Buffer Full	18-35	Analog Out X42/11 [V]	21-00	Closed Loop Type	22-20	Low Power Auto Set-up	23-08	Timed Actions Mode
16-41	Logging Buffer Full	18-36	Analog Input X48/2 [mA]	21-01	PID Performance	22-21	Low Power Detection	23-09	Timed Actions Reactivation
16-43	Timed Actions Status	18-37	Temp. Input X48/4	21-02	PID Output Change	22-22	Low Speed Detection	23-1*	Maintenance
16-49	Current Fault Source	18-38	Temp. Input X48/7	21-03	Minimum Feedback Level	22-23	No-Flow Function	23-10	Maintenance Item
16-5*	Ref. & Feedb.	18-39	Temp. Input X48/10	21-04	Maximum Feedback Level	22-24	No-Flow Delay	23-11	Maintenance Action
16-50	External Reference	18-5*	Ref. & Feedb.	21-09	PID Autotuning	22-26	Dry Pump Function	23-12	Maintenance Time Base
16-52	Feedback [Unit]	18-50	Sensorless Readout [unit]	21-1*	Ext. CL 1 Ref/Fb.	22-27	Dry Pump Delay	23-13	Maintenance Time Interval
16-53	Digi Pot Reference	20-*	Drive Closed Loop	21-10	Ext. 1 Ref./Feedback Unit	22-3*	No-Flow Power Tuning	23-14	Maintenance Date and Time
16-54	Feedback 1 [Unit]	20-0*	Feedback	21-11	Ext. 1 Minimum Reference	22-30	No-Flow Power	23-1*	Maintenance Reset
16-55	Feedback 2 [Unit]	20-00	Feedback 1 Source	21-12	Ext. 1 Maximum Reference	22-31	Power Correction Factor	23-15	Reset Maintenance Word
16-56	Feedback 3 [Unit]	20-01	Feedback 1 Conversion	21-13	Ext. 1 Reference Source	22-32	Low Speed [RPM]	23-16	Maintenance Text
16-6*	Inputs & Outputs	20-02	Feedback 1 Source Unit	21-14	Ext. 1 Feedback Source	22-33	Low Speed [Hz]	23-5*	Energy Log
16-60	Digital Input	20-03	Feedback 2 Source	21-15	Ext. 1 Setpoint	22-34	Low Speed Power [kW]	23-50	Energy Log Resolution
16-61	Terminal 53 Switch Setting	20-04	Feedback 2 Conversion	21-17	Ext. 1 Reference [Unit]	22-35	Low Speed Power [HP]	23-51	Period Start
16-62	Analog Input 53	20-05	Feedback 2 Source Unit	21-18	Ext. 1 Feedback [Unit]	22-36	High Speed [RPM]	23-53	Energy Log

23-54	Reset Energy Log	25-30	Destage Function Time	26-41	Terminal X42/7 Min. Scale	99-03	DAC 4 selection
23-6*	Trending	25-4*	Staging Settings	26-42	Terminal X42/7 Max. Scale	99-04	DAC 1 scale
23-60	Trend Variable	25-40	Ramp Down Delay	26-43	Terminal X42/7 Bus Control	99-05	DAC 2 scale
23-61	Continuous Bin Data	25-41	Ramp Up Delay	26-44	Terminal X42/7 Timeout Preset	99-06	DAC 3 scale
23-62	Timed Bin Data	25-42	Staging Threshold	26-5*	Analog Out X42/9	99-07	DAC 4 scale
23-63	Timed Period Start	25-43	Destaging Threshold	26-50	Terminal X42/9 Output	99-08	Test param 1
23-64	Timed Period Stop	25-44	Staging Speed [RPM]	26-51	Terminal X42/9 Min. Scale	99-09	Test param 2
23-65	Minimum Bin Value	25-45	Staging Speed [Hz]	26-52	Terminal X42/9 Max. Scale	99-10	DAC Option Slot
23-66	Reset Continuous Bin Data	25-46	Destaging Speed [RPM]	26-53	Terminal X42/9 Bus Control	99-11	RFI 2
23-67	Reset Timed Bin Data	25-47	Destaging Speed [Hz]	26-54	Terminal X42/9 Timeout Preset	99-12	Fan
23-8*	Payback Counter	25-5*	Alternation Settings	26-6*	Analog Out X42/11	99-13	Idle time
23-80	Power Reference Factor	25-50	Lead Pump Alternation	26-60	Terminal X42/11 Output	99-14	Paramdb requests in queue
23-81	Energy Cost	25-51	Alternation Event	26-61	Terminal X42/11 Min. Scale	99-15	Secondary Timer at Inverter Fault
23-82	Investment	25-52	Alternation Time Interval	26-62	Terminal X42/11 Max. Scale	99-16	No of Current Sensors
23-83	Energy Savings	25-53	Alternation Timer Value	26-63	Terminal X42/11 Bus Control	99-20	HS Temp. (PC1)
23-84	Cost Savings	25-54	Alternation Predefined Time	26-64	Terminal X42/11 Timeout Preset	99-21	HS Temp. (PC2)
24**	Appl. Functions 2	25-55	Alternate if Load < 50%	31-1**	Bypass Option	99-22	HS Temp. (PC3)
24-0*	Fire Mode	25-56	Staging Mode at Alternation	31-00	Bypass Mode	99-23	HS Temp. (PC4)
24-00	Fire Mode Function	25-57	Run Next Pump Delay	31-01	Bypass Start Time Delay	99-24	HS Temp. (PC5)
24-01	Fire Mode Configuration	25-58	Run on Mains Delay	31-02	Bypass Trip Time Delay	99-25	HS Temp. (PC6)
24-02	Fire Mode Unit	25-8*	Status	31-03	Test Mode Activation	99-26	HS Temp. (PC7)
24-03	Fire Mode Min Reference	25-80	Cascade Status	31-10	Bypass Status Word	99-27	HS Temp. (PC8)
24-04	Fire Mode Max Reference	25-81	Pump Status	31-11	Bypass Running Hours	99-29	Platform Version
24-05	Fire Mode Preset Reference	25-82	Lead Pump	31-19	Remote Bypass Activation	99-40	StartupWizardState
24-06	Fire Mode Reference Source	25-83	Relay Status	35-5**	Sensor Input Option	99-90	Options present
24-07	Fire Mode Feedback Source	25-84	Pump ON Time	35-0*	Temp. Input Mode	99-91	Motor Power Internal
24-09	Fire Mode Alarm Handling	25-85	Relay ON Time	35-01	Term. X48/4 Temp. Unit	99-92	Motor Voltage Internal
24-1*	Drive Bypass	25-86	Reset Relay Counters	35-02	Term. X48/4 Input Type	99-93	Motor Frequency Internal
24-10	Drive Bypass Function	25-9*	Service	35-03	Term. X48/7 Temp. Unit	99-94	Imbalance derate [%]
24-11	Drive Bypass Delay Time	25-91	Pump Interlock	35-04	Term. X48/10 Temp. Unit	99-95	Temperature derate [%]
24-5*	Multi-Motor Funct.	25-92	Manual Alternation	35-05	Term. X48/10 Input Type	99-96	Overload derate [%]
24-90	Missing Motor Function	26-0*	Analog I/O Option	35-06	Temperature Sensor Alarm Function		
24-91	Missing Motor Coefficient 1	26-00	Terminal X42/1 Mode	35-1*	Temp. Input X48/4		
24-92	Missing Motor Coefficient 2	26-01	Terminal X42/3 Mode	35-14	Term. X48/4 Filter Time Constant		
24-93	Missing Motor Coefficient 3	26-02	Terminal X42/5 Mode	35-15	Term. X48/4 Temp. Monitor		
24-94	Missing Motor Coefficient 4	26-1*	Analog Input X42/1	35-16	Term. X48/4 Low Temp. Limit		
24-95	Locked Rotor Function	26-10	Terminal X42/1 Low Voltage	35-17	Term. X48/4 High Temp. Limit		
24-96	Locked Rotor Coefficient 1	26-11	Terminal X42/1 High Voltage	35-2*	Temp. Input X48/7		
24-97	Locked Rotor Coefficient 2	26-12	Term. X42/1 Low Ref./Feedb. Value	35-24	Term. X48/7 Filter Time Constant		
24-98	Locked Rotor Coefficient 3	26-13	Term. X42/1 High Ref./Feedb. Value	35-25	Term. X48/7 Temp. Monitor		
24-99	Locked Rotor Coefficient 4	26-16	Term. X42/1 Filter Time Constant	35-26	Term. X48/7 Low Temp. Limit		
25-0*	Cascade Controller	26-17	Term. X42/1 Live Zero	35-27	Term. X48/7 High Temp. Limit		
25-0*	System Settings	26-2*	Analog Input X42/3	35-3*	Temp. Input X48/10		
25-00	Cascade Controller	26-20	Terminal X42/3 Low Voltage	35-34	Term. X48/10 Filter Time Constant		
25-02	Motor Start	26-21	Terminal X42/3 High Voltage	35-35	Term. X48/10 Temp. Monitor		
25-04	Pump Cycling	26-24	Term. X42/3 Low Ref./Feedb. Value	35-36	Term. X48/10 Low Temp. Limit		
25-05	Fixed Lead Pump	26-25	Term. X42/3 High Ref./Feedb. Value	35-37	Term. X48/10 High Temp. Limit		
25-06	Number of Pumps	26-26	Term. X42/3 Filter Time Constant	35-4*	Analog Input X48/2		
25-2*	Bandwidth Settings	26-27	Term. X42/3 Live Zero	35-42	Term. X48/2 Low Current		
25-20	Staging Bandwidth	26-3*	Analog Input X42/5	35-43	Term. X48/2 High Current		
25-21	Override Bandwidth	26-30	Terminal X42/5 Low Voltage	35-44	Term. X48/2 Low Ref./Feedb. Value		
25-22	Fixed Speed Bandwidth	26-31	Terminal X42/5 High Voltage	35-45	Term. X48/2 High Ref./Feedb. Value		
25-23	SBW Staging Delay	26-34	Term. X42/5 Low Ref./Feedb. Value	35-46	Term. X48/2 Filter Time Constant		
25-24	SBW Destaging Delay	26-35	Term. X42/5 High Ref./Feedb. Value	35-47	Term. X48/2 Live Zero		
25-25	OBW Time	26-36	Term. X42/5 Filter Time Constant	99-*	Devcl support		
25-26	Destage At No-Flow	26-37	Term. X42/5 Live Zero	99-00	DAC 1 selection		
25-27	Stage Function	26-4*	Analog Out X42/7	99-01	DAC 2 selection		
25-28	Stage Function Time	26-40	Terminal X42/7 Output	99-02	DAC 3 selection		

5.6 Remote Programming with MCT 10 Set-up Software

Danfoss has a software program available for developing, storing, and transferring frequency converter programming. The MCT 10 Set-up Software allows the user to connect a PC to the frequency converter and perform live programming rather than using the LCP. Additionally, all frequency converter programming can be done off-line and simply downloaded to the frequency converter. Or the entire frequency converter profile can be loaded onto the PC for back up storage or analysis.

5

The USB connector or RS-485 terminal are available for connecting to the frequency converter.

MCT 10 Set-up Software is available for free download at www.VLT-software.com. A CD is also available by requesting part number 130B1000. *The Operating Instructions*, provide detailed information on how to programme using the MCT 10 Set-up Software.

6 Application Examples

6.1 Introduction

NOTE

A jumper wire may be required between terminal 12 (or 13) and terminal 37 for the frequency converter to operate when using factory default programming values.

The examples in this section are intended as a quick reference for common applications.

- Parameter settings are the regional default values unless otherwise indicated (selected in 0-03 Regional Settings)
- Parameters associated with the terminals and their settings are shown next to the drawings
- Where switch settings for analog terminals A53 or A54 are required, these are also shown

6.2 Application Examples

CAUTION

Thermistors must use reinforced or double insulation to meet PELV insulation requirements.

FC		Parameters	
Function	Setting	Function	Setting
+24 V 12		1-29 Automatic Motor Adaptation (AMA)	[1] Enable complete AMA
+24 V 13		5-12 Terminal 27 Digital Input	[2]* Coast inverse
D IN 18		*=Default Value	
D IN 19		Notes/comments: Parameter group 1-2* Motor Data must be set according to motor	
COM 20			
D IN 27			
D IN 29			
D IN 32			
D IN 33			
D IN 37			
+10 V 50			
A IN 53			
A IN 54			
COM 55			
A OUT 42			
COM 39			

Table 6.1 AMA with T27 Connected

FC		Parameters	
Function	Setting	Function	Setting
+24 V 12		1-29 Automatic Motor Adaptation (AMA)	[1] Enable complete AMA
+24 V 13		5-12 Terminal 27 Digital Input	[0] No operation
D IN 18		*=Default Value	
D IN 19		Notes/comments: Parameter group 1-2* Motor Data must be set according to motor	
COM 20			
D IN 27			
D IN 29			
D IN 32			
D IN 33			
D IN 37			
+10 V 50			
A IN 53			
A IN 54			
COM 55			
A OUT 42			
COM 39			

Table 6.2 AMA without T27 Connected

FC		Parameters	
Function	Setting	Function	Setting
+24 V 12		6-10 Terminal 53 Low Voltage	0.07 V*
+24 V 13		6-11 Terminal 53 High Voltage	10 V*
D IN 18		6-14 Terminal 53 Low Ref./Feedb. Value	0 RPM
D IN 19		6-15 Terminal 53 High Ref./Feedb. Value	1500 RPM
COM 20		*=Default Value	
D IN 27		Notes/comments:	
D IN 29			
D IN 32			
D IN 33			
D IN 37			
+10 V 50			
A IN 53			
A IN 54			
COM 55			
A OUT 42			
COM 39			

Table 6.3 Analog Speed Reference (Voltage)

		Parameters	
FC		Function	Setting
+24 V	12		
+24 V	13	6-12 Terminal 53	4 mA*
D IN	18	Low Current	
D IN	19	6-13 Terminal 53	20 mA*
COM	20	High Current	
D IN	27	6-14 Terminal 53	0 RPM
D IN	29	Low Ref./Feedb.	
D IN	32	Value	
D IN	33	6-15 Terminal 53	1500 RPM
D IN	37	High Ref./Feedb.	
		Value	
		*=Default Value	
		Notes/comments:	

Table 6.4 Analog Speed Reference (Current)

		Parameters	
FC		Function	Setting
+24 V	12		
+24 V	13	5-10 Terminal 18	[8] Start*
D IN	18	Digital Input	
D IN	19	5-12 Terminal 27	[0] No operation
COM	20	Digital Input	
D IN	27	5-19 Terminal 37	[1] Safe Stop
D IN	29	Safe Stop	Alarm
D IN	32		
D IN	33		
D IN	37		
		*=Default Value	
		Notes/comments:	
		If 5-12 Terminal 27 Digital Input is set to [0] No operation, a jumper wire to terminal 27 is not needed.	

Table 6.5 Start/Stop Command with Safe Stop

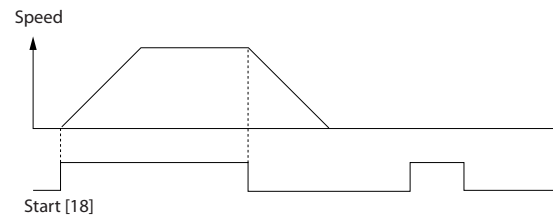


Illustration 6.1

		Parameters	
FC		Function	Setting
+24 V	12		
+24 V	13	5-10 Terminal 18	[9] Latched
D IN	18	Digital Input	Start
D IN	19	5-12 Terminal 27	[6] Stop
COM	20	Digital Input	Inverse
D IN	27		
D IN	29		
D IN	32		
D IN	33		
D IN	37		
		*=Default Value	
		Notes/comments:	
		If 5-12 Terminal 27 Digital Input is set to [0] No operation, a jumper wire to terminal 27 is not needed.	

Table 6.6 Pulse Start/Stop

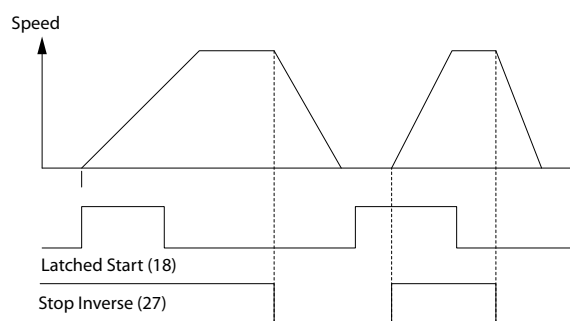


Illustration 6.2

		Parameters	
		Function	Setting
		5-10 Terminal 18 Digital Input	[8] Start
		5-11 Terminal 19 Digital Input	[10] Reversing*
		5-12 Terminal 27 Digital Input	[0] No operation
		5-14 Terminal 32 Digital Input	[16] Preset ref bit 0
		5-15 Terminal 33 Digital Input	[17] Preset ref bit 1
		3-10 Preset Reference	
		Preset ref. 0	25%
		Preset ref. 1	50%
		Preset ref. 2	75%
		Preset ref. 3	100%
		*=-Default Value	
		Notes/comments:	

Table 6.7 Start/Stop with Reversing and 4 Preset Speeds

		Parameters	
		Function	Setting
		5-11 Terminal 19 Digital Input	[1] Reset
		*=-Default Value	
		Notes/comments:	

Table 6.8 External Alarm Reset

		Parameters	
		Function	Setting
		6-10 Terminal 53 Low Voltage	0.07 V*
		6-11 Terminal 53 High Voltage	10 V*
		6-14 Terminal 53 Low Ref./Feedb. Value	0 RPM
		6-15 Terminal 53 High Ref./Feedb. Value	1500 RPM
		*=-Default Value	
		Notes/comments:	

Table 6.9 Speed Reference (using a Manual Potentiometer)

		Parameters	
		Function	Setting
		5-10 Terminal 18 Digital Input	[8] Start*
		5-12 Terminal 27 Digital Input	[19] Freeze Reference
		5-13 Terminal 29 Digital Input	[21] Speed Up
		5-14 Terminal 32 Digital Input	[22] Speed Down
		*=-Default Value	
		Notes/comments:	

Table 6.10 Speed Up/Down

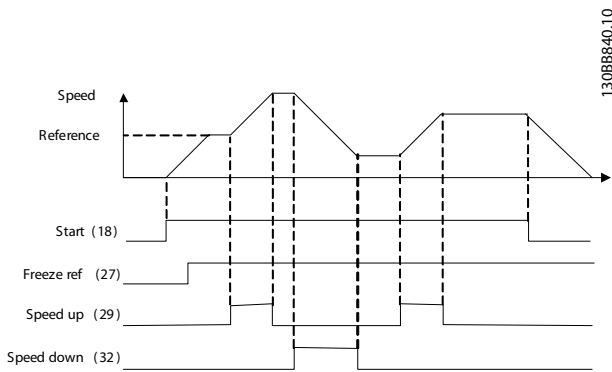


Illustration 6.3

		Parameters	
FC		Function	Setting
+24 V	12		
+24 V	13		
D IN	18	8-30 Protocol	FC*
D IN	19	8-31 Address	1*
COM	20	8-32 Baud Rate	9600*
D IN	27	*=Default Value	
D IN	29	Notes/comments:	
D IN	32	Select protocol, address and baud rate in the above mentioned parameters.	
D IN	33		
D IN	37		
+10 V	50		
A IN	53		
A IN	54		
COM	55		
A OUT	42		
COM	39		
R1	01-03		
R2	04-06		
	61-69	RS-485	

Table 6.11 RS-485 Network Connection

		Parameters	
FC		Function	Setting
+24 V	12		
+24 V	13		
D IN	18	1-90 Motor Thermal Protection	[2] Thermistor trip
COM	20	1-93 Thermistor Source	[1] Analog input 53
D IN	27	*=Default Value	
D IN	29	Notes/comments:	
D IN	32	If only a warning is desired, 1-90 Motor Thermal Protection should be set to [1] Thermistor warning.	
D IN	33		
D IN	37		
+10 V	50		
A IN	53		
A IN	54		
COM	55		
A OUT	42		
COM	39		
	U-I		
	A53		

Table 6.12 Motor Thermistor

		Parameters	
		Function	Setting
FC			
+24 V	12	4-30 Motor Feedback Loss Function	[1] Warning
+24 V	13	4-31 Motor Feedback Speed Error	100 RPM
D IN	18	4-32 Motor Feedback Loss Timeout	5 s
D IN	19	7-00 Speed PID Feedback Source	[2] MCB 102
COM	20	17-11 Resolution (PPR)	1024*
D IN	27	13-00 SL Controller Mode	[1] On
D IN	29	13-01 Start Event	[19] Warning
D IN	32	13-02 Stop Event	[44] Reset key
D IN	33	13-10 Comparat or Operand	[21] Warning no.
D IN	37	13-11 Comparat or Operator	[1] ≈*
+10 V	50	13-12 Comparat or Value	90
A IN	53	13-51 SL Controller Event	[22]
A IN	54	13-52 SL Controller Action	[32] Set digital out A low
COM	55	5-40 Function Relay	[80] SL digital output A
A OUT	42	*=Default Value	
COM	39	Notes/comments: If the limit in the feedback monitor is exceeded, Warning 90 will be issued. The SLC monitors Warning 90 and in the case that Warning 90 becomes TRUE then Relay 1 is triggered. External equipment may then indicate that service may be required. If the feedback error goes below the limit again within 5 s then the frequency converter continues and the warning disappears. But Relay 1 will still be triggered until [Reset] on the LCP.	

		Parameters	
		Function	Setting
FC			
+24 V	12	5-40 Function Relay	[32] Mech. brake ctrl.
+24 V	13	5-10 Terminal 18 Digital Input	[8] Start*
D IN	18	5-11 Terminal 19 Digital Input	[11] Start reversing
D IN	19	1-71 Start Delay	0.2
COM	20	1-72 Start Function	[5] VVC ^{plus} /FLUX Clockwise
D IN	27	1-76 Start Current	I _{m,n}
D IN	29	2-20 Release Brake Current	App. dependent
D IN	32	2-21 Activate Brake Speed [RPM]	Half of nominal slip of the motor
D IN	33	*=Default Value	
D IN	37	Notes/comments:	

Table 6.14 Mechanical Brake Control

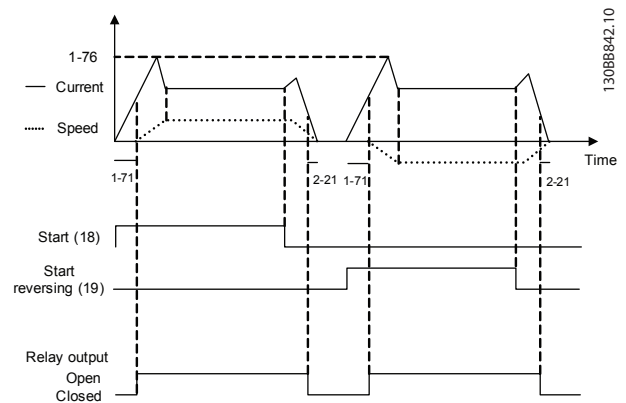


Illustration 6.4

Table 6.13 Using SLC to Set a Relay

7 Status Messages

7.1 Status Display

When the frequency converter is in status mode, status messages are generated automatically from within the frequency converter and appear in the bottom line of the display (see *Illustration 7.1*.)

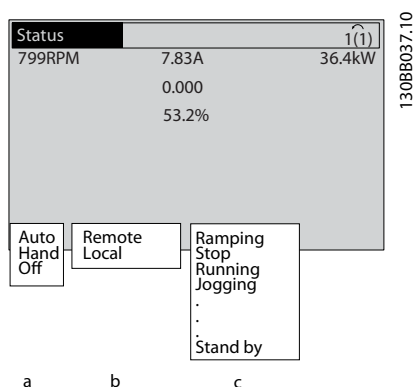


Illustration 7.1 Status Display

- The first part of the status line indicates where the stop/start command originates.
- The second part of the status line indicates where the speed control originates.
- The last part of the status line gives the present frequency converter status. These show the operational mode the frequency converter is in.

NOTE

In auto/remote mode, the frequency converter requires external commands to execute functions.

7.2 Status Message Definitions Table

The next three tables define the meaning of the status message display words.

Off	The frequency converter does not react to any control signal until [Auto On] or [Hand On] is pressed.
Auto on	The frequency converter is controlled from the control terminals and/or the serial communication.
Hand on	The frequency converter can be controlled by the navigation keys on the LCP. Stop commands, reset, reversing, DC brake, and other signals applied to the control terminals can override local control.

Table 7.1 Operation Mode

Remote	The speed reference is given from external signals, serial communication, or internal preset references.
Local	The frequency converter uses [Hand On] control or reference values from the LCP.

Table 7.2 Reference Site

AC Brake	AC Brake was selected in 2-10 <i>Brake Function</i> . The AC brake over-magnetizes the motor to achieve a controlled slow down.
AMA finish OK	Automatic motor adaptation (AMA) was carried out successfully.
AMA ready	AMA is ready to start. Press [Hand On] to start.
AMA running	AMA process is in progress.
Braking	The brake chopper is in operation. Generative energy is absorbed by the brake resistor.
Braking max.	The brake chopper is in operation. The power limit for the brake resistor defined in 2-12 <i>Brake Power Limit (kW)</i> is reached.
Coast	<ul style="list-style-type: none"> Coast inverse was selected as a function for a digital input (parameter group 5-1* <i>Digital Inputs</i>). The corresponding terminal is not connected. Coast activated by serial communication

Ctrl. Ramp-down	Control Ramp-down was selected in <i>14-10 Mains Failure</i> . <ul style="list-style-type: none"> The mains voltage is below the value set in <i>14-11 Mains Voltage at Mains Fault at mains fault</i> The frequency converter ramps down the motor using a controlled ramp down
Current High	The frequency converter output current is above the limit set in <i>4-51 Warning Current High</i> .
Current Low	The frequency converter output current is below the limit set in <i>4-52 Warning Speed Low</i>
DC Hold	DC hold is selected in <i>1-80 Function at Stop</i> and a stop command is active. The motor is held by a DC current set in <i>2-00 DC Hold/ Preheat Current</i> .
DC Stop	The motor is held with a DC current (<i>2-01 DC Brake Current</i>) for a specified time (<i>2-02 DC Braking Time</i>). <ul style="list-style-type: none"> DC Brake is activated in <i>2-03 DC Brake Cut In Speed [RPM]</i> and a Stop command is active DC Brake (inverse) is selected as a function for a digital input (parameter group <i>5-1* Digital Inputs</i>). The corresponding terminal is not active. The DC Brake is activated via serial communication
Feedback high	The sum of all active feedbacks is above the feedback limit set in <i>4-57 Warning Feedback High</i> .
Feedback low	The sum of all active feedbacks is below the feedback limit set in <i>4-56 Warning Feedback Low</i> .
Freeze output	The remote reference is active, which holds the present speed. <ul style="list-style-type: none"> Freeze output was selected as a function for a digital input (parameter group <i>5-1* Digital Inputs</i>). The corresponding terminal is active. Speed control is only possible via the terminal functions speed up and speed down. Hold ramp is activated via serial communication
Freeze output request	A freeze output command has been given, but the motor will remain stopped until a run permissive signal is received.
Freeze ref.	<i>Freeze Reference</i> was chosen as a function for a digital input (parameter group <i>5-1* Digital Inputs</i>). The corresponding terminal is active. The frequency converter saves the actual reference. Changing the reference is now only possible via terminal functions speed up and speed down.

Jog request	A jog command has been given, but the motor will be stopped until a run permissive signal is received via a digital input.
Jogging	The motor is running as programmed in <i>3-19 Jog Speed [RPM]</i> . <ul style="list-style-type: none"> <i>Jog</i> was selected as function for a digital input (parameter group <i>5-1* Digital Inputs</i>). The corresponding terminal (e.g. Terminal 29) is active. The Jog function is activated via the serial communication The Jog function was selected as a reaction for a monitoring function (e.g. No signal). The monitoring function is active
Motor check	In <i>1-80 Function at Stop, Motor Check</i> was selected. A stop command is active. To ensure that a motor is connected to the frequency converter, a permanent test current is applied to the motor.
OVC control	<i>Overvoltage</i> control was activated in <i>2-17 Overvoltage Control</i> . The connected motor is supplying the frequency converter with generative energy. The overvoltage control adjusts the V/Hz ratio to run the motor in controlled mode and to prevent the frequency converter from tripping.
PowerUnit Off	(For frequency converters with an external 24 V power supply installed only). Mains supply to the frequency converter is removed, but the control card is supplied by the external 24 V.
Protection md	Protection mode is active. The unit has detected a critical status (an overcurrent or overvoltage). <ul style="list-style-type: none"> To avoid tripping, switching frequency is reduced to 4 kHz If possible, protection mode ends after approximately 10 s Protection mode can be restricted in <i>14-26 Trip Delay at Inverter Fault</i>
QStop	The motor is decelerating using <i>3-81 Quick Stop Ramp Time</i> . <ul style="list-style-type: none"> <i>Quick stop inverse</i> was chosen as a function for a digital input (parameter group <i>5-1* Digital Inputs</i>). The corresponding terminal is not active. The quick stop function was activated via serial communication
Ramping	The motor is accelerating/decelerating using the active Ramp Up/Down. The reference, a limit value or a standstill is not yet reached.
Ref. high	The sum of all active references is above the reference limit set in <i>4-55 Warning Reference High</i> .

Ref. low	The sum of all active references is below the reference limit set in <i>4-54 Warning Reference Low</i> .
Run on ref.	The frequency converter is running in the reference range. The feedback value matches the setpoint value.
Run request	A start command has been given, but the motor is stopped until a run permissive signal is received via digital input.
Running	The motor is driven by the frequency converter.
Speed high	Motor speed is above the value set in <i>4-53 Warning Speed High</i> .
Speed low	Motor speed is below the value set in <i>4-52 Warning Speed Low</i> .
Standby	In Auto On Auto mode, the frequency converter will start the motor with a start signal from a digital input or serial communication.
Start delay	In <i>1-71 Start Delay</i> , a delay starting time was set. A start command is activated and the motor will start after the start delay time expires.
Start fwd/rev	Start forward and start reverse were selected as functions for two different digital inputs (parameter group <i>5-1* Digital Inputs</i>). The motor will start in forward or reverse depending on which corresponding terminal is activated.
Stop	The frequency converter has received a stop command from the LCP, digital input or serial communication.
Trip	An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, the frequency converter can be reset manually by pressing [Reset] or remotely by control terminals or serial communication.
Trip lock	An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, power must be cycled to the frequency converter. The frequency converter can then be reset manually by pressing [Reset] or remotely by control terminals or serial communication.

Table 7.3 Operation Status

8 Warnings and Alarms

8.1 System Monitoring

The frequency converter monitors the condition of its input power, output, and motor factors as well as other system performance indicators. A warning or alarm may not necessarily indicate a problem internal to the frequency converter itself. In many cases, it indicates failure conditions from input voltage, motor load or temperature, external signals, or other areas monitored by the frequency converter's internal logic. Be sure to investigate those areas exterior to the frequency converter as indicated in the alarm or warning.

8.2 Warning and Alarm Types

8.2.1 Warnings

A warning is issued when an alarm condition is impending or when an abnormal operating condition is present and may result in the frequency converter issuing an alarm. A warning clears by itself when the abnormal condition is removed.

8.2.2 Alarm Trip

An alarm is issued when the frequency converter is tripped, that is, the frequency converter suspends operation to prevent frequency converter or system damage. The motor will coast to a stop. The frequency converter logic will continue to operate and monitor the frequency converter status. After the fault condition is remedied, the frequency converter can be reset. It will then be ready to start operation again.

A trip can be reset in any of 4 ways:

- Press [Reset] on the LCP
- Digital reset input command
- Serial communication reset input command
- Auto reset

8.2.3 Alarm Trip-lock

An alarm that causes the frequency converter to trip-lock requires that input power be cycled. The motor will coast to a stop. The frequency converter logic will continue to operate and monitor the frequency converter status. Remove input power to the frequency converter and correct the cause of the fault, then restore power. This action puts the frequency converter into a trip condition as described above and may be reset in any of those 4 ways.

8.3 Warning and Alarm Displays

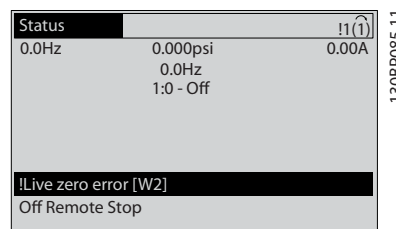


Illustration 8.1

An alarm or trip-lock alarm will flash on display along with the alarm number.

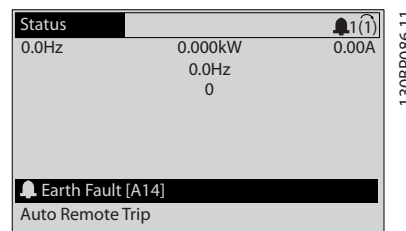


Illustration 8.2

In addition to the text and alarm code on the frequency converter LCP, there are three status indicator lights.

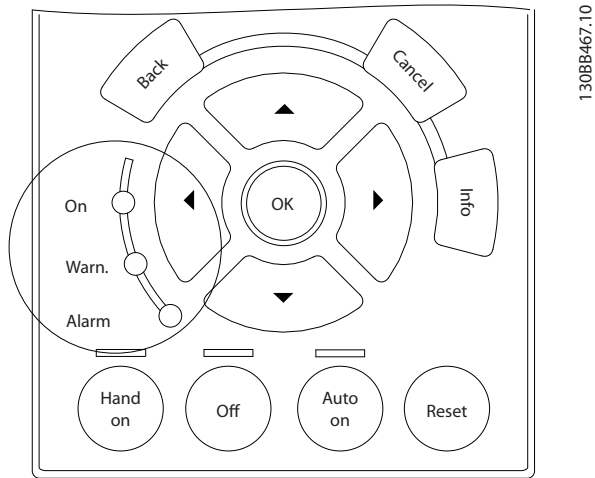


Illustration 8.3

	Warning LED	Alarm LED
Warning	On	Off
Alarm	Off	On (Flashing)
Trip-Lock	On	On (Flashing)

Table 8.1

8.4 Warning and Alarm Definitions

Table 8.2 defines whether a warning is issued prior to an alarm, and whether the alarm trips the unit or trip locks the unit.

No.	Description	Warning	Alarm/Trip	Alarm/Trip Lock	Parameter Reference
1	10 Volts low	X			
2	Live zero error	(X)	(X)		6-01 Live Zero Timeout Function
4	Mains phase loss	(X)	(X)	(X)	14-12 Function at Mains Imbalance
5	DC link voltage high	X			
6	DC link voltage low	X			
7	DC over voltage	X	X		
8	DC under voltage	X	X		
9	Inverter overloaded	X	X		
10	Motor ETR over temperature	(X)	(X)		1-90 Motor Thermal Protection
11	Motor thermistor over temperature	(X)	(X)		1-90 Motor Thermal Protection
12	Torque limit	X	X		
13	Over Current	X	X	X	
14	Earth (Ground) fault	X	X	X	
15	Hardware mismatch		X	X	
16	Short Circuit		X	X	
17	Control word timeout	(X)	(X)		8-04 Control Timeout Function
20	Temp. Input Error				
21	Param Error				
22	Hoist Mech. Brake	(X)	(X)		Parameter Group 2-2*
23	Internal Fans	X			
24	External Fans	X			14-53 Fan Monitor
25	Brake resistor short-circuited	X			
26	Brake resistor power limit	(X)	(X)		2-13 Brake Power Monitoring
27	Brake chopper short-circuited	X	X		
28	Brake check	(X)	(X)		2-15 Brake Check
29	Heatsink temp.	X	X	X	
30	Motor phase U missing	(X)	(X)	(X)	4-58 Missing Motor Phase Function
31	Motor phase V missing	(X)	(X)	(X)	4-58 Missing Motor Phase Function
32	Motor phase W missing	(X)	(X)	(X)	4-58 Missing Motor Phase Function
33	Inrush fault		X	X	
34	Fieldbus communication fault	X	X		
35	Option Fault	X	X		
36	Mains failure	X	X		
37	Phase Imbalance		X		
38	Internal fault		X	X	
39	Heatsink sensor		X	X	
40	Overload of Digital Output Terminal 27	(X)			5-00 Digital I/O Mode, 5-01 Terminal 27 Mode
41	Overload of Digital Output Terminal 29	(X)			5-00 Digital I/O Mode, 5-02 Terminal 29 Mode
42	OvrlD X30/6-7	(X)			
43	Ext. Supply (option)				

No.	Description	Warning	Alarm/Trip	Alarm/Trip Lock	Parameter Reference
45	Earth Fault 2	X	X	X	
46	Pwr. card supply		X	X	
47	24 V supply low	X	X	X	
48	1.8 V supply low		X	X	
49	Speed limit	X			
50	AMA calibration failed		X		
51	AMA check U _{nom} and I _{nom}		X		
52	AMA low I _{nom}		X		
53	AMA motor too big		X		
54	AMA motor too small		X		
55	AMA Parameter out of range		X		
56	AMA interrupted by user		X		
57	AMA timeout		X		
58	AMA internal fault	X	X		
59	Current limit	X			4-18 Current Limit
61	Feedback Error	(X)	(X)		4-30 Motor Feedback Loss Function
62	Output Frequency at Maximum Limit	X			
63	Mechanical Brake Low		(X)		2-20 Release Brake Current
64	Voltage Limit	X			
65	Control board overtemperature	X	X	X	
66	Heat sink Temperature Low	X			
67	Option Configuration has Changed		X		
68	Safe Stop	(X)	(X) ¹⁾		5-19 Terminal 37 Safe Stop
70	Illegal FC configuration			X	
71	PTC 1 Safe Stop				
72	Dangerous Failure				
73	Safe Stop Auto Restart	(X)	(X)		5-19 Terminal 37 Safe Stop
74	PTC Thermistor			X	
75	Illegal Profile Sel.		X		
76	Power Unit Setup	X			
77	Reduced Power Mode	X			14-59 Actual Number of Inverter Units
78	Tracking Error	(X)	(X)		4-34 Tracking Error Function
79	Illegal PS config		X	X	
80	Drive Initialized to Default Value		X		
81	CSIV corrupt		X		
82	CSIV parameter error		X		
83	Illegal Option Combination			X	
84	No Safety Option		X		
88	Option Detection			X	
89	Mechanical Brake Sliding	X			
90	Feedback Monitor	(X)	(X)		17-61 Feedback Signal Monitoring
91	Analog input 54 wrong settings			X	S202
104	Mixing Fan Fault	X	X		14-53
163	ATEX ETR cur.lim.warning	X			
164	ATEX ETR cur.lim.alarm		X		
165	ATEX ETR freq.lim.warning	X			
166	ATEX ETR freq.lim.alarm		X		
243	Brake IGBT	X	X	X	
244	Heatsink temp.	X	X	X	
245	Heatsink sensor		X	X	Parameter group 0-7*

No.	Description	Warning	Alarm/Trip	Alarm/Trip Lock	Parameter Reference
246	Pwr.card supply			X	
249	Rect. low temp.	X			
250	New spare parts			X	
251	New Type Code		X	X	

Table 8.2 Alarm/Warning Code List

(X) *Dependent on parameter*

¹⁾ *Cannot be Auto reset via 14-20 Reset Mode*

8.5 Fault Messages

The warning/alarm information below defines each warning/alarm condition, provides the probable cause for the condition, and details a remedy or troubleshooting procedure.

WARNING 1, 10 Volts low

The control card voltage is below 10 V from terminal 50. Remove some of the load from terminal 50, as the 10 V supply is overloaded. Max. 15 mA or minimum 590 Ω.

This condition can be caused by a short in a connected potentiometer or improper wiring of the potentiometer.

Troubleshooting

Remove the wiring from terminal 50. If the warning clears, the problem is with the customer wiring. If the warning does not clear, replace the control card.

WARNING/ALARM 2, Live zero error

This warning or alarm only appears if programmed by the user in *6-01 Live Zero Timeout Function*. The signal on one of the analog inputs is less than 50% of the minimum value programmed for that input. Broken wiring or faulty device sending the signal can cause this condition.

Troubleshooting

Check connections on all the analog input terminals. Control card terminals 53 and 54 for signals, terminal 55 common. MCB 101 terminals 11 and 12 for signals, terminal 10 common. MCB 109 terminals 1, 3, 5 for signals, terminals 2, 4, 6 common).

Check that the frequency converter programming and switch settings match the analog signal type.

Perform Input Terminal Signal Test.

WARNING/ALARM 3, No motor

No motor has been connected to the output of the frequency converter.

WARNING/ALARM 4, Mains phase loss

A phase is missing on the supply side, or the mains voltage imbalance is too high. This message also appears for a fault in the input rectifier on the frequency converter. Options are programmed at *14-12 Function at Mains Imbalance*.

Troubleshooting

Check the supply voltage and supply currents to the frequency converter.

WARNING 5, DC link voltage high

The intermediate circuit voltage (DC) is higher than the high voltage warning limit. The limit is dependent on the frequency converter voltage rating. The unit is still active.

WARNING 6, DC link voltage low

The intermediate circuit voltage (DC) is lower than the low voltage warning limit. The limit is dependent on the frequency converter voltage rating. The unit is still active.

WARNING/ALARM 7, DC overvoltage

If the intermediate circuit voltage exceeds the limit, the frequency converter trips after a time.

Troubleshooting

Connect a brake resistor

Extend the ramp time

Change the ramp type

Activate the functions in *2-10 Brake Function*

Increase *14-26 Trip Delay at Inverter Fault*

If the alarm/warning occurs during a power sag the solution is to use kinetic back-up (*14-10 Mains Failure*)

WARNING/ALARM 8, DC under voltage

If the intermediate circuit voltage (DC link) drops below the under voltage limit, the frequency converter checks if a 24 V DC backup supply is connected. If no 24 V DC backup supply is connected, the frequency converter trips after a fixed time delay. The time delay varies with unit size.

Troubleshooting

Check that the supply voltage matches the frequency converter voltage.

Perform input voltage test.

Perform soft charge circuit test.

WARNING/ALARM 9, Inverter overload

The frequency converter is about to cut out because of an overload (too high current for too long). The counter for electronic, thermal inverter protection issues a warning at 98% and trips at 100%, while giving an alarm. The frequency converter *cannot* be reset until the counter is below 90%.

The fault is that the frequency converter has run with more than 100% overload for too long.

Troubleshooting

Compare the output current shown on the LCP with the frequency converter rated current.

Compare the output current shown on the LCP with measured motor current.

Display the Thermal Drive Load on the LCP and monitor the value. When running above the frequency converter continuous current rating, the counter increases. When running below the frequency converter continuous current rating, the counter decreases.

WARNING/ALARM 10, Motor overload temperature

According to the electronic thermal protection (ETR), the motor is too hot. Select whether the frequency converter issues a warning or an alarm when the counter reaches 100% in *1-90 Motor Thermal Protection*. The fault occurs when the motor runs with more than 100% overload for too long.

Troubleshooting

Check for motor overheating.

Check if the motor is mechanically overloaded

Check that the motor current set in *1-24 Motor Current* is correct.

Ensure that Motor data in parameters 1-20 through 1-25 are set correctly.

If an external fan is in use, check in *1-91 Motor External Fan* that it is selected.

Running AMA in *1-29 Automatic Motor Adaptation (AMA)* tunes the frequency converter to the motor more accurately and reduces thermal loading.

WARNING/ALARM 11, Motor thermistor over temp

The thermistor might be disconnected. Select whether the frequency converter gives a warning or an alarm in *1-90 Motor Thermal Protection*.

Troubleshooting

Check for motor overheating.

Check if the motor is mechanically overloaded.

Check that the thermistor is connected correctly between either terminal 53 or 54 (analog voltage input) and terminal 50 (+10 V supply) and that the terminal switch for 53 or 54 is set for voltage. Check *1-93 Thermistor Source* selects terminal 53 or 54.

When using digital inputs 18 or 19, check that the thermistor is connected correctly between either terminal 18 or 19 (digital input PNP only) and terminal 50.

If a KTY sensor is used, check for correct connection between terminals 54 and 55

If using a thermal switch or thermistor, check that the programming if *1-93 Thermistor Resource* matches sensor wiring.

If using a KTY sensor, check the programming of *1-95 KTY Sensor Type*, *1-96 KTY Thermistor Resource*, and *1-97 KTY Threshold level* match sensor wiring.

WARNING/ALARM 12, Torque limit

The torque has exceeded the value in *4-16 Torque Limit Motor Mode* or the value in *4-17 Torque Limit Generator Mode*. *14-25 Trip Delay at Torque Limit* can change this from a warning only condition to a warning followed by an alarm.

Troubleshooting

If the motor torque limit is exceeded during ramp up, extend the ramp up time.

If the generator torque limit is exceeded during ramp down, extend the ramp down time.

If torque limit occurs while running, possibly increase the torque limit. Be sure the system can operate safely at a higher torque.

Check the application for excessive current draw on the motor.

WARNING/ALARM 13, Over current

The inverter peak current limit (approximately 200% of the rated current) is exceeded. The warning lasts about 1.5 s, then the frequency converter trips and issues an alarm. This fault may be caused by shock loading or quick acceleration with high inertia loads. It may also appear after kinetic back-up if the acceleration during ramp up is quick. If extended mechanical brake control is selected, trip can be reset externally.

Troubleshooting

Remove power and check if the motor shaft can be turned.

Check that the motor size matches the frequency converter.

Check parameters 1-20 to 1-25 for correct motor data.

ALARM 14, Earth (ground) fault

There is current from the output phases to earth, either in the cable between the frequency converter and the motor or in the motor itself.

Troubleshooting:

Remove power to the frequency converter and repair the earth fault.

Check for earth faults in the motor by measuring the resistance to ground of the motor leads and the motor with a megohmmeter.

Perform current sensor test.

ALARM 15, Hardware mismatch

A fitted option is not operational with the present control board hardware or software.

Record the value of the following parameters and contact your Danfoss supplier:

- 15-40 FC Type
- 15-41 Power Section
- 15-42 Voltage
- 15-43 Software Version
- 15-45 Actual Typecode String
- 15-49 SW ID Control Card
- 15-50 SW ID Power Card
- 15-60 Option Mounted
- 15-61 Option SW Version (for each option slot)

ALARM 16, Short circuit

There is short-circuiting in the motor or motor wiring.

Remove power to the frequency converter and repair the short circuit.

WARNING/ALARM 17, Control word timeout

There is no communication to the frequency converter. The warning will only be active when *8-04 Control Word Timeout Function* is NOT set to [Off].

If *8-04 Control Word Timeout Function* is set to *Stop* and *Trip*, a warning appears and the frequency converter ramps down until it trips then displays an alarm.

Troubleshooting:

- Check connections on the serial communication cable.
- Increase *8-03 Control Word Timeout Time*
- Check the operation of the communication equipment.
- Verify a proper installation based on EMC requirements.

WARNING/ALARM 22, Hoist mechanical brake

Report value shows what kind it is.

0 = The torque ref. was not reached before timeout.

1 = There was no brake feedback before timeout.

WARNING 23, Internal fan fault

The fan warning function is an extra protective function that checks if the fan is running/mounted. The fan warning can be disabled in *14-53 Fan Monitor ([0] Disabled)*.

Troubleshooting

- Check fan resistance.
- Check soft charge fuses.

WARNING 24, External fan fault

The fan warning function is an extra protective function that checks if the fan is running/mounted. The fan warning can be disabled in *14-53 Fan Monitor ([0] Disabled)*.

Troubleshooting

Check fan resistance.

Check soft charge fuses.

WARNING 25, Brake resistor short circuit

The brake resistor is monitored during operation. If a short circuit occurs, the brake function is disabled and the warning appears. The frequency converter is still operational but without the brake function. Remove power to the frequency converter and replace the brake resistor (see *2-15 Brake Check*).

WARNING/ALARM 26, Brake resistor power limit

The power transmitted to the brake resistor is calculated as a mean value over the last 120 s of run time. The calculation is based on the intermediate circuit voltage and the brake resistance value set in *2-16 AC brake Max. Current*. The warning is active when the dissipated braking is higher than 90% of the brake resistance power. If [2] *Trip* is selected in *2-13 Brake Power Monitoring*, the frequency converter will trip when the dissipated braking power reaches 100%.

⚠ WARNING

There is a risk of substantial power being transmitted to the brake resistor if the brake transistor is short-circuited.

WARNING/ALARM 27, Brake chopper fault

The brake transistor is monitored during operation and if a short circuit occurs, the brake function is disabled and a warning is issued. The frequency converter is still operational but, since the brake transistor has short-circuited, substantial power is transmitted to the brake resistor, even if it is inactive.

Remove power to the frequency converter and remove the brake resistor.

This alarm/warning could also occur should the brake resistor overheat. Terminals 104 and 106 are available as brake resistors Klixon ininputs, see section *Brake Resistor Temperature Switch* in the Design Guide.

WARNING/ALARM 28, Brake check failed

The brake resistor is not connected or not working. Check *2-15 Brake Check*.

ALARM 29, Heatsink temp

The maximum temperature of the heatsink has been exceeded. The temperature fault will not reset until the temperature falls below a defined heatsink temperature. The trip and reset points are different based on the frequency converter power size.

Troubleshooting

Check for the following conditions.

- Ambient temperature too high.
- Motor cable too long.
- Incorrect airflow clearance above and below the frequency converter

- Blocked airflow around the frequency converter.
- Damaged heatsink fan.
- Dirty heatsink.

For the D, E, and F Frame sizes, this alarm is based on the temperature measured by the heatsink sensor mounted inside the IGBT modules. For the F Frame sizes, this alarm can also be caused by the thermal sensor in the Rectifier module.

Troubleshooting

- Check fan resistance.
- Check soft charge fuses.
- IGBT thermal sensor.

ALARM 30, Motor phase U missing

Motor phase U between the frequency converter and the motor is missing.

Remove power from the frequency converter and check motor phase U.

ALARM 31, Motor phase V missing

Motor phase V between the frequency converter and the motor is missing.

Remove power from the frequency converter and check motor phase V.

ALARM 32, Motor phase W missing

Motor phase W between the frequency converter and the motor is missing.

Remove power from the frequency converter and check motor phase W.

ALARM 33, Inrush fault

Too many power-ups have occurred within a short time period. Let the unit cool to operating temperature.

WARNING/ALARM 34, Fieldbus communication fault

The fieldbus on the communication option card is not working.

WARNING/ALARM 36, Mains failure

This warning/alarm is only active if the supply voltage to the frequency converter is lost and *14-10 Mains Failure* is NOT set to [0] *No Function*. Check the fuses to the frequency converter and mains power supply to the unit.

ALARM 38, Internal fault

When an internal fault occurs, a code number defined in the table below is displayed.

Troubleshooting

- Cycle power
- Check that the option is properly installed
- Check for loose or missing wiring

It may be necessary to contact your Danfoss supplier or service department. Note the code number for further troubleshooting directions.

No.	Text
0	Serial port cannot be initialised. Contact your Danfoss supplier or Danfoss Service Department.
256-258	Power EEPROM data is defective or too old
512	Control board EEPROM data is defective or too old.
513	Communication time out reading EEPROM data
514	Communication time out reading EEPROM data
515	Application oriented control cannot recognize the EEPROM data.
516	Cannot write to the EEPROM because a write command is on progress.
517	Write command is under time out
518	Failure in the EEPROM
519	Missing or invalid barcode data in EEPROM
783	Parameter value outside of min/max limits
1024-1279	A centelegram that has to be sent couldn't be sent.
1281	Digital signal processor flash timeout
1282	Power micro software version mismatch
1283	Power EEPROM data version mismatch
1284	Cannot read digital signal processor software version
1299	Option SW in slot A is too old
1300	Option SW in slot B is too old
1301	Option SW in slot C0 is too old
1302	Option SW in slot C1 is too old
1315	Option SW in slot A is not supported (not allowed)
1316	Option SW in slot B is not supported (not allowed)
1317	Option SW in slot C0 is not supported (not allowed)
1318	Option SW in slot C1 is not supported (not allowed)
1379	Option A did not respond when calculating platform version
1380	Option B did not respond when calculating platform version
1381	Option C0 did not respond when calculating platform version.
1382	Option C1 did not respond when calculating platform version.
1536	An exception in the application oriented control is registered. Debug information written in LCP
1792	DSP watchdog is active. Debugging of power part data, motor oriented control data not transferred correctly.
2049	Power data restarted
2064-2072	H081x: option in slot x has restarted
2080-2088	H082x: option in slot x has issued a powerup-wait
2096-2104	H983x: option in slot x has issued a legal powerup-wait
2304	Could not read any data from power EEPROM
2305	Missing SW version from power unit
2314	Missing power unit data from power unit
2315	Missing SW version from power unit
2316	Missint lo_statepage from power unit

No.	Text
2324	Power card configuration is determined to be incorrect at power up
2325	A power card has stopped communicating while main power is applied
2326	Power card configuration is determined to be incorrect after the delay for power cards to register.
2327	Too many power card locations have been registered as present.
2330	Power size information between the power cards does not match.
2561	No communication from DSP to ATACD
2562	No communication from ATACD to DSP (state running)
2816	Stack overflow control board module
2817	Scheduler slow tasks
2818	Fast tasks
2819	Parameter thread
2820	LCP stack overflow
2821	Serial port overflow
2822	USB port overflow
2836	cflistMempool too small
3072-5122	Parameter value is outside its limits
5123	Option in slot A: Hardware incompatible with control board hardware
5124	Option in slot B: Hardware incompatible with Control board hardware.
5125	Option in slot C0: Hardware incompatible with control board hardware.
5126	Option in slot C1: Hardware incompatible with control board hardware.
5376-6231	Out of memory

Table 8.3
ALARM 39, Heatsink sensor

No feedback from the heatsink temperature sensor.

The signal from the IGBT thermal sensor is not available on the power card. The problem could be on the power card, on the gate drive card, or the ribbon cable between the power card and gate drive card.

WARNING 40, Overload of digital output terminal 27

Check the load connected to terminal 27 or remove short-circuit connection. Check *5-00 Digital I/O Mode* and *5-01 Terminal 27 Mode*.

WARNING 41, Overload of digital output terminal 29

Check the load connected to terminal 29 or remove short-circuit connection. Check *5-00 Digital I/O Mode* and *5-02 Terminal 29 Mode*.

WARNING 42, Overload of digital output on X30/6 or overload of digital output on X30/7

For X30/6, check the load connected to X30/6 or remove the short-circuit connection. Check *5-32 Term X30/6 Digi Out (MCB 101)*.

For X30/7, check the load connected to X30/7 or remove the short-circuit connection. Check *5-33 Term X30/7 Digi Out (MCB 101)*.

ALARM 46, Power card supply

The supply on the power card is out of range.

There are three power supplies generated by the switch mode power supply (SMPS) on the power card: 24 V, 5 V, ±18 V. When powered with 24 V DC with the MCB 107 option, only the 24 V and 5 V supplies are monitored. When powered with three phase mains voltage, all three supplies are monitored.

WARNING 47, 24 V supply low

The 24 V DC is measured on the control card. The external 24 V DC backup power supply may be overloaded, otherwise contact the Danfoss supplier.

WARNING 48, 1.8 V supply low

The 1.8 V DC supply used on the control card is outside of allowable limits. The power supply is measured on the control card. Check for a defective control card. If an option card is present, check for an overvoltage condition.

WARNING 49, Speed limit

When the speed is not within the specified range in *4-11 Motor Speed Low Limit [RPM]* and *4-13 Motor Speed High Limit [RPM]*, the frequency converter shows a warning. When the speed is below the specified limit in *1-86 Trip Speed Low [RPM]* (except when starting or stopping) the frequency converter will trip.

ALARM 50, AMA calibration failed

Contact your Danfoss supplier or Danfoss Service Department.

ALARM 51, AMA check U_{nom} and I_{nom}

The settings for motor voltage, motor current and motor power are wrong. Check the settings in parameters 1-20 to 1-25.

ALARM 52, AMA low I_{nom}

The motor current is too low. Check the settings.

ALARM 53, AMA motor too big

The motor is too big for the AMA to operate.

ALARM 54, AMA motor too small

The motor is too small for the AMA to operate.

ALARM 55, AMA Parameter out of range

The parameter values of the motor are outside of the acceptable range. AMA will not run.

ALARM 56, AMA interrupted by user

The user has interrupted the AMA.

ALARM 57, AMA internal fault

Try to restart AMA again a number of times, until the AMA is carried out. Note that repeated runs may heat the motor to a level where the resistance R_s and R_r are increased. In most cases, however, this is not critical.

ALARM 58, AMA internal fault

Contact your Danfoss supplier.

WARNING 59, Current limit

The current is higher than the value in *4-18 Current Limit*. Ensure that Motor data in parameters 1-20 to 1-25 are set correctly. Possibly increase the current limit. Be sure that the system can operate safely at a higher limit.

WARNING 60, External interlock

External interlock has been activated. To resume normal operation, apply 24 V DC to the terminal programmed for external interlock and reset the frequency converter (via serial communication, digital I/O, or by pressing [Reset]).

WARNING/ALARM 61, Tracking error

An error between calculated motor speed and speed measurement from feedback device. The function Warning/Alarm/Disable is set in *4-30 Motor Feedback Loss Function*. Accepted error setting in *4-31 Motor Feedback Speed Error* and the allowed time the error occur setting in *4-32 Motor Feedback Loss Timeout*. During a commissioning procedure the function may be effective.

WARNING 62, Output frequency at maximum limit

The output frequency is higher than the value set in *4-19 Max Output Frequency*.

ALARM 64, Voltage Limit

The load and speed combination demands a motor voltage higher than the actual DC link voltage.

WARNING/ALARM 65, Control card over temperature

The cutout temperature of the control card is 80 °C.

Troubleshooting

- Check that the ambient operating temperature is within limits
- Check for clogged filters
- Check fan operation
- Check the control card

WARNING 66, Heatsink temperature low

The frequency converter is too cold to operate. This warning is based on the temperature sensor in the IGBT module.

Increase the ambient temperature of the unit. Also, a trickle amount of current can be supplied to the frequency converter whenever the motor is stopped by setting *2-00 DC Hold/Preheat Current* at 5% and *1-80 Function at Stop*

Troubleshooting

The heatsink temperature measured as 0° C could indicate that the temperature sensor is defective, causing the fan speed to increase to the maximum. If the sensor wire between the IGBT and the gate drive card is disconnected, this warning would result. Also, check the IGBT thermal sensor.

ALARM 67, Option module configuration has changed

One or more options have either been added or removed since the last power-down. Check that the configuration change is intentional and reset the unit.

ALARM 68, Safe Stop activated

Safe stop has been activated. To resume normal operation, apply 24 V DC to terminal 37, then send a reset signal (via Bus, Digital I/O, or by pressing the reset key).

ALARM 70, Illegal frequency converter configuration

The control card and power card are incompatible. Contact your supplier with the type code of the unit from the nameplate and the part numbers of the cards to check compatibility.

ALARM 71, PTC 1 safe stop

Safe Stop has been activated from the MCB 112 PTC Thermistor Card (motor too warm). Normal operation can be resumed when the MCB 112 applies 24 V DC to T-37 again (when the motor temperature reaches an acceptable level) and when the Digital Input from the MCB 112 is deactivated. When that happens, a reset signal must be sent (via Bus, Digital I/O, or by pressing [Reset]). Note that if automatic restart is enabled, the motor may start when the fault is cleared.

ALARM 72, Dangerous failure

Safe Stop with Trip Lock. Unexpected signal levels on safe stop and digital input from the MCB 112 PTC thermistor card.

WARNING 73, Safe stop auto restart

Safe stopped. With automatic restart enabled, the motor may start when the fault is cleared.

WARNING 76, Power unit setup

The required number of power units does not match the detected number of active power units.

Troubleshooting:

When replacing an F-frame module, this will occur if the power specific data in the module power card does not match the rest of the frequency converter. Confirm the spare part and its power card are the correct part number.

WARNING 77, Reduced power mode

This warning indicates that the frequency converter is operating in reduced power mode (i.e. less than the allowed number of inverter sections). This warning will be generated on power cycle when the frequency converter is set to run with fewer inverters and will remain on.

ALARM 79, Illegal power section configuration

The scaling card is the incorrect part number or not installed. Also MK102 connector on the power card could not be installed.

ALARM 80, Drive initialised to default value

Parameter settings are initialised to default settings after a manual reset. Reset the unit to clear the alarm.

ALARM 81, CSIV corrupt

CSIV file has syntax errors.

ALARM 82, CSIV parameter error

CSIV failed to init a parameter.

ALARM 85, Dang fail PB:

Profibus/Profisafe Error.

WARNING/ALARM 104, Mixing fan fault

The fan monitor checks that the fan is spinning at power-up or whenever the mixing fan is turned on. If the fan is not operating, then the fault is annunciated. The mixing-fan fault can be configured as a warning or an alarm trip by *14-53 Fan Monitor*.

Troubleshooting Cycle power to the frequency converter to determine if the warning/alarm returns.

WARNING 250, New spare part

A component in the frequency converter has been replaced. Reset the frequency converter for normal operation.

WARNING 251, New typecode

The power card or other components have been replaced and the typecode changed. Reset to remove the warning and resume normal operation.

9 Basic Troubleshooting

9.1 Start Up and Operation

Symptom	Possible cause	Test	Solution
Display dark/No function	Missing input power.	See <i>Table 3.1</i> .	Check the input power source.
	Missing or open fuses or circuit breaker tripped.	See open fuses and tripped circuit breaker in this table for possible causes.	Follow the recommendations provided.
	No power to the LCP.	Check the LCP cable for proper connection or damage.	Replace the faulty LCP or connection cable.
	Shortcut on control voltage (terminal 12 or 50) or at control terminals.	Check the 24 V control voltage supply for terminals 12/13 to 20-39 or 10 V supply for terminals 50 to 55.	Wire the terminals properly.
	Wrong LCP (LCP from VLT® 2800 or 5000/6000/8000/ FCD or FCM).		Use only LCP 101 (P/N 130B1124) or LCP 102 (P/N 130B1107).
	Wrong contrast setting.		Press [Status] + [▲]/[▼] to adjust the contrast.
	Display (LCP) is defective.	Test using a different LCP.	Replace the faulty LCP or connection cable.
	Internal voltage supply fault or SMPS is defective.		Contact supplier.
Intermittent display	Overloaded power supply (SMPS) due to improper control wiring or a fault within the frequency converter.	To rule out a problem in the control wiring, disconnect all control wiring by removing the terminal blocks.	If the display stays lit, then the problem is in the control wiring. Check the wiring for shorts or incorrect connections. If the display continues to cut out, follow the procedure for display dark.
Motor not running	Service switch open or missing motor connection.	Check if the motor is connected and the connection is not interrupted (by a service switch or other device).	Connect the motor and check the service switch.
	No mains power with 24 V DC option card.	If the display is functioning but no output, check that mains power is applied to the frequency converter.	Apply mains power to run the unit.
	LCP Stop.	Check if [Off] has been pressed.	Press [Auto On] or [Hand On] (depending on operation mode) to run the motor.
	Missing start signal (Standby).	Check <i>5-10 Terminal 18 Digital Input</i> for correct setting for terminal 18 (use default setting).	Apply a valid start signal to start the motor.
	Motor coast signal active (Coasting).	Check <i>5-12 Coast inv.</i> for correct setting for terminal 27 (use default setting)..	Apply 24 V on terminal 27 or program this terminal to <i>No operation</i> .
	Wrong reference signal source.	Check reference signal: Local, remote or bus reference? Preset reference active? Terminal connection correct? Scaling of terminals correct? Reference signal available?	Program correct settings. Check <i>3-13 Reference Site</i> . Set preset reference active in parameter group <i>3-1* References</i> . Check for correct wiring. Check scaling of terminals. Check reference signal.

Symptom	Possible cause	Test	Solution
Motor running in wrong direction	Motor rotation limit.	Check that <i>4-10 Motor Speed Direction</i> is programmed correctly.	Program correct settings.
	Active reversing signal.	Check if a reversing command is programmed for the terminal in parameter group <i>5-1* Digital inputs..</i>	Deactivate reversing signal.
	Wrong motor phase connection.		See <i>2.4.5 Motor Rotation Check</i> in this manual.
Motor is not reaching maximum speed	Frequency limits set wrong.	Check output limits in <i>4-13 Motor Speed High Limit [RPM]</i> , <i>4-14 Motor Speed High Limit [Hz]</i> and <i>4-19 Max Output Frequency</i> .	Program correct limits.
	Reference input signal not scaled correctly.	Check reference input signal scaling in <i>6-0* Analog I/O Mode</i> and parameter group <i>3-1* References</i> . Reference limits in parameter group <i>3-0* Reference Limit</i> .	Program correct settings.
Motor speed unstable	Possible incorrect parameter settings.	Check the settings of all motor parameters, including all motor compensation settings. For closed loop operation, check PID settings.	Check settings in parameter group <i>1-6* Analog I/O mode</i> . For closed loop operation, check settings in parameter group <i>20-0* Feedback..</i>
Motor runs rough	Possible over-magnetization.	Check for incorrect motor settings in all motor parameters.	Check motor settings in parameter groups <i>1-2* Motor Data</i> , <i>1-3* Adv Motor Data</i> , and <i>1-5* Load Indep. Setting</i> .
Motor will not brake	Possible incorrect settings in the brake parameters. Possible too short ramp down times.	Check brake parameters. Check ramp time settings.	Check parameter group <i>2-0* DC Brake</i> and <i>3-0* Reference Limits</i> .
Open power fuses or circuit breaker trip	Phase to phase short.	Motor or panel has a short phase to phase. Check motor and panel phase for shorts.	Eliminate any shorts detected.
	Motor overload.	Motor is overloaded for the application.	Perform startup test and verify motor current is within specifications. If motor current is exceeding nameplate full load current, motor may run only with reduced load. Review the specifications for the application.
	Loose connections.	Perform pre-startup check for loose connections.	Tighten loose connections.
Mains current imbalance greater than 3%	Problem with mains power (See <i>Alarm 4 Mains phase loss</i> description).	Rotate input power leads into the frequency converter one position: A to B, B to C, C to A.	If imbalanced leg follows the wire, it is a power problem. Check mains power supply.
	Problem with the frequency converter.	Rotate input power leads into the frequency converter one position: A to B, B to C, C to A.	If imbalance leg stays on same input terminal, it is a problem with the unit. Contact the supplier.
Motor current imbalance greater than 3%	Problem with motor or motor wiring.	Rotate output motor leads one position: U to V, V to W, W to U.	If imbalanced leg follows the wire, the problem is in the motor or motor wiring. Check motor and motor wiring.
	Problem with the frequency converters.	Rotate output motor leads one position: U to V, V to W, W to U.	If imbalance leg stays on same output terminal, it is a problem with the unit. Contact the supplier.

Symptom	Possible cause	Test	Solution
Acoustic noise or vibration (e.g. a fan blade is making noise or vibrations at certain frequencies)	Resonances, e.g. in the motor/fan system.	Bypass critical frequencies by using parameters in parameter group 4-6* <i>Speed Bypass</i> .	Check if noise and/or vibration have been reduced to an acceptable limit.
		Turn off over-modulation in 14-03 <i>Overmodulation</i> .	
		Change switching pattern and frequency in parameter group 14-0* <i>Inverter Switching</i> .	
		Increase Resonance Dampening in 1-64 <i>Resonance Dampening</i> .	

Table 9.1

10 Specifications

10.1 Power-dependent Specifications

FC 302	N90K		N110		N132		N160		N200		N250	
High/Normal Load*	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
Typical Shaft output at 400 V [kW]	90	110	110	132	132	160	160	200	200	250	250	315
Typical Shaft output at 460 V [Hp]	125	150	150	200	200	250	250	300	300	350	350	450
Typical Shaft output at 500 V [kW]	110	132	132	160	160	200	200	250	250	315	315	355
Enclosure IP21	D1h		D1h		D1h		D2h		D2h		D2h	
Enclosure IP54	D1h		D1h		D1h		D2h		D2h		D2h	
Enclosure IP20	D3h		D3h		D3h		D4h		D4h		D4h	
Output current												
Continuous (at 400 V) [A]	177	212	212	260	260	315	315	395	395	480	480	588
Intermittent (60 s overload) (at 400 V) [A]	266	233	318	286	390	347	473	435	593	528	720	647
Continuous (at 460/500 V) [A]	160	190	190	240	240	302	302	361	361	443	443	535
Intermittent (60 s overload) (at 460/500 V) [kVA]	240	209	285	264	360	332	453	397	542	487	665	588
Continuous kVA (at 400 V) [kVA]	123	147	147	180	180	218	218	274	274	333	333	407
Continuous kVA (at 460 V) [kVA]	127	151	151	191	191	241	241	288	288	353	353	426
Continuous kVA (at 500 V) [kVA]	139	165	165	208	208	262	262	313	313	384	384	463
Max. Input current												
Continuous (at 400 V) [A]	171	204	204	251	251	304	304	381	381	463	463	567
Continuous (at 460/500 V) [A]	154	183	183	231	231	291	291	348	348	427	427	516
Max. cable size: mains, motor, brake and load share mm (AWG)	2x95 (2x3/0)						2x185 (2x350 mcm)					
Max. external mains fuses [A]	315		350		400		550		630		800	
Estimated power loss at 400 V [W]	2031	2559	2289	2954	2923	3770	3093	4116	4039	5137	5005	6674
Estimated power loss at 460 V [W]	1828	2261	2051	2724	2089	3628	2872	3569	3575	4566	4458	5714
Weight, enclosure IP21, IP54 kg (lbs.)	62 (135)						125 (275)					
Weight, enclosure IP20 kg (lbs.)	62 (135)						125 (275)					
Efficiency	0.98											
Output frequency	0-590 Hz											
Heatsink overtemperature trip	110 °C											
Control card ambient trip	75 °C											
*High overload=150% current for 60 s, Normal overload=110% current for 60 s.												

Table 10.1 Mains Supply 3x380-500 V AC

FC 302	N55K		N75K		N90K		N110		N132		N160	
High/Normal Load*	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO	HO	NO
Typical Shaft output at 550 V [kW]	45	55	55	75	75	90	90	110	110	132	132	160
Typical Shaft output at 575 V [hp]	60	75	75	100	100	125	125	150	150	200	200	250
Typical Shaft output at 690 V [kW]	55	75	75	90	90	110	110	132	132	160	160	200
Enclosure IP21	D1h		D1h		D1h		D1h		D1h		D2h	
Enclosure IP54	D1h		D1h		D1h		D1h		D1h		D2h	
Enclosure IP20	D3h		D3h		D3h		D3h		D3h		D4h	
Output current												
Continuous (at 550 V) [A]	76	90	90	113	113	137	137	162	162	201	201	253
Intermittent (60 s overload) (at 550 V) [A]	122	99	135	124	170	151	206	178	243	221	302	278
Continuous (at 575/690 V) [A]	73	86	86	108	108	131	131	155	155	192	192	242
Intermittent (60 s overload) (at 575/690 V) [kVA]	117	95	129	119	162	144	197	171	233	211	288	266
Continuous kVA (at 550 V) [kVA]	72	86	86	108	108	131	131	154	154	191	191	241
Continuous kVA (at 575 V) [kVA]	73	86	86	108	108	130	130	154	154	191	191	241
Continuous kVA (at 690 V) [kVA]	87	103	103	129	129	157	157	185	185	229	229	289
Max. Input current												
Continuous (at 550 V) [A]	77	89	89	110	110	130	130	158	158	198	198	245
Continuous (at 575 V) [A]	74	85	85	106	106	124	124	151	151	189	189	234
Continuous (at 690 V)	77	87	87	109	109	128	128	155	155	197	197	240
Max. cable size: mains, motor, brake and load share mm (AWG)	2x95 (2x3/0)										2x185 (2x350)	
Max. external mains fuses [A]	160		315		315		315		315		550	
Estimated power loss at 575 V [W]	1098	1162	1162	1428	1430	1740	1742	2101	2080	2649	2361	3074
Estimated power loss at 690 V [W]	1057	1204	1205	1477	1480	1798	1800	2167	2159	2740	2446	3175
Weight, enclosure IP21, IP54 kg (lbs.)	62 (135)										125 (275)	
Weight, enclosure IP20 kg (lbs.)	125 (275)											
Efficiency	0.98											
Output frequency	0–590 Hz											
Heatsink overtemperature trip	110 °C											
Control card ambient trip	75 °C											
*High overload=150% current for 60 s, Normal overload=110% current for 60 s.												

Table 10.2 Mains Supply 3x525-690 V AC

FC 302 High/Normal Load*	N200		N250		N315	
	HO	NO	HO	NO	HO	NO
Typical Shaft output at 550 V [kW]	160	200	200	250	250	315
Typical Shaft output at 575 V [hp]	250	300	300	350	350	400
Typical Shaft output at 690 V [kW]	200	250	250	315	315	400
Enclosure IP21	D2h		D2h		D2h	
Enclosure IP54	D2h		D2h		D2h	
Enclosure IP20	D4h		D4h		D4h	
Output current						
Continuous (at 550 V) [A]	253	303	303	360	360	418
Intermittent (60 s overload) (at 550 V)[A]	380	333	455	396	540	460
Continuous (at 575/690 V) [A]	242	290	290	344	344	400
Intermittent (60 s overload) (at 575/690 V) [kVA]	363	319	435	378	516	440
Continuous kVA (at 550 V) [kVA]	241	289	289	343	343	398
Continuous kVA (at 575 V) [kVA]	241	289	289	343	343	398
Continuous kVA (at 690 V) [kVA]	289	347	347	411	411	478
Max. Input current						
Continuous (at 550 V) [A]	245	299	299	355	355	408
Continuous (at 575 V) [A]	234	286	286	339	339	390
Continuous (at 690 V)	240	296	296	352	352	400
Max. cable size: mains, motor, brake and load share mm (AWG)	2x185 (2x350)					
Max. external mains fuses [A]	550					
Estimated power loss at 575 V [W]	3012	3723	3642	4465	4146	5028
Estimated power loss at 690 V [W]	3123	3851	3771	4614	4258	5155
Weight, enclosure IP21, IP54 kg (lbs.)	125 (275)					
Weight, enclosure IP20 kg (lbs.)	125 (275)					
Efficiency	0.98					
Output frequency	0–590 Hz					
Heatsink overtemperature trip	110 °C					
Control card ambient trip	75 °C					
*High overload=150% current for 60 s, Normal overload=110% current for 60 s.						

Table 10.3 Mains Supply 3x525-690 V AC

The typical power loss is at nominal load conditions and expected to be within $\pm 15\%$ (tolerance relates to variety in voltage and cable conditions).

The losses are based on the default switching frequency. The losses increase significantly at higher switching frequencies.

The options cabinet adds weight to the frequency converter. The maximum weights of the D5h–D8h frames is shown in *Table 10.4*

Frame Size	Description	Maximum Weight [kg (lbs.)]
D5h	D1h ratings+disconnect and/or brake chopper	166 (255)
D6h	D1h ratings+contactor and/or circuit breaker	129 (285)
D7h	D2h ratings+disconnect and/or brake chopper	200 (440)
D8h	D2h ratings+contactor and/or circuit breaker	225 (496)

Table 10.4 D5h–D8h Weights

10.2 General Technical Data

Mains supply (L1, L2, L3)

Supply voltage	380-500 V ±10%, 525-690 V ±10%
----------------	--------------------------------

Mains voltage low / mains voltage drop-out:

During low mains voltage or a mains drop-out, the frequency converters continues until the intermediate circuit voltage drops below the minimum stop level, which corresponds typically to 15% below the frequency converter's lowest rated supply voltage. Power-up and full torque cannot be expected at mains voltage lower than 10% below the frequency converter's lowest rated supply voltage.

Supply frequency	50/60 Hz ±5%
Max. imbalance temporary between mains phases	3.0% of rated supply voltage
True Power Factor (λ)	≥0.9 nominal at rated load
Displacement Power Factor (cos Φ) near unity	(>0.98)
Switching on input supply L1, L2, L3 (power ups)	maximum one time/2 minutes
Environment according to EN60664-1	overvoltage category III/pollution degree 2

The unit is suitable for use on a circuit capable of delivering not more than 100,000 RMS symmetrical Amperes, 480/600 V

Motor Output (U, V, W)

Output voltage	0-100% of supply voltage
Output frequency	0-590 Hz*
Switching on output	Unlimited
Ramp times	0.01-3600 s

* *Dependent on voltage and power*

Torque Characteristics

Starting torque (Constant torque)	maximum 160% for 60 s *
Starting torque	maximum 180% up to 0.5 s*
Overload torque (Constant torque)	maximum 160% for 60 s*

Percentage relates to the frequency converter's nominal torque

Cable lengths and cross sections

Max. motor cable length, screened/armoured	150 m
Max. motor cable length, unscreened/unarmoured	300 m
Max. cross section to motor, mains, load sharing and brake *	
Maximum cross section to control terminals, rigid wire	1.5 mm ² /16 AWG (2x0.75 mm ²)
Maximum cross section to control terminals, flexible cable	1 mm ² /18 AWG
Maximum cross section to control terminals, cable with enclosed core	0.5 mm ² /20 AWG
Minimum cross section to control terminals	0.25 mm ²

Digital inputs

Programmable digital inputs	4 (6)
Terminal number	18, 19, 27 ¹⁾ , 29 ¹⁾ , 32, 33
Logic	PNP or NPN
Voltage level	0-24 V DC
Voltage level, logic '0' PNP	<5 V DC
Voltage level, logic '1' PNP	>10 V DC
Voltage level, logic '0' NPN	>19 V DC
Voltage level, logic '1' NPN	<14 V DC
Maximum voltage on input	28 V DC
Input resistance, R _i	approx. 4 k Ω

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

1) Terminals 27 and 29 can also be programmed as output.

Analog inputs

Number of analog inputs	2
Terminal number	53, 54
Modes	Voltage or current
Mode select	Switches A53 and A54

Voltage mode	Switch A53/A54=(U)
Voltage level	-10 V to +10 V (scaleable)
Input resistance, R_i	approx. 10 k Ω
Max. voltage	± 20 V
Current mode	Switch A53/A54=(I)
Current level	0/4 to 20 mA (scaleable)
Input resistance, R_i	approx. 200 Ω
Max. current	30 mA
Resolution for analog inputs	10 bit (+ sign)
Accuracy of analog inputs	Max. error 0.5% of full scale
Bandwidth	100 Hz

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

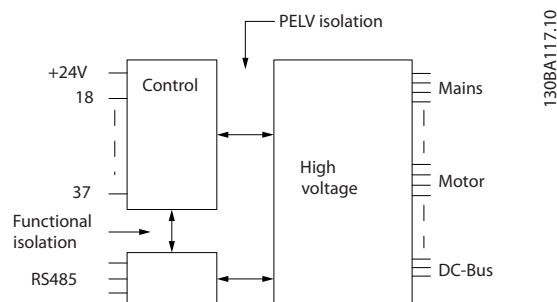


Illustration 10.1

Pulse inputs	
Programmable pulse inputs	2
Terminal number pulse	29, 33
Max. frequency at terminal, 29, 33	110 kHz (Push-pull driven)
Max. frequency at terminal, 29, 33	5 kHz (open collector)
Min. frequency at terminal 29, 33	4 Hz
Voltage level	see 10.2.1 Digital Inputs
Maximum voltage on input	28 V DC
Input resistance, R_i	approx. 4 k Ω
Pulse input accuracy (0.1-1 kHz)	Max. error: 0.1% of full scale
Analog output	
Number of programmable analog outputs	1
Terminal number	42
Current range at analog output	0/4-20 mA
Max. resistor load to common at analog output	500 Ω
Accuracy on analog output	Max. error: 0.8% of full scale
Resolution on analog output	8 bit

The analog output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control card, RS-485 serial communication

Terminal number	68 (P,TX+, RX+), 69 (N,TX-, RX-)
Terminal number 61	Common for terminals 68 and 69

The RS-485 serial communication circuit is functionally seated from other central circuits and galvanically isolated from the supply voltage (PELV).

Digital output

Programmable digital/pulse outputs	2
Terminal number	27, 29 ¹⁾
Voltage level at digital/frequency output	0-24 V
Max. output current (sink or source)	40 mA
Max. load at frequency output	1 k Ω
Max. capacitive load at frequency output	10 nF

Minimum output frequency at frequency output	0 Hz
Maximum output frequency at frequency output	32 kHz
Accuracy of frequency output	Max. error: 0.1 % of full scale
Resolution of frequency outputs	12 bit

1) Terminal 27 and 29 can also be programmed as input.

The digital output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control card, 24 V DC output

Terminal number	12, 13
Max. load	200 mA

The 24 V DC supply is galvanically isolated from the supply voltage (PELV), but has the same potential as the analog and digital inputs and outputs.

Relay outputs

Programmable relay outputs	2
----------------------------	---

Relay 01 Terminal number 1-3 (break), 1-2 (make)

Max. terminal load (AC-1) ¹⁾ on 1-2 (NO) (Resistive load) ²⁾³⁾	400 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ on 1-2 (NO) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Max. terminal load (DC-1) ¹⁾ on 1-2 (NO) (Resistive load)	80 V DC, 2 A
Max. terminal load (DC-13) ¹⁾ on 1-2 (NO) (Inductive load)	24 V DC, 0.1 A
Max. terminal load (AC-1) ¹⁾ on 1-3 (NC) (Resistive load)	240 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ on 1-3 (NC) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Max. terminal load (DC-1) ¹⁾ on 1-3 (NC) (Resistive load)	50 V DC, 2 A
Max. terminal load (DC-13) ¹⁾ on 1-3 (NC) (Inductive load)	24 V DC, 0.1 A
Min. terminal load on 1-3 (NC), 1-2 (NO)	24 V DC 10 mA, 24 V AC 2 mA

Environment according to EN 60664-1 overvoltage category III/pollution degree 2

Relay 02 Terminal number 4-6 (break), 4-5 (make)

Max. terminal load (AC-1) ¹⁾ on 4-5 (NO) (Resistive load) ²⁾³⁾	400 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ on 4-5 (NO) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Max. terminal load (DC-1) ¹⁾ on 4-5 (NO) (Resistive load)	80 V DC, 2 A
Max. terminal load (DC-13) ¹⁾ on 4-5 (NO) (Inductive load)	24 V DC, 0.1 A
Max. terminal load (AC-1) ¹⁾ on 4-6 (NC) (Resistive load)	240 V AC, 2 A
Max. terminal load (AC-15) ¹⁾ on 4-6 (NC) (Inductive load @ cosφ 0.4)	240 V AC, 0.2 A
Max. terminal load (DC-1) ¹⁾ on 4-6 (NC) (Resistive load)	50 V DC, 2 A
Max. terminal load (DC-13) ¹⁾ on 4-6 (NC) (Inductive load)	24 V DC, 0.1 A
Min. terminal load on 4-6 (NC), 4-5 (NO)	24 V DC 10 mA, 24 V AC 2 mA

Environment according to EN 60664-1 overvoltage category III/pollution degree 2

1) IEC 60947 t 4 and 5

The relay contacts are galvanically isolated from the rest of the circuit by reinforced isolation (PELV).

2) Overvoltage Category II

3) UL applications 300V AC 2 A

Control card, 10 V DC output

Terminal number	50
Output voltage	10.5 V ±0.5 V
Max. load	25 mA

The 10 V DC supply is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control characteristics

Resolution of output frequency at 0-1000 Hz	±0.003 Hz
System response time (terminals 18, 19, 27, 29, 32, 33)	≤2 ms
Speed control range (open loop)	1:100 of synchronous speed
Speed accuracy (open loop)	30-4000 rpm: Maximum error of ±8 rpm

All control characteristics are based on a 4-pole asynchronous motor

Surroundings

Enclosure type D1h/D2h	IP21/Type 1, IP54/Type12
Enclosure type D3h/D4h	IP20/Chassis
Vibration test all enclosure types	1.0 g
Relative humidity	5%-95% (IEC 721-3-3; Class 3K3 (non-condensing) during operation
Aggressive environment (IEC 60068-2-43) H ₂ S test	class Kd
Test method according to IEC 60068-2-43 H ₂ S (10 days)	
Ambient temperature (at SFAVM switching mode)	
- with derating	max. 55° C ¹⁾
- with full output power of typical EFF2 motors (up to 90% output current)	max. 50° C ¹⁾
- at full continuous FC output current	max. 45° C ¹⁾

¹⁾ For more information on derating see the Design Guide, section on Special Conditions.

Minimum ambient temperature during full-scale operation	0° C
Minimum ambient temperature at reduced performance	- 10° C
Temperature during storage/transport	-25 to +65/70° C
Maximum altitude above sea level without derating	1000 m
Maximum altitude above sea level with derating	3000 m

¹⁾ For more information on derating see the Design Guide, section on Special Conditions.

EMC standards, Emission	EN 61800-3, EN 61000-6-3/4, EN 55011, IEC 61800-3 EN 61800-3, EN 61000-6-1/2,
EMC standards, Immunity	EN 61000-4-2, EN 61000-4-3, EN 61000-4-4, EN 61000-4-5, EN 61000-4-6

See the Design Guide, section on Special Conditions.

Control card performance

Scan interval	5 ms
---------------	------

Control card, USB Serial Communication:

USB standard	1.1 (Full speed)
USB plug	USB type B "device" plug



Connection to PC is carried out via a standard host/device USB cable.

The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

The USB connection is **not** galvanically isolated from protection earth (ground). Use only isolated laptop/PC as connection to the USB connector on frequency converter or an isolated USB cable/converter.

Protection and Features

- Electronic thermal motor protection against overload.
- Temperature monitoring of the heatsink ensures that the frequency converter trips if the temperature reaches 95° C ±5° C. An overload temperature cannot be reset until the temperature of the heatsink is below 70° C ±5° C (Guideline - these temperatures may vary for different power sizes, enclosures etc.). The frequency converter has an auto derating function to avoid its heatsink reaching 95° C.
- The frequency converter is protected against short-circuits on motor terminals U, V, W.
- If a mains phase is missing, the frequency converter trips or issues a warning (depending on the load).
- Monitoring of the intermediate circuit voltage ensures that the frequency converter trips if the intermediate circuit voltage is too low or too high.
- The frequency converter is protected against earth (ground) faults on motor terminals U, V, W.

10.3 Fuse Tables

10.3.1 Protection

Branch Circuit Protection:

In order to protect the installation against electrical and fire hazard, all branch circuits in an installation, switch gear, machines etc., must be short-circuited and over-current protected according to national/international regulations.

Short-circuit Protection:

The frequency converter must be protected against short-circuit to avoid electrical or fire hazard. Danfoss recommends using the fuses mentioned below to protect service personnel and equipment in case of an internal failure in the frequency converter. The frequency converter provides full short-circuit protection in case of a short-circuit on the motor output.

Over-current Protection:

Provide overload protection to avoid fire hazard due to overheating of the cables in the installation. The frequency

converter is equipped with an internal over-current protection that can be used for upstream overload protection (UL-applications excluded). See 4-18 *Current Limit*. Moreover, fuses or circuit breakers can be used to provide the over-current protection in the installation. Over-current protection must always be carried out according to national regulations.

10.3.2 Fuse Selection

Danfoss recommends using the following fuses which will ensure compliance with EN50178. In case of malfunction, not following the recommendation may result in unnecessary damage to the frequency converter.

The fuses below are suitable for use on a circuit capable of delivering 100,000 Arms (symmetrical).

N90K-N250	380-500 V	type aR
N55K-N315	525-690 V	type aR

Table 10.5 Recommended Fuses

VLT Model	Bussman PN	Littelfuse PN	Littelfuse PN	Bussmann PN	Siba PN	Ferraz-Shawmut PN	Ferraz-Shawmut PN (Europe)	Ferraz-Shawmut PN (North America)
N90K	170M2619	LA50QS300-4	L50S-300	FWH-300A	20 610 31.315	A50QS300-4	6,9URD31D08A0315	A070URD31KI0315
N110	170M2620	LA50QS350-4	L50S-350	FWH-350A	20 610 31.350	A50QS350-4	6,9URD31D08A0350	A070URD31KI0350
N132	170M2621	LA50QS400-4	L50S-400	FWH-400A	20 610 31.400	A50QS400-4	6,9URD31D08A0400	A070URD31KI0400
N160	170M4015	LA50QS500-4	L50S-500	FWH-500A	20 610 31.550	A50QS500-4	6,9URD31D08A0550	A070URD31KI0550
N200	170M4016	LA50QS600-4	L50S-600	FWH-600A	20 610 31.630	A50QS600-4	6,9URD31D08A0630	A070URD31KI0630
N250	170M4017	LA50QS800-4	L50S-800	FWH-800A	20 610 31.800	A50QS800-4	6,9URD32D08A0800	A070URD31KI0800

Table 10.6 Fuse Options for 380-500 V Frequency Converters

VLT® Model	Bussmann PN	Siba PN	Ferraz-Shawmut European PN	Ferraz-Shawmut North American PN
N55k T7	170M2616	20 610 31.160	6,9URD30D08A0160	A070URD30KI0160
N75k T7	170M2619	20 610 31.315	6,9URD31D08A0315	A070URD31KI0315
N90k T7	170M2619	20 610 31.315	6,9URD31D08A0315	A070URD31KI0315
N110 T7	170M2619	20 610 31.315	6,9URD31D08A0315	A070URD31KI0315
N132 T7	170M2619	20 610 31.315	6,9URD31D08A0315	A070URD31KI0315
N160 T7	170M4015	20 620 31.550	6,9URD32D08A0550	A070URD32KI0550
N200 T7	170M4015	20 620 31.550	6,9URD32D08A0550	A070URD32KI0550
N250 T7	170M4015	20 620 31.550	6,9URD32D08A0550	A070URD32KI0550
N315 T7	170M4015	20 620 31.550	6,9URD32D08A0550	A070URD32KI0550

Table 10.7 Fuse Options for 525-690 V Frequency Converters

For UL compliance, for units supplied without a contactor-only option, the Bussmann 170M series fuses must be used. See *Table 10.9* for SCCR ratings and UL fuse criteria if a contactor-only option is supplied with the frequency converter.

10.3.3 Short Circuit Current Rating (SCCR)

If the frequency converter is not supplied with a mains disconnect, contactor or circuit breaker, the Short Circuit Current Rating (SCCR) of the frequency converters is 100,000 amps at all voltages (380–690 V).

If the frequency converter is supplied with a mains disconnect, the SCCR of the frequency converter is 100,000 amps at all voltages (380–690 V).

If the frequency converter is supplied with a circuit breaker, the SCCR depends on the voltage, see *Table 10.8*:

	415 V	480 V	600 V	690 V
D6h frame	120,000 A	100,000 A	65,000 A	70,000 A
D8h frame	100,000 A	100,000 A	42,000 A	30,000 A

Table 10.8 Frequency Converter Supplied with a Circuit Breaker

If the frequency converter is supplied with a contactor-only option and is externally fused according to *Table 10.9*, the SCCR of the frequency converter is as follows:

	415 V IEC ¹⁾	480 V UL ²⁾	600 V UL ²⁾	690 V IEC ¹⁾
D6h frame	100,000 A	100,000 A	100,000 A	100,000 A
D8h frame (not including the N250T5)	100,000 A	100,000 A	100,000 A	100,000 A
D8h frame (N250T5 only)	100,000 A	Consult factory	Not applicable	

Table 10.9 Frequency Converter Supplied with a Contactor

¹⁾ With a Bussmann type LPJ-SP or Gould Shawmut type AJT fuse. 450 A max fuse size for D6h and 900 A max fuse size for D8h.

²⁾ Must use Class J or L branch fuses for UL approval. 450 A max fuse size for D6h and 600 A max fuse size for D8h.

10.3.4 Connection Tightening Torques

When tightening all electrical connections it is very important to tighten with the correct torque. Too low or too high torque results in a bad electrical connection. Use a torque wrench to ensure correct torque. Always use a torque wrench to tighten the bolts.

Frame Size	Terminal	Torque [Nm (in-lbs)]	Bolt size
D1h/D3h	Mains Motor Load sharing Regen	19-40 (168-354)	M10
	Earth (Ground) Brake	8.5-20.5 (75-181)	M8
D2h/D4h	Mains Motor Regen Load sharing	19-40 (168-354)	M10
	Earth (ground)		
	Brake	8.5-20.5 (75-181)	M8

Table 10.10 Torque for Terminals

Index

A

AC

Input..... 6, 26
Mains..... 6
Mains Connection..... 26
Waveform..... 6

Accel Time..... 34

Airflow..... 9

Alarm Log..... 37

Alarm/Warning Code List..... 61

AMA

AMA..... 62, 65
With T27 Connected..... 49
Without T27 Connected..... 49

Analog

Input..... 61
Inputs..... 28, 74
Output..... 28, 75
Signal..... 61

Application Examples..... 49

Auto

Auto..... 38, 54
Mode..... 37
On..... 54, 38, 54

Automatic Motor Adaptation..... 54

Auto-reset..... 36

B

Basic Operational Programming..... 33

Braking..... 63, 54

C

Cable Lengths And Cross Sections..... 74

Circuit Breakers..... 32

Closed Loop..... 29

Communication Option..... 64

Conduit..... 12, 32

Control

Cables..... 27
Card..... 61
Card Performance..... 77
Card, 10 V DC Output..... 76
Card, 24 V DC Output..... 76
Card, RS-485 Serial Communication..... 75
Card, USB Serial Communication..... 77
Characteristics..... 76
Signal..... 40, 54
System..... 6
Terminal Functions..... 29
Terminal Types..... 28
Terminals..... 33, 38, 54, 42, 29
Wiring..... 10, 12, 13, 32
Wiring Connection..... 27

Cooling

Cooling..... 8
Clearance..... 32

Copying Parameter Settings..... 38

Current

Limit..... 34
Rating..... 8, 62

D

DC

Current..... 6, 54
Link..... 61

Derating..... 77, 8

Digital

Input..... 28, 54, 62
Inputs..... 54, 42, 74
Output..... 75

Disconnect Switch..... 33

Downloading Data From The LCP..... 39

Duct Cooling..... 8

E

Earth

Connections..... 13, 32
Loops..... 27
Wire..... 32

Earthing

Earthing..... 32
(Grounding)..... 32
(Grounding) IP20 Enclosures..... 14
(Grounding) IP21/54 Enclosures..... 14
(Grounding) Of Screened Control Cables..... 27

'Earthing (grounding) Hazard..... 13

Electrical

Installation..... 10
Noise..... 13

EMC..... 28, 32, 77

Equalizing Cable..... 27

External		Lifting	9
Commands.....	6, 54	Local	
Controllers.....	6	Control.....	36, 38, 54
Interlock.....	43	Control Panel.....	36
Voltage.....	40	Mode.....	34
		Operation.....	36
F		Start.....	34
Fault		Local-control Test	34
Log.....	37		
Messages.....	61	M	
Feedback	29, 32, 65, 54	Main Menu	40, 37
Floating Delta	26	Mains	
Frame Sizes And Power Ratings	7	Mains.....	12
Frequency Converter Block Diagram	6	Supply (L1, L2, L3).....	74
Full Load Current	8	Voltage.....	37, 38, 54
Functional Testing	5, 34	Manual Initialisation	39
Fuses	32, 64, 68	Mechanical Installation	8
Fusing	12, 32	Menu	
		Keys.....	36, 37
G		Structure.....	38, 43
Ground		Motor	
Connections.....	13, 32	Cable.....	26
Loops.....	27	Cables.....	12, 14
Wire.....	13, 32	Connection.....	14
Grounded Delta	26	Current.....	6, 65, 37
Grounding	13, 32	Data.....	33, 34, 62, 66
		Frequency.....	37
H		Output (U, V, W).....	74
Hand		Power.....	12, 65, 37
Hand.....	34, 38, 54	Protection.....	12, 77
On.....	54, 34, 38	Rotation.....	37
Harmonics	6	Rotation Check.....	26
		Speeds.....	33
I		Status.....	6
IEC 61800-3	77	Wiring.....	10, 12, 32
Induced Voltage	12	Mounting	32
Initialisation	39	Multiple Frequency Converters	12, 14
Input		N	
Current.....	26	Navigation Keys	33, 40, 54, 36, 38
Power.....	10, 13, 32, 57, 68, 6	Noise Isolation	10, 32
Signal.....	40	O	
Signals.....	29	Open Loop	29, 40, 76
Terminal.....	61	Operation Keys	38
Terminals.....	29	Optional Equipment	33, 6
Voltage.....	33, 57	Output	
Installation		Current.....	54, 62, 75
Installation.....	5, 12, 32, 33	Signal.....	43
Site.....	8	Overcurrent	54
Isolated Mains	26	Overload Protection	8, 12
		Overvoltage	34, 54
L			
Leakage Current (>3.5 MA)	13		

Index	VLT® Automation Drive D-Frame Operating Instructions
P	
Parameter Settings.....	38, 42
PELV.....	27, 49, 76
Phase Loss.....	61
Power	
Power.....	13
Connections.....	13
Factor.....	6, 14, 32
Pre-Installation Check List.....	8
Product Overview.....	4
Programming.....	5, 34, 37, 43, 48, 61, 33, 36, 38
Protection	
Protection.....	78
And Features.....	77
Pulse Inputs.....	75
Q	
Quick	
Menu.....	37, 40, 37
Set-up.....	33
R	
Ramp-down Time.....	34
Ramp-up Time.....	34
Reference.....	1, 49, 54, 37, 40
Relay Outputs.....	28, 76
Remote	
Commands.....	6
Programming.....	48
Reference.....	54
Reset.....	36, 39, 54, 57, 61, 66, 77, 38
Residual Current Devices (RCDs).....	13
Restoring Default Settings.....	39
RFI Filter.....	26
RMS Current.....	6
RS-485.....	30
Run	
Command.....	35
Permissive.....	54
S	
Shielded	
Cable.....	10, 32
Wire.....	12
Screened Control Cables.....	27
Serial Communication.....	6, 27, 28, 38, 54, 57, 30
Set Up.....	37
Setpoint.....	54
Set-up.....	37
Short Circuit	
63	
Smart Application Set-up (SAS)	
33	
Specifications	
5	
Speed Reference	
29, 35, 40, 54, 49	
Start Up	
5, 39, 40, 68	
Status	
Messages.....	54
Mode.....	54
Stop Command	
54	
Supply Voltage	
27, 28, 64, 75	
Surroundings	
77	
Switching Frequency	
54	
System Feedback	
6	
T	
Temperature Limits	
32	
Terminal	
53.....	40, 29, 40
54.....	29
Locations D1h.....	15
Locations D2h.....	16
Programming.....	29
Programming Examples.....	42
Thermistor	
Thermistor.....	27, 62, 49
Control Wiring.....	27
Torque	
Characteristics.....	74
For Terminals.....	79
Limit.....	34
Transient Protection	
6	
Trip Function	
12	
Troubleshooting	
5, 68	
U	
Uploading Data To The LCP	
39	
Using Screened Control Cables	
27	
V	
Voltage Imbalance	
61	
W	
Wire Type And Ratings	
13	
Wiring To Control Terminals	
29	



www.danfoss.com/drives

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.



