



Programming Guide

VLT® AutomationDrive

Contents

| | |
|--|-----------|
| 1 Introduction | 3 |
| 1.1.1 Approvals | 3 |
| 1.1.2 Symbols | 3 |
| 1.1.3 Abbreviations | 3 |
| 1.1.4 Definitions | 4 |
| 1.1.5 Electrical Wiring - Control Cables | 8 |
| 2 How to Programme | 11 |
| 2.1 The Graphical and Numerical Local Control Panels | 11 |
| 2.1.1 How to Programme on the Graphical LCP | 11 |
| 2.1.2 The LCD-Display | 12 |
| 2.1.4 Display Mode | 14 |
| 2.1.5 Display Mode - Selection of Read-Outs | 14 |
| 2.1.6 Parameter Set-Up | 15 |
| 2.1.7 Quick Menu Key Functions | 16 |
| 2.1.9 Main Menu Mode | 18 |
| 2.1.10 Parameter Selection | 18 |
| 2.1.14 Infinitely Variable Change of Numeric Data Value | 19 |
| 2.1.16 Read-out and Programming of Indexed Parameters | 19 |
| 2.1.17 How to Programme on the Numerical Local Control Panel | 19 |
| 2.1.18 Local Control Keys | 21 |
| 2.1.19 Initialisation to Default Settings | 21 |
| 3 Parameter Descriptions | 22 |
| 3.2 Parameters: 0-** Operation and Display | 23 |
| 3.3 Parameters: 1-** Load and Motor | 33 |
| 3.3.10.1 PTC Thermistor Connection | 45 |
| 3.3.10.2 KTY Sensor Connection | 45 |
| 3.3.10.3 ETR | 46 |
| 3.3.10.4 ATEX ETR | 46 |
| 3.3.10.5 Klixon | 46 |
| 3.4 Parameters: 2-** Brakes | 49 |
| 3.5 Parameters: 3-** Reference/Ramps | 54 |
| 3.6 Parameters: 4-** Limits/Warnings | 64 |
| 3.7 Parameters: 5-** Digital In/Out | 69 |
| 3.8 Parameters: 6-** Analog In/Out | 87 |
| 3.9 Parameters: 7-** Controllers | 96 |
| 3.10 Parameters: 8-** Communications and Options | 101 |
| 3.11 Parameters: 9-** Profibus | 109 |
| 3.12 Parameters: 10-** DeviceNet CAN Fieldbus | 116 |


| | |
|---|------------|
| 3.13 Parameters: 12-** Ethernet | 120 |
| 3.14 Parameters: 13-** Smart Logic Control | 124 |
| 3.15 Parameters: 14-** Special Functions | 140 |
| 3.16 Parameters: 15-** Drive Information | 148 |
| 3.17 Parameters: 16-** Data Read-outs | 152 |
| 3.18 Parameters: 17-** Motor Feedb. Option | 158 |
| 3.19 Parameters: 18-** Data Readouts 2 | 160 |
| 3.20 Parameters: 30-** Special Features | 161 |
| 3.21 Parameters: 35-** Sensor Input Option | 164 |
| 4 Parameter Lists | 167 |
| 4.1.2 Active/Inactive Parameters in Different Drive Control Modes | 168 |
| 5 Troubleshooting | 204 |
| 5.1.1 Warnings/Alarm Messages | 204 |
| Index | 216 |

1 Introduction

Programming Guide
Software version: 6.4x

This Programming Guide can be used for all FC 300 frequency converters with software version 6.4x.
The software version number can be seen from *15-43 Software Version*.

1.1.1 Approvals

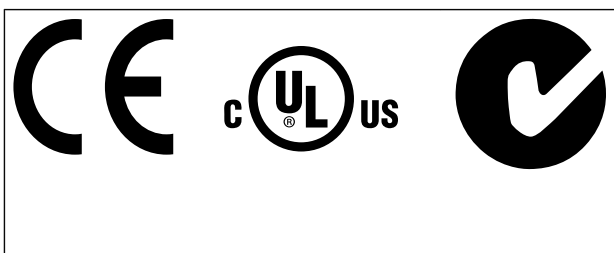

1.1.2 Symbols

Symbols used in this guide.

NOTE

Indicates something to be noted by the reader.



Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or equipment damage.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

* Indicates default setting

1.1.3 Abbreviations

| | |
|--|---------------|
| Alternating current | AC |
| American wire gauge | AWG |
| Ampere/AMP | A |
| Automatic Motor Adaptation | AMA |
| Current limit | I_{LIM} |
| Degrees Celsius | °C |
| Direct current | DC |
| Drive Dependent | D-TYPE |
| Electro Magnetic Compatibility | EMC |
| Electronic Thermal Relay | ETR |
| frequency converter | FC |
| Gram | g |
| Hertz | Hz |
| Horsepower | hp |
| Kilohertz | kHz |
| Local Control Panel | LCP |
| Meter | m |
| Millihenry Inductance | mH |
| Milliamper | mA |
| Millisecond | ms |
| Minute | min |
| Motion Control Tool | MCT |
| Nanofarad | nF |
| Newton Meters | Nm |
| Nominal motor current | $I_{M,N}$ |
| Nominal motor frequency | $f_{M,N}$ |
| Nominal motor power | $P_{M,N}$ |
| Nominal motor voltage | $U_{M,N}$ |
| Parameter | par. |
| Protective Extra Low Voltage | PELV |
| Printed Circuit Board | PCB |
| Rated Inverter Output Current | I_{INV} |
| Revolutions Per Minute | RPM |
| Regenerative terminals | Regen |
| Second | sec. |
| Synchronous Motor Speed | n_s |
| Torque limit | T_{LIM} |
| Volts | V |
| The maximum output current | $I_{VLT,MAX}$ |
| The rated output current supplied by the frequency converter | $I_{VLT,N}$ |

1.1.4 Definitions

Frequency converter:

I_{VLT,MAX}

Maximum output current.

I_{VLT,N}

Rated output current supplied by the frequency converter.

U_{VLT,MAX}

Maximum output voltage.

Input:

Control command

Start and stop the connected motor by means of LCP and digital inputs.

Functions are divided into two groups.

Functions in group 1 have higher priority than functions in group 2.

| | |
|---------|--|
| Group 1 | Reset, Coasting stop, Reset and Coasting stop, Quick-stop, DC braking, Stop and the [OFF] key. |
| Group 2 | Start, Pulse start, Reversing, Start reversing, Jog and Freeze output |

Motor:

Motor Running

Torque generated on output shaft and speed from zero rpm to max. speed on motor.

f_{JOG}

Motor frequency when the jog function is activated (via digital terminals).

f_M

Motor frequency.

f_{MAX}

Maximum motor frequency.

f_{MIN}

Minimum motor frequency.

f_{M,N}

Rated motor frequency (nameplate data).

I_M

Motor current (actual).

I_{M,N}

Rated motor current (nameplate data).

n_{M,N}

Rated motor speed (nameplate data).

n_s

Synchronous motor speed

$$n_s = \frac{2 \times \text{par. 1} - 23 \times 60 \text{ s}}{\text{par. 1} - 39}$$

P_{M,N}

Rated motor power (nameplate data in kW or HP).

T_{M,N}

Rated torque (motor).


U_M

Instantaneous motor voltage.

U_{M,N}

Rated motor voltage (nameplate data).

Break-away torque

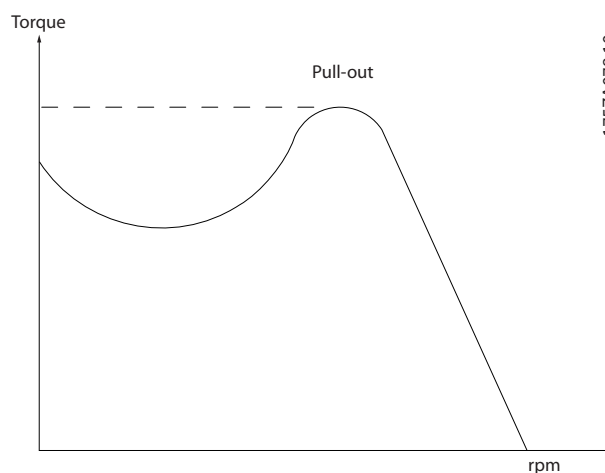

175ZA078.10

η_{VLT}

The efficiency of the frequency converter is defined as the ratio between the power output and the power input.

Start-disable command

A stop command belonging to the group 1 control commands - see this group.

Stop command

See Control commands.

References:

Analog Reference

A signal transmitted to the analog inputs 53 or 54, can be voltage or current.

Binary Reference

A signal transmitted to the serial communication port.

Preset Reference

A defined preset reference to be set from -100% to +100% of the reference range. Selection of eight preset references via the digital terminals.

Pulse Reference

A pulse frequency signal transmitted to the digital inputs (terminal 29 or 33).

Ref_{MAX}

Determines the relationship between the reference input at 100% full scale value (typically 10V, 20mA) and the resulting reference. The maximum reference value set in 3-03 Maximum Reference.

Ref_{MIN}

Determines the relationship between the reference input at 0% value (typically 0V, 0mA, 4mA) and the resulting reference. The minimum reference value set in *3-02 Minimum Reference*.

Miscellaneous:Analog Inputs

The analog inputs are used for controlling various functions of the frequency converter.

There are two types of analog inputs:

Current input, 0-20mA and 4-20mA

Voltage input, 0-10V DC (FC 301)

Voltage input, -10 - +10V DC (FC 302).

Analog Outputs

The analog outputs can supply a signal of 0-20mA, 4-20mA.

Automatic Motor Adaptation, AMA

AMA algorithm determines the electrical parameters for the connected motor at standstill.

Brake Resistor

The brake resistor is a module capable of absorbing the brake power generated in regenerative braking. This regenerative braking power increases the intermediate circuit voltage and a brake chopper ensures that the power is transmitted to the brake resistor.

CT Characteristics

Constant torque characteristics used for all applications such as conveyor belts, displacement pumps and cranes.

Digital Inputs

The digital inputs can be used for controlling various functions of the frequency converter.

Digital Outputs

The frequency converter features two Solid State outputs that can supply a 24V DC (max. 40mA) signal.

DSP

Digital Signal Processor.

ETR

Electronic Thermal Relay is a thermal load calculation based on present load and time. Its purpose is to estimate the motor temperature.

Hiperface®

Hiperface® is a registered trademark by Stegmann.

Initialising

If initialising is carried out (*14-22 Operation Mode*), the frequency converter returns to the default setting.

Intermittent Duty Cycle

An intermittent duty rating refers to a sequence of duty cycles. Each cycle consists of an on-load and an off-load period. The operation can be either periodic duty or non-periodic duty.

LCP

The Local Control Panel makes up a complete interface for control and programming of the frequency converter. The control panel is detachable and can be installed up to 3

metres from the frequency converter, i.e. in a front panel by means of the installation kit option.

lsb

Least significant bit.

msb

Most significant bit.

MCM

Short for Mille Circular Mil, an American measuring unit for cable cross-section. 1 MCM = 0.5067mm².

On-line/Off-line Parameters

Changes to on-line parameters are activated immediately after the data value is changed. Changes to off-line parameters are not activated until you enter [OK] on the LCP.

Process PID

The PID control maintains the desired speed, pressure, temperature, etc. by adjusting the output frequency to match the varying load.

PCD

Process Control Data

Power Cycle

Switch off the mains until display (LCP) is dark – then turn power on again

Pulse Input/Incremental Encoder

An external, digital pulse transmitter used for feeding back information on motor speed. The encoder is used in applications where great accuracy in speed control is required.

RCD

Residual Current Device.

Set-up

You can save parameter settings in four Set-ups. Change between the four parameter Set-ups and edit one Set-up, while another Set-up is active.

SFAVM

Switching pattern called Stator Flux oriented Asynchronous Vector Modulation (*14-00 Switching Pattern*).

Slip Compensation

The frequency converter compensates for the motor slip by giving the frequency a supplement that follows the measured motor load keeping the motor speed almost constant.

Smart Logic Control (SLC)

The SLC is a sequence of user defined actions executed when the associated user defined events are evaluated as true by the Smart Logic Controller. (Par. group 13-** *Smart Logic Control (SLC)*).

STW

Status Word

FC Standard Bus

Includes RS-485 bus with FC protocol or MC protocol. See *8-30 Protocol*.

Thermistor:

A temperature-dependent resistor placed where the temperature is to be monitored (frequency converter or motor).

Trip

A state entered in fault situations, e.g. if the frequency converter is subject to an over-temperature or when the frequency converter is protecting the motor, process or mechanism. Restart is prevented until the cause of the fault has disappeared and the trip state is cancelled by activating reset or, in some cases, by being programmed to reset automatically. Trip may not be used for personal safety.

Trip Locked

A state entered in fault situations when the frequency converter is protecting itself and requiring physical intervention, e.g. if the frequency converter is subject to a short circuit on the output. A locked trip can only be cancelled by cutting off mains, removing the cause of the fault, and reconnecting the frequency converter. Restart is prevented until the trip state is cancelled by activating reset or, in some cases, by being programmed to reset automatically. Trip may not be used for personal safety.

VT Characteristics

Variable torque characteristics used for pumps and fans.

VVC^{plus}

If compared with standard voltage/frequency ratio control, Voltage Vector Control (VVC^{plus}) improves the dynamics and the stability, both when the speed reference is changed and in relation to the load torque.

60° AVM

Switching pattern called 60° Asynchronous Vector Modulation (14-00 Switching Pattern).

Power Factor

The power factor is the relation between I_1 and I_{RMS} .

$$\text{Power factor} = \frac{\sqrt{3} \times U \times I_1 \cos\varphi}{\sqrt{3} \times U \times I_{RMS}}$$

The power factor for 3-phase control:

$$= \frac{I_1 \times \cos\varphi_1}{I_{RMS}} = \frac{I_1}{I_{RMS}} \text{ since } \cos\varphi_1 = 1$$

The power factor indicates to which extent the frequency converter imposes a load on the mains supply.

The lower the power factor, the higher the I_{RMS} for the same kW performance.

$$I_{RMS} = \sqrt{I_1^2 + I_5^2 + I_7^2 + \dots + I_n^2}$$

In addition, a high power factor indicates that the different harmonic currents are low.

The frequency converters' built-in DC coils produce a high power factor, which minimizes the imposed load on the mains supply.

WARNING

The voltage of the frequency converter is dangerous whenever connected to mains. Incorrect installation of the motor, frequency converter or fieldbus may cause death, serious personal injury or damage to the equipment. Consequently, the instructions in this manual, as well as national and local rules and safety regulations, must be complied with.

Safety Regulations

1. The mains supply to the frequency converter must be disconnected whenever repair work is to be carried out. Check that the mains supply has been disconnected and that the necessary time has elapsed before removing motor and mains supply plugs.
2. The [OFF] button on the control panel of the frequency converter does not disconnect the mains supply and consequently it must not be used as a safety switch.
3. The equipment must be properly earthed, the user must be protected against supply voltage and the motor must be protected against overload in accordance with applicable national and local regulations.
4. The earth leakage current exceeds 3.5mA.
5. Protection against motor overload is not included in the factory setting. If this function is desired, set *1-90 Motor Thermal Protection* to data value ETR trip 1 [4] or data value ETR warning 1 [3].
6. Do not remove the plugs for the motor and mains supply while the frequency converter is connected to mains. Check that the mains supply has been disconnected and that the necessary time has elapsed before removing motor and mains plugs.
7. Please note that the frequency converter has more voltage sources than L1, L2 and L3, when load sharing (linking of DC intermediate circuit) or external 24V DC are installed. Check that all voltage sources have been disconnected and that the necessary time has elapsed before commencing repair work.

Warning against unintended start

1. The motor can be brought to a stop by means of digital commands, bus commands, references or a local stop, while the frequency converter is connected to mains. If personal safety considerations (e.g. risk of personal injury caused by contact with moving machine parts following an unintentional start) make it necessary to ensure that no unintended start occurs, these stop functions are not sufficient. In such cases the mains supply must

be disconnected or the Safe Stop function must be activated.

2. The motor may start while setting the parameters. If this means that personal safety may be compromised (e.g. personal injury caused by contact with moving machine parts), motor starting must be prevented, for instance by use of the Safe Stop function or secure disconnection of the motor connection.
3. A motor that has been stopped with the mains supply connected, may start if faults occur in the electronics of the frequency converter, through temporary overload or if a fault in the power supply grid or motor connection is remedied. If unintended start must be prevented for personal safety reasons (e.g. risk of injury caused by contact with moving machine parts), the normal stop functions of the frequency converter are not sufficient. In such cases the mains supply must be disconnected or the Safe Stop function must be activated.

NOTE

When using the Safe Stop function, always follow the instructions in the section *Safe Stop* of the VLT AutomationDrive Design Guide.

4. Control signals from, or internally within, the frequency converter may in rare cases be activated in error, be delayed or fail to occur entirely. When used in situations where safety is critical, e.g. when controlling the electromagnetic brake function of a hoist application, these control signals must not be relied on exclusively.

⚠ WARNING

High Voltage

Touching the electrical parts may be fatal - even after the equipment has been disconnected from mains. Also make sure that other voltage inputs have been disconnected, such as external 24V DC, load sharing (linkage of DC intermediate circuit), as well as the motor connection for kinetic back up.

Systems where frequency converters are installed must, if necessary, be equipped with additional monitoring and protective devices according to the valid safety regulations, e.g. law on mechanical tools, regulations for the prevention of accidents etc. Modifications on the frequency converters by means of the operating software are allowed.

NOTE

Hazardous situations shall be identified by the machine builder/ integrator who is responsible for taking necessary preventive means into consideration. Additional monitoring and protective devices may be included, always according to valid national safety regulations, e.g. law on mechanical tools, regulations for the prevention of accidents.

NOTE

Crane, Lifts and Hoists:

The controlling of external brakes must always have a redundant system. The frequency converter can in no circumstances be the primary safety circuit. Comply with relevant standards, e.g.

Hoists and cranes: IEC 60204-32

Lifts: EN 81

Protection Mode

Once a hardware limit on motor current or dc-link voltage is exceeded the frequency converter will enter "Protection mode". "Protection mode" means a change of the PWM modulation strategy and a low switching frequency to minimize losses. This continues 10 sec after the last fault and increases the reliability and the robustness of the frequency converter while re-establishing full control of the motor. In hoist applications "Protection mode" is not usable because the frequency converter will usually not be able to leave this mode again and therefore it will extend the time before activating the brake - which is not recommendable. The "Protection mode" can be disabled by setting *14-26 Trip Delay at Inverter Fault* to zero which means that the frequency converter will trip immediately if one of the hardware limits is exceeded.

NOTE

It is recommended to disable protection mode in hoisting applications (*14-26 Trip Delay at Inverter Fault* = 0)

1.1.5 Electrical Wiring - Control Cables

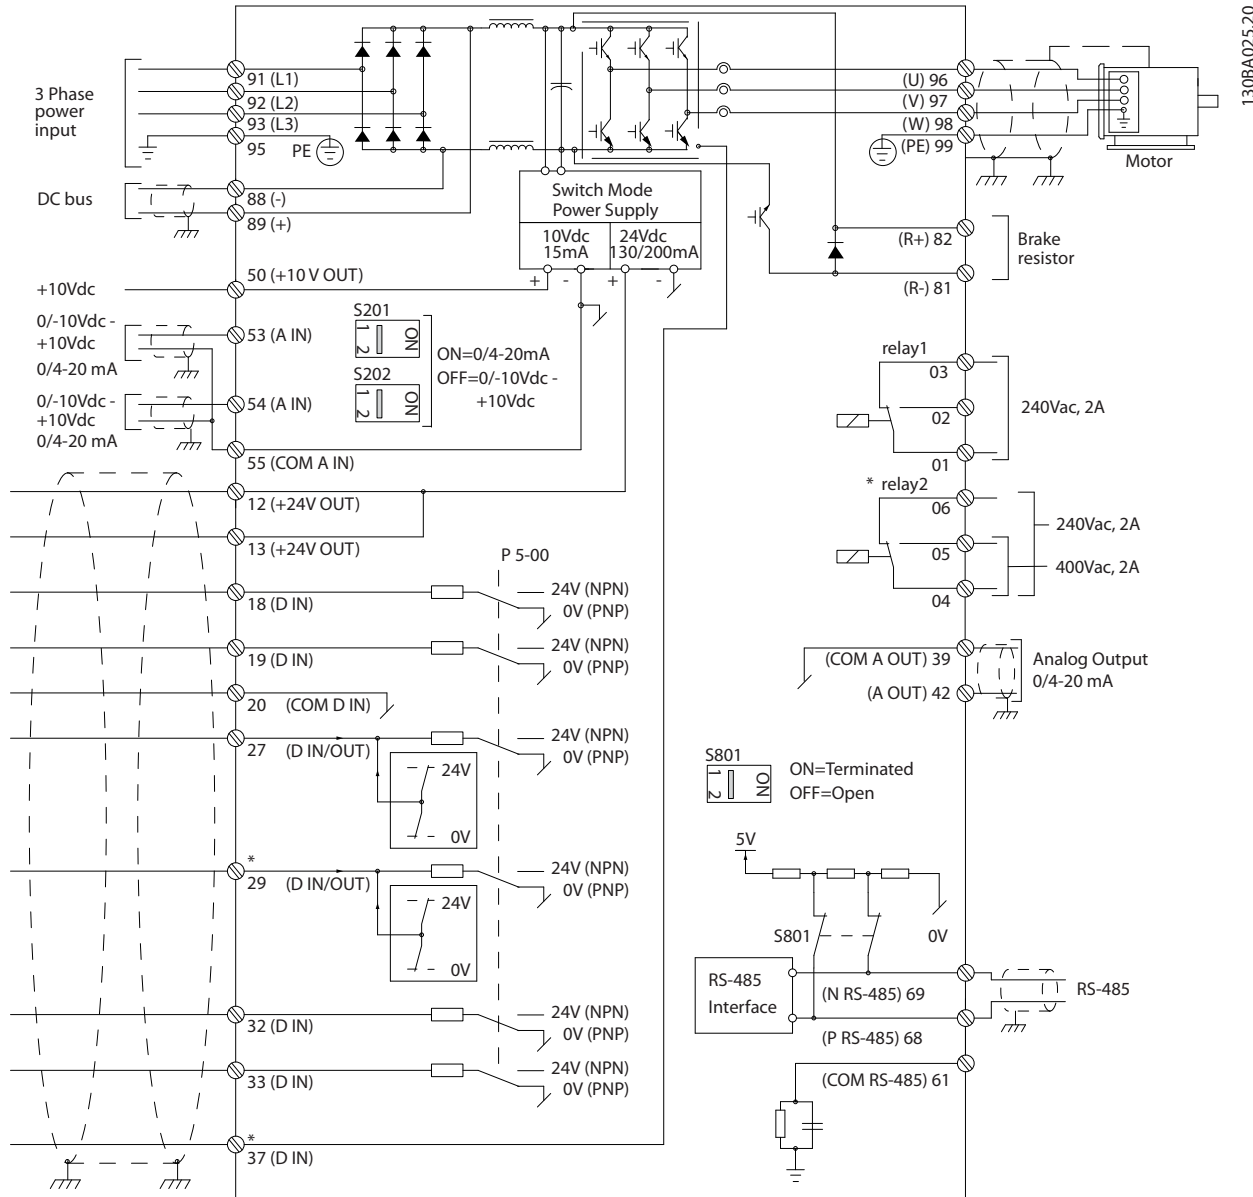


Illustration 1.1 Diagram showing all electrical terminals without options.

Terminal 37 is the input to be used for Safe Stop. For instructions on Safe Stop installation please refer to the section *Safe Stop Installation of the Design Guide*.

* Terminal 37 is not included in FC 301 (Except FC 301 A1, which includes Safe Stop).




Terminal 29 and Relay 2, are not included in FC 301.

Very long control cables and analog signals may in rare cases and depending on installation result in 50/60 Hz earth loops due to noise from mains supply cables.

If this occurs, it may be necessary to break the screen or insert a 100 nF capacitor between screen and chassis.


The digital and analog inputs and outputs must be connected separately to the common inputs (terminal 20, 55, 39) of the frequency converter to avoid ground currents from both groups to affect other groups. For example, switching on the digital input may disturb the analog input signal.

Input polarity of control terminals

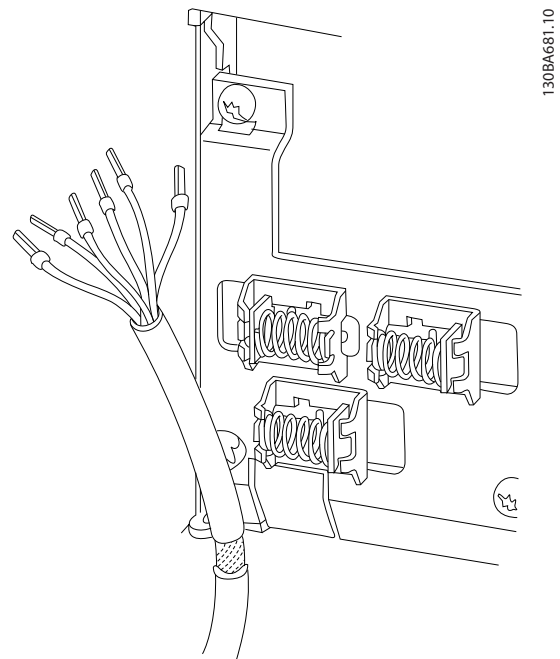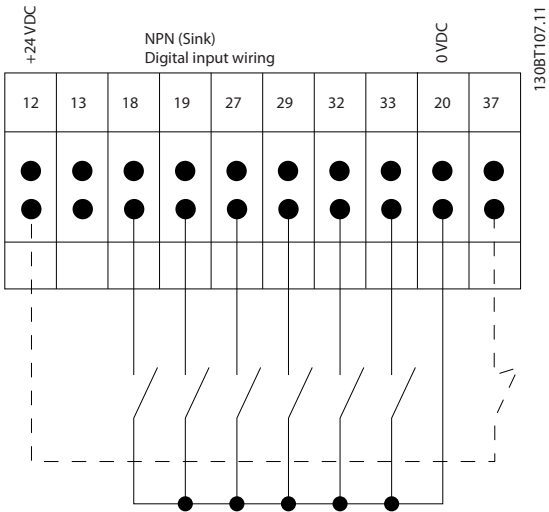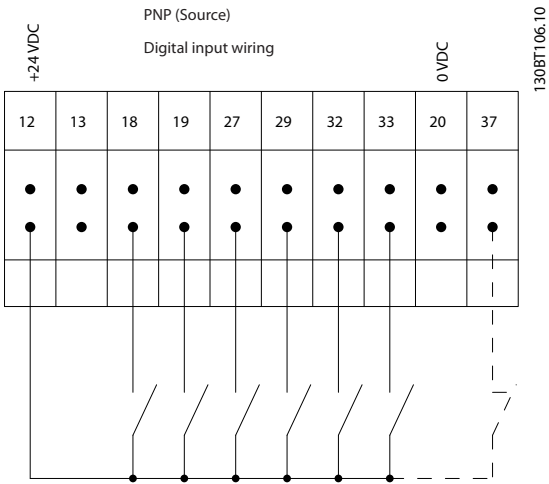

1.1.6 Start/Stop


Terminal 18 = 5-10 Terminal 18 Digital Input [8] Start
 Terminal 27 = 5-12 Terminal 27 Digital Input [0] No operation
 (Default coast inverse)
 Terminal 37 = Safe stop (where available)

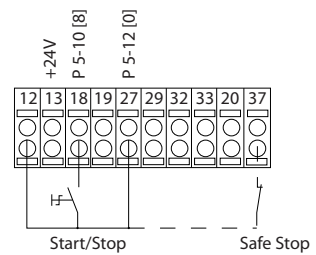

NOTE


Control cables must be screened/armoured.

See section entitled *Earthing of Screened/Armoured Control Cables* for the correct termination of control cables.


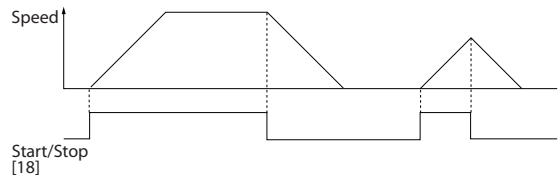


1.1.7 Pulse Start/Stop

Terminal 18 = 5-10 Terminal 18 Digital Input Latched start, [9]
 Terminal 27 = 5-12 Terminal 27 Digital Input Stop inverse, [6]
 Terminal 37 = Safe stop (where available)

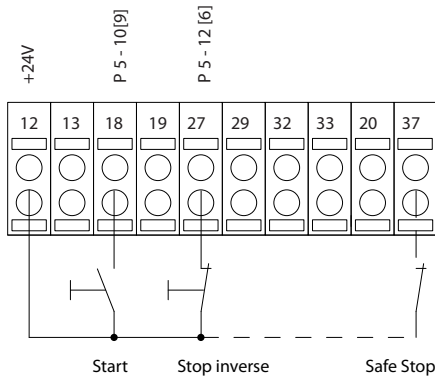

130BA156.12

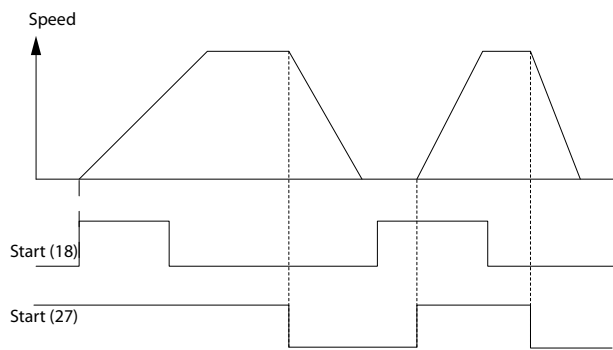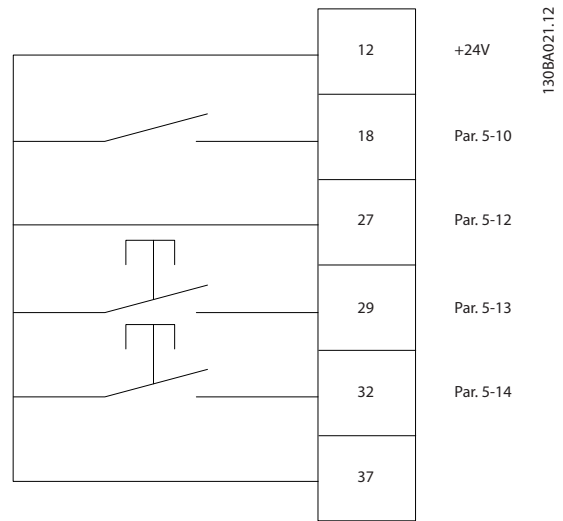

1.1.8 Speed Up/Down

Terminals 29/32 = Speed up/down



- Terminal 18 = 5-10 Terminal 18 Digital Input Start [9] (default)
- Terminal 27 = 5-12 Terminal 27 Digital Input Freeze reference [19]
- Terminal 29 = 5-13 Terminal 29 Digital Input Speed up [21]
- Terminal 32 = 5-14 Terminal 32 Digital Input Speed down [22]

NOTE: Terminal 29 only in FC x02 (x=series type).

1.1.9 Potentiometer Reference

Voltage reference via a potentiometer

- Reference Source 1 = [1] Analog input 53 (default)
- Terminal 53, Low Voltage = 0V
- Terminal 53, High Voltage = 10V
- Terminal 53, Low Ref./Feedback = 0 RPM
- Terminal 53, High Ref./Feedback = 1500 RPM
- Switch S201 = OFF (U)

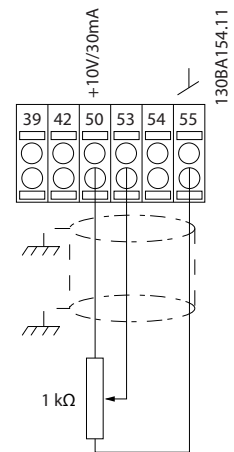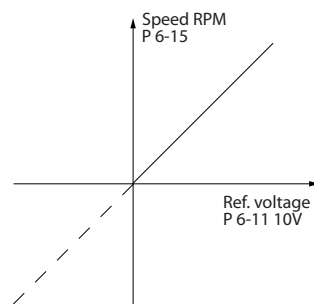

2 How to Programme

2.1 The Graphical and Numerical Local Control Panels

The easiest programming of the frequency converter is performed by the Graphical LCP (LCP 102). It is necessary to consult the frequency converter Design Guide, when using the Numeric Local Control Panel (LCP 101).

2.1.1 How to Programme on the Graphical LCP

The following instructions are valid for the graphical LCP(LCP 102)


The control panel is divided into four functional groups

1. Graphical display with Status lines.
2. Menu keys and indicator lights - changing parameters and switching between display functions.
3. Navigation keys and indicator lights (LEDs).
4. Operation keys and indicator lights (LEDs).

All data is displayed in a graphical LCP display, which can show up to five items of operating data while displaying [Status].

Display lines

- a. **Status line:** Status messages displaying icons and graphic.
- b. **Line 1-2:** Operator data lines displaying data defined or chosen by the user. By pressing the [Status] key, up to one extra line can be added.
- c. **Status line:** Status messages displaying text.

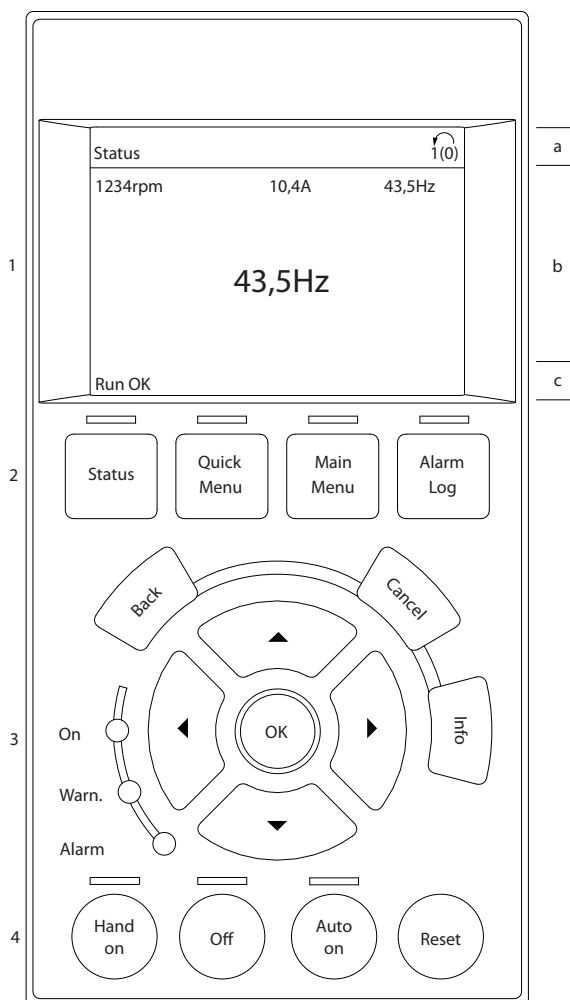

2


2.1.2 The LCD-Display

The LCD-display has back light and a total of 6 alphanumeric lines. The display lines show the direction of rotation (arrow), the chosen Set-up as well as the programming Set-up. The display is divided into 3 sections.

Top section shows up to 2 measurements in normal operating status.

The top line in the **Middle section** shows up to 5 measurements with related unit, regardless of status (except in the case of alarm/warning).

Bottom section always shows the state of the frequency converter in Status mode.

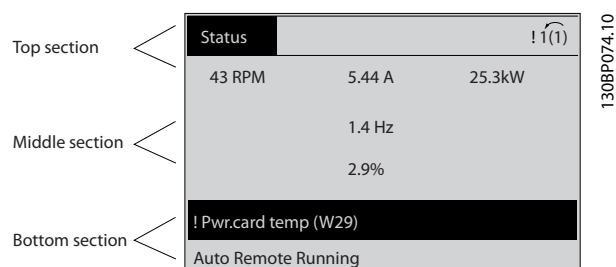

The Active Set-up (selected as the Active Set-up in 0-10 Active Set-up) is shown. When programming another Set-up than the Active Set-up, the number of the programmed Set-up appears to the right.

Display Contrast Adjustment

- Press [status] and [▲] for darker display
- Press [status] and [▼] for brighter display


Most parameter set-ups can be changed immediately via the LCP, unless a password has been created via 0-60 Main Menu Password or via 0-65 Quick Menu Password.

Indicator lights (LEDs)

If certain threshold values are exceeded, the alarm and/or warning LED lights up. A status and alarm text appear on the LCP.

The ON LED is activated when the frequency converter receives mains voltage or via a DC bus terminal or 24V external supply. At the same time, the back light is on.

- Green LED/On: Control section is working.
- Yellow LED/Warn.: Indicates a warning.
- Flashing Red LED/Alarm: Indicates an alarm.



LCP Keys

The control keys are divided into functions. The keys below the display and indicator lamps are used for parameter Set-up, including choice of display indication during normal operation.



[Status] indicates the status of the frequency converter and/or the motor. Choose between 3 different readouts by pressing the [Status] key: 5 line readouts, 4 line readouts or Smart Logic Control.

Use **[Status]** for selecting the mode of display or for changing back to Display mode from either the Quick Menu mode, the Main Menu mode or Alarm mode. Also use the [Status] key to toggle single or double read-out mode.

[Quick Menu] allows quick access to different Quick Menus such as

- My Personal Menu
- Quick Set-up
- Changes Made
- Loggings

Use **[Quick Menu]** for programming the parameters belonging to the Quick Menu. It is possible to switch directly between Quick Menu mode and Main Menu mode.

[Main Menu] is used for programming all parameters. It is possible to switch directly between Main Menu mode and Quick Menu mode.

Parameter shortcut can be carried out by pressing down the **[Main Menu]** key for 3 seconds. The parameter shortcut allows direct access to any parameter.

[Alarm Log] displays an Alarm list of the five latest alarms (numbered A1-A5). To obtain additional details about an alarm, use the arrow keys to manoeuvre to the alarm number and press [OK]. You will now receive information about the condition of your frequency converter right before entering the alarm mode.

[Back] takes you to the previous step or layer in the navigation structure.

[Cancel] annuls your last change or command as long as the display has not been changed.

[Info] supplies information about a command, parameter, or function in any display window. [Info] provides detailed information whenever help is needed. Exit info mode by pressing either [Info], [Back], or [Cancel].




Navigation Keys

The four navigation arrows are used to navigate between the different choices available in **[Quick Menu]**, **[Main Menu]** and **[Alarm Log]**. Use the keys to move the cursor.

[OK] is used for choosing a parameter marked by the cursor and for enabling the change of a parameter.

Local Control Key for local control are found at the bottom of the LCP.

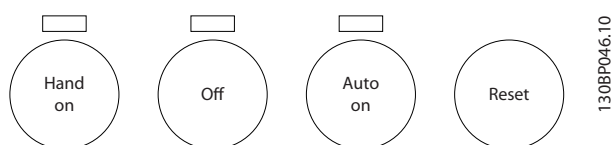

[Hand On] enables control of the frequency converter via the LCP. [Hand on] also starts the motor, and it is now possible to enter the motor speed data by means of the arrow keys. The key can be selected as Enable [1] or Disable [0] via 0-40 [Hand on] Key on LCP

External stop signals activated by means of control signals or a serial bus will override a "start" command via the LCP.

The following control signals will still be active when [Hand on] is activated

- [Hand on] - [Off] - [Auto on]
- Reset
- Coasting stop inverse
- Reversing
- Set-up select bit 0- Set-up select bit 1
- Stop command from serial communication

- Quick stop
- DC brake

[Off] stops the connected motor. The key can be selected as Enable [1] or Disable [0] via 0-41 [Off] Key on LCP. If no external stop function is selected and the [Off] key is inactive the motor can be stopped by disconnecting the voltage.

[Auto On] enables the frequency converter to be controlled via the control terminals and/or serial communication. When a start signal is applied on the control terminals and/or the bus, the frequency converter will start. The key can be selected as Enable [1] or Disable [0] via 0-42 [Auto on] Key on LCP.

NOTE


An active HAND-OFF-AUTO signal via the digital inputs has higher priority than the control keys [Hand on] – [Auto on].

[Reset] is used for resetting the frequency converter after an alarm (trip). It can be selected as Enable [1] or Disable [0] via 0-43 [Reset] Key on LCP.

The parameter shortcut can be carried out by holding down the [Main Menu] key for 3 seconds. The parameter shortcut allows direct access to any parameter.

2.1.3 Quick Transfer of Parameter Settings between Multiple Frequency Converters

Once the set-up of a frequency converter is complete, we recommend that you store the data in the LCP or on a PC via MCT 10 Set-up Software Tool.

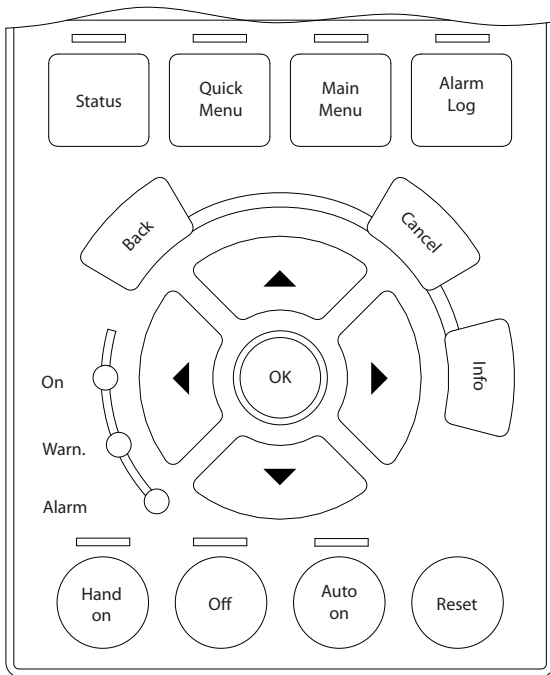

Data storage in LCP

1. Go to 0-50 LCP Copy
2. Press the [OK] key
3. Select "All to LCP"
4. Press the [OK] key

All parameter settings are now stored in the LCP indicated by the progress bar. When 100% is reached, press [OK].

NOTE

Stop the motor before performing this operation.

You can now connect the LCP to another frequency converter and copy the parameter settings to this frequency converter as well.

Data transfer from LCP to frequency converter

1. Go to 0-50 LCP Copy
2. Press the [OK] key
3. Select "All from LCP"
4. Press the [OK] key

The parameter settings stored in the LCP are now transferred to the frequency converter indicated by the progress bar. When 100% is reached, press [OK].

NOTE

Stop the motor before performing this operation.

2.1.4 Display Mode

In normal operation, up to 5 different operating variables can be indicated continuously in the middle section: 1.1, 1.2, and 1.3 as well as 2 and 3.

2.1.5 Display Mode - Selection of Read-Outs

It is possible to toggle between three status read-out screens by pressing the [Status] key. Operating variables with different formatting are shown in each status screen - see below.

Table 2.1 shows the measurements you can link to each of the operating variables. When Options are mounted, additional measurements are available. Define the links via 0-20 Display Line 1.1 Small, 0-21 Display Line 1.2 Small, 0-22 Display Line 1.3 Small, 0-23 Display Line 2 Large, and 0-24 Display Line 3 Large.


Each readout parameter selected in 0-20 Display Line 1.1 Small to 0-24 Display Line 3 Large has its own scale and digits after a possible decimal point. By larger numeric value of a parameter fewer digits are displayed after the decimal point. Ex.: Current readout 5.25A; 15.2A 105A.

| Operating variable: | Unit: |
|----------------------------------|--------|
| 16-00 Control Word | hex |
| 16-01 Reference [Unit] | [unit] |
| 16-02 Reference [%] | % |
| 16-03 Status Word | hex |
| 16-05 Main Actual Value [%] | % |
| 16-10 Power [kW] | [kW] |
| 16-11 Power [hp] | [HP] |
| 16-12 Motor Voltage | [V] |
| 16-13 Frequency | [Hz] |
| 16-14 Motor Current | [A] |
| 16-16 Torque [Nm] | Nm |
| 16-17 Speed [RPM] | [RPM] |
| 16-18 Motor Thermal | % |
| 16-20 Motor Angle | |
| 16-30 DC Link Voltage | V |
| 16-32 Brake Energy /s | kW |
| 16-33 Brake Energy /2 min | kW |
| 16-34 Heatsink Temp. | C |
| 16-35 Inverter Thermal | % |
| 16-36 Inv. Nom. Current | A |
| 16-37 Inv. Max. Current | A |
| 16-38 SL Controller State | |
| 16-39 Control Card Temp. | C |
| 16-40 Logging Buffer Full | |
| 16-50 External Reference | |
| 16-51 Pulse Reference | |
| 16-52 Feedback [Unit] | [Unit] |
| 16-53 Digi Pot Reference | |
| 16-60 Digital Input | bin |
| 16-61 Terminal 53 Switch Setting | V |
| 16-62 Analog Input 53 | |
| 16-63 Terminal 54 Switch Setting | V |
| 16-64 Analog Input 54 | |
| 16-65 Analog Output 42 [mA] | [mA] |
| 16-66 Digital Output [bin] | [bin] |
| 16-67 Pulse Input #29 [Hz] | [Hz] |
| 16-68 Freq. Input #33 [Hz] | [Hz] |
| 16-69 Pulse Output #27 [Hz] | [Hz] |
| 16-70 Pulse Output #29 [Hz] | [Hz] |
| 16-71 Relay Output [bin] | |
| 16-72 Counter A | |
| 16-73 Counter B | |
| 16-80 Fieldbus CTW 1 | hex |
| 16-82 Fieldbus REF 1 | hex |
| 16-84 Comm. Option STW | hex |
| 16-85 FC Port CTW 1 | hex |
| 16-86 FC Port REF 1 | hex |
| 16-90 Alarm Word | |
| 16-92 Warning Word | |
| 16-94 Ext. Status Word | |

Status screen I

This read-out state is standard after start-up or initialization. Use [INFO] to obtain information about the measurement links to the displayed operating variables (1.1, 1.2, 1.3, 2 and 3).


See the operating variables shown in the screen below.

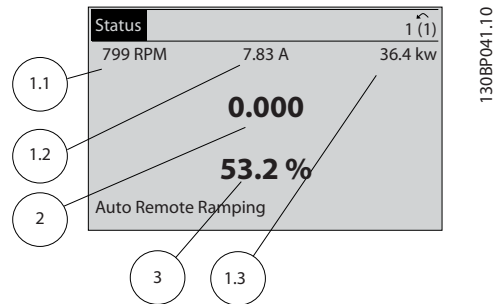

Status screen II


See the operating variables (1.1, 1.2, 1.3 and 2) shown in the screen below.

In the example, Speed, Motor current, Motor power and Frequency are selected as variables in the first and second.

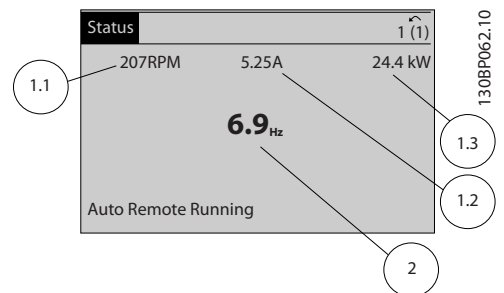

Status screen III

This state displays the event and action of the Smart Logic Control. For further information, see section *Smart Logic Control*.

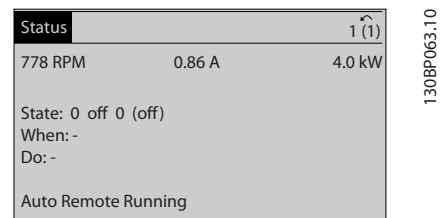

2.1.6 Parameter Set-Up

The frequency converter can be used for practically all assignments, which is why the number of parameters is quite large. The frequency converter offers a choice between two programming modes - a Main Menu and a Quick Menu mode.


The former provides access to all parameters. The latter takes the user through a few parameters making it possible to start operating the frequency converter.

Regardless of the mode of programming, you can change a parameter both in the Main Menu mode and in the Quick Menu mode.

2.1.7 Quick Menu Key Functions

Pressing [Quick Menus] The list indicates the different areas contained in the Quick menu.

Select *My Personal Menu* to display the chosen personal parameters. These parameters are selected in *0-25 My Personal Menu*. Up to 20 different parameters can be added in this menu.

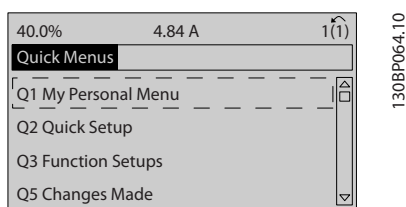

Select *Quick setup* to go through a limited amount of parameters to get the motor running almost optimally. The default setting for the other parameters considers the desired control functions and the configuration of signal inputs/outputs (control terminals).

The selection of parameter is effected by means of the arrow keys. The parameters in the following table are accessible.

| Parameter | Setting |
|---------------------------------------|-------------------------|
| 0-01 Language | |
| 1-20 Motor Power [kW] | [kW] |
| 1-22 Motor Voltage | [V] |
| 1-23 Motor Frequency | [Hz] |
| 1-24 Motor Current | [A] |
| 1-25 Motor Nominal Speed | [rpm] |
| 5-12 Terminal 27 Digital Input | [0] No function* |
| 1-29 Automatic Motor Adaptation (AMA) | [1] Enable complete AMA |
| 3-02 Minimum Reference | [rpm] |
| 3-03 Maximum Reference | [rpm] |
| 3-41 Ramp 1 Ramp up Time | [sec] |
| 3-42 Ramp 1 Ramp Down Time | [sec] |
| 3-13 Reference Site | |

* If terminal 27 is set to "no function", no connection to +24 V on terminal 27 is necessary.

Select *Changes made* to get information about:

- the last 10 changes. Use the [▲] [▼] navigation keys to scroll between the last 10 changed parameters.
- the changes made since default setting.

Select *Loggings* to get information about the display line read-outs. The information is shown as graphs. Only display parameters selected in *0-20 Display Line 1.1 Small* and *0-24 Display Line 3 Large* can be viewed. It is possible to store up to 120 samples in the memory for later reference.

2.1.8 Initial Commissioning


The easiest way of carrying out the initial commissioning is by using the Quick Menu button and follow the quick set-up procedure using LCP 102 (read table from left to right). The example applies to open loop applications.

| Press | | | | |
|--|--|---|--|--|
| | | Q2 Quick Menu | | |
| 0-01 <i>Language</i> | | Set language | | |
| 1-20 <i>Motor Power [kW]</i> | | Set Motor nameplate power | | |
| 1-22 <i>Motor Voltage</i> | | Set Nameplate voltage | | |
| 1-23 <i>Motor Frequency</i> | | Set Nameplate frequency | | |
| 1-24 <i>Motor Current</i> | | Set Nameplate current | | |
| 1-25 <i>Motor Nominal Speed</i> | | Set Nameplate speed in RPM | | |
| 5-12 Terminal 27 Digital Input | | If terminal default is <i>Coast inverse</i> it is possible to change this setting to <i>No function</i> . No connection to terminal 27 is then needed for running AMA | | |
| 1-29 <i>Automatic Motor Adaptation (AMA)</i> | | Set desired AMA function. Enable complete AMA is recommended | | |
| 3-02 <i>Minimum Reference</i> | | Set the minimum speed of the motor shaft | | |
| 3-03 <i>Maximum Reference</i> | | Set the maximum speed of the motor shaft | | |
| 3-41 <i>Ramp 1 Ramp up Time</i> | | Set the ramping up time with reference to synchronous motor speed, n_s | | |
| 3-42 <i>Ramp 1 Ramp Down Time</i> | | Set the ramping down time with reference to synchronous motor speed, n_s | | |
| 3-13 <i>Reference Site</i> | | Set the site from where the reference must work | | |

2

2.1.9 Main Menu Mode

Start the Main Menu mode by pressing the [Main Menu] key. The read-out shown to the right appears on the display. The middle and bottom sections on the display show a list of parameter groups which can be chosen by toggling the up and down buttons.

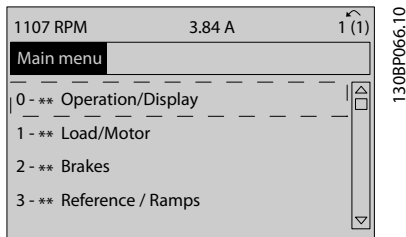

Each parameter has a name and number which remain the same regardless of the programming mode. In the Main Menu mode, the parameters are divided into groups. The first digit of the parameter number (from the left) indicates the parameter group number.


All parameters can be changed in the Main Menu. However, depending on the choice of configuration (*1-00 Configuration Mode*), some parameters can be "missing". E.g. open loop hides all the PID parameters, and other enabled options make more parameter groups visible.

2.1.10 Parameter Selection

In the Main menu mode, the parameters are divided into groups. Select a parameter group with the navigation keys. The following parameter groups are accessible:

After selecting a par. group, choose a parameter by means of the navigation keys.

The middle section on the display shows the parameter number and name as well as the selected parameter value.

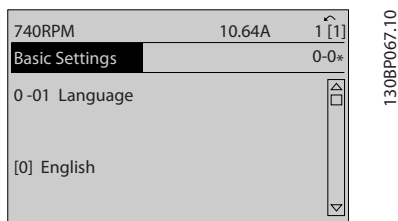

2.1.11 Changing Data


The procedure for changing data is the same whether you select a parameter in the Quick menu or the Main menu mode. Press [OK] to change the selected parameter.

The procedure for changing data depends on whether the selected parameter represents a numerical data value or a text value.

2.1.12 Changing a Text Value


If the selected parameter is a text value, change the text value with the [▲] [▼] navigation keys.

The up key increases the value, and the down key decreases the value. Place the cursor on the value you want to save and press [OK].

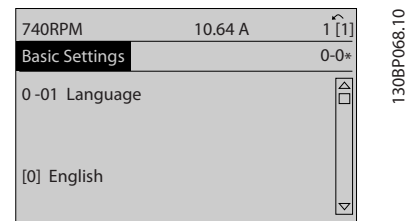


2.1.13 Changing a Group of Numeric Data Values

If the chosen parameter represents a numeric data value, change the chosen data value by means of the [◀] [▶] navigation keys as well as the [▲] [▼] navigation keys. Use the [◀] [▶] navigation keys to move the cursor horizontally.

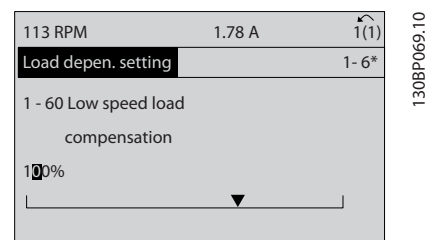


Use the [▲] [▼] navigation keys to change the data value. The up key enlarges the data value, and the down key reduces the data value. Place the cursor on the value you want to save and press [OK].

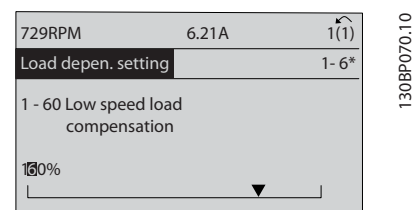

2.1.14 Infinitely Variable Change of Numeric Data Value


If the chosen parameter represents a numeric data value, select a digit with the [◀] [▶] navigation keys.

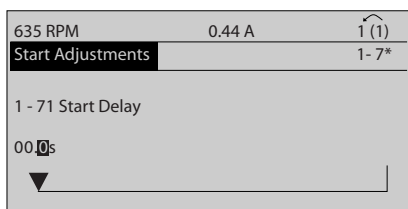

1308P073.10

Change the selected digit infinitely variably with the [▲] [▼] navigation keys.

The chosen digit is indicated by the cursor. Place the cursor on the digit you want to save and press [OK].

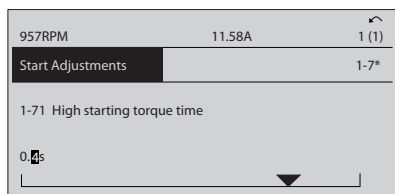

1308P072.10

2.1.15 Value, Step-by-Step

Certain parameters can be changed step by step or infinitely varying. This applies to *1-20 Motor Power [kW]*, *1-22 Motor Voltage* and *1-23 Motor Frequency*.

The parameters are changed both as a group of numeric data values and as numeric data values infinitely varying.

2.1.16 Read-out and Programming of Indexed Parameters

Parameters are indexed when placed in a rolling stack. *15-30 Fault Log: Error Code* to *15-32 Alarm Log: Time* contain a fault log which can be read out. Choose a parameter, press [OK], and use the [▲] [▼] navigation keys to scroll through the value log.

Use *3-10 Preset Reference* as another example:

Choose the parameter, press [OK], and use the [▲] [▼] navigation keys to scroll through the indexed values. To change the parameter value, select the indexed value and press [OK]. Change the value by using the [▲] [▼] keys. Press [OK] to accept the new setting. Press [CANCEL] to abort. Press [Back] to leave the parameter.

2.1.17 How to Programme on the Numerical Local Control Panel

The following instructions are valid for the Numerical LCP (LCP 101).

The control panel is divided into four functional groups:

1. Numerical display.
2. Menu keys and indicator lights - changing parameters and switching between display functions.
3. Navigation keys and indicator lights (LEDs).
4. Operation keys and indicator lights (LEDs).

Display line: Status messages displaying icons and numeric value.

Indicator lights (LEDs)


- Green LED/On: Indicates if control section is on.
- Yellow LED/Wrn.: Indicates a warning.
- Flashing red LED/Alarm: Indicates an alarm.

LCP keys

[Menu] Select one of the following modes:

- Status
- Quick Setup
- Main Menu

2

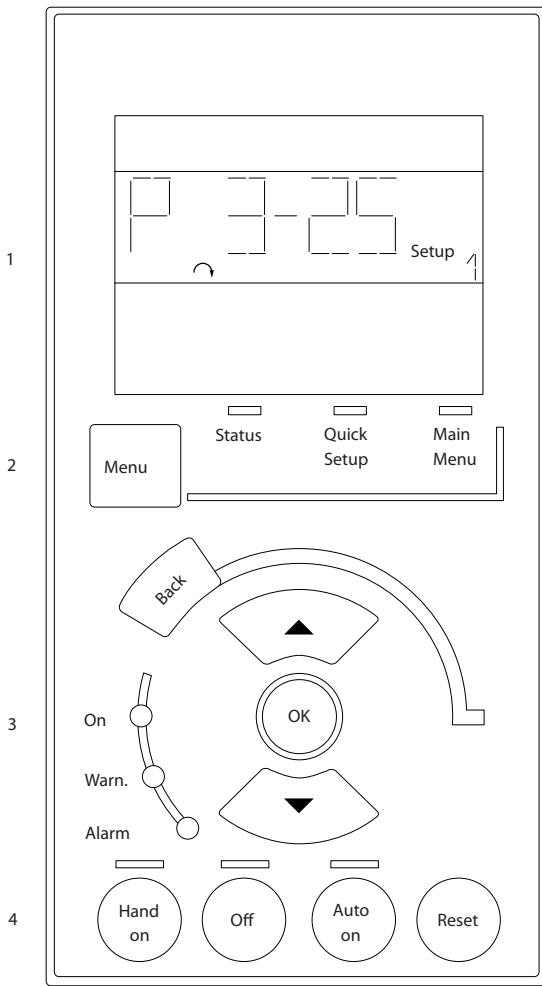

130BA191.10

Main Menu/ Quick Setup is used for programming all parameters or only the parameters in the Quick Menu (see also description of the LCP 102 earlier in this chapter). The parameter values can be changed using the [▲] [▼] keys when the value is flashing.

Select Main Menu by pressing [Menu] key a number of times. Select the parameter group [xx-__] and press [OK]

Select the parameter [__-xx] and press [OK]


If the parameter is an array parameter select the array number and press [OK]

Select the wanted data value and press [OK]

Parameters with functional choices display values such as [1], [2], etc. For a description of the different choices, see the individual description of the parameters in the *Parameter Selection* section

[Back] for stepping backwards

Arrow [▲] [▼] keys are used for manoeuvring between commands and within parameters.

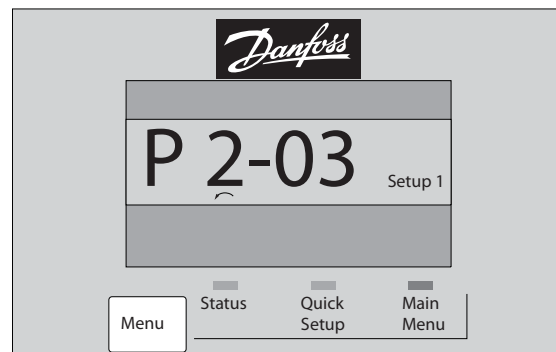

130BP079.10

Status Mode

Displays the status of the frequency converter or the motor. If an alarm occurs the NLCP automatically switches to status mode.

A number of alarms can be displayed.

NOTE

Parameter copy is not possible with LCP 101 Numerical Local Control Panel.




130BP077.10



130BP078.10

2.1.18 Local Control Keys

Keys for local control are found at the bottom of the LCP.

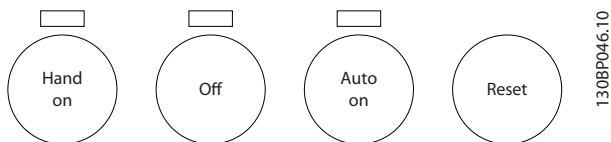

[Hand on] enables control of the frequency converter via the LCP. [Hand on] also starts the motor and it is now possible to enter the motor speed data by means of the arrow keys. The key can be selected as Enable [1] og Disable [0] via 0-40 [Hand on] Key on LCP.

External stop signals activated by means of control signals or a serial bus will override a 'start' command via the LCP. The following control signals will still be active when [Hand on] is activated:

- [Hand on] - [Off] - [Auto on]
- Reset
- Coasting stop inverse
- Reversing
- Set-up select lsb - Set-up select msb
- Stop command from serial communication
- Quick stop
- DC brake

[Off] stops the connected motor. The key can be selected as Enable [1] or Disable [0] via 0-41 [Off] Key on LCP . If no external stop function is selected and the [Off] key is inactive the motor can be stopped by disconnecting the voltage.

[Auto on] enables the frequency converter to be controlled via the control terminals and/or serial communication. When a start signal is applied on the control terminals and/or the bus, the frequency converter will start. The key can be selected as Enable [1] or Disable [0] via 0-42 [Auto on] Key on LCP.

NOTE

An active HAND-OFF-AUTO signal via the digital inputs has higher priority than the control keys [Hand on] [Auto on].

[Reset] is used for resetting the frequency converter after an alarm (trip). It can be selected as Enable [1] or Disable [0] via 0-43 [Reset] Key on LCP.

2.1.19 Initialisation to Default Settings

Initialise the frequency converter to default settings in two ways.

Recommended initialisation (via 14-22 Operation Mode)

| | |
|----|--|
| 1. | Select 14-22 Operation Mode |
| 2. | Press [OK] |
| 3. | Select "Initialisation" |
| 4. | Press [OK] |
| 5. | Cut off the mains supply and wait until the display turns off. |
| 6. | Reconnect the mains supply - the frequency converter is now reset. |

| |
|---|
| 14-22 Operation Mode initialises all except: |
| 14-50 RFI Filter |
| 8-30 Protocol |
| 8-31 Address |
| 8-32 FC Port Baud Rate |
| 8-35 Minimum Response Delay |
| 8-36 Max Response Delay |
| 8-37 Max Inter-Char Delay |
| 15-00 Operating Hours to 15-05 Over Volt's |
| 15-20 Historic Log: Event to 15-22 Historic Log: Time |
| 15-30 Fault Log: Error Code to 15-32 Alarm Log: Time |

Manual initialisation

| | |
|-----|--|
| 1. | Disconnect from mains and wait until the display turns off. |
| 2a. | Press [Status] - [Main Menu] - [OK] at the same time while power up for LCP 102, Graphical Display |
| 2b. | Press [Menu] while power up for LCP 101, Numerical Display |
| 3. | Release the keys after 5s. |
| 4. | The frequency converter is now programmed according to default settings. |

| |
|--|
| This procedure initialises all except: |
| 15-00 Operating Hours |
| 15-03 Power Up's |
| 15-04 Over Temp's |
| 15-05 Over Volt's |

NOTE

A manual initialisation also resets serial communication, RFI filter settings (14-50 RFI Filter) and fault log settings.

3 Parameter Descriptions

3

3.1 Parameter Selection

Parameters for FC 300 are grouped into various parameter groups for easy selection of the correct parameters for optimized operation of the frequency converter.

0-** Operation and Display parameters

- Basic Settings, set-up handling
- Display and Local Control Panel parameters for choosing readouts, setting up selections and copying functions

1-** Load and Motor parameters includes all load and motor related parameters

2-** Brake parameters

- DC brake
- Dynamic brake (Resistor brake)
- Mechanical brake
- Over Voltage Control

3-** References and ramping parameters includes DigiPot function

4-** Limits Warnings; setting of limits and warning parameters

5-** Digital inputs and outputs includes relay controls

6-** Analog inputs and outputs

7-** Controls; Setting parameters for speed and process controls

8-** Communication and option parameters for setting of FC RS485 and FC USB port parameters.

9-** Profibus parameters

10-** DeviceNet and CAN Fieldbus parameters

12-** Ethernet parameters

13-** Smart Logic Control parameters

14-** Special function parameters

15-** Drive information parameters

16-** Readout parameters

17-** Encoder Option parameters

18-** Readout 2 parameters

30-** Special Features

32-** MCO Basic Settings parameters

33-** MCO Adv. Settings parameters

34-** MCO Data Readouts

35-** Sensor Input Option parameters

3.2 Parameters: 0-** Operation and Display

Parameters related to the fundamental functions of the frequency converter, function of the LCP buttons and configuration of the LCP display.

3.2.1 0-0* Basic Settings

| 0-01 Language | | |
|---------------|--------------|--|
| Option: | Function: | |
| | | Defines the language to be used in the display. The frequency converter can be delivered with 4 different language packages. English and German are included in all packages. English cannot be erased or manipulated. |
| [0] * | English | Part of Language packages 1 - 4 |
| [1] | Deutsch | Part of Language packages 1 - 4 |
| [2] | Francais | Part of Language package 1 |
| [3] | Dansk | Part of Language package 1 |
| [4] | Spanish | Part of Language package 1 |
| [5] | Italiano | Part of Language package 1 |
| | Svenska | Part of Language package 1 |
| [7] | Nederlands | Part of Language package 1 |
| [10] | Chinese | Part of Language package 2 |
| | Suomi | Part of Language package 1 |
| [22] | English US | Part of Language package 4 |
| | Greek | Part of Language package 4 |
| | Bras.port | Part of Language package 4 |
| | Slovenian | Part of Language package 3 |
| | Korean | Part of Language package 2 |
| | Japanese | Part of Language package 2 |
| | Turkish | Part of Language package 4 |
| | Trad.Chinese | Part of Language package 2 |
| | Bulgarian | Part of Language package 3 |
| | Srpski | Part of Language package 3 |
| | Romanian | Part of Language package 3 |
| | Magyar | Part of Language package 3 |
| | Czech | Part of Language package 3 |
| | Polski | Part of Language package 4 |

| 0-01 Language | | |
|---------------|------------------|----------------------------|
| Option: | Function: | |
| | Russian | Part of Language package 3 |
| | Thai | Part of Language package 2 |
| | Bahasa Indonesia | Part of Language package 2 |
| [52] | Hrvatski | |

| 0-02 Motor Speed Unit | | |
|-----------------------|-----------|--|
| Option: | Function: | |
| | | This parameter cannot be adjusted while the motor is running. The display showing depends on settings in 0-02 Motor Speed Unit and 0-03 Regional Settings. The default setting of 0-02 Motor Speed Unit and 0-03 Regional Settings depends on which region of the world the frequency converter is supplied to, but can be re-programmed as required. |
| | | NOTE Changing the <i>Motor Speed Unit</i> will reset certain parameters to their initial value. It is recommended to select the motor speed unit first, before modifying other parameters. |
| [0] | RPM | Selects display of motor speed variables and parameters (i.e. references, feedbacks and limits) in terms of motor speed (RPM). |
| [1] * | Hz | Selects display of motor speed variables and parameters (i.e. references, feedbacks and limits) in terms of output frequency to the motor (Hz). |

| 0-03 Regional Settings | | |
|------------------------|---------------|---|
| Option: | Function: | |
| [0] * | International | Activates 1-20 Motor Power [kW] for setting the motor power in kW and sets the default value of 1-23 Motor Frequency to 50Hz. |
| [1] * | US | Activates 1-20 Motor Power [kW] for setting the motor power in HP and sets the default value of 1-23 Motor Frequency to 60Hz. |

This parameter cannot be adjusted while the motor is running.

| 0-04 Operating State at Power-up (Hand) | | |
|---|-----------|---|
| Option: | Function: | |
| | | Selects the operating mode upon reconnection of the frequency converter to mains voltage after power down in Hand (local) operation mode. |
| [0] | Resume | Restarts the frequency converter maintaining the same local reference and the same start/stop settings (applied by [HAND ON/OFF]) as before the frequency converter was powered down. |

| 0-04 Operating State at Power-up (Hand) | | |
|---|----------------------|--|
| Option: | Function: | |
| [1] * | Forced stop, ref=old | Restarts the frequency converter with a saved local reference, after mains voltage reappears and after pressing [HAND ON]. |
| [2] | Forced stop, ref=0 | Resets the local reference to 0 upon restarting the frequency converter. |

3.2.2 0-1* Set-up Operations


Define and control the individual parameter setups. The frequency converter has four parameter setups that can be programmed independently of each other. This makes the frequency converter very flexible and able to solve advanced control functionality problems, often saving the cost of external control equipment. For example these can be used to program the frequency converter to operate according to one control scheme in one setup (e.g. motor 1 for horizontal movement) and another control scheme in another setup (e.g. motor 2 for vertical movement). Alternatively they can be used by an OEM machine builder to identically program all their factory fitted frequency converters for different machine types within a range to have the same parameters and then during production/commissioning simply select a specific setup depending on which machine the frequency converter is installed on. The active setup (i.e. the setup in which the frequency converter is currently operating) can be selected in *0-10 Active Set-up* and is displayed in the LCP. Using Multi set-up it is possible to switch between setups with the frequency converter running or stopped, via digital input or serial communication commands. If it is necessary to change setups whilst running, ensure *0-12 This Set-up Linked to* is programmed as required. Using *0-11 Edit Set-up* it is possible to edit parameters within any of the setups whilst continuing the frequency converter operation in its Active Setup which can be a different setup to that being edited. Using *0-51 Set-up Copy* it is possible to copy parameter settings between the setups to enable quicker commissioning if similar parameter settings are required in different setups.

| 0-10 Active Set-up | | |
|--------------------|---------------|--|
| Option: | Function: | |
| | | Select the set-up to control the frequency converter functions. |
| [0] | Factory setup | Cannot be changed. It contains the Danfoss data set, and can be used as a data source when returning the other set-ups to a known state. |
| [1] * | Set-up 1 | <i>Set-up 1</i> [1] to <i>Set-up 4</i> [4] are the four separate parameter set-ups within which all parameters can be programmed. |
| [2] | Set-up 2 | |
| [3] | Set-up 3 | |
| [4] | Set-up 4 | |

| 0-10 Active Set-up | | |
|--------------------|--------------|--|
| Option: | Function: | |
| [9] | Multi Set-up | Remote selection of set-ups using digital inputs and the serial communication port. This set-up uses the settings from <i>0-12 This Set-up Linked to</i> . Stop the frequency converter before making changes to open- and closed loop functions |

Use *0-51 Set-up Copy* to copy a set-up to one or all other set-ups. Stop the frequency converter before switching between set-ups where parameters marked 'not changeable during operation' have different values. To avoid conflicting settings of the same parameter within two different set-ups, link the set-ups together using *0-12 This Set-up Linked to*. Parameters which are 'not changeable during operation' are marked FALSE in the parameter lists in the section *Parameter Lists*.

| 0-11 Edit Set-up | | |
|------------------|---------------|---|
| Option: | Function: | |
| | | Select the set-up to be edited (i.e. programmed) during operation; either the active set-up or one of the inactive set-ups. |
| [0] | Factory setup | Cannot be edited but it is useful as a data source to return the other set-ups to a known state. |
| [1] * | Set-up 1 | <i>Set-up 1</i> [1] to <i>Set-up 4</i> [4] can be edited freely during operation, independently of the active set-up. |
| [2] | Set-up 2 | |
| [3] | Set-up 3 | |
| [4] | Set-up 4 | |
| [9] | Active Set-up | Can also be edited during operation. Edit the chosen set-up from a range of sources: LCP, FC RS-485, FC USB or up to five fieldbus sites. |

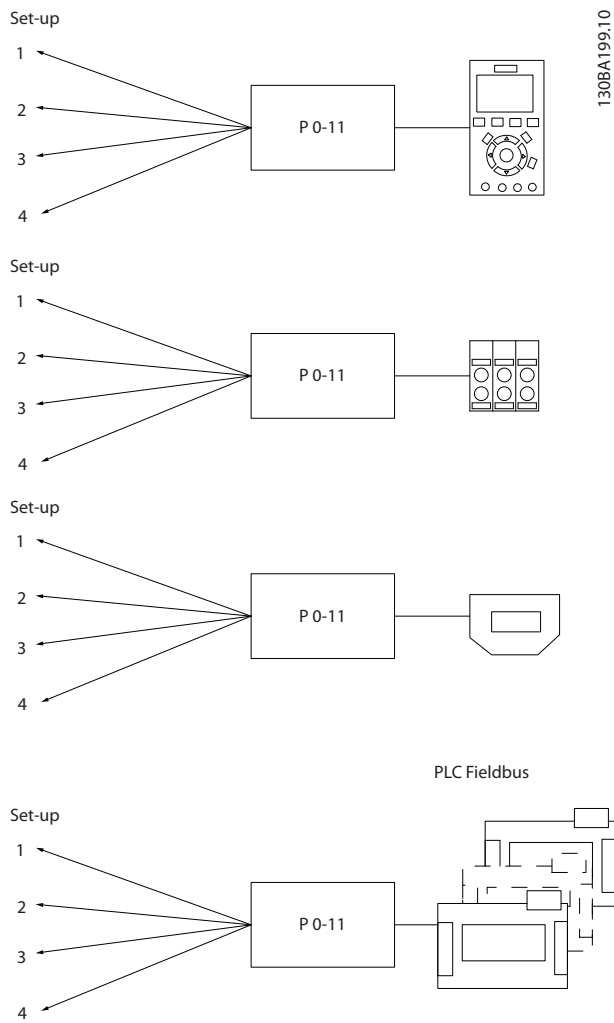

| 0-12 This Set-up Linked to | |
|----------------------------|---|
| Option: | Function: |
| | To enable conflict-free changes from one set-up to another during operation, link set-ups containing parameters which are not changeable during operation. The link will ensure synchronising of the 'not changeable during operation' parameter values when moving from one set-up to another during operation. 'Not changeable during operation' parameters can be identified by the label FALSE in the parameter lists in the section <i>Parameter Lists</i> . |
| | <i>0-12 This Set-up Linked to</i> is used by Multi set-up in <i>0-10 Active Set-up</i> . Multi set-up is used to move from one set-up to another during operation (i.e. while the motor is running). |
| | Example: Use Multi set-up to shift from Set-up 1 to Set-up 2 whilst the motor is running. Programme in Set-up 1 first, then ensure that Set-up 1 and Set-up 2 are synchronised (or 'linked'). Synchronisation can be performed in two ways: |

0-12 This Set-up Linked to

| Option: | Function: |
|---------|--|
| | 1. Change the edit set-up to <i>Set-up 2</i> [2] in <i>0-11 Edit Set-up</i> and set <i>0-12 This Set-up Linked to</i> to <i>Set-up 1</i> [1]. This will start the linking (synchronising) process. |
| | |
| | OR |
| | 2. While still in Set-up 1, copy Set-up 1 to Set-up 2. Then set <i>0-12 This Set-up Linked to</i> to <i>Set-up 2</i> [2]. This will start the linking process. |
| | |
| | After the link is complete, <i>0-13 Readout: Linked Set-ups</i> will read {1,2} to indicate that all 'not changeable during operation' parameters are now the same in Set-up 1 and Set-up 2. If there are changes to a 'not changeable during operation' parameter, e.g. <i>1-30 Stator Resistance (Rs)</i> , in Set-up 2, they will also be changed automatically in Set-up 1. A switch between Set-up 1 and Set-up 2 during operation is now possible. |
| [0] * | Not linked |
| [1] | Set-up 1 |
| [2] | Set-up 2 |
| [3] | Set-up 3 |
| [4] | Set-up 4 |

3

| 0-13 Readout: Linked Set-ups | | | | | | | | | | | | | | |
|--|-----------|---|-------|-----------|---|-----|---|-------|---|-------|---|-----|---|-----|
| Array [5] | | | | | | | | | | | | | | |
| Range: | | Function: | | | | | | | | | | | | |
| 0 | [0 - 255] | View a list of all the set-ups linked by means of 0-12 <i>This Set-up Linked to</i> . The parameter has one index for each parameter set-up. The parameter value displayed for each index represents which setups are linked to that parameter setup. | | | | | | | | | | | | |
| | | <table border="1"> <thead> <tr> <th>Index</th> <th>LCP value</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>{0}</td> </tr> <tr> <td>1</td> <td>{1,2}</td> </tr> <tr> <td>2</td> <td>{1,2}</td> </tr> <tr> <td>3</td> <td>{3}</td> </tr> <tr> <td>4</td> <td>{4}</td> </tr> </tbody> </table> | Index | LCP value | 0 | {0} | 1 | {1,2} | 2 | {1,2} | 3 | {3} | 4 | {4} |
| Index | LCP value | | | | | | | | | | | | | |
| 0 | {0} | | | | | | | | | | | | | |
| 1 | {1,2} | | | | | | | | | | | | | |
| 2 | {1,2} | | | | | | | | | | | | | |
| 3 | {3} | | | | | | | | | | | | | |
| 4 | {4} | | | | | | | | | | | | | |
| <p>Table 3.2 Example: Set-up 1 and Set-up 2 are linked</p> | | | | | | | | | | | | | | |

| 0-14 Readout: Edit Set-ups / Channel | | |
|--------------------------------------|----------------------------|--|
| Range: | | Function: |
| 0* | [-2147483648 - 2147483647] | View the setting of 0-11 <i>Edit Set-up</i> for each of the four different communication channels. When the number is displayed in hex, as it is in the LCP, each number represents one channel. Numbers 1-4 represent a set-up number; 'F' means factory setting; and 'A' means active set-up. The channels are, from right to left: LCP, FC-bus, USB, HPFB1-5. Example: The number AAAAAA21h means that the FC bus selected Set-up 2 in 0-11 <i>Edit Set-up</i> , the LCP selected Set-up 1 and all others used the active set-up. |

| 0-15 Readout: actual setup | | |
|----------------------------|-----------|---|
| Range: | | Function: |
| 0* | [0 - 255] | Makes it possible to read out the active set-up, also when multi set-up is selected in par. 0-10. |

3.2.3 0-2* LCP Display

Define the variables displayed in the Graphical Local Control Panel.

NOTE

Please refer to 0-37 *Display Text 1*, 0-38 *Display Text 2* and 0-39 *Display Text 3* for information on how to write display texts.

| 0-20 Display Line 1.1 Small | | |
|-----------------------------|--|---|
| Option: | | Function: |
| | | Select a variable for display in line 1, left position. |

| 0-20 Display Line 1.1 Small | | |
|-----------------------------|--------------------------------|---|
| Option: | | Function: |
| [0] * | None | No display value selected. |
| [9] | Performance Monitor | |
| [15] | Readout: actual setup | |
| [37] | Display Text 1 | |
| [38] | Display Text 2 | |
| [39] | Display Text 3 | |
| [748] | PCD Feed Forward | |
| [953] | Profibus Warning Word | |
| [1005] | Readout Transmit Error Counter | |
| [1006] | Readout Receive Error Counter | |
| [1007] | Readout Bus Off Counter | |
| [1013] | Warning Parameter | |
| [1230] | Warning Parameter | |
| [1472] | Legacy Alarm Word | |
| [1473] | Legacy Warning Word | |
| [1474] | Leg. Ext. Status Word | |
| [1501] | Running Hours | |
| [1502] | kWh Counter | |
| [1600] | Control Word | Present control word |
| [1601] | Reference [Unit] | Total reference (sum of digital/analog/preset/bus/freeze ref./catch up and slow-down) in selected unit. |
| [1602] | Reference % | Total reference (sum of digital/analog/preset/bus/freeze ref./catch up and slow-down) in percent. |
| [1603] | Status Word | Present status word. |
| [1605] | Main Actual Value [%] | Actual value as a percentage. |
| [1609] | Custom Readout | |
| [1610] | Power [kW] | Actual power consumed by the motor in kW. |
| [1611] | Power [hp] | Actual power consumed by the motor in HP. |
| [1612] | Motor Voltage | Voltage supplied to the motor. |
| [1613] | Frequency | Motor frequency, i.e. the output frequency from the frequency converter in Hz |
| [1614] | Motor Current | Phase current of the motor measured as effective value. |
| [1615] | Frequency [%] | Motor frequency, i.e. the output frequency from the frequency converter in percent. |
| [1616] | Torque [Nm] | Actual motor torque in Nm |

| 0-20 Display Line 1.1 Small | | |
|-----------------------------|------------------------|--|
| Option: | Function: | |
| [1617] * | Speed [RPM] | Speed in RPM (revolutions per minute) i.e. the motor shaft speed in closed loop. |
| [1618] | Motor Thermal | Thermal load on the motor, calculated by the ETR function. |
| [1619] | KTY sensor temperature | |
| [1620] | Motor Angle | |
| [1621] | Torque [%] High Res. | |
| [1622] | Torque [%] | Present motor load as a percentage of the rated motor torque. |
| [1625] | Torque [Nm] High | |
| [1630] | DC Link Voltage | Intermediate circuit voltage in the frequency converter. |
| [1632] | Brake Energy /s | Present brake power transferred to an external brake resistor. Stated as an instantaneous value. |
| [1633] | Brake Energy /2 min | Brake power transferred to an external brake resistor. The mean power is calculated continuously for the most recent 120 seconds. |
| [1634] | Heatsink Temp. | Present heat sink temperature of the frequency converter. The cut-out limit is $95 \pm 5^\circ \text{C}$; cutting back in occurs at $70 \pm 5^\circ \text{C}$. |
| [1635] | Inverter Thermal | Percentage load of the inverters. |
| [1636] | Inv. Nom. Current | Nominal current of the frequency converter. |
| [1637] | Inv. Max. Current | Maximum current of the frequency converter. |
| [1638] | SL Controller State | State of the event executed by the control. |
| [1639] | Control Card Temp. | Temperature of the control card. |
| [1650] | External Reference | Sum of the external reference as a percentage, i.e. the sum of analog/pulse/bus. |
| [1651] | Pulse Reference | Frequency in Hz connected to the digital inputs (18, 19 or 32, 33). |
| [1652] | Feedback [Unit] | Reference value from programmed digital input(s). |
| [1653] | Digi Pot Reference | |
| [1657] | Feedback [RPM] | |
| [1660] | Digital Input | Signal states form the 6 digital terminals (18, 19, 27, 29, 32 and 33). There are 16 bits in total, but only six of them are used. Input 18 corresponds to the leftmost of |

| 0-20 Display Line 1.1 Small | | |
|-----------------------------|----------------------------|--|
| Option: | Function: | |
| | | the used bits. Signal low = 0; Signal high = 1. |
| [1661] | Terminal 53 Switch Setting | Setting of input terminal 54. Current = 0; Voltage = 1. |
| [1662] | Analog Input 53 | Actual value at input 53 either as a reference or protection value. |
| [1663] | Terminal 54 Switch Setting | Setting of input terminal 54. Current = 0; Voltage = 1. |
| [1664] | Analog Input 54 | Actual value at input 54 either as reference or protection value. |
| [1665] | Analog Output 42 [mA] | Actual value at output 42 in mA. Use <i>6-50 Terminal 42 Output</i> to select the value to be shown. |
| [1666] | Digital Output [bin] | Binary value of all digital outputs. |
| [1667] | Freq. Input #29 [Hz] | Actual value of the frequency applied at terminal 29 as an impulse input. |
| [1668] | Freq. Input #33 [Hz] | Actual value of the frequency applied at terminal 33 as an impulse input. |
| [1669] | Pulse Output #27 [Hz] | Actual value of impulses applied to terminal 27 in digital output mode. |
| [1670] | Pulse Output #29 [Hz] | Actual value of impulses applied to terminal 29 in digital output mode. |
| [1671] | Relay Output [bin] | |
| [1672] | Counter A | Application dependent (e.g. SLC Control) |
| [1673] | Counter B | Application dependent (e.g. SLC Control) |
| [1674] | Prec. Stop Counter | Display the actual counter value. |
| [1675] | Analog In X30/11 | Actual value at input X30/11 either as reference or protection value. |
| [1676] | Analog In X30/12 | Actual value at input X30/12 either as reference or protection value. |
| [1677] | Analog Out X30/8 [mA] | Actual value at output X30/8 in mA. Use <i>6-60 Terminal X30/8 Output</i> to select the value to be shown. |
| [1678] | Analog Out X45/1 [mA] | |
| [1679] | Analog Out X45/3 [mA] | |
| [1680] | Fieldbus CTW 1 | Control word (CTW) received from the Bus Master. |

| 0-20 Display Line 1.1 Small | | |
|-----------------------------|--------------------------------|--|
| Option: | Function: | |
| [1682] | Fieldbus REF 1 | Main reference value sent with control word from the Bus Master. |
| [1684] | Comm. Option STW | Extended fieldbus communication option status word. |
| [1685] | FC Port CTW 1 | Control word (CTW) received from the Bus Master. |
| [1686] | FC Port REF 1 | Status word (STW) sent to the Bus Master. |
| [1690] | Alarm Word | One or more alarms in a Hex code. |
| [1691] | Alarm Word 2 | One or more alarms in a Hex code. |
| [1692] | Warning Word | One or more warnings in a Hex code. |
| [1693] | Warning Word 2 | One or more warnings in a Hex code. |
| [1694] | Ext. Status Word | One or more status conditions in a Hex code. |
| [1836] | Analog Input X48/2 [mA] | |
| [1837] | Temp. Input X48/4 | |
| [1838] | Temp. Input X48/7 | |
| [1839] | Temp. Input X48/10 | |
| [1860] | Digital Input 2 | |
| [1890] | Process PID Error | |
| [1891] | Process PID Output | |
| [1892] | Process PID Clamped Output | |
| [1893] | Process PID Gain Scaled Output | |
| [3019] | Wobble Delta Freq. Scaled | |
| [3110] | Bypass Status Word | |
| [3111] | Bypass Running Hours | |
| [3401] | PCD 1 Write to MCO | |
| [3402] | PCD 2 Write to MCO | |
| [3403] | PCD 3 Write to MCO | |
| [3404] | PCD 4 Write to MCO | |
| [3405] | PCD 5 Write to MCO | |
| [3406] | PCD 6 Write to MCO | |
| [3407] | PCD 7 Write to MCO | |
| [3408] | PCD 8 Write to MCO | |
| [3409] | PCD 9 Write to MCO | |
| [3410] | PCD 10 Write to MCO | |
| [3421] | PCD 1 Read from MCO | |
| [3422] | PCD 2 Read from MCO | |
| [3423] | PCD 3 Read from MCO | |
| [3424] | PCD 4 Read from MCO | |
| [3425] | PCD 5 Read from MCO | |

| 0-20 Display Line 1.1 Small | | |
|-----------------------------|---------------------------|--|
| Option: | Function: | |
| [3426] | PCD 6 Read from MCO | |
| [3427] | PCD 7 Read from MCO | |
| [3428] | PCD 8 Read from MCO | |
| [3429] | PCD 9 Read from MCO | |
| [3430] | PCD 10 Read from MCO | |
| [3440] | Digital Inputs | |
| [3441] | Digital Outputs | |
| [3450] | Actual Position | |
| [3451] | Commanded Position | |
| [3452] | Actual Master Position | |
| [3453] | Slave Index Position | |
| [3454] | Master Index Position | |
| [3455] | Curve Position | |
| [3456] | Track Error | |
| [3457] | Synchronizing Error | |
| [3458] | Actual Velocity | |
| [3459] | Actual Master Velocity | |
| [3460] | Synchronizing Status | |
| [3461] | Axis Status | |
| [3462] | Program Status | |
| [3464] | MCO 302 Status | |
| [3465] | MCO 302 Control | |
| [3470] | MCO Alarm Word 1 | |
| [3471] | MCO Alarm Word 2 | |
| [4285] | Active Safe Func. | |
| [4286] | Safe Option Info | |
| [9913] | Idle time | |
| [9914] | Paramdb requests in queue | |
| [9917] | tCon1 time | |
| [9918] | tCon2 time | |
| [9919] | Time Optimize Measure | |
| [9920] | HS Temp. (PC1) | |
| [9921] | HS Temp. (PC2) | |
| [9922] | HS Temp. (PC3) | |
| [9923] | HS Temp. (PC4) | |
| [9924] | HS Temp. (PC5) | |
| [9925] | HS Temp. (PC6) | |
| [9926] | HS Temp. (PC7) | |
| [9927] | HS Temp. (PC8) | |

0-21 Display Line 1.2 Small

Option: **Function:**

| | | |
|-------|------|---|
| [0] * | None | Select a variable for display in line 1, middle position. The options are the same as listed for <i>0-20 Display Line 1.1 Small</i> . |
|-------|------|---|

0-22 Display Line 1.3 Small

Option: **Function:**

| | | |
|-----------|-------------------|--|
| [30120] * | Mains Current [A] | Select a variable for display in line 1, right position. The options are the |
|-----------|-------------------|--|

| 0-22 Display Line 1.3 Small | | |
|-----------------------------|---|--|
| Option: | Function: | |
| | same as listed for 0-20 Display Line 1.1 Small. | |

| 0-23 Display Line 2 Large | | |
|---------------------------|--------------------|--|
| Option: | Function: | |
| [30100] * | Output Current [A] | Select a variable for display in line 2. The options are the same as listed for 0-20 Display Line 1.1 Small. |

0-24 Display Line 3 Large
 Select a variable for display in line 3.

| Option: | Function: | |
|-----------|-----------------|--|
| [30121] * | Mains Frequency | The options are the same as those listed in 0-20 Display Line 1.1 Small. |


| 0-25 My Personal Menu | | |
|-----------------------------------|---|--|
| Range: | Function: | |
| Application dependent* [0 - 9999] | Define up to 50 parameters to appear in the Q1 Personal Menu, accessible via the [Quick Menu] key on the LCP. The parameters will be displayed in the Q1 Personal Menu in the order they are programmed into this array parameter. Delete parameters by setting the value to '0000'. For example, this can be used to provide quick, simple access to just one or up to 50 parameters which require changing on a regular basis (e.g. for plant maintenance reasons) or by an OEM to enable simple commissioning of their equipment. | |

3.2.4 0-3* LCP Custom Readout

It is possible to customize the display elements for various purposes: *Custom Readout. Value proportional to speed (Linear, squared or cubed depending on unit selected in 0-30 Custom Readout Unit) *Display Text. Text string stored in a parameter.

Custom Readout

The calculated value to be displayed is based on settings in 0-30 Custom Readout Unit, 0-31 Custom Readout Min Value (linear only), 0-32 Custom Readout Max Value, 4-13 Motor Speed High Limit [RPM], 4-14 Motor Speed High Limit [Hz] and actual speed.

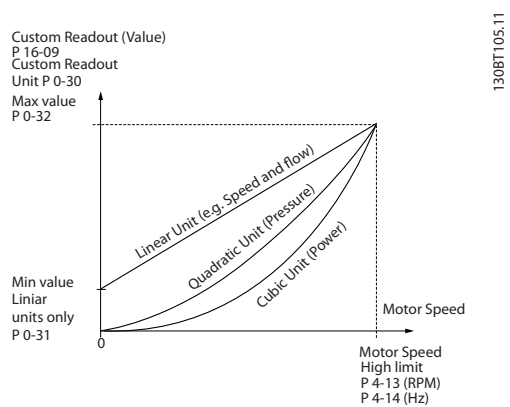

The relation will depend on the type of unit selected in 0-30 Custom Readout Unit:

| Unit Type | Speed Relation |
|---------------|----------------|
| Dimensionless | Linear |
| Speed | |
| Flow, volume | |
| Flow, mass | |
| Velocity | |
| Length | |
| Temperature | |
| Pressure | Quadratic |
| Power | Cubic |

| 0-30 Unit for User-defined Readout | | |
|------------------------------------|--|--|
| Option: | Function: | |
| | It is possible to program a value to be shown in the display of the LCP. The value will have a linear, squared or cubed relation to speed. This relation will depend on the unit selected (see table above). The actual calculated value can be read in 16-09 Custom Readout, and/or shown in the display by selecting Custom Readout [16-09] in 0-20 Display Line 1.1 Small to 0-24 Display Line 3 Large. | |
| [0] * | None | |
| [1] | % | |
| [5] | PPM | |
| [10] | 1/min | |
| [11] | rpm | |
| [12] | Pulse/s | |
| [20] | l/s | |
| [21] | l/min | |
| [22] | l/h | |
| [23] | m ³ /s | |
| [24] | m ³ /min | |
| [25] | m ³ /h | |
| [30] | kg/s | |
| [31] | kg/min | |
| [32] | kg/h | |
| [33] | t/min | |

| 0-30 Unit for User-defined Readout | | |
|------------------------------------|----------------------|--|
| Option: | Function: | |
| [34] | t/h | |
| [40] | m/s | |
| [41] | m/min | |
| [45] | m | |
| [60] | °C | |
| [70] | mbar | |
| [71] | bar | |
| [72] | Pa | |
| [73] | kPa | |
| [74] | m WG | |
| [80] | kW | |
| [120] | GPM | |
| [121] | gal/s | |
| [122] | gal/min | |
| [123] | gal/h | |
| [124] | CFM | |
| [125] | ft ³ /s | |
| [126] | ft ³ /min | |
| [127] | ft ³ /h | |
| [130] | lb/s | |
| [131] | lb/min | |
| [132] | lb/h | |
| [140] | ft/s | |
| [141] | ft/min | |
| [145] | ft | |
| [160] | °F | |
| [170] | psi | |
| [171] | lb/in ² | |
| [172] | in WG | |
| [173] | ft WG | |
| [180] | HP | |

| 0-31 Min Value of User-defined Readout | | |
|--|-------------------------|--|
| Range: | Function: | |
| 0.00 CustomReadoutUnit* | [Application dependant] | This parameter sets the min. value of the custom defined readout (occurs at zero speed). Only possible to set different from 0 is when selecting a linear unit in <i>0-30 Unit for User-defined Readout</i> . For Quadratic and Cubic units the minimum value will be 0. |

| 0-32 Custom Readout Max Value | | |
|-------------------------------|-------------------------|---|
| Range: | Function: | |
| 100.00 CustomReadoutUnit* | [par. 0-31 - 999999.99] | This parameter sets the max value to be shown when the speed of the motor has reached the set value for <i>4-13 Motor Speed High Limit [RPM]</i> or <i>4-14 Motor Speed High Limit [Hz]</i> (depends on |

| 0-32 Custom Readout Max Value | | |
|-------------------------------|--------------------|--|
| Range: | Function: | |
| | CustomReadoutUnit] | setting in <i>0-02 Motor Speed Unit</i>). |

| 0-37 Display Text 1 | | |
|---------------------|-----------|---|
| Range: | Function: | |
| 0* | [0 - 0] | Enter a text which can be viewed in the graphical display by selecting Display Text 1 [37] in <i>0-20 Display Line 1.1 Small, 0-21 Display Line 1.2 Small, 0-22 Display Line 1.3 Small, 0-23 Display Line 2 Large</i> or <i>0-24 Display Line 3 Large</i> . |

| 0-38 Display Text 2 | | |
|---------------------|-----------|---|
| Range: | Function: | |
| 0* | [0 - 0] | Enter a text which can be viewed in the graphical display by selecting Display Text 2 [38] in <i>0-20 Display Line 1.1 Small, 0-21 Display Line 1.2 Small, 0-22 Display Line 1.3 Small, 0-23 Display Line 2 Large</i> or <i>0-24 Display Line 3 Large</i> . |

| 0-39 Display Text 3 | | |
|---------------------|-----------|---|
| Range: | Function: | |
| 0* | [0 - 0] | Enter a text which can be viewed in the graphical display by selecting Display Text 3 [39] in <i>0-20 Display Line 1.1 Small, 0-21 Display Line 1.2 Small, 0-22 Display Line 1.3 Small, 0-23 Display Line 2 Large</i> or <i>0-24 Display Line 3 Large</i> . |

3.2.5 0-4* LCP Keypad

Enable, disable and password protect individual keys on the LCP.

| 0-40 [Hand on] Key on LCP | | |
|---------------------------|-----------------------|--|
| Option: | Function: | |
| [0] * | Disabled | No effect when [Hand on] is pressed. Select [0] Disabled to avoid accidental start of the drive in <i>Hand on</i> mode. |
| [1] * | Enabled | The LCP switches to <i>Hand on</i> mode directly when [Hand on] is pressed. |
| [2] | Password | After pressing [Hand on] a password is required. If <i>0-40 [Hand on] Key on LCP</i> is included in <i>My Personal Menu</i> , define the password in <i>0-65 Quick Menu Password</i> . Otherwise define the password in <i>0-60 Main Menu Password</i> . |
| [3] | Hand Off/On | When [Hand on] is pressed once, the LCP switches to <i>Off</i> mode. When pressed again, the LCP switches to <i>Hand on</i> mode. |
| [4] | Hand Off/On w. Passw. | Same as [3] but a password is required (see [2]). |
| [9] | Enabled, ref = 0 | |

| 0-41 [Off] Key on LCP | | |
|-----------------------|-----------|---|
| Option: | Function: | |
| [0] * | Disabled | Avoids accidental stop of the frequency converter. |
| [1] * | Enabled | |
| [2] | Password | Avoids unauthorised stop. If 0-41 [Off] Key on LCP is included in the Quick Menu, then define the password in 0-65 Quick Menu Password. |

| 0-42 [Auto on] Key on LCP | | |
|---------------------------|-----------|---|
| Option: | Function: | |
| [0] * | Disabled | Avoid accidental start of the frequency converter in Auto mode. |
| [1] * | Enabled | |
| [2] | Password | Avoids unauthorised start in Auto mode. If 0-42 [Auto on] Key on LCP is included in the Quick Menu, then define the password in 0-65 Quick Menu Password. |

| 0-43 [Reset] Key on LCP | | |
|-------------------------|----------------------|--|
| Option: | Function: | |
| [0] * | Disabled | No effect when [Reset] is pressed. Avoids accidental alarm reset. |
| [1] * | Enabled | |
| [2] | Password | Avoids unauthorised resetting. If 0-43 [Reset] Key on LCP is included in the Quick Menu, then define the password in 0-65 Quick Menu Password. |
| [7] | Enabled without OFF | Resets the frequency converter without setting it in Off mode. |
| [8] | Password without OFF | Resets the frequency converter without setting it in Off mode. A password is required when pressing [Reset] (see [2]). |

3.2.6 0-5* Copy / Save

Copy parameter settings between set-ups and to/from the LCP.

| 0-50 LCP Copy | | |
|---------------|----------------------|--|
| Option: | Function: | |
| [0] * | No copy | |
| [1] | All to LCP | Copies all parameters in all set-ups from the frequency converter memory to the LCP memory. |
| [2] | All from LCP | Copies all parameters in all set-ups from the LCP memory to the frequency converter memory. |
| [3] | Size indep. from LCP | Copy only the parameters that are independent of the motor size. The latter selection can be used to programme several frequency |

| 0-50 LCP Copy | | |
|---------------|----------------------|--|
| Option: | Function: | |
| | | converters with the same function without disturbing motor data. |
| [4] | File from MCO to LCP | |
| [5] | File from LCP to MCO | |
| [6] | Data from DYN to LCP | |
| [7] | Data from LCP to DYN | |

This parameter cannot be adjusted while the motor is running.

| 0-51 Set-up Copy | | |
|------------------|------------------|---|
| Option: | Function: | |
| [0] * | No copy | No function |
| [1] | Copy to set-up 1 | Copies all parameters in the present Programming Set-up (defined in 0-11 Programming Set-up) to Set-up 1. |
| [2] | Copy to set-up 2 | Copies all parameters in the present Programming Set-up (defined in 0-11 Programming Set-up) to Set-up 2. |
| [3] | Copy to set-up 3 | Copies all parameters in the present Programming Set-up (defined in 0-11 Programming Set-up) to Set-up 3. |
| [4] | Copy to set-up 4 | Copies all parameters in the present Programming Set-up (defined in 0-11 Programming Set-up) to Set-up 4. |
| [9] | Copy to all | Copies the parameters in the present set-up over to each of the set-ups 1 to 4. |

3.2.7 0-6* Password

| 0-60 Main Menu Password | | |
|-------------------------|------------|--|
| Range: | Function: | |
| 100 * | [0 - 999] | Define the password for access to the Main Menu via the [Main Menu] key. If 0-61 Access to Main Menu w/o Password is set to Full access [0], this parameter will be ignored. |

| 0-61 Access to Main Menu w/o Password | | |
|---------------------------------------|----------------|---|
| Option: | Function: | |
| [0] * | Full access | Disables password defined in <i>0-60 Main Menu Password</i> . |
| [1] | LCP: Read only | Prevent unauthorized editing of Main Menu parameters. |
| [2] | LCP: No access | Prevent unauthorized viewing and editing of Main Menu parameters. |
| [3] | Bus: Read only | Read-only functions for parameters on and/or FC standard bus. |
| [4] | Bus: No access | No access to parameters is allowed via and/or FC standard bus. |
| [5] | All: Read only | Read-only function for parameters on LCP, or FC standard bus. |
| [6] | All: No access | No access from LCP, or FC standard bus is allowed. |

If *Full access* [0] is selected then *0-60 Main Menu Password*, *0-65 Personal Menu Password* and *0-66 Access to Personal Menu w/o Password* will be ignored.

Note: A more complex Password protection is available for OEMs upon request.

| 0-67 Bus Password Access | | |
|--------------------------|-------------|--|
| Range: | Function: | |
| 0* | [0 - 9999] | Writing to this parameter enables users to unlock the frequency converter from bus/MCT 10 Set-up Software. |

| 0-65 Quick Menu Password | | |
|--------------------------|-----------------|---|
| Range: | Function: | |
| 200* | [-9999 - 9999] | Define the password for access to the Quick Menu via the [Quick Menu] key. If <i>0-66 Access to Quick Menu w/o Password</i> is set to <i>Full access</i> [0], this parameter will be ignored. |

| 0-66 Access to Quick Menu w/o Password | | |
|--|----------------|---|
| Option: | Function: | |
| [0] * | Full access | Disables the password defined in <i>0-65 Quick Menu Password</i> . |
| [1] | LCP: Read only | Prevents unauthorised editing of Quick Menu parameters. |
| [2] | LCP: No access | Prevents unauthorised viewing and editing of Quick Menu parameters. |
| [3] | Bus: Read only | Read only functions for Quick Menu parameters on and/or FC standard bus. |
| [4] | Bus: No access | No access to Quick Menu parameters is allowed via and/or FC standard bus. |
| [5] | All: Read only | read only function for Quick Menu parameters on LCP, or FC standard bus. |
| [6] | All: No access | No access from LCP, or FC standard bus is allowed. |

If *0-61 Access to Main Menu w/o Password* is set to *Full access* [0] then this parameter will be ignored.

3.3 Parameters: 1-** Load and Motor

3.3.1 1-0* General Settings

Define whether the frequency converter operates in speed mode or torque mode; and whether the internal PID control should be active or not.

| 1-00 Configuration Mode | | |
|-------------------------|-----------------------|--|
| Option: | Function: | |
| | | Select the application control principle to be used when a Remote Reference (i.e. via analog input or fieldbus) is active. A Remote Reference can only be active when <i>3-13 Reference Site</i> is set to [0] or [1]. |
| [0] * | Speed open loop | Enables speed control (without feedback signal from motor) with automatic slip compensation for almost constant speed at varying loads. Compensations are active but can be disabled in the Load/Motor parameter group 1-0*. |
| [1] | Speed closed loop | Enables Speed closed loop control with feedback. Obtain full holding torque at 0 RPM. For increased speed accuracy, provide a feedback signal and set the speed PID control. |
| [2] | Torque | Enables torque closed loop control with feedback. Only possible with "Flux with motor feedback" option, <i>1-01 Motor Control Principle</i> . FC 302 only. |
| [3] | Process | Enables the use of process control in the frequency converter. The process control parameters are set in parameter groups 7-2* and 7-3*. |
| [4] | Torque open loop | Enables the use of torque open loop in VVC ⁺ mode (<i>1-01 Motor Control Principle</i>). The torque PID parameters are set in parameter group 7-1*. |
| [5] | Wobble | Enables the wobble functionality in <i>30-00 Wobble Mode</i> to <i>30-19 Wobble Delta Freq. Scaled</i> . |
| [6] | Surface Winder | Enables the surface winder control specific parameters in parameter group 7-2* and 7-3*. |
| [7] | Extended PID Speed OL | Specific parameters in parameter group 7-2* to 7-5*. |
| [8] | Extended PID Speed CL | Specific parameters in parameter group 7-2* to 7-5*. |

| 1-01 Motor Control Principle | | |
|------------------------------|---------------------|--|
| Option: | Function: | |
| | | Select which motor control principle to employ. |
| [0] * | U/f | special motor mode, for parallel connected motors in special motor applications. When U/f is selected the characteristic of the control principle can be edited in <i>1-55 U/f Characteristic - U</i> and <i>1-56 U/f Characteristic - F</i> . |
| [1] | VVC+ | Voltage Vector Control principle suitable for most applications. The main benefit of VVC ^{plus} operation is that it uses a robust motor model. |
| [2] | Flux sensorless | Flux Vector control without encoder feedback, for simple installation and robustness against sudden load changes. FC 302 only. |
| [3] | Flux w/ motor feedb | very high accuracy speed and torque control, suitable for the most demanding applications. FC 302 only. |

The best shaft performance is normally achieved using either of the two Flux Vector control modes *Flux sensorless* [2] and *Flux with encoder feedback* [3].

This parameter cannot be adjusted while the motor is running.

NOTE

An overview of possible combinations of the settings in *1-00 Configuration Mode* and *1-01 Motor Control Principle* can be found in *4.1.1 Conversion*.

| 1-02 Flux Motor Feedback Source | | |
|---------------------------------|--------------------|--|
| Option: | Function: | |
| | | Select the interface at which to receive feedback from the motor. |
| [0] | Motor feedb. P1-02 | |
| [1] * | 24V encoder | A and B channel encoder, which can be connected to the digital input terminals 32/33 only. Terminals 32/33 must be programmed to <i>No operation</i> . |
| [2] | MCB 102 | Encoder module option which can be configured in parameter group 17-1* FC 302 only. |
| [3] | MCB 103 | Optional resolver interface module which can be configured in parameter group 17-5* |
| [4] | MCO Encoder 1 X56 | Encoder interface 1 of the optional programmable motion controller MCO 305. |
| [5] | MCO Encoder 2 X55 | encoder interface 2 of the optional programmable motion controller MCO 305. |
| [6] | Analog input 53 | |

| 1-02 Flux Motor Feedback Source | | |
|---------------------------------|--------------------|--|
| Option: | Function: | |
| [7] | Analog input 54 | |
| [8] | Frequency input 29 | |
| [9] | Frequency input 33 | |

This parameter cannot be adjusted while the motor is running.

| 1-03 Torque Characteristics | | |
|-----------------------------|--------------------|---|
| Option: | Function: | |
| | | Select the torque characteristic required. VT and AEO are both energy saving operations. |
| [0] | Constant torque | Motor shaft output provides constant torque under variable speed control. |
| [1] | Variable torque | Motor shaft output provides variable torque under variable speed control. Set the variable torque level in 14-40 VT Level. |
| [2] | Auto Energy Optim. | Automatically optimises energy consumption by minimising magnetisation and frequency via 14-41 AEO Minimum Magnetisation and 14-42 Minimum AEO Frequency. |
| [5] | Constant Power | <p>The function provides a constant power in the field weakening area.</p> <p>The torque shape of motor mode is used as a limit in the generative mode. This is done to limit the power in generative mode that otherwise becomes considerable larger than in motor mode, due to the high DC link voltage available in generative mode.</p> $P_{shaft}[W] = \omega_{mech}[\text{rad} / \text{s}] \times T[\text{Nm}]$ <p>This relationship with the constant power is illustrated in the following graph:</p> |

This parameter cannot be adjusted while the motor is running.

| 1-04 Overload Mode | | |
|--------------------|---------------|--|
| Option: | Function: | |
| [0] | High torque | Allows up to 160% over torque. |
| [1] | Normal torque | For oversized motor - allows up to 110% over torque. |

This parameter cannot be adjusted while the motor is running.

| 1-05 Local Mode Configuration | | |
|-------------------------------|-------------------|---|
| Option: | Function: | |
| | | Select which application configuration mode (1-00 Configuration Mode), i.e. application control principle, to use when a Local (LCP) Reference is active. A Local Reference can be active only when 3-13 Reference Site is set to [0] or [2]. By default the local reference is active in Hand Mode only. |
| [0] | Speed open loop | |
| [1] | Speed closed loop | |
| [2] | As mode par 1-00 | |

| 1-06 Clockwise Direction | | |
|--------------------------|-----------|---|
| Option: | Function: | |
| [0] | Normal | Motor shaft will turn in clockwise direction when the frequency converter is connected U -> U; V -> V, and W -> W to motor. |
| [1] | Inverse | Motor shaft will turn in counter clockwise direction when the frequency converter is connected U -> U; V -> V, and W -> W to motor. |

This parameter cannot be changed while the motor is running.

3.3.2 1-1* Motor Selection

This parameter group cannot be adjusted while the motor is running.

| 1-10 Motor Construction | | |
|-------------------------|---------------------|---|
| Option: | Function: | |
| | | Select the motor construction type. |
| [0] | Asynchron | For asynchronous motors. |
| [1] | PM, non salient SPM | For permanent magnet (PM) motors. Note that PM motors are divided into two groups, with either surface mounted (non salient) or interior (salient) magnets. |

Motor construction can either be asynchronous or permanent magnet (PM) motor.

3.3.3 1-2* Motor Data

Parameter group 1-2* comprises input data from the nameplate on the connected motor.

NOTE

Changing the value of these parameters affects the setting of other parameters.

| 1-20 Motor Power [kW] | | |
|------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the nominal motor power in kW according to the motor nameplate data. The default value corresponds to the nominal rated output of the unit. This parameter cannot be adjusted while the motor is running. This parameter is visible in LCP if <i>0-03 Regional Settings</i> is <i>International</i> [0]. NOTE Four sizes down, one size up from nominal unit rating. |

| 1-21 Motor Power [HP] | | |
|------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the nominal motor power in HP according to the motor nameplate data. The default value corresponds to the nominal rated output of the unit. This parameter is visible in LCP if <i>0-03 Regional Settings</i> is <i>US</i> [1] |

| 1-22 Motor Voltage | | |
|------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the nominal motor voltage according to the motor nameplate data. The default value corresponds to the nominal rated output of the unit. |

| 1-23 Motor Frequency | | |
|------------------------|----------------|--|
| Range: | | Function: |
| Application dependent* | [20 - 1000 Hz] | Min - Max motor frequency: 20 - 1000Hz. Select the motor frequency value from the motor nameplate data. If a value different from 50Hz or 60Hz is selected, it is necessary to adapt the load independent settings in <i>1-50 Motor Magnetisation at Zero Speed</i> to <i>1-53 Model Shift Frequency</i> . |

| 1-23 Motor Frequency | | |
|----------------------|--|--|
| Range: | | Function: |
| | | For 87Hz operation with 230/400V motors, set the nameplate data for 230V/50Hz. Adapt <i>4-13 Motor Speed High Limit [RPM]</i> and <i>3-03 Maximum Reference</i> to the 87Hz application. |

| 1-24 Motor Current | | |
|------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the nominal motor current value from the motor nameplate data. The data are used for calculating torque, motor protection etc. |

| 1-25 Motor Nominal Speed | | |
|--------------------------|------------------|---|
| Range: | | Function: |
| Application dependent* | [10 - 60000 RPM] | Enter the nominal motor speed value from the motor nameplate data. The data are used for calculating motor compensations. |

| 1-26 Motor Cont. Rated Torque | | |
|-------------------------------|--------------------|---|
| Range: | | Function: |
| Application dependent* | [0.1 - 10000.0 Nm] | Enter the value from the motor nameplate data. The default value corresponds to the nominal rated output. This parameter is available when <i>1-10 Motor Construction</i> is set to <i>PM, non salient SPM</i> [1], i.e. the parameter is valid for PM and non-salient SPM motors only. |

| 1-29 Automatic Motor Adaptation (AMA) | | |
|---------------------------------------|---|--|
| Option: | Function: | |
| | The AMA function optimises dynamic motor performance by automatically optimising the advanced motor parameters (<i>1-30 Stator Resistance (Rs)</i> to <i>1-35 Main Reactance (Xh)</i>) at motor standstill. Activate the AMA function by pressing [Hand on] after selecting [1] or [2]. See also the section <i>Automatic Motor Adaptation</i> in the Design Guide. After a normal sequence, the display will read: "Press [OK] to finish AMA". After pressing the [OK] key the frequency converter is ready for operation. This parameter cannot be adjusted while the motor is running. | |
| [0] | Off | |
| * | | |

| 1-29 Automatic Motor Adaptation (AMA) | | |
|---------------------------------------|---------------------|---|
| Option: | Function: | |
| [1] | Enable complete AMA | Performs AMA of the stator resistance R_s , the rotor resistance R_r , the stator leakage reactance X_1 , the rotor leakage reactance X_2 and the main reactance X_h . Do <i>not</i> select this option if an LC filter is used between the frequency converter and the motor. FC 301: The Complete AMA does not include X_h measurement for FC 301. Instead, the X_h value is determined from the motor database. R_s is the best adjustment method (see 1-3* Adv. Motor Data). T4/T5 E and F Frames, T7 D, E and F Frames will only run a Reduced AMA when the complete AMA is selected. It is recommended to obtain the Advanced Motor Data from the motor manufacturer to enter into 1-31 Rotor Resistance (R_r) through 1-36 Iron Loss Resistance (R_{fe}) for best performance. |
| [2] | Enable reduced AMA | Performs a reduced AMA of the stator resistance R_s in the system only. |

Note:

- For the best adaptation of the frequency converter, run AMA on a cold motor.
- AMA cannot be performed while the motor is running.
- AMA cannot be performed on permanent magnet motors.

NOTE

It is important to set motor parameter group 1-2* correctly, since these form part of the AMA algorithm. An AMA must be performed to achieve optimum dynamic motor performance. It may take up to 10 min, depending on the power rating of the motor.

NOTE

Avoid generating external torque during AMA.

NOTE

If one of the settings in parameter group 1-2* is changed, 1-30 Stator Resistance (R_s) to 1-39 Motor Poles, the advanced motor parameters, will return to default setting.

NOTE

AMA will work problem-free on 1 motor size down, typically work on 2 motor sizes down, rarely work on 3 sizes down and never work on 4 sizes down. Please keep in mind that the accuracy of the measured motor data will be poorer when you operate on motors smaller than nominal VLT size.

3.3.4 1-3* Adv. Motor Data

Parameters for advanced motor data. The motor data in 1-30 Stator Resistance (R_s) to 1-39 Motor Poles must match the relevant motor in order to run the motor optimally. The default settings are figures based on common motor parameter values from standard motors. If the motor parameters are not set correctly, a malfunction of the frequency converter system may occur. If the motor data is not known, running an AMA (Automatic Motor Adaptation) is recommended. See the Automatic Motor Adaptation section in the Design Guide. The AMA sequence will adjust all motor parameters except the moment of inertia of the rotor and the iron loss resistance (1-36 Iron Loss Resistance (R_{fe})).

Parameter groups 1-3* and 1-4* cannot be adjusted while the motor is running.

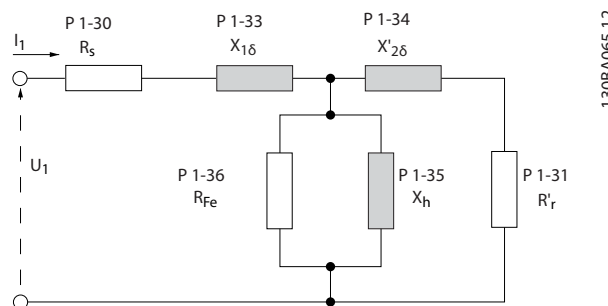


Illustration 3.1 Motor equivalent diagram for an asynchronous motor

NOTE

A simple check of the $X_1 + X_h$ sum value is to divide the line to line motor voltage by the $\sqrt{3}$ and divide this value by the motor no load current. $[V_L - L / \sqrt{3}] / I_{NL} = X_1 + X_h$. These values are important to properly magnetize the motor. For high pole motors it is highly recommended to perform this check.

| 1-30 Stator Resistance (R_s) | | |
|----------------------------------|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Set the stator resistance value. Enter the value from a motor data sheet or perform an AMA on a cold motor. |

| 1-31 Rotor Resistance (R_r) | | |
|---------------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Fine-tuning R_r will improve shaft performance. Set the rotor resistance value using one of these methods: 1. Run an AMA on a cold motor. The frequency |

| 1-31 Rotor Resistance (Rr) | | |
|----------------------------|--|--|
| Range: | | Function: |
| | | converter will measure the value from the motor. All compensations are reset to 100%. |
| | | 2. Enter the R _r value manually. Obtain the value from the motor supplier. |
| | | 3. Use the R _r default setting. The frequency converter establishes the setting on the basis of the motor nameplate data. |

| 1-33 Stator Leakage Reactance (X1) | | |
|------------------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Set the stator leakage reactance of the motor using one of these methods: |
| | | 1. Run an AMA on a cold motor. The frequency converter will measure the value from the motor. |
| | | 2. Enter the X ₁ value manually. Obtain the value from the motor supplier. |
| | | 3. Use the X ₁ default setting. The frequency converter establishes the setting on the basis of the motor name plate data. |

| 1-34 Rotor Leakage Reactance (X2) | | |
|-----------------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Set the rotor leakage reactance of the motor using one of these methods: |
| | | 1. Run an AMA on a cold motor. The frequency converter will measure the value from the motor. |
| | | 2. Enter the X ₂ value manually. Obtain the value from the motor supplier. |
| | | 3. Use the X ₂ default setting. The frequency converter establishes the setting on the basis of the motor name plate data. |

| 1-35 Main Reactance (Xh) | | |
|--------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Set the main reactance of the motor using one of these methods: |
| | | 1. Run an AMA on a cold motor. The frequency converter will measure the value from the motor. |
| | | 2. Enter the X _h value manually. Obtain the value from the motor supplier. |
| | | 3. Use the X _h default setting. The frequency converter establishes the setting on the basis of the motor name plate data. |

| 1-36 Iron Loss Resistance (Rfe) | | |
|---------------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the equivalent iron loss resistance (R _{Fe}) value to compensate for iron loss in the motor. |
| | | The R _{Fe} value cannot be found by performing an AMA. |
| | | The R _{Fe} value is especially important in torque control applications. If R _{Fe} is unknown, leave <i>1-36 Iron Loss Resistance (Rfe)</i> on default setting. |

| 1-37 d-axis Inductance (Ld) | | |
|-----------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the value of the d-axis inductance. Obtain the value from the permanent magnet motor data sheet. |
| | | This parameter is only active when <i>1-10 Motor Construction</i> has the value <i>PM, non-salient SPM</i> [1] (Permanent Magnet Motor). |
| | | For a selection with one decimal, use this parameter. For a selection with three decimals, use <i>30-80 d-axis Inductance (Ld)</i> . FC 302 only. |

| 1-39 Motor Poles | | |
|------------------------|-----------|----------------------------------|
| Range: | | Function: |
| Application dependent* | [2 - 100] | Enter the number of motor poles. |

3

The table shows the number of poles for normal speed ranges of various motor types. Define motors designed for other frequencies separately. The motor pole value is always an even number, because it refers to the total number of poles, not pairs of poles. The frequency converter creates the initial setting of 1-39 Motor Poles based on 1-23 Motor Frequency and 1-25 Motor Nominal Speed.

| Poles | ~n _n @ 50Hz | ~n _n @60Hz |
|-------|------------------------|-----------------------|
| 2 | 2700 - 2880 | 3250 - 3460 |
| 4 | 1350 - 1450 | 1625 - 1730 |
| 6 | 700 - 960 | 840 - 1153 |

| 1-40 Back EMF at 1000 RPM | | |
|--|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Set the nominal back EMF for the motor when running at 1000 RPM. This parameter is only active when 1-10 Motor Construction is set to PM motor [1] (Permanent Magnet Motor). FC 302 only. |
| <p>NOTE When using PM motors, it is recommended to use brake resistors.</p> | | |

| 1-41 Motor Angle Offset | | |
|-------------------------|---|--|
| Range: | Function: | |
| 0* [-32768 - 32767] | Enter the correct offset angle between the PM motor and the index position (single-turn) of the attached encoder or resolver. The value range of 0 - 32768 corresponds to 0 - 2 * pi (radians). To obtain the offset angle value: After frequency converter start-up apply DC-hold and enter the value of 16-20 Motor Angle into this parameter. This parameter is only active when 1-10 Motor Construction is set to PM, non-salient SPM [1] (Permanent Magnet Motor). | |

3.3.5 1-5* Load Indep. Setting



| 1-50 Motor Magnetisation at Zero Speed | | |
|--|--|--|
| Range: | Function: | |
| 100 %* [0 - 300 %] | Use this parameter along with 1-51 Min Speed Normal Magnetising [RPM] to obtain a different thermal load on the motor when running at low speed. Enter a value which is a percentage of the rated magnetizing current. If the setting is too low, the torque on the motor shaft may be reduced. | |

| 1-50 Motor Magnetisation at Zero Speed | | |
|--|-----------|--|
| Range: | Function: | |
| | | |

| 1-51 Min Speed Normal Magnetising [RPM] | | |
|---|--|--|
| Range: | Function: | |
| Size related* [10 - 300 RPM] | Set the required speed for normal magnetising current. If the speed is set lower than the motor slip speed, 1-50 Motor Magnetisation at Zero Speed and 1-51 Min Speed Normal Magnetising [RPM] are of no significance. Use this parameter along with 1-50 Motor Magnetisation at Zero Speed. See drawing for 1-50 Motor Magnetisation at Zero Speed. | |

| 1-52 Min Speed Normal Magnetising [Hz] | | |
|--|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Set the required frequency for normal magnetising current. If the frequency is set lower than the motor slip frequency, 1-50 Motor Magnetisation at Zero Speed is inactive. Use this parameter along with 1-50 Motor Magnetisation at Zero Speed. See drawing for 1-50 Motor Magnetisation at Zero Speed. |


| 1-53 Model Shift Frequency | | |
|----------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | <p>Flux Model shift Enter the frequency value for shift between two models for determining motor speed. Choose the value based on settings in 1-00 Configuration Mode and 1-01 Motor Control Principle. There are two options: shift between Flux model 1 and Flux model 2; or shift between Variable Current mode and Flux model 2.FC 302 only. This parameter cannot be adjusted while the motor is running.</p> <p>Flux Model 1 – Flux model 2 This model is used when 1-00 Configuration Mode is set to Speed closed loop [1] or Torque [2] and 1-01 Motor</p> |
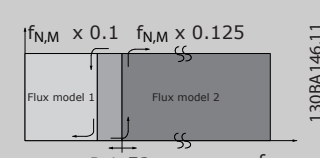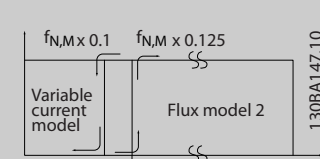
| 1-53 Model Shift Frequency | | |
|----------------------------|--|--|
| Range: | Function: | |
| | <p>Control Principle is set to Flux w/motor feedback [3]. With this parameter it is possible to make an adjustment of the shifting point where FC 302 changes between Flux model 1 and Flux model 2, which is useful in some sensitive speed and torque control applications.</p>  <p>Illustration 3.2 1-00 Configuration Mode = [1] Speed closed loop or [2] Torque and 1-01 Motor Control Principle = [3] Flux w/motor feedback</p> <p>Variable Current - Flux model - Sensorless</p> <p>This model is used when 1-00 Configuration Mode is set to Speed open loop [0] and 1-01 Motor Control Principle is set to Flux sensorless [2]. In speed open loop in flux mode, the speed is determined from the current measurement. Below $f_{norm} \times 0.1$, the frequency converter runs on a Variable Current model. Above $f_{norm} \times 0.125$ the frequency converter runs on a Flux model.</p>  <p>Illustration 3.3 1-00 Configuration Mode = [0] Speed open loop, 1-01 Motor Control Principle = [2] Flux sensorless</p> | |

| 1-54 Voltage reduction in fieldweakening | | |
|--|-------------|--|
| Range: | Function: | |
| 0 V* | [0 - 100 V] | The value of this parameter will reduce the maximal voltage available for the flux of the motor in fieldweakening, giving more voltage available for torque. Be aware that too high value may give stall problems at high speed. |

| 1-55 U/f Characteristic - U | | |
|-----------------------------|------------------|---|
| Range: | Function: | |
| Application dependent* | [0.0 - 1000.0 V] | Enter the voltage at each frequency point to manually form a U/f characteristic matching the motor. The frequency points are defined in 1-56 U/f Characteristic - F. This parameter is an array parameter [0-5] and is only accessible when 1-01 Motor Control Principle is set to U/f [0]. |

| 1-56 U/f Characteristic - F | | |
|-----------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the frequency points to manually form a U/f-characteristic matching the motor. The voltage at each point is defined in 1-55 U/f Characteristic - U. This parameter is an array parameter [0-5] and is only accessible when 1-01 Motor Control Principle is set to U/f [0]. |

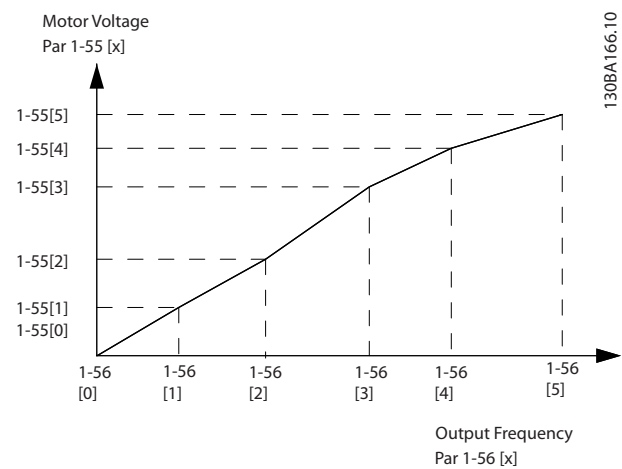

| 1-58 Flystart Test Pulses Current | | |
|-----------------------------------|-------------|---|
| Range: | Function: | |
| 30 %* | [0 - 200 %] | Control the percentage of the magnetizing current for the pulses used to detect the motor direction. Reducing this value will reduce the generated torque. 100% means nominal motor current. The parameter is active when 1-73 Flying Start is enabled. This parameter is only available in VVC ^{plus} . |

| 1-59 Flystart Test Pulses Frequency | | |
|-------------------------------------|-------------|--|
| Range: | Function: | |
| 200 %* | [0 - 500 %] | Control the percentage of the frequency for the pulses used to detect the motor direction. Increasing this value will reduce the generated |


1-59 Flystart Test Pulses Frequency

| Range: | Function: |
|--------|--|
| | torque. 100% means 2 times the slip frequency. The parameter is active when <i>1-73 Flying Start</i> is enabled. This parameter is only available in VVC ^{plus} . |

3.3.6 1-6* Load Depend. Setting
1-60 Low Speed Load Compensation

| Range: | Function: |
|--------------------|--|
| 100 %* [0 - 300 %] | Enter the % value to compensate voltage in relation to load when the motor is running at low speed and obtain the optimum U/f characteristic. The motor size determines the frequency range within which this parameter is active. |

| Motor size | Change over |
|----------------|-------------|
| 0.25kW - 7.5kW | < 10Hz |

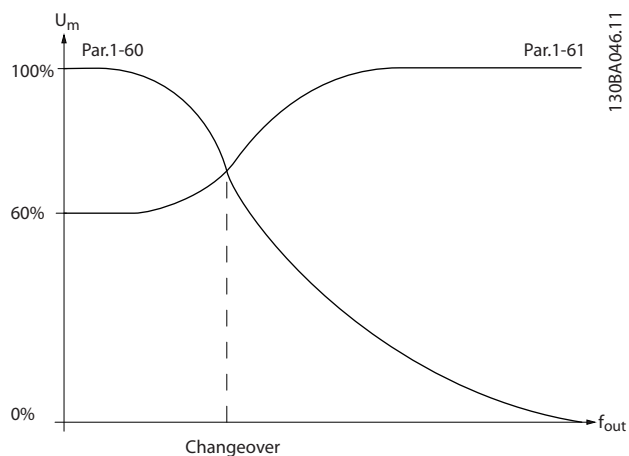
1-61 High Speed Load Compensation

| Range: | Function: |
|--------------------|---|
| 100 %* [0 - 300 %] | Enter the % value to compensate voltage in relation to load when the motor is running at high speed and obtain the optimum U/f characteristic. The motor size determines the frequency range within which this parameter is active. |

| Motor size | Change-over |
|----------------|-------------|
| 0.25kW - 7.5kW | > 10Hz |

1-62 Slip Compensation

| Range: | Function: |
|---------------------------------------|---|
| Application dependent* [-500 - 500 %] | Enter the % value for slip compensation, to compensate for tolerances in the value of $n_{m,N}$. Slip compensation is calculated |

1-62 Slip Compensation

| Range: | Function: |
|--------|---|
| | automatically, i.e. on the basis of the rated motor speed $n_{m,N}$. This function is not active when <i>1-00 Configuration Mode</i> is set to <i>Speed closed loop</i> [1] or <i>Torque</i> [2] Torque control with speed feedback or when <i>1-01 Motor Control Principle</i> is set to <i>U/f</i> [0] special motor mode. |

1-63 Slip Compensation Time Constant

| Range: | Function: |
|-------------------------------|---|
| Size related* [0.05 - 5.00 s] | Enter the slip compensation reaction speed. A high value results in slow reaction, and a low value results in quick reaction. If low-frequency resonance problems arise, use a longer time setting. |

1-64 Resonance Dampening

| Range: | Function: |
|--------------------|--|
| 100 %* [0 - 500 %] | Enter the resonance dampening value. Set <i>1-64 Resonance Dampening</i> and <i>1-65 Resonance Dampening Time Constant</i> to help eliminate high-frequency resonance problems. To reduce resonance oscillation, increase the value of <i>1-64 Resonance Dampening</i> . |

1-65 Resonance Dampening Time Constant

| Range: | Function: |
|-------------------|--|
| 5 ms* [5 - 50 ms] | Set <i>1-64 Resonance Dampening</i> and <i>1-65 Resonance Dampening Time Constant</i> to help eliminate high-frequency resonance problems. Enter the time constant that provides the best dampening. |

1-66 Min. Current at Low Speed

| Range: | Function: |
|--------------------------------|---|
| 100 %* [Application dependant] | Enter the minimum motor current at low speed, see <i>1-53 Model Shift Frequency</i> . Increasing this current improves motor torque at low speed. <i>1-66 Min. Current at Low Speed</i> is enabled when <i>1-00 Configuration Mode</i> = <i>Speed open loop</i> [0] only. The frequency converter runs with constant current through motor for speeds below 10Hz. For speeds above 10Hz, the motor flux model in the frequency converter controls the motor. <i>4-16 Torque Limit Motor Mode</i> and / or <i>4-17 Torque Limit Generator Mode</i> automatically adjust <i>1-66 Min. Current at Low Speed</i> . The parameter with the highest |

| 1-66 Min. Current at Low Speed | | |
|--------------------------------|--|--|
| Range: | | Function: |
| | | value adjusts <i>1-66 Min. Current at Low Speed</i> . The current setting in <i>1-66 Min. Current at Low Speed</i> is composed of the torque generating current and the magnetizing current. Example: Set <i>4-16 Torque Limit Motor Mode</i> to 100% and set <i>4-17 Torque Limit Generator Mode</i> to 60%. <i>1-66 Min. Current at Low Speed</i> automatically adjusts to about 127%, depending on the motor size. FC 302 only. |

| 1-67 Load Type | | |
|----------------|--------------|---|
| Option: | | Function: |
| [0] * | Passive load | For conveyers, fan and pump applications. |
| [1] | Active load | For hoisting applications, used in slip compensation at low speed. When <i>Active Load</i> [1] is selected, set <i>1-66 Min. Current at Low Speed</i> to a level which corresponds to maximum torque. |

FC 302 only.

| 1-68 Minimum Inertia | | |
|------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Needed for average inertia calculation. Enter the minimum moment of inertia of the mechanical system. <i>1-68 Minimum Inertia</i> and <i>1-69 Maximum Inertia</i> are used for pre-adjustment of the Proportional Gain in the speed control, see <i>30-83 Speed PID Proportional Gain</i> . FC 302 only. |

This parameter cannot be adjusted while motor is running.

| 1-69 Maximum Inertia | | |
|------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Active in Flux Open Loop only. Used to compute the acceleration torque at low speed. Used in the torque limit controller. FC 302 only. |

This parameter cannot be adjusted while motor is running.

3.3.7 1-7* Start Adjustments

| 1-71 Start Delay | | |
|------------------|----------------|--|
| Range: | | Function: |
| 0.0 s* | [0.0 - 25.5 s] | This parameter refers to the start function selected in <i>1-72 Start Function</i> . Enter the time delay required before commencing acceleration. |

| 1-72 Start Function | | |
|---------------------|----------------------|---|
| Option: | | Function: |
| | | Select the start function during start delay. This parameter is linked to <i>1-71 Start Delay</i> . |
| [0] | DC Hold/ delay time | Energizes motor with a DC holding current (<i>2-00 DC Hold Current</i>) during the start delay time. |
| [1] | DC Brake/ delay time | Energizes motor with a DC braking current (<i>2-01 DC Brake Current</i>) during the start delay time. |
| [2] | Coast/delay time * | Motor coasted during the start delay time (inverter off). |
| [3] | Start speed cw | Only possible with VVC ^{plus} . Connect the function described in <i>1-74 Start Speed [RPM]</i> and <i>1-76 Start Current</i> in the start delay time. Regardless of the value applied by the reference signal, the output speed applies the setting of the start speed in <i>1-74 Start Speed [RPM]</i> or <i>1-75 Start Speed [Hz]</i> and the output current corresponds to the setting of the start current in <i>1-76 Start Current</i> . This function is typically used in hoisting applications without counterweight and especially in applications with a Cone-motor, where the start is clockwise, followed by rotation in the reference direction. |
| [4] | Horizontal operation | Only possible with VVC ^{plus} . For obtaining the function described in <i>1-74 Start Speed [RPM]</i> and <i>1-76 Start Current</i> during the start delay time. The motor rotates in the reference direction. If the reference signal equals zero (0), <i>1-74 Start Speed [RPM]</i> is ignored and the output speed equals zero (0). The output current corresponds to the setting of the start current in <i>1-76 Start Current</i> . |
| [5] | VVC+/Flux clockwise | for the function described in <i>1-74 Start Speed [RPM]</i> only. The start current is calculated automatically. This function uses the start speed in the start delay time only. Regardless of the value set by the reference signal, the output speed equals the setting of the start speed in <i>1-74 Start Speed [RPM]</i> . <i>Start speed/ current clockwise</i> [3] and <i>VVC^{plus}/Flux clockwise</i> [5] are typically used in hoisting applications. |

| 1-72 Start Function | | |
|---------------------|-----------------------|--|
| Option: | Function: | |
| | | <i>Start speed/current in reference direction [4] is particularly used in applications with counter-weight and horizontal movement.</i> |
| [6] | Hoist Mech. Brake Rel | For utilizing mechanical brake control functions, 2-24 <i>Stop Delay</i> to 2-28 <i>Gain Boost Factor</i> . This parameter is only active when 1-01 <i>Motor Control Principle</i> is set to [3] <i>Flux w/ motor feedback (FC 302 only)</i> . |
| [7] | VVC+/Flux counter-cw | |

| 1-73 Flying Start | | |
|-------------------|------------------------|---|
| Option: | Function: | |
| | | This function makes it possible to catch a motor which is spinning freely due to a mains drop-out. |
| [0] * | Disabled | No function |
| [1] | Enabled | Enables the frequency converter to "catch" and control a spinning motor. When 1-73 <i>Flying Start</i> is enabled, 1-71 <i>Start Delay</i> and 1-72 <i>Start Function</i> have no function. |
| [2] | Enabled Always | |
| [3] | Enabled Ref. Dir. | |
| [4] | Enab. Always Ref. Dir. | |

This parameter cannot be adjusted while motor is running.

NOTE

This function is not recommended for hoisting applications. For power levels above 55kW, flux mode must be used to achieve the best performance.

NOTE

To obtain the best flying start performance the advanced motor data, parameters 1-30 through 1-35, must be correct.

| 1-74 Start Speed [RPM] | | |
|------------------------|---------------|--|
| Range: | Function: | |
| Application dependent* | [0 - 600 RPM] | Set a motor start speed. After the start signal, the output speed leaps to set value. Set the start function in 1-72 <i>Start Function</i> to [3], [4] or [5], and set a start delay time in 1-71 <i>Start Delay</i> . |

| 1-75 Start Speed [Hz] | | |
|------------------------|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | This parameter can be used for hoist applications (cone rotor). Set |

| 1-75 Start Speed [Hz] | | |
|-----------------------|-----------|--|
| Range: | Function: | |
| | | a motor start speed. After the start signal, the output speed leaps to set value. Set the start function in 1-72 <i>Start Function</i> to [3], [4] or [5], and set a start delay time in 1-71 <i>Start Delay</i> . |

| 1-76 Start Current | | |
|--------------------|-------------------------|---|
| Range: | Function: | |
| 0.00 A* | [Application dependant] | Some motors, e.g. cone rotor motors, need extra current/starting speed to disengage the rotor. To obtain this boost, set the required current in 1-76 <i>Start Current</i> . Set 1-74 <i>Start Speed [RPM]</i> . Set 1-72 <i>Start Function</i> to [3] or [4], and set a start delay time in 1-71 <i>Start Delay</i> . This parameter can be used for hoist applications (cone rotor). |

3.3.8 1-8* Stop Adjustments

| 1-80 Function at Stop | | |
|-----------------------|-----------------|--|
| Option: | Function: | |
| | | Select the frequency converter function after a stop command or after the speed is ramped down to the settings in 1-81 <i>Min Speed for Function at Stop [RPM]</i> . |
| [0] * | Coast | Leaves motor in free mode. The motor is disconnected from the frequency converter. |
| [1] | DC hold | Energizes motor with a DC holding current (see 2-00 <i>DC Hold Current</i>). |
| [2] | Motor check | Checks if a motor has been connected. |
| [3] | Pre-magnetizing | Builds up a magnetic field while the motor is stopped. This allows the motor to produce torque quickly at subsequent start commands (asynchronous motors only). This Pre-magnetizing function does not help the very first start command. Two different solutions are available to pre-magnetize the machine for the first start command: <ol style="list-style-type: none"> 1. Start the drive with a 0 RPM reference and wait 2 to 4 rotor time constants (see below) before increasing the speed reference. 2a. Set par 1-71 <i>Start Delay</i> to the desired pre-mag time (2 to 4 rotor time constants - see below). 2b. Set par 1-72 to either [0] DC-hold or [1] DC-Brake. |

| 1-80 Function at Stop | | |
|-----------------------|------------------------|---|
| Option: | Function: | |
| | | Set the DC-hold or DC-brake current magnitude (2-00 or 2-01) to be equal to $I_{pre-mag} = U_{nom} / (1.73 \times X_h)$ Sample rotor time constants = $(X_h + X_2) / (6.3 \times Freq_{nom} \times R_r)$ 1kW = 0.2 seconds 10kW = 0.5 seconds 100kW = 1.7 seconds 1000kW = 2.5 seconds |
| [4] | DC Voltage U0 | When the motor is stopped, the P1-55 [0] parameter defines the voltage at 0Hz. |
| [5] | Coast at low reference | When the reference is below <i>1-81 Min Speed for Function at Stop [RPM]</i> , the motor is disconnected from the frequency converter. |

| 1-81 Min Speed for Function at Stop [RPM] | | |
|---|---------------|---|
| Range: | Function: | |
| Size related* | [0 - 600 RPM] | Set the speed at which to activate <i>1-80 Function at Stop</i> . |

| 1-82 Min Speed for Function at Stop [Hz] | | |
|--|-----------------|--|
| Range: | Function: | |
| Size related* | [0.0 - 20.0 Hz] | Set the output frequency at which to activate <i>1-80 Function at Stop</i> . |

The Precise Stop Functions are advantageous in applications where high precision is required.

If you use a standard stop command the accuracy is determined by the internal task time. That is not the case when you use the precise stop function; it eliminates the task time dependence and increases the accuracy substantially. The frequency converter tolerance is normally given by its task time. However, by using its special precise stop function the tolerance is independent of the task time because the stop signal immediately interrupts the execution of the frequency converter program. The precise stop function gives a highly reproducible delay from the stop signal is given until the ramping down starts. A test must be done to find this delay as it is a sum of sensor, PLC, FC and mechanical parts.

To ensure optimum accuracy there should be at least 10 cycles during ramping down, see *3-42 Ramp 1 Ramp Down Time*, *3-52 Ramp 2 Ramp down Time*, *3-62 Ramp 3 Ramp down Time* and *3-72 Ramp 4 Ramp Down Time*.

The Precise Stop Function is set up here and enabled from DI T29 or T33.

| 1-83 Precise Stop Function | | |
|----------------------------|-------------------|--|
| Option: | Function: | |
| [0] | Precise ramp stop | Only optimal when the operational speed - of e.g. the conveyor belt - is constant. This is an open |

| 1-83 Precise Stop Function | | |
|----------------------------|---------------------|--|
| Option: | Function: | |
| | | loop control. Achieves high repetitive precision at the stopping point. |
| [1] | Cnt stop with reset | Counts the number of pulses, typically from an encoder and generates a stop signal after a pre-programmed number of pulses - <i>1-84 Precise Stop Counter Value</i> - has been received at T29 or T33 [30]. This is a direct feedback with one-way closed loop control. The counter function is activated (starts timing) at the edge of the start signal (when it changes from stop to start). After each precise stop the number of pulses counted during ramp down to 0 rpm is reset. |
| [2] | Cnt stop w/o reset | Same as [1] but the number of pulses counted during ramp down to 0 rpm is deducted from the counter value entered in <i>1-84 Precise Stop Counter Value</i> . You can for example use this reset function to compensate for the extra distance done during ramping down and to reduce the impacts of gradual wear of mechanical parts. |
| [3] | Speed comp stop | Stops at precisely the same point, regardless of the present speed, the stop signal is delayed internally when the present speed is lower than the maximum speed (set in <i>4-19 Max Output Frequency</i>). The delay is calculated on the basis of the reference speed of the frequency converter and not on the basis of the actual speed. Please therefore make sure that the frequency converter has ramped up before you activate the speed compensated stop. |
| [4] | Com cnt stop w/rst | Same as [3] but after each precise stop the number of pulses counted during ramp down to 0 rpm is reset. |
| [5] | Comp cnt stop w/o r | Same as [3] but the number of pulses counted during ramp down to 0 rpm is deducted from the counter value entered in <i>1-84 Precise Stop Counter Value</i> . You can for example use this reset function to compensate for the extra distance done during ramping down and to reduce the impacts of gradual wear of mechanical parts. |

This parameter cannot be adjusted while the motor is running.

| 1-84 Precise Stop Counter Value | | |
|---------------------------------|----------------|---|
| Range: | Function: | |
| 100000* | [0 - 99999999] | Enter the counter value to be used in the integrated precise stop function, <i>1-83 Precise Stop Function</i> . |

| 1-84 Precise Stop Counter Value | | |
|---------------------------------|--|--|
| Range: | | Function: |
| | | The maximum permissible frequency at terminal 29 or 33 is 110kHz. Not used for selection [0] and [3] in <i>1-83 Precise Stop Function</i> |

| 1-85 Precise Stop Speed Compensation Delay | | |
|--|--------------|---|
| Range: | | Function: |
| 10 ms* | [0 - 100 ms] | Enter the delay time for sensors, PLCs, etc. for use in <i>1-83 Precise Stop Function</i> . In speed compensated stop mode, the delay time at different frequencies has a major influence on the stop function. Not used for selection [0], [1] and [2] in <i>1-83 Precise Stop Function</i> |

3.3.9 1-9* Motor Temperature

| 1-90 Motor Thermal Protection | | |
|-------------------------------|---|--|
| Option: | Function: | |
| | Thermal motor protection can be implemented using a range of techniques: <ul style="list-style-type: none"> Via a PTC sensor in the motor windings connected to one of the analog or digital inputs (<i>1-93 Thermistor Source</i>). See <i>3.3.1.1 PTC Thermistor Connection</i>. Via a KTY sensor in the motor winding connected to an analog input (<i>1-96 KTY Thermistor Resource</i>). See <i>3.3.1.1 KTY Sensor Connection</i>. Via calculation (ETR = Electronic Thermal Relay) of the thermal load, based on the actual load and time. The calculated thermal load is compared with the rated motor current $I_{M,N}$ and the rated motor frequency $f_{M,N}$. See <i>3.3.1.1 ETR</i> and <i>3.3.1.1 ATEX ETR</i>. Via a mechanical thermal switch (Klixon type). See <i>3.3.1.1 Klixon</i>. For the North American market: The ETR functions provide class 20 motor overload protection in accordance with NEC. | |
| [0] * | No protection | Continuously overloaded motor, when no warning or trip of the frequency converter is required. |

| 1-90 Motor Thermal Protection | | |
|-------------------------------|--------------------|---|
| Option: | Function: | |
| [1] | Thermistor warning | Activates a warning when the connected thermistor or KTY-sensor in the motor reacts in the event of motor over-temperature. |
| [2] | Thermistor trip | Stops (trips) frequency converter when connected thermistor or KTY sensor in the motor reacts in the event of motor over-temperature. The thermistor cut-out value must be $> 3 \text{ k}\Omega$. Integrate a thermistor (PTC sensor) in the motor for winding protection. |
| [3] | ETR warning 1 | Calculates the load when set-up 1 is active and activates a warning on the display when the motor is overloaded. Programme a warning signal via one of the digital outputs. |
| [4] | ETR trip 1 | Calculates the load when set-up 1 is active and stops (trips) frequency converter when the motor is overloaded. Programme a warning signal via one of the digital outputs. The signal appears in the event of a warning and if the frequency converter trips (thermal warning). |
| [5] | ETR warning 2 | |
| [6] | ETR trip 2 | |
| [7] | ETR warning 3 | |
| [8] | ETR trip 3 | |
| [9] | ETR warning 4 | |
| [10] | ETR trip 4 | |
| [20] | ATEX ETR | Activates the thermal monitoring function for Ex-e motors for ATEX. Enables <i>1-94 ATEX ETR cur.lim. speed reduction</i> , <i>1-98 ATEX ETR interpol. points freq.</i> and <i>1-99 ATEX ETR interpol points current</i> . |
| [21] | Advanced ETR | |

NOTE

If [20] is selected, follow strictly the instructions described in the dedicated chapter of the VLT AutomationDrive design guide and the instructions given by the motor manufacturer.

NOTE

If [20] is selected, *4-18 Current Limit* must be set to 150%.

3.3.10.1 PTC Thermistor Connection

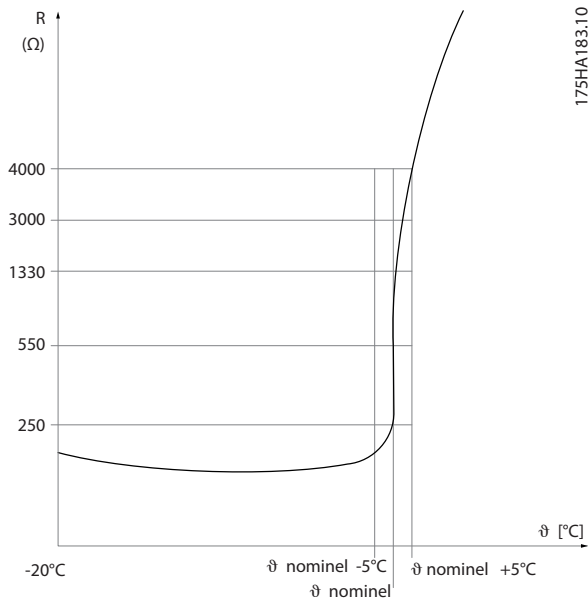



Illustration 3.4 PTC profile

Using a digital input and 10 V as power supply:
 Example: The frequency converter trips when the motor temperature is too high.

Parameter set-up:

Set 1-90 Motor Thermal Protection to *Thermistor Trip* [2]

Set 1-93 Thermistor Source to *Digital Input* [6]

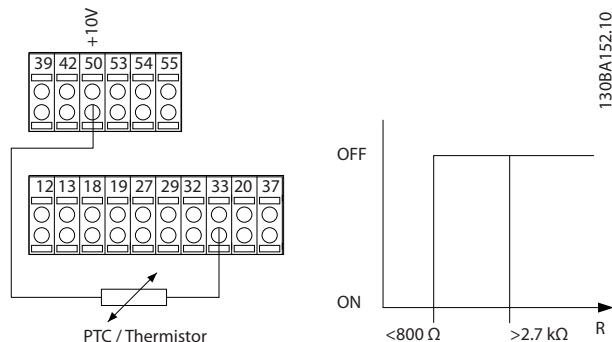


Using an analog input and 10 V as power supply:
 Example: The frequency converter trips when the motor temperature is too high.

Parameter set-up:

Set 1-90 Motor Thermal Protection to *Thermistor Trip* [2]

Set 1-93 Thermistor Source to *Analog Input 54* [2]

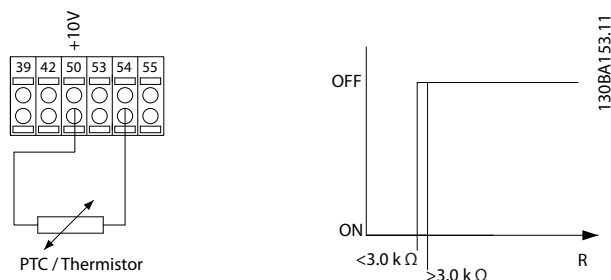

| Input | Supply Voltage | Threshold |
|----------------|----------------|--------------------|
| Digital/analog | | Cut-out Values |
| Digital | 10V | < 800Ω - > 2.7kΩ |
| Analog | 10V | < 3.0 kΩ - > 3.0kΩ |

NOTE

Check that the chosen supply voltage follows the specification of the used thermistor element.

3.3.10.2 KTY Sensor Connection

(FC 302 only)

KTY sensors are used especially in Permanent Magnet Servo Motors (PM motors) for dynamic adjusting of motor parameters as stator resistance (1-30 Stator Resistance (Rs)) for PM motors and also rotor resistance (1-31 Rotor Resistance (Rr)) for asynchronous motors, depending on winding temperature. The calculation is:

$$R_s = R_{s_{20^\circ C}} \times (1 + \alpha_{cu} \times \Delta T) [\Omega] \text{ where } \alpha_{cu} = 0.00393$$

KTY sensors can be used for motor protecting (1-97 KTY Threshold level).

FC 302 can handle three types of KTY sensors, defined in 1-95 KTY Sensor Type. The actual sensor temperature can be read out from 16-19 KTY sensor temperature.

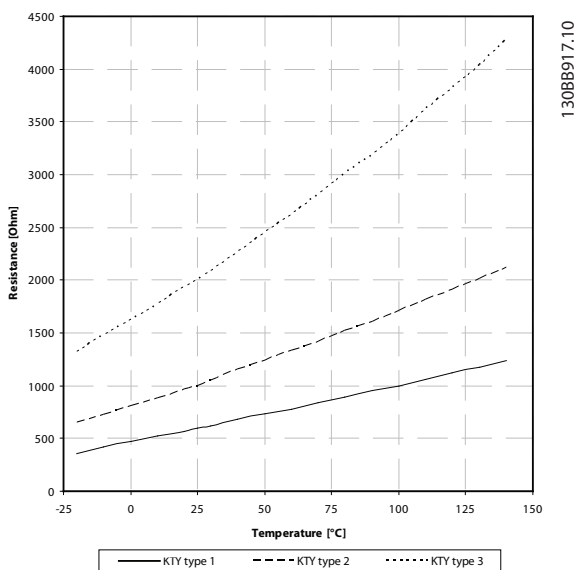


Illustration 3.5 KTY type selection

KTY Sensor 1: KTY 84-1 with 1kΩ at 100°C
 KTY Sensor 2: KTY 81-1, KTY 82-1 with 1kΩ at 25°C
 KTY Sensor 3: KTY 81-2, KTY 82-2 with 2kΩ at 25°C

NOTE

If the temperature of the motor is utilized through a thermistor or KTY sensor the PELV is not complied with in case of short circuits between motor windings and sensor. In order to comply with PELV the sensor must be extra isolated.

3.3.10.3 ETR

The calculations estimate the need for a lower load at lower speed due to less cooling from the fan incorporated in the motor.

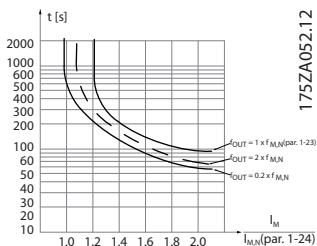


Illustration 3.6 ETR profile

3.3.10.4 ATEX ETR

The B-option MCB 112 PTC Thermistor option offers ATEX approved monitoring of motor temperature. Alternatively, an external ATEX approved PTC protection device can be used.

NOTE

Only ATEX Ex e approved motors may be used for this function. See motor nameplate, approval certificate, data sheet or contact motor supplier.

Programme the following parameters when using MCB 112:

- Parameter group 5-1* Digital Input
- 5-19 Terminal 37 Safe Stop


Furthermore, when controlling an Ex-e motor with "Increased Safety", the following parameters must be programmed:

- 1-90 Motor Thermal Protection
- 1-94 ATEX ETR cur.lim. speed reduction
- 1-98 ATEX ETR interpol. points freq.
- 1-99 ATEX ETR interpol points current

3.3.10.5 Klixon

The Klixon type thermal circuit breaker uses a KLIXON® metal dish. At a predetermined overload, the heat caused by the current through the disc causes a trip.

Using a digital input and 24 V as power supply:
 Example: The frequency converter trips when the motor temperature is too high
 Parameter set-up:
 Set 1-90 Motor Thermal Protection to Thermistor Trip [2]
 Set 1-93 Thermistor Source to Digital Input [6]

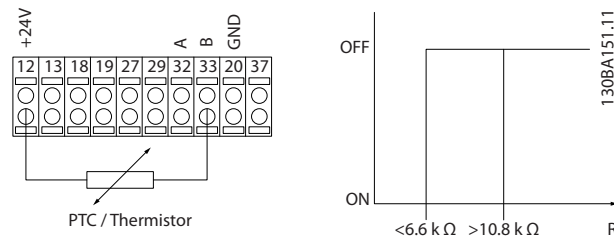

| 1-91 Motor External Fan | | |
|-------------------------|---------|--|
| | Option: | Function: |
| [0] | No | No external fan is required, i.e. the motor is derated at low speed. |
| [1] | Yes | Applies an external motor fan (external ventilation), so no derating of the motor is required at low speed. The upper curve in graph above ($f_{out} = 1 \times f_{M,N}$) is followed if the motor current is lower than nominal motor current (see 1-24 Motor Current). If the motor current exceeds nominal current, the operation time still decreases as if no fan were installed. |

| 1-93 Thermistor Source | | |
|------------------------|------------------|--|
| Option: | Function: | |
| | | Select the input to which the thermistor (PTC sensor) should be connected. An analog input option [1] or [2] cannot be selected if the analog input is already in use as a reference source (selected in 3-15 Reference 1 Source, 3-16 Reference 2 Source or 3-17 Reference 3 Source). When using MCB 112, choice [0] None must always be selected. |
| [0] * | None | |
| [1] | Analog input 53 | |
| [2] | Analog input 54 | |
| [3] | Digital input 18 | |
| [4] | Digital input 19 | |
| [5] | Digital input 32 | |
| [6] | Digital input 33 | |

NOTE

This parameter cannot be adjusted while the motor is running.

NOTE

Digital input should be set to [0] PNP - Active at 24V in 5-00 Digital I/O Mode.

| 1-94 ATEX ETR cur.lim. speed reduction | | |
|---|-----------------|--|
| FC 302 only. Only visible if 1-90 Motor Thermal Protection is set to [20] or [21]. | | |
| Range: | Function: | |
| 0.0 %* | [0.0 - 100.0 %] | |

The reaction for operating in Ex-e current limit must be configured.

0%: The drive does not change anything besides issuing warning 163 ATEX ETR cur.lim.warning.

>0%: The drive issuing warning 163 and reduces motor speed following ramp 2 (parameter group 3-5*).

Example:

Actual reference = 50 RPM

1-94 ATEX ETR cur.lim. speed reduction = 20%

Resulting reference = 40 RPM

| 1-95 KTY Sensor Type | | |
|----------------------|--------------|--|
| Option: | Function: | |
| | | Select the used type of KTY sensor. FC 302 only. |
| [0] * | KTY Sensor 1 | 1 kΩ at 100° C |
| [1] | KTY Sensor 2 | 1 kΩ at 25° C |
| [2] | KTY Sensor 3 | 2 kΩ at 25° C |

| 1-96 KTY Thermistor Resource | | |
|------------------------------|-----------------|--|
| Option: | Function: | |
| | | Selecting analog input terminal 54 to be used as KTY sensor input. Terminal 54 cannot be selected as KTY source if otherwise used as reference (see 3-15 Reference Resource 1 to 3-17 Reference Resource 3). FC 302 only. NOTE Connection of KTY-sensor between term. 54 and 55 (GND). See picture in section KTY Sensor Connection. |
| [0] * | None | |
| [2] | Analog input 54 | |

| 1-97 KTY Threshold level | | |
|--------------------------|---------------|---|
| Range: | Function: | |
| 80 C* | [-40 - 140 C] | Select the KTY sensor threshold level for motor thermal protection. FC 302 only. |

| 1-98 ATEX ETR interpol. points freq. | | |
|---|-------------------------|---|
| FC 302 only. Only visible if 1-90 Motor Thermal Protection is set to [20] or [21]. | | |
| Range: | Function: | |
| Application dependent* | [Application dependant] | Definition of thermal limitation curve. |

Enter the four frequency points [Hz] from the motor name plate into this array. Together with 1-99 ATEX ETR interpol points current, these make up a table (f [Hz],I [%]).

NOTE

All frequency/current limit points from the motor name plate or motor data sheet must be programmed.

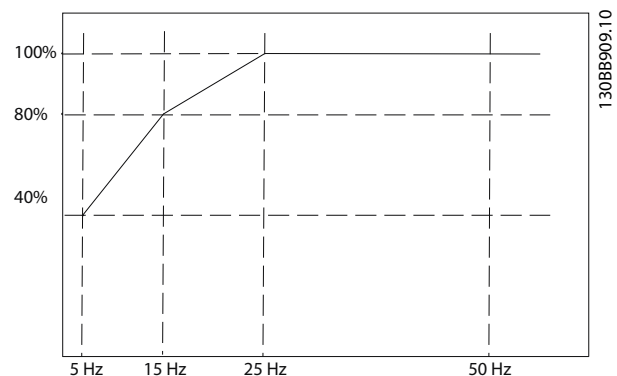


Illustration 3.7 Example of ATEX ETR thermal limitation curve.

x-axis: f_m [Hz]

y-axis: $I_m/I_{m,n} \times 100$ [%]

| 1-98 ATEX ETR interpol. points freq. | 1-99 ATEX ETR interpol points current |
|--------------------------------------|---------------------------------------|
| [0] = 5Hz | [0] = 40% |
| [1] = 15Hz | [1] = 80% |
| [2] = 25Hz | [2] = 100% |
| [3] = 50 Hz | [3] = 100% |

All operating points underneath the curve are allowed continuously. Above the line, however, only for a limited time calculated as a function of the overload. In the event of a machine current greater than 1.5 times the rated current, shut down is immediate.

| 1-99 ATEX ETR interpol points current | | |
|---|------------------|---|
| FC 302 only. Only visible if 1-90 Motor Thermal Protection is set to [20] or [21]. | | |
| Range: | Function: | |
| Application dependent* | [0 - 100 %] | Definition of thermal limitation curve. For example, see 1-98 ATEX ETR interpol. points freq. |

Use the four current points [A] from the motor name plate. Calculate the values as percentage of nominal motor current, $I_m/I_{m,n} \times 100$ [%], and enter into this array.

Together with 1-98 ATEX ETR interpol. points freq., these make up a table (f [Hz], I [%]).

NOTE

All frequency/current limit points from the motor name plate or motor data sheet must be programmed.

3.4 Parameters: 2-** Brakes

3.4.1 2-0* DC-Brakes

Parameter group for configuring the DC brake and DC hold functions.

| 2-00 DC Hold Current | | |
|----------------------|-------------------------|---|
| Range: | | Function: |
| 50 %* | [Application dependant] | Enter a value for holding current as a percentage of the rated motor current $I_{M,N}$ set in 1-24 Motor Current. 100% DC holding current corresponds to $I_{M,N}$. This parameter holds the motor function (holding torque) or pre-heats the motor. This parameter is active if DC hold is selected in 1-72 Start Function [0] or 1-80 Function at Stop [1]. |

NOTE

The maximum value depends on the rated motor current. Avoid 100 % current for too long. It may damage the motor. Low values of DC hold will produce larger than expected currents with larger motor power sizes. This error will increase as the motor power increases.

| 2-01 DC Brake Current | | |
|-----------------------|-------------------------|---|
| Range: | | Function: |
| 50 %* | [Application dependant] | Enter a value for current as a percentage of the rated motor current $I_{M,N}$, see 1-24 Motor Current. 100% DC braking current corresponds to $I_{M,N}$. DC brake current is applied on a stop command, when the speed is lower than the limit set in 2-03 DC Brake Cut In Speed [RPM]; when the DC Brake Inverse function is active; or via the serial communication port. The braking current is active during the time period set in 2-02 DC Braking Time. |

NOTE

The maximum value depends on the rated motor current. Avoid 100 % current for too long. It may damage the motor.

| 2-02 DC Braking Time | | |
|----------------------|----------------|--|
| Range: | | Function: |
| 10.0 s* | [0.0 - 60.0 s] | Set the duration of the DC braking current set in 2-01 DC Brake Current, once activated. |

| 2-03 DC Brake Cut In Speed [RPM] | | |
|----------------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Set the DC brake cut-in speed for activation of the DC braking current set in |

| 2-03 DC Brake Cut In Speed [RPM] | | |
|----------------------------------|--|---|
| Range: | | Function: |
| | | 2-01 DC Brake Current, upon a stop command. |

| 2-04 DC Brake Cut In Speed [Hz] | | |
|---------------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Set the DC brake cut-in speed for activation of the DC braking current set in 2-01 DC Brake Current, upon a stop command. |

3.4.2 2-1* Brake Energy Funct.

Parameter group for selecting dynamic braking parameters. Only valid for drives with brake chopper.

| 2-10 Brake Function | | |
|---------------------|----------------|--|
| Option: | | Function: |
| [0] * | Off | No brake resistor is installed. |
| [1] | Resistor brake | A brake resistor is incorporated in the system, for dissipation of surplus brake energy as heat. Connecting a brake resistor allows a higher DC link voltage during braking (generating operation). The Resistor brake function is only active in frequency converters with an integral dynamic brake. |
| [2] | AC brake | Is selected to improve braking without using a brake resistor. This parameter controls an overmagnetization of the motor when running with a generative load. This function can improve the OVC-function. Increasing the electrical losses in the motor allows the OVC function to increase the braking torque without exceeding the over voltage limit. Please note that AC brake is not as effective as dynamic braking with resistor. AC brake is for VVC ^{plus} and flux mode in both open and closed loop. |

| 2-11 Brake Resistor (ohm) | | |
|---------------------------|-----------------------|-----------|
| Range: | | Function: |
| Size related* | [5.00 - 65535.00 Ohm] | |

| 2-12 Brake Power Limit (kW) | | |
|-----------------------------|-----------------------|-----------|
| Range: | | Function: |
| Size related* | [0.001 - 2000.000 kW] | |

| 2-13 Brake Power Monitoring | | |
|-----------------------------|--|--|
| Option: | | Function: |
| | | This parameter is only active in frequency converters with an integral dynamic brake. This parameter enables monitoring of the power to the brake resistor. The power is calculated on |

| 2-13 Brake Power Monitoring | | |
|-----------------------------|------------------|---|
| Option: | Function: | |
| | | the basis of the resistance (2-11 Brake Resistor (ohm)), the DC link voltage, and the resistor duty time. |
| [0] * | Off | No brake power monitoring required. |
| [1] | Warning | Activates a warning on the display when the power transmitted over 120 s exceeds 100% of the monitoring limit (2-12 Brake Power Limit (kW)). The warning disappears when the transmitted power falls below 80% of the monitoring limit. |
| [2] | Trip | Trips frequency converter and displays an alarm when the calculated power exceeds 100% of the monitoring limit. |
| [3] | Warning and trip | Activates both of the above, including warning, trip and alarm. |

If power monitoring is set to *Off* [0] or *Warning* [1], the brake function remains active, even if the monitoring limit is exceeded. This may lead to thermal overload of the resistor. It is also possible to generate a warning via a relay/digital outputs. The measuring accuracy of the power monitoring depends on the accuracy of the resistance of the resistor (better than $\pm 20\%$).

| 2-15 Brake Check | | |
|------------------|-----------|--|
| Option: | Function: | |
| | | Select type of test and monitoring function to check the connection to the brake resistor, or whether a brake resistor is present, and then display a warning or an alarm in the event of a fault. |
| | | <p>NOTE</p> <p>The brake resistor disconnection function is tested during power-up. However the brake IGBT test is performed when there is no braking. A warning or trip disconnects the brake function.</p> <p>The testing sequence is as follows:</p> <ol style="list-style-type: none"> The DC link ripple amplitude is measured for 300 ms without braking. The DC link ripple amplitude is measured for 300 ms with the brake turned on. If the DC link ripple amplitude while braking is lower than the DC link ripple amplitude before braking + 1 %: <i>Brake check has failed by returning a warning or alarm.</i> If the DC link ripple amplitude while braking is higher than the DC link ripple |

| 2-15 Brake Check | | |
|------------------|---------------|---|
| Option: | Function: | |
| | | amplitude before braking + 1 %: <i>Brake check is OK.</i> |
| [0] * | Off | Monitors brake resistor and brake IGBT for a short-circuit during operation. If a short-circuit occurs, warning 25 appears. |
| [1] | Warning | Monitors brake resistor and brake IGBT for a short-circuit, and runs a test for brake resistor disconnection during power-up. |
| [2] | Trip | Monitors for a short-circuit or disconnection of the brake resistor, or a short-circuit of the brake IGBT. If a fault occurs, the frequency converter cuts out while displaying an alarm (trip locked). |
| [3] | Stop and trip | Monitors for a short-circuit or disconnection of the brake resistor, or a short-circuit of the brake IGBT. If a fault occurs, the frequency converter ramps down to coast and then trips. A trip lock alarm is displayed (e.g. warning 25, 27 or 28). |
| [4] | AC brake | Monitors for a short-circuit or disconnection of the brake resistor, or a short-circuit of the brake IGBT. If a fault occurs, the frequency converter performs a controlled ramp-down. This option is available for FC 302 only. |
| [5] | Trip Lock | |

NOTE

Remove a warning arising in connection with *Off* [0] or *Warning* [1] by cycling the mains supply. The fault must be corrected first. For *Off* [0] or *Warning* [1], the frequency converter keeps running even if a fault is located.

This parameter is only active in frequency converters with an integral dynamic brake.

| 2-16 AC brake Max. Current | | |
|----------------------------|-------------------------|---|
| Range: | Function: | |
| 100.0 %* | [Application dependant] | Enter the maximum permissible current when using AC brake to avoid overheating of motor windings. The AC brake function is available in Flux mode only (FC 302 only). |

| 2-17 Over-voltage Control | | |
|---------------------------|-----------------------|---|
| Option: | Function: | |
| | | Over-voltage control (OVC) reduces the risk of the frequency converter tripping due to an over voltage on the DC link caused by generative power from the load. |
| [0] * | Disabled | No OVC required. |
| [1] | Enabled (not at stop) | Activates OVC except when using a stop signal to stop the frequency converter. |

| 2-17 Over-voltage Control | | |
|---------------------------|-----------|----------------|
| Option: | Function: | |
| [2] | Enabled | Activates OVC. |

NOTE

OVC must not be enabled in hoisting applications.

| 2-18 Brake Check Condition | | |
|----------------------------|------------------------|--|
| Range: | Function: | |
| [0] * | At Power Up | Brake check will be performed at power up |
| [1] | After Coast Situations | Brake check will be performed after coast situations |

| 2-19 Over-voltage Gain | | |
|------------------------|-------------|---------------------------|
| Range: | Function: | |
| 100 %* | [0 - 200 %] | Select over-voltage gain. |


3.4.3 2-2* Mechanical Brake

Parameters for controlling operation of an electro-magnetic (mechanical) brake, typically required in hoisting applications.

To control a mechanical brake, a relay output (relay 01 or relay 02) or a programmed digital output (terminal 27 or 29) is required. Normally this output must be closed during periods when the frequency converter is unable to 'hold' the motor, e.g. due to an excessive load. Select *Mechanical Brake Control* [32] for applications with an electro-magnetic brake in 5-40 *Function Relay*, 5-30 *Terminal 27 Digital Output*, or 5-31 *Terminal 29 Digital Output*. When selecting *Mechanical brake control* [32], the mechanical brake is closed from start up until the output current is above the level selected in 2-20 *Release Brake Current*. During stop, the mechanical brake activates when the speed falls below the level specified in 2-21 *Activate Brake Speed [RPM]*. If the frequency converter enters an alarm condition or an over-current or over-voltage situation, the mechanical brake immediately cuts in. This is also the case during safe stop.

NOTE

Protection mode and trip delay features (14-25 *Trip Delay at Torque Limit* and 14-26 *Trip Delay at Inverter Fault*) may delay the activation of the mechanical brake in an alarm condition. These features must be disabled in hoisting applications.

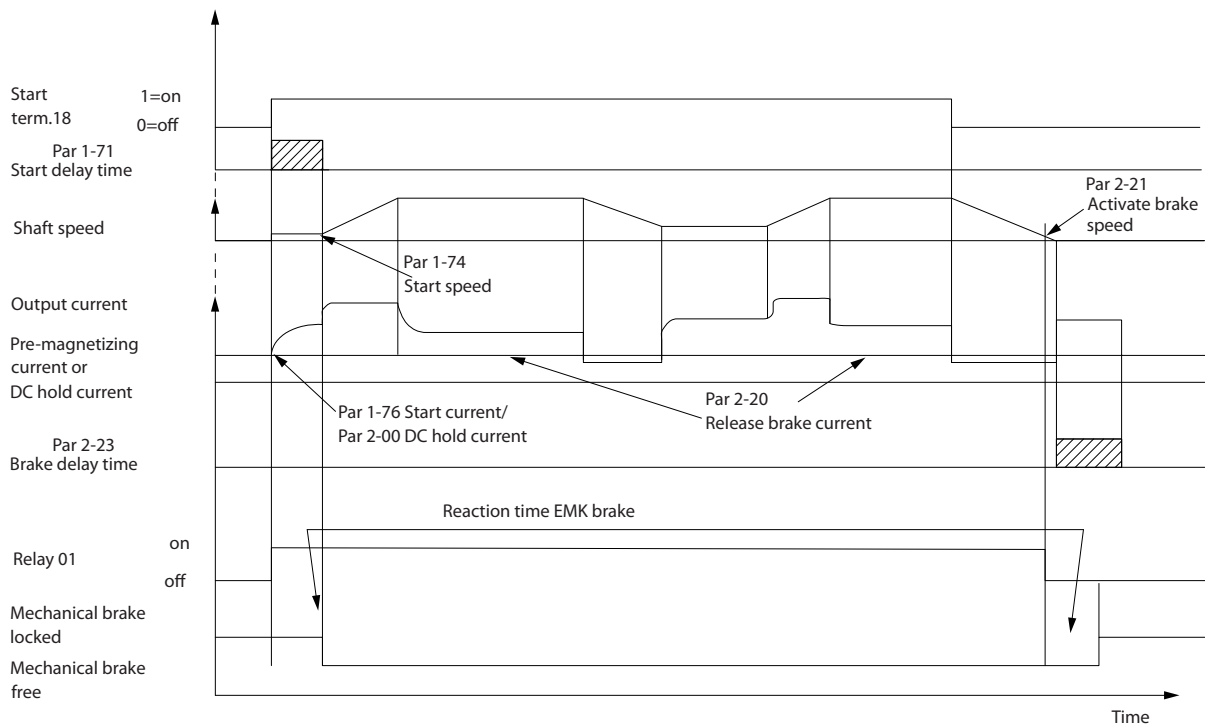

130BA074.12

| 2-20 Release Brake Current | | |
|----------------------------|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Set the motor current for release of the mechanical brake, when a start condition is present. The default |

| 2-20 Release Brake Current | | |
|----------------------------|-----------|--|
| Range: | Function: | |
| | | value is the maximum current the inverter can provide for the particular power size. The upper |

| 2-20 Release Brake Current | | |
|---|--|--|
| Range: | | Function: |
| | | limit is specified in 16-37 <i>Inv. Max. Current</i> . |
| <p>NOTE When Mechanical brake control output is selected but no mechanical brake is connected, the function will not work by default setting due to too low motor current.</p> | | |

| 2-21 Activate Brake Speed [RPM] | | |
|---------------------------------|-----------------|--|
| Range: | | Function: |
| Application dependent* | [0 - 30000 RPM] | Set the motor speed for activation of the mechanical brake, when a stop condition is present. The upper speed limit is specified in 4-53 <i>Warning Speed High</i> . |

| 2-22 Activate Brake Speed [Hz] | | |
|--------------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Set the motor frequency for activation of the mechanical brake, when a stop condition is present. |

| 2-23 Activate Brake Delay | | |
|---------------------------|---------------|---|
| Range: | | Function: |
| 0.0 s* | [0.0 - 5.0 s] | Enter the brake delay time of the coast after ramp-down time. The shaft is held at zero speed with full holding torque. Ensure that the mechanical brake has locked the load before the |

| 2-23 Activate Brake Delay | | |
|---------------------------|--|---|
| Range: | | Function: |
| | | motor enters coast mode. See <i>Mechanical Brake Control</i> section in the Design Guide. |


| 2-24 Stop Delay | | |
|-----------------|---------------|--|
| Range: | | Function: |
| 0.0 s* | [0.0 - 5.0 s] | Set the time interval from the moment when the motor is stopped until the brake closes. This parameter is a part of the stopping function. |

| 2-25 Brake Release Time | | |
|-------------------------|-----------------|--|
| Range: | | Function: |
| 0.20 s* | [0.00 - 5.00 s] | This value defines the time it takes for the mechanical brake to open. This parameter must act as a time-out when brake feedback is activated. |

| 2-26 Torque Ref | | |
|-----------------|-------------------------|--|
| Range: | | Function: |
| 0.00 %* | [Application dependant] | The value defines the torque applied against the closed mechanical brake, before release |

| 2-27 Torque Ramp Time | | |
|-----------------------|---------------|---|
| Range: | | Function: |
| 0.2 s* | [0.0 - 5.0 s] | The value defines the duration of the torque ramp in clockwise direction. |

| 2-28 Gain Boost Factor | | |
|------------------------|----------------|---|
| Range: | | Function: |
| 1.00* | [1.00 - 4.00] | Only active in flux closed loop. The function ensures a smooth transition from torque control mode to speed control mode when the motor takes over the load from the brake. |

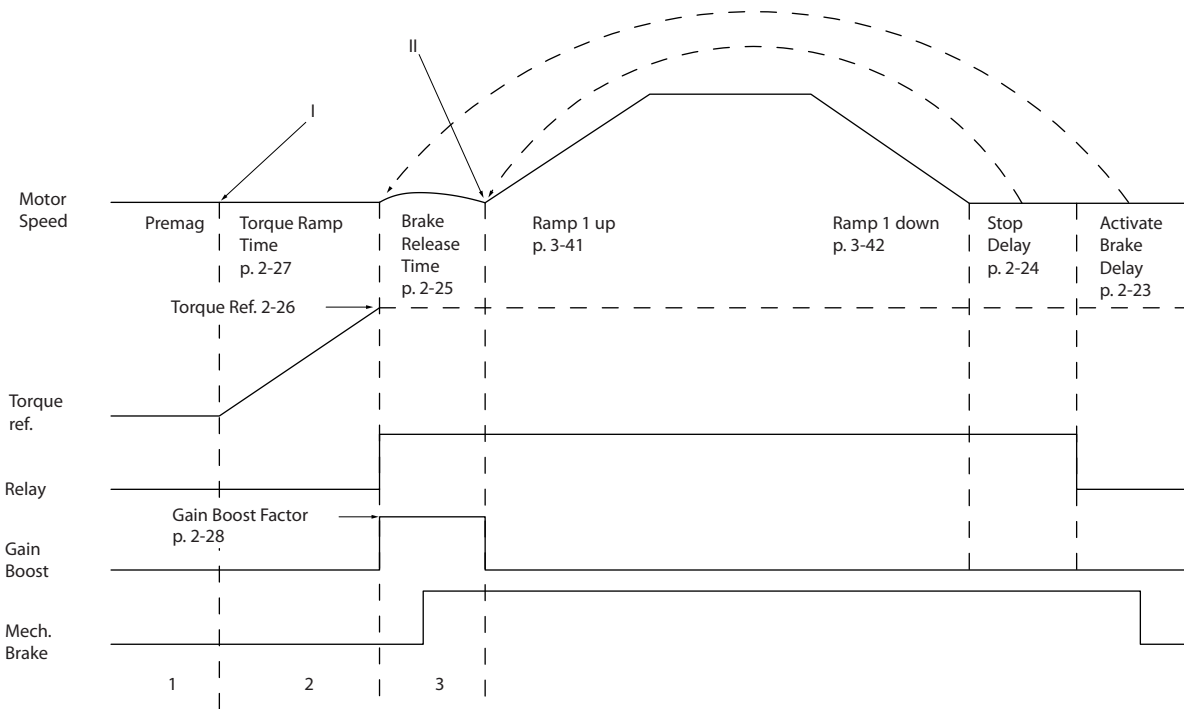

130BA642.12

3

Illustration 3.8 Brake release sequence for hoist mechanical brake control

- I) *Activate brake delay*: The frequency converter starts again from the *mechanical brake engaged* position.
- II) *Stop delay*: When the time between successive starts is shorter than the setting in 2-24 *Stop Delay*, the frequency converter starts without applying the mechanical brake (e.g. reversing).

3.5 Parameters: 3-** Reference/Ramps

Parameters for reference handling, definition of limitations, and configuration of the reaction of the frequency converter to changes.

3.5.1 3-0* Reference Limits

| 3-00 Reference Range | | |
|----------------------|-------------|--|
| Option: | Function: | |
| | | Select the range of the reference signal and the feedback signal. Signal values can be positive only, or positive and negative. The minimum limit may have a negative value, unless <i>Speed closed loop</i> [1] control or <i>Process</i> [3] is selected in <i>1-00 Configuration Mode</i> . |
| [0] | Min - Max | Select the range of the reference signal and the feedback signal. Signal values can be positive only, or positive and negative. The minimum limit may have a negative value, unless <i>Speed closed loop</i> [1] control or <i>Process</i> [3] is selected in <i>1-00 Configuration Mode</i> . |
| [1] * | -Max - +Max | For both positive and negative values (both directions, relative to <i>4-10 Motor Speed Direction</i>). |

| 3-01 Reference/Feedback Unit | | |
|------------------------------|---------------------|--|
| Option: | Function: | |
| | | Select the unit to be used in Process PID Control references and feedbacks. <i>1-00 Configuration Mode</i> must be either [3] Process or [8] Extended PID Control. |
| [0] * | None | |
| [1] | % | |
| [2] | RPM | |
| [3] | Hz | |
| [4] | Nm | |
| [5] | PPM | |
| [10] | 1/min | |
| [12] | Pulse/s | |
| [20] | l/s | |
| [21] | l/min | |
| [22] | l/h | |
| [23] | m ³ /s | |
| [24] | m ³ /min | |
| [25] | m ³ /h | |
| [30] | kg/s | |
| [31] | kg/min | |
| [32] | kg/h | |
| [33] | t/min | |
| [34] | t/h | |
| [40] | m/s | |
| [41] | m/min | |
| [45] | m | |
| [60] | °C | |

| 3-01 Reference/Feedback Unit | | |
|------------------------------|----------------------|--|
| Option: | Function: | |
| [70] | mbar | |
| [71] | bar | |
| [72] | Pa | |
| [73] | kPa | |
| [74] | m WG | |
| [80] | kW | |
| [120] | GPM | |
| [121] | gal/s | |
| [122] | gal/min | |
| [123] | gal/h | |
| [124] | CFM | |
| [125] | ft ³ /s | |
| [126] | ft ³ /min | |
| [127] | ft ³ /h | |
| [130] | lb/s | |
| [131] | lb/min | |
| [132] | lb/h | |
| [140] | ft/s | |
| [141] | ft/min | |
| [145] | ft | |
| [150] | lb ft | |
| [160] | °F | |
| [170] | psi | |
| [171] | lb/in ² | |
| [172] | in WG | |
| [173] | ft WG | |
| [180] | HP | |

| 3-02 Minimum Reference | | |
|------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the Minimum Reference. The Minimum Reference is the lowest value obtainable by summing all references. Minimum Reference is active only when <i>3-00 Reference Range</i> is set to <i>Min.- Max.</i> [0]. The Minimum Reference unit matches: <ul style="list-style-type: none"> The choice of configuration in <i>1-00 Configuration Mode Configuration Mode</i>: for <i>Speed closed loop</i> [1], RPM; for <i>Torque</i> [2], Nm. The unit selected in <i>3-01 Reference/Feedback Unit</i>. |


| 3-03 Maximum Reference | | |
|------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the Maximum Reference. The Maximum Reference is the highest value obtainable by summing all references. The Maximum Reference unit matches: <ul style="list-style-type: none"> The choice of configuration in <i>1-00 Configuration Mode</i>: for <i>Speed closed loop</i> [1], RPM; for <i>Torque</i> [2], Nm. The unit selected in <i>3-00 Reference Range</i>. |

| 3-04 Reference Function | | |
|-------------------------|------------------|--|
| Option: | | Function: |
| [0] * | Sum | Sums both external and preset reference sources. |
| [1] | External/ Preset | Use either the preset or the external reference source. Shift between external and preset via a command on a digital input. |

3.5.2 3-1* References

Select the preset reference(s). Select Preset ref. bit 0 / 1 / 2 [16], [17] or [18] for the corresponding digital inputs in parameter group 5-1*.

| 3-10 Preset Reference | | |
|-------------------------|----------------------|---|
| Array [8] Range: 0-7 | | |
| Range: | | Function: |
| 0.00 %* | [-100.00 - 100.00 %] | Enter up to eight different preset references (0-7) in this parameter, using array programming. The preset reference is stated as a percentage of the value Ref _{MAX} (3-03 Maximum Reference) If a Ref _{MIN} different from 0 (3-02 Minimum Reference) is programmed, the preset reference is calculated as a percentage of the full reference range, i.e. on the basis of the difference between Ref _{MAX} and Ref _{MIN} . Afterwards, the value is added to Ref _{MIN} . When using preset references, select Preset ref. bit 0 / 1 / 2 [16], [17] or [18] for the corresponding digital inputs in parameter group 5-1*. |

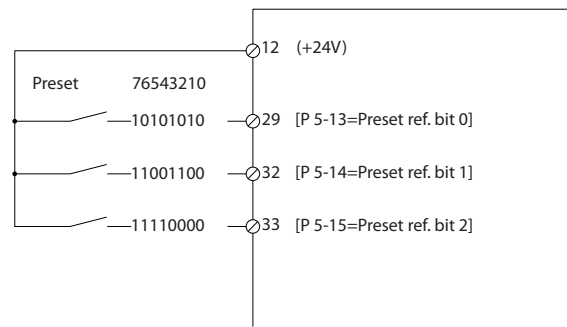

| Preset ref. bit | 2 | 1 | 0 |
|-----------------|---|---|---|
| Preset ref. 0 | 0 | 0 | 0 |
| Preset ref. 1 | 0 | 0 | 1 |
| Preset ref. 2 | 0 | 1 | 0 |
| Preset ref. 3 | 0 | 1 | 1 |
| Preset ref. 4 | 1 | 0 | 0 |
| Preset ref. 5 | 1 | 0 | 1 |
| Preset ref. 6 | 1 | 1 | 0 |
| Preset ref. 7 | 1 | 1 | 1 |



| 3-11 Jog Speed [Hz] | | |
|------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | The jog speed is a fixed output speed at which the frequency converter is running when the jog function is activated. See also 3-80 Jog Ramp Time. |

| 3-12 Catch up/slow Down Value | | |
|-------------------------------|-------------------|--|
| Range: | | Function: |
| 0.00 %* | [0.00 - 100.00 %] | Enter a percentage (relative) value to be either added to or deducted from the actual reference for Catch up or Slow down respectively. If <i>Catch up</i> is selected via one of the digital inputs (5-10 Terminal 18 Digital Input to 5-15 Terminal 33 Digital Input), the percentage (relative) value is added to the total reference. If <i>Slow down</i> is selected via one of the digital inputs (5-10 Terminal 18 Digital Input to 5-15 Terminal 33 Digital Input), the percentage (relative) value is deducted from the total reference. Obtain extended functionality with the DigiPot function. See parameter group 3-9* Digital Potentiometer. |

| 3-13 Reference Site | | |
|---------------------|-----------------------|---|
| Option: | Function: | |
| | | Select which reference site to activate. |
| [0] * | Linked to Hand / Auto | Use local reference when in Hand mode; or remote reference when in Auto mode. |
| [1] | Remote | Use remote reference in both Hand mode and Auto mode. |
| [2] | Local | Use local reference in both Hand mode and Auto mode. |

NOTE
When set to Local [2], the frequency converter will start with this setting again following a 'power down'.

| 3-14 Preset Relative Reference | | |
|--------------------------------|----------------------|---|
| Range: | Function: | |
| 0.00 %* | [-100.00 - 100.00 %] | The actual reference, X, is increased or decreased with the percentage Y, set in 3-14 Preset Relative Reference. This results in the actual reference Z. Actual reference (X) is the sum of the inputs selected in 3-15 Reference 1 Source, 3-16 Reference 2 Source, 3-17 Reference 3 Source and 8-02 Control Source. |

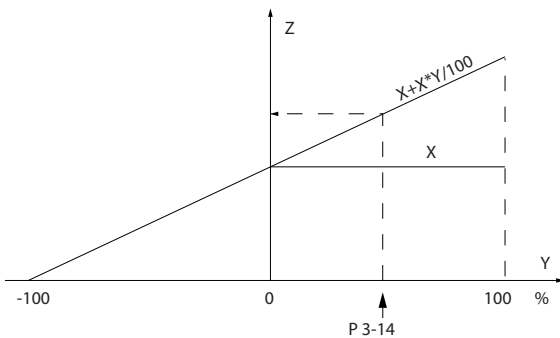

130BA278.10

| 3-15 Reference Resource 1 | | |
|---------------------------|---------------------|--|
| Option: | Function: | |
| | | Select the reference input to be used for the first reference signal. 3-15 Reference Resource 1, 3-16 Reference Resource 2 and 3-17 Reference Resource 3 define up to three different reference signals. The sum of these reference signals defines the actual reference. |
| [0] | No function | |
| [1] * | Analog input 53 | |
| [2] | Analog input 54 | |
| [7] | Frequency input 29 | |
| [8] | Frequency input 33 | |
| [11] | Local bus reference | |
| [20] | Digital pot.meter | |
| [21] | Analog input X30-11 | (General Purpose I/O Option Module) |
| [22] | Analog input X30-12 | (General Purpose I/O Option Module) |
| [29] | Analog Input X48/2 | |

| 3-16 Reference Resource 2 | | |
|---------------------------|---------------------|---|
| Option: | Function: | |
| | | Select the reference input to be used for the second reference signal. 3-15 Reference Resource 1, 3-16 Reference Resource 2 and 3-17 Reference Resource 3 define up to three different reference signals. The sum of these reference signals defines the actual reference. |
| [0] | No function | |
| [1] | Analog input 53 | |
| [2] | Analog input 54 | |
| [7] | Frequency input 29 | |
| [8] | Frequency input 33 | |
| [11] | Local bus reference | |
| [20] * | Digital pot.meter | |
| [21] | Analog input X30-11 | |
| [22] | Analog input X30-12 | |
| [29] | Analog Input X48/2 | |

| 3-17 Reference Resource 3 | | |
|---------------------------|-----------------|--|
| Option: | Function: | |
| | | Select the reference input to be used for the third reference signal. 3-15 Reference Resource 1, 3-16 Reference Resource 2 and 3-17 Reference Resource 3 define up to three different reference signals. The sum of these reference signals defines the actual reference. |
| [0] | No function | |
| [1] | Analog input 53 | |

| 3-17 Reference Resource 3 | | |
|---------------------------|---------------------|--|
| Option: | Function: | |
| [2] | Analog input 54 | |
| [7] | Frequency input 29 | |
| [8] | Frequency input 33 | |
| [11] * | Local bus reference | |
| [20] | Digital pot.meter | |
| [21] | Analog input X30-11 | |
| [22] | Analog input X30-12 | |
| [29] | Analog Input X48/2 | |


| 3-18 Relative Scaling Reference Resource | | |
|--|---------------------|--|
| Option: | Function: | |
| | | Select a variable value to be added to the fixed value (defined in 3-14 Preset Relative Reference). The sum of the fixed and variable values (labelled Y in the illustration below) is multiplied with the actual reference (labelled X in the illustration below). This product is then added to the actual reference ($X+X*Y/100$) to give the resultant actual reference. |
| | | <p style="text-align: right;">130BA059.12</p> |
| | | This parameter cannot be adjusted while the motor is running. |
| [0] * | No function | |
| [1] | Analog input 53 | |
| [2] | Analog input 54 | |
| [7] | Frequency input 29 | |
| [8] | Frequency input 33 | |
| [11] | Local bus reference | |
| [20] | Digital pot.meter | |
| [21] | Analog input X30-11 | |
| [22] | Analog input X30-12 | |
| [29] | Analog Input X48/2 | |

| 3-19 Jog Speed [RPM] | | |
|------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter a value for the jog speed n_{JOG} , which is a fixed output speed. The frequency converter runs at this speed when the jog function is activated. The maximum limit is defined in 4-13 Motor Speed High Limit [RPM]. See also 3-80 Jog Ramp Time. |


3.5.3 Ramps 3-4* Ramp 1

For each of four ramps (parameter groups 3-4*, 3-5*, 3-6* and 3-7*) configure the ramp parameters: ramp type, ramping times (duration of acceleration and deceleration) and level of jerk compensation for S ramps.

Start by setting the linear ramping times corresponding to the figures.

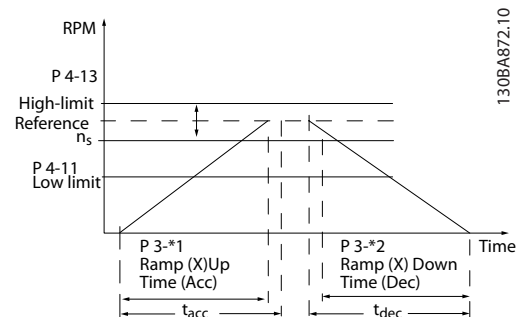

If S-ramps are selected then set the level of non-linear jerk compensation required. Set jerk compensation by defining the proportion of ramp-up and ramp-down times where acceleration and deceleration are variable (i.e. increasing or decreasing). The S-ramp acceleration and deceleration settings are defined as a percentage of the actual ramp time.

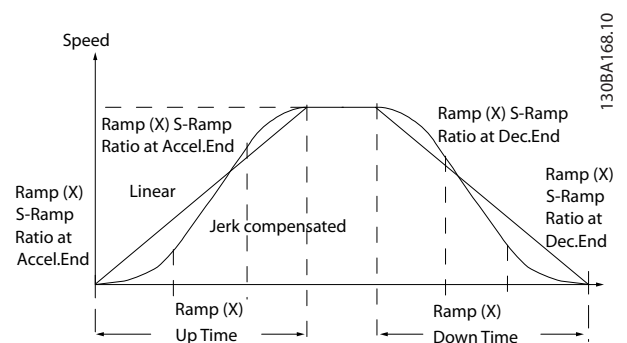

| 3-40 Ramp 1 Type | | |
|------------------|----------------------|---|
| Option: | Function: | |
| | | Select the ramp type, depending on requirements for acceleration/deceleration. A linear ramp will give constant acceleration during ramping. An S-ramp will give non-linear acceleration, compensating for jerk in the application. |
| [0] * | Linear | |
| [1] | S-ramp Const Jerk | Acceleration with lowest possible jerk. |
| [2] | S-ramp Const Time | S-ramp based on the values set in 3-41 Ramp 1 Ramp up Time and 3-42 Ramp 1 Ramp Down Time. |

NOTE

If S-ramp [1] is selected and the reference during ramping is changed the ramp time may be prolonged in order to realize a jerk free movement which may result in a longer start or stop time.

Additional adjustment of the S-ramp ratios or switching initiators may be necessary.

| 3-41 Ramp 1 Ramp up Time | | |
|--------------------------|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the ramp-up time, i.e. the acceleration time from 0RPM to the synchronous motor speed n_s . Choose a ramp-up time such that the output current does not exceed the current limit in 4-18 Current Limit during ramping. The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-down time in 3-42 Ramp 1 Ramp Down Time. |
| | | $Par. 3 - 41 = \frac{t_{acc}[s] \times n_s [RPM]}{ref [RPM]}$ |

| 3-42 Ramp 1 Ramp Down Time | | |
|----------------------------|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the ramp-down time, i.e. the deceleration time from the synchronous motor speed n_s to 0 RPM. Choose a ramp-down time such that no over-voltage arises in the inverter due to regenerative operation of the motor, and such that the generated current does not exceed the current limit set in 4-18 Current Limit. The value 0.00 corresponds to 0.01 s in speed mode. See ramp-up time in 3-41 Ramp 1 Ramp up Time. |
| | | $Par. 3 - 42 = \frac{t_{dec}[s] \times n_s [RPM]}{ref [RPM]}$ |

| 3-45 Ramp 1 S-ramp Ratio at Accel. Start | | |
|--|-------------------------|--|
| Range: | Function: | |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-up time (3-41 Ramp 1 Ramp up Time) in which the acceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks occurring in the application. |

| 3-46 Ramp 1 S-ramp Ratio at Accel. End | | |
|--|-------------------------|--|
| Range: | Function: | |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-up time (3-41 Ramp 1 Ramp up Time) in which the acceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

| 3-47 Ramp 1 S-ramp Ratio at Decel. Start | | |
|--|-------------------------|---|
| Range: | Function: | |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-down time (3-42 Ramp 1 Ramp Down Time) where the deceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

| 3-48 Ramp 1 S-ramp Ratio at Decel. End | | |
|--|-------------------------|---|
| Range: | Function: | |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-down time (3-42 Ramp 1 Ramp Down Time) where the deceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

3.5.4 3-5* Ramp 2

Choosing ramp parameters, see parameter group 3-4*.

| 3-50 Ramp 2 Type | | |
|------------------|-----------|---|
| Option: | Function: | |
| | | Select the ramp type, depending on requirements for acceleration/deceleration. A linear ramp will give constant acceleration during ramping. An S-ramp will give non-linear acceleration, compensating for jerk in the application. |
| [0] * | Linear | |

| 3-50 Ramp 2 Type | | |
|------------------|----------------------|---|
| Option: | Function: | |
| [1] | S-ramp Const Jerk | Acceleration with lowest possible jerk |
| [2] | S-ramp Const Time | S-ramp based on the values set in 3-51 Ramp 2 Ramp up Time and 3-52 Ramp 2 Ramp down Time |

NOTE

If S-ramp [1] is selected and the reference during ramping is changed the ramp time may be prolonged in order to realize a jerk free movement which may result in a longer start or stop time.

Additional adjustment of the S-ramp ratios or switching initiators may be necessary.

| 3-51 Ramp 2 Ramp up Time | | |
|--------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the ramp-up time, i.e. the acceleration time from 0 RPM to the rated motor speed n_s . Choose a ramp-up time such that the output current does not exceed the current limit in 4-18 Current Limit during ramping. The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-down time in 3-52 Ramp 2 Ramp down Time. $Par. 3 - 51 = \frac{t_{acc}[s] \times n_s [RPM]}{ref[RPM]}$ |

| 3-52 Ramp 2 Ramp down Time | | |
|----------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the ramp-down time, i.e. the deceleration time from the rated motor speed n_s to 0 RPM. Choose a ramp-down time such that no over-voltage arises in the inverter due to regenerative operation of the motor, and such that the generated current does not exceed the current limit set in 4-18 Current Limit. The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-up time in 3-51 Ramp 2 Ramp up Time. $Par. 3 - 52 = \frac{t_{dec}[s] \times n_s [RPM]}{ref[RPM]}$ |

| 3-55 Ramp 2 S-ramp Ratio at Accel. Start | | |
|--|-------------------------|--|
| Range: | Function: | |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-up time (3-51 Ramp 2 Ramp up Time) in which the acceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

| 3-56 Ramp 2 S-ramp Ratio at Accel. End | | |
|--|-------------------------|--|
| Range: | Function: | |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-up time (3-51 Ramp 2 Ramp up Time) in which the acceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

| 3-57 Ramp 2 S-ramp Ratio at Decel. Start | | |
|--|-------------------------|---|
| Range: | Function: | |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-down time (3-52 Ramp 2 Ramp down Time) where the deceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

| 3-58 Ramp 2 S-ramp Ratio at Decel. End | | |
|--|-------------------------|---|
| Range: | Function: | |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-down time (3-52 Ramp 2 Ramp down Time) where the deceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

3.5.5 3-6* Ramp 3

Configure ramp parameters, see 3-4*.

| 3-60 Ramp 3 Type | | |
|------------------|----------------------|---|
| Option: | Function: | |
| [0] * | Linear | Select the ramp type, depending on requirements for acceleration and deceleration. A linear ramp will give constant acceleration during ramping. An S-ramp will give non-linear acceleration, compensating for jerk in the application. |
| [1] | S-ramp Const Jerk | Accelerates with lowest possible jerk. |
| [2] | S-ramp Const Time | S-ramp based on the values set in 3-61 Ramp 3 Ramp up Time and 3-62 Ramp 3 Ramp down Time |

NOTE

If S-ramp [1] is selected and the reference during ramping is changed the ramp time may be prolonged in order to realize a jerk free movement which may result in a longer start or stop time.

Additional adjustment of the S-ramp ratios or switching initiators may be necessary.

| 3-61 Ramp 3 Ramp up Time | | |
|--------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the ramp-up time, i.e. the acceleration time from 0 RPM to the rated motor speed n_s . Choose a ramp-up time such that the output current does not exceed the current limit in <i>4-18 Current Limit</i> during ramping. The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-down time in <i>3-62 Ramp 3 Ramp down Time</i> . |

| 3-62 Ramp 3 Ramp down Time | | |
|----------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the ramp-down time, i.e. the deceleration time from the rated motor speed n_s to 0 RPM. Choose a ramp-down time such that no over-voltage arises in the inverter due to regenerative operation of the motor, and such that the generated current does not exceed the current limit set in <i>4-18 Current Limit</i> . The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-up time in <i>3-61 Ramp 3 Ramp up Time</i> . $Par. 3 - 62 = \frac{t_{dec} [s] \times n_s [RPM]}{ref [RPM]}$ |

| 3-65 Ramp 3 S-ramp Ratio at Accel. Start | | |
|--|-------------------------|---|
| Range: | | Function: |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-up time (<i>3-61 Ramp 3 Ramp up Time</i>) in which the acceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

| 3-66 Ramp 3 S-ramp Ratio at Accel. End | | |
|--|-------------------------|--|
| Range: | | Function: |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-up time (<i>3-61 Ramp 3 Ramp up Time</i>) in which the acceleration torque decreases. The larger the percentage value, the greater the jerk compen- |

| 3-66 Ramp 3 S-ramp Ratio at Accel. End | | |
|--|--|--|
| Range: | | Function: |
| | | sation achieved, and thus the lower the torque jerks in the application. |

| 3-67 Ramp 3 S-ramp Ratio at Decel. Start | | |
|--|-------------------------|--|
| Range: | | Function: |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-down time (<i>3-62 Ramp 3 Ramp down Time</i>) where the deceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

| 3-68 Ramp 3 S-ramp Ratio at Decel. End | | |
|--|-------------------------|--|
| Range: | | Function: |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-down time (<i>3-62 Ramp 3 Ramp down Time</i>) where the deceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

3.5.6 3-7* Ramp 4

Configure ramp parameters, see 3-4*.

| 3-70 Ramp 4 Type | | |
|------------------|----------------------|--|
| Option: | | Function: |
| | | Select the ramp type, depending on requirements for acceleration and deceleration. A linear ramp will give constant acceleration during ramping. An S-ramp will give non-linear acceleration, compensating for jerk in the application |
| [0] * | Linear | |
| [1] | S-ramp Const Jerk | Accelerates with lowest possible jerk. |
| [2] | S-ramp Const Time | S-ramp based on the values set in <i>3-71 Ramp 4 Ramp up Time</i> and <i>3-72 Ramp 4 Ramp Down Time</i> . |

NOTE

If S-ramp [1] is selected and the reference during ramping is changed the ramp time may be prolonged in order to realize a jerk free movement which may result in a longer start or stop time.

Additional adjustment of the S-ramp ratios or switching initiators may be necessary.

| 3-71 Ramp 4 Ramp up Time | | |
|--------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the ramp-up time, i.e. the acceleration time from 0 RPM to the rated motor speed n_s . Choose a ramp-up time such that the output current does not exceed the current limit in 4-18 <i>Current Limit</i> during ramping. The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-down time in 3-72 <i>Ramp 4 Ramp Down Time</i> . $Par. 3 - 71 = \frac{t_{acc} [s] \times n_s [RPM]}{ref [RPM]}$ |

| 3-72 Ramp 4 Ramp Down Time | | |
|----------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the ramp-down time, i.e. the deceleration time from the rated motor speed n_s to 0 RPM. Choose a ramp-down time such that no over-voltage arises in the inverter due to regenerative operation of the motor, and such that the generated current does not exceed the current limit set in 4-18 <i>Current Limit</i> . The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-up time in 3-71 <i>Ramp 4 Ramp up Time</i> . $Par. 3 - 72 = \frac{t_{dec} [s] \times n_s [RPM]}{ref [RPM]}$ |

| 3-75 Ramp 4 S-ramp Ratio at Accel. Start | | |
|--|-------------------------|--|
| Range: | | Function: |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-up time (3-71 <i>Ramp 4 Ramp up Time</i>) in which the acceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

| 3-76 Ramp 4 S-ramp Ratio at Accel. End | | |
|--|-------------------------|--|
| Range: | | Function: |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-up time (3-71 <i>Ramp 4 Ramp up Time</i>) in which the acceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |


| 3-77 Ramp 4 S-ramp Ratio at Decel. Start | | |
|--|-------------------------|---|
| Range: | | Function: |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-down time (3-72 <i>Ramp 4 Ramp Down Time</i>) where the deceleration torque |

| 3-77 Ramp 4 S-ramp Ratio at Decel. Start | | |
|--|--|---|
| Range: | | Function: |
| | | increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

| 3-78 Ramp 4 S-ramp Ratio at Decel. End | | |
|--|-------------------------|---|
| Range: | | Function: |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-down time (3-72 <i>Ramp 4 Ramp Down Time</i>) where the deceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

3.5.7 3-8* Other Ramps


| 3-80 Jog Ramp Time | | |
|------------------------|--------------------|---|
| Range: | | Function: |
| Application dependent* | [0.01 - 3600.00 s] | Enter the jog ramp time, i.e. the acceleration/deceleration time between 0 RPM and the rated motor frequency n_s . Ensure that the resultant output current required for the given jog ramp time does not exceed the current limit in 4-18 <i>Current Limit</i> . The jog ramp time starts upon activation of a jog signal via the LCP, a selected digital input, or the serial communication port. When jog state is disabled then the normal ramping times are valid. |

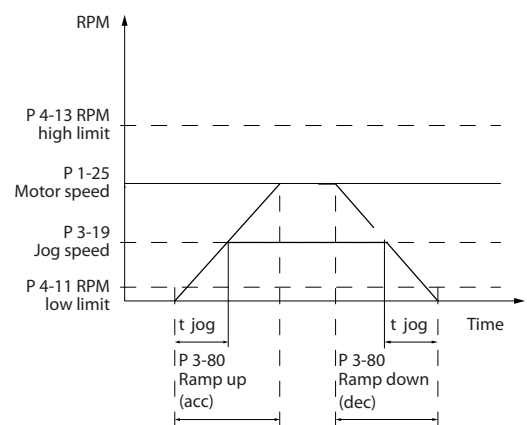

130BA070.10

$$Par. 3 - 80 = \frac{t_{jog} [s] \times n_s [RPM]}{\Delta \log \text{ speed } (par. 3 - 19) [RPM]}$$

| 3-81 Quick Stop Ramp Time | | |
|---------------------------|--------------------|---|
| Range: | Function: | |
| Application dependent* | [0.01 - 3600.00 s] | Enter the quick-stop ramp-down time, i.e. the deceleration time from the synchronous motor speed to 0 RPM. Ensure that no resultant over-voltage will arise in the inverter due to regenerative operation of the motor required to achieve the given ramp-down time. Ensure also that the generated current required to achieve the given ramp-down time does not exceed the current limit (set in 4-18 Current Limit). Quick-stop is activated by means of a signal on a selected digital input, or via the serial communication port. |

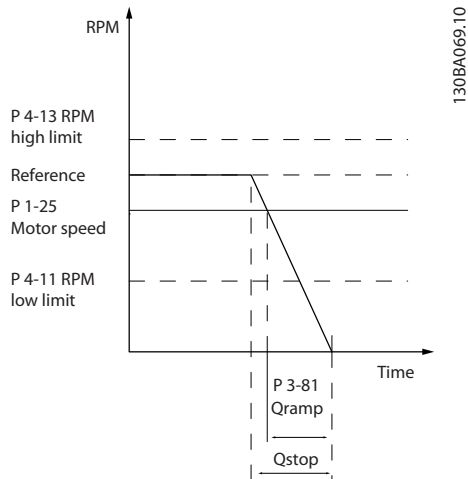

130BA069.10

$$Par. 3 - 81 = \frac{t_{Qstop} [s] \times n_s [RPM]}{\Delta jog ref (par. 3 - 19) [RPM]}$$

| 3-82 Quick Stop Ramp Type | | |
|---------------------------|-------------------|---|
| Option: | Function: | |
| | | Select the ramp type, depending on requirements for acceleration and deceleration. A linear ramp will give constant acceleration during ramping. An S-ramp will give non-linear acceleration, compensating for jerk in the application. |
| [0] * | Linear | |
| [1] | S-ramp Const Jerk | |
| [2] | S-ramp Const Time | |


| 3-83 Quick Stop S-ramp Ratio at Decel. Start | | |
|--|-------------------------|--|
| Range: | Function: | |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-down time (3-42 Ramp 1 Ramp Down Time) where the deceleration torque increases. The larger the percentage |

| 3-83 Quick Stop S-ramp Ratio at Decel. Start | | |
|--|-----------|--|
| Range: | Function: | |
| | | value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |


| 3-84 Quick Stop S-ramp Ratio at Decel. End | | |
|--|-------------------------|---|
| Range: | Function: | |
| 50 %* | [Application dependant] | Enter the proportion of the total ramp-down time (3-42 Ramp 1 Ramp Down Time) where the deceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application. |

3.5.8 3-9* Digital Pot.Meter

The digital potentiometer function allows the user to increase or decrease the actual reference by adjusting the set-up of the digital inputs using the functions *Increase*, *Decrease* or *Clear*. To activate the function, at least one digital input must be set up to *Increase* or *Decrease*.

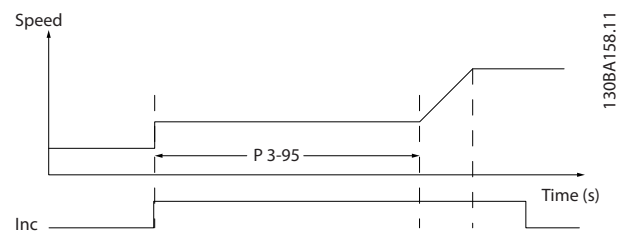

130BA158.11

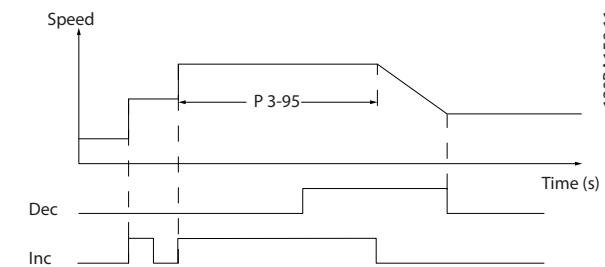

130BA159.11

| 3-90 Step Size | | |
|----------------|-------------------|---|
| Range: | Function: | |
| 0.10 %* | [0.01 - 200.00 %] | Enter the increment size required for INCREASE/DECREASE, as a percentage of the synchronous motor speed, n _s . If INCREASE/ DECREASE is activated the resulting reference will be increased / decreased by the amount set in this parameter. |

| 3-91 Ramp Time | | |
|----------------|--------------------|---|
| Range: | | Function: |
| 1.00 s* | [0.00 - 3600.00 s] | Enter the ramp time, i.e. the time for adjustment of the reference from 0% to 100% of the specified digital potentiometer function (Increase, Decrease or Clear). If Increase/ Decrease is activated for longer than the ramp delay period specified in 3-95 Ramp Delay the actual reference will be ramped up / down according to this ramp time. The ramp time is defined as the time used to adjust the reference by the step size specified in 3-90 Step Size. |

| 3-92 Power Restore | | |
|--------------------|-----|---|
| Option: | | Function: |
| [0] * | Off | Resets the Digital Potentiometer reference to 0% after power up. |
| [1] | On | Restores the most recent Digital Potentiometer reference at power up. |

| 3-93 Maximum Limit | | |
|--------------------|----------------|---|
| Range: | | Function: |
| 100 %* | [-200 - 200 %] | Set the maximum permissible value for the resultant reference. This is advisable if the Digital Potentiometer is used for fine tuning of the resulting reference. |

| 3-94 Minimum Limit | | |
|--------------------|----------------|---|
| Range: | | Function: |
| -100 %* | [-200 - 200 %] | Set the minimum permissible value for the resultant reference. This is advisable if the Digital Potentiometer is used for fine tuning of the resulting reference. |

| 3-95 Ramp Delay | | |
|------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the delay required from activation of the digital potentiometer function until the frequency converter starts to ramp the reference. With a delay of 0 ms, the reference starts to ramp as soon as INCREASE/ DECREASE is activated. See also 3-91 Ramp Time. |

3.6 Parameters: 4-** Limits/Warnings

3.6.1 4-1* Motor Limits

Define torque, current and speed limits for the motor, and the reaction of the frequency converter when the limits are exceeded.

A limit may generate a message on the display. A warning will always generate a message on the display or on the fieldbus. A monitoring function may initiate a warning or a trip, upon which the frequency converter will stop and generate an alarm message.

| 4-10 Motor Speed Direction | | |
|----------------------------|-------------------|--|
| Option: | Function: | |
| | | Select the motor speed direction(s) required. Use this parameter to prevent unwanted reversing. When <i>1-00 Configuration Mode</i> is set to <i>Process</i> [3], <i>4-10 Motor Speed Direction</i> is set to <i>Clockwise</i> [0] as default. The setting in <i>4-10 Motor Speed Direction</i> does not limit options for setting <i>4-13 Motor Speed High Limit [RPM]</i> . This parameter cannot be adjusted while the motor is running. |
| [0] * | Clockwise | The reference is set to CW rotation. Reversing input (Default term 19) must be open. |
| [1] | Counter clockwise | The reference is set to CCW rotation. Reversing input (Default term 19) must be closed. If Reversing is required with 'Reverse' input is open the motor direction can be changed by <i>1-06 Clockwise Direction</i> |
| [2] | Both directions | Allows the motor to rotate in both directions. |

| 4-11 Motor Speed Low Limit [RPM] | | |
|----------------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the minimum limit for motor speed. The Motor Speed Low Limit can be set to correspond to the manufacturer's recommended minimum motor speed. The Motor Speed Low Limit must not exceed the setting in <i>4-13 Motor Speed High Limit [RPM]</i> . |

| 4-12 Motor Speed Low Limit [Hz] | | |
|---------------------------------|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the minimum limit for motor speed. The Motor Speed Low Limit can be set to correspond to the minimum output frequency of the motor shaft. The Motor Speed Low Limit must not exceed the setting |

| 4-12 Motor Speed Low Limit [Hz] | | |
|---------------------------------|-------------------------|--|
| Range: | Function: | |
| | | in <i>4-14 Motor Speed High Limit [Hz]</i> . |
| Application dependent* | [Application dependant] | Enter the minimum limit for motor speed. The Motor Speed Low Limit can be set to correspond to the minimum output frequency of the motor shaft. The Motor Speed Low Limit must not exceed the setting in <i>4-14 Motor Speed High Limit [Hz]</i> . |

| 4-13 Motor Speed High Limit [RPM] | | |
|-----------------------------------|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the maximum limit for motor speed. The Motor Speed High Limit can be set to correspond to the manufacturer's maximum rated motor speed. The Motor Speed High Limit must exceed the setting in <i>4-11 Motor Speed Low Limit [RPM]</i> . |

NOTE

Max. output frequency cannot exceed 10% of the inverter switching frequency (*14-01 Switching Frequency*).

| 4-14 Motor Speed High Limit [Hz] | | |
|----------------------------------|----------------------------|---|
| Range: | Function: | |
| Size related* | [par. 4-12 - par. 4-19 Hz] | Enter the maximum limit for motor speed. The Motor Speed High Limit can be set to correspond to the manufacturer's recommended maximum of the motor shaft. The Motor Speed High Limit must exceed the in <i>4-12 Motor Speed Low Limit [Hz]</i> . Only <i>4-11 Motor Speed Low Limit [RPM]</i> or <i>4-12 Motor Speed Low Limit [Hz]</i> will be displayed depending on other parameters in the Main Menu and depending on default settings dependant on global location. |

NOTE

Max. output frequency cannot exceed 10% of the inverter switching frequency (*14-01 Switching Frequency*).

| 4-16 Torque Limit Motor Mode | | |
|------------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | This function limits the torque on the shaft to protect the mechanical installation. |

NOTE

Changing 4-16 Torque Limit Motor Mode when 1-00 Configuration Mode is set to Speed open loop [0], 1-66 Min. Current at Low Speed is automatically readjusted.

NOTE

The torque limit reacts on the actual, non-filtrated torque, including torque spikes. This is not the torque that is seen from the LCP or the Fieldbus as that is filtered.

| 4-17 Torque Limit Generator Mode | | |
|----------------------------------|-------------------------|--|
| Range: | | Function: |
| 100.0 %* | [Application dependant] | This function limits the torque on the shaft to protect the mechanical installation. |

NOTE

The torque limit reacts on the actual, non-filtrated torque, including torque spikes. This is not the torque that is seen from the LCP or the Fieldbus as that is filtered.

| 4-18 Current Limit | | |
|------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | This is a true current limit function that continues in the oversynchronous range, however due to field weakening the motor torque at current limit will drop accordingly when the voltage increase stops above the synchronised speed of the motor. |

NOTE

If [20] or [21] is selected, 4-18 Current Limit current limit must be set to 150%.

| 4-19 Max Output Frequency | | |
|---------------------------|-------------------|---|
| Range: | | Function: |
| 132.0 Hz* | [1.0 - 1000.0 Hz] | Provides a final limit on the output frequency for improved safety in applications where you want to avoid accidental over-speeding. This limit is final in all configurations (independent of the setting in 1-00 Configuration Mode). |

NOTE

Max. output frequency cannot exceed 10% of the inverter switching frequency (14-01 Switching Frequency).

4-19 Max Output Frequency cannot be adjusted while the motor is running.

| 4-20 Torque Limit Factor Source | | |
|---------------------------------|----------------------|--|
| Option: | | Function: |
| | | Select an analog input for scaling the settings in 4-16 Torque Limit Motor Mode and 4-17 Torque Limit Generator Mode from 0% to 100% (or inverse). The signal levels corresponding to 0% and 100% are defined in the analog input scaling, e.g. parameter group 6-1*. This parameter is only active when 1-00 Configuration Mode is in Speed Open Loop or Speed Closed Loop. |
| [0] * | No function | |
| [2] | Analog in 53 | |
| [4] | Analog in 53 inv | |
| [6] | Analog in 54 | |
| [8] | Analog in 54 inv | |
| [10] | Analog in X30-11 | |
| [12] | Analog in X30-11 inv | |
| [14] | Analog in X30-12 | |
| [16] | Analog in X30-12 inv | |

| 4-21 Speed Limit Factor SourceOption | | |
|--------------------------------------|-------------------------|--|
| Option: | | Function: |
| | | Select an analog input for scaling the settings in 4-19 Max Output Frequency from 0% to 100% (or vice versa). The signal levels corresponding to 0% and 100% are defined in the analog input scaling, e.g. parameter group 6-1*. This parameter is only active when 1-00 Configuration Mode is in Torque Mode. |
| [0] * | No function | |
| [2] | Analog input 53 | |
| [4] | Analog input 53 inv | |
| [6] | Analog input 54 | |
| [8] | Analog input 54 inv | |
| [10] | Analog input X30-11 | |
| [12] | Analog input X30-11 inv | |
| [14] | Analog input X30-12 | |
| [16] | Analog input X30-12 inv | |

3.6.2 4-3* Motor Feedback Monitoring


The parameter group includes monitoring and handling of motor feedback devices as encoders, resolvers etc.

| 4-30 Motor Feedback Loss Function | | |
|-----------------------------------|--|---|
| Option: | | Function: |
| | | Select which reaction the frequency converter should take if a feedback |

| 4-30 Motor Feedback Loss Function | | |
|-----------------------------------|---------------------|--|
| Option: | Function: | |
| | | fault is detected. The selected action is to take place when the feedback signal differs from the output speed where its range is specified in 4-31 <i>Motor Feedback Speed Error</i> during its time frame set in 4-32 <i>Motor Feedback Loss Timeout</i> . |
| [0] | Disabled | |
| [1] | Warning | |
| [2] * | Trip | |
| [3] | Jog | |
| [4] | Freeze Output | |
| [5] | Max Speed | |
| [6] | Switch to Open Loop | |
| [7] | Select Setup 1 | |
| [8] | Select Setup 2 | |
| [9] | Select Setup 3 | |
| [10] | Select Setup 4 | |
| [11] | stop & trip | |

Warning/Alarm 61 Feedback Error is related to the Motor Feedback Loss Function.

| 4-31 Motor Feedback Speed Error | | |
|---------------------------------|--|--|
| Range: | Function: | |
| 300 RPM* [1 - 600 RPM] | Select the max allowed tracking error in speed from the calculated and the actual mechanical shaft output speed. | |

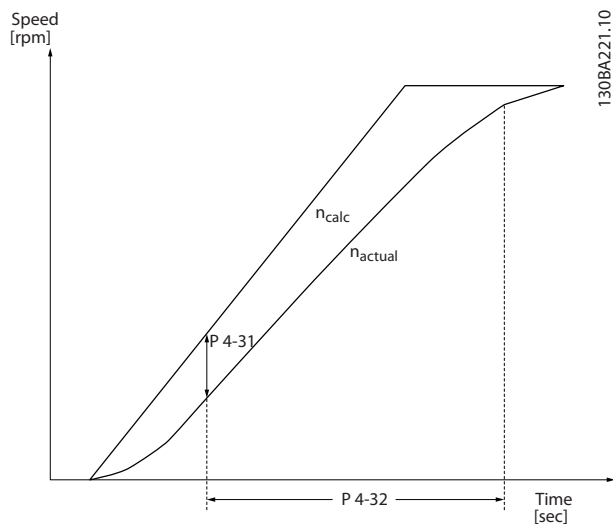

| 4-32 Motor Feedback Loss Timeout | | |
|----------------------------------|--|--|
| Range: | Function: | |
| 0.05 s* [0.00 - 60.00 s] | Set the timeout value allowing the speed error set in 4-31 <i>Motor Feedback Speed Error</i> to be exceeded. | |

| 4-34 Tracking Error Function | | |
|------------------------------|--|--|
| Option: | Function: | |
| | Select which reaction the frequency converter should take if a tracking error is detected. Closed Loop: The tracking error is measured between the output from the ramp generator and the speed feedback (filtered). Open Loop: The tracking error is measured between the output from the ramp generator - compensated for slip - and the frequency that is sent to the motor (16-13 <i>Frequency</i>). The reaction will be activated if the measured difference is more than specified in 4-35 <i>Tracking Error</i> for the time specified in 4-36 <i>Tracking Error Timeout</i> . A tracking error in closed loop does not imply that there is a problem with the feedback signal! A tracking error can be the result of torque limit at too big loads. | |
| [0] * | Disable | |
| [1] | Warning | |
| [2] | Trip | |
| [3] | Trip after stop | |

Warning/Alarm 78 Tracking Error is related to the Tracking Error Function.

| 4-35 Tracking Error | | |
|-----------------------|---|--|
| Range: | Function: | |
| 10 RPM* [1 - 600 RPM] | Enter the maximum permissible speed error between the motor speed and the output of the ramp when not ramping. In open loop the motor speed is estimated and in closed loop it is the feedback from encoder/resolver. | |

| 4-36 Tracking Error Timeout | | |
|-----------------------------|--|--|
| Range: | Function: | |
| 1.00 s* [0.00 - 60.00 s] | Enter the time-out period during which an error greater than the value set in 4-35 <i>Tracking Error</i> is permissible. | |

| 4-37 Tracking Error Ramping | | |
|-----------------------------|---|--|
| Range: | Function: | |
| 100 RPM* [1 - 600 RPM] | Enter the maximum permissible speed error between the motor speed and the output of the ramp when ramping. In open loop the motor speed is estimated and in closed loop it is the feedback from encoder/resolver. | |


| 4-38 Tracking Error Ramping Timeout | | |
|-------------------------------------|------------------|--|
| Range: | | Function: |
| 1.00 s* | [0.00 - 60.00 s] | Enter the time-out period during which an error greater than the value set in 4-37 <i>Tracking Error Ramping</i> while Ramping is permissible. |

| 4-39 Tracking Error After Ramping Timeout | | |
|---|------------------|---|
| Range: | | Function: |
| 5.00 s* | [0.00 - 60.00 s] | Enter the time-out period after ramping where 4-37 <i>Tracking Error Ramping</i> and 4-38 <i>Tracking Error Ramping Timeout</i> are still active. |

3.6.3 4-5* Adjustable Warnings

Use these parameters to adjust warning limits for current, speed, reference and feedback. Warnings that are shown on the display can be programmed as an output or sent via serial bus.

Warnings are shown on display, programmed output or serial bus.

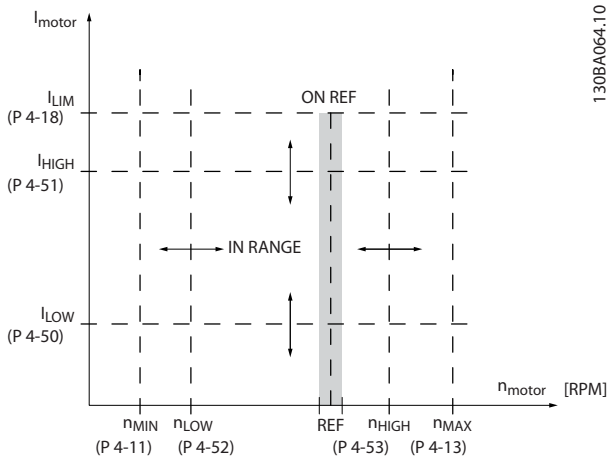

130BA064.10

| 4-50 Warning Current Low | | |
|--------------------------|-------------------------|---|
| Range: | | Function: |
| 0.00 A* | [Application dependant] | Enter the I_{LOW} value. When the motor current falls below this limit, the display reads <i>Current Low</i> . The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). Refer to the drawing in this section. |

| 4-51 Warning Current High | | |
|---------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the I_{HIGH} value. When the motor current exceeds this limit, the display reads <i>Current High</i> . The |

| 4-51 Warning Current High | | |
|---------------------------|--|--|
| Range: | | Function: |
| | | signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). Refer to the drawing in this section. |

| 4-52 Warning Speed Low | | |
|------------------------|-------------------------|---|
| Range: | | Function: |
| 0 RPM* | [Application dependant] | Enter the n_{LOW} value. When the motor speed exceeds this limit, the display reads <i>Speed Low</i> . The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). |

| 4-53 Warning Speed High | | |
|-------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the n_{HIGH} value. When the motor speed exceeds this limit, the display reads <i>Speed High</i> . The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). Programme the upper signal limit of the motor speed, n_{HIGH} , within the normal working range of the frequency converter. Refer to the drawing in this section. |

| 4-54 Warning Reference Low | | |
|----------------------------|-------------------------|--|
| Range: | | Function: |
| -999999.999* | [Application dependant] | Enter the lower reference limit. When the actual reference falls below this limit, the display indicates <i>Ref Low</i> . The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). |

| 4-55 Warning Reference High | | |
|-----------------------------|-------------------------|---|
| Range: | | Function: |
| 999999.999* | [Application dependant] | Enter the upper reference limit. When the actual reference exceeds this limit, the display reads <i>Ref High</i> . The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). |

| 4-56 Warning Feedback Low | | |
|--|----------------------------|---|
| Range: | | Function: |
| -999999.999 ReferenceFeed- backUnit* | [Application dependant] | Enter the lower feedback limit. When the feedback falls below this limit, the display reads Feedb Low. The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). |

| 4-57 Warning Feedback High | | |
|---|----------------------------|--|
| Range: | | Function: |
| 999999.999 ReferenceFeed- backUnit* | [Application dependant] | Enter the upper feedback limit. When the feedback exceeds this limit, the display reads Feedb High. The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). |

| 4-58 Missing Motor Phase Function | | |
|---|--------------------------|--|
| Displays an alarm in the event of a missing motor phase (alarm 30, 31 or 32). Select disabled for no missing motor phase alarm. It is strongly recommended to make an active setting to avoid motor damage. | | |
| Option: | Function: | |
| [0] * | Disabled | No alarm is displayed if a missing motor phase occurs. |
| [1] | Trip 100 ms | Trips after 100ms. Select 100ms for fast detection of missing motor phase. |
| [2] | Trip 1000 ms | Trips after 1000ms. Select 1000ms for slow detection of missing motor phase. |
| [3] | Trip 100ms 3ph detec. | |

NOTE

This parameter cannot be adjusted while the motor is running.

3.6.4 4-6* Speed Bypass

Some systems call for avoiding certain output frequencies or speeds, due to resonance problems in the system. A maximum of four frequency or speed ranges can be avoided.

| 4-60 Bypass Speed From [RPM] | | |
|------------------------------|----------------------------|---|
| Array [4] | | |
| Range: | | Function: |
| Application dependent* | [Application dependant] | Some systems call for avoiding certain output speeds due to resonance problems in the system. Enter the lower limits of the speeds to be avoided. |

| 4-61 Bypass Speed From [Hz] | | |
|--|--|---|
| Array [4] | | |
| Range: | | Function: |
| Size related* Application dependent* | [0.0 - par. 4-14 Hz] [Application dependant] | Some systems call for avoiding certain output speeds due to resonance problems in the system. Enter the lower limits of the speeds to be avoided. |

| 4-62 Bypass Speed To [RPM] | | |
|----------------------------|----------------------------|---|
| Array [4] | | |
| Range: | | Function: |
| Application dependent* | [Application dependant] | Some systems call for avoiding certain output speeds due to resonance problems in the system. Enter the upper limits of the speeds to be avoided. |

| 4-63 Bypass Speed To [Hz] | | |
|---------------------------|----------------------------|---|
| Array [4] | | |
| Range: | | Function: |
| Application dependent* | [Application dependant] | Some systems call for avoiding certain output speeds due to resonance problems in the system. Enter the upper limits of the speeds to be avoided. |

3.7 Parameters: 5-** Digital In/Out

3.7.1 5-0* Digital I/O Mode

Parameters for configuring the input and output using NPN and PNP.

These parameters cannot be adjusted while motor is running.

| 5-00 Digital I/O Mode | | |
|-----------------------|-----------|---|
| Option: | Function: | |
| | | Digital inputs and programmed digital outputs are pre-programmable for operation either in PNP or NPN systems. |
| [0] * | PNP | Action on positive directional pulses (↑). PNP systems are pulled down to GND. |
| [1] | NPN | Action on negative directional pulses (↓). NPN systems are pulled up to + 24V, internally in the frequency converter. |

NOTE

Once this parameter has been changed, it must be activated by performing a power cycle.

| 5-01 Terminal 27 Mode | | |
|-----------------------|-----------|--|
| Option: | Function: | |
| [0] * | Input | Defines terminal 27 as a digital input. |
| [1] | Output | Defines terminal 27 as a digital output. |

| 5-02 Terminal 29 Mode | | |
|-----------------------|-----------|--|
| Option: | Function: | |
| [0] * | Input | Defines terminal 29 as a digital input. |
| [1] | Output | Defines terminal 29 as a digital output. |

This parameter is available for FC 302 only.

3.7.2 Digital Inputs

The digital inputs are used for selecting various functions in the frequency converter. All digital inputs can be set to the following functions:

| Digital input function | Select | Terminal |
|-------------------------|--------|------------------|
| No operation | [0] | All *term 32, 33 |
| Reset | [1] | All |
| Coast inverse | [2] | All *term 27 |
| Coast and reset inverse | [3] | All |
| Quick stop inverse | [4] | All |
| DC-brake inverse | [5] | All |
| Stop inverse | [6] | All |
| Start | [8] | All *term 18 |
| Latched start | [9] | All |

| | | |
|------------------------------|------|--------------|
| Reversing | [10] | All *term 19 |
| Start reversing | [11] | All |
| Enable start forward | [12] | All |
| Enable start reverse | [13] | All |
| Jog | [14] | All *term 29 |
| Preset reference on | [15] | All |
| Preset ref bit 0 | [16] | All |
| Preset ref bit 1 | [17] | All |
| Preset ref bit 2 | [18] | All |
| Freeze reference | [19] | All |
| Freeze output | [20] | All |
| Speed up | [21] | All |
| Speed down | [22] | All |
| Set-up select bit 0 | [23] | All |
| Set-up select bit 1 | [24] | All |
| Precise stop inverse | [26] | 18, 19 |
| Precises start, stop | [27] | 18, 19 |
| Catch up | [28] | All |
| Slow down | [29] | All |
| Counter input | [30] | 29, 33 |
| Pulse input Edge Triggered | [31] | 29, 33 |
| Pulse input Time Based | [32] | 29, 33 |
| Ramp bit 0 | [34] | All |
| Ramp bit 1 | [35] | All |
| Latched precise start | [40] | 18, 19 |
| Latched precise stop inverse | [41] | 18, 19 |
| External interlock | [51] | |
| DigiPot Increase | [55] | All |
| DigiPot Decrease | [56] | All |
| DigiPot Clear | [57] | All |
| Digipot Hoist | [58] | All |
| Counter A (up) | [60] | 29, 33 |
| Counter A (down) | [61] | 29, 33 |
| Reset Counter A | [62] | All |
| Counter B (up) | [63] | 29, 33 |
| Counter B (down) | [64] | 29, 33 |
| Reset Counter B | [65] | All |
| Mech. Brake Feedb. | [70] | All |
| Mech. Brake Feedb. Inv. | [71] | All |
| PID Error Inv. | [72] | All |
| PID Reset I-part | [73] | All |
| PID enable | [74] | All |
| PTC Card 1 | [80] | All |

FC 300 standard terminals are 18, 19, 27, 29, 32 and 33. MCB 101 terminals are X30/2, X30/3 and X30/4.

Terminal 29 functions as an output only in FC 302.

Functions dedicated to only one digital input are stated in the associated parameter.

All digital inputs can be programmed to these functions:

| | | |
|------|-------------------------|--|
| [0] | No operation | No reaction to signals transmitted to the terminal. |
| [1] | Reset | Resets frequency converter after a TRIP/ALARM. Not all alarms can be reset. |
| [2] | Coast inverse | (Default Digital input 27): Coasting stop, inverted input (NC). The frequency converter leaves the motor in free mode. Logic '0' => coasting stop. |
| [3] | Coast and reset inverse | Reset and coasting stop Inverted input (NC). Leaves motor in free mode and resets frequency converter. Logic '0' => coasting stop and reset. |
| [4] | Quick stop inverse | Inverted input (NC). Generates a stop in accordance with quick-stop ramp time set in 3-81 Quick Stop Ramp Time. When motor stops, the shaft is in free mode. Logic '0' => Quick-stop. |
| [5] | DC-brake inverse | Inverted input for DC braking (NC). Stops motor by energizing it with a DC current for a certain time period. See 2-01 DC Brake Current to 2-03 DC Brake Cut In Speed [RPM]. The function is only active when the value in 2-02 DC Braking Time is different from 0. Logic '0' => DC braking. |
| [6] | Stop inverse | Stop Inverted function. Generates a stop function when the selected terminal goes from logical level '1' to '0'. The stop is performed according to the selected ramp time (3-42 Ramp 1 Ramp Down Time, 3-52 Ramp 2 Ramp down Time, 3-62 Ramp 3 Ramp down Time, 3-72 Ramp 4 Ramp Down Time). NOTE When the frequency converter is at the torque limit and has received a stop command, it may not stop by itself. To ensure that the frequency converter stops, configure a digital output to <i>Torque limit & stop</i> [27] and connect this digital output to a digital input that is configured as coast. |
| [8] | Start | (Default Digital input 18): Select start for a start/stop command. Logic '1' = start, logic '0' = stop. |
| [9] | Latched start | The motor starts, if a pulse is applied for min. 2 ms. The motor stops when Stop inverse is activated or a reset command (via DI) is given. |
| [10] | Reversing | (Default Digital input 19). Change the direction of motor shaft rotation. Select Logic '1' to reverse. The reversing signal only changes the direction of rotation. It does not activate the start function. Select both directions in 4-10 Motor Speed Direction. The function is not active in process closed loop. |

| | | |
|------|----------------------|--|
| [11] | Start reversing | Used for start/stop and for reversing on the same wire. Signals on start are not allowed at the same time. |
| [12] | Enable start forward | Disengages the counterclockwise movement and allows for the clockwise direction. |
| [13] | Enable start reverse | Disengages the clockwise movement and allows for the counterclockwise direction. |
| [14] | Jog | (Default Digital input 29): Use to activate jog speed. See 3-11 Jog Speed [Hz]. |
| [15] | Preset reference on | Shifts between external reference and preset reference. It is assumed that <i>External/preset</i> [1] has been selected in 3-04 Reference Function. Logic '0' = external reference active; logic '1' = one of the eight preset references is active. |
| [16] | Preset ref bit 0 | Preset ref. bit 0, 1, and 2 enables a choice between one of the eight preset references according to the table below. |
| [17] | Preset ref bit 1 | Same as Preset ref bit 0 [16]. |
| [18] | Preset ref bit 2 | Same as Preset ref bit 0 [16]. |




| Preset ref. bit | 2 | 1 | 0 |
|-----------------|---|---|---|
| Preset ref. 0 | 0 | 0 | 0 |
| Preset ref. 1 | 0 | 0 | 1 |
| Preset ref. 2 | 0 | 1 | 0 |
| Preset ref. 3 | 0 | 1 | 1 |
| Preset ref. 4 | 1 | 0 | 0 |
| Preset ref. 5 | 1 | 0 | 1 |
| Preset ref. 6 | 1 | 1 | 0 |
| Preset ref. 7 | 1 | 1 | 1 |

| | | |
|------|---------------|--|
| [19] | Freeze ref | Freezes the actual reference, which is now the point of enable/condition for Speed up and Speed down to be used. If Speed up/down is used, the speed change always follows ramp 2 (3-51 Ramp 2 Ramp up Time and 3-52 Ramp 2 Ramp down Time) in the range 0 - 3-03 Maximum Reference. |
| [20] | Freeze output | Freezes the actual motor frequency (Hz), which is now the point of enable/condition for Speed up and Speed down to be used. If Speed up/down is used, the speed change always follows ramp 2 (3-51 Ramp 2 Ramp up Time and 3-52 Ramp 2 Ramp down Time) in the range 0 - 1-23 Motor Frequency. NOTE When Freeze output is active, the frequency converter cannot be stopped via a low 'start [8]' signal. Stop the frequency converter via a terminal programmed for Coasting inverse [2] or Coast and reset, inverse. |
| [21] | Speed up | Select Speed up and Speed down if digital control of the up/down speed is desired (motor potentiometer). Activate this function by selecting either Freeze reference or Freeze output. When Speed up/down is activated for less than 400msec. the |

resulting reference will be increased/ decreased by 0.1 %. If Speed up/ down is activated for more than 400msec. the resulting reference will follow the setting in ramping up/ down parameter 3-x1/ 3-x2.

| | Shut down | Catch up |
|----------------------|-----------|----------|
| Unchanged speed | 0 | 0 |
| Reduced by %-value | 1 | 0 |
| Increased by %-value | 0 | 1 |
| Reduced by %-value | 1 | 1 |

| | | |
|------|----------------------|--|
| [22] | Speed down | Same as Speed up [21]. |
| [23] | Set-up select bit 0 | Select Set-up select bit 0 or Select Set-up select bit 1 to select one of the four set-ups. Set 0-10 Active Set-up to Multi Set-up. |
| [24] | Set-up select bit 1 | (Default Digital input 32): Same as Set-up select bit 0 [23]. |
| [26] | Precise stop inv. | Sends an inverted stop signal when the precise stop function is activated in 1-83 Precise Stop Function. Precise stop inverse function is available for terminals 18 or 19. |
| [27] | Precise start, stop | Use when Precise ramp stop [0] is selected in 1-83 Precise Stop Function. Precise start, stop is available for terminals 18 and 19. Precise start makes sure that the angle that the rotor turns from standing still to reference is the same for each start (for same ramp time, same set-point). This is the equivalent to the precise stop where the angle that the rotor turns from reference to standing still is the same for each stop. When using for 1-83 Precise Stop Function [1] or [2]: The frequency converter needs a Precise Stop signal before the value of 1-84 Precise Stop Counter Value is reached. If this is not supplied, the frequency converter will not stop when the value in 1-84 Precise Stop Counter Value is reached. Precise start, stop must be triggered by a Digital Input and is available for terminals 18 and 19. |
| [28] | Catch up | Increases reference value by percentage (relative) set in 3-12 Catch up/slow Down Value. |
| [29] | Slow down | Reduces reference value by percentage (relative) set in 3-12 Catch up/slow Down Value. |
| [30] | Counter input | Precise stop function in 1-83 Precise Stop Function acts as Counter stop or speed compensated counter stop with or without reset. The counter value must be set in 1-84 Precise Stop Counter Value. |
| [31] | Pulse edge triggered | Edge triggered pulse input counts number of pulse flanks per sample time. This gives a higher resolution at high frequencies, but is not as precise at lower frequencies. Use this pulse |
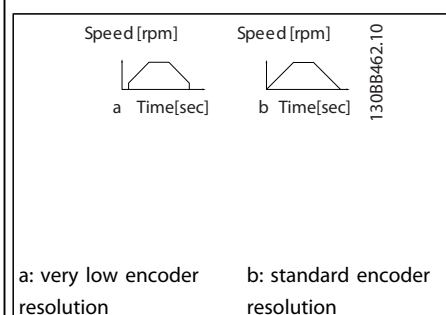
| | | |
|------|------------------|--|
| | | principle for encoders with very low resolution (e.g. 30 ppr).  |
| [32] | Pulse time based | Time based pulse input measures the duration between flanks. This gives a higher resolution at lower frequencies, but is not as precise at higher frequencies. This principle has a cut-off frequency which makes it unsuited for encoders with very low resolutions (e.g. 30 ppr) at low speeds.  a: very low encoder resolution b: standard encoder resolution  |
| [34] | Ramp bit 0 | Enables a choice between one of the 4 ramps available, according to the table below. |
| [35] | Ramp bit 1 | Same as Ramp bit 0. |

| Preset ramp bit | 1 | 0 |
|-----------------|---|---|
| Ramp 1 | 0 | 0 |
| Ramp 2 | 0 | 1 |
| Ramp 3 | 1 | 0 |
| Ramp 4 | 1 | 1 |

| | | |
|------|------------------------------|---|
| [40] | Latched Precise Start | A latched Precise Start only requires a pulse of 3ms on T18 or T19. When using for 1-83 [1] or [2]: When the reference is reached, the frequency converter will internally enable the Precise Stop signal. This means that the frequency converter will do the Precise Stop when the counter value of 1-84 Precise Stop Counter Value is reached. |
| [41] | Latched Precise Stop inverse | Sends a latched stop signal when the precise stop function is activated in 1-83 Precise Stop Function. The Latched Precise stop inverse function is available for terminals 18 or 19. |
| [51] | External interlock | This function makes it possible to give an external fault to the drive. This fault is treated in the same way as an internally generated alarm. |

| | | |
|------|---------------------------|--|
| [55] | DigiPot Increase | INCREASE signal to the Digital Potentiometer function described in parameter group 3-9* |
| [56] | DigiPot Decrease | DECREASE signal to the Digital Potentiometer function described in parameter group 3-9* |
| [57] | DigiPot Clear | Clears the Digital Potentiometer reference described in parameter group 3-9* |
| [60] | Counter A | (Terminal 29 or 33 only) Input for increment counting in the SLC counter. |
| [61] | Counter A | (Terminal 29 or 33 only) Input for decrement counting in the SLC counter. |
| [62] | Reset Counter A | Input for reset of counter A. |
| [63] | Counter B | (Terminal 29 or 33 only) Input for increment counting in the SLC counter. |
| [64] | Counter B | (Terminal 29 or 33 only) Input for decrement counting in the SLC counter. |
| [65] | Reset Counter B | Input for reset of counter B. |
| [70] | Mech. Brake Feedback | Brake feedback for hoisting applications: Set 1-01 Motor Control Principle to [3] flux w/ motor feedback; set 1-72 Start Function to [6] Hoist mech brake Ref. |
| [71] | Mech. Brake Feedback inv. | Inverted brake feedback for hoisting applications |
| [72] | PID error inverse | When enabled, it inverts the resulting error from the process PID controller. Available only if "Configuration Mode" is set to "Surface Winder", "Extended PID Speed OL" or "Extended PID Speed CL". |
| [73] | PID reset I-part | When enabled, resets the I-part of the Process PID controller. Equivalent to 7-40 Process PID I-part Reset. Available only if "Configuration Mode" is set to "Surface Winder", "Extended PID Speed OL" or "Extended PID Speed CL". |
| [74] | PID enable | When enabled, enables the extended process PID controller. Equivalent to 7-50 Process PID Extended PID. Available only if "Configuration Mode" is set "Extended PID Speed OL" or "Extended PID Speed CL". |
| [80] | PTC Card 1 | All Digital Inputs can be set to PTC Card 1 [80]. However, only one Digital Input must be set to this choice. |
| [91] | Profidrive OFF2 | The functionality is the same as the according control word bit of the Profibus/Profinet option. |
| [92] | Profidrive OFF3 | The functionality is the same as the according control word bit of the Profibus/Profinet option. |
| [98] | Start edge triggered | Edge triggered start command. Keeps the start command alive, even if the input is going back to low - can be used for a start push-button. |

5-10 Terminal 18 Digital Input
Option: Function:

| | | |
|-------|-------|---|
| [8] * | Start | Functions are described under 5-1* Digital Inputs |
|-------|-------|---|

5-11 Terminal 19 Digital Input
Option: Function:

| | | |
|--------|-----------|---|
| [10] * | Reversing | Functions are described under 5-1* Digital Inputs |
|--------|-----------|---|

5-12 Terminal 27 Digital Input
Option: Function:

| | | |
|-------|---------------|---|
| [2] * | Coast inverse | Functions are described under 5-1* Digital Inputs |
|-------|---------------|---|

5-13 Terminal 29 Digital Input
Option: Function:

| | | |
|--------|-----|---|
| | | Select the function from the available digital input range and the additional options [60], [61], [63] and [64]. Counters are used in Smart Logic Control functions. This parameter is available for FC 302 only. |
| [14] * | Jog | Functions are described under 5-1* Digital Inputs |

5-14 Terminal 32 Digital Input
Option: Function:

| | | |
|-------|--------------|--|
| | | Select the function from the available digital input range and the additional options [60], [61], [63] and [64]. Counters are used in Smart Logic Control functions. |
| [0] * | No operation | Functions are described under 5-1* Digital Inputs |

5-15 Terminal 33 Digital Input
Option: Function:

| | | |
|-------|--------------|--|
| | | Select the function from the available digital input range and the additional options [60], [61], [63] and [64]. Counters are used in Smart Logic Control functions. |
| [0] * | No operation | Functions are described under 5-1* Digital Inputs |

5-16 Terminal X30/2 Digital Input
Option: Function:

| | | |
|-------|--------------|---|
| [0] * | No operation | This parameter is active when option module MCB101 is installed in the frequency converter. Functions are described under 5-1* Digital Inputs |
|-------|--------------|---|

5-17 Terminal X30/3 Digital Input
Option: Function:

| | | |
|-------|--------------|---|
| [0] * | No operation | This parameter is active when option module MCB101 is installed in the frequency converter. Functions are described under 5-1* Digital Inputs |
|-------|--------------|---|

5-18 Terminal X30/4 Digital Input
Option: Function:

| | | |
|-------|--------------|---|
| [0] * | No operation | This parameter is active when option module MCB101 is installed in the frequency converter. Functions are described under 5-1* Digital Inputs |
|-------|--------------|---|

| 5-19 Terminal 37 Safe Stop | | |
|----------------------------|-------------------|--|
| Option: | Function: | |
| [1] * | Safe Stop Alarm | Coasts frequency converter when safe stop is activated. Manual reset from LCP, digital input or fieldbus. |
| [3] | Safe Stop Warning | Coasts frequency converter when safe stop is activated (T-37 off). When safe stop circuit is reestablished, the frequency converter will continue without manual reset. |
| [4] | PTC 1 Alarm | Coasts frequency converter when safe stop is activated. Manual reset from LCP, digital input or fieldbus. Choice 4 is only available when the MCB 112 PTC Thermistor Card is connected. |
| [5] | PTC 1 Warning | Coasts frequency converter when safe stop is activated (T-37 off). When safe stop circuit is reestablished, the frequency converter will continue without manual reset, unless a Digital Input set to PTC Card 1 [80] is still enabled. Choice 5 is only available when the MCB 112 PTC Thermistor Card is connected. |
| [6] | PTC 1 & Relay A | This choice is used when the PTC option is gated together with a Stop button through a Safety relay to T-37. Coasts frequency converter when safe stop is activated. Manual reset from LCP, digital input or fieldbus. Choice 6 is only available when the MCB 112 PTC Thermistor Card is connected. |
| [7] | PTC 1 & Relay W | This choice is used when the PTC option is gated together with a Stop button through a Safety relay to T-37. Coasts frequency converter when safe stop is activated (T-37 off). When safe stop circuit is reestablished, the frequency converter will continue without manual reset, unless a Digital Input set to PTC Card 1 [80] is (still) enabled. Choice 7 is only available when the MCB 112 PTC Thermistor Card is connected. |
| [8] | PTC 1 & Relay A/W | This choice makes it possible to use a combination of Alarm and Warning. Choice 8 is only available when the MCB 112 PTC Thermistor Card is connected. |
| [9] | PTC 1 & Relay W/A | This choice makes it possible to use a combination of Alarm and Warning. Choice 9 is only available when the MCB 112 PTC Thermistor Card is connected. |

Choices 4 - 9 are only available when the MCB 112 PTC Thermistor Card is connected.

NOTE

When Auto Reset/Warning is selected the frequency converter opens up for automatic restart.

Overview of functions, alarms and warnings

| Function | No. | PTC | Relay |
|-------------------|------|-----------------------|-----------------|
| No Function | [0] | - | - |
| Safe Stop Alarm | [1]* | - | Safe Stop [A68] |
| Safe Stop Warning | [3] | - | Safe Stop [W68] |
| PTC 1 Alarm | [4] | PTC 1 Safe Stop [A71] | - |
| PTC 1 Warning | [5] | PTC 1 Safe Stop [W71] | - |
| PTC 1 & Relay A | [6] | PTC 1 Safe Stop [A71] | Safe Stop [A68] |
| PTC 1 & Relay W | [7] | PTC 1 Safe Stop [W71] | Safe Stop [W68] |
| PTC 1 & Relay A/W | [8] | PTC 1 Safe Stop [A71] | Safe Stop [W68] |
| PTC 1 & Relay W/A | [9] | PTC 1 Safe Stop [W71] | Safe Stop [A68] |

W means warning and A means alarm. For further information, see Alarms and Warnings in section *Troubleshooting* in the Design Guide or the Operating Instructions. A dangerous failure related to Safe Stop will give Alarm: Dangerous Failure [A72].

Please refer to the section *Description of Alarm Word, Warning Word and extended Status Word* in the chapter *Troubleshooting*.

5-20 Terminal X46/1 Digital Input

| Option: | Function: | |
|---------|--------------|---|
| [0] * | No operation | This parameter is active when option module MCB 113 is installed in the frequency converter. Functions are described under 5-1* <i>Digital Inputs</i> |

5-21 Terminal X46/3 Digital Input

| Option: | Function: | |
|---------|--------------|---|
| [0] * | No operation | This parameter is active when option module MCB 113 is installed in the frequency converter. Functions are described under 5-1* <i>Digital Inputs</i> |

5-22 Terminal X46/5 Digital Input

| Option: | Function: | |
|---------|--------------|---|
| [0] * | No operation | This parameter is active when option module MCB 113 is installed in the frequency converter. Functions are described under 5-1* <i>Digital Inputs</i> |

5-23 Terminal X46/7 Digital Input

| Option: | Function: | |
|---------|--------------|---|
| [0] * | No operation | This parameter is active when option module MCB 113 is installed in the frequency converter. Functions are described under 5-1* <i>Digital Inputs</i> |

5-24 Terminal X46/9 Digital Input
Option: **Function:**

| | | |
|-------|--------------|---|
| [0] * | No operation | This parameter is active when option module MCB 113 is installed in the frequency converter. Functions are described under 5-1* <i>Digital Inputs</i> |
|-------|--------------|---|

5-25 Terminal X46/11 Digital Input
Option: **Function:**

| | | |
|-------|--------------|---|
| [0] * | No operation | This parameter is active when option module MCB 113 is installed in the frequency converter. Functions are described under 5-1* <i>Digital Inputs</i> |
|-------|--------------|---|

5-26 Terminal X46/13 Digital Input
Option: **Function:**

| | | |
|-------|--------------|---|
| [0] * | No operation | This parameter is active when option module MCB 113 is installed in the frequency converter. Functions are described under 5-1* <i>Digital Inputs</i> |
|-------|--------------|---|

3.7.3 5-3* Digital Outputs

The 2 solid-state digital outputs are common for terminals 27 and 29. Set the I/O function for terminal 27 in *5-01 Terminal 27 Mode*, and set the I/O function for terminal 29 in *5-02 Terminal 29 Mode*. These parameters cannot be adjusted while the motor is running.

| | | |
|-----|-------------------------------|---|
| [0] | No operation | <i>Default for all digital outputs and relay outputs</i> |
| [1] | Control ready | The control card is ready. E.g.: Feedback from a drive where the control is supplied by an external 24 V (MCB 107) and the main power to drive is not detected. |
| [2] | Drive ready | The frequency converter is ready for operation and applies a supply signal on the control board. |
| [3] | Drive ready / remote control | The frequency converter is ready for operation and is in [Auto on] mode. |
| [4] | Enable / no warning | Ready for operation. No start or stop command is been given (start/disable). No warnings are active. |
| [5] | VLT running | Motor is running and shaft torque present. |
| [6] | Running / no warning | Output speed is higher than the speed set in <i>1-81 Min Speed for Function at Stop [RPM]</i> . The motor is running and there are no warnings. |
| [7] | Run in range / no warning | Motor is running within the programmed current and speed ranges set in <i>4-50 Warning Current Low</i> to <i>4-53 Warning Speed High</i> . There are no warnings. |
| [8] | Run on reference / no warning | Motor runs at reference speed. No warnings. |

| | | |
|------|-----------------------------------|--|
| [9] | Alarm | An alarm activates the output. There are no warnings. |
| [10] | Alarm or warning | An alarm or a warning activates the output. |
| [11] | At torque limit | The torque limit set in <i>4-16 Torque Limit Motor Mode</i> or <i>4-17 Torque Limit Generator Mode</i> has been exceeded. |
| [12] | Out of current range | The motor current is outside the range set in <i>4-18 Current Limit</i> . |
| [13] | Below current, low | Motor current is lower than set in <i>4-50 Warning Current Low</i> . |
| [14] | Above current, high | Motor current is higher than set in <i>4-51 Warning Current High</i> . |
| [15] | Out of range | Output frequency is outside the frequency range set in <i>4-52 Warning Speed Low</i> and <i>4-53 Warning Speed High</i> . |
| [16] | Below speed, low | Output speed is lower than the setting in <i>4-52 Warning Speed Low</i> . |
| [17] | Above speed, high | Output speed is higher than the setting in <i>4-53 Warning Speed High</i> . |
| [18] | Out of feedback range | Feedback is outside the range set in <i>4-56 Warning Feedback Low</i> and <i>4-57 Warning Feedback High</i> . |
| [19] | Below feedback low | Feedback is below the limit set in <i>4-56 Warning Feedback Low</i> . |
| [20] | Above feedback high | Feedback is above the limit set in <i>4-57 Warning Feedback High</i> . |
| [21] | Thermal warning | The thermal warning turns on when the temperature exceeds the limit in the motor, the frequency converter, the brake resistor, or the thermistor. |
| [22] | Ready, no thermal warning | Frequency converter is ready for operation and there is no over-temperature warning. |
| [23] | Remote, ready, no thermal warning | Frequency converter is ready for operation and is in [Auto on] mode. There is no over-temperature warning. |
| [24] | Ready, no over-/ under voltage | Frequency converter is ready for operation and the mains voltage is within the specified voltage range (see <i>General Specifications</i> section in the Design Guide). |
| [25] | Reverse | <i>Reversing. Logic '1'</i> when CW rotation of the motor. <i>Logic '0'</i> when CCW rotation of the motor. If the motor is not rotating the output will follow the reference. |
| [26] | Bus OK | Active communication (no time-out) via the serial communication port. |
| [27] | Torque limit and stop | Use in performing a coasting stop and in torque limit condition. If the frequency converter has received a stop signal and is at the torque limit, the signal is Logic '0'. |
| [28] | Brake, no brake warning | Brake is active and there are no warnings. |
| [29] | Brake ready, no fault | Brake is ready for operation and there are no faults. |

| | | |
|------|-----------------------------------|---|
| [30] | Brake fault (IGBT) | Output is Logic '1' when the brake IGBT is short-circuited. Use this function to protect the frequency converter if there is a fault on the brake modules. Use the output/relay to cut out the main voltage from the frequency converter. |
| [31] | Relay 123 | Relay is activated when Control Word [0] is selected in parameter group 8-**. |
| [32] | Mechanical brake control | Enables control of an external mechanical brake, see description in the section <i>Control of Mechanical Brake</i> , and parameter group 2-2* |
| [33] | Safe stop activated (FC 302 only) | Indicates that the safe stop on terminal 37 has been activated. |
| [40] | Out of ref range | Active when the actual speed is outside settings in 4-52 <i>Warning Speed Low</i> to 4-55 <i>Warning Reference High</i> . |
| [41] | Below reference low | Active when actual speed is below speed reference setting. |
| [42] | Above reference high | Active when actual speed is above speed reference setting |
| [43] | Extended PID Limit | |
| [45] | Bus Ctrl | Controls output via bus. The state of the output is set in 5-90 <i>Digital & Relay Bus Control</i> . The output state is retained in the event of bus time-out. |
| [46] | Bus Ctrl On at timeout | Controls output via bus. The state of the output is set in 5-90 <i>Digital & Relay Bus Control</i> . In the event of bus time-out the output state is set high (On). |
| [47] | Bus Ctrl Off at timeout | Controls output via bus. The state of the output is set in 5-90 <i>Digital & Relay Bus Control</i> . In the event of bus time-out the output state is set low (Off). |
| [51] | MCO controlled | Active when a MCO 302 or MCO 305 is connected. The output is controlled from option. |
| [55] | Pulse output | |
| [60] | Comparator 0 | See parameter group 13-1*. If Comparator 0 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [61] | Comparator 1 | See parameter group 13-1*. If Comparator 1 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [62] | Comparator 2 | See parameter group 13-1*. If Comparator 2 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [63] | Comparator 3 | See parameter group 13-1*. If Comparator 3 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [64] | Comparator 4 | See parameter group 13-1*. If Comparator 4 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |

| | | |
|------|---------------------|---|
| [65] | Comparator 5 | See parameter group 13-1*. If Comparator 5 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [70] | Logic Rule 0 | See parameter group 13-4*. If Logic Rule 0 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [71] | Logic Rule 1 | See parameter group 13-4*. If Logic Rule 1 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [72] | Logic Rule 2 | See parameter group 13-4*. If Logic Rule 2 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [73] | Logic Rule 3 | See parameter group 13-4*. If Logic Rule 3 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [74] | Logic Rule 4 | See parameter group 13-4*. If Logic Rule 4 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [75] | Logic Rule 5 | See parameter group 13-4*. If Logic Rule 5 is evaluated as TRUE, the output will go high. Otherwise, it will be low. |
| [80] | SL Digital Output A | See 13-52 <i>SL Controller Action</i> . The output will go high whenever the Smart Logic Action [38] <i>Set dig. out. A high</i> is executed. The output will go low whenever the Smart Logic Action [32] <i>Set dig. out. A low</i> is executed. |
| [81] | SL Digital Output B | See 13-52 <i>SL Controller Action</i> . The input will go high whenever the Smart Logic Action [39] <i>Set dig. out. A high</i> is executed. The input will go low whenever the Smart Logic Action [33] <i>Set dig. out. A low</i> is executed. |
| [82] | SL Digital Output C | See 13-52 <i>SL Controller Action</i> . The input will go high whenever the Smart Logic Action [40] <i>Set dig. out. A high</i> is executed. The input will go low whenever the Smart Logic Action [34] <i>Set dig. out. A low</i> is executed. |
| [83] | SL Digital Output D | See 13-52 <i>SL Controller Action</i> . The input will go high whenever the Smart Logic Action [41] <i>Set dig. out. A high</i> is executed. The input will go low whenever the Smart Logic Action [35] <i>Set dig. out. A low</i> is executed. |
| [84] | SL Digital Output E | See 13-52 <i>SL Controller Action</i> . The input will go high whenever the Smart Logic Action [42] <i>Set dig. out. A high</i> is executed. The input will go low whenever the Smart Logic Action [36] <i>Set dig. out. A low</i> is executed. |
| [85] | SL Digital Output F | See 13-52 <i>SL Controller Action</i> . The input will go high whenever the Smart Logic Action [43] <i>Set dig. out. A high</i> is executed. The input will go low whenever the Smart Logic Action [37] <i>Set dig. out. A low</i> is executed. |

| | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|------------------------------|---|---|------------------------------|-------------------------------|---|---|---|--|---|---|--------------------------------------|--|--|------|---|---|-------------|---|---|-------------|---|---|------|---|---|
| [120] | Local reference active | Output is high when 3-13 Reference Site = [2] Local or when 3-13 Reference Site = [0] Linked to hand auto at the same time as the LCP is in [Hand on] mode. <table border="1"> <tr> <td>Reference site set in 3-13 Reference Site</td> <td>Local reference active [120]</td> <td>Remote reference active [121]</td> </tr> <tr> <td>Reference site: Local 3-13 Reference Site [2]</td> <td>1</td> <td>0</td> </tr> <tr> <td>Reference site: Remote 3-13 Reference Site [1]</td> <td>0</td> <td>1</td> </tr> <tr> <td>Reference site: Linked to Hand/ Auto</td> <td></td> <td></td> </tr> <tr> <td>Hand</td> <td>1</td> <td>0</td> </tr> <tr> <td>Hand -> off</td> <td>1</td> <td>0</td> </tr> <tr> <td>Auto -> off</td> <td>0</td> <td>0</td> </tr> <tr> <td>Auto</td> <td>0</td> <td>1</td> </tr> </table> | Reference site set in 3-13 Reference Site | Local reference active [120] | Remote reference active [121] | Reference site: Local 3-13 Reference Site [2] | 1 | 0 | Reference site: Remote 3-13 Reference Site [1] | 0 | 1 | Reference site: Linked to Hand/ Auto | | | Hand | 1 | 0 | Hand -> off | 1 | 0 | Auto -> off | 0 | 0 | Auto | 0 | 1 |
| Reference site set in 3-13 Reference Site | Local reference active [120] | Remote reference active [121] | | | | | | | | | | | | | | | | | | | | | | | | |
| Reference site: Local 3-13 Reference Site [2] | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | |
| Reference site: Remote 3-13 Reference Site [1] | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | |
| Reference site: Linked to Hand/ Auto | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Hand | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | |
| Hand -> off | 1 | 0 | | | | | | | | | | | | | | | | | | | | | | | | |
| Auto -> off | 0 | 0 | | | | | | | | | | | | | | | | | | | | | | | | |
| Auto | 0 | 1 | | | | | | | | | | | | | | | | | | | | | | | | |
| [121] | Remote reference active | Output is high when 3-13 Reference Site = Remote [1] or Linked to hand/auto [0] while the LCP is in [Auto on] mode. See above. | | | | | | | | | | | | | | | | | | | | | | | | |
| [122] | No alarm | Output is high when no alarm is present. | | | | | | | | | | | | | | | | | | | | | | | | |
| [123] | Start command active | Output is high when there is an active Start command (i.e. via digital input bus connection or [Hand on] or [Auto on]), and no Stop or Start command is active. | | | | | | | | | | | | | | | | | | | | | | | | |
| [124] | Running reverse | Output is high when the frequency converter is running counter clockwise (the logical product of the status bits 'running' AND 'reverse'). | | | | | | | | | | | | | | | | | | | | | | | | |
| [125] | Drive in hand mode | Output is high when the frequency converter is in [Hand on] mode (as indicated by the LED light above [Hand on]). | | | | | | | | | | | | | | | | | | | | | | | | |
| [126] | Drive in auto mode | Output is high when the frequency converter is in [Auto on] mode (as indicated by the LED light above [Auto on]). | | | | | | | | | | | | | | | | | | | | | | | | |
| [151] | ATEX ETR cur. alarm | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1. | | | | | | | | | | | | | | | | | | | | | | | | |
| [152] | ATEX ETR freq. alarm | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1. | | | | | | | | | | | | | | | | | | | | | | | | |
| [153] | ATEX ETR cur. warning | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 163 ATEX | | | | | | | | | | | | | | | | | | | | | | | | |

| | | |
|-------|------------------------|---|
| | | ETR cur.lim.warning is active, the output will be 1. |
| [154] | ATEX ETR freq. warning | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1. |
| [188] | AHF Capacitor Connect | The capacitors will be turned on at 20% (hysteresis of 50% gives an interval of 10% - 30%). The capacitors will be disconnected below 10%. The off delay is 10s and will restart if the nominal power goes above 10% during the delay. 5-80 AHF Cap Reconnect Delay is used to guarantee a minimum off-time for the capacitors. |
| [189] | External fan control | The internal logics for the internal fan control is transferred to this output to make it possible to control an external fan (relevant for HP duct cooling). |

5-30 Terminal 27 Digital Output

Option: **Function:**

| | | |
|-------|--------------|--|
| [0] * | No operation | Functions are described under 5-3* Digital Outputs |
|-------|--------------|--|

5-31 Terminal 29 Digital Output

Option: **Function:**

| | | |
|-------|--------------|---|
| [0] * | No operation | Functions are described under 5-3* Digital Outputs This parameter only applies to FC 302 |
|-------|--------------|---|

5-32 Term X30/6 Digi Out (MCB 101)

Option: **Function:**

| | | |
|-------|----------------------|---|
| [0] * | No operation | This parameter is active when option module MCB 101 is mounted in the frequency converter. Functions are described under 5-3* Digital Outputs |
| [1] | Control ready | |
| [2] | Drive ready | |
| [3] | Drive rdy/rem ctrl | |
| [4] | Enable / no warning | |
| [5] | Running | |
| [6] | Running / no warning | |
| [7] | Run in range/no warn | |
| [8] | Run on ref/no warn | |
| [9] | Alarm | |
| [10] | Alarm or warning | |
| [11] | At torque limit | |
| [12] | Out of current range | |
| [13] | Below current, low | |
| [14] | Above current, high | |
| [15] | Out of speed range | |
| [16] | Below speed, low | |
| [17] | Above speed, high | |
| [18] | Out of feedb. range | |
| [19] | Below feedback, low | |

| 5-32 Term X30/6 Digi Out (MCB 101) | | |
|------------------------------------|------------------------|--|
| Option: | Function: | |
| [20] | Above feedback, high | |
| [21] | Thermal warning | |
| [22] | Ready,no thermal W | |
| [23] | Remote,ready,no TW | |
| [24] | Ready, Voltage OK | |
| [25] | Reverse | |
| [26] | Bus OK | |
| [27] | Torque limit & stop | |
| [28] | Brake, no brake war | |
| [29] | Brake ready, no fault | |
| [30] | Brake fault (IGBT) | |
| [31] | Relay 123 | |
| [32] | Mech brake ctrl | |
| [33] | Safe stop active | |
| [38] | Motor feedback error | |
| [39] | Tracking error | |
| [40] | Out of ref range | |
| [41] | Below reference, low | |
| [42] | Above ref, high | |
| [43] | Extended PID Limit | |
| [45] | Bus ctrl. | |
| [46] | Bus ctrl, 1 if timeout | |
| [47] | Bus ctrl, 0 if timeout | |
| [51] | MCO controlled | |
| [55] | Pulse output | |
| [60] | Comparator 0 | |
| [61] | Comparator 1 | |
| [62] | Comparator 2 | |
| [63] | Comparator 3 | |
| [64] | Comparator 4 | |
| [65] | Comparator 5 | |
| [70] | Logic rule 0 | |
| [71] | Logic rule 1 | |
| [72] | Logic rule 2 | |
| [73] | Logic rule 3 | |
| [74] | Logic rule 4 | |
| [75] | Logic rule 5 | |
| [80] | SL digital output A | |
| [81] | SL digital output B | |
| [82] | SL digital output C | |
| [83] | SL digital output D | |
| [84] | SL digital output E | |
| [85] | SL digital output F | |
| [120] | Local ref active | |
| [121] | Remote ref active | |
| [122] | No alarm | |
| [123] | Start command activ | |
| [124] | Running reverse | |
| [125] | Drive in hand mode | |
| [126] | Drive in auto mode | |
| [151] | ATEX ETR cur. alarm | |
| [152] | ATEX ETR freq. alarm | |

| 5-32 Term X30/6 Digi Out (MCB 101) | | |
|------------------------------------|------------------------|--|
| Option: | Function: | |
| [153] | ATEX ETR cur. warning | |
| [154] | ATEX ETR freq. warning | |
| [188] | AHF Capacitor Connect | |
| [189] | External Fan Control | |
| [190] | Safe Function active | |
| [191] | Safe Opt. Reset req. | |
| [192] | RS Flipflop 0 | |
| [193] | RS Flipflop 1 | |
| [194] | RS Flipflop 2 | |
| [195] | RS Flipflop 3 | |
| [196] | RS Flipflop 4 | |
| [197] | RS Flipflop 5 | |
| [198] | RS Flipflop 6 | |
| [199] | RS Flipflop 7 | |

| 5-33 Term X30/7 Digi Out (MCB 101) | | |
|------------------------------------|-----------------------|--|
| Option: | Function: | |
| [0] * | No operation | This parameter is active when option module option module MCB 101 is mounted in the frequency converter. Functions are described under 5-3* <i>Digital Outputs</i> |
| [1] | Control ready | |
| [2] | Drive ready | |
| [3] | Drive rdy/rem ctrl | |
| [4] | Enable / no warning | |
| [5] | Running | |
| [6] | Running / no warning | |
| [7] | Run in range/no warn | |
| [8] | Run on ref/no warn | |
| [9] | Alarm | |
| [10] | Alarm or warning | |
| [11] | At torque limit | |
| [12] | Out of current range | |
| [13] | Below current, low | |
| [14] | Above current, high | |
| [15] | Out of speed range | |
| [16] | Below speed, low | |
| [17] | Above speed, high | |
| [18] | Out of feedb. range | |
| [19] | Below feedback, low | |
| [20] | Above feedback, high | |
| [21] | Thermal warning | |
| [22] | Ready,no thermal W | |
| [23] | Remote,ready,no TW | |
| [24] | Ready, Voltage OK | |
| [25] | Reverse | |
| [26] | Bus OK | |
| [27] | Torque limit & stop | |
| [28] | Brake, no brake war | |
| [29] | Brake ready, no fault | |

| 5-33 Term X30/7 Digi Out (MCB 101) | | |
|------------------------------------|------------------------|--|
| Option: | Function: | |
| [30] | Brake fault (IGBT) | |
| [31] | Relay 123 | |
| [32] | Mech brake ctrl | |
| [33] | Safe stop active | |
| [39] | Tracking error | |
| [40] | Out of ref range | |
| [41] | Below reference, low | |
| [42] | Above ref, high | |
| [43] | Extended PID Limit | |
| [45] | Bus ctrl. | |
| [46] | Bus ctrl, 1 if timeout | |
| [47] | Bus ctrl, 0 if timeout | |
| [51] | MCO controlled | |
| [60] | Comparator 0 | |
| [61] | Comparator 1 | |
| [62] | Comparator 2 | |
| [63] | Comparator 3 | |
| [64] | Comparator 4 | |
| [65] | Comparator 5 | |
| [70] | Logic rule 0 | |
| [71] | Logic rule 1 | |
| [72] | Logic rule 2 | |
| [73] | Logic rule 3 | |
| [74] | Logic rule 4 | |
| [75] | Logic rule 5 | |
| [80] | SL digital output A | |
| [81] | SL digital output B | |
| [82] | SL digital output C | |
| [83] | SL digital output D | |
| [84] | SL digital output E | |
| [85] | SL digital output F | |
| [120] | Local ref active | |
| [121] | Remote ref active | |
| [122] | No alarm | |
| [123] | Start command activ | |
| [124] | Running reverse | |
| [125] | Drive in hand mode | |
| [126] | Drive in auto mode | |
| [151] | ATEX ETR cur. alarm | |
| [152] | ATEX ETR freq. alarm | |
| [153] | ATEX ETR cur. warning | |
| [154] | ATEX ETR freq. warning | |
| [189] | External Fan Control | |
| [190] | Safe Function active | |
| [191] | Safe Opt. Reset req. | |
| [192] | RS Flipflop 0 | |
| [193] | RS Flipflop 1 | |
| [194] | RS Flipflop 2 | |
| [195] | RS Flipflop 3 | |
| [196] | RS Flipflop 4 | |
| [197] | RS Flipflop 5 | |
| [198] | RS Flipflop 6 | |

| 5-33 Term X30/7 Digi Out (MCB 101) | | |
|------------------------------------|---------------|--|
| Option: | Function: | |
| [199] | RS Flipflop 7 | |

3.7.4 5-4* Relays

Parameters for configuring the timing and the output functions for the relays.

| 5-40 Function Relay | | |
|--|----------------------|---|
| Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105)) | | |
| Option: | Function: | |
| [0] * | No operation | All digital and relay outputs are default set to "No Operation". |
| [1] | Control ready | The control card is ready. E.g.: Feedback from a drive where the control is supplied by an external 24 V (MCB 107) and the main power to drive is not detected. |
| [2] | Drive ready | Drive is ready to operate. Mains and control supplies are OK. |
| [3] | Drive rdy/rem ctrl | The frequency converter is ready for operation and is in Auto On mode |
| [4] | Enable / no warning | Ready for operation. No start or stop commands have been applied (start/disable). No warnings are active. |
| [5] | Running | Motor is running, and shaft torque present. |
| [6] | Running / no warning | Output speed is higher than the speed set in <i>1-81 Min Speed for Function at Stop [RPM]</i> Min Speed for Function at Stop [RPM]. The motor is running and no warnings. |
| [7] | Run in range/no warn | Motor is running within the programmed current and speed ranges set in <i>4-50 Warning Current Low</i> and <i>4-53 Warning Speed High</i> . No warnings. |
| [8] | Run on ref/no warn | Motor runs at reference speed. No warnings. |
| [9] | Alarm | An alarm activates the output. No warnings |
| [10] | Alarm or warning | An alarm or a warning activates the output. |
| [11] | At torque limit | The torque limit set in <i>4-16 Torque Limit Motor Mode</i> or <i>4-17 Torque Limit Generator Mode</i> has been exceeded. |

| 5-40 Function Relay | | |
|--|----------------------|--|
| Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105)) | | |
| Option: | Function: | |
| [12] | Out of current range | The motor current is outside the range set in 4-18 <i>Current Limit</i> . |
| [13] | Below current, low | Motor current is lower than set in 4-50 <i>Warning Current Low</i> . |
| [14] | Above current, high | Motor current is higher than set in 4-51 <i>Warning Current High</i> . |
| [15] | Out of speed range | Output speed/frequency is outside the frequency range set in 4-52 <i>Warning Speed Low</i> and 4-53 <i>Warning Speed High</i> . |
| [16] | Below speed, low | Output speed is lower than the setting in 4-52 <i>Warning Speed Low</i> |
| [17] | Above speed, high | Output speed is higher than the setting in 4-53 <i>Warning Speed High</i> . |
| [18] | Out of feedb. range | Feedback is outside the range set in 4-56 <i>Warning Feedback Low</i> and 4-57 <i>Warning Feedback High</i> . |
| [19] | Below feedback, low | Feedback is below the limit set in 4-56 <i>Warning Feedback Low</i> . |
| [20] | Above feedback, high | Feedback is above the limit set in 4-57 <i>Warning Feedback High</i> . |
| [21] | Thermal warning | Thermal warning turns on when the temperature exceeds the limit either in motor, frequency converter, brake resistor, or connected thermistor. |
| [22] | Ready,no thermal W | Frequency converter is ready for operation and there is no over-temperature warning. |
| [23] | Remote,ready,no TW | Frequency converter is ready for operation and is in Auto On mode. There is no over-temperature warning. |
| [24] | Ready, Voltage OK | Frequency converter is ready for operation and the mains voltage is within the specified voltage range (see General Specifications section in Design Guide). |
| [25] | Reverse | Logic '1' when CW rotation of the motor. Logic '0' when CCW rotation of the motor. If the motor is not rotating the output will follow the reference. |
| [26] | Bus OK | Active communication (no time-out) via the serial communication port. |
| [27] | Torque limit & stop | Use in performing a coasted stop and frequency converter in torque limit |

| 5-40 Function Relay | | |
|--|-----------------------|---|
| Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105)) | | |
| Option: | Function: | |
| [28] | Brake, no brake war | condition. If the frequency converter has received a stop signal and is in torque limit, the signal is Logic '0'. Brake is active and there are no warnings. |
| [29] | Brake ready, no fault | Brake is ready for operation and there are no faults. |
| [30] | Brake fault (IGBT) | Output is Logic '1' when the brake IGBT is short-circuited. Use this function to protect the frequency converter if there is a fault on the brake module. Use the digital output/relay to cut out the main voltage from the frequency converter. |
| [31] | Relay 123 | Digital output/relay is activated when Control Word [0] is selected in parameter group 8-**. |
| [32] | Mech brake ctrl | Selection of mechanical brake control. When selected parameters in parameter group 2-2* are active. The output must be reinforced to carry the current for the coil in the brake. Usually solved by connecting an external relay to the selected digital output. |
| [33] | Safe stop active | (FC 302 only) Indicates that the safe stop on terminal 37 has been activated. |
| [36] | Control word bit 11 | Activate relay 1 by control word from fieldbus. No other functional impact in the frequency converter. Typical application: controlling auxiliary device from fieldbus. The function is valid when FC profile [0] in 8-10 <i>Control Word Profile</i> is selected. |
| [37] | Control word bit 12 | Activate relay 2 FC 302 only) by control word from fieldbus. No other functional impact in the frequency converter. Typical application: controlling auxiliary device from fieldbus. The function is valid when FC profile [0] in 8-10 <i>Control Word Profile</i> is selected. |
| [38] | Motor feedback error | Failure in the speed feedback loop from motor running in closed loop. The output can eventually be used to |


| 5-40 Function Relay | | |
|--|------------------------|---|
| Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105)) | | |
| Option: | | Function: |
| | | prepare switching the drive in open loop in emergency case. |
| [39] | Tracking error | When the difference between calculated speed and actual speed in 4-35 <i>Tracking Error</i> is larger than selected the digital output/relay is active. |
| [40] | Out of ref range | Active when the actual speed is outside settings in 4-52 <i>Warning Speed Low</i> to 4-55 <i>Warning Reference High</i> . |
| [41] | Below reference, low | Active when actual speed is below speed reference setting. |
| [42] | Above ref, high | Active when actual speed is above speed reference setting. |
| [43] | Extended PID Limit | |
| [45] | Bus ctrl. | Controls digital output/relay via bus. The state of the output is set in 5-90 <i>Digital & Relay Bus Control</i> . The output state is retained in the event of bus time-out. |
| [46] | Bus ctrl, 1 if timeout | Controls output via bus. The state of the output is set in 5-90 <i>Digital & Relay Bus Control</i> . In the event of bus time-out the output state is set high (On). |
| [47] | Bus ctrl, 0 if timeout | Controls output via bus. The state of the output is set in 5-90 <i>Digital & Relay Bus Control</i> . In the event of bus time-out the output state is set low (Off). |
| [51] | MCO controlled | Active when a MCO 302 or MCO 305 is connected. The output is controlled from option. |
| [60] | Comparator 0 | See parameter group 13-1* (Smart Logic Control). If Comparator 0 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [61] | Comparator 1 | See parameter group 13-1* (Smart Logic Control). If Comparator 1 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [62] | Comparator 2 | See parameter group 13-1* (Smart Logic Control). If Comparator 2 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [63] | Comparator 3 | See parameter group 13-1* (Smart Logic Control). If Comparator 3 in SLC |

| 5-40 Function Relay | | |
|--|---------------------|--|
| Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105)) | | |
| Option: | | Function: |
| | | is TRUE, the output will go high. Otherwise, it will be low. |
| [64] | Comparator 4 | See parameter group 13-1* (Smart Logic Control). If Comparator 4 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [65] | Comparator 5 | See parameter group 13-1* (Smart Logic Control). If Comparator 5 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [70] | Logic rule 0 | See parameter group 13-4*(Smart Logic Control). If Logic Rule 0 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [71] | Logic rule 1 | See parameter group 13-4*(Smart Logic Control). If Logic Rule 1 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [72] | Logic rule 2 | See parameter group 13-4*(Smart Logic Control). If Logic Rule 2 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [73] | Logic rule 3 | See parameter group 13-4*(Smart Logic Control). If Logic Rule 3 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [74] | Logic rule 4 | See parameter group 13-4*(Smart Logic Control). If Logic Rule 4 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [75] | Logic rule 5 | See parameter group 13-4*(Smart Logic Control). If Logic Rule 5 in SLC is TRUE, the output will go high. Otherwise, it will be low. |
| [80] | SL digital output A | See 13-52 <i>SL Controller Action</i> . Output A is low on Smart Logic Action [32]. Output A is high on Smart Logic Action [38]. |
| [81] | SL digital output B | See 13-52 <i>SL Controller Action</i> . Output B is low on Smart Logic Action [33]. Output B is high on Smart Logic Action [39]. |
| [82] | SL digital output C | See 13-52 <i>SL Controller Action</i> . Output C is low on Smart Logic Action [34]. Output C is high on Smart Logic Action [40]. |


| 5-40 Function Relay | | | |
|--|---------------------|---|------------------------------|
| Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105)) | | | |
| Option: | | Function: | |
| [83] | SL digital output D | See 13-52 <i>SL Controller Action</i> . Output D is low on Smart Logic Action [35]. Output D is high on Smart Logic Action [41] | |
| [84] | SL digital output E | See 13-52 <i>SL Controller Action</i> . Output E is low on Smart Logic Action [36]. Output E is high on Smart Logic Action [42]. | |
| [85] | SL digital output F | See 13-52 <i>SL Controller Action</i> . Output F is low on Smart Logic Action [37]. Output F is high on Smart Logic Action [43]. | |
| [120] | Local ref active | Output is high when 3-13 <i>Reference Site</i> = [2] Local or when 3-13 <i>Reference Site</i> = [0] Linked to hand auto at the same time as the LCP is in [Hand on] mode. | |
| | | Reference site set in 3-13 <i>Reference Site</i> | Local reference active [120] |
| | | Reference site: Local 3-13 <i>Reference Site</i> [2] | 0 |
| | | Reference site: Remote 3-13 <i>Reference Site</i> [1] | 1 |
| | | Reference site: Linked to Hand/ Auto | |
| | | Hand | 1 0 |
| | | Hand -> off | 1 0 |
| | | Auto -> off | 0 0 |
| | | Auto | 0 1 |
| [121] | Remote ref active | Output is high when 3-13 <i>Reference Site</i> = Remote [1] or Linked to hand/ auto [0] while the LCP is in [Auto on] mode. See above. | |
| [122] | No alarm | Output is high when no alarm is present. | |
| [123] | Start command activ | Output is high when the Start command high (i.e. via digital input, bus connection or [Hand on] or [Auto | |

| 5-40 Function Relay | | |
|--|------------------------|---|
| Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105)) | | |
| Option: | | Function: |
| | | on]), and a Stop has been last command. |
| [124] | Running reverse | Output is high when the frequency converter is running counter clockwise (the logical product of the status bits 'running' AND 'reverse'). |
| [125] | Drive in hand mode | Output is high when the frequency converter is in [Hand on] mode (as indicated by the LED light above [Hand on]). |
| [126] | Drive in auto mode | Output is high when the frequency converter is in 'Auto' mode (as indicated by LED on above [Auto on]). |
| [151] | ATEX ETR cur. alarm | Selectable if 1-90 <i>Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1. |
| [152] | ATEX ETR freq. alarm | Selectable if 1-90 <i>Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1. |
| [153] | ATEX ETR cur. warning | Selectable if 1-90 <i>Motor Thermal Protection</i> is set to [20] or [21]]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1. |
| [154] | ATEX ETR freq. warning | Selectable if 1-90 <i>Motor Thermal Protection</i> is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1. |
| [188] | AHF Capacitor Connect | |
| [189] | External Fan Control | The internal logics for the internal fan control is transferred to this output to make it possible to control an external fan (relevant for HP duct cooling). |
| [192] | RS Flipflop 0 | |
| [193] | RS Flipflop 1 | |
| [194] | RS Flipflop 2 | |
| [195] | RS Flipflop 3 | |
| [196] | RS Flipflop 4 | |
| [197] | RS Flipflop 5 | |
| [198] | RS Flipflop 6 | |
| [199] | RS Flipflop 7 | |


| 5-41 On Delay, Relay | | |
|--|---|--|
| Array [9], (Relay 1 [0], Relay 2 [1], Relay 3 [2], Relay 4 [3], Relay 5 [4], Relay 6 [5], Relay 7 [6], Relay 8 [7], Relay 9 [8]) | | |
| Range: | Function: | |
| 0.01 s* [0.01 - 600.00 s] | Enter the delay of the relay cut-in time. Select one of available mechanical relays and MCB 105 in an array function. See 5-40 Function Relay. Relay 3-6 are included in MCB 113. | |

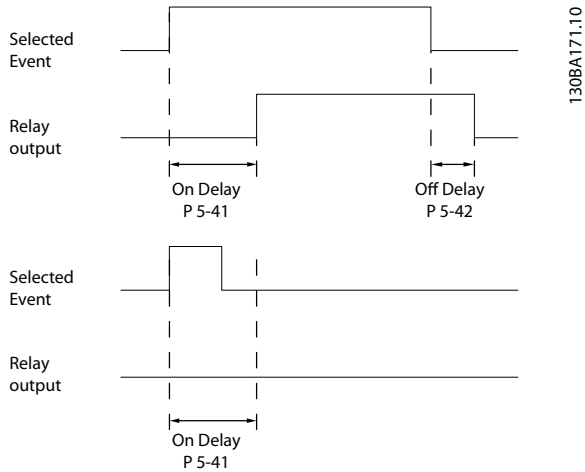

inputs. Set terminal 29 (5-13 Terminal 29 Digital Input) or terminal 33 (5-15 Terminal 33 Digital Input) to Pulse input [32]. If terminal 29 is used as an input, then set 5-01 Terminal 27 Mode to Input [0].

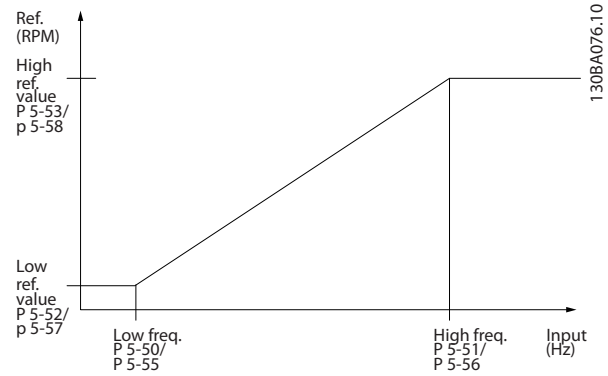

| 5-42 Off Delay, Relay | | |
|---|---|--|
| Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2], Relay 4 [3], Relay 5 [4], Relay 6 [5], Relay 7 [6], Relay 8 [7], Relay 9 [8]) | | |
| Range: | Function: | |
| 0.01 s* [0.01 - 600.00 s] | Enter the delay of the relay cut-out time. Select one of available mechanical relays and MCB 105 in an array function. See 5-40 Function Relay. | |

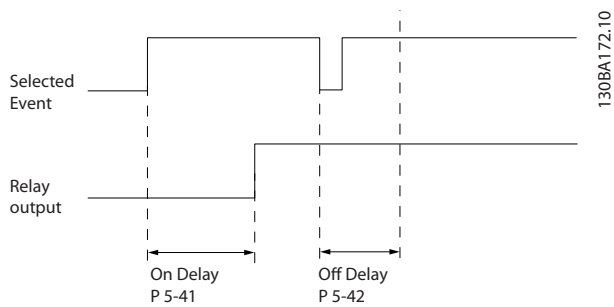

If the selected Event condition changes before the on- or off delay timer expires, the relay output is unaffected.

3.7.5 5-5* Pulse Input

The pulse input parameters are used to define an appropriate window for the impulse reference area by configuring the scaling and filter settings for the pulse inputs. Input terminals 29 or 33 act as frequency reference

| 5-50 Term. 29 Low Frequency | | |
|-----------------------------|--|--|
| Range: | Function: | |
| 100 Hz* [0 - 110000 Hz] | Enter the low frequency limit corresponding to the low motor shaft speed (i.e. low reference value) in 5-52 Term. 29 Low Ref./Feedb. Value. Refer to the diagram in this section. This parameter is available for FC 302 only. | |

| 5-51 Term. 29 High Frequency | | |
|------------------------------|--|--|
| Range: | Function: | |
| 100 Hz* [0 - 110000 Hz] | Enter the high frequency limit corresponding to the high motor shaft speed (i.e. high reference value) in 5-53 Term. 29 High Ref./Feedb. Value. This parameter is available for FC 302 only. | |

| 5-52 Term. 29 Low Ref./Feedb. Value | | |
|---|--|--|
| Range: | Function: | |
| 0.000 Reference-FeedbackUnit* [-999999.999 - 999999.999 ReferenceFeed-backUnit] | Enter the low reference value limit for the motor shaft speed [RPM]. This is also the lowest feedback value, see also 5-57 Term. 33 Low Ref./Feedb. Value. Set terminal 29 to digital input (5-02 Terminal 29 Mode =input [0] (default) and 5-13 Terminal 29 Digital Input = applicable value). This parameter is available for FC 302 only. | |

| 5-53 Term. 29 High Ref./Feedb. Value | | |
|--------------------------------------|--|---|
| Range: | | Function: |
| Application dependent* | [-999999.999 - 999999.999 ReferenceFeed-backUnit] | Enter the high reference value [RPM] for the motor shaft speed and the high feedback value, see also 5-58 Term. 33 High Ref./Feedb. Value. Select terminal 29 as a digital input (5-02 Terminal 29 Mode =input [0] (default) and 5-13 Terminal 29 Digital Input = applicable value). This parameter is available for FC 302 only. |

| 5-54 Pulse Filter Time Constant #29 | | |
|-------------------------------------|---------------|---|
| Range: | | Function: |
| 100 ms* | [1 - 1000 ms] | Enter the pulse filter time constant. The pulse filter dampens oscillations of the feedback signal, which is an advantage if there is a lot of noise in the system. A high time constant value results in better dampening but also increases the time delay through the filter. This parameter is available for FC 302 only. This parameter cannot be adjusted while the motor is running. |

| 5-55 Term. 33 Low Frequency | | |
|-----------------------------|-----------------|---|
| Range: | | Function: |
| 100 Hz* | [0 - 110000 Hz] | Enter the low frequency corresponding to the low motor shaft speed (i.e. low reference value) in 5-57 Term. 33 Low Ref./Feedb. Value. |

| 5-56 Term. 33 High Frequency | | |
|------------------------------|-----------------|---|
| Range: | | Function: |
| 100 Hz* | [0 - 110000 Hz] | Enter the high frequency corresponding to the high motor shaft speed (i.e. high reference value) in 5-58 Term. 33 High Ref./Feedb. Value. |

| 5-57 Term. 33 Low Ref./Feedb. Value | | |
|-------------------------------------|-----------------------------|---|
| Range: | | Function: |
| 0.000 * | [-999999.999 - 999999.999] | Enter the low reference value [RPM] for the motor shaft speed. This is also the low feedback value, see also 5-52 Term. 29 Low Ref./Feedb. Value. |

| 5-58 Term. 33 High Ref./Feedb. Value | | |
|--------------------------------------|---------------------------|---|
| Range: | | Function: |
| Application dependent* | [-999999.999 - 999999.999 | Enter the high reference value [RPM] for the motor shaft speed. See |


| 5-58 Term. 33 High Ref./Feedb. Value | | |
|--------------------------------------|-------------------------|--|
| Range: | | Function: |
| | ReferenceFeed-backUnit] | also 5-53 Term. 29 High Ref./Feedb. Value. |

| 5-59 Pulse Filter Time Constant #33 | | |
|-------------------------------------|---------------|--|
| Range: | | Function: |
| 100 ms* | [1 - 1000 ms] | Enter the pulse filter time constant. The low-pass filter reduces the influence on and dampens oscillations on the feedback signal from the control. This is an advantage, e.g. if there is a great amount on noise in the system. This parameter cannot be adjusted while the motor is running. |

3

3.7.6 5-6* Pulse Outputs

These parameters are to configure pulse outputs with their functions and scaling. Terminal 27 and 29 are allocated to pulse output via 5-01 Terminal 27 Mode and 5-02 Terminal 29 Mode, respectively.

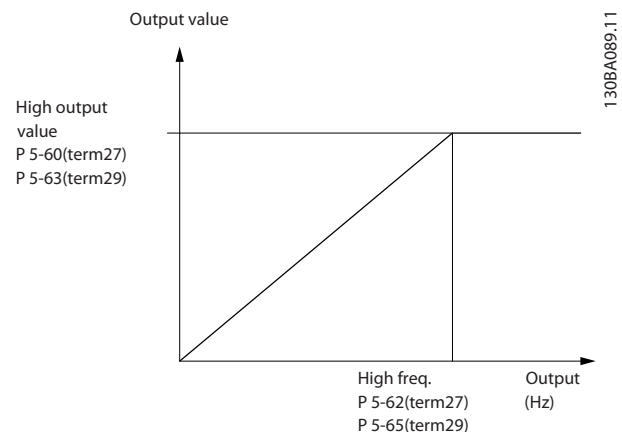

Options for readout output variables:

| | | |
|-------|----------------------|---|
| | | Parameters for configuring the scaling and output functions of pulse outputs. The pulse outputs are designated to terminals 27 or 29. Select terminal 27 output in 5-01 Terminal 27 Mode and terminal 29 output in 5-02 Terminal 29 Mode. |
| [0] | No operation | |
| [45] | Bus control | |
| [48] | Bus control time-out | |
| [51] | MCO controlled | |
| [100] | Output frequency | |
| [101] | Reference | |
| [102] | Feedback | |

| | | |
|-------|--------------------------|--|
| [103] | Motor current | |
| [104] | Torque relative to limit | |
| [105] | Torque relative to rated | |
| [106] | Power | |
| [107] | Speed | |
| [108] | Torque | |
| [109] | Max Out Freq | |

5-60 Terminal 27 Pulse Output Variable

| Option: | | Function: |
|---------|----------------------|---|
| [0] | No operation | Select the desired display output for terminal 27. This parameter cannot be adjusted while the motor is running. |
| [45] | Bus ctrl. | |
| [48] | Bus ctrl., timeout | |
| [51] | MCO controlled | |
| [100] | Output frequency | |
| [101] | Reference | |
| [102] | Feedback | |
| [103] | Motor current | |
| [104] | Torque rel to limit | |
| [105] | Torq relate to rated | |
| [106] | Power | |
| [107] | Speed | |
| [108] | Torque | |
| [109] | Max Out Freq | |
| [119] | Torque % lim | |

5-62 Pulse Output Max Freq #27

| Range: | | Function: |
|------------------------|----------------|--|
| Application dependent* | [0 - 32000 Hz] | Set the maximum frequency for terminal 27, corresponding to the output variable selected in <i>5-60 Terminal 27 Pulse Output Variable</i> . This parameter cannot be adjusted while the motor is running. |

5-63 Terminal 29 Pulse Output Variable

| Option: | | Function: |
|---------|----------------------|--|
| [0] * | No operation | Select the desired display output for terminal 29. This parameter is available for FC 302 only. This parameter cannot be adjusted while the motor is running. |
| [45] | Bus ctrl. | |
| [48] | Bus ctrl., timeout | |
| [51] | MCO controlled | |
| [100] | Output frequency | |
| [101] | Reference | |
| [102] | Feedback | |
| [103] | Motor current | |
| [104] | Torque rel to limit | |
| [105] | Torq relate to rated | |

5-63 Terminal 29 Pulse Output Variable

| Option: | | Function: |
|---------|--------------|-----------|
| [106] | Power | |
| [107] | Speed | |
| [108] | Torque | |
| [109] | Max Out Freq | |
| [119] | Torque % lim | |

5-65 Pulse Output Max Freq #29

Set the maximum frequency for terminal 29 corresponding to the output variable set in *5-63 Terminal 29 Pulse Output Variable*.
This parameter cannot be adjusted while the motor is running.

| Range: | | Function: |
|----------|----------------|-----------|
| 5000 Hz* | [0 - 32000 Hz] | |

5-66 Terminal X30/6 Pulse Output Variable

Select the variable for read-out on terminal X30/6.
This parameter cannot be adjusted while the motor is running.
This parameter is active when option module MCB 101 is installed in the frequency converter.
Same options and functions as parameter group 5-6*.

| Option: | | Function: |
|---------|----------------------|-----------|
| [0] * | No operation | |
| [45] | Bus ctrl. | |
| [48] | Bus ctrl., timeout | |
| [51] | MCO controlled | |
| [100] | Output frequency | |
| [101] | Reference | |
| [102] | Feedback | |
| [103] | Motor current | |
| [104] | Torque rel to limit | |
| [105] | Torq relate to rated | |
| [106] | Power | |
| [107] | Speed | |
| [108] | Torque | |
| [109] | Max Out Freq | |
| [119] | Torque % lim | |

5-68 Pulse Output Max Freq #X30/6




Select the maximum frequency on terminal X30/6 referring to the output variable in *5-66 Terminal X30/6 Pulse Output Variable*. This parameter cannot be adjusted while the motor is running.
This parameter is active when option module MCB 101 is mounted in the frequency converter.

| Range: | | Function: |
|------------------------|----------------|-----------|
| Application dependent* | [0 - 32000 Hz] | |

3.7.7 5-7* 24 V Encoder Input

Connect the 24 V encoder to terminal 12 (24V DC supply), terminal 32 (Channel A), terminal 33 (Channel B), and terminal 20 (GND). The digital inputs 32/33 are active for encoder inputs when *24V encoder* is selected in *1-02 Flux Motor Feedback Source* and *7-00 Speed PID Feedback Source*. The encoder used is a dual channel (A and B) 24V type. Max input frequency: 110kHz.

Encoder Connection to the frequency converter
24V incremental encoder. Max. cable length 5m.

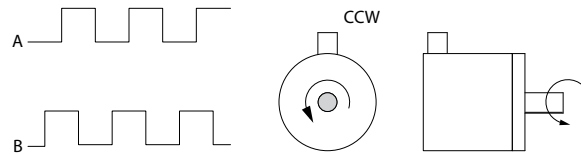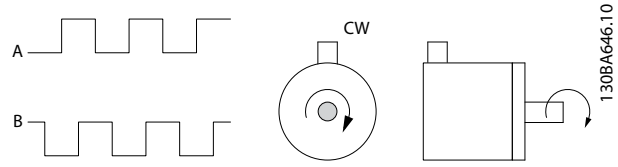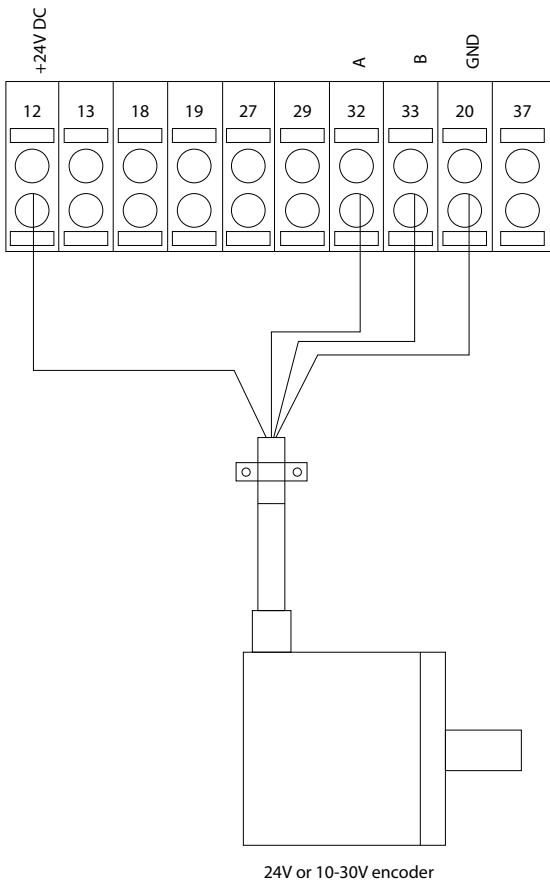

| 5-70 Term 32/33 Pulses per Revolution | | |
|---------------------------------------|--------------|---|
| Range: | Function: | |
| 1024* | [1 - 4096] | Set the encoder pulses per revolution on the motor shaft. Read the correct value from the encoder. This parameter cannot be adjusted while the motor is running. |

| 5-71 Term 32/33 Encoder Direction | | |
|-----------------------------------|-------------------|--|
| Option: | Function: | |
| [0] * | Clockwise | Sets channel A 90° (electrical degrees) behind channel B upon clockwise rotation of the encoder shaft. |
| [1] | Counter clockwise | Sets channel A 90° (electrical degrees) ahead of channel B upon clockwise rotation of the encoder shaft. |

This parameter cannot be adjusted while the motor is running.

3.7.8 5-8* I/O Options

| 5-80 AHF Cap Reconnect Delay | | |
|------------------------------|---------------|--|
| Range: | Function: | |
| 25 s* | [1 - 120 s] | Guarantees a minimum off-time for the capacitors. The timer starts once the AHF capacitor disconnects and needs to expire before the output is allowed to be on again. It will only turn on again if the drive power is between 20% and 30%. |

3.7.9 5-9* Bus Controlled

This parameter group selects digital and relay outputs via a fieldbus setting.

| 5-90 Digital & Relay Bus Control | | |
|----------------------------------|--|--|
| Range: | Function: | |
| 0* [0 - 2147483647] | This parameter holds the state of the digital outputs and relays that is controlled by bus. A logical '1' indicates that the output is high or active. A logical '0' indicates that the output is low or inactive. | |

| | |
|-----------|----------------------------------|
| Bit 0 | Digital Output Terminal 27 |
| Bit 1 | Digital Output Terminal 29 |
| Bit 2 | Digital Output Terminal X 30/6 |
| Bit 3 | Digital Output Terminal X 30/7 |
| Bit 4 | Relay 1 output terminal |
| Bit 5 | Relay 2 output terminal |
| Bit 6 | Option B Relay 1 output terminal |
| Bit 7 | Option B Relay 2 output terminal |
| Bit 8 | Option B Relay 3 output terminal |
| Bit 9-15 | Reserved for future terminals |
| Bit 16 | Option C Relay 1 output terminal |
| Bit 17 | Option C Relay 2 output terminal |
| Bit 18 | Option C Relay 3 output terminal |
| Bit 19 | Option C Relay 4 output terminal |
| Bit 20 | Option C Relay 5 output terminal |
| Bit 21 | Option C Relay 6 output terminal |
| Bit 22 | Option C Relay 7 output terminal |
| Bit 23 | Option C Relay 8 output terminal |
| Bit 24-31 | Reserved for future terminals |

| 5-93 Pulse Out #27 Bus Control | | |
|--------------------------------|---|--|
| Range: | Function: | |
| 0.00 %* [0.00 - 100.00 %] | Set the output frequency transferred to the output terminal 27 when the terminal is configured as 'Bus Controlled' in <i>5-60 Terminal 27 Pulse Output Variable</i> [45]. | |

| 5-94 Pulse Out #27 Timeout Preset | | |
|-----------------------------------|---|--|
| Range: | Function: | |
| 0.00 %* [0.00 - 100.00 %] | Set the output frequency transferred to the output terminal 27 when the terminal is configured as 'Bus Ctrl Timeout' in <i>5-60 Terminal 27 Pulse Output Variable</i> [48]. And a time-out is detected. | |

| 5-95 Pulse Out #29 Bus Control | | |
|--------------------------------|--|--|
| Range: | Function: | |
| 0.00 %* [0.00 - 100.00 %] | Set the output frequency transferred to the output terminal 29 when the terminal is configured as 'Bus Controlled' in <i>5-63 Terminal 29 Pulse Output Variable</i> [45]. This parameter only applies for FC 302. | |

| 5-96 Pulse Out #29 Timeout Preset | | |
|-----------------------------------|--|--|
| Range: | Function: | |
| 0.00 %* [0.00 - 100.00 %] | Set the output frequency transferred to the output terminal 29 when the terminal is configured as 'Bus Ctrl Timeout' in <i>5-63 Terminal 29 Pulse Output Variable</i> [48]. And a time-out is detected. This parameter only applies for FC 302. | |

| 5-97 Pulse Out #X30/6 Bus Control | | |
|-----------------------------------|--|--|
| Range: | Function: | |
| 0.00 %* [0.00 - 100.00 %] | Set the output frequency transferred to the output terminal X30/6 when the terminal is configured as 'Bus Controlled' in <i>5-66 Terminal X30/6 Pulse Output Variable</i> , Terminal X30/6 Pulse Output Variable [45]. | |

| 5-98 Pulse Out #X30/6 Timeout Preset | | |
|--------------------------------------|---|--|
| Range: | Function: | |
| 0.00 %* [0.00 - 100.00 %] | Set the output frequency transferred to the output terminal X30/6 when the terminal is configured as 'Bus Ctrl Timeout' in <i>5-66 Terminal X30/6 Pulse Output Variable</i> [48]. And a time-out is detected. | |

3.8 Parameters: 6-** Analog In/Out

3.8.1 6-0* Analog I/O Mode

The analog inputs can freely be allocated to be either voltage (FC 301: 0..10V, FC 302: 0..+/- 10V) or current (FC 301/ FC 302: 0/4..20mA) input.

NOTE


Thermistors may be connected to either an analog or a digital input.

| 6-00 Live Zero Timeout Time | | |
|-----------------------------|---|--|
| Range: | Function: | |
| 10 s* [1 - 99 s] | Enter the Live Zero Time-out time period. Live Zero Time-out Time is active for analog inputs, i.e. terminal 53 or terminal 54, used as reference or feedback sources. If the reference signal value associated with the selected current input falls below 50% of the value set in 6-10 Terminal 53 Low Voltage, 6-12 Terminal 53 Low Current, 6-20 Terminal 54 Low Voltage or 6-22 Terminal 54 Low Current for a time period longer than the time set in 6-00 Live Zero Timeout Time, the function selected in 6-01 Live Zero Timeout Function will be activated. | |

| 6-01 Live Zero Timeout Function | | |
|---------------------------------|--|--|
| Option: | Function: | |
| | Select the time-out function. The function set in 6-01 Live Zero Timeout Function will be activated if the input signal on terminal 53 or 54 is below 50% of the value in 6-10 Terminal 53 Low Voltage, 6-12 Terminal 53 Low Current, 6-20 Terminal 54 Low Voltage or 6-22 Terminal 54 Low Current for a time period defined in 6-00 Live Zero Timeout Time. If several time-outs occur simultaneously, the frequency converter prioritises the time-out functions as follows: <ol style="list-style-type: none"> 6-01 Live Zero Timeout Function 8-04 Control Word Timeout Function | |
| [0] * | Off | |
| [1] | Freeze output | Frozen at the present value |
| [2] | Stop | Overruled to stop |
| [3] | Jogging | Overruled to jog speed |
| [4] | Max. speed | Overruled to max. speed |
| [5] | Stop and trip | Overruled to stop with subsequent trip |
| [20] | Coast | |
| [21] | Coast and trip | |

3.8.2 6-1* Analog Input 1

Parameters for configuring the scaling and limits for analog input 1 (terminal 53).

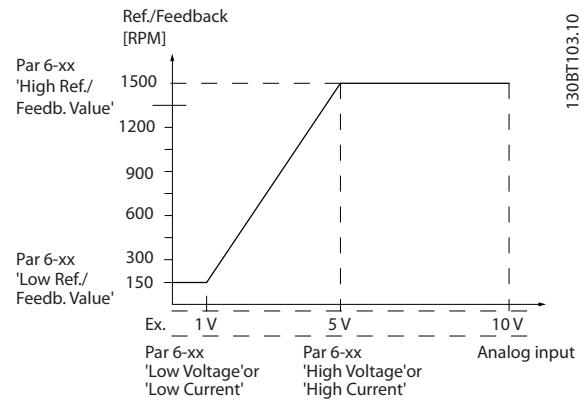

| 6-10 Terminal 53 Low Voltage | | |
|------------------------------|-------------------------|--|
| Range: | Function: | |
| 0.07 V* | [Application dependant] | Enter the low voltage value. This analog input scaling value should correspond to the minimum reference value, set in 6-14 Terminal 53 Low Ref./Feedb. Value. See also the section Reference Handling. |

| 6-11 Terminal 53 High Voltage | | |
|-------------------------------|-----------------------|--|
| Range: | Function: | |
| 10.00 V* | [par. 6-10 - 10.00 V] | Enter the high voltage value. This analog input scaling value should correspond to the high reference/feedback value set in 6-15 Terminal 53 High Ref./Feedb. Value. |

| 6-12 Terminal 53 Low Current | | |
|------------------------------|-------------------------|--|
| Range: | Function: | |
| 0.14 mA* | [Application dependant] | Enter the low current value. This reference signal should correspond to the minimum reference value, set in 3-02 Minimum Reference. The value must be set at >2mA in order to activate the Live Zero Time-out Function in 6-01 Live Zero Timeout Function. |

| 6-13 Terminal 53 High Current | | |
|-------------------------------|------------------------|---|
| Range: | Function: | |
| 20.00 mA* | [par. 6-12 - 20.00 mA] | Enter the high current value corresponding to the high reference/feedback set in 6-15 Terminal 53 High Ref./Feedb. Value. |

| 6-14 Terminal 53 Low Ref./Feedb. Value | | |
|--|-----------------------------|---|
| Range: | | Function: |
| 0.000 * | [-999999.999 - 999999.999] | Enter the analog input scaling value that corresponds to the low voltage/low current set in <i>6-10 Terminal 53 Low Voltage</i> and <i>6-12 Terminal 53 Low Current</i> . |

| 6-15 Terminal 53 High Ref./Feedb. Value | | |
|---|---|--|
| Range: | | Function: |
| Application dependent* | [-999999.999 - 999999.999 ReferenceFeed-backUnit] | Enter the analog input scaling value that corresponds to the maximum reference feedback value set in <i>6-11 Terminal 53 High Voltage</i> and <i>6-13 Terminal 53 High Current</i> . |

| 6-16 Terminal 53 Filter Time Constant | | |
|---------------------------------------|--------------------|---|
| Range: | | Function: |
| 0.001 s* | [0.001 - 10.000 s] | Enter the time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal 53. A high time constant value improves dampening but also increases the time delay through the filter. This parameter cannot be adjusted while the motor is running. |

3.8.3 6-2* Analog Input 2

Parameters for configuring the scaling and limits for analog input 2 (terminal 54).

| 6-20 Terminal 54 Low Voltage | | |
|------------------------------|-------------------------|--|
| Range: | | Function: |
| 0.07 V* | [Application dependant] | Enter the low voltage value. This analog input scaling value should correspond to the minimum reference value, set in <i>3-02 Minimum Reference</i> . See also the section <i>Reference Handling</i> . |

| 6-21 Terminal 54 High Voltage | | |
|-------------------------------|-----------------------|--|
| Range: | | Function: |
| 10.00 V* | [par. 6-20 - 10.00 V] | Enter the high voltage value. This analog input scaling value should correspond to the high reference/feedback value set in <i>6-25 Terminal 54 High Ref./Feedb. Value</i> . |

| 6-22 Terminal 54 Low Current | | |
|------------------------------|-------------------------|--|
| Range: | | Function: |
| 0.14 mA* | [Application dependant] | Enter the low current value. This reference signal should correspond to the minimum reference value, set in <i>3-02 Minimum Reference</i> . The value must be set at >2mA in order to activate the Live Zero Time-out Function in <i>6-01 Live Zero Timeout Function</i> . |

| 6-23 Terminal 54 High Current | | |
|-------------------------------|------------------------|---|
| Range: | | Function: |
| 20.00 mA* | [par. 6-22 - 20.00 mA] | Enter the high current value corresponding to the high reference/feedback value set in <i>6-25 Terminal 54 High Ref./Feedb. Value</i> . |

| 6-24 Terminal 54 Low Ref./Feedb. Value | | |
|--|---|--|
| Range: | | Function: |
| 0 ReferenceFeed-backUnit* | [-999999.999 - 999999.999 ReferenceFeed-backUnit] | Enter the analog input scaling value that corresponds to the minimum reference feedback value set in <i>3-02 Minimum Reference</i> . |

| 6-25 Terminal 54 High Ref./Feedb. Value | | |
|---|---|--|
| Range: | | Function: |
| Application dependent* | [-999999.999 - 999999.999 ReferenceFeed-backUnit] | Enter the analog input scaling value that corresponds to the maximum reference feedback value set in <i>3-03 Maximum Reference</i> . |

| 6-26 Terminal 54 Filter Time Constant | | |
|---------------------------------------|--------------------|---|
| Range: | | Function: |
| 0.001 s* | [0.001 - 10.000 s] | Enter the time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal 54. A high time constant value improves dampening but also increases the time delay through the filter. This parameter cannot be adjusted while the motor is running. |

3.8.4 6-3* Analog Input 3 MCB 101

Parameter group for configuring the scale and limits for analog input 3 (X30/11) placed on option module MCB 101.

| 6-30 Terminal X30/11 Low Voltage | | |
|----------------------------------|---|--|
| Range: | Function: | |
| 0.07 V* [0.00 - par. 6-31 V] | Sets the analog input scaling value to correspond to the low reference/feedback value (set in 6-34 Term. X30/11 Low Ref./Feedb. Value). | |

| 6-31 Terminal X30/11 High Voltage | | |
|-----------------------------------|---|--|
| Range: | Function: | |
| 10.00 V* [par. 6-30 - 10.00 V] | Sets the analog input scaling value to correspond to the high reference/feedback value (set in 6-35 Term. X30/11 High Ref./Feedb. Value). | |

| 6-34 Term. X30/11 Low Ref./Feedb. Value | | |
|---|---|--|
| Range: | Function: | |
| 0.000 * [-999999.999 - 999999.999] | Sets the analog input scaling value to correspond to the low voltage value (set in 6-30 Terminal X30/11 Low Voltage). | |

| 6-35 Term. X30/11 High Ref./Feedb. Value | | |
|--|---|--|
| Range: | Function: | |
| 100.000 * [-999999.999 - 999999.999] | Sets the analog input scaling value to correspond to the high voltage value (set in 6-31 Terminal X30/11 High Voltage). | |

| 6-36 Term. X30/11 Filter Time Constant | | |
|--|--|--|
| Range: | Function: | |
| 0.001 s* [0.001 - 10.000 s] | A 1 st order digital low pass filter time constant for suppressing electrical noise on terminal X30/11. 6-36 Term. X30/11 Filter Time Constant cannot be changed while the motor is running. | |

3.8.5 6-4* Analog Input 4 MCB 101

Parameter group for configuring the scale and limits for analog input 4 (X30/12) placed on option module MCB 101.

| 6-40 Terminal X30/12 Low Voltage | | |
|----------------------------------|---|--|
| Range: | Function: | |
| 0.07 V* [0.00 - par. 6-41 V] | Sets the analog input scaling value to correspond to the low reference/feedback value set in 6-44 Term. X30/12 Low Ref./Feedb. Value. | |

| 6-41 Terminal X30/12 High Voltage | | |
|-----------------------------------|---|--|
| Range: | Function: | |
| 10.00 V* [par. 6-40 - 10.00 V] | Sets the analog input scaling value to correspond to the high reference/feedback value set in 6-45 Term. X30/12 High Ref./Feedb. Value. | |

| 6-44 Term. X30/12 Low Ref./Feedb. Value | | |
|---|--|--|
| Range: | Function: | |
| 0.000 * [-999999.999 - 999999.999] | Sets the analog output scaling value to correspond to the low voltage value set in 6-40 Terminal X30/12 Low Voltage. | |

| 6-45 Term. X30/12 High Ref./Feedb. Value | | |
|--|---|--|
| Range: | Function: | |
| 100.000 * [-999999.999 - 999999.999] | Sets the analog input scaling value to correspond to the high voltage value set in 6-41 Terminal X30/12 High Voltage. | |

| 6-46 Term. X30/12 Filter Time Constant | | |
|--|--|--|
| Range: | Function: | |
| 0.001 s* [0.001 - 10.000 s] | A 1 st order digital low pass filter time constant for suppressing electrical noise on terminal X30/12. 6-46 Term. X30/12 Filter Time Constant cannot be changed while the motor is running. | |

3.8.6 6-5* Analog Output 1

Parameters for configuring the scaling and limits for analog output 1, i.e. Terminal 42. Analog outputs are current outputs: 0/4 – 20mA. Common terminal (terminal 39) is the same terminal and has the same electrical potential for analog common and digital common connection. Resolution on analog output is 12 bit.

| 6-50 Terminal 42 Output | | |
|-------------------------|------------------|---|
| Option: | Function: | |
| | | Select the function of Terminal 42 as an analog current output. Depending on the selection the output is either a 0-20mA or 4-20mA output. The current value can be read out in LCP in 16-65 Analog Output 42 [mA]. |
| [0] * | No operation | When no signal on the analog output. |
| [52] | MCO 0-20mA | |
| [53] | MCO 4-20mA | |
| [100] | Output frequency | 0Hz = 0mA; 100Hz = 20mA. |


| 6-50 Terminal 42 Output | | |
|-------------------------|----------------------|---|
| Option: | Function: | |
| [101] | Reference | 3-00 Reference Range [Min - Max] 0% = 0mA; 100% = 20mA 3-00 Reference Range [-Max - Max] -100% = 0mA; 0% = 10mA; +100% = 20mA |
| [102] | Feedback | |
| [103] | Motor current | Value is taken from 16-37 <i>Inv. Max. Current</i> . Inverter max. current (160% current) is equal to 20mA. Example: Inverter norm current (11kW) = 24A. 160% = 38.4A. Motor norm current = 22A Read-out 11.46mA. $\frac{20\text{ mA} \times 22\text{ A}}{38.4\text{ A}} = 11.46\text{ mA}$ In case the norm motor current is equal to 20mA, the output setting of 6-52 Terminal 42 Output Max Scale is: $\frac{I_{VLT_Max} \times 100}{I_{Motor_Norm}} = \frac{38.4 \times 100}{22} = 175\%$ |
| [104] | Torque rel to limit | The torque setting is related to setting in 4-16 Torque Limit Motor Mode |
| [105] | Torq relate to rated | The torque is related to the motor torque setting. |
| [106] | Power | Taken from 1-20 Motor Power [kW]. |
| [107] | Speed | Taken from 3-03 Maximum Reference. 20mA = value in 3-03 Maximum Reference |
| [108] | Torque | Torque reference related to 160% torque. |
| [109] | Max Out Freq | 0Hz = 0mA, 4-19 Max Output Frequency = 20mA. |
| [113] | PID Clamped Output | |
| [119] | Torque % lim | |
| [130] | Output freq. 4-20mA | 0Hz = 4mA, 100Hz = 20mA |
| [131] | Reference 4-20mA | 3-00 Reference Range [Min-Max] 0% = 4mA; 100% = 20mA 3-00 Reference Range [-Max-Max] -100% = 4mA; 0% = 12mA; +100% = 20mA |
| [132] | Feedback 4-20mA | |
| [133] | Motor cur. 4-20mA | Value is taken from 16-37 <i>Inv. Max. Current</i> . Inverter max. current (160% current) is equal to 20mA. Example: Inverter norm current (11kW) = 24A. 160% = 38.4A. Motor norm current = 22A Read-out 11.46mA. $\frac{16\text{ mA} \times 22\text{ A}}{38.4\text{ A}} + 4\text{ mA} = 13.17\text{ mA}$ |

| 6-50 Terminal 42 Output | | |
|-------------------------|----------------------|---|
| Option: | Function: | |
| | | In case the norm motor current is equal to 20mA, the output setting of 6-62 Terminal X30/8 Max. Scale is: $\frac{I_{VLT_Max} \times 100}{I_{Motor_Norm}} = \frac{38.4 \times 100}{22} = 175\%$ |
| [134] | Torq.% lim 4-20 mA | The torque setting is related to setting in 4-16 Torque Limit Motor Mode. |
| [135] | Torq.% nom 4-20 mA | The torque setting is related to the motor torque setting. |
| [136] | Power 4-20mA | Taken from 1-20 Motor Power [kW] |
| [137] | Speed 4-20mA | Taken from 3-03 Maximum Reference. 20mA = Value in 3-03 Maximum Reference. |
| [138] | Torque 4-20mA | Torque reference related to 160% torque. |
| [139] | Bus ctrl. 0-20 mA | An output value set from fieldbus process data. The output will work independently of internal functions in the frequency converter. |
| [140] | Bus ctrl. 4-20 mA | An output value set from fieldbus process data. The output will work independently of internal functions in the frequency converter. |
| [141] | Bus ctrl 0-20mA t.o. | 4-54 Warning Reference Low defines the behaviour of the analog output in case of bus time-out. |
| [142] | Bus ctrl 4-20mA t.o. | 4-54 Warning Reference Low defines the behaviour of the analog output in case of bus time-out. |
| [149] | Torque % lim 4-20mA | Analog output at zero torque = 12mA. Motoric torque will increase the output current to max torque limit 20mA (set in 4-16 Torque Limit Motor Mode). Generative torque will decrease the output to torque limit Generator Mode (set in 4-17 Torque Limit Generator Mode) Ex: 4-16 Torque Limit Motor Mode: 200% and 4-17 Torque Limit Generator Mode: 200%. 20mA = 200% Motoric and 4mA = 200% Generatoric. $\begin{array}{ccc} 0\text{mA } 4\text{mA} & 12\text{ mA} & 20\text{ mA} \\ \hline \text{Par 4-17} & 0\% \text{ Torque} & \text{Par 4-16} \\ (200\%) & & (200\%) \end{array}$ 13088372.10 |
| [150] | Max Out Fr 4-20mA | 0hz = 0mA, 4-19 Max Output Frequency = 20mA. |

| 6-51 Terminal 42 Output Min Scale | | |
|-----------------------------------|---|--|
| Range: | Function: | |
| 0.00 %* [0.00 - 200.00 %] | Scale for the minimum output (0 or 4mA) of the analog signal at terminal 42. Set the value to be the percentage of the full range of the variable selected in 6-50 Terminal 42 Output. | |

| 6-52 Terminal 42 Output Max Scale | | |
|-----------------------------------|--|--|
| Range: | Function: | |
| 100.00 %* [0.00 - 200.00 %] | Scale the maximum output of the selected analog signal at terminal 42. Set the value to the maximum value of the current signal output. Scale the output to give a current lower than 20mA at full scale; or 20mA at an output below 100% of the maximum signal value. If 20mA is the desired output current at a value between 0 - 100% of the full-scale output, programme the percentage value in the parameter, i.e. 50% = 20mA. If a current between 4 and 20mA is desired at maximum output (100%), calculate the percentage value as follows: | |

20 mA / desired maximum current x 100 %
 i.e. 10 mA : $\frac{20}{10} \times 100 = 200\%$

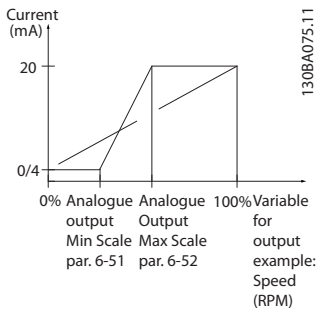

| 6-53 Terminal 42 Output Bus Control | | |
|-------------------------------------|--|--|
| Range: | Function: | |
| 0.00 %* [0.00 - 100.00 %] | Holds the level of Output 42 if controlled by bus. | |

| 6-54 Terminal 42 Output Timeout Preset | | |
|--|---|--|
| Range: | Function: | |
| 0.00 %* [0.00 - 100.00 %] | Holds the preset level of Output 42. In case of a bus timeout and a timeout function is selected in 6-50 Terminal 42 Output the output will preset to this level. | |

| 6-55 Analog Output Filter | | |
|---------------------------|----------------|--|
| Option: | Function: | |
| [0] * | Off Filter off | |
| [1] | On Filter on | |

| 6-55 Analog Output Filter | | | |
|---------------------------|---------------------------------------|---------------|---------------|
| Option: | Function: | | |
| | Selection | 0-20mA | 4-20mA |
| | Motor current (0 - I _{max}) | [103] | [133] |
| | Torque limit (0 - T _{lim}) | [104] | [134] |
| | Rated torque (0 - T _{nom}) | [105] | [135] |
| | Power (0 - P _{nom}) | [106] | [136] |
| | Speed (0 - Speedmax) | [107] | [137] |
| [0] * | Off | Filter off | |
| [1] | On | Filter on | |

3.8.7 6-6* Analog Output 2 MCB 101

Analog outputs are current outputs: 0/4 - 20mA. Common terminal (terminal X30/8) is the same terminal and electrical potential for analog common connection. Resolution on analog output is 12 bit.

| 6-60 Terminal X30/8 Output | | |
|----------------------------|---------------------|--|
| Option: | Function: | |
| | | Select the function of Terminal X30/8 as an analog current output. Depending on the selection the output is either a 0-20mA or 4-20mA output. The current value can be read out in LCP in 16-65 Analog Output 42 [mA]. |
| [0] * | No operation | When no signal on the analog output. |
| [52] | MCO 0-20mA | |
| [100] | Output frequency | 0hz = 0mA; 100hz = 20mA. |
| [101] | Reference | 3-00 Reference Range [Min - Max] 0% = 0mA; 100% = 20mA 3-00 Reference Range [-Max - Max] -100% = 0mA; 0% = 10mA; +100% = 20mA |
| [102] | Feedback | |
| [103] | Motor current | Value is taken from 16-37 Inv. Max. Current. Inverter max. current (160% current) is equal to 20mA. Example: Inverter norm current (11kW) = 24 A. 160% = 38.4 A. Motor norm current = 22 A Read-out 11.46mA. $\frac{20 \text{ mA} \times 22 \text{ A}}{38.4 \text{ A}} = 11.46 \text{ mA}$ In case the norm motor current is equal to 20mA, the output setting of 6-62 Terminal X30/8 Max. Scale is: $\frac{I_{VLT \text{ Max}} \times 100}{I_{\text{Motor Norm}}} = \frac{38.4 \times 100}{22} = 175\%$ |
| [104] | Torque rel to limit | The torque setting is related to setting in 4-16 Torque Limit Motor Mode. |

| 6-60 Terminal X30/8 Output | | |
|----------------------------|----------------------|--|
| Option: | Function: | |
| [105] | Torq relate to rated | The torque is related to the motor torque setting. |
| [106] | Power | Taken from 1-20 Motor Power [kW]. |
| [107] | Speed | Taken from 3-03 Maximum Reference. 20mA = value in 3-03 Maximum Reference |
| [108] | Torque | Torque reference related to 160% torque. |
| [109] | Max Out Freq | In relation to 4-19 Max Output Frequency. |
| [113] | PID Clamped Output | |
| [119] | Torque % lim | |
| [130] | Output freq. 4-20mA | 0hz = 4mA, 100hz = 20mA |
| [131] | Reference 4-20mA | 3-00 Reference Range [Min-Max] 0% = 4mA; 100% = 20mA 3-00 Reference Range [-Max-Max] -100% = 4mA; 0% = 12mA; +100% = 20mA |
| [132] | Feedback 4-20mA | |
| [133] | Motor cur. 4-20mA | Value is taken from 16-37 Inv. Max. Current. Inverter max. current (160% current) is equal to 20mA. Example: Inverter norm current (11kW) = 24 A. 160% = 38.4 A. Motor norm current = 22 A Read-out 11.46mA. $\frac{16 \text{ mA} \times 22 \text{ A}}{38.4 \text{ A}} = 9.17 \text{ mA}$ In case the norm motor current is equal to 20mA, the output setting of 6-62 Terminal X30/8 Max. Scale is: $\frac{I_{VLT_Max} \times 100}{I_{Motor\ Norm}} = \frac{38.4 \times 100}{22} = 175 \%$ |
| [134] | Torq.% lim 4-20 mA | The torque setting is related to setting in 4-16 Torque Limit Motor Mode. |
| [135] | Torq.% nom 4-20 mA | The torque setting is related to the motor torque setting. |
| [136] | Power 4-20mA | Taken from 1-20 Motor Power [kW] |
| [137] | Speed 4-20mA | Taken from 3-03 Maximum Reference. 20mA = Value in 3-03 Maximum Reference. |
| [138] | Torque 4-20mA | Torque reference related to 160% torque. |
| [139] | Bus ctrl. 0-20 mA | An output value set from fieldbus process data. The output will work independently of internal functions in the frequency converter. |

| 6-60 Terminal X30/8 Output | | |
|----------------------------|----------------------|--|
| Option: | Function: | |
| [140] | Bus ctrl. 4-20 mA | An output value set from fieldbus process data. The output will work independently of internal functions in the frequency converter. |
| [141] | Bus ctrl 0-20mA t.o. | 4-54 Warning Reference Low defines the behaviour of the analog output in case of bus time-out. |
| [142] | Bus ctrl 4-20mA t.o. | 4-54 Warning Reference Low defines the behaviour of the analog output in case of bus time-out. |
| [149] | Torque % lim 4-20mA | Torque% Lim 4-20mA: Torque reference. 3-00 Reference Range [Min-Max] 0% = 4mA; 100% = 20mA 3-00 Reference Range [-Max - Max] -100% = 4mA; 0% = 12mA; +100% = 20mA |
| [150] | Max Out Fr 4-20mA | In relation to 4-19 Max Output Frequency. |

| 6-61 Terminal X30/8 Min. Scale | | |
|--------------------------------|---|--|
| Range: | Function: | |
| 0.00 %* [0.00 - 200.00 %] | Scales the minimum output of the selected analog signal on terminal X30/8. Scale the minimum value as a percentage of the maximum signal value, i.e. 0mA (or 0hz) is desired at 25% of the maximum output value and 25% is programmed. The value can never be higher than the corresponding setting in 6-62 Terminal X30/8 Max. Scale if value is below 100%. This parameter is active when option module MCB 101 is mounted in the frequency converter. | |

| 6-62 Terminal X30/8 Max. Scale | | |
|--------------------------------|---|--|
| Range: | Function: | |
| 100.00 %* [0.00 - 200.00 %] | Scales the maximum output of the selected analog signal on terminal X30/8. Scale the value to the desired maximum value of the current signal output. Scale the output to give a lower current than 20mA at full scale or 20mA at an output below 100% of the maximum signal value. If 20mA is the desired output current at a value between 0 - 100% of the full-scale output, program the percentage value in the parameter, i.e. 50% = 20mA. If a current between 4 and 20mA is desired at maximum output (100%), calculate the percentage value as follows: | |

$$20 \text{ mA} \mid \text{desired maximum current} \times 100 \%$$

$$\text{i.e. } 10 \text{ mA} : \frac{20 - 4}{10} \times 100 = 160 \%$$

| 6-63 Terminal X30/8 Bus Control | | |
|---------------------------------|-------------------|---|
| Range: | Function: | |
| 0.00 %* | [0.00 - 100.00 %] | Holds the level of Output X30/8 if controlled by bus. |

| 6-64 Terminal X30/8 Output Timeout Preset | | |
|---|-------------------|--|
| Range: | Function: | |
| 0.00 %* | [0.00 - 100.00 %] | Holds the preset level of Output X30/8. In case of a bus timeout and a timeout function is selected in 6-60 Terminal X30/8 Output, the output will preset to this level. |

3.8.8 6-7* Analog Output 3 MCB 113

Parameters for configuring the scaling and limits for analog output 3, Terminal X45/1 and X45/2. Analog outputs are current outputs: 0/4 – 20mA. Resolution on analog output is 11 bit.


| 6-70 Terminal X45/1 Output | | |
|----------------------------|-----------------------------|--|
| Option: | Function: | |
| | | Select the function of Terminal X45/1 as an analog current output. |
| [0] | No operation | When no signal on the analog output. |
| [52] | MCO 305 0-20mA | |
| [53] | MCO 305 4-20mA | |
| [100] | Output frequency 0-20mA | 0hz = 0mA; 100hz = 20mA. |
| [101] | Reference 0-20mA | 3-00 Reference Range [Min - Max] 0% = 0mA; 100% = 20mA 3-00 Reference Range [-Max - Max] -100% = 0mA; 0% = 10mA; +100% = 20mA |
| [102] | Feedback | |
| [103] | Motor current 0-20mA | Value is taken from 16-37 Inv. Max. Current. Inverter max. current (160% current) is equal to 20mA. Example: Inverter norm current (11kW) = 24 A. 160% = 38.4 A. Motor norm current = 22 A Read-out 11.46mA. $\frac{20 \text{ mA} \times 22 \text{ A}}{38.4 \text{ A}} = 11.46 \text{ mA}$ In case the norm motor current is equal to 20mA, the output setting of 6-52 Terminal 42 Output Max Scale is: $\frac{I_{VLT_Max} \times 100}{I_{Motor_Norm}} = \frac{38.4 \times 100}{22} = 175 \%$ |
| [104] | Torque rel to lim 0-20mA | The torque setting is related to setting in 4-16 Torque Limit Motor Mode |
| [105] | Torque rel to rated | The torque is related to the motor torque setting. |

| 6-70 Terminal X45/1 Output | | |
|----------------------------|---------------------------------|---|
| Option: | Function: | |
| | motor torque 0-20mA | |
| [106] | Power 0-20mA | Taken from 1-20 Motor Power [kW]. |
| [107] | Speed 0-20mA | Taken from 3-03 Maximum Reference. 20mA = value in 3-03 Maximum Reference |
| [108] | Torque ref. 0-20mA | Torque reference related to 160% torque. |
| [109] | Max Out Freq 0-20mA | In relation to 4-19 Max Output Frequency. |
| [130] | Output freq. 4-20mA | 0hz = 4mA, 100hz = 20mA |
| [131] | Reference 4-20mA | 3-00 Reference Range [Min-Max] 0% = 4mA; 100% = 20mA 3-00 Reference Range [-Max-Max] -100% = 4mA; 0% = 12mA; +100% = 20mA |
| [132] | Feedback 4-20mA | |
| [133] | Motor cur. 4-20mA | Value is taken from 16-37 Inv. Max. Current. Inverter max. current (160% current) is equal to 20mA. Example: Inverter norm current (11kW) = 24 A. 160% = 38.4 A. Motor norm current = 22 A Read-out 11.46mA. $\frac{16 \text{ mA} \times 22 \text{ A}}{38.4 \text{ A}} = 9.17 \text{ mA}$ In case the norm motor current is equal to 20mA, the output setting of 6-52 Terminal 42 Output Max Scale is: $\frac{I_{VLT_Max} \times 100}{I_{Motor_Norm}} = \frac{38.4 \times 100}{22} = 175 \%$ |
| [134] | Torque% lim. 4-20mA | The torque setting is related to setting in 4-16 Torque Limit Motor Mode. |
| [135] | Torque% nom 4-20mA | The torque setting is related to the motor torque setting. |
| [136] | Power 4-20mA | Taken from 1-20 Motor Power [kW] |
| [137] | Speed 4-20mA | Taken from 3-03 Maximum Reference. 20mA = Value in 3-03 Maximum Reference. |
| [138] | Torque 4-20mA | Torque reference related to 160% torque. |
| [139] | Bus ctrl. 0-20mA | An output value set from fieldbus process data. The output will work independently of internal functions in the frequency converter. |
| [140] | Bus ctrl. 4-20mA | An output value set from fieldbus process data. The output will work independently of internal functions in the frequency converter. |
| [141] | Bus ctrl. 0-20mA, timeout | 4-54 Warning Reference Low defines the behaviour of the analog output in case of bus time-out. |

| 6-70 Terminal X45/1 Output | | |
|----------------------------|---------------------------------|---|
| Option: | Function: | |
| [142] | Bus ctrl. 4-20mA, timeout | 4-54 <i>Warning Reference Low</i> defines the behaviour of the analog output in case of bus time-out. |
| [150] | Max Out Freq 4-20mA | In relation to 4-19 <i>Max Output Frequency</i> . |

| 6-71 Terminal X45/1 Output Min Scale | | |
|--------------------------------------|--|--|
| Range: | Function: | |
| 0.00%* [0.00 - 200.00%] | Scale the minimum output of the selected analog signal at terminal X45/1, as a percentage of the maximum signal value. E.g. if 0mA (or 0hz) is desired at 25% of the maximum output value, then programme 25%. Scaling values up to 100% can never be higher than the corresponding setting in 6-72 <i>Terminal X45/1 Max. Scale</i> . | |

| 6-72 Terminal X45/1 Output Max Scale | | |
|--------------------------------------|---|--|
| Range: | Function: | |
| 100%* [0.00 - 200.00%] | Scale the maximum output of the selected analog signal at terminal X45/1. Set the value to the maximum value of the current signal output. Scale the output to give a current lower than 20mA at full scale; or 20mA at an output below 100% of the maximum signal value. If 20mA is the desired output current at a value between 0 - 100% of the full-scale output, programme the percentage value in the parameter, i.e. 50% = 20mA. If a current between 4 and 20mA is desired at maximum output (100%), calculate the percentage value as follows (example where desired max. output is 10mA): | |
| | $\frac{I_{RANGE} [mA]}{I_{DESIRED MAX} [mA]} \times 100\%$ $= \frac{20 - 4 mA}{10 mA} \times 100\% = 160\%$ | |

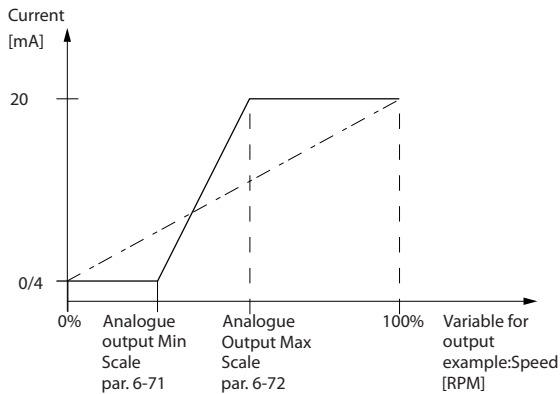

130BA877.10

| 6-73 Terminal X45/1 Output Bus Control | | |
|--|---|--|
| Range: | Function: | |
| 0.00%* [0.00 - 100.00%] | Holds the level of Analog Output 3 (terminal X45/1) if controlled by bus. | |

| 6-74 Terminal X45/1 Output Timeout Preset | | |
|---|--|--|
| Range: | Function: | |
| 0.00%* [0.00 - 100.00%] | Holds the preset level of Analog Output 3 (terminal X45/1). In case of a bus timeout and a timeout function is selected in 6-70 <i>Terminal X45/1 Output</i> the output will preset to this level. | |

3.8.9 6-8* Analog Output 4 MCB 113

Parameters for configuring the scaling and limits for analog output 4. Terminal X45/3 and X45/4. Analog outputs are current outputs: 0/4 – 20mA. Resolution on analog output is 11 bit.

| 6-80 Terminal X45/3 Output | | |
|----------------------------|--------------|--|
| Option: | Function: | |
| | | Select the function of Terminal X45/3 as an analog current output. |
| [0] * | No operation | Same selections available as for 6-70 <i>Terminal X45/1 Output</i> |

| 6-81 Terminal X45/3 Output Min Scale | | |
|--------------------------------------|----------------|---|
| Option: | Function: | |
| [0.00%] * | 0.00 - 200.00% | Scales the minimum output of the selected analog signal on terminal X45/3. Scale the minimum value as a percentage of the maximum signal value, i.e. 0mA (or 0hz) is desired at 25% of the maximum output value and 25% is programmed. The value can never be higher than the corresponding setting in 6-82 <i>Terminal X45/3 Max. Scale</i> if value is below 100%. This parameter is active when option module MCB 113 is mounted in the frequency converter. |

6-82 Terminal X45/3 Output Max Scale

| Option: | Function: |
|--------------|---|
| [0.00%] * | 0.00 - 200.00% |
| | <p>Scales the maximum output of the selected analog signal on terminal X45/3. Scale the value to the desired maximum value of the current signal output. Scale the output to give a lower current than 20mA at full scale or 20mA at an output below 100% of the maximum signal value. If 20mA is the desired output current at a value between 0 - 100% of the full-scale output, program the percentage value in the parameter, i.e. 50% = 20mA. If a current between 4 and 20mA is desired at maximum output (100%), calculate the percentage value as follows (example where desired max. output is 10mA):</p> $\frac{I_{RANGE} [mA]}{I_{DESIRED MAX} [mA]} \times 100 \%$ $= \frac{20 - 4 mA}{10 mA} \times 100 \% = 160 \%$ |

6-83 Terminal X45/3 Output Bus Control

| Option: | Function: |
|-----------|---|
| [0.00%] * | 0.00 - 100.00% |
| | Holds the level of output 4 (X45/3) if controlled by bus. |

6-84 Terminal X45/3 Output Timeout Preset

| Option: | Function: |
|-----------|---|
| [0.00%] * | 0.00 - 100.00% |
| | Holds the present level of output 4 (X45/3). In case of a bus timeout and a timeout function is selected in <i>6-80 Terminal X45/3 Output</i> the output will preset to this level. |

3.9 Parameters: 7-** Controllers

3.9.1 7-0* Speed PID Ctrl.

| 7-00 Speed PID Feedback Source | | |
|--------------------------------|--------------------|--|
| Option: | Function: | |
| | | Select the encoder for closed loop feedback. The feedback may come from a different encoder (typically mounted on the application itself) than the motor mounted encoder feedback selected in <i>1-02 Flux Motor Feedback Source</i> . This parameter cannot be adjusted while the motor is running. |
| [0] * | Motor feedb. P1-02 | |
| [1] | 24V encoder | |
| [2] | MCB 102 | |
| [3] | MCB 103 | |
| [4] | MCO Encoder 1 X56 | |
| [5] | MCO Encoder 2 X55 | |
| [6] | Analog input 53 | |
| [7] | Analog input 54 | |
| [8] | Frequency input 29 | |
| [9] | Frequency input 33 | |

NOTE

If separate encoders are used (FC 302 only) the ramp settings parameters in the following groups: 3-4*, 3-5*, 3-6*, 3-7* and 3-8* must be adjusted according to the gear ratio between the two encoders.

| 7-02 Speed PID Proportional Gain | | |
|----------------------------------|------------------|---|
| Range: | Function: | |
| Application dependent* | [0.000 - 1.000] | Enter the speed controller proportional gain. The proportional gain amplifies the error (i.e. the deviation between the feedback signal and the set-point). This parameter is used with <i>1-00 Configuration Mode Speed open loop</i> [0] and <i>Speed closed loop</i> [1] control. Quick control is obtained at high amplification. However if the amplification is too great, the process may become unstable. Use this parameter for values with three decimals. For a selection with four decimals, use <i>3-83 Quick Stop S-ramp Ratio at Decel. Start</i> . |


| 7-03 Speed PID Integral Time | | |
|------------------------------|--------------------|--|
| Range: | Function: | |
| Application dependent* | [2.0 - 20000.0 ms] | Enter the speed controller integral time, which determines the time the internal PID control takes to correct errors. The greater the error, the more quickly the gain increases. The integral time causes a delay of the signal and therefore a dampening effect, and can be used to eliminate steady state speed error. Obtain quick control through a short integral time, though if the integral time is too short, the process becomes unstable. An excessively long integral time disables the integral action, leading to major deviations from the required reference, since the process regulator takes too long to regulate errors. This parameter is used with <i>Speed open loop</i> [0] and <i>Speed closed loop</i> [1] control, set in <i>1-00 Configuration Mode</i> . |

| 7-04 Speed PID Differentiation Time | | |
|-------------------------------------|------------------|--|
| Range: | Function: | |
| Application dependent* | [0.0 - 200.0 ms] | Enter the speed controller differentiation time. The differentiator does not react to constant error. It provides gain proportional to the rate of change of the speed feedback. The quicker the error changes, the stronger the gain from the differentiator. The gain is proportional with the speed at which errors change. Setting this parameter to zero disables the differentiator. This parameter is used with <i>1-00 Configuration Mode Speed closed loop</i> [1] control. |

| 7-05 Speed PID Diff. Gain Limit | | |
|---------------------------------|---------------|--|
| Range: | Function: | |
| 5.0* | [1.0 - 20.0] | Set a limit for the gain provided by the differentiator. Since the differential gain increases at higher frequencies, limiting the gain may be useful. For example, set up a pure D-link at low frequencies and a constant D-link at higher frequencies. This parameter is used with <i>1-00 Configuration Mode Speed closed loop</i> [1] control. |


| 7-06 Speed PID Lowpass Filter Time | | |
|------------------------------------|------------------|--|
| Range: | Function: | |
| Application dependent* | [1.0 - 100.0 ms] | Set a time constant for the speed control low-pass filter. The low-pass filter improves steady-state performance and dampens oscillations on the feedback signal. This is an advantage if there is a |

| 7-06 Speed PID Lowpass Filter Time | | | | | | | | | | | |
|------------------------------------|--|-------------|------------------------------------|-----|-------|------|------|------|------|------|------|
| Range: | Function: | | | | | | | | | | |
| | <p>great amount on noise in the system, see illustration below. For example, if a time constant (τ) of 100 ms is programmed, the cut-off frequency for the low-pass filter will be $1/0.1 = 10 \text{ RAD/sec.}$, corresponding to $(10/2 \times \pi) = 1.6 \text{ Hz}$. The PID regulator only regulates a feedback signal that varies by a frequency of less than 1.6 Hz. If the feedback signal varies by a higher frequency than 1.6 Hz, the PID regulator does not react.</p> <p>Practical settings of 7-06 Speed PID Lowpass Filter Time taken from the number of pulses per revolutions from encoder:</p> <table border="1"> <thead> <tr> <th>Encoder PPR</th> <th>7-06 Speed PID Lowpass Filter Time</th> </tr> </thead> <tbody> <tr> <td>512</td> <td>10 ms</td> </tr> <tr> <td>1024</td> <td>5 ms</td> </tr> <tr> <td>2048</td> <td>2 ms</td> </tr> <tr> <td>4096</td> <td>1 ms</td> </tr> </tbody> </table> <p>Note that severe filtering can be detrimental to dynamic performance. This parameter is used with 1-00 Configuration Mode Speed closed loop [1] and Torque [2] control. The filter time in flux sensorless must be adjusted to 3-5 ms.</p> | Encoder PPR | 7-06 Speed PID Lowpass Filter Time | 512 | 10 ms | 1024 | 5 ms | 2048 | 2 ms | 4096 | 1 ms |
| Encoder PPR | 7-06 Speed PID Lowpass Filter Time | | | | | | | | | | |
| 512 | 10 ms | | | | | | | | | | |
| 1024 | 5 ms | | | | | | | | | | |
| 2048 | 2 ms | | | | | | | | | | |
| 4096 | 1 ms | | | | | | | | | | |

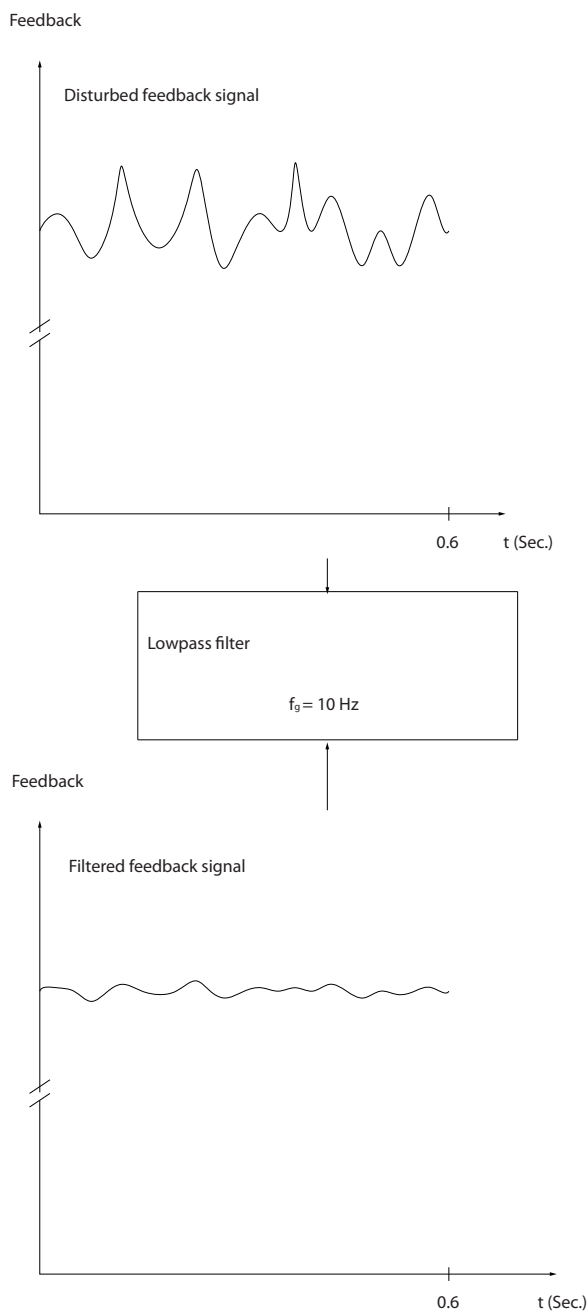

175ZA293.11

| 7-07 Speed PID Feedback Gear Ratio | |
|------------------------------------|-------------------------|
| Range: | Function: |
| 1.0000* | [Application dependant] |

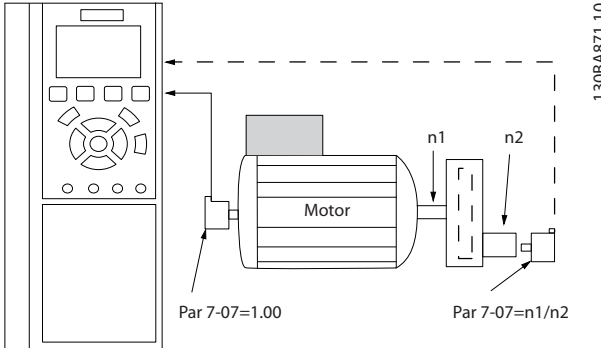

| 7-08 Speed PID Feed Forward Factor | |
|------------------------------------|---|
| Range: | Function: |
| 0 %* | [0 - 500 %] The reference signal bypasses the speed controller by the amount specified. This feature increases the dynamic performance of the speed control loop. |

3.9.2 7-1* Torque PI Control

Parameters for configuring the torque PI control in torque open loop (1-00 Configuration Mode).

| 7-12 Torque PI Proportional Gain | |
|----------------------------------|---|
| Range: | Function: |
| 100 %* | [0 - 500 %] Enter the proportional gain value for the torque controller. Selection of a high value makes the controller react faster. Too high a setting leads to controller instability. |

| 7-13 Torque PI Integration Time | |
|---------------------------------|---|
| Range: | Function: |
| 0.020 s* | [0.002 - 2.000 s] Enter the integration time for the torque controller. Selection of a low value makes the controller react faster. Too low a setting leads to control instability. |

3.9.3 7-2* Process Ctrl. Feedb.

Select the feedback sources for the Process PID Control, and how this feedback should be handled.

| 7-20 Process CL Feedback 1 Resource | |
|-------------------------------------|--|
| Option: | Function: |
| | The effective feedback signal is made up of the sum of up to two different input signals. Select which frequency converter input should be treated as the source |

| 7-20 Process CL Feedback 1 Resource | |
|-------------------------------------|---|
| Option: | Function: |
| | of the first of these signals. The second input signal is defined in 7-22 Process CL Feedback 2 Resource. |
| [0] * | No function |
| [1] | Analog input 53 |
| [2] | Analog input 54 |
| [3] | Frequency input 29 |
| [4] | Frequency input 33 |
| [7] | Analog input X30/11 |
| [8] | Analog input X30/12 |
| [15] | Analog Input X48/2 |

| 7-22 Process CL Feedback 2 Resource | |
|-------------------------------------|--|
| Option: | Function: |
| | The effective feedback signal is made up of the sum of up to two different input signals. Select which frequency converter input should be treated as the source of the second of these signals. The first input signal is defined in 7-20 Process CL Feedback 1 Resource. |
| [0] * | No function |
| [1] | Analog input 53 |
| [2] | Analog input 54 |
| [3] | Frequency input 29 |
| [4] | Frequency input 33 |
| [7] | Analog input X30/11 |
| [8] | Analog input X30/12 |
| [15] | Analog Input X48/2 |

3.9.4 7-3* Process PID Ctrl.

| 7-30 Process PID Normal/ Inverse Control | |
|--|--|
| Option: | Function: |
| | Normal and inverse control are implemented by introducing a difference between the reference signal and the feedback signal. |
| [0] * | Normal Sets process control to increase the output frequency. |
| [1] | Inverse Sets process control to reduce the output frequency. |

| 7-31 Process PID Anti Windup | |
|------------------------------|---|
| Option: | Function: |
| [0] | Off Continues regulation of an error even when the output frequency cannot be increased or decreased. |
| [1] * | On Ceases regulation of an error when the output frequency can no longer be adjusted. |

| 7-32 Process PID Start Speed | | |
|------------------------------|--|--|
| Range: | Function: | |
| 0 RPM* [0 - 6000 RPM] | Enter the motor speed to be attained as a start signal for commencement of PID control. When the power is switched on, the frequency converter will commence ramping and then operate under speed open loop control. Thereafter, when the Process PID start speed is reached, the frequency converter will change over to Process PID control. | |

| 7-33 Process PID Proportional Gain | | |
|------------------------------------|--|--|
| Range: | Function: | |
| 0.01* [0.00 - 10.00] | Enter the PID proportional gain. The proportional gain multiplies the error between the set point and the feedback signal. | |

| 7-34 Process PID Integral Time | | |
|---------------------------------|--|--|
| Range: | Function: | |
| 10000.00 s* [0.01 - 10000.00 s] | Enter the PID integral time. The integrator provides an increasing gain at a constant error between the set point and the feedback signal. The integral time is the time needed by the integrator to reach the same gain as the proportional gain. | |

| 7-35 Process PID Differentiation Time | | |
|---------------------------------------|--|--|
| Range: | Function: | |
| 0.00 s* [0.00 - 10.00 s] | Enter the PID differentiation time. The differentiator does not react to a constant error, but provides a gain only when the error changes. The shorter the PID differentiation time, the stronger the gain from the differentiator. | |

| 7-36 Process PID Diff. Gain Limit | | |
|-----------------------------------|--|--|
| Range: | Function: | |
| 5.0* [1.0 - 50.0] | Enter a limit for the differentiator gain (DG). If there is no limit, the DG will increase when there are fast changes. Limit the DG to obtain a pure differentiator gain at slow changes and a constant differentiator gain where fast changes occur. | |

| 7-38 Process PID Feed Forward Factor | | |
|--------------------------------------|--|--|
| Range: | Function: | |
| 0 %* [0 - 200 %] | Enter the PID feed forward (FF) factor. The FF factor sends a constant fraction of the reference signal to bypass the PID control, so the PID control only affects the remaining fraction of the control signal. Any change to this parameter will thus affect the motor speed. When the FF factor is activated it provides less overshoot, and high | |

| 7-38 Process PID Feed Forward Factor | | |
|--------------------------------------|--|--|
| Range: | Function: | |
| | dynamics when changing the set point. 7-38 Process PID Feed Forward Factor is active when 1-00 Configuration Mode is set to [3] Process. | |

| 7-39 On Reference Bandwidth | | |
|-----------------------------|---|--|
| Range: | Function: | |
| 5 %* [0 - 200 %] | Enter the On Reference bandwidth. When the PID Control Error (the difference between the reference and the feedback) is less than the set value of this parameter the On Reference status bit is high, i.e. =1. | |

3.9.5 7-4* Advanced Process PID Ctrl.

Parameter group 7-4* is only used if 1-00 Configuration Mode is set to [7] Extended PID speed CL or [8] Extended PID Speed OL.

| 7-40 Process PID I-part Reset | | |
|-------------------------------|--|--|
| Option: | Function: | |
| [0] * No | | |
| [1] Yes | Select Yes [1] to reset the I-part of the process PID controller. The selection will automatically revert to No [0]. Resetting the I-part makes it possible to start from a welldefined point after changing something in the process, e.g. changing a textile roll. | |

| 7-41 Process PID Output Neg. Clamp | | |
|------------------------------------|---|--|
| Range: | Function: | |
| -100 %* [Application dependant] | Enter a negative limit for the process PID controller output. | |

| 7-42 Process PID Output Pos. Clamp | | |
|------------------------------------|---|--|
| Range: | Function: | |
| 100 %* [Application dependant] | Enter a positive limit for the process PID controller output. | |

| 7-43 Process PID Gain Scale at Min. Ref. | | |
|--|--|--|
| Range: | Function: | |
| 100 %* [0 - 100 %] | Enter a scaling percentage to apply to the process PID output when operating at the minimum reference. The scaling percentage will be adjusted linearly between the scale at min. ref. (7-43 Process PID Gain Scale at Min. Ref.) and the scale at max. ref. (7-44 Process PID Gain Scale at Max. Ref.). | |

| 7-44 Process PID Gain Scale at Max. Ref. | | |
|--|---|--|
| Range: | Function: | |
| 100 %* [0 - 100 %] | Enter a scaling percentage to apply to the process PID output when operating at the maximum reference. The scaling percentage | |

| 7-44 Process PID Gain Scale at Max. Ref. | |
|--|--|
| Range: | Function: |
| | will be adjusted linearly between the scale at min. ref. (7-43 Process PID Gain Scale at Min. Ref.) and the scale at max. ref. (7-44 Process PID Gain Scale at Max. Ref.). |

| 7-45 Process PID Feed Fwd Resource | |
|------------------------------------|--|
| Option: | Function: |
| [0] * | No function Select which drive input should be used as the feed forward factor. The FF factor is added directly to the output of the PID controller. This increases dynamic performance. |
| [1] | Analog input 53 |
| [2] | Analog input 54 |
| [7] | Frequency input 29 |
| [8] | Frequency input 33 |
| [11] | Local bus reference |
| [20] | Digital pot.meter |
| [21] | Analog input X30-11 |
| [22] | Analog input X30-12 |
| [32] | Bus PCD Selects a bus reference configured by 8-02 Control Word Source. Change 8-42 PCD write configuration for the bus used in order to make the feed-forward available in 7-48 PCD Feed Forward. Use index 1 for feed-forward [748] (and index 2 for reference [1682]). |

| 7-46 Process PID Feed Fwd Normal/ Inv. Ctrl. | |
|--|--|
| Option: | Function: |
| [0] * | Normal Select Normal [0] to set the feed forward factor to treat the FF resource as a positive value. |
| [1] | Inverse Select Inverse [1] to treat the FF resource as a negative value. |

| 7-48 PCD Feed Forward | |
|-----------------------|---|
| Range: | Function: |
| 0* | [0 - 65535] Read-out parameter where the bus 7-45 Process PID Feed Fwd Resource [32] can be read. |

| 7-49 Process PID Output Normal/ Inv. Ctrl. | |
|--|---|
| Option: | Function: |
| [0] * | Normal Select Normal [0] to use the resulting output from the process PID controller as is. |
| [1] | Inverse Select Inverse [1] to invert the resulting output from the process PID controller. This operation is performed after the feed forward factor is applied. |

3.9.6 7-5* Process PID Ctrl.

Parameter group 7-5* is only used if 1-00 Configuration Mode is set to [7] Extended PID speed CL or [8] Extended PID Speed OL.

| 7-50 Process PID Extended PID | | |
|-------------------------------|-----------|--|
| Option: | Function: | |
| [0] | Disabled | Disables the extended parts of the process PID controller. |
| [1] * | Enabled | Enables the extended parts of the PID controller. |

| 7-51 Process PID Feed Fwd Gain | | |
|--------------------------------|------------------|---|
| Range: | Function: | |
| 1.00* | [0.00 - 100.00] | The feed forward is used to obtain the desired level, based on a well-known signal available. The PID controller then only takes care of the smaller part of the control, necessary because of unknown characters. The standard feed fwd factor in 7-38 Process PID Feed Forward Factor is always related to the reference whereas 7-51 Process PID Feed Fwd Gain has more choices. In winder applications, the feed fwd factor will typically be the line speed of the system. |

| 7-52 Process PID Feed Fwd Ramp up | | |
|-----------------------------------|------------------|---|
| Range: | Function: | |
| 0.01 s* | [0.01 - 10.00 s] | Controls the dynamics of the feed forward signal when ramping up. |

| 7-53 Process PID Feed Fwd Ramp down | | |
|-------------------------------------|------------------|---|
| Range: | Function: | |
| 0.01 s* | [0.01 - 10.00 s] | Controls the dynamics of the feed forward signal when ramping down. |

| 7-56 Process PID Ref. Filter Time | | |
|-----------------------------------|-------------------|---|
| Range: | Function: | |
| 0.001 s* | [0.001 - 1.000 s] | Set a time constant for the reference first order low-pass filter. The low-pass filter improves steady-state performance and dampens oscillations on the reference/ feedback signals. However severe filtering can be detrimental to dynamic performance. |

| 7-57 Process PID Fb. Filter Time | | |
|----------------------------------|-------------------|--|
| Range: | Function: | |
| 0.001 s* | [0.001 - 1.000 s] | Set a time constant for the feedback first order low-pass filter. The low-pass filter improves steady-state performance and dampens oscillations on the reference/ feedback signals. However severe filtering can be detrimental to dynamic performance. |

3.10 Parameters: 8-** Communications and Options

3.10.1 8-0* General Settings

| 8-01 Control Site | | |
|-------------------|-----------------------|--|
| Option: | Function: | |
| | | The setting in this parameter overrides the settings in <i>8-50 Coasting Select</i> to <i>8-56 Preset Reference Select</i> . |
| [0] * | Digital and ctrl.word | Control by using both digital input and control word. |
| [1] | Digital only | Control by using digital inputs only. |
| [2] | Controlword only | Control by using control word only. |

| 8-02 Control Word Source | | |
|---|--|--|
| Select the source of the control word: one of two serial interfaces or four installed options. During initial power-up, the frequency converter automatically sets this parameter to <i>Option A</i> [3] if it detects a valid option installed in slot A. If the option is removed, the frequency converter detects a change in the configuration, sets <i>8-02 Control Word Source</i> back to default setting RS-485, and the frequency converter then trips. If an option is installed after initial power-up, the setting of <i>8-02 Control Word Source</i> will not change but the frequency converter will trip and display: <i>Alarm 67 Option Changed</i> . | | |
| When you retrofit a bus option into a frequency converter, that did not have a bus option installed to begin with, you must take an ACTIVE decision to move the control to Bus based. This is done for safety reasons in order to avoid an accidental change. | | |
| This parameter cannot be adjusted while the motor is running. | | |

| Option: | Function: | |
|---------|--------------|--|
| [0] | None | |
| [1] | FC RS485 | |
| [2] | FC USB | |
| [3] * | Option A | |
| [4] | Option B | |
| [5] | Option C0 | |
| [6] | Option C1 | |
| [30] | External Can | |

| 8-03 Control Word Timeout Time | | |
|--------------------------------|-------------------------|---|
| Range: | Function: | |
| 1.0 s* | [Application dependant] | Enter the maximum time expected to pass between the reception of two consecutive telegrams. If this time is exceeded, it indicates that the serial communication has stopped. The function selected in <i>8-04 Control Word Timeout Function</i> will then be carried out. The time-out counter is triggered by a valid control word. |

| 8-04 Control Word Timeout Function | | |
|---|----------------|--|
| Select the time-out function. The time-out function activates when the control word fails to be updated within the time period specified in <i>8-03 Control Word Timeout Time</i> . | | |
| Option: | Function: | |
| [0] * | Off | Resumes control via serial bus (or standard) using the most recent control word. |
| [1] | Freeze output | Freezes output frequency until communication resumes. |
| [2] | Stop | Stops with auto restart when communication resumes. |
| [3] | Jogging | Runs the motor at JOG frequency until communication resumes. |
| [4] | Max. speed | Runs the motor at maximum frequency until communication resumes. |
| [5] | Stop and trip | Stops the motor, then resets the frequency converter in order to restart: via the , via the reset button on the LCP or via a digital input. |
| [7] | Select setup 1 | Changes the set-up upon reestablishment of communication following a control word time-out. If communication resumes causing the time-out situation to disappear, <i>8-05 End-of-Timeout Function</i> defines whether to resume the set-up used before the time-out or to retain the set-up endorsed by the time-out function. |
| [8] | Select setup 2 | See [7] <i>Select setup 1</i> |
| [9] | Select setup 3 | See [7] <i>Select setup 1</i> |
| [10] | Select setup 4 | See [7] <i>Select setup 1</i> |
| [26] | Trip | |

NOTE

The following configuration is required in order to change the set-up after a time-out:

Set *0-10 Active Set-up* to [9] *Multi set-up* and select the relevant link in *0-12 This Set-up Linked to*.

| 8-05 End-of-Timeout Function | | |
|------------------------------|---------------|--|
| Option: | Function: | |
| | | Select the action after receiving a valid control word following a time-out. This parameter is active only when <i>8-04 Control Timeout Function</i> is set to [Set-up 1-4]. |
| [0] | Hold set-up | Retains the set-up selected in <i>8-04 Control Timeout Function</i> and displays a warning, until <i>8-06 Reset Control Timeout</i> toggles. Then the frequency converter resumes its original set-up. |
| [1] * | Resume set-up | Resumes the set-up active prior to the time-out. |

| 8-06 Reset Control Word Timeout | | |
|--|--------------|--|
| This parameter is active only when <i>Hold set-up</i> [0] has been selected in <i>8-05 End-of-Timeout Function</i> . | | |
| Option: | Function: | |
| [0] * | Do not reset | Retains the set-up specified in <i>8-04 Control Word Timeout Function</i> , following a control word time-out. |
| [1] | Do reset | Returns the frequency converter to the original set-up following a control word time-out. The frequency converter performs the reset and then immediately reverts to the <i>Do not reset</i> [0] setting |

| 8-07 Diagnosis Trigger | | | | | | | | | | | | | | | | | | | | | | | |
|------------------------|----------------------------------|--|-------------|---------|-------------|-------|---------------------------|---------------------------|---|---------------|------------------------------------|---|--------------------|------------------------------------|---|----------|------------------------------------|---|-----------------|------------------------------------|---------|----------------------------------|------------------|
| Option: | Function: | | | | | | | | | | | | | | | | | | | | | | |
| [0] * | Disable | This parameter enables and controls the frequency converter diagnosis function and permits expansion of the diagnosis data to 24 byte. | | | | | | | | | | | | | | | | | | | | | |
| [1] | Trigger on alarms | <p>NOTE This is only valid for Profibus.</p> <ul style="list-style-type: none"> - <i>Disable</i> [0]: Do not send extended diagnosis data even if they appear in the frequency converter. - <i>Trigger on alarms</i> [1]: Send extended diagnosis data when one or more alarms appear in alarm <i>16-90 Alarm Word</i> or <i>9-53 Profibus Warning Word</i>. - <i>Trigger alarms/warn.</i> [2]: Send extended diagnosis data if one or more alarms or warnings appear in alarm <i>16-90 Alarm Word</i>, <i>9-53 Profibus Warning Word</i>, or warning <i>16-92 Warning Word</i>. <p>The content of the extended diagnosis frame is as follows:</p> <table border="1"> <thead> <tr> <th>Byte</th> <th>Content</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0 - 5</td> <td>Standard DP Diagnose Data</td> <td>Standard DP Diagnose Data</td> </tr> <tr> <td>6</td> <td>PDU length xx</td> <td>Header of extended diagnostic data</td> </tr> <tr> <td>7</td> <td>Status type = 0x81</td> <td>Header of extended diagnostic data</td> </tr> <tr> <td>8</td> <td>Slot = 0</td> <td>Header of extended diagnostic data</td> </tr> <tr> <td>9</td> <td>Status info = 0</td> <td>Header of extended diagnostic data</td> </tr> <tr> <td>10 - 13</td> <td>VLT <i>16-92 Warning Word</i></td> <td>VLT warning word</td> </tr> </tbody> </table> | Byte | Content | Description | 0 - 5 | Standard DP Diagnose Data | Standard DP Diagnose Data | 6 | PDU length xx | Header of extended diagnostic data | 7 | Status type = 0x81 | Header of extended diagnostic data | 8 | Slot = 0 | Header of extended diagnostic data | 9 | Status info = 0 | Header of extended diagnostic data | 10 - 13 | VLT <i>16-92 Warning Word</i> | VLT warning word |
| Byte | Content | | Description | | | | | | | | | | | | | | | | | | | | |
| 0 - 5 | Standard DP Diagnose Data | Standard DP Diagnose Data | | | | | | | | | | | | | | | | | | | | | |
| 6 | PDU length xx | Header of extended diagnostic data | | | | | | | | | | | | | | | | | | | | | |
| 7 | Status type = 0x81 | Header of extended diagnostic data | | | | | | | | | | | | | | | | | | | | | |
| 8 | Slot = 0 | Header of extended diagnostic data | | | | | | | | | | | | | | | | | | | | | |
| 9 | Status info = 0 | Header of extended diagnostic data | | | | | | | | | | | | | | | | | | | | | |
| 10 - 13 | VLT <i>16-92 Warning Word</i> | VLT warning word | | | | | | | | | | | | | | | | | | | | | |
| [2] | Trigger alarm/warn. | | | | | | | | | | | | | | | | | | | | | | |

| 8-07 Diagnosis Trigger | | | |
|--|---------------------|--|---------------------------------------|
| Option: | Function: | | |
| | 14 - 17 | VLT <i>16-03 Status Word</i> | VLT status word |
| | 18 - 21 | VLT <i>16-90 Alarm Word</i> | VLT alarm word |
| | 22 - 23 | VLT <i>9-53 Profibus Warning Word</i> | Communication warning word (Profibus) |
| Enabling diagnosis may cause increased bus traffic. Diagnosis functions are not supported by all fieldbus types. | | | |
| [0] * | Disable | | |
| [1] | Trigger on alarms | | |
| [2] | Trigger alarm/warn. | | |

| 8-08 Readout Filtering | | |
|---|----------------------|---|
| The function is used if the speed feedback value readouts on fieldbus are fluctuating. Select filtered if the function is required. A power-cycle is required for changes to take effect. | | |
| Option: | Function: | |
| [0] * | Motor Data Std-Filt. | Select [0] for normal bus readouts. |
| [1] | Motor Data LP-Filter | Select [1] for filtered bus readouts of the following parameters: <i>16-10 Power [kW]</i> <i>16-11 Power [hp]</i> <i>16-12 Motor Voltage</i> <i>16-14 Motor Current</i> <i>16-16 Torque [Nm]</i> <i>16-17 Speed [RPM]</i> <i>16-22 Torque [%]</i> <i>16-25 Torque [Nm] High</i> |

3.10.2 8-1* Ctrl. Word Settings

| 8-10 Control Word Profile | | |
|--|-------------------|--|
| Select the interpretation of the control and status words corresponding to the installed . Only the selections valid for the installed in slot A will be visible in the LCP display. | | |
| For guidelines in selection of <i>FC profile</i> [0] and <i>PROFdrive profile</i> [1] please refer to the <i>Serial communication via RS 485 Interface</i> section. | | |
| For additional guidelines in the selection of <i>PROFdrive profile</i> [1], <i>ODVA</i> [5] and <i>CANopen DSP 402</i> [7], please refer to the Operating Instructions for the installed . | | |
| Option: | Function: | |
| [0] * | FC profile | |
| [1] | PROFdrive profile | |
| [5] | ODVA | |
| [7] | CANopen DSP 402 | |
| [8] | MCO | |

| 8-13 Configurable Status Word STW | | |
|-----------------------------------|--------------------|--|
| Option: | Function: | |
| [0] | No function | The input is always low. |
| [1] * | Profile Default | Depended on the profile set in 8-10 Control Profile. |
| [2] | Alarm 68 Only | The input will go high whenever Alarm 68 is active and will go low whenever no alarm 68 is active |
| [3] | Trip excl Alarm 68 | The input will go high whenever Trip on other Alarms then Alarm 68 is active. |
| [10] | T18 DI status | The input will go high whenever T18 has 24V and will go low whenever T18 has 0V |
| [11] | T19 DI status | The input will go high whenever T19 has 24V and will go low whenever T19 has 0V |
| [12] | T27 DI status | The input will go high whenever T27 has 24V and will go low whenever T27 has 0V |
| [13] | T29 DI status | The input will go high whenever T29 has 24V and will go low whenever T29 has 0V |
| [14] | T32 DI status | The input will go high whenever T32 has 24V and will go low whenever T32 has 0V |
| [15] | T33 DI status | The input will go high whenever T33 has 24V and will go low whenever T33 has 0V |
| [16] | T37 DI status | The input will go high whenever T37 has 0V and will go low whenever T37 has 24V |
| [21] | Thermal warning | The thermal warning turns on when the temperature exceeds the limit in the motor, the frequency converter, the brake resistor, or the thermistor.. |
| [30] | Brake fault (IGBT) | Will go high when the brake IGBT is short-circuited. |
| [40] | Out of ref range | If Comparator 0 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |

| 8-13 Configurable Status Word STW | | |
|-----------------------------------|------------------|---|
| Option: | Function: | |
| [60] | Comparator 0 | If Comparator 0 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [61] | Comparator 1 | If Comparator 1 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [62] | Comparator 2 | If Comparator 2 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [63] | Comparator 3 | If Comparator 3 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [64] | Comparator 4 | If Comparator 4 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [65] | Comparator 5 | If Comparator 5 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [70] | Logic Rule 0 | If Logic Rule 0 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [71] | Logic Rule 1 | If Logic Rule 1 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [72] | Logic Rule 2 | If Logic Rule 2 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [73] | Logic Rule 3 | If Logic Rule 3 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [74] | Logic Rule 4 | If Logic Rule 4 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [75] | Logic Rule 5 | If Logic Rule 5 is evaluated as TRUE, the input will go high. Otherwise, it will be low. |
| [80] | SL digital out A | SL Controller Action. The input will go high whenever the Smart Logic Action [38] Set dig. out. A high is executed. The input will go low whenever the Smart Logic Action [32] Set dig. out. A low is executed. |
| [81] | SL digital out B | SL Controller Action. The input will go high whenever the Smart Logic Action [39] Set dig. out. A high is executed. The input will go low whenever the Smart Logic Action [33] Set dig. out. A low is executed. |
| [82] | SL digital out C | SL Controller Action. The input will go high whenever the Smart Logic Action [40] Set dig. out. A high is executed. The input will go low whenever the Smart Logic Action [34] Set dig. out. A low is executed. |
| [83] | SL digital out D | SL Controller Action. The input will go high whenever the Smart Logic Action [41] Set dig. out. A high is executed. The input will go low whenever the Smart Logic Action [35] Set dig. out. A low is executed. |
| [84] | SL digital out E | SL Controller Action. The input will go high whenever the Smart Logic Action [42] Set dig. out. A high is executed. The input will |

| 8-13 Configurable Status Word STW | | |
|-----------------------------------|------------------------|--|
| Option: | Function: | |
| | | go low whenever the Smart Logic Action [36] Set dig. out. A low is executed. |
| [85] | SL digital out F | SL Controller Action. The input will go high whenever the Smart Logic Action [43] Set dig. out. A high is executed. The input will go low whenever the Smart Logic Action [37] Set dig. out. A low is executed |
| [86] | ATEX ETR cur. alarm | Selectable if par. 1-90 is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1. |
| [87] | ATEX ETR freq. alarm | Selectable if par. 1-90 is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1. |
| [88] | ATEX ETR cur. warning | Selectable if par. 1-90 is set to [20] or [21] . If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1. |
| [89] | ATEX ETR freq. warning | Selectable if par. 1-90 is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1. |
| [90] | Safe Function active | |
| [91] | Safe Opt. Reset req. | |

| 8-14 Configurable Control Word CTW | | |
|------------------------------------|-----------------------|---|
| Option: | Function: | |
| | | Selection of control word bit 10 if it is active low or active high |
| [0] | None | |
| [1] * | Profile default | |
| [2] | CTW Valid, active low | |
| [3] | Safe Option Reset | |

3.10.3 8-3* FC Port Settings

| 8-30 Protocol | | |
|---------------|------------|---|
| Option: | Function: | |
| [0] * | FC | Communication according to the FC Protocol as described in the <i>VLT AutomationDrive Design Guide, RS485 Installation and Set-up</i> . |
| [1] | FC MC | Select the protocol for the FC (standard) port. |
| [2] * | Modbus RTU | |

| 8-31 Address | | |
|---------------|--------------|--|
| Range: | Function: | |
| Size related* | [1. - 255.] | Enter the address for the FC (standard) port. Valid range: 1 - 126. |

| 8-32 FC Port Baud Rate | | |
|------------------------|-------------|---|
| Option: | Function: | |
| [0] | 2400 Baud | Baud rate selection for the FC (standard) port. |
| [1] | 4800 Baud | |
| [2] * | 9600 Baud | |
| [3] | 19200 Baud | |
| [4] | 38400 Baud | |
| [5] | 57600 Baud | |
| [6] | 76800 Baud | |
| [7] | 115200 Baud | |

| 8-33 Parity / Stop Bits | | |
|-------------------------|-------------------------|--|
| Option: | Function: | |
| [0] * | Even Parity, 1 Stop Bit | |
| [1] | Odd Parity, 1 Stop Bit | |
| [2] | No Parity, 1 Stop Bit | |
| [3] | No Parity, 2 Stop Bits | |

| 8-34 Estimated cycle time | | |
|---------------------------|-----------|--|
| Range: | Function: | |
| 0 ms* [0 - 1000000 ms] | | In a noisy environments, the interface may be blocked by due to overload of bad frames. This parameter specifies the time between two consecutive frames on the network. If the interface does not detect valid frames in that time it flushes the receive buffer. |

| 8-35 Minimum Response Delay | | |
|--------------------------------|-----------|--|
| Range: | Function: | |
| 10 ms* [Application dependant] | | Specify the minimum delay time between receiving a request and transmitting a response. This is used for overcoming modem turnaround delays. |

| 8-36 Max Response Delay | | |
|-------------------------|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Specify the maximum permissible delay time between transmitting a request and receiving a response. Exceeding this delay time will cause control word time-out. |

| 8-37 Max Inter-Char Delay | | |
|---------------------------|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Specify the maximum permissible time interval between receipt of two bytes. This parameter activates time-out if transmission is interrupted. |

| 8-37 Max Inter-Char Delay | | |
|---------------------------|--|--|
| Range: | | Function: |
| | | This parameter is active only when 8-30 Protocol is set to FC MC [1] protocol. |

3.10.4 8-4* FC MC protocol set

| 8-40 Telegram selection | | |
|-------------------------|---------------------|---|
| Option: | | Function: |
| [1] * | Standard telegram 1 | Enables use of freely configurable telegrams or standard telegrams for the FC port. |
| [100] | None | |
| [101] | PPO 1 | |
| [102] | PPO 2 | |
| [103] | PPO 3 | |
| [104] | PPO 4 | |
| [105] | PPO 5 | |
| [106] | PPO 6 | |
| [107] | PPO 7 | |
| [108] | PPO 8 | |
| [200] | Custom telegram 1 | Enables use of freely configurable telegrams or standard telegrams for the FC port. |
| [202] | Custom telegram 3 | |

| 8-41 Parameters for signals | | |
|-----------------------------|------------------------------|--|
| Option: | | Function: |
| [0] * | None | This parameter contains a list of signals available for selection in 8-42 PCD write configuration and 8-43 PCD read configuration. |
| [15] | Readout: actual setup | |
| [302] | Minimum Reference | |
| [303] | Maximum Reference | |
| [312] | Catch up/slow Down Value | |
| [341] | Ramp 1 Ramp up Time | |
| [342] | Ramp 1 Ramp Down Time | |
| [351] | Ramp 2 Ramp up Time | |
| [352] | Ramp 2 Ramp down Time | |
| [380] | Jog Ramp Time | |
| [381] | Quick Stop Ramp Time | |
| [411] | Motor Speed Low Limit [RPM] | |
| [412] | Motor Speed Low Limit [Hz] | |
| [413] | Motor Speed High Limit [RPM] | |
| [414] | Motor Speed High Limit [Hz] | |
| [416] | Torque Limit Motor Mode | |
| [417] | Torque Limit Generator Mode | |
| [590] | Digital & Relay Bus Control | |
| [593] | Pulse Out #27 Bus Control | |
| [595] | Pulse Out #29 Bus Control | |

| 8-41 Parameters for signals | | |
|-----------------------------|------------------------------|-----------|
| Option: | | Function: |
| [597] | Pulse Out #X30/6 Bus Control | |
| [653] | Term 42 Output Bus Ctrl | |
| [663] | Terminal X30/8 Bus Control | |
| [673] | Terminal X45/1 Bus Control | |
| [683] | Terminal X45/3 Bus Control | |
| [748] | PCD Feed Forward | |
| [890] | Bus Jog 1 Speed | |
| [891] | Bus Jog 2 Speed | |
| [1472] | Legacy Alarm Word | |
| [1473] | Legacy Warning Word | |
| [1474] | Leg. Ext. Status Word | |
| [1500] | Operating Hours | |
| [1501] | Running Hours | |
| [1502] | kWh Counter | |
| [1600] | Control Word | |
| [1601] | Reference [Unit] | |
| [1602] | Reference % | |
| [1603] | Status Word | |
| [1605] | Main Actual Value [%] | |
| [1609] | Custom Readout | |
| [1610] | Power [kW] | |
| [1611] | Power [hp] | |
| [1612] | Motor Voltage | |
| [1613] | Frequency | |
| [1614] | Motor Current | |
| [1615] | Frequency [%] | |
| [1616] | Torque [Nm] | |
| [1617] | Speed [RPM] | |
| [1618] | Motor Thermal | |
| [1619] | KTY sensor temperature | |
| [1620] | Motor Angle | |
| [1621] | Torque [%] High Res. | |
| [1622] | Torque [%] | |
| [1625] | Torque [Nm] High | |
| [1630] | DC Link Voltage | |
| [1632] | Brake Energy /s | |
| [1633] | Brake Energy /2 min | |
| [1634] | Heatsink Temp. | |
| [1635] | Inverter Thermal | |
| [1638] | SL Controller State | |
| [1639] | Control Card Temp. | |
| [1650] | External Reference | |
| [1651] | Pulse Reference | |
| [1652] | Feedback [Unit] | |
| [1653] | Digi Pot Reference | |
| [1657] | Feedback [RPM] | |
| [1660] | Digital Input | |
| [1661] | Terminal 53 Switch Setting | |
| [1662] | Analog Input 53 | |
| [1663] | Terminal 54 Switch Setting | |
| [1664] | Analog Input 54 | |
| [1665] | Analog Output 42 [mA] | |

| 8-41 Parameters for signals | | |
|-----------------------------|------------------------|--|
| Option: | Function: | |
| [1666] | Digital Output [bin] | |
| [1667] | Freq. Input #29 [Hz] | |
| [1668] | Freq. Input #33 [Hz] | |
| [1669] | Pulse Output #27 [Hz] | |
| [1670] | Pulse Output #29 [Hz] | |
| [1671] | Relay Output [bin] | |
| [1672] | Counter A | |
| [1673] | Counter B | |
| [1674] | Prec. Stop Counter | |
| [1675] | Analog In X30/11 | |
| [1676] | Analog In X30/12 | |
| [1677] | Analog Out X30/8 [mA] | |
| [1678] | Analog Out X45/1 [mA] | |
| [1679] | Analog Out X45/3 [mA] | |
| [1680] | Fieldbus CTW 1 | |
| [1682] | Fieldbus REF 1 | |
| [1684] | Comm. Option STW | |
| [1685] | FC Port CTW 1 | |
| [1686] | FC Port REF 1 | |
| [1690] | Alarm Word | |
| [1691] | Alarm Word 2 | |
| [1692] | Warning Word | |
| [1693] | Warning Word 2 | |
| [1694] | Ext. Status Word | |
| [1860] | Digital Input 2 | |
| [3310] | Sync Factor Master | |
| [3311] | Sync Factor Slave | |
| [3401] | PCD 1 Write to MCO | |
| [3402] | PCD 2 Write to MCO | |
| [3403] | PCD 3 Write to MCO | |
| [3404] | PCD 4 Write to MCO | |
| [3405] | PCD 5 Write to MCO | |
| [3406] | PCD 6 Write to MCO | |
| [3407] | PCD 7 Write to MCO | |
| [3408] | PCD 8 Write to MCO | |
| [3409] | PCD 9 Write to MCO | |
| [3410] | PCD 10 Write to MCO | |
| [3421] | PCD 1 Read from MCO | |
| [3422] | PCD 2 Read from MCO | |
| [3423] | PCD 3 Read from MCO | |
| [3424] | PCD 4 Read from MCO | |
| [3425] | PCD 5 Read from MCO | |
| [3426] | PCD 6 Read from MCO | |
| [3427] | PCD 7 Read from MCO | |
| [3428] | PCD 8 Read from MCO | |
| [3429] | PCD 9 Read from MCO | |
| [3430] | PCD 10 Read from MCO | |
| [3440] | Digital Inputs | |
| [3441] | Digital Outputs | |
| [3450] | Actual Position | |
| [3451] | Commanded Position | |
| [3452] | Actual Master Position | |

| 8-41 Parameters for signals | | |
|-----------------------------|------------------------|--|
| Option: | Function: | |
| [3453] | Slave Index Position | |
| [3454] | Master Index Position | |
| [3455] | Curve Position | |
| [3456] | Track Error | |
| [3457] | Synchronizing Error | |
| [3458] | Actual Velocity | |
| [3459] | Actual Master Velocity | |
| [3460] | Synchronizing Status | |
| [3461] | Axis Status | |
| [3462] | Program Status | |
| [3464] | MCO 302 Status | |
| [3465] | MCO 302 Control | |
| [3470] | MCO Alarm Word 1 | |
| [3471] | MCO Alarm Word 2 | |
| [4280] | Safe Option Status | |
| [4285] | Active Safe Func. | |
| [4286] | Safe Option Info | |

| 8-42 PCD write configuration | | |
|------------------------------|-------------|--|
| Range: | Function: | |
| Application dependent* | [0 - 9999] | |

| 8-43 PCD read configuration | | |
|-----------------------------|-------------|--|
| Range: | Function: | |
| Application dependent* | [0 - 9999] | |

3.10.5 8-5* Digital/Bus

Parameters for configuring the control word Digital/Bus merging.

NOTE

These parameters are active only when 8-01 Control Site is set to [0] *Digital and control word*.

| 8-50 Coasting Select | | |
|----------------------|---------------|---|
| Option: | Function: | |
| | | Select control of the coasting function via the terminals (digital input) and/or via the bus. |
| [0] | Digital input | Activates Start command via a digital input. |
| [1] | Bus | Activates Start command via the serial communication port or fieldbus option. |
| [2] | Logic AND | Activates Start command via the fieldbus/serial communication port, AND additionally via one of the digital inputs. |
| [3] * | Logic OR | Activates Start command via the fieldbus/serial communication port OR via one of the digital inputs. |

8-51 Quick Stop Select

Select control of the Quick Stop function via the terminals (digital input) and/or via the bus.

| Option: | Function: |
|---------|---------------|
| [0] | Digital Input |
| [1] | Bus |
| [2] | Logic AND |
| [3] * | Logic OR |

8-52 DC Brake Select

Select control of the DC brake via the terminals (digital input) and/or via the fieldbus.

| Option: | Function: |
|---------|--|
| [0] | Digital input Activates Start command via a digital input. |
| [1] | Bus Activates Start command via the serial communication port or fieldbus option. |
| [2] | Logic AND Activates Start command via the fieldbus/serial communication port, AND additionally via one of the digital inputs. |
| [3] * | Logic OR Activates Start command via the fieldbus/serial communication port OR via one of the digital inputs. |

8-53 Start Select

Select control of the frequency converter start function via the terminals (digital input) and/or via the fieldbus.

| Option: | Function: |
|---------|--|
| [0] | Digital input Activates Start command via a digital input. |
| [1] | Bus Activates Start command via the serial communication port or fieldbus option. |
| [2] | Logic AND Activates Start command via the fieldbus/serial communication port, AND additionally via one of the digital inputs. |
| [3] * | Logic OR Activates Start command via the fieldbus/serial communication port OR via one of the digital inputs. |

8-54 Reversing Select

Select control of the frequency converter reverse function via the terminals (digital input) and/or via the .

| Option: | Function: |
|---------|--|
| [0] | Digital input Activates the Reverse command via the serial communication port or option . |
| [1] | Bus Activates the Reverse command via the /serial communication port, AND additionally via one of the digital inputs. |
| [2] | Logic AND |
| [3] * | Logic OR |

8-54 Reversing Select

| Option: | Function: |
|---------|--|
| [3] * | Logic OR Activates the Reverse command via the /serial communication port OR via one of the digital inputs. |

8-55 Set-up Select

Select control of the frequency converter set-up selection via the terminals (digital input) and/or via the fieldbus.

| Option: | Function: |
|---------|---|
| [0] | Digital input Activates the set-up selection via a digital input. |
| [1] | Bus Activates the set-up selection via the serial communication port or fieldbus option. |
| [2] | Logic AND Activates the set-up selection via the fieldbus/serial communication port, AND additionally via one of the digital inputs. |
| [3] * | Logic OR Activate the set-up selection via the fieldbus/serial communication port OR via one of the digital inputs. |

8-56 Preset Reference Select

Select control of the frequency converter Preset Reference selection via the terminals (digital input) and/or via the fieldbus.

| Option: | Function: |
|---------|---|
| [0] | Digital input Activates Preset Reference selection via a digital input. |
| [1] | Bus Activates Preset Reference selection via the serial communication port or fieldbus option. |
| [2] | Logic AND Activates Preset Reference selection via the fieldbus/serial communication port, AND additionally via one of the digital inputs. |
| [3] * | Logic OR Activates the Preset Reference selection via the fieldbus/serial communication port OR via one of the digital inputs. |

8-57 Profidrive OFF2 Select

Select control of the drive OFF2 selection via the terminals (digital input) and/or via the fieldbus. This parameter is active only when par. 8-01 Control Site is set to [0] Digital and ctrl. word and par. 8-10 is set to [1] Profidrive profile.

| Option: | Function: |
|---------|---------------|
| [0] | Digital input |
| [1] | Bus |
| [2] | Logic AND |
| [3] * | Logic OR |

| 8-58 Profidrive OFF3 Select | | |
|--|------------------|--|
| Select control of the drive OFF3 selection via the terminals (digital input) and/or via the fieldbus. This parameter is active only when par. 8-01 Control Site is set to [0] Digital and control word and par. 8-10 is set to [1] Profidrive profile. | | |
| Option: | Function: | |
| [0] | Digital input | |
| [1] | Bus | |
| [2] | Logic AND | |
| [3] * | Logic OR | |

3.10.6 8-8* FC Port Diagnostics

These parameters are used for monitoring the Bus communication via the Port.

| 8-80 Bus Message Count | | |
|------------------------|-----------|---|
| Range: | Function: | |
| 0 * | [0 - 0] | This parameter shows the number of valid telegrams detected on the bus. |

| 8-81 Bus Error Count | | |
|----------------------|-----------|---|
| Range: | Function: | |
| 0 * | [0 - 0] | This parameter shows the number of telegrams with faults (e.g. CRC fault), detected on the bus. |

| 8-82 Slave Messages Rcvd | | |
|--------------------------|-----------|---|
| Range: | Function: | |
| 0 * | [0 - 0] | This parameter shows the number of valid telegrams addressed to the slave, sent by the frequency converter. |

| 8-83 Slave Error Count | | |
|------------------------|-----------|---|
| Range: | Function: | |
| 0 * | [0 - 0] | This parameter shows the number of error telegrams, which could not be executed by the frequency converter. |

3.10.7 8-9* Bus Jog

| 8-90 Bus Jog 1 Speed | | |
|----------------------|---------------------|--|
| Range: | Function: | |
| 100 RPM* | [0 - par. 4-13 RPM] | Enter the jog speed. This is a fixed jog speed activated via the serial port or fieldbus option. |

| 8-91 Bus Jog 2 Speed | | |
|----------------------|---------------------|--|
| Range: | Function: | |
| 200 RPM* | [0 - par. 4-13 RPM] | Enter the jog speed. This is a fixed jog speed activated via the serial port or fieldbus option. |

3.11 Parameters: 9-** Profibus

| 9-00 Setpoint | | |
|-----------------|---|--|
| Range: | Function: | |
| 0* [0 - 65535] | This parameter receives cyclical reference from a Master Class 2. If the control priority is set to Master Class 2, the reference for the frequency converter is taken from this parameter, whereas the cyclical reference will be ignored. | |

| 9-07 Actual Value | | |
|-------------------|--|--|
| Range: | Function: | |
| 0* [0 - 65535] | This parameter delivers the MAV for a Master Class 2. The parameter is valid if the control priority is set to Master Class 2. | |

| 9-15 PCD Write Configuration | | |
|------------------------------|--|--|
| Array [10] | | |
| Option: | Function: | |
| | Select the parameters to be assigned to PCD 3 to 10 of the telegrams. The number of available PCDs depends on the telegram type. The values in PCD 3 to 10 will then be written to the selected parameters as data values. Alternatively, specify a standard Profibus telegram in <i>9-22 Telegram Selection</i> . | |
| [0] * | None | |
| [302] | Minimum Reference | |
| [303] | Maximum Reference | |
| [312] | Catch up/slow Down Value | |
| [341] | Ramp 1 Ramp up Time | |
| [342] | Ramp 1 Ramp Down Time | |
| [351] | Ramp 2 Ramp up Time | |
| [352] | Ramp 2 Ramp down Time | |
| [380] | Jog Ramp Time | |
| [381] | Quick Stop Ramp Time | |
| [411] | Motor Speed Low Limit [RPM] | |
| [412] | Motor Speed Low Limit [Hz] | |
| [413] | Motor Speed High Limit [RPM] | |
| [414] | Motor Speed High Limit [Hz] | |
| [416] | Torque Limit Motor Mode | |
| [417] | Torque Limit Generator Mode | |
| [590] | Digital & Relay Bus Control | |
| [593] | Pulse Out #27 Bus Control | |
| [595] | Pulse Out #29 Bus Control | |
| [597] | Pulse Out #X30/6 Bus Control | |
| [653] | Term 42 Output Bus Ctrl | |
| [663] | Terminal X30/8 Bus Control | |
| [673] | Terminal X45/1 Bus Control | |

| 9-15 PCD Write Configuration | | |
|------------------------------|----------------------------|--|
| Array [10] | | |
| Option: | Function: | |
| [683] | Terminal X45/3 Bus Control | |
| [748] | PCD Feed Forward | |
| [890] | Bus Jog 1 Speed | |
| [891] | Bus Jog 2 Speed | |
| [1680] | Fieldbus CTW 1 | |
| [1682] | Fieldbus REF 1 | |
| [1685] | FC Port CTW 1 | |
| [1686] | FC Port REF 1 | |
| [3310] | Sync Factor Master | |
| [3311] | Sync Factor Slave | |
| [3401] | PCD 1 Write to MCO | |
| [3402] | PCD 2 Write to MCO | |
| [3403] | PCD 3 Write to MCO | |
| [3404] | PCD 4 Write to MCO | |
| [3405] | PCD 5 Write to MCO | |
| [3406] | PCD 6 Write to MCO | |
| [3407] | PCD 7 Write to MCO | |
| [3408] | PCD 8 Write to MCO | |
| [3409] | PCD 9 Write to MCO | |
| [3410] | PCD 10 Write to MCO | |

| 9-16 PCD Read Configuration | | |
|-----------------------------|--|--|
| Array [10] | | |
| Option: | Function: | |
| | Select the parameters to be assigned to PCD 3 to 10 of the telegrams. The number of available PCDs depends on the telegram type. PCDs 3 to 10 contain the actual data values of the selected parameters. For standard Profibus telegrams, see <i>9-22 Telegram Selection</i> . | |
| [0] * | None | |
| [15] | Readout: actual setup | |
| [1472] | Legacy Alarm Word | |
| [1473] | Legacy Warning Word | |
| [1474] | Leg. Ext. Status Word | |
| [1500] | Operating Hours | |
| [1501] | Running Hours | |
| [1502] | kWh Counter | |
| [1600] | Control Word | |
| [1601] | Reference [Unit] | |
| [1602] | Reference % | |
| [1603] | Status Word | |
| [1605] | Main Actual Value [%] | |
| [1609] | Custom Readout | |
| [1610] | Power [kW] | |
| [1611] | Power [hp] | |
| [1612] | Motor Voltage | |

| 9-16 PCD Read Configuration | | |
|-----------------------------|----------------------------|--|
| Array [10] | | |
| Option: | Function: | |
| [1613] | Frequency | |
| [1614] | Motor Current | |
| [1615] | Frequency [%] | |
| [1616] | Torque [Nm] | |
| [1617] | Speed [RPM] | |
| [1618] | Motor Thermal | |
| [1619] | KTY sensor temperature | |
| [1620] | Motor Angle | |
| [1621] | Torque [%] High Res. | |
| [1622] | Torque [%] | |
| [1625] | Torque [Nm] High | |
| [1630] | DC Link Voltage | |
| [1632] | Brake Energy /s | |
| [1633] | Brake Energy /2 min | |
| [1634] | Heatsink Temp. | |
| [1635] | Inverter Thermal | |
| [1638] | SL Controller State | |
| [1639] | Control Card Temp. | |
| [1650] | External Reference | |
| [1651] | Pulse Reference | |
| [1652] | Feedback [Unit] | |
| [1653] | Digi Pot Reference | |
| [1657] | Feedback [RPM] | |
| [1660] | Digital Input | |
| [1661] | Terminal 53 Switch Setting | |
| [1662] | Analog Input 53 | |
| [1663] | Terminal 54 Switch Setting | |
| [1664] | Analog Input 54 | |
| [1665] | Analog Output 42 [mA] | |
| [1666] | Digital Output [bin] | |
| [1667] | Freq. Input #29 [Hz] | |
| [1668] | Freq. Input #33 [Hz] | |
| [1669] | Pulse Output #27 [Hz] | |
| [1670] | Pulse Output #29 [Hz] | |
| [1671] | Relay Output [bin] | |
| [1672] | Counter A | |
| [1673] | Counter B | |
| [1674] | Prec. Stop Counter | |
| [1675] | Analog In X30/11 | |
| [1676] | Analog In X30/12 | |
| [1677] | Analog Out X30/8 [mA] | |
| [1678] | Analog Out X45/1 [mA] | |
| [1679] | Analog Out X45/3 [mA] | |
| [1684] | Comm. Option STW | |
| [1690] | Alarm Word | |
| [1691] | Alarm Word 2 | |
| [1692] | Warning Word | |
| [1693] | Warning Word 2 | |
| [1694] | Ext. Status Word | |
| [1860] | Digital Input 2 | |
| [3421] | PCD 1 Read from MCO | |

| 9-16 PCD Read Configuration | | |
|-----------------------------|------------------------|--|
| Array [10] | | |
| Option: | Function: | |
| [3422] | PCD 2 Read from MCO | |
| [3423] | PCD 3 Read from MCO | |
| [3424] | PCD 4 Read from MCO | |
| [3425] | PCD 5 Read from MCO | |
| [3426] | PCD 6 Read from MCO | |
| [3427] | PCD 7 Read from MCO | |
| [3428] | PCD 8 Read from MCO | |
| [3429] | PCD 9 Read from MCO | |
| [3430] | PCD 10 Read from MCO | |
| [3440] | Digital Inputs | |
| [3441] | Digital Outputs | |
| [3450] | Actual Position | |
| [3451] | Commanded Position | |
| [3452] | Actual Master Position | |
| [3453] | Slave Index Position | |
| [3454] | Master Index Position | |
| [3455] | Curve Position | |
| [3456] | Track Error | |
| [3457] | Synchronizing Error | |
| [3458] | Actual Velocity | |
| [3459] | Actual Master Velocity | |
| [3460] | Synchronizing Status | |
| [3461] | Axis Status | |
| [3462] | Program Status | |
| [3464] | MCO 302 Status | |
| [3465] | MCO 302 Control | |
| [3470] | MCO Alarm Word 1 | |
| [3471] | MCO Alarm Word 2 | |
| [4280] | Safe Option Status | |
| [4285] | Active Safe Func. | |
| [4286] | Safe Option Info | |

| 9-18 Node Address | | |
|-------------------|------------|--|
| Range: | Function: | |
| 126 * | [0 - 126.] | Enter the station address in this parameter or alternatively in the hardware switch. In order to adjust the station address in 9-18 Node Address, the hardware switch must be set to 126 or 127 (i.e. all switches set to 'on'). Otherwise this parameter will display the actual setting of the switch. |

| 9-22 Telegram Selection | | |
|---|---------------------|------------------|
| Displays the Profibus telegram configuration. | | |
| Option: | | Function: |
| [1] | Standard telegram 1 | |
| [100] * | None | |
| [101] | PPO 1 | |
| [102] | PPO 2 | |
| [103] | PPO 3 | |
| [104] | PPO 4 | |
| [105] | PPO 5 | |
| [106] | PPO 6 | |
| [107] | PPO 7 | |
| [108] * | PPO 8 | Read only. |
| [200] | Custom telegram 1 | |
| [202] | Custom telegram 3 | |

| 9-23 Parameters for Signals | | |
|-----------------------------|------------------------------|--|
| Array [1000] | | |
| Read only | | |
| Option: | | Function: |
| | | This parameter contains a list of signals available for selection in 9-15 PCD Write Configuration and 9-16 PCD Read Configuration. |
| [0] * | None | |
| [15] | Readout: actual setup | |
| [302] | Minimum Reference | |
| [303] | Maximum Reference | |
| [312] | Catch up/slow Down Value | |
| [341] | Ramp 1 Ramp up Time | |
| [342] | Ramp 1 Ramp Down Time | |
| [351] | Ramp 2 Ramp up Time | |
| [352] | Ramp 2 Ramp down Time | |
| [380] | Jog Ramp Time | |
| [381] | Quick Stop Ramp Time | |
| [411] | Motor Speed Low Limit [RPM] | |
| [412] | Motor Speed Low Limit [Hz] | |
| [413] | Motor Speed High Limit [RPM] | |
| [414] | Motor Speed High Limit [Hz] | |
| [416] | Torque Limit Motor Mode | |
| [417] | Torque Limit Generator Mode | |
| [590] | Digital & Relay Bus Control | |
| [593] | Pulse Out #27 Bus Control | |
| [595] | Pulse Out #29 Bus Control | |
| [597] | Pulse Out #X30/6 Bus Control | |
| [653] | Term 42 Output Bus Ctrl | |
| [663] | Terminal X30/8 Bus Control | |
| [673] | Terminal X45/1 Bus Control | |
| [683] | Terminal X45/3 Bus Control | |
| [748] | PCD Feed Forward | |
| [890] | Bus Jog 1 Speed | |
| [891] | Bus Jog 2 Speed | |

| 9-23 Parameters for Signals | | |
|-----------------------------|----------------------------|------------------|
| Array [1000] | | |
| Read only | | |
| Option: | | Function: |
| [1472] | Legacy Alarm Word | |
| [1473] | Legacy Warning Word | |
| [1474] | Leg. Ext. Status Word | |
| [1500] | Operating Hours | |
| [1501] | Running Hours | |
| [1502] | kWh Counter | |
| [1600] | Control Word | |
| [1601] | Reference [Unit] | |
| [1602] | Reference % | |
| [1603] | Status Word | |
| [1605] | Main Actual Value [%] | |
| [1609] | Custom Readout | |
| [1610] | Power [kW] | |
| [1611] | Power [hp] | |
| [1612] | Motor Voltage | |
| [1613] | Frequency | |
| [1614] | Motor Current | |
| [1615] | Frequency [%] | |
| [1616] | Torque [Nm] | |
| [1617] | Speed [RPM] | |
| [1618] | Motor Thermal | |
| [1619] | KTY sensor temperature | |
| [1620] | Motor Angle | |
| [1621] | Torque [%] High Res. | |
| [1622] | Torque [%] | |
| [1625] | Torque [Nm] High | |
| [1630] | DC Link Voltage | |
| [1632] | Brake Energy /s | |
| [1633] | Brake Energy /2 min | |
| [1634] | Heatsink Temp. | |
| [1635] | Inverter Thermal | |
| [1638] | SL Controller State | |
| [1639] | Control Card Temp. | |
| [1650] | External Reference | |
| [1651] | Pulse Reference | |
| [1652] | Feedback [Unit] | |
| [1653] | Digi Pot Reference | |
| [1657] | Feedback [RPM] | |
| [1660] | Digital Input | |
| [1661] | Terminal 53 Switch Setting | |
| [1662] | Analog Input 53 | |
| [1663] | Terminal 54 Switch Setting | |
| [1664] | Analog Input 54 | |
| [1665] | Analog Output 42 [mA] | |
| [1666] | Digital Output [bin] | |
| [1667] | Freq. Input #29 [Hz] | |
| [1668] | Freq. Input #33 [Hz] | |
| [1669] | Pulse Output #27 [Hz] | |
| [1670] | Pulse Output #29 [Hz] | |
| [1671] | Relay Output [bin] | |

| 9-23 Parameters for Signals | | |
|-----------------------------|------------------------|--|
| Array [1000] | | |
| Read only | | |
| Option: | Function: | |
| [1672] | Counter A | |
| [1673] | Counter B | |
| [1674] | Prec. Stop Counter | |
| [1675] | Analog In X30/11 | |
| [1676] | Analog In X30/12 | |
| [1677] | Analog Out X30/8 [mA] | |
| [1678] | Analog Out X45/1 [mA] | |
| [1679] | Analog Out X45/3 [mA] | |
| [1680] | Fieldbus CTW 1 | |
| [1682] | Fieldbus REF 1 | |
| [1684] | Comm. Option STW | |
| [1685] | FC Port CTW 1 | |
| [1686] | FC Port REF 1 | |
| [1690] | Alarm Word | |
| [1691] | Alarm Word 2 | |
| [1692] | Warning Word | |
| [1693] | Warning Word 2 | |
| [1694] | Ext. Status Word | |
| [1860] | Digital Input 2 | |
| [3310] | Sync Factor Master | |
| [3311] | Sync Factor Slave | |
| [3401] | PCD 1 Write to MCO | |
| [3402] | PCD 2 Write to MCO | |
| [3403] | PCD 3 Write to MCO | |
| [3404] | PCD 4 Write to MCO | |
| [3405] | PCD 5 Write to MCO | |
| [3406] | PCD 6 Write to MCO | |
| [3407] | PCD 7 Write to MCO | |
| [3408] | PCD 8 Write to MCO | |
| [3409] | PCD 9 Write to MCO | |
| [3410] | PCD 10 Write to MCO | |
| [3421] | PCD 1 Read from MCO | |
| [3422] | PCD 2 Read from MCO | |
| [3423] | PCD 3 Read from MCO | |
| [3424] | PCD 4 Read from MCO | |
| [3425] | PCD 5 Read from MCO | |
| [3426] | PCD 6 Read from MCO | |
| [3427] | PCD 7 Read from MCO | |
| [3428] | PCD 8 Read from MCO | |
| [3429] | PCD 9 Read from MCO | |
| [3430] | PCD 10 Read from MCO | |
| [3440] | Digital Inputs | |
| [3441] | Digital Outputs | |
| [3450] | Actual Position | |
| [3451] | Commanded Position | |
| [3452] | Actual Master Position | |
| [3453] | Slave Index Position | |
| [3454] | Master Index Position | |
| [3455] | Curve Position | |
| [3456] | Track Error | |

| 9-23 Parameters for Signals | | |
|-----------------------------|------------------------|--|
| Array [1000] | | |
| Read only | | |
| Option: | Function: | |
| [3457] | Synchronizing Error | |
| [3458] | Actual Velocity | |
| [3459] | Actual Master Velocity | |
| [3460] | Synchronizing Status | |
| [3461] | Axis Status | |
| [3462] | Program Status | |
| [3464] | MCO 302 Status | |
| [3465] | MCO 302 Control | |
| [3470] | MCO Alarm Word 1 | |
| [3471] | MCO Alarm Word 2 | |
| [4280] | Safe Option Status | |
| [4285] | Active Safe Func. | |
| [4286] | Safe Option Info | |

| 9-27 Parameter Edit | | |
|---------------------|-----------|--|
| Option: | Function: | |
| | | Parameters can be edited via Profibus, the standard RS485 interface, or the LCP. |
| [0] | Disabled | Disables editing via Profibus. |
| [1] * | Enabled | Enables editing via Profibus. |

| 9-28 Process Control | | |
|----------------------|----------------------|---|
| Option: | Function: | |
| | | Process control (setting of Control Word, speed reference, and process data) is possible via either Profibus or standard fieldbus but not both simultaneously. Local control is always possible via the LCP. Control via process control is possible via either terminals or fieldbus depending on the settings in 8-50 <i>Coasting Select</i> to 8-56 <i>Preset Reference Select</i> . |
| [0] | Disable | Disables process control via Profibus, and enables process control via standard fieldbus or Profibus Master class 2. |
| [1] * | Enable cyclic master | Enables process control via Profibus Master Class 1, and disables process control via standard fieldbus or Profibus Master class 2. |

| 9-44 Fault Message Counter | | |
|----------------------------|--------------|---|
| Range: | Function: | |
| 0* | [0 - 65535] | This parameter displays the number of error events stored in 9-45 <i>Fault Code</i> and 9-47 <i>Fault Number</i> . The maximum buffer capacity is eight error events. The buffer and counter are set to 0 upon reset or power-up. |

| 9-45 Fault Code | | |
|-----------------|-----------|---|
| Range: | Function: | |
| 0* | [0 - 0] | This buffer contains the alarm word for all alarms and warnings that have occurred since last reset or power-up. The maximum buffer capacity is eight error events. |

| 9-47 Fault Number | | |
|-------------------|-----------|--|
| Range: | Function: | |
| 0* | [0 - 0] | This buffer contains the alarm number (e.g. 2 for live zero error, 4 for mains phase loss) for all alarms and warnings that have occurred since last reset or power-up. The maximum buffer capacity is eight error events. |

| 9-52 Fault Situation Counter | | |
|------------------------------|-------------|--|
| Range: | Function: | |
| 0* | [0 - 1000] | This parameter displays the number of error events which have occurred since last reset of power-up. |

| 9-53 Profibus Warning Word | | |
|----------------------------|--------------|--|
| Range: | Function: | |
| 0 * | [0 - 65535] | This parameter displays Profibus communication warnings. Please refer to the <i>Profibus Operating Instructions</i> for further information. |

Read only

| Bit: | Meaning: |
|------|---|
| 0 | Connection with DP-master is not ok |
| 1 | Not used |
| 2 | FDLNDL (Fieldbus Data link Layer) is not ok |
| 3 | Clear data command received |
| 4 | Actual value is not updated |
| 5 | Baudrate search |
| 6 | PROFIBUS ASIC is not transmitting |
| 7 | Initialisation of PROFIBUS is not ok |
| 8 | Frequency converter is tripped |
| 9 | Internal CAN error |
| 10 | Wrong configuration data from PLC |
| 11 | Wrong ID sent by PLC |
| 12 | Internal error occurred |
| 13 | Not configured |
| 14 | Timeout active |
| 15 | Warning 34 active |

| 9-63 Actual Baud Rate | | |
|-----------------------|------------|--|
| Option: | Function: | |
| | | This parameter displays the actual Profibus baud rate. The Profibus Master automatically sets the baud rate. |
| [0] | 9,6 kbit/s | |

| 9-63 Actual Baud Rate | | |
|-----------------------|-------------------|--|
| Option: | Function: | |
| [1] | 19,2 kbit/s | |
| [2] | 93,75 kbit/s | |
| [3] | 187,5 kbit/s | |
| [4] | 500 kbit/s | |
| [6] | 1500 kbit/s | |
| [7] | 3000 kbit/s | |
| [8] | 6000 kbit/s | |
| [9] | 12000 kbit/s | |
| [10] | 31,25 kbit/s | |
| [11] | 45,45 kbit/s | |
| [255] * | No baudrate found | |

| 9-64 Device Identification | | |
|----------------------------|-----------|---|
| Range: | Function: | |
| 0* | [0 - 0] | This parameter displays the device identification. Please refer to the <i>Operating Instructions for Profibus, MG.33.CX.YY</i> for further explanation. |

| 9-65 Profile Number | | |
|---------------------|-----------|--|
| Range: | Function: | |
| 0 * | [0 - 0] | This parameter contains the profile identification. Byte 1 contains the profile number and byte 2 the version number of the profile. |

NOTE

This parameter is not visible via LCP.

| 9-67 Control Word 1 | | |
|---------------------|--------------|--|
| Range: | Function: | |
| 0* | [0 - 65535] | This parameter accepts the Control Word from a Master Class 2 in the same format as PCD 1. |

| 9-68 Status Word 1 | | |
|--------------------|--------------|---|
| Range: | Function: | |
| 0* | [0 - 65535] | This parameter delivers the Status Word for a Master Class 2 in the same format as PCD 2. |

| 9-70 Programming Set-up | | |
|-------------------------|---------------|---|
| Option: | Function: | |
| | | Select the set-up to be edited. |
| [0] | Factory setup | Uses default data. This option can be used as a data source to return the other set-ups to a known state. |
| [1] | Set-up 1 | Edits Set-up 1. |
| [2] | Set-up 2 | Edits Set-up 2. |
| [3] | Set-up 3 | Edits Set-up 3. |
| [4] | Set-up 4 | Edits Set-up 4. |
| [9] * | Active Set-up | Follows the active set-up selected in <i>0-10 Active Set-up</i> . |

This parameter is unique to LCP and fieldbuses. See also 0-11 Programming Set-up.

| 9-71 Profibus Save Data Values | | |
|--------------------------------|------------------|--|
| Option: | Function: | |
| | | Parameter values changed via Profibus are not automatically stored in non-volatile memory. Use this parameter to activate a function that stores parameter values in the EEPROM non-volatile memory, so changed parameter values will be retained at power-down. |
| [0] * | Off | Deactivates the non-volatile storage function. |
| [1] | Store all setups | Stores all parameter values for all set-ups in the non-volatile memory. The selection returns to <i>Off</i> [0] when all parameter values have been stored. |
| [2] | Store all setups | Stores all parameter values for all set-ups in the non-volatile memory. The selection returns to <i>Off</i> [0] when all parameter values have been stored. |

| 9-72 ProfibusDriveReset | | |
|-------------------------|-------------------|---|
| Option: | Function: | |
| [0] * | No action | |
| [1] | Power-on reset | Resets frequency converter upon power-up, as for power-cycle. |
| [3] | Comm option reset | Resets the Profibus option only, useful after changing certain settings in parameter group 9-**, e.g. 9-18 Node Address. When reset, the frequency converter disappears from the fieldbus, which may cause a communication error from the master. |

| 9-75 DO Identification | | |
|------------------------|--------------|---|
| Range: | Function: | |
| 0* | [0 - 65535] | Provides information about the DO (Drive Object). |

| 9-80 Defined Parameters (1) | | |
|---|-------------|--|
| Array [116] No LCP access Read only | | |
| Range: | Function: | |
| 0 * | [0 - 9999] | This parameter displays a list of all the defined frequency converter parameters available for Profibus. |

| 9-81 Defined Parameters (2) | | |
|---|-------------|--|
| Array [116] No LCP access Read only | | |
| Range: | Function: | |
| 0 * | [0 - 9999] | This parameter displays a list of all the defined frequency converter parameters available for Profibus. |

| 9-82 Defined Parameters (3) | | |
|---|-------------|--|
| Array [116] No LCP access Read only | | |
| Range: | Function: | |
| 0 * | [0 - 9999] | This parameter displays a list of all the defined frequency converter parameters available for Profibus. |

| 9-83 Defined Parameters (4) | | |
|---|-------------|--|
| Array [116] No LCP access Read only | | |
| Range: | Function: | |
| 0 * | [0 - 9999] | This parameter displays a list of all the defined frequency converter parameters available for Profibus. |

| 9-84 Defined Parameters (5) | | |
|-----------------------------|-------------|--|
| Range: | Function: | |
| 0* | [0 - 9999] | This parameter displays a list of all the defined frequency converter parameters available for Profibus. |

| 9-90 Changed Parameters (1) | | |
|---|-------------|--|
| Array [116] No LCP access Read only | | |
| Range: | Function: | |
| 0 * | [0 - 9999] | This parameter displays a list of all the frequency converter parameters deviating from default setting. |

| 9-91 Changed Parameters (2) | | |
|---|-------------|--|
| Array [116] No LCP access Read only | | |
| Range: | Function: | |
| 0 * | [0 - 9999] | This parameter displays a list of all the frequency converter parameters deviating from default setting. |

| 9-92 Changed Parameters (3) | | |
|---|-------------|--|
| Array [116] No LCP access Read only | | |
| Range: | Function: | |
| 0 * | [0 - 9999] | This parameter displays a list of all the frequency converter parameters deviating from default setting. |

| 9-94 Changed Parameters (5) | | |
|--|-------------|--|
| Array [116] No LCP Address Read only | | |
| Range: | | Function: |
| 0 * | [0 - 9999] | This parameter displays a list of all the frequency converter parameters deviating from default setting. |

3.12 Parameters: 10-** DeviceNet CAN Fieldbus

3.12.1 10-0* Common Settings

| 10-00 CAN Protocol | | |
|--------------------|-----------|-------------------------------|
| Option: | Function: | |
| [0] | CANopen | |
| [1] * | DeviceNet | View the active CAN protocol. |

NOTE

The options depend on installed option.

| 10-01 Baud Rate Select | | |
|---|-----------|--|
| Select the fieldbus transmission speed. The selection must correspond to the transmission speed of the master and the other fieldbus nodes. | | |
| Option: | Function: | |
| [16] | 10 Kbps | |
| [17] | 20 Kbps | |
| [18] | 50 Kbps | |
| [19] | 100 Kbps | |
| [20] * | 125 Kbps | |
| [21] | 250 Kbps | |
| [22] | 500 Kbps | |

| 10-02 MAC ID | | |
|------------------------|-------------------------|---|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Selection of station address. Every station connected to the same network must have an unambiguous address. |

| 10-05 Readout Transmit Error Counter | | |
|--------------------------------------|------------|---|
| Range: | Function: | |
| 0 * | [0 - 255] | View the number of CAN control transmission errors since the last power-up. |

| 10-06 Readout Receive Error Counter | | |
|-------------------------------------|------------|--|
| Range: | Function: | |
| 0 * | [0 - 255] | View the number of CAN control receipt errors since the last power-up. |

| 10-07 Readout Bus Off Counter | | |
|-------------------------------|------------|--|
| Range: | Function: | |
| 0* | [0 - 255] | View the number of Bus Off events since the last power-up. |

3.12.2 10-1* DeviceNet

| 10-10 Process Data Type Selection | | |
|-----------------------------------|------------------|---|
| Option: | Function: | |
| | | Select the Instance (telegram) for data transmission. The Instances available are dependent upon the setting of 8-10 Control Profile. When 8-10 Control Profile is set to [0] FC profile, 10-10 Process Data Type Selection options [0] and [1] are available. When 8-10 Control Profile is set to [5] ODVA, 10-10 Process Data Type Selection options [2] and [3] are available. Instances 100/150 and 101/151 are Danfoss-specific. Instances 20/70 and 21/71 are ODVA-specific AC Drive profiles. For guidelines in telegram selection, please refer to the <i>DeviceNet Operating Instructions</i> . Note that a change to this parameter will be executed immediately. |
| [0] * | INSTANCE 100/150 | |
| [1] | INSTANCE 101/151 | |
| [2] | INSTANCE 20/70 | |
| [3] | INSTANCE 21/71 | |

| 10-11 Process Data Config Write | | |
|--|------------------------------|--|
| Select the process write data for I/O Assembly Instances 101/151. Elements [2] and [3] of this array can be selected. Elements [0] and [1] of the array are fixed. | | |
| Option: | Function: | |
| [0] | None | |
| [302] | Minimum Reference | |
| [303] | Maximum Reference | |
| [312] | Catch up/slow Down Value | |
| [341] | Ramp 1 Ramp up Time | |
| [342] | Ramp 1 Ramp Down Time | |
| [351] | Ramp 2 Ramp up Time | |
| [352] | Ramp 2 Ramp down Time | |
| [380] | Jog Ramp Time | |
| [381] | Quick Stop Ramp Time | |
| [411] | Motor Speed Low Limit [RPM] | |
| [412] | Motor Speed Low Limit [Hz] | |
| [413] | Motor Speed High Limit [RPM] | |
| [414] | Motor Speed High Limit [Hz] | |
| [416] | Torque Limit Motor Mode | |
| [417] | Torque Limit Generator Mode | |
| [590] | Digital & Relay Bus Control | |
| [593] | Pulse Out #27 Bus Control | |
| [595] | Pulse Out #29 Bus Control | |
| [597] | Pulse Out #X30/6 Bus Control | |

| 10-11 Process Data Config Write | | |
|--|----------------------------|--|
| Select the process write data for I/O Assembly Instances 101/151. Elements [2] and [3] of this array can be selected. Elements [0] and [1] of the array are fixed. | | |
| Option: | Function: | |
| [653] | Term 42 Output Bus Ctrl | |
| [663] | Terminal X30/8 Bus Control | |
| [673] | Terminal X45/1 Bus Control | |
| [683] | Terminal X45/3 Bus Control | |
| [748] | PCD Feed Forward | |
| [890] | Bus Jog 1 Speed | |
| [891] | Bus Jog 2 Speed | |
| [1680] | Fieldbus CTW 1 | |
| [1682] | Fieldbus REF 1 | |
| [1685] | FC Port CTW 1 | |
| [1686] | FC Port REF 1 | |
| [3310] | Sync Factor Master | |
| [3311] | Sync Factor Slave | |
| [3401] | PCD 1 Write to MCO | |
| [3402] | PCD 2 Write to MCO | |
| [3403] | PCD 3 Write to MCO | |
| [3404] | PCD 4 Write to MCO | |
| [3405] | PCD 5 Write to MCO | |
| [3406] | PCD 6 Write to MCO | |
| [3407] | PCD 7 Write to MCO | |
| [3408] | PCD 8 Write to MCO | |
| [3409] | PCD 9 Write to MCO | |
| [3410] | PCD 10 Write to MCO | |

| 10-12 Process Data Config Read | | |
|---|-----------------------|--|
| Select the process read data for I/O Assembly Instances 101/151. Elements [2] and [3] of this array can be selected. Elements [0] and [1] of the array are fixed. | | |
| Option: | Function: | |
| [0] * | None | |
| [15] | Readout: actual setup | |
| [1472] | Legacy Alarm Word | |
| [1473] | Legacy Warning Word | |
| [1474] | Leg. Ext. Status Word | |
| [1500] | Operating Hours | |
| [1501] | Running Hours | |
| [1502] | kWh Counter | |
| [1600] | Control Word | |
| [1601] | Reference [Unit] | |
| [1602] | Reference % | |
| [1603] | Status Word | |
| [1605] | Main Actual Value [%] | |
| [1609] | Custom Readout | |
| [1610] | Power [kW] | |
| [1611] | Power [hp] | |
| [1612] | Motor Voltage | |
| [1613] | Frequency | |
| [1614] | Motor Current | |
| [1615] | Frequency [%] | |

| 10-12 Process Data Config Read | | |
|---|----------------------------|--|
| Select the process read data for I/O Assembly Instances 101/151. Elements [2] and [3] of this array can be selected. Elements [0] and [1] of the array are fixed. | | |
| Option: | Function: | |
| [1616] | Torque [Nm] | |
| [1617] | Speed [RPM] | |
| [1618] | Motor Thermal | |
| [1619] | KTY sensor temperature | |
| [1620] | Motor Angle | |
| [1621] | Torque [%] High Res. | |
| [1622] | Torque [%] | |
| [1625] | Torque [Nm] High | |
| [1630] | DC Link Voltage | |
| [1632] | Brake Energy /s | |
| [1633] | Brake Energy /2 min | |
| [1634] | Heatsink Temp. | |
| [1635] | Inverter Thermal | |
| [1638] | SL Controller State | |
| [1639] | Control Card Temp. | |
| [1650] | External Reference | |
| [1651] | Pulse Reference | |
| [1652] | Feedback [Unit] | |
| [1653] | Digi Pot Reference | |
| [1657] | Feedback [RPM] | |
| [1660] | Digital Input | |
| [1661] | Terminal 53 Switch Setting | |
| [1662] | Analog Input 53 | |
| [1663] | Terminal 54 Switch Setting | |
| [1664] | Analog Input 54 | |
| [1665] | Analog Output 42 [mA] | |
| [1666] | Digital Output [bin] | |
| [1667] | Freq. Input #29 [Hz] | |
| [1668] | Freq. Input #33 [Hz] | |
| [1669] | Pulse Output #27 [Hz] | |
| [1670] | Pulse Output #29 [Hz] | |
| [1671] | Relay Output [bin] | |
| [1672] | Counter A | |
| [1673] | Counter B | |
| [1674] | Prec. Stop Counter | |
| [1675] | Analog In X30/11 | |
| [1676] | Analog In X30/12 | |
| [1677] | Analog Out X30/8 [mA] | |
| [1678] | Analog Out X45/1 [mA] | |
| [1679] | Analog Out X45/3 [mA] | |
| [1684] | Comm. Option STW | |
| [1690] | Alarm Word | |
| [1691] | Alarm Word 2 | |
| [1692] | Warning Word | |
| [1693] | Warning Word 2 | |
| [1694] | Ext. Status Word | |
| [1860] | Digital Input 2 | |
| [3421] | PCD 1 Read from MCO | |
| [3422] | PCD 2 Read from MCO | |

| 10-12 Process Data Config Read | | |
|---|------------------------|------------------|
| Select the process read data for I/O Assembly Instances 101/151. Elements [2] and [3] of this array can be selected. Elements [0] and [1] of the array are fixed. | | |
| Option: | | Function: |
| [3423] | PCD 3 Read from MCO | |
| [3424] | PCD 4 Read from MCO | |
| [3425] | PCD 5 Read from MCO | |
| [3426] | PCD 6 Read from MCO | |
| [3427] | PCD 7 Read from MCO | |
| [3428] | PCD 8 Read from MCO | |
| [3429] | PCD 9 Read from MCO | |
| [3430] | PCD 10 Read from MCO | |
| [3440] | Digital Inputs | |
| [3441] | Digital Outputs | |
| [3450] | Actual Position | |
| [3451] | Commanded Position | |
| [3452] | Actual Master Position | |
| [3453] | Slave Index Position | |
| [3454] | Master Index Position | |
| [3455] | Curve Position | |
| [3456] | Track Error | |
| [3457] | Synchronizing Error | |
| [3458] | Actual Velocity | |
| [3459] | Actual Master Velocity | |
| [3460] | Synchronizing Status | |
| [3461] | Axis Status | |
| [3462] | Program Status | |
| [3464] | MCO 302 Status | |
| [3465] | MCO 302 Control | |
| [3470] | MCO Alarm Word 1 | |
| [3471] | MCO Alarm Word 2 | |
| [4280] | Safe Option Status | |
| [4285] | Active Safe Func. | |
| [4286] | Safe Option Info | |

| 10-13 Warning Parameter | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------------------------|--|------|----------|---|-----------------------|---|-----------------------------|---|----------------|---|---------------------|---|-----------------------|---|-------------|---|----------------|---|----------------------|---|---------------|---|---------|----|---------------|----|---------------|----|------------------------|----|------------------|----|------------------|----|-------------|--|
| Range: | Function: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0* [0 - 65535] | View a DeviceNet-specific Warning word. One bit is assigned to every warning. Please refer to the DeviceNet Operating Instructions (MG.33.DX.YY) for further information. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | <table border="1"> <thead> <tr> <th>Bit:</th> <th>Meaning:</th> </tr> </thead> <tbody> <tr><td>0</td><td>BusNetwork not active</td></tr> <tr><td>1</td><td>Explicit connection timeout</td></tr> <tr><td>2</td><td>I/O connection</td></tr> <tr><td>3</td><td>Retry limit reached</td></tr> <tr><td>4</td><td>Actual is not updated</td></tr> <tr><td>5</td><td>CAN bus off</td></tr> <tr><td>6</td><td>I/O send error</td></tr> <tr><td>7</td><td>Initialization error</td></tr> <tr><td>8</td><td>No bus supply</td></tr> <tr><td>9</td><td>Bus off</td></tr> <tr><td>10</td><td>Error passive</td></tr> <tr><td>11</td><td>Error warning</td></tr> <tr><td>12</td><td>Duplicate MAC ID Error</td></tr> <tr><td>13</td><td>RX queue overrun</td></tr> <tr><td>14</td><td>TX queue overrun</td></tr> <tr><td>15</td><td>CAN overrun</td></tr> </tbody> </table> | Bit: | Meaning: | 0 | BusNetwork not active | 1 | Explicit connection timeout | 2 | I/O connection | 3 | Retry limit reached | 4 | Actual is not updated | 5 | CAN bus off | 6 | I/O send error | 7 | Initialization error | 8 | No bus supply | 9 | Bus off | 10 | Error passive | 11 | Error warning | 12 | Duplicate MAC ID Error | 13 | RX queue overrun | 14 | TX queue overrun | 15 | CAN overrun | |
| Bit: | Meaning: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | BusNetwork not active | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Explicit connection timeout | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | I/O connection | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | Retry limit reached | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | Actual is not updated | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | CAN bus off | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | I/O send error | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | Initialization error | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | No bus supply | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | Bus off | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | Error passive | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 | Error warning | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 | Duplicate MAC ID Error | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 | RX queue overrun | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 14 | TX queue overrun | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 15 | CAN overrun | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| 10-14 Net Reference | | |
|---------------------|------------------|--|
| Read only from LCP | | |
| Option: | Function: | |
| | | Select the reference source in Instance 21/71 and 20/70. |
| [0] * | Off | Enables reference via analog/digital inputs. |
| [1] | On | Enables reference via the fieldbus. |

| 10-15 Net Control | | |
|--------------------|------------------|--|
| Read only from LCP | | |
| Option: | Function: | |
| | | Select the control source in Instance 21/71 and 20/70. |
| [0] * | Off | Enables control via analog/digital inputs. |
| [1] | On | Enable control via the fieldbus. |

3.12.3 10-2* COS Filters

| 10-20 COS Filter 1 | | |
|--------------------|--|--|
| Range: | Function: | |
| 0* [0 - 65535] | Enter the value for COS Filter 1 to set up the filter mask for the Status Word. When operating in COS (Change-Of-State), this function filters out bits in the Status Word that should not be sent if they change. | |

| 10-21 COS Filter 2 | | |
|--------------------|---|--|
| Range: | Function: | |
| 0* [0 - 65535] | Enter the value for COS Filter 2, to set up the filter mask for the Main Actual Value. When operating in COS (Change-Of-State), this function filters out bits in the Main Actual Value that should not be sent if they change. | |

| 10-22 COS Filter 3 | | |
|--------------------|---|--|
| Range: | Function: | |
| 0* [0 - 65535] | Enter the value for COS Filter 3, to set up the filter mask for PCD 3. When operating in COS (Change-Of-State), this function filters out bits in PCD 3 that should not be sent if they change. | |

| 10-23 COS Filter 4 | | |
|--------------------|--|--|
| Range: | Function: | |
| 0* [0 - 65535] | Enter the value for COS Filter 4 to set up the filter mask for PCD 4. When operating in COS (Change-Of-State), this function filters out bits in PCD 4 that should not be sent if they change. | |

3.12.4 10-3* Parameter Access

Parameter group providing access to indexed parameters and defining programming set-up.

| 10-30 Array Index | | |
|-------------------|---|--|
| Range: | Function: | |
| 0* [0 - 255] | View array parameters. This parameter is valid only when a DeviceNet fieldbus is installed. | |

| 10-31 Store Data Values | | |
|-------------------------|------------------|---|
| Option: | Function: | |
| | | Parameter values changed via DeviceNet are not automatically stored in non-volatile memory. Use this parameter to activate a function that stores parameter values in the EEPROM non-volatile memory, so changed parameter values will be retained at power-down. |
| [0] | Off | Deactivates the non-volatile storage function. |
| [1] | Store all setups | Stores all parameter values from the active set-up in the non-volatile memory. The selection returns to Off [0] when all values have been stored. |

| 10-31 Store Data Values | | |
|-------------------------|------------------|--|
| Option: | Function: | |
| [2] | Store all setups | Stores all parameter values for all set-ups in the non-volatile memory. The selection returns to Off [0] when all parameter values have been stored. |

| 10-32 Devicenet Revision | | |
|--------------------------|--------------|---|
| Range: | Function: | |
| Application dependent* | [0 - 65535] | View the DeviceNet revision number. This parameter is used for EDS file creation. |

| 10-33 Store Always | | |
|--------------------|-----------|--|
| Option: | Function: | |
| [0] | Off | Deactivates non-volatile storage of data. |
| [1] | On | Stores parameter data received via DeviceNet in EEPROM non-volatile memory as default. |

| 10-39 Devicenet F Parameters | | |
|-------------------------------|-----------|---|
| Range: | Function: | |
| Array [1000] No LCP access | | |
| 0 * | [0 - 0] | This parameter is used to configure the frequency converter via DeviceNet and build the EDS-file. |

3.13 Parameters: 12-** Ethernet

3.13.1 12-0* IP Settings

12-00 IP Address Assignment

Option: Function:

| | | |
|-------|--------|--|
| | | Selects the IP Address assignment method. |
| [0] * | Manual | IP-address can be set in <i>12-01 IP Address</i> IP Address. |
| [1] | DHCP | IP-address is assigned via DHCP server. |
| [2] | BOOTP | IP-address is assigned via BOOTP server. |

12-01 IP Address

Range: Function:

| | | |
|--|-------------------------------------|---|
| | [000.000.000.000 - 255.255.255.255] | Configure the IP address of the option. Read-only if <i>12-00 IP Address Assignment</i> set to DHCP or BOOTP. |
|--|-------------------------------------|---|

12-02 Subnet Mask

Range: Function:

| | | |
|--|-------------------------------------|---|
| | [000.000.000.000 - 255.255.255.255] | Configure the IP subnet mask of the option. Read-only if <i>12-00 IP Address Assignment</i> set to DHCP or BOOTP. |
|--|-------------------------------------|---|

12-03 Default Gateway

Range: Function:

| | | |
|--|-------------------------------------|---|
| | [000.000.000.000 - 255.255.255.255] | Configure the IP default gateway of the option. Read-only if <i>12-00 IP Address Assignment</i> set to DHCP or BOOTP. |
|--|-------------------------------------|---|

12-04 DHCP Server

Range: Function:

| | | |
|--|-------------------------------------|---|
| | [000.000.000.000 - 255.255.255.255] | Read only. Displays the IP address of the found DHCP or BOOTP server. |
|--|-------------------------------------|---|

NOTE

A power-cycle is necessary after setting the IP parameters manually.

12-05 Lease Expires

Range: Function:

| | | |
|--|---------------|---|
| | [dd:hh:mm:ss] | Read only. Displays the lease-time left for the current DHCP-assigned IP address. |
|--|---------------|---|

12-06 Name Servers

Option: Function:

| | | |
|-----|---------------|---|
| | | IP addresses of Domain Name Servers. Can be automatically assigned when using DHCP. |
| [0] | Primary DNS | |
| [1] | Secondary DNS | |

12-07 Domain Name

Range: Function:

| | | |
|-------|-------------------|---|
| Blank | [0-19 characters] | Domain name of the attached network. Can be automatically assigned when using DHCP. |
|-------|-------------------|---|

12-08 Host Name

Range: Function:

| | | |
|-------|-------------------|---------------------------------|
| Blank | [0-19 characters] | Logical (given) name of option. |
|-------|-------------------|---------------------------------|

12-09 Physical Address

Range: Function:

| | | |
|--|---|--|
| | [00:1B:08:00:00:00 - 00:1B:08:FF:FF:FF] | Read only Displays the Physical (MAC) address of the option. |
|--|---|--|

3.13.2 12-1* Ethernet Link Parameters

12-1* Ethernet Link parameters

Option: Function:

| | | |
|-----|--------|------------------------------------|
| | | Applies for whole parameter group. |
| [0] | Port 1 | |
| [1] | Port 2 | |

12-10 Link Status

Option: Function:

| | | |
|-----|---------|--|
| | | Read only. Displays the link status of the Ethernet ports. |
| [0] | No link | |
| [1] | Link | |

12-11 Link Duration

Option: Function:

| | | |
|--|------------------------------------|---|
| | Link Duration Port 1 (dd:hh:mm:ss) | Read only. Displays the duration of the present link on each port in dd:hh:mm:ss. |
|--|------------------------------------|---|

12-12 Auto Negotiation

Option: Function:

| | | |
|-----|-----|--|
| | | Configures Auto Negotiation of Ethernet link parameters, for each port: ON or OFF. |
| [0] | Off | <i>Link Speed</i> and <i>Link Duplex</i> can be configured in <i>12-13 Link Speed</i> and <i>12-14 Link Duplex</i> . |
| [1] | On | |

12-13 Link Speed

Option: Function:

| | | |
|-------|----------|---|
| | | Forces the link speed for each port in 10 or 100 Mbps. If <i>12-12 Auto Negotiation</i> is set to: ON, this parameter is read only and displays the actual link speed. "None" is displayed if no link is present. |
| [0] * | None | |
| [1] | 10 Mbps | |
| [2] | 100 Mbps | |

12-14 Link Duplex

Option: Function:

| | | |
|-------|-------------|--|
| | | Forces the duplex for each port to Full or Half duplex. If <i>12-12 Auto Negotiation</i> is set to: ON, this parameter is read only. |
| [0] | Half duplex | |
| [1] * | Full duplex | |

3.13.3 12-2* Process Data

12-20 Control Instance

Range: [None, 20, 21, 100, 101, 103] **Function:** Read only. Displays the originator-to-target connection point. If no CIP connection is present "None" is displayed.

| | | |
|--|-------------------------------|---|
| | [None, 20, 21, 100, 101, 103] | Read only. Displays the originator-to-target connection point. If no CIP connection is present "None" is displayed. |
|--|-------------------------------|---|

12-21 Process Data Config Write

Range: [[0 - 9] PCD read 0 - 9] **Function:** Configuration of readable process data.

| | | |
|--|--------------------------|---|
| | [[0 - 9] PCD read 0 - 9] | Configuration of readable process data. |
|--|--------------------------|---|

NOTE

For configuration of 2-word (32-bit) parameter read/write, use 2 consecutive arrays in 12-21 Process Data Config Write and 12-22 Process Data Config Read.

12-22 Process Data Config Read

Range: [[0 - 9] PCD read 0 - 9] **Function:** Configuration of readable process data.

| | | |
|--|--------------------------|---|
| | [[0 - 9] PCD read 0 - 9] | Configuration of readable process data. |
|--|--------------------------|---|

12-23 Process Data Config Write Size

Range: 16* [1 - 32] **Function:** Sets the number of bits being sent from the drive as process data. The setting counts from right (LSB). The value 1 means that only the least significant bit of the signal will be transferred from the drive.

| | | |
|-----|----------|---|
| 16* | [1 - 32] | Sets the number of bits being sent from the drive as process data. The setting counts from right (LSB). The value 1 means that only the least significant bit of the signal will be transferred from the drive. |
|-----|----------|---|

12-24 Process Data Config Read Size

Range: 16* [1 - 32] **Function:** Sets the number of bits being sent to the drive as process data. The setting counts from right (LSB). The value 1 means that only the least significant bit of the signal will be transferred to the drive. The preceding bits will be set to zero.

| | | |
|-----|----------|---|
| 16* | [1 - 32] | Sets the number of bits being sent to the drive as process data. The setting counts from right (LSB). The value 1 means that only the least significant bit of the signal will be transferred to the drive. The preceding bits will be set to zero. |
|-----|----------|---|

12-27 Primary Master

Range: 0* [0 - 4294967295] **Function:** Controls the Master's access to the process data. The value zero (0.0.0.0) means that other masters can take control of the drive immediately if the connection is lost or closed. Setting an IP number means that only a master with this value can establish a connection for controlling the drive. In systems with backup masters, this parameter should be left to the value zero (0.0.0.0).

| | | |
|----|------------------|---|
| 0* | [0 - 4294967295] | Controls the Master's access to the process data. The value zero (0.0.0.0) means that other masters can take control of the drive immediately if the connection is lost or closed. Setting an IP number means that only a master with this value can establish a connection for controlling the drive. In systems with backup masters, this parameter should be left to the value zero (0.0.0.0). |
|----|------------------|---|

12-28 Store Data Values

Option: [0] * Off **Function:** This parameter activates a function that stores all parameter values in the non-volatile memory (EEPROM) thus retaining parameter values at power-down. The parameter returns to "Off".

| | | |
|-------|-----------|---|
| | | This parameter activates a function that stores all parameter values in the non-volatile memory (EEPROM) thus retaining parameter values at power-down. The parameter returns to "Off". |
| [0] * | Off | The store function is inactive. |
| [1] | Store All | All parameter value will be stored in the non-volatile memory, in all four setups. |

12-29 Store Always

Option: [0] * Off **Function:** Activates function that will always store received parameter data in non-volatile memory (EEPROM).

| | | |
|-------|-----|--|
| | | Activates function that will always store received parameter data in non-volatile memory (EEPROM). |
| [0] * | Off | |
| [1] | On | |

3.13.4 12-3* EtherNet/IP

12-30 Warning parameter

Range: [0000 - FFFF hex] **Function:** Read only. Displays the EtherNet/IP specific 16-bit Status-word.

| | [0000 - FFFF hex] | Read only. Displays the EtherNet/IP specific 16-bit Status-word. | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-----|---------------------------|---|-----|-------------|---|-------|---|----------|---|------------|---|----------|---|----------|---|----------|---|----------|---|----------|---|-------------------------|---|---------------------------|----|-------------------------|----|---------------------------|----|----------|----|----------|----|----------|----|----------|
| | | <table border="1"> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>0</td><td>Owned</td></tr> <tr><td>1</td><td>Not used</td></tr> <tr><td>2</td><td>Configured</td></tr> <tr><td>3</td><td>Not used</td></tr> <tr><td>4</td><td>Not used</td></tr> <tr><td>5</td><td>Not used</td></tr> <tr><td>6</td><td>Not used</td></tr> <tr><td>7</td><td>Not used</td></tr> <tr><td>8</td><td>Minor recoverable fault</td></tr> <tr><td>9</td><td>Minor unrecoverable fault</td></tr> <tr><td>10</td><td>Major recoverable fault</td></tr> <tr><td>11</td><td>Major unrecoverable fault</td></tr> <tr><td>12</td><td>Not used</td></tr> <tr><td>13</td><td>Not used</td></tr> <tr><td>14</td><td>Not used</td></tr> <tr><td>15</td><td>Not used</td></tr> </tbody> </table> | Bit | Description | 0 | Owned | 1 | Not used | 2 | Configured | 3 | Not used | 4 | Not used | 5 | Not used | 6 | Not used | 7 | Not used | 8 | Minor recoverable fault | 9 | Minor unrecoverable fault | 10 | Major recoverable fault | 11 | Major unrecoverable fault | 12 | Not used | 13 | Not used | 14 | Not used | 15 | Not used |
| Bit | Description | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 0 | Owned | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 1 | Not used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 2 | Configured | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 3 | Not used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 4 | Not used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 5 | Not used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 6 | Not used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 7 | Not used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 8 | Minor recoverable fault | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 9 | Minor unrecoverable fault | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 10 | Major recoverable fault | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 11 | Major unrecoverable fault | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 12 | Not used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 13 | Not used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 14 | Not used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 15 | Not used | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

12-31 Net Reference

Option: [0] * Off **Function:** Read only. Displays the reference source in Instance 21/71.

| | | |
|-------|-----|---|
| | | Read only. Displays the reference source in Instance 21/71. |
| [0] * | Off | Reference from the network is not active. |
| [1] | On | Reference from the network is active. |

12-32 Net Control

Option: [0] * Off **Function:** Read only. Displays the control source in Instance 21/71.

| | | |
|-------|-----|---|
| | | Read only. Displays the control source in Instance 21/71. |
| [0] * | Off | Control via the network is not active. |

12-32 Net Control
Option: Function:

| | | |
|-----|----|-----------------------------------|
| [1] | On | Control via the network is active |
|-----|----|-----------------------------------|

12-33 CIP Revision
Option: Function:

| | | |
|-----|-------------------------|---|
| | | Read only. Displays the CIP-version of the option software. |
| [0] | Major version (00 - 99) | |
| [1] | Minor version (00 - 99) | |

12-34 CIP Product Code
Range: Function:

| | | |
|------------------------------|------------|---|
| 1100 (FC 302) 1110 (FC 301)* | [0 - 9999] | Read only. Displays the CIP product code. |
|------------------------------|------------|---|

12-37 COS Inhibit Timer
Range: Function:

| | |
|-----------------|--|
| [0 - 65.535 ms] | Read only Change-Of-State inhibit timer. If the option is configured for COS operation, this inhibit timer can be configured in the Forward Open telegram to prevent that continuously changing PCD data generates extensive network traffic. The inhibit time is in milliseconds, 0 = disabled. |
|-----------------|--|

12-38 COS Filters
Range: Function:

| | |
|---|---|
| [[0 - 9] Filter 0 - 9 (0000 - FFFFhex)] | Change-Of-State PCD filters. Sets up a filter mask for each word of process data when operating in COS-mode. Single bits in the PCD's can be filtered in/out. |
|---|---|

12-50 Configured Station Alias
Range: Function:

| | | |
|----|-------------|--|
| 0* | [0 - 65535] | The parameter shows the configured EtherCAT station alias for the frequency converter. Changes will first be active after a power cycle. |
|----|-------------|--|

12-51 Configured Station Address
Range: Function:

| | | |
|----|-------------|---|
| 0* | [0 - 65535] | The parameter shows the configured station address. The parameter can only be set by the master at powerup. |
|----|-------------|---|

12-59 EtherCAT Status
Range: Function:

| | | |
|----|------------------|---|
| 0* | [0 - 4294967295] | This parameter contains status information on the EtherCAT interface. Refere to the EtherCAT manual for detailed information. |
|----|------------------|---|

3.13.5 12-8* Other Ethernet Services

12-80 FTP Server
Option: Function:

| | | |
|-------|---------|-----------------------------------|
| [0] * | Disable | Disables the built-in FTP server. |
|-------|---------|-----------------------------------|

12-80 FTP Server
Option: Function:

| | | |
|-----|--------|----------------------------------|
| [1] | Enable | Enables the built-in FTP server. |
|-----|--------|----------------------------------|

12-81 HTTP Server
Option: Function:

| | | |
|-------|---------|--|
| [0] * | Disable | Disables the build-in HTTP (web) server. |
| [1] | Enable | Enables the build-in HTTP (web) server. |

12-82 SMTP Service
Option: Function:

| | | |
|-------|---------|---|
| [0] * | Disable | Disables the SMTP (e-mail) service on the option. |
| [1] | Enable | Enables the SMTP (e-mail) service on the option. |

12-89 Transent Socket Channel Port
Range: Function:

| | | |
|----|------------|---|
| 0* | [0 - 9999] | Configures the TCP port-number for the transient socket channel. This enables FC-telegrams to be sent transiently on Ethernet via TCP. Default value is 4000, 0 means disabled. |
|----|------------|---|

3.13.6 12-9* Advanced Ethernet Settings

12-90 Cable Diagnostics
Option: Function:

| | | |
|-------|---------|--|
| | | Enables/disables advanced Cable diagnosis function. If enabled, the distance to cable errors can be read out in <i>12-93 Cable Error Length</i> . The parameter resumes to the default setting of Disable after the diagnostics have finished. |
| [0] * | Disable | |
| [1] | Enable | |

NOTE

The cable diagnostics function will only be issued on ports where there is no link (see *12-10 Link Status, Link Status*)

12-91 Auto Cross-Over
Option: Function:

| | | |
|-------|---------|--|
| [0] | Disable | Disables the auto cross-over function. |
| [1] * | Enable | Enables the auto cross-over function. |

NOTE

Disabling of the auto cross-over function will require crossed Ethernet cables for daisy-chaining the options.

12-92 IGMP Snooping
Option: Function:

| | | |
|-------|---------|--|
| | | This prevents flooding of the Ethernet protocol stack by only forwarding multicast packets to ports that are a member of the multicast group |
| [0] | Disable | Disables the IGMP snooping function. |
| [1] * | Enable | Enables the IGMP snooping function. |

12-93 Cable Error Length

Option: **Function:**

| | | |
|-----|--------------------------------|--|
| | | If Cable Diagnostics is enabled in . 12-90, the built-in switch is able via Time Domain Reflectometry (TDR). This is a measurement technique which detects common cabling problems such as open circuits, short circuits and impedance mismatches or breaks in transmission cables. The distance from the option to the error is displayed in meters with an accuracy of +/- 2m. The value 0 means no errors detected. |
| [0] | Error length Port 1 (0 – 200m) | |
| [1] | Error length Port 2 (0 – 200m) | |

12-94 Broadcast Storm Protection

Option: **Function:**

| | | |
|-----|--------------------------------------|---|
| | | The built-in switch is capable of protecting the switch system from receiving too many broadcast packages, which can use up network resources. The value indicates a percentage of the total bandwidth that is allowed for broadcast messages. Example: The "OFF" means that the filter is disabled – all broadcast messages will be passed through. The value "0%" means that no broadcast messages will be passed through. A value of "10%" means that 10% of the total bandwidth is allowed for broadcast messages, if the amount of broadcast messages increases above the 10% threshold, they will be blocked. |
| [0] | Protection Value Port 1 (*Off – 20%) | |
| [1] | Protection Value Port 2 (*Off – 20%) | |

12-95 Broadcast Storm Filter

Option: **Function:**

| | | |
|-----|-----------------------|---|
| | | Applies to <i>12-94 Broadcast Storm Protection</i> ; if the Broadcast Storm Protection should also include Multicast telegrams. |
| [0] | Broadcast only | |
| [1] | Broadcast & Multicast | |

12-96 Port Config

Enables/disables port-mirroring function. For troubleshooting with a network analyzer tool.

Option: **Function:**

| | | |
|-------|-----------------------|---|
| [0] * | Normal | No port-mirroring |
| [1] | Mirror Port 1 to 2 | All network traffic on port 1 will be mirrored to port 2. |
| [2] | Mirror Port 2 to 1 | All network traffic on port 2 will be mirrored to port 1. |
| [254] | Mirror Int. Port to 1 | |
| [255] | Mirror Int. Port to 2 | |

12-98 Interface Counters

Option: **Function:**

| | | |
|------|-------------------------|--|
| | | Read only. Advanced Interface counters, from build-in switch, can be used for low-level troubleshooting, The parameter shows a sum of port 1 + port 2. |
| [0] | In Octets | |
| [1] | In Unicast Packets | |
| [2] | In Non-Unicast Packets | |
| [3] | In Discards | |
| [4] | In Errors | |
| [5] | In Unknown Protocols | |
| [6] | Out Octets | |
| [7] | Out Unicast Packets | |
| [8] | Out Non-Unicast Packets | |
| [9] | Out Discards | |
| [10] | Out Errors | |

12-99 Media Counters


Option: **Function:**

| | | |
|------|----------------------|--|
| | | Read only. Advanced Interface counters, from build-in switch, can be used for low-level troubleshooting, The parameter shows a sum of port 1 + port 2. |
| [0] | Alignment Errors | |
| [1] | FCS Errors | |
| [2] | Single Collisions | |
| [3] | Multiple Collisions | |
| [4] | SQE Test Errors | |
| [5] | Deferred Errors | |
| [6] | Late Collisions | |
| [7] | Excessive Collisions | |
| [8] | MAC Transmit Errors | |
| [9] | Carrier Sense Errors | |
| [10] | Frame Too Long | |
| [11] | MAC Receive Errors | |

3.14 Parameters: 13-** Smart Logic Control


3.14.1 Prog. Features

Smart Logic Control (SLC) is essentially a sequence of user defined actions (see 13-52 *SL Controller Action [x]*) executed by the SLC when the associated user defined event (see 13-51 *SL Controller Event [x]*) is evaluated as TRUE by the SLC. The condition for an event can be a particular status or that the output from a Logic Rule or a Comparator Operand becomes TRUE. That will lead to an associated Action as illustrated:

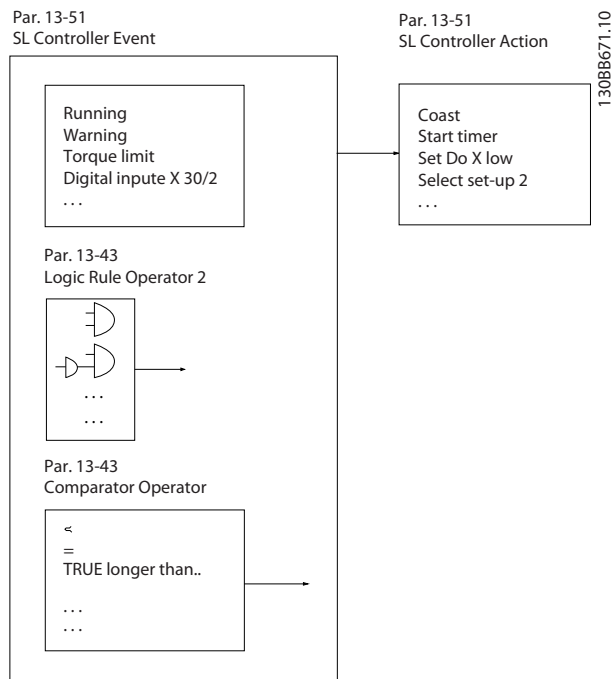

Events and actions are each numbered and linked together in pairs (states). This means that when event [0] is fulfilled (attains the value TRUE), action [0] is executed. After this, the conditions of event [1] will be evaluated and if evaluated TRUE, action [1] will be executed and so on. Only one event will be evaluated at any time. If an event is evaluated as FALSE, nothing happens (in the SLC) during the current scan interval and no other events will be evaluated. This means that when the SLC starts, it evaluates event [0] (and only event [0]) each scan interval. Only when event [0] is evaluated TRUE, will the SLC execute action [0] and start evaluating event [1]. It is possible to programme from 1 to 20 events and actions.

When the last event / action has been executed, the sequence starts over again from event [0] / action [0]. The illustration shows an example with three event / actions:

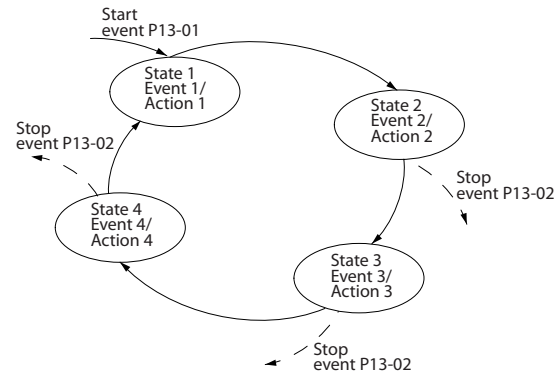

Starting and stopping the SLC:

Starting and stopping the SLC can be done by selecting .On [1]. or .Off [0]. in 13-00 *SL Controller Mode*. The SLC always starts in state 0 (where it evaluates event [0]). The SLC starts when the Start Event (defined in 13-01 *Start Event*) is evaluated as TRUE (provided that On [1] is selected in 13-00 *SL Controller Mode*). The SLC stops when the Stop Event (13-02 *Stop Event*) is TRUE. 13-03 *Reset SLC* resets all SLC parameters and start programming from scratch.

3.14.2 13-0* SLC Settings

Use the SLC settings to activate, deactivate and reset the Smart Logic Control sequence. The logic functions and comparators are always running in the background, which opens for separate control of digital inputs and outputs.

| 13-00 SL Controller Mode | | |
|--------------------------|-----------|--------------------------------------|
| Option: | Function: | |
| [0] | Off | Disables the Smart Logic Controller. |
| [1] | On | Enables the Smart Logic Controller. |

| 13-01 Start Event | | |
|-------------------|--------------|--|
| Option: | Function: | |
| [0] * | False | Select the boolean (TRUE or FALSE) input to activate Smart Logic Control. <i>False</i> [0] enters the fixed value - FALSE |
| [1] | True | <i>True</i> [1] enters the fixed value - TRUE. |
| [2] | Running | <i>Running</i> [2] The motor is running. |
| [3] | In range | <i>In range</i> [3] The motor is running within the programmed current and speed ranges set in 4-50 <i>Warning Current Low</i> to 4-53 <i>Warning Speed High</i> . |
| [4] | On reference | <i>On reference</i> [4] The motor is running on reference. |
| [5] | Torque limit | <i>Torque limit</i> [5] The torque limit, set in 4-16 <i>Torque Limit Motor Mode</i> or 4-17 <i>Torque Limit Generator Mode</i> , has been exceeded. |

| 13-01 Start Event | | |
|-------------------|----------------------|--|
| Option: | Function: | |
| [6] | Current limit | <i>Current limit</i> [6] The motor current limit, set in 4-18 <i>Current Limit</i> , has been exceeded. |
| [7] | Out of current range | <i>Out of current range</i> [7] The motor current is outside the range set in 4-18 <i>Current Limit</i> . |
| [8] | Below l low | <i>Below l low</i> [8] The motor current is lower than set in 4-50 <i>Warning Current Low</i> . |
| [9] | Above l high | <i>Above l high</i> [9] The motor current is higher than set in 4-51 <i>Warning Current High</i> . |
| [10] | Out of speed range | <i>Out of speed range</i> [10] The speed is outside the range set in 4-52 <i>Warning Speed Low</i> and 4-53 <i>Warning Speed High</i> . |
| [11] | Below speed low | <i>Below speed low</i> [11] The output speed is lower than the setting in 4-52 <i>Warning Speed Low</i> . |
| [12] | Above speed high | <i>Above speed high</i> [12] The output speed is higher than the setting in 4-53 <i>Warning Speed High</i> . |
| [13] | Out of feedb. range | <i>Out of feedb. Range</i> [13] The feedback is outside the range set in 4-56 <i>Warning Feedback Low</i> and 4-57 <i>Warning Feedback High</i> . |
| [14] | Below feedb. low | <i>Below feedb. Low</i> [14] The feedback is below the limit set in 4-56 <i>Warning Feedback Low</i> . |
| [15] | Above feedb. high | <i>Above feedb. High</i> [15] The feedback is above the limit set in 4-57 <i>Warning Feedback High</i> . |
| [16] | Thermal warning | <i>Thermal warning</i> [16] The thermal warning turns on when the temperature exceeds the limit in the motor, the frequency converter, the brake resistor or the thermistor. |
| [17] | Mains out of range | <i>Mains out of range</i> [17] The mains voltage is outside the specified voltage range. |
| [18] | Reversing | <i>Reversing</i> [18] The output is high when the frequency converter is running counter clockwise (the logical product of the status bits "running" AND "reverse"). |
| [19] | Warning | <i>Warning</i> [19] A warning is active. |
| [20] | Alarm (trip) | <i>Alarm (trip)</i> [20] A (trip) alarm is active. |
| [21] | Alarm (trip lock) | <i>Alarm (trip lock)</i> [21] A (Trip lock) alarm is active. |

| 13-01 Start Event | | |
|-------------------|--------------------|--|
| Option: | Function: | |
| [22] | Comparator 0 | <i>Comparator 0</i> [22] Use the result of comparator 0. |
| [23] | Comparator 1 | <i>Comparator 1</i> [23] Use the result of comparator 1. |
| [24] | Comparator 2 | <i>Comparator 2</i> [24] Use the result of comparator 2. |
| [25] | Comparator 3 | <i>Comparator 3</i> [25] Use the result of comparator 3. |
| [26] | Logic rule 0 | <i>Logic rule 0</i> [26] Use the result of logic rule 0. |
| [27] | Logic rule 1 | <i>Logic rule 1</i> [27] Use the result of logic rule 1. |
| [28] | Logic rule 2 | <i>Logic rule 2</i> [28] Use the result of logic rule 2. |
| [29] | Logic rule 3 | <i>Logic rule 3</i> [29] Use the result of logic rule 3. |
| [33] | Digital input DI18 | <i>Digital input DI18</i> [33] Use the result of digital input 18. |
| [34] | Digital input DI19 | <i>Digital input DI19</i> [34] Use the result of digital input 19. |
| [35] | Digital input DI27 | <i>Digital input DI27</i> [35] Use the result of digital input 27. |
| [36] | Digital input DI29 | <i>Digital input DI27</i> [35] Use the result of digital input 29. |
| [37] | Digital input DI32 | <i>Digital input DI32</i> [37] Use the result of digital input 32. |
| [38] | Digital input DI33 | <i>Digital input DI33</i> [38] Use the result of digital input 33. |
| [39] | Start command | <i>Start command</i> [39] A start command is issued. |
| [40] | Drive stopped | <i>Drive stopped</i> [40] A stop command (Jog, Stop, Qstop, Coast) is issued – and not from the SLC itself. |
| [41] | Reset Trip | <i>Reset Trip</i> [41] A reset is issued |
| [42] | Auto-reset Trip | <i>Auto-reset Trip</i> [42] An Auto reset is performed. |
| [43] | Ok key | <i>OK key</i> [43] The [OK] key is pressed. |
| [44] | Reset key | <i>Reset key</i> [44] The [Reset] key is pressed. |
| [45] | Left key | <i>Left key</i> [45] The [◀] key is pressed. |
| [46] | Right key | <i>Right key</i> [46] The [▶] key is pressed. |
| [47] | Up key | <i>Up key</i> [47] The [▲] key is pressed. |
| [48] | Down key | <i>Down key</i> [48] The [▼] key is pressed. |
| [50] | Comparator 4 | <i>Comparator 4</i> [50] Use the result of comparator 4. |

| 13-01 Start Event | | |
|-------------------|---------------|--|
| Option: | Function: | |
| [51] | Comparator 5 | <i>Comparator 5</i> [51] Use the result of comparator 5. |
| [60] | Logic rule 4 | <i>Logic rule 4</i> [60] Use the result of logic rule 4. |
| [61] | Logic rule 5 | <i>Logic rule 5</i> [61] Use the result of logic rule 5. |
| [94] | RS Flipflop 0 | |
| [95] | RS Flipflop 1 | |
| [96] | RS Flipflop 2 | |
| [97] | RS Flipflop 3 | |
| [98] | RS Flipflop 4 | |
| [99] | RS Flipflop 5 | |
| [100] | RS Flipflop 6 | |
| [101] | RS Flipflop 7 | |

| 13-02 Stop Event | | |
|---|----------------------|---|
| Select the boolean (TRUE or FALSE) input to activate Smart Logic Control. | | |
| Option: | Function: | |
| [0] * | False | For descriptions [0] - [61], see <i>13-01 Start Event Start Event</i> |
| [1] | True | |
| [2] | Running | |
| [3] | In range | |
| [4] | On reference | |
| [5] | Torque limit | |
| [6] | Current limit | |
| [7] | Out of current range | |
| [8] | Below I low | |
| [9] | Above I high | |
| [10] | Out of speed range | |
| [11] | Below speed low | |
| [12] | Above speed high | |
| [13] | Out of feedb. range | |
| [14] | Below feedb. low | |
| [15] | Above feedb. high | |
| [16] | Thermal warning | |
| [17] | Mains out of range | |
| [18] | Reversing | |
| [19] | Warning | |
| [20] | Alarm (trip) | |
| [21] | Alarm (trip lock) | |
| [22] | Comparator 0 | |
| [23] | Comparator 1 | |
| [24] | Comparator 2 | |
| [25] | Comparator 3 | |
| [26] | Logic rule 0 | |
| [27] | Logic rule 1 | |
| [28] | Logic rule 2 | |
| [29] | Logic rule 3 | |
| [30] | SL Time-out 0 | |


| 13-02 Stop Event | | |
|---|-----------------------|---|
| Select the boolean (TRUE or FALSE) input to activate Smart Logic Control. | | |
| Option: | Function: | |
| [31] | SL Time-out 1 | |
| [32] | SL Time-out 2 | |
| [33] | Digital input DI18 | |
| [34] | Digital input DI19 | |
| [35] | Digital input DI27 | |
| [36] | Digital input DI29 | |
| [37] | Digital input DI32 | |
| [38] | Digital input DI33 | |
| [39] | Start command | |
| [40] | Drive stopped | |
| [41] | Reset Trip | |
| [42] | Auto-reset Trip | |
| [43] | Ok key | |
| [44] | Reset key | |
| [45] | Left key | |
| [46] | Right key | |
| [47] | Up key | |
| [48] | Down key | |
| [50] | Comparator 4 | |
| [51] | Comparator 5 | |
| [60] | Logic rule 4 | |
| [61] | Logic rule 5 | |
| [70] | SL Time-out 3 | <i>SL Time-out 3</i> [70] Smart Logic Controller timer 3 is timed out. |
| [71] | SL Time-out 4 | <i>SL Time-out 4</i> [71] Smart Logic Controller timer 4 is timed out. |
| [72] | SL Time-out 5 | <i>SL Time-out 5</i> [72] Smart Logic Controller timer 5 is timed out. |
| [73] | SL Time-out 6 | <i>SL- Time-out 6</i> [73] Smart Logic Controller timer 6 is timed out. |
| [74] | SL Time-out 7 | <i>SL Time-out 7</i> [74] Smart Logic Controller timer 7 is timed out. |
| [75] | Start command given | |
| [76] | Digital input x30/2 | |
| [77] | Digital input x30/3 | |
| [78] | Digital input x30/4 | |
| [79] | Digital input x46/1 | |
| [80] | Digital input x46/3 | |
| [81] | Digital input x46/5 | |
| [82] | Digital input x46/7 | |
| [83] | Digital input x46/9 | |
| [84] | Digital input x46/11 | |
| [85] | Digital input x46/13 | |
| [90] | ATEX ETR cur. warning | Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1. |

| 13-02 Stop Event | | |
|---|------------------------|---|
| Select the boolean (TRUE or FALSE) input to activate Smart Logic Control. | | |
| Option: | Function: | |
| [91] | ATEX ETR cur. alarm | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1. |
| [92] | ATEX ETR freq. warning | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1. |
| [93] | ATEX ETR freq. alarm | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1. |
| [94] | RS Flipflop 0 | |
| [95] | RS Flipflop 1 | |
| [96] | RS Flipflop 2 | |
| [97] | RS Flipflop 3 | |
| [98] | RS Flipflop 4 | |
| [99] | RS Flipflop 5 | |
| [100] | RS Flipflop 6 | |
| [101] | RS Flipflop 7 | |

| 13-03 Reset SLC | | |
|-----------------|------------------|---|
| Option: | Function: | |
| [0] * | Do not reset SLC | Retains programmed settings in all group 13 parameters (13-**). |
| [1] | Reset SLC | Resets all group 13 parameters (13-**) to default settings. |

3.14.3 13-1* Comparators

Comparators are used for comparing continuous variables (i.e. output frequency, output current, analog input etc.) to fixed preset values.

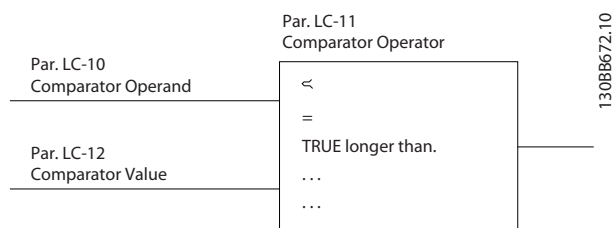

In addition, there are digital values that will be compared to fixed time values. See explanation in 13-10 Comparator Operand. Comparators are evaluated once in each scan interval. Use the result (TRUE or FALSE) directly. All

parameters in this parameter group are array parameters with index 0 to 5. Select index 0 to programme Comparator 0, select index 1 to programme Comparator 1, and so on.

| 13-10 Comparator Operand | | |
|--------------------------|---------------------|---|
| Array [6] | | |
| Option: | Function: | |
| [0] * | DISABLED | DISABLED [0] The comparator is disabled. |
| [1] | Reference | Reference [1] The resulting remote reference (not local) as a percentage. |
| [2] | Feedback | Feedback [2] In the unit [RPM] or [Hz] |
| [3] | Motor speed | Motor speed [3] [RPM] or [Hz] |
| [4] | Motor current | Motor current [4] [A] |
| [5] | Motor torque | Motor torque [5] [Nm] |
| [6] | Motor power | Motor power [6] [kW] or [hp] |
| [7] | Motor voltage | Motor voltage [7] [V] |
| [8] | DC-link voltage | DC-link voltage [8] [V] |
| [9] | Motor thermal | Motor thermal [9] Expressed as a percentage. |
| [10] | Drive thermal | VLT thermal [10] Expressed as a percentage. |
| [11] | Heat sink temp. | Heat sink temp [11] Expressed as a percentage. |
| [12] | Analog input AI53 | Analog input AI53 [12] Expressed as a percentage. |
| [13] | Analog input AI54 | Analog input AI54 [13] Expressed as a percentage. |
| [14] | Analog input AIFB10 | Analog input AIFB10 [14] [V]. AIFB10 is internal 10V supply. |
| [15] | Analog input AIS24V | Analog input AIS24V [15] [V] Analog input AICCT [17] [°]. AIS24V is switch mode power supply: SMPS 24V. |
| [17] | Analog input AICCT | Analog input AICCT [17] [°]. AICCT is control card temperature. |
| [18] | Pulse input FI29 | Pulse input FI29 [18] Expressed as a percentage. |
| [19] | Pulse input FI33 | Pulse input FI33 [19] Expressed as a percentage. |
| [20] | Alarm number | Alarm number [20] The error number. |

| 13-10 Comparator Operand | | |
|--------------------------|------------------------|---|
| Array [6] | | |
| Option: | Function: | |
| [21] | Warning number | |
| [22] | Analog input x30 11 | |
| [23] | Analog input x30 12 | |
| [30] | Counter A | <i>Counter A</i> [30] Number of counts |
| [31] | Counter B | <i>Counter B</i> [31] Number of counts |
| [50] | FALSE | <i>False</i> [50] Enters the fixed value of false in the comparator. |
| [51] | TRUE | <i>True</i> [51] Enters the fixed value of true in the comparator. |
| [52] | Control ready | <i>Control ready</i> [52] The control board receives supply voltage |
| [53] | Drive ready | <i>Drive ready</i> [53] The frequency converter is ready for operation and applies a supply signal on the control board. |
| [54] | Running | <i>Running</i> [54] The motor is running. |
| [55] | Reversing | <i>Reversing</i> [55] The output is high when the frequency converter is running counter clockwise (the logical product of the status bits "running" AND "reverse") |
| [56] | In range | <i>In range</i> [56] The motor is running within the programmed current and speed ranges set in 4-50 <i>Warning Current Low</i> to 4-53 <i>Warning Speed High</i> . |
| [60] | On reference | <i>On reference</i> [60] The motor is running on reference. |
| [61] | Below reference, low | <i>Below reference, low</i> [61] The motor is running below the value given in 4-54 <i>Warning Reference Low</i> |
| [62] | Above ref, high | <i>Above reference, high</i> [62] The motor is running above the value given in 4-55 <i>Warning Reference High</i> |
| [65] | Torque limit | <i>Torque limit</i> [65] The torque limit, set in 4-16 <i>Torque Limit Motor Mode</i> or 4-17 <i>Torque Limit Generator Mode</i> , has been exceeded. |
| [66] | Current limit | <i>Current limit</i> [66] The motor current limit, set in 4-18 <i>Current Limit</i> , has been exceeded. |
| [67] | Out of current range | <i>Out of current range</i> [67] The motor current is outside the range set in 4-18 <i>Current Limit</i> . |
| [68] | Below I low | <i>Below I low</i> [68] The motor current is lower than set in 4-50 <i>Warning Current Low</i> . |

| 13-10 Comparator Operand | | |
|--------------------------|---------------------|--|
| Array [6] | | |
| Option: | Function: | |
| [69] | Above I high | <i>Above I high</i> [69] The motor current is higher than set in 4-51 <i>Warning Current High</i> . |
| [70] | Out of speed range | <i>Out of speed range</i> [70] The speed is outside the range set in 4-52 <i>Warning Speed Low</i> and 4-53 <i>Warning Speed High</i> . |
| [71] | Below speed low | <i>Below speed low</i> [71] The output speed is lower than the setting in 4-52 <i>Warning Speed Low</i> . |
| [72] | Above speed high | <i>Above speed high</i> [72] The output speed is higher than the setting in 4-53 <i>Warning Speed High</i> . |
| [75] | Out of feedb. range | <i>Out of feedb. Range</i> [75] The feedback is outside the range set in 4-56 <i>Warning Feedback Low</i> and 4-57 <i>Warning Feedback High</i> . |
| [76] | Below feedb. low | <i>Below feedb. Low</i> [76] The feedback is below the limit set in 4-56 <i>Warning Feedback Low</i> . |
| [77] | Above feedb. high | <i>Above feedb. High</i> [77] The feedback is above the limit set in 4-57 <i>Warning Feedback High</i> . |
| [80] | Thermal warning | <i>Thermal warning</i> [80] The thermal warning turns on when the temperature exceeds the limit in the motor, the frequency converter, the brake resistor or thermistor. |
| [82] | Mains out of range | <i>Mains out of range</i> [82] The mains voltage is outside the specified voltage range. |
| [85] | Warning | <i>Warning</i> [85] A warning is active. |
| [86] | Alarm (trip) | <i>Alarm (trip)</i> [86] A (trip) alarm is active. |
| [87] | Alarm (trip lock) | <i>Alarm (trip lock)</i> [87] A (Trip lock) alarm is active. |
| [90] | Bus OK | <i>Bus OK</i> [90] Active communication (no time-out) via the serial communication port. |
| [91] | Torque limit & stop | <i>Torque limit & stop</i> [91] If the frequency converter has received a stop signal and is at the torque limit, the signal is logic "0". |
| [92] | Brake fault (IGBT) | <i>Brake fault (IGBT)</i> [92] The brake IGBT is short circuited. |
| [93] | Mech. brake control | <i>Mech. brake control</i> [93] The mechanical brake is active. |
| [94] | Safe stop active | |
| [100] | Comparator 0 | <i>Comparator 0</i> [100] The result of comparator 0. |

| 13-10 Comparator Operand | | |
|--------------------------|--------------------|--|
| Array [6] | | |
| Option: | | Function: |
| [101] | Comparator 1 | <i>Comparator 1</i> [101] The result of comparator 1. |
| [102] | Comparator 2 | <i>Comparator 2</i> [102] The result of comparator 2. |
| [103] | Comparator 3 | <i>Comparator 3</i> [103] The result of comparator 3. |
| [104] | Comparator 4 | <i>Comparator 4</i> [104] The result of comparator 4. |
| [105] | Comparator 5 | <i>Comparator 5</i> [105] The result of comparator 5. |
| [110] | Logic rule 0 | <i>Logic rule 0</i> [110] The result of Logic rule 0. |
| [111] | Logic rule 1 | <i>Logic rule 1</i> [111] The result of Logic rule 1. |
| [112] | Logic rule 2 | <i>Logic rule 2</i> [112] The result of Logic rule 2. |
| [113] | Logic rule 3 | <i>Logic rule 3</i> [113] The result of Logic rule 3. |
| [114] | Logic rule 4 | <i>Logic rule 4</i> [114] The result of Logic rule 4. |
| [115] | Logic rule 5 | <i>Logic rule 5</i> [115] The result of Logic rule 5. |
| [120] | SL Time-out 0 | <i>SL Time-out 0</i> [120] The result of SLC timer 0. |
| [121] | SL Time-out 1 | <i>SL Time-out 1</i> [121] The result of SLC timer 1. |
| [122] | SL Time-out 2 | <i>SL Time-out 2</i> [122] The result of SLC timer 2. |
| [123] | SL Time-out 3 | <i>SL Time-out 3</i> [123] The result of SLC timer 3. |
| [124] | SL Time-out 4 | <i>SL Time-out 4</i> [124] The result of SLC timer 4. |
| [125] | SL Time-out 5 | <i>SL Time-out 5</i> [125] The result of SLC timer 5. |
| [126] | SL Time-out 6 | <i>SL Time-out 6</i> [126] The result of SLC timer 6. |
| [127] | SL Time-out 7 | <i>SL Time-out 7</i> [127] The result of SLC timer 7. |
| [130] | Digital input DI18 | <i>Digital input DI18</i> [130] Digital input 18. High = True. |
| [131] | Digital input DI19 | <i>Digital input DI19</i> [131] Digital input 19. High = True. |
| [132] | Digital input DI27 | <i>Digital input DI27</i> [132] Digital input 27. High = True. |

| 13-10 Comparator Operand | | |
|--------------------------|---------------------|--|
| Array [6] | | |
| Option: | | Function: |
| [133] | Digital input DI29 | <i>Digital input DI29</i> [133] Digital input 29. High = True. |
| [134] | Digital input DI32 | <i>Digital input DI32</i> [134] Digital input 32. High = True. |
| [135] | Digital input DI33 | <i>Digital input DI33</i> [135] Digital input 33. High = True. |
| [150] | SL digital output A | <i>SL digital output A</i> [150] Use the result of the SLC output A. |
| [151] | SL digital output B | <i>SL digital output B</i> [151] Use the result of the SLC output B. |
| [152] | SL digital output C | <i>SL digital output C</i> [152] Use the result of the SLC output C. |
| [153] | SL digital output D | <i>SL digital output D</i> [153] Use the result of the SLC output D. |
| [154] | SL digital output E | <i>SL digital output E</i> [154] Use the result of the SLC output E. |
| [155] | SL digital output F | <i>SL digital output F</i> [155] Use the result of the SLC output F. |
| [160] | Relay 1 | <i>Relay 1</i> [160] Relay 1 is active |
| [161] | Relay 2 | <i>Relay 2</i> [161] Relay 2 is active |
| [180] | Local ref. active | <i>Local ref. active</i> [180] High when 3-13 Reference Site = [2] Local or when 3-13 Reference Site is [0] Linked to hand Auto, at the same time as the LCP is in Hand on mode. |
| [181] | Remote ref. active | <i>Remote ref. active</i> [181] High when 3-13 Reference Site= [1] Remote or [0] Linked to hand/auto, while the LCP is in Auto on mode. |
| [182] | Start command | <i>Start command</i> [182] High when there is an active start command, and no stop command. |
| [183] | Drive stopped | <i>Drive stopped</i> [183] A stop command (Jog, Stop, Qstop, Coast) is issued – and not from the SLC itself. |
| [185] | Drive in hand mode | <i>Drive in hand mode</i> [185] High when the frequency converter is in hand mode. |
| [186] | Drive in auto mode | <i>Drive in auto mode</i> [186] High when the frequency converter is in auto mode. |
| [187] | Start command given | |
| [190] | Digital input x30 2 | |
| [191] | Digital input x30 3 | |
| [192] | Digital input x30 4 | |


| 13-10 Comparator Operand | | |
|--------------------------|------------------------|--|
| Array [6] | | |
| Option: | Function: | |
| [193] | Digital input x46 1 | |
| [194] | Digital input x46 2 | |
| [195] | Digital input x46 3 | |
| [196] | Digital input x46 4 | |
| [197] | Digital input x46 5 | |
| [198] | Digital input x46 6 | |
| [199] | Digital input x46 7 | |

| 13-11 Comparator Operator | | |
|---------------------------|----------------------|---|
| Array [6] | | |
| Option: | Function: | |
| | | Select the operator to be used in the comparison. This is an array parameter containing comparator operators 0 to 5. |
| [0] | < | Select < [0] for the result of the evaluation to be TRUE, when the variable selected in <i>13-10 Comparator Operand</i> is smaller than the fixed value in <i>13-12 Comparator Value</i> . The result will be FALSE, if the variable selected in <i>13-10 Comparator Operand</i> is greater than the fixed value in <i>13-12 Comparator Value</i> . |
| [1] * | ≈ (equal) | Select ≈ [1] for the result of the evaluation to be TRUE, when the variable selected in <i>13-10 Comparator Operand</i> is approximately equal to the fixed value in <i>13-12 Comparator Value</i> . |
| [2] | > | Select > [2] for the inverse logic of option < [0]. |
| [5] | TRUE longer than.. | |
| [6] | FALSE longer than.. | |
| [7] | TRUE shorter than.. | |
| [8] | FALSE shorter than.. | |


| 13-12 Comparator Value | | |
|------------------------|-----------------------------|--|
| Array [6] | | |
| Range: | Function: | |
| Size related* | [-100000.000 - 100000.000] | Enter the 'trigger level' for the variable that is monitored by this comparator. This is an array parameter containing comparator values 0 to 5. |

3.14.4 13-1* RS Flip Flops

The Reset-Set Flip Flops hold the signal until set/ reset.

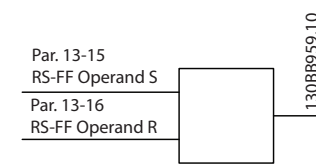

Two parameters are used and the output can be used in the logic rules and as events.

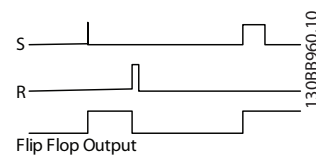

3.14.5 13-15 RS-FF Operand S

| 13-15 RS-FF Operand S | | |
|-----------------------|----------------------|--|
| Option: | Function: | |
| [0] | False | |
| [1] | True | |
| [2] | Running | |
| [3] | In range | |
| [4] | On reference | |
| [5] | Torque limit | |
| [6] | Current limit | |
| [7] | Out of current range | |
| [8] | Below I low | |
| [9] | Above I high | |
| [10] | Out of speed range | |
| [11] | Below speed low | |
| [12] | Above speed high | |
| [13] | Out of feedb. range | |
| [14] | Below feedb. low | |
| [15] | Above feedb. high | |
| [16] | Thermal warning | |
| [17] | Mains out of range | |
| [18] | Reversing | |
| [19] | Warning | |

| 13-15 RS-FF Operand S | | |
|-----------------------|------------------------|--|
| Option: | Function: | |
| [20] | Alarm (trip) | |
| [21] | Alarm (trip lock) | |
| [22] | Comparator 0 | |
| [23] | Comparator 1 | |
| [24] | Comparator 2 | |
| [25] | Comparator 3 | |
| [26] | Logic rule 0 | |
| [27] | Logic rule 1 | |
| [28] | Logic rule 2 | |
| [29] | Logic rule 3 | |
| [30] | SL Time-out 0 | |
| [31] | SL Time-out 1 | |
| [32] | SL Time-out 2 | |
| [33] | Digital input DI18 | |
| [34] | Digital input DI19 | |
| [35] | Digital input DI27 | |
| [36] | Digital input DI29 | |
| [37] | Digital input DI32 | |
| [38] | Digital input DI33 | |
| [39] | Start command | |
| [40] | Drive stopped | |
| [41] | Reset Trip | |
| [42] | Auto-reset Trip | |
| [43] | Ok key | |
| [44] | Reset key | |
| [45] | Left key | |
| [46] | Right key | |
| [47] | Up key | |
| [48] | Down key | |
| [50] | Comparator 4 | |
| [51] | Comparator 5 | |
| [60] | Logic rule 4 | |
| [61] | Logic rule 5 | |
| [70] | SL Time-out 3 | |
| [71] | SL Time-out 4 | |
| [72] | SL Time-out 5 | |
| [73] | SL Time-out 6 | |
| [74] | SL Time-out 7 | |
| [75] | Start command given | |
| [76] | Digital input x30/2 | |
| [77] | Digital input x30/3 | |
| [78] | Digital input x30/4 | |
| [79] | Digital input x46/1 | |
| [80] | Digital input x46/3 | |
| [81] | Digital input x46/5 | |
| [82] | Digital input x46/7 | |
| [83] | Digital input x46/9 | |
| [84] | Digital input x46/11 | |
| [85] | Digital input x46/13 | |
| [90] | ATEX ETR cur. warning | |
| [91] | ATEX ETR cur. alarm | |
| [92] | ATEX ETR freq. warning | |

| 13-15 RS-FF Operand S | | |
|-----------------------|----------------------|--|
| Option: | Function: | |
| [93] | ATEX ETR freq. alarm | |
| [94] | RS Flipflop 0 | |
| [95] | RS Flipflop 1 | |
| [96] | RS Flipflop 2 | |
| [97] | RS Flipflop 3 | |
| [98] | RS Flipflop 4 | |
| [99] | RS Flipflop 5 | |
| [100] | RS Flipflop 6 | |
| [101] | RS Flipflop 7 | |

3.14.6 13-16 RS-FF Operand R

| 13-16 RS-FF Operand R | | |
|-----------------------|----------------------|--|
| Option: | Function: | |
| [0] | False | |
| [1] | True | |
| [2] | Running | |
| [3] | In range | |
| [4] | On reference | |
| [5] | Torque limit | |
| [6] | Current limit | |
| [7] | Out of current range | |
| [8] | Below I low | |
| [9] | Above I high | |
| [10] | Out of speed range | |
| [11] | Below speed low | |
| [12] | Above speed high | |
| [13] | Out of feedb. range | |
| [14] | Below feedb. low | |
| [15] | Above feedb. high | |
| [16] | Thermal warning | |
| [17] | Mains out of range | |
| [18] | Reversing | |
| [19] | Warning | |
| [20] | Alarm (trip) | |
| [21] | Alarm (trip lock) | |
| [22] | Comparator 0 | |
| [23] | Comparator 1 | |
| [24] | Comparator 2 | |
| [25] | Comparator 3 | |
| [26] | Logic rule 0 | |
| [27] | Logic rule 1 | |
| [28] | Logic rule 2 | |
| [29] | Logic rule 3 | |
| [30] | SL Time-out 0 | |
| [31] | SL Time-out 1 | |
| [32] | SL Time-out 2 | |
| [33] | Digital input DI18 | |
| [34] | Digital input DI19 | |
| [35] | Digital input DI27 | |
| [36] | Digital input DI29 | |

| 13-16 RS-FF Operand R | | |
|-----------------------|------------------------|--|
| Option: | Function: | |
| [37] | Digital input DI32 | |
| [38] | Digital input DI33 | |
| [39] | Start command | |
| [40] | Drive stopped | |
| [41] | Reset Trip | |
| [42] | Auto-reset Trip | |
| [43] | Ok key | |
| [44] | Reset key | |
| [45] | Left key | |
| [46] | Right key | |
| [47] | Up key | |
| [48] | Down key | |
| [50] | Comparator 4 | |
| [51] | Comparator 5 | |
| [60] | Logic rule 4 | |
| [61] | Logic rule 5 | |
| [70] | SL Time-out 3 | |
| [71] | SL Time-out 4 | |
| [72] | SL Time-out 5 | |
| [73] | SL Time-out 6 | |
| [74] | SL Time-out 7 | |
| [75] | Start command given | |
| [76] | Digital input x30/2 | |
| [77] | Digital input x30/3 | |
| [78] | Digital input x30/4 | |
| [79] | Digital input x46/1 | |
| [80] | Digital input x46/3 | |
| [81] | Digital input x46/5 | |
| [82] | Digital input x46/7 | |
| [83] | Digital input x46/9 | |
| [84] | Digital input x46/11 | |
| [85] | Digital input x46/13 | |
| [90] | ATEX ETR cur. warning | |
| [91] | ATEX ETR cur. alarm | |
| [92] | ATEX ETR freq. warning | |
| [93] | ATEX ETR freq. alarm | |
| [94] | RS Flipflop 0 | |
| [95] | RS Flipflop 1 | |
| [96] | RS Flipflop 2 | |
| [97] | RS Flipflop 3 | |
| [98] | RS Flipflop 4 | |
| [99] | RS Flipflop 5 | |
| [100] | RS Flipflop 6 | |
| [101] | RS Flipflop 7 | |

3.14.7 13-2* Timers

Use the result (TRUE or FALSE) from *timers* directly to define an *event* (see 13-51 *SL Controller Event*), or as boolean input in a *logic rule* (see 13-40 *Logic Rule Boolean 1*, 13-42 *Logic Rule Boolean 2* or 13-44 *Logic Rule Boolean 3*). A timer is only FALSE when started by an action (i.e. Start timer 1 [29]) until the


timer value entered in this parameter is elapsed. Then it becomes TRUE again.

All parameters in this parameter group are array parameters with index 0 to 2. Select index 0 to program Timer 0, select index 1 to program Timer 1, and so on.

| 13-20 SL Controller Timer | | |
|---------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the value to define the duration of the FALSE output from the programmed timer. A timer is only FALSE if it is started by an action (i.e. <i>Start timer 1 [29]</i>) and until the given timer value has elapsed. |

3.14.8 13-4* Logic Rules

Combine up to three boolean inputs (TRUE / FALSE inputs) from timers, comparators, digital inputs, status bits and events using the logical operators AND, OR, and NOT. Select boolean inputs for the calculation in 13-40 *Logic Rule Boolean 1*, 13-42 *Logic Rule Boolean 2* and 13-44 *Logic Rule Boolean 3*. Define the operators used to logically combine the selected inputs in 13-41 *Logic Rule Operator 1* and 13-43 *Logic Rule Operator 2*.

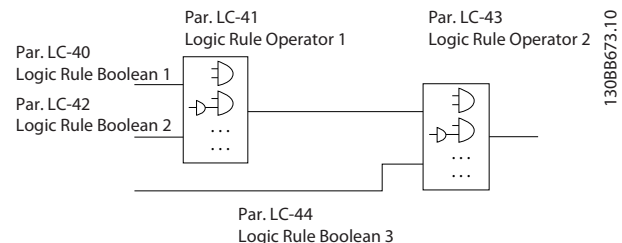

Priority of calculation

The results of 13-40 *Logic Rule Boolean 1*, 13-41 *Logic Rule Operator 1* and 13-42 *Logic Rule Boolean 2* are calculated first. The outcome (TRUE / FALSE) of this calculation is combined with the settings of 13-43 *Logic Rule Operator 2* and 13-44 *Logic Rule Boolean 3*, yielding the final result (TRUE / FALSE) of the logic rule.

| 13-40 Logic Rule Boolean 1 | | |
|----------------------------|-----------|--|
| Array [6] | | |
| Option: | Function: | |
| [0] * | False | Select the first boolean (TRUE or FALSE) input for the selected logic rule. See 13-01 <i>Start Event</i> ([0] - [61]) and 13-02 <i>Stop Event</i> ([70] - [75]) for further description. |
| [1] | True | |
| [2] | Running | |
| [3] | In range | |

| 13-40 Logic Rule Boolean 1 | | |
|----------------------------|----------------------|--|
| Array [6] | | |
| Option: | Function: | |
| [4] | On reference | |
| [5] | Torque limit | |
| [6] | Current limit | |
| [7] | Out of current range | |
| [8] | Below I low | |
| [9] | Above I high | |
| [10] | Out of speed range | |
| [11] | Below speed low | |
| [12] | Above speed high | |
| [13] | Out of feedb. range | |
| [14] | Below feedb. low | |
| [15] | Above feedb. high | |
| [16] | Thermal warning | |
| [17] | Mains out of range | |
| [18] | Reversing | |
| [19] | Warning | |
| [20] | Alarm (trip) | |
| [21] | Alarm (trip lock) | |
| [22] | Comparator 0 | |
| [23] | Comparator 1 | |
| [24] | Comparator 2 | |
| [25] | Comparator 3 | |
| [26] | Logic rule 0 | |
| [27] | Logic rule 1 | |
| [28] | Logic rule 2 | |
| [29] | Logic rule 3 | |
| [30] | SL Time-out 0 | |
| [31] | SL Time-out 1 | |
| [32] | SL Time-out 2 | |
| [33] | Digital input DI18 | |
| [34] | Digital input DI19 | |
| [35] | Digital input DI27 | |
| [36] | Digital input DI29 | |
| [37] | Digital input DI32 | |
| [38] | Digital input DI33 | |
| [39] | Start command | |
| [40] | Drive stopped | |
| [41] | Reset Trip | |
| [42] | Auto-reset Trip | |
| [43] | Ok key | |
| [44] | Reset key | |
| [45] | Left key | |
| [46] | Right key | |
| [47] | Up key | |
| [48] | Down key | |
| [50] | Comparator 4 | |
| [51] | Comparator 5 | |
| [60] | Logic rule 4 | |
| [61] | Logic rule 5 | |
| [70] | SL Time-out 3 | |
| [71] | SL Time-out 4 | |

| 13-40 Logic Rule Boolean 1 | | |
|----------------------------|------------------------|---|
| Array [6] | | |
| Option: | Function: | |
| [72] | SL Time-out 5 | |
| [73] | SL Time-out 6 | |
| [74] | SL Time-out 7 | |
| [75] | Start command given | |
| [76] | Digital input x30/2 | |
| [77] | Digital input x30/3 | |
| [78] | Digital input x30/4 | |
| [79] | Digital input x46/1 | |
| [80] | Digital input x46/3 | |
| [81] | Digital input x46/5 | |
| [82] | Digital input x46/7 | |
| [83] | Digital input x46/9 | |
| [84] | Digital input x46/11 | |
| [85] | Digital input x46/13 | |
| [90] | ATEX ETR cur. warning | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1. |
| [91] | ATEX ETR cur. alarm | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1. |
| [92] | ATEX ETR freq. warning | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1. |
| [93] | ATEX ETR freq. alarm | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1. |
| [94] | RS Flipflop 0 | |
| [95] | RS Flipflop 1 | |
| [96] | RS Flipflop 2 | |
| [97] | RS Flipflop 3 | |
| [98] | RS Flipflop 4 | |
| [99] | RS Flipflop 5 | |
| [100] | RS Flipflop 6 | |
| [101] | RS Flipflop 7 | |

| 13-41 Logic Rule Operator 1 | | |
|-----------------------------|-------------|--|
| Array [6] | | |
| Option: | Function: | |
| | | Select the first logical operator to use on the Boolean inputs from 13-40 Logic Rule Boolean 1 and 13-42 Logic Rule Boolean 2. [13-**] signifies the boolean input of parameter group 13-**. |
| [0] * | DISABLED | Ignores 13-42 Logic Rule Boolean 2, 13-43 Logic Rule Operator 2, and 13-44 Logic Rule Boolean 3. |
| [1] | AND | Evaluates the expression [13-40] AND [13-42]. |
| [2] | OR | evaluates the expression [13-40] OR[13-42]. |
| [3] | AND NOT | evaluates the expression [13-40] AND NOT [13-42]. |
| [4] | OR NOT | evaluates the expression [13-40] OR NOT [13-42]. |
| [5] | NOT AND | evaluates the expression NOT [13-40] AND [13-42]. |
| [6] | NOT OR | evaluates the expression NOT [13-40] OR [13-42]. |
| [7] | NOT AND NOT | evaluates the expression NOT [13-40] AND NOT [13-42]. |
| [8] | NOT OR NOT | evaluates the expression NOT [13-40] OR NOT [13-42]. |

| 13-42 Logic Rule Boolean 2 | | |
|----------------------------|----------------------|---|
| Array [6] | | |
| Option: | Function: | |
| [0] * | False | Select the second boolean (TRUE or FALSE) input for the selected logic rule. See 13-01 Start Event ([0] - [61]) and 13-02 Stop Event ([70] - [75]) for further description. |
| [1] | True | |
| [2] | Running | |
| [3] | In range | |
| [4] | On reference | |
| [5] | Torque limit | |
| [6] | Current limit | |
| [7] | Out of current range | |
| [8] | Below I low | |
| [9] | Above I high | |
| [10] | Out of speed range | |
| [11] | Below speed low | |
| [12] | Above speed high | |
| [13] | Out of feedb. range | |
| [14] | Below feedb. low | |
| [15] | Above feedb. high | |
| [16] | Thermal warning | |

| 13-42 Logic Rule Boolean 2 | | |
|----------------------------|----------------------|--|
| Array [6] | | |
| Option: | Function: | |
| [17] | Mains out of range | |
| [18] | Reversing | |
| [19] | Warning | |
| [20] | Alarm (trip) | |
| [21] | Alarm (trip lock) | |
| [22] | Comparator 0 | |
| [23] | Comparator 1 | |
| [24] | Comparator 2 | |
| [25] | Comparator 3 | |
| [26] | Logic rule 0 | |
| [27] | Logic rule 1 | |
| [28] | Logic rule 2 | |
| [29] | Logic rule 3 | |
| [30] | SL Time-out 0 | |
| [31] | SL Time-out 1 | |
| [32] | SL Time-out 2 | |
| [33] | Digital input DI18 | |
| [34] | Digital input DI19 | |
| [35] | Digital input DI27 | |
| [36] | Digital input DI29 | |
| [37] | Digital input DI32 | |
| [38] | Digital input DI33 | |
| [39] | Start command | |
| [40] | Drive stopped | |
| [41] | Reset Trip | |
| [42] | Auto-reset Trip | |
| [43] | Ok key | |
| [44] | Reset key | |
| [45] | Left key | |
| [46] | Right key | |
| [47] | Up key | |
| [48] | Down key | |
| [50] | Comparator 4 | |
| [51] | Comparator 5 | |
| [60] | Logic rule 4 | |
| [61] | Logic rule 5 | |
| [70] | SL Time-out 3 | |
| [71] | SL Time-out 4 | |
| [72] | SL Time-out 5 | |
| [73] | SL Time-out 6 | |
| [74] | SL Time-out 7 | |
| [75] | Start command given | |
| [76] | Digital input x30/2 | |
| [77] | Digital input x30/3 | |
| [78] | Digital input x30/4 | |
| [79] | Digital input x46/1 | |
| [80] | Digital input x46/3 | |
| [81] | Digital input x46/5 | |
| [82] | Digital input x46/7 | |
| [83] | Digital input x46/9 | |
| [84] | Digital input x46/11 | |

| 13-42 Logic Rule Boolean 2 | | |
|----------------------------|------------------------|--|
| Array [6] | | |
| Option: | Function: | |
| [85] | Digital input x46/13 | |
| [90] | ATEX ETR cur. warning | Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1. |
| [91] | ATEX ETR cur. alarm | Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1. |
| [92] | ATEX ETR freq. warning | Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21] . If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1. |
| [93] | ATEX ETR freq. alarm | Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1. |
| [94] | RS Flipflop 0 | |
| [95] | RS Flipflop 1 | |
| [96] | RS Flipflop 2 | |
| [97] | RS Flipflop 3 | |
| [98] | RS Flipflop 4 | |
| [99] | RS Flipflop 5 | |
| [100] | RS Flipflop 6 | |
| [101] | RS Flipflop 7 | |

| 13-43 Logic Rule Operator 2 | | |
|-----------------------------|-----------|--|
| Array [6] | | |
| Option: | Function: | |
| [0] * | DISABLED | Select the second logical operator to be used on the boolean input calculated in <i>13-40 Logic Rule Boolean 1</i> , <i>13-41 Logic Rule Operator 1</i> , and <i>13-42 Logic Rule Boolean 2</i> , and the boolean input coming from <i>13-42 Logic Rule Boolean 2</i> . [13-44] signifies the boolean input of <i>13-44 Logic Rule Boolean 3</i> . [13-40/13-42] signifies the boolean input calculated in <i>13-40 Logic Rule Boolean 1</i> , <i>13-41 Logic Rule Operator 1</i> , and <i>13-42 Logic Rule Boolean 2</i> . DISABLED [0] (factory setting). select this option to ignore <i>13-44 Logic Rule Boolean 3</i> . |
| [1] | AND | |
| [2] | OR | |
| [3] | AND NOT | |

| 13-43 Logic Rule Operator 2 | | |
|-----------------------------|-------------|--|
| Array [6] | | |
| Option: | Function: | |
| [4] | OR NOT | |
| [5] | NOT AND | |
| [6] | NOT OR | |
| [7] | NOT AND NOT | |
| [8] | NOT OR NOT | |

| 13-44 Logic Rule Boolean 3 | | |
|----------------------------|----------------------|--|
| Array [6] | | |
| Option: | Function: | |
| [0] * | False | Select the third boolean (TRUE or FALSE) input for the selected logic rule. See <i>13-01 Start Event</i> ([0] - [61]) and <i>13-02 Stop Event</i> ([70] - [75]) for further description. |
| [1] | True | |
| [2] | Running | |
| [3] | In range | |
| [4] | On reference | |
| [5] | Torque limit | |
| [6] | Current limit | |
| [7] | Out of current range | |
| [8] | Below I low | |
| [9] | Above I high | |
| [10] | Out of speed range | |
| [11] | Below speed low | |
| [12] | Above speed high | |
| [13] | Out of feedb. range | |
| [14] | Below feedb. low | |
| [15] | Above feedb. high | |
| [16] | Thermal warning | |
| [17] | Mains out of range | |
| [18] | Reversing | |
| [19] | Warning | |
| [20] | Alarm (trip) | |
| [21] | Alarm (trip lock) | |
| [22] | Comparator 0 | |
| [23] | Comparator 1 | |
| [24] | Comparator 2 | |
| [25] | Comparator 3 | |
| [26] | Logic rule 0 | |
| [27] | Logic rule 1 | |
| [28] | Logic rule 2 | |
| [29] | Logic rule 3 | |
| [30] | SL Time-out 0 | |
| [31] | SL Time-out 1 | |
| [32] | SL Time-out 2 | |
| [33] | Digital input DI18 | |
| [34] | Digital input DI19 | |
| [35] | Digital input DI27 | |
| [36] | Digital input DI29 | |
| [37] | Digital input DI32 | |

| 13-44 Logic Rule Boolean 3 | | |
|----------------------------|------------------------|--|
| Array [6] | | |
| Option: | Function: | |
| [38] | Digital input DI33 | |
| [39] | Start command | |
| [40] | Drive stopped | |
| [41] | Reset Trip | |
| [42] | Auto-reset Trip | |
| [43] | Ok key | |
| [44] | Reset key | |
| [45] | Left key | |
| [46] | Right key | |
| [47] | Up key | |
| [48] | Down key | |
| [50] | Comparator 4 | |
| [51] | Comparator 5 | |
| [60] | Logic rule 4 | |
| [61] | Logic rule 5 | |
| [70] | SL Time-out 3 | |
| [71] | SL Time-out 4 | |
| [72] | SL Time-out 5 | |
| [73] | SL Time-out 6 | |
| [74] | SL Time-out 7 | |
| [75] | Start command given | |
| [76] | Digital input x30/2 | |
| [77] | Digital input x30/3 | |
| [78] | Digital input x30/4 | |
| [79] | Digital input x46/1 | |
| [80] | Digital input x46/3 | |
| [81] | Digital input x46/5 | |
| [82] | Digital input x46/7 | |
| [83] | Digital input x46/9 | |
| [84] | Digital input x46/11 | |
| [85] | Digital input x46/13 | |
| [90] | ATEX ETR cur. warning | Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1. |
| [91] | ATEX ETR cur. alarm | Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1. |
| [92] | ATEX ETR freq. warning | Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21] . If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1. |
| [93] | ATEX ETR freq. alarm | Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1. |

| 13-44 Logic Rule Boolean 3 | | |
|----------------------------|---------------|--|
| Array [6] | | |
| Option: | Function: | |
| [94] | RS Flipflop 0 | |
| [95] | RS Flipflop 1 | |
| [96] | RS Flipflop 2 | |
| [97] | RS Flipflop 3 | |
| [98] | RS Flipflop 4 | |
| [99] | RS Flipflop 5 | |
| [100] | RS Flipflop 6 | |
| [101] | RS Flipflop 7 | |

3.14.9 13-5* States

| 13-51 SL Controller Event | | |
|---------------------------|----------------------|---|
| Array [20] | | |
| Option: | Function: | |
| [0] * | False | Select the boolean input (TRUE or FALSE) to define the Smart Logic Controller event. See <i>13-01 Start Event</i> ([0] - [61]) and <i>13-02 Stop Event</i> ([70] - [74]) for further description. |
| [1] | True | |
| [2] | Running | |
| [3] | In range | |
| [4] | On reference | |
| [5] | Torque limit | |
| [6] | Current limit | |
| [7] | Out of current range | |
| [8] | Below I low | |
| [9] | Above I high | |
| [10] | Out of speed range | |
| [11] | Below speed low | |
| [12] | Above speed high | |
| [13] | Out of feedb. range | |
| [14] | Below feedb. low | |
| [15] | Above feedb. high | |
| [16] | Thermal warning | |
| [17] | Mains out of range | |
| [18] | Reversing | |
| [19] | Warning | |
| [20] | Alarm (trip) | |
| [21] | Alarm (trip lock) | |
| [22] | Comparator 0 | |
| [23] | Comparator 1 | |
| [24] | Comparator 2 | |
| [25] | Comparator 3 | |
| [26] | Logic rule 0 | |
| [27] | Logic rule 1 | |
| [28] | Logic rule 2 | |
| [29] | Logic rule 3 | |
| [30] | SL Time-out 0 | |

| 13-51 SL Controller Event | | |
|---------------------------|------------------------|---|
| Array [20] | | |
| Option: | Function: | |
| [31] | SL Time-out 1 | |
| [32] | SL Time-out 2 | |
| [33] | Digital input DI18 | |
| [34] | Digital input DI19 | |
| [35] | Digital input DI27 | |
| [36] | Digital input DI29 | |
| [37] | Digital input DI32 | |
| [38] | Digital input DI33 | |
| [39] | Start command | |
| [40] | Drive stopped | |
| [41] | Reset Trip | |
| [42] | Auto-reset Trip | |
| [43] | Ok key | |
| [44] | Reset key | |
| [45] | Left key | |
| [46] | Right key | |
| [47] | Up key | |
| [48] | Down key | |
| [50] | Comparator 4 | |
| [51] | Comparator 5 | |
| [60] | Logic rule 4 | |
| [61] | Logic rule 5 | |
| [70] | SL Time-out 3 | |
| [71] | SL Time-out 4 | |
| [72] | SL Time-out 5 | |
| [73] | SL Time-out 6 | |
| [74] | SL Time-out 7 | |
| [75] | Start command given | |
| [76] | Digital input x30/2 | |
| [77] | Digital input x30/3 | |
| [78] | Digital input x30/4 | |
| [79] | Digital input x46/1 | |
| [80] | Digital input x46/3 | |
| [81] | Digital input x46/5 | |
| [82] | Digital input x46/7 | |
| [83] | Digital input x46/9 | |
| [84] | Digital input x46/11 | |
| [85] | Digital input x46/13 | |
| [90] | ATEX ETR cur. warning | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1. |
| [91] | ATEX ETR cur. alarm | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1. |
| [92] | ATEX ETR freq. warning | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]]. If |

| 13-51 SL Controller Event | | |
|---------------------------|----------------------|---|
| Array [20] | | |
| Option: | Function: | |
| [93] | ATEX ETR freq. alarm | Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1. |
| [94] | RS Flipflop 0 | |
| [95] | RS Flipflop 1 | |
| [96] | RS Flipflop 2 | |
| [97] | RS Flipflop 3 | |
| [98] | RS Flipflop 4 | |
| [99] | RS Flipflop 5 | |
| [100] | RS Flipflop 6 | |
| [101] | RS Flipflop 7 | |

| 13-52 SL Controller Action | | |
|----------------------------|---------------------|--|
| Array [20] | | |
| Option: | Function: | |
| [0] * | DISABLED | Select the action corresponding to the SLC event. Actions are executed when the corresponding event (defined in 13-51 SL Controller Event) is evaluated as true. The following actions are available for selection: *DISABLED [0] |
| [1] | No action | No action [1] |
| [2] | Select set-up 1 | Select set-up 1 [2] - changes the active set-up (0-10 Active Set-up) to '1'. If the set-up is changed, it will merge with other set-up commands coming from either the digital inputs or via a fieldbus. |
| [3] | Select set-up 2 | Select set-up 2 [3] - changes the active set-up 0-10 Active Set-up) to '2'. If the set-up is changed, it will merge with other set-up commands coming from either the digital inputs or via a fieldbus. |
| [4] | Select set-up 3 | Select set-up 3 [4] - changes the active set-up (0-10 Active Set-up) to '3'. If the set-up is changed, it will merge with other set-up commands coming from either the digital inputs or via a fieldbus. |
| [5] | Select set-up 4 | Select set-up 4 [5] - changes the active set-up (0-10 Active Set-up) to '4'. If the set-up is changed, it will merge with other set-up commands coming from either the digital inputs or via a fieldbus. |
| [10] | Select preset ref 0 | Select preset reference 0 [10] – selects preset reference 0. |

| 13-52 SL Controller Action | | |
|----------------------------|---------------------|---|
| Array [20] | | |
| Option: | Function: | |
| | | If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a fieldbus. |
| [11] | Select preset ref 1 | <i>Select preset reference 1</i> [11] – selects preset reference 1. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a fieldbus. |
| [12] | Select preset ref 2 | <i>Select preset reference 2</i> [12] – selects preset reference 2. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a fieldbus. |
| [13] | Select preset ref 3 | <i>Select preset reference 3</i> [13] – selects preset reference 3. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a fieldbus. |
| [14] | Select preset ref 4 | <i>Select preset reference 4</i> [14] – selects preset reference 4. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a fieldbus. |
| [15] | Select preset ref 5 | <i>Select preset reference 5</i> [15] – selects preset reference 5. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a fieldbus. |
| [16] | Select preset ref 6 | <i>Select preset reference 6</i> [16] – selects preset reference 6. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a fieldbus. |
| [17] | Select preset ref 7 | <i>Select preset reference 7</i> [17] - selects preset reference 7. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a fieldbus. |
| [18] | Select ramp 1 | <i>Select ramp 1</i> [18] - selects ramp 1. |
| [19] | Select ramp 2 | <i>Select ramp 2</i> [19] - selects ramp 2. |
| [20] | Select ramp 3 | <i>Select ramp 3</i> [20] - selects ramp 3. |

| 13-52 SL Controller Action | | |
|----------------------------|------------------------|---|
| Array [20] | | |
| Option: | Function: | |
| [21] | Select ramp 4 | <i>Select ramp 4</i> [21] - selects ramp 4. |
| [22] | Run | <i>Run</i> [22] - issues a start command to the frequency converter. |
| [23] | Run reverse | <i>Run reverse</i> [23] - issues a start reverse command to the frequency converter. |
| [24] | Stop | <i>Stop</i> [24] - issues a stop command to the frequency converter. |
| [25] | Qstop | <i>Qstop</i> [25] - issues a quick stop command to the frequency converter. |
| [26] | Dcstop | <i>Dcstop</i> [26] - issues a DC stop command to the frequency converter. |
| [27] | Coast | <i>Coast</i> [27] - the frequency converter coasts immediately. All stop commands including the coast command stop the SLC. |
| [28] | Freeze output | <i>Freeze output</i> [28] - freezes the output frequency of the frequency converter. |
| [29] | Start timer 0 | <i>Start timer 0</i> [29] - starts timer 0, see 13-20 SL Controller Timer for further description. |
| [30] | Start timer 1 | <i>Start timer 1</i> [30] - starts timer 1, see 13-20 SL Controller Timer for further description. |
| [31] | Start timer 2 | <i>Start timer 2</i> [31] - starts timer 2, see 13-20 SL Controller Timer for further description. |
| [32] | Set digital out A low | <i>Set digital output A low</i> [32] - any output with SL output A will be low. |
| [33] | Set digital out B low | <i>Set digital output B low</i> [33] - any output with SL output B will be low. |
| [34] | Set digital out C low | <i>Set digital output C low</i> [34] - any output with SL output C will be low. |
| [35] | Set digital out D low | <i>Set digital output D low</i> [35] - any output with SL output D will be low. |
| [36] | Set digital out E low | <i>Set digital output E low</i> [36] - any output with SL output E will be low. |
| [37] | Set digital out F low | <i>Set digital output F low</i> [37] - any output with SL output F will be low. |
| [38] | Set digital out A high | <i>Set digital output A high</i> [38] - any output with SL output A will be high. |
| [39] | Set digital out B high | <i>Set digital output B high</i> [39] - any output with SL output B will be high. |
| [40] | Set digital out C high | <i>Set digital output C high</i> [40] - any output with SL output C will be high. |
| [41] | Set digital out D high | <i>Set digital output D high</i> [41] - any output with SL output D will be high. |
| [42] | Set digital out E high | <i>Set digital output E high</i> [42] - any output with SL output E will be high. |

| 13-52 SL Controller Action | | |
|----------------------------|------------------------|--|
| Array [20] | | |
| Option: | Function: | |
| [43] | Set digital out F high | <i>Set digital output F high [43] - any output with SL output F will be high.</i> |
| [60] | Reset Counter A | <i>Reset Counter A [60] - resets Counter A to zero.</i> |
| [61] | Reset Counter B | <i>Reset Counter B [61] - resets Counter B to zero.</i> |
| [70] | Start timer 3 | <i>Start Timer 3 [70] - Start Timer 3, see 13-20 SL Controller Timer for further description.</i> |
| [71] | Start timer 4 | <i>Start Timer 4 [71] - Start Timer 4, see 13-20 SL Controller Timer for further description.</i> |
| [72] | Start timer 5 | <i>Start Timer 5 [72] - Start Timer 5, see 13-20 SL Controller Timer for further description.</i> |
| [73] | Start timer 6 | <i>Start Timer 6 [73] - Start Timer 6, see 13-20 SL Controller Timer for further description.</i> |
| [74] | Start timer 7 | <i>Start Timer 7 [74] - Start Timer 7, see p13-20 SL Controller Timer for further description.</i> |

3.15 Parameters: 14-** Special Functions

3.15.1 14-0* Inverter Switching

| 14-00 Switching Pattern | | |
|-------------------------|-----------|---|
| Option: | Function: | |
| [0] * | 60 AVM | Select the switching pattern: 60° AVM or SFAVM. |
| [1] * | SFAVM | |

NOTE

The output frequency value of the frequency converter must never exceed 1/10 of the switching frequency. When the motor is running, adjust the switching frequency in *4-11 Motor Speed Low Limit [RPM]* until the motor is as noiseless as possible. See also *14-00 Switching Pattern* and the section *Special Conditions* in the VLT AutomationDrive Design Guide.

| 14-01 Switching Frequency | | |
|---|-----------|---|
| Select the inverter switching frequency. Changing the switching frequency can help to reduce acoustic noise from the motor. Default depend on power size. | | |
| Option: | Function: | |
| [0] | 1.0 kHz | |
| [1] | 1.5 kHz | Default switching frequency for 355-1200 kW, 690V |
| [2] | 2.0 kHz | Default switching frequency for 250-800 kW, 400V and 37-315 kW, 690V |
| [3] | 2.5 kHz | |
| [4] | 3.0 kHz | Default switching frequency for 18.5-37 kW, 200V and 37-200 kW, 400V |
| [5] | 3.5 kHz | |
| [6] | 4.0 kHz | Default switching frequency for 5.5 – 15kW, 200V and 11-30kW, 400V |
| [7] * | 5.0 kHz | Default switching frequency for 0.25 – 3,7kW, 200V and 0.37-7.5kW, 400V |
| [8] | 6.0 kHz | |
| [9] | 7.0 kHz | |
| [10] | 8.0 kHz | |
| [11] | 10.0 kHz | |
| [12] | 12.0 kHz | |
| [13] | 14.0 kHz | |
| [14] | 16.0 kHz | |

NOTE

The output frequency value of the frequency converter must never exceed 1/10 of the switching frequency. When the motor is running, adjust the switching frequency in *4-11 Motor Speed Low Limit [RPM]* until the motor is as noiseless as possible. See also *14-00 Switching Pattern* and the section *Special conditions* in the VLT AutomationDrive Design Guide.

NOTE

Switching frequencies higher than 5.0 kHz lead to automatic derating of the maximum output of the frequency converter.

| 14-03 Overmodulation | | |
|----------------------|-----------|--|
| Option: | Function: | |
| [0] | Off | Select <i>Off</i> [0] for no overmodulation of the output voltage, in order to avoid torque ripple on the motor shaft. This feature may be useful for applications such as grinding machines. |
| [1] * | On | Select <i>On</i> [1] to enable the overmodulation function for the output voltage. This is the right choice when it is required that the output voltage is higher than 95% of the input voltage (typical when running over-synchronously). The output voltage is increased according to the degree of overmodulation. Overmodulation leads to increased torque ripple as harmonics are increased. Control in FLUX mode provides an output current of up to 98% of the input current, regardless of <i>14-03 Overmodulation</i> . |
| [2] | Optimal | |

| 14-04 PWM Random | | |
|------------------|-----------|--|
| Option: | Function: | |
| [0] * | Off | No change of the acoustic motor switching noise. |
| [1] | On | Transforms the acoustic motor switching noise from a clear ringing tone to a less noticeable 'white' noise. This is achieved by slightly and randomly altering the synchronism of the pulse width modulated output phases. |

| 14-06 Dead Time Compensation | | |
|------------------------------|-----------|-----------------------------------|
| Option: | Function: | |
| [0] | Off | No compensation. |
| [1] * | On | Activates dead time compensation. |

3.15.2 14-1* Mains On/Off

Parameters for configuring mains failure monitoring and handling. If a mains failure appears, the frequency converter will try to continue in a controlled way until the power in the DC link has been exhausted.

| 14-10 Mains Failure | |
|---------------------|--|
| Option: | Function: |
| | <p>14-10 Mains Failure is typically used where very short mains interruptions (voltage dips) are present. At 100% load and a short voltage interruption, the DC voltage on the main capacitors drops quickly. For larger drives it only takes a few milliseconds before the DC level is down to about 373V DC and the main IGBT cuts off and loses the control over the motor. When the mains is restored, and the IGBT starts again, the output frequency and voltage vector does not correspond to the speed/frequency of the motor, and the result is normally an overvoltage or overcurrent, mostly resulting in a trip lock.</p> <p>14-10 Mains Failure can be programmed to avoid this situation.</p> <p>Select the function to which the frequency converter must act when the threshold in 14-11 Mains Voltage at Mains Fault has been reached.</p> <p>14-10 Mains Failure cannot be changed while motor is running.</p> <p>Controlled ramp down: The frequency converter will perform a controlled ramp down. If 2-10 Brake Function is Off [0] or AC brake [2], the ramp will follow the Over Voltage Ramping. If 2-10 Brake Function is [1] Resistor Brake the ramp will follow the setting in 3-81 Quick Stop Ramp Time.</p> <p>Controlled ramp down [1]: After power-up the frequency converter is ready for start. Controlled ramp down and trip [2]: After power-up the frequency converter needs a reset for starting.</p> |

| 14-10 Mains Failure | | |
|---------------------|---|---|
| Option: | Function: | |
| | <ol style="list-style-type: none"> The power is back before the energy from DC /moment of inertia from load is too low. The frequency converter will perform a controlled ramp down when 14-11 Mains Voltage at Mains Fault level has been reached. The frequency converter will perform a controlled ramp down as long as energy in the DC link is present. After this point the motor will be coasted. <p>Kinetic back-up: The frequency converter will perform a Kinetic back-up. If 2-10 Brake Function is Off [0] or AC brake [2], the ramp will follow the Over Voltage Ramping. If 2-10 Brake Function is [1] Resistor Brake the ramp will follow the setting in 3-81 Quick Stop Ramp Time.</p> <p>Kinetic Back-up [4]: The frequency converter will keep on running as long as there is energy in the system due to the moment of inertia produced by the load.</p> <p>Kinetic Back-up [5]: The frequency converter will ride through on speed as long as the energy is present from moment of inertia from the load. If the DC voltage goes below 14-11 Mains Voltage at Mains Fault the frequency converter will perform a trip.</p> <p>NOTE For the best Kinetic Backup performance the advanced motor data parameters, 1-30 Stator Resistance (Rs) to 1-35 Main Reactance (Xh), must be accurate.</p> | |
| [0] | No function | This selection does not present a danger to the frequency converter, but a trip lock would normally be the result of the short voltage interruptions. |
| [1] | Ctrl. ramp-down | This selection will keep the output frequency following the motor speed. The IGBT will not |

| 14-10 Mains Failure | | |
|---------------------|-----------------------|---|
| Option: | Function: | |
| | | lose the connection to the motor, but will follow the speed down. This is particularly useful in pump applications, where the inertia is low and the friction is high. When the mains is restored, the output frequency will ramp the motor up to the reference speed (if the mains interruption is prolonged, the controlled ramp down might take the output frequency all the way down to 0 rpm, and when the mains is restored, the application is ramped up from 0 rpm to the previous reference speed via the normal ramp up). |
| [2] | Ctrl. ramp-down, trip | |
| [3] | Coasting | Centrifuges can run for an hour without power supply. In those situations it is possible to select a coast function at mains interruption, together with a flying start which occurs when the mains is restored. |
| [4] | Kinetic back-up | Kinetic back up will maintain the DC level as long as possible, by converting the mechanical energy from the motor to the DC level supply. Fans normally can extend the mains interruptions for several seconds. Pumps can normally only extend the interruptions for 1-2 seconds or fractions of seconds. Compressors only for fractions of seconds. |
| [5] | Kinetic back-up, trip | |
| [6] | Alarm | |

| 14-11 Mains Voltage at Mains Fault | | |
|---|---------------|--|
| Range: | Function: | |
| Size related* | [180 - 600 V] | This parameter defines the threshold voltage at which the selected function in <i>14-10 Mains Failure</i> should be activated. The detection level is at a faktor $\sqrt{2}$ of the value in <i>14-11 Mains Voltage at Mains Fault</i> . |
| <p>NOTE</p> <p>Note for converting between VLT 5000 and FC 300:</p> <p>Even though the setting of the Mains Voltage at Mains Fault is the same for VLT 5000 and FC 300, the detection level is different. Use the following formula to obtain the same detection level as in VLT 5000: $14-11$ (VLT 5000 level) = Value used in VLT 5000 * $1,35/\sqrt{2}$.</p> | | |

| 14-12 Function at Mains Imbalance | | |
|-----------------------------------|-----------|-------------------------------|
| Option: | Function: | |
| [0] * | Trip | Trips the frequency converter |
| [1] | Warning | Issues a warning |
| [2] | Disabled | No action |

| 14-14 Kin. Backup Time Out | | |
|----------------------------|------------|---|
| Range: | Function: | |
| 60 s* | [0 - 60 s] | This parameter defines the Kinetic Backup Time Out in flux mode when running on low voltage grids. If the supply voltage does not increase above the value defined in <i>14-11 Mains Voltage at Mains Fault</i> + 5% within the specified time, the drive will then automatically run a controlled ramp-down profile prior to stop. |

3.15.3 14-2* Trip Reset

Parameters for configuring auto reset handling, special trip handling and control card self test or initialisation.

| 14-20 Reset Mode | | |
|------------------|----------------------|---|
| Option: | Function: | |
| | | Select the reset function after tripping. Once reset, the frequency converter can be restarted. |
| [0] * | Manual reset | Select <i>Manual reset</i> [0], to perform a reset via [RESET] or via the digital inputs. |
| [1] | Automatic reset x 1 | Select <i>Automatic reset x 1...x20</i> [1]-[12] to perform between one and twenty automatic resets after tripping. |
| [2] | Automatic reset x 2 | |
| [3] | Automatic reset x 3 | |
| [4] | Automatic reset x 4 | |
| [5] | Automatic reset x 5 | |
| [6] | Automatic reset x 6 | |
| [7] | Automatic reset x 7 | |
| [8] | Automatic reset x 8 | |
| [9] | Automatic reset x 9 | |
| [10] | Automatic reset x 10 | |
| [11] | Automatic reset x 15 | |
| [12] | Automatic reset x 20 | |
| [13] | Infinite auto reset | Select <i>Infinite Automatic Reset</i> [13] for continuous resetting after tripping. |
| [14] | Reset at power-up | |

NOTE

The motor may start without warning. If the specified number of AUTOMATIC RESETs is reached within 10 minutes, the frequency converter enters Manual reset [0] mode. After the Manual reset is performed, the setting of 14-20 Reset Mode reverts to the original selection. If the number of automatic resets is not reached within 10 minutes, or when a Manual reset is performed, the internal AUTOMATIC RESET counter returns to zero.

NOTE

Automatic reset will also be active for resetting safe stop function in firmware version < 4.3x.

| 14-21 Automatic Restart Time | | |
|------------------------------|-------------|--|
| Range: | Function: | |
| 10 s* | [0 - 600 s] | Enter the time interval from trip to start of the automatic reset function. This parameter is active when 14-20 Reset Mode is set to Automatic reset [1] - [13]. |

NOTE

Remember to set switches S201 (A53) and S202 (A54) as specified below when performing a control card test in 14-22 Operation Mode [1]. Otherwise, the test will fail!

| 14-22 Operation Mode | | |
|----------------------|-------------------|---|
| Option: | Function: | |
| | | <p>Use this parameter to specify normal operation; to perform tests; or to initialise all parameters except 15-03 Power Up's, 15-04 Over Temp's and 15-05 Over Volt's. This function is active only when the power is cycled to the frequency converter.</p> <p>Select <i>Normal operation</i> [0] for normal operation of the frequency converter with the motor in the selected application.</p> <p>Select <i>Control card test</i> [1] to test the analog and digital inputs and outputs and the +10 V control voltage. The test requires a test connector with internal connections. Use the following procedure for the control card test:</p> <ol style="list-style-type: none"> 1. Select <i>Control card test</i> [1]. 2. Disconnect the mains supply and wait for the light in the display to go out. 3. Set switches S201 (A53) and S202 (A54) = 'ON' / I. 4. Insert the test plug (see below). 5. Connect to mains supply. 6. Carry out various tests. |
| [0] * | Normal operation | |
| [1] | Control card test | |
| [2] | Initialisation | |
| [3] | Boot mode | |

| 14-22 Operation Mode | | |
|----------------------|-------------------|---|
| Option: | Function: | |
| | | <ol style="list-style-type: none"> 7. The results are displayed on the LCP and the frequency converter moves into an infinite loop. 8. 14-22 Operation Mode is automatically set to Normal operation. Carry out a power cycle to start up in Normal operation after a control card test. <p>If the test is OK LCP read-out: Control Card OK. Disconnect the mains supply and remove the test plug. The green LED on the Control Card will light up.</p> <p>If the test fails LCP read-out: Control Card I/O failure. Replace the frequency converter or Control card. The red LED on the Control Card is turned on. Test plugs (connect the following terminals to each other): 18 - 27 - 32; 19 - 29 - 33; 42 - 53 - 54</p> <p>Select <i>Initialisation</i> [2] to reset all parameter values to default settings, except for 15-03 Power Up's, 15-04 Over Temp's, and 15-05 Over Volt's. The frequency converter will reset during the next power-up. 14-22 Operation Mode will also revert to the default setting <i>Normal operation</i> [0].</p> |
| [0] * | Normal operation | |
| [1] | Control card test | |
| [2] | Initialisation | |
| [3] | Boot mode | |

| 14-24 Trip Delay at Current Limit | | |
|-----------------------------------|--|--|
| Range: | Function: | |
| 60 s* [0 - 60 s] | Enter the current limit trip delay in seconds. When the output current reaches the current limit (4-18 <i>Current Limit</i>), a warning is triggered. When the current limit warning has been continuously present for the period specified in this parameter, the frequency converter trips. Disable the trip delay by setting the parameter to 60 sec. = OFF. Thermal monitoring of the frequency converter will still remain active. | |

| 14-25 Trip Delay at Torque Limit | | |
|----------------------------------|---|--|
| Range: | Function: | |
| 60 s* [0 - 60 s] | Enter the torque limit trip delay in seconds. When the output torque reaches the torque limits (4-16 <i>Torque Limit Motor Mode</i> and 4-17 <i>Torque Limit Generator Mode</i>), a warning is triggered. When the torque limit warning has been continuously present for the period specified in this parameter, the frequency converter trips. Disable the trip delay by setting the parameter to 60 sec. = OFF. Thermal monitoring of the frequency converter will still remain active. | |

| 14-26 Trip Delay at Inverter Fault | | |
|------------------------------------|--|--|
| Range: | Function: | |
| Application dependent* [0 - 35 s] | When the frequency converter detects an over-voltage in the set time trip will be effected after the set time. If value = 0, <i>protection mode</i> is disabled | |
| | <p>NOTE</p> <p>It is recommended to disable <i>protection mode</i> in hoisting applications.</p> | |

| 14-29 Service Code | | |
|--------------------------------|----------------------------|--|
| Range: | Function: | |
| 0* [-2147483647 - 2147483647] | For internal service only. | |

18 to 33 will not be active until the frequency converter is no longer near the current limit.

By using a digital input set to *Coast inverse* [2] or *Coast and reset inv.* [3], the motor does not use the ramp-down time, since the frequency converter is coasted. If a quick stop is necessary, use the mechanical brake control function along with an external electro-mechanical brake attached to the application.

| 14-30 Current Lim Ctrl, Proportional Gain | | |
|---|--|--|
| Range: | Function: | |
| 100 %* [0 - 500 %] | Enter the proportional gain value for the current limit controller. Selection of a high value makes the controller react faster. Too high a setting leads to controller instability. | |

| 14-31 Current Lim Ctrl, Integration Time | | |
|--|---|--|
| Range: | Function: | |
| 0.020 s* [0.002 - 2.000 s] | Controls the current limit control integration time. Setting it to a lower value makes it react faster. A setting too low leads to control instability. | |

| 14-32 Current Lim Ctrl, Filter Time | | |
|-------------------------------------|-----------|--|
| Range: | Function: | |
| 1.0 ms* [1.0 - 100.0 ms] | | |

| 14-35 Stall Protection | | |
|------------------------|---|--|
| Option: | Function: | |
| | Select Enable [1] to enable the stall protection in field-weakening in flux mode. Select Disable [0] if you desire to disable it. This might cause the motor to be lost. 14-35 <i>Stall Protection</i> is active in Flux mode only. | |
| [0] | Disabled | |
| [1] * | Enabled | |

3.15.4 14-3* Current Limit Control

The frequency converter features an integral Current Limit Controller which is activated when the motor current, and thus the torque, is higher than the torque limits set in 4-16 *Torque Limit Motor Mode* and 4-17 *Torque Limit Generator Mode*.

When the current limit is reached during motor operation or regenerative operation, the frequency converter will try to reduce torque below the preset torque limits as quickly as possible without losing control of the motor.

While the current control is active, the frequency converter can only be stopped by setting a digital input to *Coast inverse* [2] or *Coast and reset inv.* [3]. Any signal on terminals

3.15.5 14-4* Energy Optimising

Parameters for adjusting the energy optimisation level in both Variable Torque (VT) and Automatic Energy Optimization (AEO) mode in *1-03 Torque Characteristics*.

| 14-40 VT Level | | |
|-------------------|--|--|
| Range: | Function: | |
| 66 %* [40 - 90 %] | Enter the level of motor magnetisation at low speed. Selection of a low value reduces energy loss in the motor, but also reduces load capability. This parameter cannot be adjusted while the motor is running. | |

| 14-41 AEO Minimum Magnetisation | | |
|---------------------------------|--|--|
| Range: | Function: | |
| Size related* [40 - 75 %] | Enter the minimum allowable magnetisation for AEO. Selection of a low value reduces energy loss in the motor, but can also reduce resistance to sudden load changes. | |

| 14-42 Minimum AEO Frequency | | |
|-----------------------------|---|--|
| Range: | Function: | |
| 10 Hz* [5 - 40 Hz] | Enter the minimum frequency at which the Automatic Energy Optimisation (AEO) is to be active. | |


| 14-43 Motor Cosphi | | |
|---------------------------------------|--|--|
| Range: | Function: | |
| Application dependent* [0.40 - 0.95] | The Cos(phi) setpoint is automatically set for optimum AEO performance. This parameter should normally not be altered. However in some situations it may be necessary to enter a new value to fine-tune. | |

3.15.6 14-5* Environment

These parameters help the frequency converter to operate under special environmental conditions.

| 14-50 RFI Filter | | |
|---|---|--|
| This parameter is only available for FC 302. It is not relevant to FC 301 due to different design and shorter motor cables. | | |
| Option: | Function: | |
| [0] Off | Select <i>Off</i> [0] if the frequency converter is fed by an isolated mains source (IT mains). If a filter is used, select <i>Off</i> [0] during charging to prevent a high leakage current making the RCD switch. In this mode, the internal RFI filter capacitors between chassis and the mains RFI filter circuit are cut-out to reduce the ground capacity currents. | |

| 14-50 RFI Filter | | |
|---|--|--|
| This parameter is only available for FC 302. It is not relevant to FC 301 due to different design and shorter motor cables. | | |
| Option: | Function: | |
| [1] * On | Select <i>On</i> [1] to ensure that the frequency converter complies with EMC standards. | |

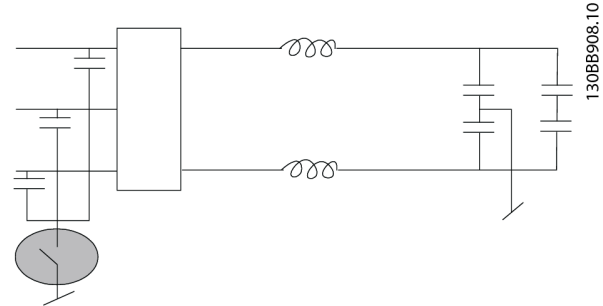

| 14-51 DC Link Compensation | | |
|----------------------------|--------------------------------|--|
| Option: | Function: | |
| [0] Off | Disables DC Link Compensation. | |
| [1] * On | Enables DC Link Compensation. | |

| 14-52 Fan Control | | |
|---------------------------------------|---|--|
| Select minimum speed of the main fan. | | |
| Option: | Function: | |
| [0] * Auto | Select <i>Auto</i> [0] to run fan only when internal temperature in frequency converter is in range 35°C to approx. 55°C. Fan runs at low speed below 35°C, and at full speed at approx. 55°C. | |
| [1] On 50% | | |
| [2] On 75% | | |
| [3] On 100% | | |
| [4] Auto (Low temp env.) | | |

| 14-53 Fan Monitor | | |
|-------------------|--|--|
| Option: | Function: | |
| | Select which reaction the frequency converter should take in case a fan fault is detected. | |
| [0] Disabled | | |
| [1] * Warning | | |
| [2] Trip | | |

| 14-55 Output Filter | | |
|---------------------|---|--|
| Option: | Function: | |
| | Select the type of output filter connected. This parameter cannot be adjusted while motor is running. | |

| 14-55 Output Filter | | |
|---------------------|------------------------|---|
| Option: | Function: | |
| [0] * | No Filter | This is the default setting and should be used with dU/dt filters or high-frequency common-mode (HF-CM) filters. |
| [1] | Sine-Wave Filter | This setting is only for backwards compatibility. It enables operation with FLUX control principle when the parameters <i>14-56 Capacitance Output Filter</i> and <i>14-57 Inductance Output Filter</i> are programmed with the output filter capacitance and inductance. It DOES NOT limit the range of the switching frequency. |
| [2] | Sine-Wave Filter Fixed | This parameter sets a minimum allowed limit to the switching frequency and ensures that the filter will be operated within the safe range of switching frequencies. Operation is possible with all control principles. For FLUX control principle the parameters <i>14-56 Capacitance Output Filter</i> and <i>14-57 Inductance Output Filter</i> have to be programmed (these parameters have no effect in VVC ^{plus} and U/f). The modulation patten will be set to SFAVM which gives the lowest acoustic noise in the filter. Remember to set <i>14-55 Output Filter</i> to Sine-wave fixed always when you use a sine-wave filter. |

| 14-56 Capacitance Output Filter | | |
|---|-------------------|---|
| Range: | Function: | |
| Compensation function of the LC-filter requires the per phase equivalent star connected capacitance of the filter (3 times the capacity between two phases when capacitance is 'Delta' connection). | | |
| Application dependent* | [0.1 - 6500.0 uF] | Set the capacitance of the output filter. The value can be found on the filter label. NOTE This is required for correct compensation in Flux mode (1-01 Motor Control Principle) |

| 14-57 Inductance Output Filter | | |
|--------------------------------|---------------------|--|
| Range: | Function: | |
| Application dependent* | [0.001 - 65.000 mH] | Set the inductance of the output filter. The value can be found on the filter label. NOTE This is required for correct compensation in Flux mode (1-01 Motor Control Principle) |

3.15.7 14-7* Compatibility

The parameters in this group are for setting of compatibility for VLT 3000, VLT 5000 to FC 300.

| 14-72 VLT Alarm Word | | |
|----------------------|----------------|--|
| Option: | Function: | |
| [0] | 0 - 4294967295 | Read out the alarm word corresponding to VLT 5000. |

| 14-73 VLT Warning Word | | |
|------------------------|----------------|--|
| Option: | Function: | |
| [0] | 0 - 4294967295 | Read out the warning word corresponding to VLT 5000. |

| 14-74 Leg. Ext. Status Word | | |
|-----------------------------|-------------------|---|
| Range: | Function: | |
| 0* | [0 - 4294967295] | Read out the ext. status word corresponding to VLT 5000 |

3.15.8 14-8* Options

| 14-80 Option Supplied by External 24VDC | | |
|---|-----------|--|
| Option: | Function: | |
| [0] | No | Select No [0] to use the frequency converter's 24V DC supply. |
| [1] | * Yes | Select Yes [1] if an external 24V DC supply will be used to power the option. Inputs/Outputs will be galvanically isolated from the drive when operated from an external supply. |

NOTE

This parameter is only changing function by performing a power cycle.

| 14-89 Option Detection | | |
|---|--------------------------|---|
| Option: | Function: | |
| Selects the behaviour of the frequency converter when a change in the option configuration is detected. | | |
| [0] | * Protect Option Config. | Freezes the current settings and prevents unwanted changes when missing or defective options are detected. |
| [1] | Enable Option Change | Changes drive settings and is used when modifying the system configuration. This Parameter setting will return to [0] after an Option Change. |

| 14-90 Fault Level | |
|-------------------|---|
| Option: | Function: |
| [0] * Off | Use this parameter to customize Fault levels. Use [0] "Off" with caution as it will ignore all Warnings & Alarms for the chosen source. |

| 14-90 Fault Level | |
|-------------------|-----------|
| Option: | Function: |
| [1] | Warning |
| [2] | Trip |
| [3] | Trip Lock |

| Failure | Alarm | Off | Warning | Trip | Trip Lock |
|--------------------------------------|-------|-----|---------|------|-----------|
| 10V low | 1 | X | D | | |
| 24V low | 47 | X | | | D |
| 1.8V supply low | 48 | X | | | D |
| Voltage limit | 64 | X | D | | |
| Earth fault during ramping | 14 | | | D | X |
| Earth fault 2 during cont. operation | 45 | | | D | X |
| Torque Limit | 12 | X | D | | |
| Over Current | 13 | | | X | D |
| Short Circuit | 16 | | | X | D |
| Heatsink temperature | 29 | | | X | D |
| Heatsink sensor | 39 | | | X | D |
| Control card temperature | 65 | | | X | D |
| Power card temperature | 6 | | 2) | X | D |
| Heatsink temperature ¹⁾ | 244 | | | X | D |
| Heatsink sensor ¹⁾ | 245 | | | X | D |
| Power card temperature ¹⁾ | 247 | | | | |

Table 3.3 Table for Selection of Choice of Action when Selected Alarm Appears

D = Default setting. x = possible selection.

1) Only high power drives

In FC small and medium A69 is only a warning

3.16 Parameters: 15-** Drive Information

3.16.1 15-0* Operating Data

| 15-00 Operating Hours | | |
|-----------------------|--------------------|---|
| Range: | Function: | |
| 0 h* | [0 - 2147483647 h] | View how many hours the frequency converter has run. The value is saved when the frequency converter is turned off. |

| 15-01 Running Hours | | |
|---------------------|--------------------|---|
| Range: | Function: | |
| 0 h* | [0 - 2147483647 h] | View how many hours the motor has run. Reset the counter in 15-07 <i>Reset Running Hours Counter</i> . The value is saved when the frequency converter is turned off. |

| 15-02 kWh Counter | | |
|-------------------|----------------------|---|
| Range: | Function: | |
| 0 kWh* | [0 - 2147483647 kWh] | Registering the power consumption of the motor as a mean value over one hour. Reset the counter in 15-06 <i>Reset kWh Counter</i> . |

| 15-03 Power Up's | | |
|------------------|-------------------|---|
| Range: | Function: | |
| 0 * | [0 - 2147483647] | View the number of times the frequency converter has been powered up. |

| 15-04 Over Temp's | | |
|-------------------|--------------|--|
| Range: | Function: | |
| 0 * | [0 - 65535] | View the number of frequency converter temperature faults which have occurred. |

| 15-05 Over Volt's | | |
|-------------------|--------------|--|
| Range: | Function: | |
| 0 * | [0 - 65535] | View the number of frequency converter overvoltages which have occurred. |

| 15-06 Reset kWh Counter | | |
|-------------------------|---------------|--|
| Option: | Function: | |
| [0] * | Do not reset | Select <i>Do not reset</i> [0] if no reset of the kWh counter is desired. |
| [1] | Reset counter | Select <i>Reset</i> [1] and press [OK] to reset the kWh counter to zero (see 15-02 <i>kWh Counter</i>). |

NOTE

The reset is carried out by pressing [OK].

| 15-07 Reset Running Hours Counter | | |
|-----------------------------------|--------------|--|
| Option: | Function: | |
| [0] * | Do not reset | |

| 15-07 Reset Running Hours Counter | | |
|-----------------------------------|---------------|---|
| Option: | Function: | |
| [1] | Reset counter | Select <i>Reset</i> [1] and press [OK] to reset the Running Hours counter to zero (see 15-01 <i>Running Hours</i>). This parameter cannot be selected via the serial port, RS-485. Select <i>Do not reset</i> [0] if no reset of the Running Hours counter is desired. |

3.16.2 15-1* Data Log Settings

The Data Log enables continuous logging of up to 4 data sources (15-10 *Logging Source*) at individual rates (15-11 *Logging Interval*). A trigger event (15-12 *Trigger Event*) and window (15-14 *Samples Before Trigger*) are used to start and stop the logging conditionally.

| 15-10 Logging Source | | |
|----------------------|-----------------------|--|
| Array [4] | | |
| Option: | Function: | |
| | | Select which variables are to be logged. |
| [0] * | None | |
| [15] | Readout: actual setup | |
| [1472] | Legacy Alarm Word | |
| [1473] | Legacy Warning Word | |
| [1474] | Leg. Ext. Status Word | |
| [1600] | Control Word | |
| [1601] | Reference [Unit] | |
| [1602] | Reference % | |
| [1603] | Status Word | |
| [1610] | Power [kW] | |
| [1611] | Power [hp] | |
| [1612] | Motor Voltage | |
| [1613] | Frequency | |
| [1614] | Motor Current | |
| [1616] | Torque [Nm] | |
| [1617] | Speed [RPM] | |
| [1618] | Motor Thermal | |
| [1621] | Torque [%] High Res. | |
| [1622] | Torque [%] | |
| [1625] | Torque [Nm] High | |
| [1630] | DC Link Voltage | |
| [1632] | Brake Energy /s | |
| [1633] | Brake Energy /2 min | |
| [1634] | Heatsink Temp. | |
| [1635] | Inverter Thermal | |
| [1650] | External Reference | |
| [1651] | Pulse Reference | |
| [1652] | Feedback [Unit] | |
| [1657] | Feedback [RPM] | |
| [1660] | Digital Input | |
| [1662] | Analog Input 53 | |
| [1664] | Analog Input 54 | |

| 15-10 Logging Source | | |
|----------------------|-----------------------|--|
| Array [4] | | |
| Option: | Function: | |
| [1665] | Analog Output 42 [mA] | |
| [1666] | Digital Output [bin] | |
| [1675] | Analog In X30/11 | |
| [1676] | Analog In X30/12 | |
| [1677] | Analog Out X30/8 [mA] | |
| [1690] | Alarm Word | |
| [1692] | Warning Word | |
| [1694] | Ext. Status Word | |
| [1860] | Digital Input 2 | |
| [3110] | Bypass Status Word | |
| [3470] | MCO Alarm Word 1 | |
| [3471] | MCO Alarm Word 2 | |

| 15-11 Logging Interval | | |
|------------------------|------------------|--|
| Range: | Function: | |
| Size related* | [0.000 - 0.000] | |

| 15-12 Trigger Event | | |
|--|----------------------|--|
| Select the trigger event. When the trigger event occurs, a window is applied to freeze the log. The log will then retain a specified percentage of samples before the occurrence of the trigger event (<i>15-14 Samples Before Trigger</i>). | | |
| Option: | Function: | |
| [0] * | False | |
| [1] | True | |
| [2] | Running | |
| [3] | In range | |
| [4] | On reference | |
| [5] | Torque limit | |
| [6] | Current limit | |
| [7] | Out of current range | |
| [8] | Below I low | |
| [9] | Above I high | |
| [10] | Out of speed range | |
| [11] | Below speed low | |
| [12] | Above speed high | |
| [13] | Out of feedb. range | |
| [14] | Below feedb. low | |
| [15] | Above feedb. high | |
| [16] | Thermal warning | |
| [17] | Mains out of range | |
| [18] | Reversing | |
| [19] | Warning | |
| [20] | Alarm (trip) | |
| [21] | Alarm (trip lock) | |
| [22] | Comparator 0 | |
| [23] | Comparator 1 | |
| [24] | Comparator 2 | |
| [25] | Comparator 3 | |
| [26] | Logic rule 0 | |
| [27] | Logic rule 1 | |

| 15-12 Trigger Event | | |
|--|--------------------|--|
| Select the trigger event. When the trigger event occurs, a window is applied to freeze the log. The log will then retain a specified percentage of samples before the occurrence of the trigger event (<i>15-14 Samples Before Trigger</i>). | | |
| Option: | Function: | |
| [28] | Logic rule 2 | |
| [29] | Logic rule 3 | |
| [33] | Digital input DI18 | |
| [34] | Digital input DI19 | |
| [35] | Digital input DI27 | |
| [36] | Digital input DI29 | |
| [37] | Digital input DI32 | |
| [38] | Digital input DI33 | |
| [50] | Comparator 4 | |
| [51] | Comparator 5 | |
| [60] | Logic rule 4 | |
| [61] | Logic rule 5 | |

| 15-13 Logging Mode | | |
|--------------------|---------------------|--|
| Option: | Function: | |
| [0] * | Log always | Select <i>Log always</i> [0] for continuous logging. |
| [1] | Log once on trigger | Select <i>Log once on trigger</i> [1] to conditionally start and stop logging using <i>15-12 Trigger Event</i> and <i>15-14 Samples Before Trigger</i> . |

| 15-14 Samples Before Trigger | | |
|------------------------------|------------------|---|
| Range: | Function: | |
| 50* | [0 - 100] | Enter the percentage of all samples prior to a trigger event which are to be retained in the log. See also <i>15-12 Trigger Event</i> and <i>15-13 Logging Mode</i> . |

3.16.3 15-2* Historic Log

View up to 50 logged data items via the array parameters in this parameter group. For all parameters in the group, [0] is the most recent data and [49] the oldest data. Data is logged every time an *event* occurs (not to be confused with SLC events). *Events* in this context are defined as a change in one of the following areas:

1. Digital input
2. Digital outputs (not monitored in this SW release)
3. Warning word
4. Alarm word
5. Status word
6. Control word
7. Extended status word

Events are logged with value, and time stamp in msec. The time interval between two events depends on how often events occur (maximum once every scan time). Data logging is continuous but if an alarm occurs, the log is saved and the values can be viewed on the display. This feature is useful, for example when carrying out service following a trip. View the historic log contained in this parameter via the serial communication port or via the display.

| 15-20 Historic Log: Event | | |
|---------------------------|------------|---|
| Array [50] | | |
| Range: | Function: | |
| 0 * | [0 - 255] | View the event type of the logged events. |

| 15-21 Historic Log: Value | | |
|---------------------------|---|---|
| Array [50] | | |
| Range: | Function: | |
| 0 * | [0 - 2147483647] | View the value of the logged event. Interpret the event values according to this table: |
| | Digital input | Decimal value. See 16-60 Digital Input for description after converting to binary value. |
| | Digital output (not monitored in this SW release) | Decimal value. See 16-66 Digital Output [bin] for description after converting to binary value. |
| | Warning word | Decimal value. See 16-92 Warning Word for description. |
| | Alarm word | Decimal value. See 16-90 Alarm Word for description. |
| | Status word | Decimal value. See 16-03 Status Word for description after converting to binary value. |
| | Control word | Decimal value. See 16-00 Control Word for description. |
| | Extended status word | Decimal value. See 16-94 Ext. Status Word for description. |

| 15-22 Historic Log: Time | | |
|--------------------------|---------------------|---|
| Array [50] | | |
| Range: | Function: | |
| 0 ms* | [0 - 2147483647 ms] | View the time at which the logged event occurred. Time is measured in ms since frequency converter start. The |

| 15-22 Historic Log: Time | | |
|--------------------------|-----------|---|
| Array [50] | | |
| Range: | Function: | |
| | | max. value corresponds to approx. 24 days which means that the count will restart at zero after this time period. |

3.16.4 15-3* Alarm Log

Parameters in this group are array parameters, where up to 10 fault logs can be viewed. [0] is the most recent logged data, and [9] the oldest. Error codes, values, and time stamp can be viewed for all logged data.

| 15-30 Fault Log: Error Code | | |
|-----------------------------|------------|--|
| Array [10] | | |
| Range: | Function: | |
| 0* | [0 - 255] | View the error code and look up its meaning in the Troubleshooting chapter of the FC 300 Design Guide. |

| 15-31 Alarm Log: Value | | |
|------------------------|-------------------|--|
| Array [10] | | |
| Range: | Function: | |
| 0 * | [-32767 - 32767] | View an extra description of the error. This parameter is mostly used in combination with alarm 38 'internal fault'. |

| 15-32 Alarm Log: Time | | |
|-----------------------|--------------------|--|
| Array [10] | | |
| Range: | Function: | |
| 0 s* | [0 - 2147483647 s] | View the time when the logged event occurred. Time is measured in seconds from frequency converter start-up. |

3.16.5 15-4* Drive Identification

Parameters containing read only information about the hardware and software configuration of the frequency converter.

| 15-40 FC Type | | |
|---------------|-----------|--|
| Range: | Function: | |
| 0* | [0 - 0] | View the frequency converter type. The read-out is identical to the FC 300 Series power field of the type code definition, characters 1-6. |

| 15-41 Power Section | | |
|---------------------|-----------|--|
| Range: | Function: | |
| 0* | [0 - 0] | View the FC type. The read-out is identical to the FC 300 Series power field of the type code definition, characters 7-10. |

| 15-42 Voltage | | |
|---------------|-----------|---|
| Range: | Function: | |
| 0* | [0 - 0] | View the FC type. The read-out is identical to the FC 300 Series power field of the type code definition, characters 11-12. |

| 15-43 Software Version | | |
|------------------------|-----------|--|
| Range: | Function: | |
| 0 * | [0 - 0] | View the combined SW version (or 'package version') consisting of power SW and control SW. |

| 15-44 Ordered Typecode String | | |
|-------------------------------|-----------|---|
| Range: | Function: | |
| 0 * | [0 - 0] | View the type code string used for re-ordering the frequency converter in its original configuration. |

| 15-45 Actual Typecode String | | |
|------------------------------|-----------|-------------------------|
| Range: | Function: | |
| 0 * | [0 - 0] | View the actual string. |

| 15-46 Frequency Converter Ordering No | | |
|---------------------------------------|-----------|--|
| Range: | Function: | |
| 0 * | [0 - 0] | View the 8-digit ordering number used for re-ordering the frequency converter in its original configuration. |

| 15-47 Power Card Ordering No | | |
|------------------------------|-----------|--------------------------------------|
| Range: | Function: | |
| 0 * | [0 - 0] | View the power card ordering number. |

| 15-48 LCP Id No | | |
|-----------------|-----------|-------------------------|
| Range: | Function: | |
| 0 * | [0 - 0] | View the LCP ID number. |

| 15-49 SW ID Control Card | | |
|--------------------------|-----------|--|
| Range: | Function: | |
| 0 * | [0 - 0] | View the control card software version number. |

| 15-50 SW ID Power Card | | |
|------------------------|-----------|--|
| Range: | Function: | |
| 0 * | [0 - 0] | View the power card software version number. |

| 15-51 Frequency Converter Serial Number | | |
|---|-----------|---|
| Range: | Function: | |
| 0 * | [0 - 0] | View the frequency converter serial number. |

| 15-53 Power Card Serial Number | | |
|--------------------------------|-----------|------------------------------------|
| Range: | Function: | |
| 0 * | [0 - 0] | View the power card serial number. |

| 15-59 CSIV Filename | | |
|------------------------|-----------|--|
| Range: | Function: | |
| Application dependent* | [0 - 0] | Shows the currently used CSIV (Costumer Specific Initial Values) filename. |

3.16.6 15-6* Option Ident.

This read-only parameter group contains information about the hardware and software configuration of the options installed in slots A, B, C0 and C1.

| 15-60 Option Mounted | | |
|----------------------|-----------|---------------------------------|
| Range: | Function: | |
| 0 * | [0 - 0] | View the installed option type. |

| 15-61 Option SW Version | | |
|-------------------------|-----------|---|
| Range: | Function: | |
| 0 * | [0 - 0] | View the installed option software version. |

| 15-62 Option Ordering No | | |
|--------------------------|-----------|--|
| Range: | Function: | |
| 0 * | [0 - 0] | Shows the ordering number for the installed options. |

| 15-63 Option Serial No | | |
|------------------------|-----------|--|
| Range: | Function: | |
| 0 * | [0 - 0] | View the installed option serial number. |

3.16.7 15-9* Parameter Info

| 15-92 Defined Parameters | | |
|--------------------------|-------------|---|
| Array [1000] | | |
| Range: | Function: | |
| 0 * | [0 - 9999] | View a list of all defined parameters in the frequency converter. The list ends with 0. |

| 15-93 Modified Parameters | | |
|---------------------------|-------------|--|
| Array [1000] | | |
| Range: | Function: | |
| 0 * | [0 - 9999] | View a list of the parameters that have been changed from their default setting. The list ends with 0. Changes may not be visible until up to 30 seconds after implementation. |

| 15-99 Parameter Metadata | | |
|--------------------------|-------------|--|
| Array [30] | | |
| Range: | Function: | |
| 0* | [0 - 9999] | This parameter contains data used by the MCT 10 Set-up Software. |

3.17 Parameters: 16-** Data Read-outs

3.17.1 16-0* General Status

| 16-00 Control Word | | |
|--------------------|--|--|
| Range: | Function: | |
| 0 * [0 - 65535] | View the Control word sent from the frequency converter via the serial communication port in hex code. | |

| 16-01 Reference [Unit] | | |
|-------------------------------|---|--|
| Range: | Function: | |
| 0.000 Reference-FeedbackUnit* | [-999999.000 - 999999.000 ReferenceFeed-backUnit] | View the present reference value applied on impulse or analog basis in the unit resulting from the configuration selected in <i>1-00 Configuration Mode</i> (Hz, Nm or RPM). |

| 16-02 Reference [%] | | |
|---------------------------|---|--|
| Range: | Function: | |
| 0.0 %* [-200.0 - 200.0 %] | View the total reference. The total reference is the sum of digital, analog, preset, bus, and freeze references, plus catch-up and slow-down. | |

| 16-03 Status Word | | |
|-------------------|---|--|
| Range: | Function: | |
| 0 * [0 - 65535] | View the Status word sent from the frequency converter via the serial communication port in hex code. | |

| 16-05 Main Actual Value [%] | | |
|------------------------------|---|--|
| Range: | Function: | |
| 0.00 %* [-100.00 - 100.00 %] | View the two-byte word sent with the Status word to the bus Master reporting the Main Actual Value. | |

| 16-09 Custom Readout | | |
|-------------------------|---------------------------------|---|
| Range: | Function: | |
| 0.00 CustomReadoutUnit* | [0.00 - 0.00 CustomReadoutUnit] | View the value of custom readout from <i>0-30 Unit for User-defined Readout</i> to <i>0-32 Custom Readout Max Value</i> |

3.17.2 16-1* Motor Status

| 16-10 Power [kW] | | |
|-------------------------------|---|--|
| Range: | Function: | |
| 0.00 kW* [0.00 - 10000.00 kW] | Displays motor power in kW. The value shown is calculated on the basis of the actual motor voltage and motor current. The value is filtered, and therefore approx. 30ms may pass from when an input value changes to when the data read-out values change. The resolution of read-out value on fieldbus is in 10 W steps. | |

| 16-11 Power [hp] | | |
|-------------------------------|--|--|
| Range: | Function: | |
| 0.00 hp* [0.00 - 10000.00 hp] | View the motor power in HP. The value shown is calculated on the basis of the actual motor voltage and motor current. The value is filtered, and therefore approximately 30ms may pass from when an input value changes to when the data read-out values change. | |

| 16-12 Motor Voltage | | |
|-------------------------|--|--|
| Range: | Function: | |
| 0.0 V* [0.0 - 6000.0 V] | View the motor voltage, a calculated value used for controlling the motor. | |

| 16-13 Frequency | | |
|---------------------------|--|--|
| Range: | Function: | |
| 0.0 Hz* [0.0 - 6500.0 Hz] | View the motor frequency, without resonance dampening. | |

| 16-14 Motor Current | | |
|-----------------------------|--|--|
| Range: | Function: | |
| 0.00 A* [0.00 - 10000.00 A] | View the motor current measured as a mean value, IRMS. The value is filtered, and thus approximately 30ms may pass from when an input value changes to when the data read-out values change. | |

| 16-15 Frequency [%] | | |
|------------------------------|--|--|
| Range: | Function: | |
| 0.00 %* [-100.00 - 100.00 %] | View a two-byte word reporting the actual motor frequency (without resonance dampening) as a percentage (scale 0000-4000 Hex) of <i>4-19 Max Output Frequency</i> . Set <i>9-16 PCD Read Configuration</i> index 1 to send it with the Status Word instead of the MAV. | |

| 16-16 Torque [Nm] | | |
|-------------------|-----------------------|---|
| Range: | | Function: |
| 0.0 Nm* | [-3000.0 - 3000.0 Nm] | View the torque value with sign, applied to the motor shaft. Linearity is not exact between 160% motor current and torque in relation to the rated torque. Some motors supply more than 160% torque. Consequently, the min. value and the max. value will depend on the max. motor current as well as the motor used. The value is filtered, and thus approx. 30ms may pass from when an input changes value to when the data read-out values change. |

| 16-17 Speed [RPM] | | |
|-------------------|----------------------|--|
| Range: | | Function: |
| 0 RPM* | [-30000 - 30000 RPM] | View the actual motor RPM. In open loop or closed loop process control the motor RPM is estimated. In speed closed loop modes the motor RPM is measured. |

| 16-18 Motor Thermal | | |
|---------------------|-------------|--|
| Range: | | Function: |
| 0 %* | [0 - 100 %] | View the calculated thermal load on the motor. The cut-out limit is 100%. The basis for calculation is the ETR function selected in <i>1-90 Motor Thermal Protection</i> . |

| 16-19 KTY sensor temperature | | |
|------------------------------|-----------|---|
| Range: | | Function: |
| 0 C* | [0 - 0 C] | Returning the actual temperature on KTY sensor built into the motor. See parameter group 1-9*. |

| 16-20 Motor Angle | | |
|-------------------|--------------|--|
| Range: | | Function: |
| 0* | [0 - 65535] | View the current encoder/resolver angle offset relative to the index position. The value range of 0-65535 corresponds to 0-2*pi (radians). |

| 16-21 Torque [%] High Res. | | |
|----------------------------|--------------------|--|
| Range: | | Function: |
| 0.0 %* | [-200.0 - 200.0 %] | The value shown is the torque in percent of nominal torque, with sign and 0.1% resolution, applied to the motor shaft. |

| 16-22 Torque [%] | | |
|------------------|----------------|--|
| Range: | | Function: |
| 0 %* | [-200 - 200 %] | Value shown is the torque in percent of nominal torque, with sign, applied to the motor shaft. |

| 16-25 Torque [Nm] High | | |
|------------------------|---------------------------------|---|
| Range: | | Function: |
| 0.0 Nm* | [-200000000.0 - 200000000.0 Nm] | View the torque value with sign, applied to the motor shaft. Some motors supply more than 160% torque. Consequently, the min. value and the max. value will depend on the max. motor current as well as the motor used. This specific readout has been adapted to be able to show higher values than the standard readout in <i>16-16 Torque [Nm]</i> . |

3.17.3 16-3* Drive Status

| 16-30 DC Link Voltage | | |
|-----------------------|---------------|--|
| Range: | | Function: |
| 0 V* | [0 - 10000 V] | View a measured value. The value is filtered with an 30ms time constant. |

| 16-32 Brake Energy /s | | |
|-----------------------|------------------------|---|
| Range: | | Function: |
| 0.000 kW* | [0.000 - 10000.000 kW] | View the brake power transmitted to an external brake resistor, stated as an instantaneous value. |

| 16-33 Brake Energy /2 min | | |
|---------------------------|------------------------|---|
| Range: | | Function: |
| 0.000 kW* | [0.000 - 10000.000 kW] | View the brake power transmitted to an external brake resistor. The mean power is calculated on an average basis for the most recent 120 seconds. |

| 16-34 Heatsink Temp. | | |
|----------------------|-------------|---|
| Range: | | Function: |
| 0 C* | [0 - 255 C] | View the frequency converter heatsink temperature. The cut-out limit is 90 ± 5°C, and the motor cuts back in at 60 ± 5°C. |

| 16-35 Inverter Thermal | | |
|------------------------|-------------|---|
| Range: | | Function: |
| 0 %* | [0 - 100 %] | View the percentage load on the inverter. |

| 16-36 Inv. Nom. Current | | |
|-------------------------|---------------------|--|
| Range: | | Function: |
| Application dependent* | [0.01 - 10000.00 A] | View the inverter nominal current, which should match the nameplate data on the connected motor. The data are used for calculation of torque, motor protection, etc. |

| 16-37 Inv. Max. Current | | |
|-------------------------|---------------------|--|
| Range: | | Function: |
| Application dependent* | [0.01 - 10000.00 A] | View the inverter maximum current, which should match the nameplate data on the connected motor. The data are used for calculation of torque, motor protection, etc. |

| 16-38 SL Controller State | | |
|---------------------------|------------|---|
| Range: | | Function: |
| 0* | [0 - 100] | View the state of the event under execution by the SL controller. |

| 16-39 Control Card Temp. | | |
|--------------------------|-------------|--|
| Range: | | Function: |
| 0 C* | [0 - 100 C] | View the temperature on the control card, stated in °C |

| 16-40 Logging Buffer Full | | |
|---------------------------|-----|--|
| Option: | | Function: |
| | | View whether the logging buffer is full (see parameter group 15-1*). The logging buffer will never be full when <i>15-13 Logging Mode</i> is set to <i>Log always</i> [0]. |
| [0] * | No | |
| [1] | Yes | |

| 16-49 Current Fault Source | | |
|----------------------------|----------|--|
| Range: | | Function: |
| 0* | [0 - 8] | Value indicates source of current faults including short circuit, over current, and phase imbalance (from left): 1-4 Inverter 5-8 Rectifier 0 No fault recorded |

3.17.4 16-5* Ref. & Feedb.

| 16-50 External Reference | | |
|--------------------------|-------------------|---|
| Range: | | Function: |
| 0.0* | [-200.0 - 200.0] | View the total reference, the sum of digital, analog, preset, bus and freeze references, plus catch-up and slow-down. |

| 16-51 Pulse Reference | | |
|-----------------------|-------------------|--|
| Range: | | Function: |
| 0.0* | [-200.0 - 200.0] | View the reference value from programmed digital input(s). The read-out can also reflect the impulses from an incremental encoder. |

| 16-52 Feedback [Unit] | | |
|-------------------------------|---|--|
| Range: | | Function: |
| 0.000 Reference-FeedbackUnit* | [-999999.999 - 999999.999 ReferenceFeed-backUnit] | View the feedback unit resulting from the selection of unit and scaling in <i>3-00 Reference Range</i> , <i>3-01 Reference/Feedback Unit</i> , <i>3-02 Minimum Reference</i> and <i>3-03 Maximum Reference</i> . |

| 16-53 Digi Pot Reference | | |
|--------------------------|---------------------|---|
| Range: | | Function: |
| 0.00* | [-200.00 - 200.00] | View the contribution of the Digital Potentiometer to the actual reference. |

| 16-57 Feedback [RPM] | | |
|----------------------|----------------------|--|
| Range: | | Function: |
| 0 RPM* | [-30000 - 30000 RPM] | Read-out parameter where the actual motor RPM from the feed-back source can be read in both closed loop and open loop. The feed-back source is selected by <i>7-00 Speed PID Feedback Source</i> . |

3.17.5 16-6* Inputs and Outputs

| 16-60 Digital Input | | |
|--------------------------|--|--|
| Range: | Function: | |
| 0 * [0 - 1023] | View the signal states from the active digital inputs. Example: Input 18 corresponds to bit no. 5, '0' = no signal, '1' = connected signal. Bit 6 works in the opposite way, on = '0', off = '1' (safe stop input). | |
| Bit 0 | Digital input term. 33 | |
| Bit 1 | Digital input term. 32 | |
| Bit 2 | Digital input term. 29 | |
| Bit 3 | Digital input term. 27 | |
| Bit 4 | Digital input term. 19 | |
| Bit 5 | Digital input term. 18 | |
| Bit 6 | Digital input term. 37 | |
| Bit 7 | Digital input GP I/O term. X30/4 | |
| Bit 8 | Digital input GP I/O term. X30/3 | |
| Bit 9 | Digital input GP I/O term. X30/2 | |
| Bit 10-63 | Reserved for future terminals | |

| 16-61 Terminal 53 Switch Setting | | |
|----------------------------------|--|--|
| Option: | Function: | |
| | View the setting of input terminal 53. Current = 0; Voltage = 1. | |
| [0] | Current | |
| [1] | Voltage | |
| [2] | Pt 1000 [°C] | |
| [3] | Pt 1000 [°F] | |
| [4] | Ni 1000 [°C] | |
| [5] | Ni 1000 [°F] | |

| 16-62 Analog Input 53 | | |
|-----------------------|---------------------|------------------------------------|
| Range: | Function: | |
| 0.000* | [-20.000 - 20.000] | View the actual value at input 53. |

| 16-63 Terminal 54 Switch Setting | | |
|----------------------------------|--|--|
| Option: | Function: | |
| | View the setting of input terminal 54. Current = 0; Voltage = 1. | |
| [0] | Current | |

| 16-63 Terminal 54 Switch Setting | | |
|----------------------------------|--------------|--|
| Option: | Function: | |
| [1] | Voltage | |
| [2] | Pt 1000 [°C] | |
| [3] | Pt 1000 [°F] | |
| [4] | Ni 1000 [°C] | |
| [5] | Ni 1000 [°F] | |

| 16-64 Analog Input 54 | | |
|-----------------------|---------------------|------------------------------------|
| Range: | Function: | |
| 0.000* | [-20.000 - 20.000] | View the actual value at input 54. |

| 16-65 Analog Output 42 [mA] | | |
|-----------------------------|-------------------|--|
| Range: | Function: | |
| 0.000* | [0.000 - 30.000] | View the actual value at output 42 in mA. The value shown reflects the selection in 6-50 Terminal 42 Output. |


| 16-66 Digital Output [bin] | | |
|----------------------------|-----------|---|
| Range: | Function: | |
| 0* | [0 - 15] | View the binary value of all digital outputs. |

| 16-67 Pulse Input #29 [Hz] | | |
|----------------------------|---------------|--|
| Range: | Function: | |
| 0 * | [0 - 130000] | View the actual frequency rate on terminal 29. |

| 16-68 Freq. Input #33 [Hz] | | |
|----------------------------|---------------|--|
| Range: | Function: | |
| 0* | [0 - 130000] | View the actual value of the frequency applied at terminal 33 as an impulse input. |

| 16-69 Pulse Output #27 [Hz] | | |
|-----------------------------|--------------|--|
| Range: | Function: | |
| 0* | [0 - 40000] | View the actual value of pulses applied to terminal 27 in digital output mode. |

| 16-70 Pulse Output #29 [Hz] | | |
|-----------------------------|--------------|--|
| Range: | Function: | |
| 0* | [0 - 40000] | View the actual value of pulses at terminal 29 in digital output mode. This parameter is available for FC 302 only. |
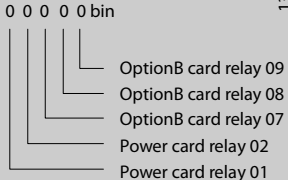
| 16-71 Relay Output [bin] | | |
|--------------------------|------------|--|
| Range: | Function: | |
| 0 * | [0 - 511] | View the settings of all relays. Readout choice (Par. 16-71): Relay output (bin): 0 0 0 0 bin  130BA195.10 |

| 16-72 Counter A | | |
|-----------------|-----------------------------|--|
| Range: | Function: | |
| 0* | [-2147483648 - 2147483647] | View the present value of Counter A. Counters are useful as comparator operands, see <i>13-10 Comparator Operand</i> . The value can be reset or changed either via digital inputs (parameter group 5-1*) or by using an SLC action (<i>13-52 SL Controller Action</i>). |

| 16-73 Counter B | | |
|-----------------|-----------------------------|--|
| Range: | Function: | |
| 0* | [-2147483648 - 2147483647] | View the present value of Counter B. Counters are useful as comparator operands (<i>13-10 Comparator Operand</i>). The value can be reset or changed either via digital inputs (parameter group 5-1*) or by using an SLC action (<i>13-52 SL Controller Action</i>). |

| 16-74 Prec. Stop Counter | | |
|--------------------------|-------------------|---|
| Range: | Function: | |
| 0* | [0 - 2147483647] | Returns the actual counter value of precise counter (<i>1-84 Precise Stop Counter Value</i>). |

| 16-75 Analog In X30/11 | | |
|------------------------|---------------------|---|
| Range: | Function: | |
| 0.000 * | [-20.000 - 20.000] | View the actual value at input X30/11 of MCB 101. |

| 16-76 Analog In X30/12 | | |
|------------------------|---------------------|---|
| Range: | Function: | |
| 0.000 * | [-20.000 - 20.000] | View the actual value at input X30/12 of MCB 101. |

| 16-77 Analog Out X30/8 [mA] | | |
|-----------------------------|-------------------|---|
| Range: | Function: | |
| 0.000 * | [0.000 - 30.000] | View the actual value at input X30/8 in mA. |

| 16-78 Analog Out X45/1 [mA] | | |
|-----------------------------|-------------------|--|
| Range: | Function: | |
| 0.000* | [0.000 - 30.000] | View the actual value at output X45/1. The value shown reflects the selection in <i>6-70 Terminal X45/1 Output</i> . |

| 16-79 Analog Out X45/3 [mA] | | |
|-----------------------------|-------------------|--|
| Range: | Function: | |
| 0.000* | [0.000 - 30.000] | View the actual value at output X45/3. The value shown reflects the selection in <i>6-80 Terminal X45/3 Output</i> . |

3.17.6 16-8* & FC Port

Parameters for reporting the BUS references and control words.

| 16-80 Fieldbus CTW 1 | | |
|----------------------|--------------|--|
| Range: | Function: | |
| 0 * | [0 - 65535] | View the two-byte Control word (CTW) received from the Bus-Master. Interpretation of the Control word depends on the option installed and the Control word profile selected in <i>8-10 Control Profile</i> . For more information please refer to the relevant manual. |

| 16-82 Fieldbus REF 1 | | |
|----------------------|---------------|--|
| Range: | Function: | |
| 0 * | [-200 - 200] | View the two-byte word sent with the control word from the Bus-Master to set the reference value. For more information please refer to the relevant fieldbus manual. |

| 16-84 Comm. Option STW | | |
|------------------------|--------------|---|
| Range: | Function: | |
| 0 * | [0 - 65535] | View the extended comm. option status word. For more information please refer to the relevant manual. |

| 16-85 FC Port CTW 1 | | |
|---------------------|--------------|--|
| Range: | Function: | |
| 0 * | [0 - 65535] | View the two-byte Control word (CTW) received from the Bus-Master. Interpretation of the control word depends on the option installed and the Control word profile selected in <i>8-10 Control Profile</i> . |

| 16-86 FC Port REF 1 | | |
|---------------------|---------------|---|
| Range: | Function: | |
| 0 * | [-200 - 200] | View the two-byte Status word (STW) sent to the Bus-Master. Interpretation of the Status word depends on the fieldbus option installed and the Control word profile selected in <i>8-10 Control Profile</i> . |

3.17.7 16-9* Diagnosis Read-Outs

| 16-90 Alarm Word | | |
|------------------|-------------------|---|
| Range: | Function: | |
| 0 * | [0 - 4294967295] | View the alarm word sent via the serial communication port in hex code. |

| 16-91 Alarm Word 2 | | |
|--------------------|-------------------|---|
| Range: | Function: | |
| 0* | [0 - 4294967295] | View the alarm word sent via the serial communication port in hex code. |

| 16-92 Warning Word | | |
|--------------------|-------------------|---|
| Range: | Function: | |
| 0 * | [0 - 4294967295] | View the warning word sent via the serial communication port in hex code. |

| 16-93 Warning Word 2 | | |
|----------------------|-------------------|---|
| Range: | Function: | |
| 0* | [0 - 4294967295] | View the warning word sent via the serial communication port in hex code. |

| 16-94 Ext. Status Word | | |
|------------------------|-------------------|---|
| Range: | Function: | |
| 0* | [0 - 4294967295] | Returns the extended warning word sent via the serial communication port in hex code. |

| 16-95 Ext. Status Word 2 | | |
|--------------------------|-------------------|---|
| Range: | Function: | |
| 0 * | [0 - 4294967295] | Returns the extended warning word 2 sent via the serial communication port in hex code. |

| 16-96 Maintenance Word | | |
|------------------------|-------------------|--|
| Range: | Function: | |
| 0 * | [0 - 4294967295] | |

3.18 Parameters: 17-** Motor Feedb. Option

Additional parameters to configure the Encoder (MCB 102) or the Resolver (MCB 103) Feedback Option.

3.18.1 17-1* Inc. Enc. Interface

Parameters in this group configure the incremental interface of the MCB 102 option. Note that both the incremental and absolute interfaces are active at the same time.

| 17-10 Signal Type | | |
|--|------------------|--|
| Select the incremental type (A/B channel) of the encoder in use. Find the information on the encoder data sheet. | | |
| Select <i>None</i> [0] if the feedback sensor is an absolute encoder only. This parameter cannot be adjusted while the motor is running. | | |
| Option: | Function: | |
| [0] | None | |
| [1] * | RS422 (5V TTL) | |
| [2] | Sinusoidal 1Vpp | |

| 17-11 Resolution (PPR) | | |
|------------------------|------------------|--|
| Range: | Function: | |
| 1024* | [10 - 10000] | Enter the resolution of the incremental track, i.e. the number of pulses or periods per revolution. This parameter cannot be adjusted while the motor is running. |

3.18.2 17-2* Abs. Enc. Interface

Parameters in this group configure the absolute interface of the MCB 102 option. Note that both the incremental and absolute interfaces are active at the same time.

| 17-20 Protocol Selection | | |
|--|------------------|--|
| Select <i>HIPERFACE</i> [1] if the encoder is absolute only. Select <i>None</i> [0] if the feedback sensor is an incremental encoder only. This parameter cannot be adjusted while the motor is running. | | |
| Option: | Function: | |
| [0] * | None | |
| [1] | HIPERFACE | |
| [2] | EnDat | |
| [4] | SSI | |

| 17-21 Resolution (Positions/Rev) | | |
|--|-------------------------|--|
| Select the resolution of the absolute encoder, i.e. the number of counts per revolution. This parameter cannot be adjusted while the motor is running. The value depends on setting in <i>17-20 Protocol Selection</i> . | | |
| Range: | Function: | |
| Application dependent* | [Application dependant] | |

| 17-24 SSI Data Length | | |
|-----------------------|------------------|--|
| Range: | Function: | |
| 13* | [13 - 25] | Set the number of bits for the SSI telegram. Choose 13 bits for single-turn encoders and 25 bits for multi-turn encoder. |

| 17-25 Clock Rate | | |
|------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Set the SSI clock rate. With long encoder cables the clock rate must be reduced. |

| 17-26 SSI Data Format | | |
|-----------------------|------------------|--|
| Option: | Function: | |
| [0] * | Gray code | |
| [1] | Binary code | Set the data format of the SSI data. Choose between Gray or Binary format. |

| 17-34 HIPERFACE Baudrate | | |
|--|------------------|--|
| Select the baud rate of the attached encoder. This parameter cannot be adjusted while the motor is running. The parameter is only accessible when <i>17-20 Protocol Selection</i> is set to HIPERFACE [1]. | | |
| Option: | Function: | |
| [0] | 600 | |
| [1] | 1200 | |
| [2] | 2400 | |
| [3] | 4800 | |
| [4] * | 9600 | |
| [5] | 19200 | |
| [6] | 38400 | |

3.18.3 17-5* Resolver Interface

Parameter group 17-5* is used for setting parameters for the MCB 103 Resolver Option.

Usually the resolver feedback is used as motor feedback from Permanent Magnet motors with *1-01 Motor Control Principle* set to Flux with motor feedback.

Resolver parameters cannot be adjusted while the motor is running.

| 17-50 Poles | | |
|---------------|------------------|---|
| Range: | Function: | |
| 2* | [2 - 2] | Set the number of poles on the resolver. The value is stated in the data sheet for resolvers. |

| 17-51 Input Voltage | | |
|---------------------|------------------|--|
| Range: | Function: | |
| 7.0 V* | [2.0 - 8.0 V] | Set the input voltage to the resolver. The voltage is stated as RMS value. The value is stated in the data sheet for resolvers |

| 17-52 Input Frequency | | |
|-----------------------|------------------|--|
| Range: | | Function: |
| 10.0 kHz* | [2.0 - 15.0 kHz] | Set the input frequency to the resolver. The value is stated in the data sheet for resolvers. |

| 17-53 Transformation Ratio | | |
|----------------------------|--------------|---|
| Range: | | Function: |
| 0.5* | [0.1 - 1.1] | Set the transformation ratio for the resolver. The transformation ration is: $T_{ratio} = \frac{V_{Out}}{V_{In}}$ The value is stated in the data sheet for resolvers. |

| 17-56 Encoder Sim. Resolution | | |
|--|----------|-----------|
| Set the resolution and activate the encoder emulation function (generation of encoder signals from the measured position from a resolver). Needed when necessary to transfer the speed or position information from one drive to another. To disable the function, select [0]. | | |
| Option: | | Function: |
| [0] * | Disabled | |
| [1] | 512 | |
| [2] | 1024 | |
| [3] | 2048 | |
| [4] | 4096 | |

| 17-59 Resolver Interface | | |
|---|----------|-----------|
| Activate the MCB 103 resolver option when the resolver parameters are selected. To avoid damage to resolvers 17-50 Poles – 17-53 Transformation Ratio must be adjusted before activating this parameter. | | |
| Option: | | Function: |
| [0] * | Disabled | |
| [1] | Enabled | |

3.18.4 17-6* Monitoring and Application

This parameter group is for selecting additional functions when MCB 102 Encoder option or MCB 103 Resolver option is fitted into option slot B as speed feedback. Monitoring and Application parameters cannot be adjusted while the motor is running.

| 17-60 Feedback Direction | | |
|---|-------------------|-----------|
| Change the detected encoder rotation direction without changing the wiring to the encoder. This parameter cannot be adjusted while the motor is running. | | |
| Option: | | Function: |
| [0] * | Clockwise | |
| [1] | Counter clockwise | |

| 17-61 Feedback Signal Monitoring | | |
|--|---------------------|-----------|
| Select which reaction the frequency converter should take in case a faulty encoder signal is detected. The encoder function in 17-61 Feedback Signal Monitoring is an electrical check of the hardware circuit in the encoder system. | | |
| Option: | | Function: |
| [0] | Disabled | |
| [1] * | Warning | |
| [2] | Trip | |
| [3] | Jog | |
| [4] | Freeze Output | |
| [5] | Max Speed | |
| [6] | Switch to Open Loop | |
| [7] | Select Setup 1 | |
| [8] | Select Setup 2 | |
| [9] | Select Setup 3 | |
| [10] | Select Setup 4 | |
| [11] | stop & trip | |

3.19 Parameters: 18-** Data Readouts 2

| 18-36 Analog Input X48/2 [mA] | | |
|-------------------------------|--|--|
| Range: | Function: | |
| 0.000* [-20.000 - 20.000] | View the actual current measured at input X48/2. | |

| 18-37 Temp. Input X48/4 | | |
|-------------------------|--|--|
| Range: | Function: | |
| 0* [-500 - 500] | View the actual temperature measured at input X48/4. The temperature unit is based on the selection in 35-00 Term. X48/4 Temp. Unit. | |

| 18-38 Temp. Input X48/7 | | |
|-------------------------|--|--|
| Range: | Function: | |
| 0* [-500 - 500] | View the actual temperature measured at input X48/7. The temperature unit is based on the selection in 35-02 Term. X48/7 Temp. Unit. | |

| 18-39 Temp. Input X48/10 | | |
|--------------------------|--|--|
| Range: | Function: | |
| 0* [-500 - 500] | View the actual temperature measured at input X48/10. The temperature unit is based on the selection in 35-04 Term. X48/10 Temp. Unit. | |

| 18-60 Digital Input 2 | | |
|-----------------------|---|--|
| Range: | Function: | |
| 0* [0 - 65535] | View the signal states from the active digital inputs. '0' = no signal, '1' = connected signal. | |

| 18-90 Process PID Error | | |
|---------------------------|-----------|--|
| Range: | Function: | |
| 0.0 %* [-200.0 - 200.0 %] | | |

| 18-91 Process PID Output | | |
|---------------------------|-----------|--|
| Range: | Function: | |
| 0.0 %* [-200.0 - 200.0 %] | | |


| 18-92 Process PID Clamped Output | | |
|----------------------------------|-----------|--|
| Range: | Function: | |
| 0.0 %* [-200.0 - 200.0 %] | | |

| 18-93 Process PID Gain Scaled Output | | |
|--------------------------------------|-----------|--|
| Range: | Function: | |
| 0.0 %* [-200.0 - 200.0 %] | | |

3.20 Parameters: 30-** Special Features

3.20.1 30-0* Wobble Function

The wobble function is primarily used for synthetic yarn winding applications. The wobble option is to be installed in the frequency converter controlling the traverse drive. The traverse drive frequency converter will move the yarn back and forth in a diamond pattern across the surface of the yarn package. To prevent a buildup of yarn at the same points at the surface, this pattern must be altered. The wobble option can accomplish this by continuously varying the traverse velocity in a programmable cycle. The wobble function is created by superimposing a delta frequency around a center frequency. To compensate for the inertia in the system a quick frequency jump can be included. Especially suitable for elastic yarn applications the option features a randomized wobble ratio.

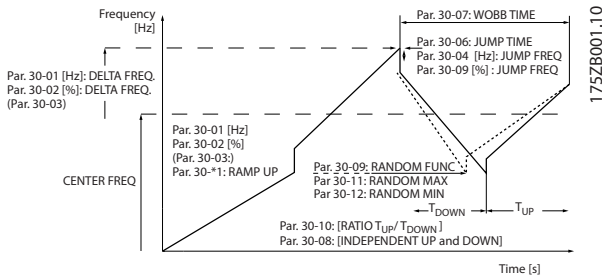

| 30-00 Wobble Mode | | |
|-------------------|---|--|
| Option: | Function: | |
| | The standard speed open loop mode in 1-00 Configuration Mode is extended with a wobble function. In this parameter it is possible to select which method to be used for the wobbler. The parameters can be set as absolute values (direct frequencies) or as relative values (percentage of other parameter). The wobble cycle time can be set as an absolute alue or as independent up- and down times. When using an absolute cycle time, the up- and down times are configured through the wobble ratio. | |
| [0] * | Abs. Freq., Abs. Time | |
| [1] | Abs. Freq., Up/ Down Time | |
| [2] | Rel. Freq., Abs. Time | |
| [3] | Rel. Freq., Up/ Down Time | |

NOTE

This parameter cannot be set while running.

NOTE

The setting of "Center Frequency" takes place via the normal reference handling parameter group, 3-1*

3

| 30-01 Wobble Delta Frequency [Hz] | | |
|-----------------------------------|--------------------|---|
| Range: | Function: | |
| 5.0 Hz* | [0.0 - 25.0 Hz] | The delta frequency is determining the magnitude of the wobble frequency. The delta frequency is superimposed on the center frequency. 30-01 Wobble Delta Frequency [Hz] is selecting both the positive and negative delta frequency. The setting of 30-01 Wobble Delta Frequency [Hz] must thus not be higher than the setting of the center frequency. The initial ramp up time from standstill until the wobble sequence is running is determined by parameter group 3-1*. |

| 30-02 Wobble Delta Frequency [%] | | |
|----------------------------------|-------------|--|
| Range: | Function: | |
| 25 %* | [0 - 100 %] | The delta frequency can also be expressed as percentage of the center frequency and can thus be maximum 100%. The function is the same as for 30-01 Wobble Delta Frequency [Hz]. |

| 30-03 Wobble Delta Freq. Scaling Resource | | |
|---|---|-------------|
| Option: | Function: | |
| | Select which drive input should be used to scale the delta frequency setting. | |
| [0] * | No function | |
| [1] | Analog input 53 | |
| [2] | Analog input 54 | |
| [3] | Frequency input 29 | FC 302 only |
| [4] | Frequency input 33 | |
| [7] | Analog input X30/11 | |
| [8] | Analog input X30/12 | |
| [15] | Analog Input X48/2 | |

| 30-04 Wobble Jump Frequency [Hz] | | |
|----------------------------------|----------------------------|--|
| Range: | Function: | |
| 0.0 Hz* | [Application dependant] | The jump frequency is used to compensate for the inertia in the traverse system. If a jump in the output frequency is required in the top and in the bottom of the wobble sequence, the frequency jump is set in this parameter. If the traverse system has a very high inertia a high jump frequency may create a torque limit warning or trip (warning/alarm 12) or an over voltage warning or trip (warning/alarm 7). This parameter can only be changed in stop-mode |

| 30-05 Wobble Jump Frequency [%] | | |
|---------------------------------|-------------|---|
| Range: | | Function: |
| 0 %* | [0 - 100 %] | The jump frequency can also be expressed as percentage of the center frequency. The function is the same as for 30-04 Wobble Jump Frequency [Hz]. |

| 30-06 Wobble Jump Time | | |
|------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | This parameter determines the slope of the jump ramp at the max. and min. wobble frequency. |

| 30-07 Wobble Sequence Time | | |
|----------------------------|------------------|---|
| Range: | | Function: |
| 10.0 s* | [1.0 - 1000.0 s] | This parameter determines the wobble sequence period. This parameter can only be changed in stop-mode. Wobble time = $t_{up} + t_{down}$ |

| 30-08 Wobble Up/ Down Time | | |
|----------------------------|------------------|--|
| Range: | | Function: |
| 5.0 s* | [0.1 - 1000.0 s] | Defines the individual up- and down times for each wobble cycle. |

| 30-09 Wobble Random Function | | |
|------------------------------|-----|-----------|
| Option: | | Function: |
| [0] * | Off | |
| [1] | On | |

| 30-10 Wobble Ratio | | |
|--------------------|---------------|---|
| Range: | | Function: |
| 1.0* | [0.1 - 10.0] | If the ratio 0.1 is selected: t_{down} is 10 times greater than t_{up} . If the ratio 10 is selected: t_{up} is 10 times greater than t_{down} . |

| 30-11 Wobble Random Ratio Max. | | |
|--------------------------------|-------------------------|---|
| Range: | | Function: |
| 10.0* | [Application dependant] | Enter the maximum allowed wobble ratio. |

| 30-12 Wobble Random Ratio Min. | | |
|--------------------------------|-------------------------|---|
| Range: | | Function: |
| 0.1* | [Application dependant] | Enter the minimum allowed wobble ratio. |

| 30-19 Wobble Delta Freq. Scaled | | |
|---------------------------------|-------------------|---|
| Range: | | Function: |
| 0.0 Hz* | [0.0 - 1000.0 Hz] | Readout parameter. View the actual wobble delta frequency after scaling has been applied. |

3.20.2 30-2* Adv. Start Adjust

| 30-20 High Starting Torque Time [s] | | |
|-------------------------------------|------------------|--|
| Range: | | Function: |
| 0.00 s* | [0.00 - 60.00 s] | High starting torque time for PM-Motor in Flux mode without feedback. This parameter is available for FC 302 only. |

| 30-21 High Starting Torque Current [%] | | |
|--|-------------------------|---|
| Range: | | Function: |
| 100.0 %* | [Application dependant] | High starting torque current for PM-Motor in Flux mode without feedback. This parameter is available for FC 302 only. |

| 30-22 Locked Rotor Protection | | |
|--|-----|-----------|
| Locked Rotor Protection for PM-Motor in Flux mode without feedback. This parameter is available for FC 302 only. | | |
| Option: | | Function: |
| [0] * | Off | |
| [1] | On | |

| 30-23 Locked Rotor Detection Time [s] | | |
|--|-----------------|-----------|
| Locked Rotor Detection Time for PM-Motor in Flux mode without feedback. This parameter is available for FC 302 only. | | |
| Range: | | Function: |
| 0.10 s* | [0.05 - 1.00 s] | |

3.20.3 30-8* Compatibility

| 30-80 d-axis Inductance (Ld) | | |
|------------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the value of the d-axis inductance. Obtain the value from the permanent magnet motor data sheet. The d-axis inductance cannot be found by performing an AMA. |

| 30-81 Brake Resistor (ohm) | | |
|----------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Set the brake resistor value in Ohms. This value is used for monitoring the power to the brake resistor in 2-13 Brake Power Monitoring. This parameter is only active in drives with an integral dynamic brake. |

| 30-83 Speed PID Proportional Gain | | |
|-----------------------------------|--------------------|--|
| Range: | | Function: |
| Application dependent* | [0.0000 - 1.0000] | Enter the speed controller proportional gain. Quick control is obtained at high amplifi- |

| 30-83 Speed PID Proportional Gain | | |
|-----------------------------------|--|---|
| Range: | | Function: |
| | | cation. However if amplification is too great, the process may become unstable. |

| 30-84 Process PID Proportional Gain | | |
|-------------------------------------|-------------------|--|
| Range: | | Function: |
| 0.100* | [0.000 - 10.000] | Enter the process controller proportional gain. Quick control is obtained at high amplification. However if amplification is too great, the process may become unstable. |

3.21 Parameters: 35-** Sensor Input Option

3.21.1 35-0* Temp. Input Mode (MCB 114)

| 35-00 Term. X48/4 Temp. Unit | | |
|--|------------------|--|
| Select the unit to be used with temperature input X48/4 settings and readouts: | | |
| Option: | Function: | |
| [60] * | °C | |
| [160] | °F | |

| 35-01 Term. X48/4 Input Type | | |
|---|------------------|--|
| View the temperature sensor type detected at input X48/4: | | |
| Option: | Function: | |
| [0] * | Not Connected | |
| [1] | PT100 2-wire | |
| [3] | PT1000 2-wire | |
| [5] | PT100 3-wire | |
| [7] | PT1000 3-wire | |

| 35-02 Term. X48/7 Temp. Unit | | |
|--|------------------|--|
| Select the unit to be used with temperature input X48/7 settings and readouts: | | |
| Option: | Function: | |
| [60] * | °C | |
| [160] | °F | |

| 35-03 Term. X48/7 Input Type | | |
|---|------------------|--|
| View the temperature sensor type detected at input X48/7: | | |
| Option: | Function: | |
| [0] * | Not Connected | |
| [1] | PT100 2-wire | |
| [3] | PT1000 2-wire | |
| [5] | PT100 3-wire | |
| [7] | PT1000 3-wire | |

| 35-04 Term. X48/10 Temp. Unit | | |
|---|------------------|--|
| Select the unit to be used with temperature input X48/10 settings and readouts: | | |
| Option: | Function: | |
| [60] * | °C | |
| [160] | °F | |

| 35-05 Term. X48/10 Input Type | | |
|--|------------------|--|
| View the temperature sensor type detected at input X48/10: | | |
| Option: | Function: | |
| [0] * | Not Connected | |
| [1] | PT100 2-wire | |
| [3] | PT1000 2-wire | |
| [5] | PT100 3-wire | |
| [7] | PT1000 3-wire | |

| 35-06 Temperature Sensor Alarm Function | | |
|---|------------------|--|
| Select the alarm function: | | |
| Option: | Function: | |
| [0] | Off | |
| [2] | Stop | |
| [5] * | Stop and trip | |

3.21.2 35-1* Temp. Input X48/4 (MCB 114)

| 35-14 Term. X48/4 Filter Time Constant | | |
|--|--------------------|---|
| Range: | Function: | |
| 0.001 s* | [0.001 - 10.000 s] | Enter the filter time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal X48/4. A high time constant value improves dampening but also increases the time delay through the filter. |

| 35-15 Term. X48/4 Temp. Monitor | | |
|--|------------------|--|
| This parameter gives the possibility of enabling or disabling the temperature monitor for terminal X48/4. The temperature limits can be set in 35-16 Term. X48/4 Low Temp. Limit and 35-17 Term. X48/4 High Temp. Limit. | | |
| Option: | Function: | |
| [0] * | Disabled | |
| [1] | Enabled | |

| 35-16 Term. X48/4 Low Temp. Limit | | |
|-----------------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the minimum temperature reading that is expected for normal operation of the temperature sensor at terminal X48/4. |

| 35-17 Term. X48/4 High Temp. Limit | | |
|------------------------------------|-------------------------|--|
| Range: | Function: | |
| Application dependent* | [Application dependant] | Enter the maximum temperature reading that is expected for normal operation of the temperature sensor at terminal X48/4. |

3.21.3 35-2* Temp. Input X48/7 (MCB 114)

| 35-24 Term. X48/7 Filter Time Constant | | |
|--|--------------------|---|
| Range: | | Function: |
| 0.001 s* | [0.001 - 10.000 s] | Enter the filter time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal X48/7. A high time constant value improves dampening but also increases the time delay through the filter. |

| 35-25 Term. X48/7 Temp. Monitor | | |
|--|----------|-----------|
| This parameter gives the possibility of enabling or disabling the temperature monitor for terminal X48/7. The temperature limits can be set in 35-26 Term. X48/7 Low Temp. Limit and 35-27 Term. X48/7 High Temp. Limit. | | |
| Option: | | Function: |
| [0] * | Disabled | |
| [1] | Enabled | |

| 35-26 Term. X48/7 Low Temp. Limit | | |
|-----------------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the minimum temperature reading that is expected for normal operation of the temperature sensor at terminal X48/7. |

| 35-27 Term. X48/7 High Temp. Limit | | |
|------------------------------------|-------------------------|--|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the maximum temperature reading that is expected for normal operation of the temperature sensor at terminal X48/7. |

3.21.4 35-3* Temp. Input X48/10 (MCB 114)

| 35-34 Term. X48/10 Filter Time Constant | | |
|---|--------------------|--|
| Range: | | Function: |
| 0.001 s* | [0.001 - 10.000 s] | Enter the filter time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal X48/10. A high time constant value improves dampening but also increases the time delay through the filter. |

| 35-35 Term. X48/10 Temp. Monitor | | |
|---|----------|-----------|
| This parameter gives the possibility of enabling or disabling the temperature monitor for terminal X48/10. The temperature limits can be set in 35-36 Term. X48/10 Low Temp. Limit/35-37 Term. X48/10 High Temp. Limit. | | |
| Option: | | Function: |
| [0] * | Disabled | |
| [1] | Enabled | |

| 35-36 Term. X48/10 Low Temp. Limit | | |
|------------------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the minimum temperature reading that is expected for normal operation of the temperature sensor at terminal X48/10. |

| 35-37 Term. X48/10 High Temp. Limit | | |
|-------------------------------------|-------------------------|---|
| Range: | | Function: |
| Application dependent* | [Application dependant] | Enter the maximum temperature reading that is expected for normal operation of the temperature sensor at terminal X48/10. |

3.21.5 35-4* Analog Input X48/2 (MCB 114)

| 35-42 Term. X48/2 Low Current | | |
|-------------------------------|-------------------------|---|
| Range: | | Function: |
| 4.00 mA* | [Application dependant] | Enter the current (mA) that corresponds to the low reference value, set in 35-44 Term. X48/2 Low Ref./Feedb. Value. The value must be set at > 2mA in order to activate the Live Zero Time-out Function in 6-01 Live Zero Timeout Function. |

| 35-43 Term. X48/2 High Current | | |
|--------------------------------|-------------------------|--|
| Range: | | Function: |
| 20.00 mA* | [Application dependant] | Enter the current (mA) that corresponds to the high reference value (set in 35-45 Term. X48/2 High Ref./Feedb. Value). |

| 35-44 Term. X48/2 Low Ref./Feedb. Value | | |
|---|-----------------------------|--|
| Range: | | Function: |
| 0.000* | [-999999.999 - 999999.999] | Enter the reference or feedback value (in RPM, Hz, bar, etc.) that corresponds to the voltage or current set in 35-42 Term. X48/2 Low Current. |

| 35-45 Term. X48/2 High Ref./Feedb. Value | | |
|--|--------------------------------|---|
| Range: | | Function: |
| 100.000* | [-999999.999 - 999999.999] | Enter the reference or feedback value (in RPM, Hz, bar, etc.) that corresponds to the voltage or current set in 35-43 Term. X48/2 High Current. |

| 35-46 Term. X48/2 Filter Time Constant | | |
|--|-----------------------|---|
| Range: | | Function: |
| 0.001 s* | [0.001 - 10.000 s] | Enter the filter time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal X48/2. A high time constant value improves dampening but also increases the time delay through the filter. |

4 Parameter Lists

FC Series

All = valid for FC 301 and FC 302 series

01 = valid for FC 301 only

02 = valid for FC 302 only

Changes during operation

"TRUE" means that the parameter can be changed while the frequency converter is in operation and "FALSE" means that the frequency converter must be stopped before a change can be made.

4-Set-up

'All set-ups': the parameter can be set individually in each of the four set-ups, i. e. one single parameter can have four different data values.

'1 set-up': data value will be the same in all set-ups.

| Data type | Description | Type |
|-----------|--------------------------------------|--------|
| 2 | Integer 8 | Int8 |
| 3 | Integer 16 | Int16 |
| 4 | Integer 32 | Int32 |
| 5 | Unsigned 8 | UInt8 |
| 6 | Unsigned 16 | UInt16 |
| 7 | Unsigned 32 | UInt32 |
| 9 | Visible String | VisStr |
| 33 | Normalized value 2 bytes | N2 |
| 35 | Bit sequence of 16 boolean variables | V2 |
| 54 | Time difference w/o date | TimD |

| Conversion index | Conversion factor |
|------------------|-------------------|
| 100 | |
| 75 | |
| 74 | |
| 67 | |
| 6 | 1000000 |
| 5 | 100000 |
| 4 | 10000 |
| 3 | 1000 |
| 2 | 100 |
| 1 | 10 |
| 0 | 1 |
| -1 | 0.1 |
| -2 | 0.01 |
| -3 | 0.001 |
| -4 | 0.0001 |
| -5 | 0.00001 |
| -6 | 0.000001 |
| -7 | 0.0000001 |

Table 4.1 Conversion table

4.1.1 Conversion

The various attributes of each parameter are displayed in the section Factory Settings. Parameter values are transferred as whole numbers only. Conversion factors are therefore used to transfer decimals.

4-12 Motor Speed Low Limit [Hz] has a conversion factor of 0.1.

To preset the minimum frequency to 10 Hz, transfer the value 100. A conversion factor of 0.1 means that the value transferred is multiplied by 0.1. The value 100 is thus perceived as 10.0.

Examples:

0s --> conversion index 0

0.00s --> conversion index -2

0ms --> conversion index -3

0.00ms --> conversion index -5

4.1.2 Active/Inactive Parameters in Different Drive Control Modes

+ = active

- = not active

| 1-10 Motor Construction | AC motor | | | | PM Non salient Motor | | |
|--|----------|--------------|----------------|------------------|----------------------|----------------|------------------|
| | U/f mode | VVC+ | Flux open loop | Flux closed loop | U/f mode | Flux open loop | Flux closed loop |
| <i>1-00 Configuration Mode</i> | | | | | | | |
| [0] Speed Open Loop | + | + | + | - | | | |
| [1] Speed Closed Loop | - | + | - | + | | | |
| [2] Torque | - | - | - | + | | | |
| [3] Process | + | + | + | - | | | |
| [4] Torque Open Loop | - | + | - | - | | | |
| [5] Wobble | + | + | + | + | | | |
| [6] Surface Winder | + | + | + | - | | | |
| [7] Ext. PID Open Loop | + | + | + | - | | | |
| [8] Ext. PID Closed Loop | - | + | - | + | | | |
| <i>1-02 Flux Motor Feedback Source</i> | | | | | | | |
| | - | - | - | + | | | |
| <i>1-03 Torque Characteristics</i> | | | | | | | |
| | - | + | + | + | | | |
| | | see 1, 2, 3) | see 1, 3, 4) | see 1, 3, 4) | | | |
| <i>1-04 Overload Mode</i> | | | | | | | |
| | + | + | + | + | + | + | + |
| <i>1-05 Local Mode Configuration</i> | | | | | | | |
| | + | + | + | + | + | + | + |
| <i>1-06 Clockwise Direction</i> | | | | | | | |
| | + | + | + | + | + | + | + |
| <i>1-20 Motor Power [kW]</i> (Par. 023 = International) | | | | | | | |
| | + | + | + | + | | | |
| <i>1-21 Motor Power [HP]</i> (Par. 023 = US) | | | | | | | |
| | + | + | + | + | | | |
| <i>1-22 Motor Voltage</i> | | | | | | | |
| | + | + | + | + | | | |
| <i>1-23 Motor Frequency</i> | | | | | | | |
| | + | + | + | + | | | |
| <i>1-24 Motor Current</i> | | | | | | | |
| | + | + | + | + | | | |
| <i>1-25 Motor Nominal Speed</i> | | | | | | | |
| | + | + | + | + | | | |
| <i>1-26 Motor Cont. Rated Torque</i> | | | | | | | |
| | - | - | - | - | + | + | + |
| <i>1-29 Automatic Motor Adaptation (AMA)</i> | | | | | | | |
| | + | + | + | + | | | |
| <i>1-30 Stator Resistance (Rs)</i> | | | | | | | |
| | + | + | + | + | + | | |
| <i>1-31 Rotor Resistance (Rr)</i> | | | | | | | |
| | - | + | + | + | | | |
| | | see 5) | | | | | |
| <i>1-33 Stator Leakage Reactance (X1)</i> | | | | | | | |
| | + | + | + | + | + | | |
| <i>1-34 Rotor Leakage Reactance (X2)</i> | | | | | | | |
| | - | + | + | + | | | |
| | | see 5) | | | | | |
| <i>1-35 Main Reactance (Xh)</i> | | | | | | | |
| | + | + | + | + | + | | |
| <i>1-36 Iron Loss Resistance (Rfe)</i> | | | | | | | |
| | - | - | + | + | - | - | - |
| <i>1-37 d-axis Inductance (Ld)</i> | | | | | | | |
| | - | - | - | - | | + | + |
| <i>1-39 Motor Poles</i> | | | | | | | |
| | + | + | + | + | | | |
| <i>1-40 Back EMF at 1000 RPM</i> | | | | | | | |
| | - | - | - | - | + | + | + |
| <i>1-41 Motor Angle Offset</i> | | | | | | | |
| | - | - | - | - | | | + |

- 1) Constant torque
- 2) Variable torque
- 3) AEO
- 4) Constant power
- 5) Used in flystart

| 1-10 Motor Construction | AC motor | | | | PM Non salient Motor | | |
|---|----------|----------|----------------|------------------|----------------------|----------------|------------------|
| 1-01 Motor Control Principle | U/f mode | VVC+ | Flux open loop | Flux closed loop | U/f mode | Flux open loop | Flux closed loop |
| 1-50 Motor Magnetisation at Zero Speed | - | + | - | - | - | - | - |
| 1-51 Min Speed Normal Magnetising [RPM](Par. 002 = rmp) | - | + | - | - | - | - | - |
| 1-52 Min Speed Normal Magnetising [Hz](Par. 002 = Hz) | - | + | - | - | - | - | - |
| 1-53 Model Shift Frequency | - | - | + | + | - | + | + |
| 1-54 Voltage reduction in fieldweakening | - | - | + see 6) | + | - | - | - |
| 1-55 U/f Characteristic - U | + | - | - | - | + | - | - |
| 1-56 U/f Characteristic - F | + | - | - | - | + | - | - |
| 1-58 Flystart Test Pulses Current | - | + | - | - | - | - | - |
| 1-59 Flystart Test Pulses Frequency | - | + | - | - | - | - | - |
| 1-60 Low Speed Load Compensation | - | + | - | - | - | - | - |
| 1-61 High Speed Load Compensation | - | + | - | - | - | - | - |
| 1-62 Slip Compensation | - | + see 7) | + | - | - | - | - |
| 1-63 Slip Compensation Time Constant | + see 8) | + | + see 8) | - | + see 8) | + see 8) | - |
| 1-64 Resonance Dampening | + | + | + | - | + | + | - |
| 1-65 Resonance Dampening Time Constant | + | + | + | - | + | + | - |
| 1-66 Min. Current at Low Speed | - | - | + | + | - | + | + |
| 1-67 Load Type | - | - | + | - | - | - | - |
| 1-68 Minimum Inertia | - | - | + | - | - | - | - |
| 1-69 Maximum Inertia | - | - | + | - | - | - | - |
| 1-71 Start Delay | + | + | + | + | + | + | + |
| 1-72 Start Function | + | + | + | + | + | + | + |
| 1-73 Flying Start | - | + | + | + | - | - | - |
| 1-74 Start Speed [RPM](Par. 002 = rmp) | - | + | - | - | - | - | - |
| 1-75 Start Speed [Hz](Par. 002 = Hz) | - | + | - | - | - | - | - |
| 1-76 Start Current | - | + | - | - | - | - | - |

6) Used when 1-03 Torque Characteristics is constant power

7) Not used when 1-03 Torque Characteristics = VT

8) Part of resonance damping

| 1-10 Motor Construction | AC motor | | | | PM Non salient Motor | | |
|---|----------|------|----------------|------------------|----------------------|----------------|------------------|
| 1-01 Motor Control Principle | U/f mode | VVC+ | Flux open loop | Flux closed loop | U/f mode | Flux open loop | Flux closed loop |
| 1-80 Function at Stop | + | + | + | + | + | + | + |
| 1-81 Min Speed for Function at Stop [RPM] (Par. 002 = rpm) | + | + | + | + | + | + | + |
| 1-82 Min Speed for Function at Stop [Hz] (Par. 002 = Hz) | + | + | + | + | + | + | + |
| 1-83 Precise Stop Function | + | + | + | + | + | + | + |
| 1-84 Precise Stop Counter Value | + | + | + | + | + | + | + |
| 1-85 Precise Stop Speed Compensation Delay | + | + | + | + | + | + | + |
| 1-90 Motor Thermal Protection | + | + | + | + | | | |
| 1-91 Motor External Fan | + | + | + | + | | | |
| 1-93 Thermistor Resource | + | + | + | + | | | |
| 1-95 KTY Sensor Type | + | + | + | + | | | |
| 1-96 KTY Thermistor Resource | + | + | + | + | | | |
| 1-97 KTY Threshold level | + | + | + | + | | | |
| 2-00 DC Hold Current | + | + | + | + | | | |
| 2-01 DC Brake Current | + | + | + | + | | | |
| 2-02 DC Braking Time | + | + | + | + | | | |
| 2-03 DC Brake Cut In Speed [RPM] | + | + | + | + | | | |
| 2-04 DC Brake Cut In Speed [Hz] | + | + | + | + | | | |
| 2-05 Maximum Reference | + | + | + | + | | | |
| 2-10 Brake Function | + | + | + | + | | | |
| | see 9) | | | | | | |
| 2-11 Brake Resistor (ohm) | + | + | + | + | | | |
| 2-12 Brake Power Limit (kW) | + | + | + | + | | | |
| 2-13 Brake Power Monitoring | + | + | + | + | | | |
| 2-15 Brake Check | + | + | + | + | | | |
| | see 9) | | | | | | |
| 2-16 AC brake Max. Current | - | + | + | + | | | |
| 2-17 Over-voltage Control | + | + | + | + | | | |
| 2-18 Brake Check Condition | + | + | + | + | | | |
| 2-19 Over-voltage Gain | + | + | + | - | | | |
| 2-20 Release Brake Current | + | + | + | + | | | |
| 2-21 Activate Brake Speed [RPM] | + | + | + | + | | | |
| 2-22 Activate Brake Speed [Hz] | + | + | + | + | | | |
| 2-23 Activate Brake Delay | + | + | + | + | | | |
| 2-24 Stop Delay | - | - | - | + | | | |
| 2-25 Brake Release Time | - | - | - | + | | | |
| 2-26 Torque Ref | - | - | - | + | | | |
| 2-27 Torque Ramp Time | - | - | - | + | | | |
| 2-28 Gain Boost Factor | - | - | - | + | | | |

9) Not AC brake

4.1.3 0-** Operation/Display

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|--------------------------------|------------------------------------|--------------------------|-------------|-------------|-------------------------|------------------|------------|
| 0-0* Basic Settings | | | | | | | |
| 0-01 | Language | [0] English | 1 set-up | | TRUE | - | UInt8 |
| 0-02 | Motor Speed Unit | [0] RPM | 2 set-ups | | FALSE | - | UInt8 |
| 0-03 | Regional Settings | [0] International | 2 set-ups | | FALSE | - | UInt8 |
| 0-04 | Operating State at Power-up (Hand) | [1] Forced stop, ref=old | All set-ups | | TRUE | - | UInt8 |
| 0-09 | Performance Monitor | 0.0 % | All set-ups | | TRUE | -1 | UInt16 |
| 0-1* Set-up Operations | | | | | | | |
| 0-10 | Active Set-up | [1] Set-up 1 | 1 set-up | | TRUE | - | UInt8 |
| 0-11 | Edit Set-up | [1] Set-up 1 | All set-ups | | TRUE | - | UInt8 |
| 0-12 | This Set-up Linked to | [0] Not linked | All set-ups | | FALSE | - | UInt8 |
| 0-13 | Readout: Linked Set-ups | 0 N/A | All set-ups | | FALSE | 0 | UInt16 |
| 0-14 | Readout: Edit Set-ups / Channel | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 0-15 | Readout: actual setup | 0 N/A | All set-ups | | FALSE | 0 | UInt8 |
| 0-2* LCP Display | | | | | | | |
| 0-20 | Display Line 1.1 Small | 1617 | All set-ups | | TRUE | - | UInt16 |
| 0-21 | Display Line 1.2 Small | 1614 | All set-ups | | TRUE | - | UInt16 |
| 0-22 | Display Line 1.3 Small | 1610 | All set-ups | | TRUE | - | UInt16 |
| 0-23 | Display Line 2 Large | 1613 | All set-ups | | TRUE | - | UInt16 |
| 0-24 | Display Line 3 Large | 1602 | All set-ups | | TRUE | - | UInt16 |
| 0-25 | My Personal Menu | App.Dependent | 1 set-up | | TRUE | 0 | UInt16 |
| 0-3* LCP Custom Readout | | | | | | | |
| 0-30 | Unit for User-defined Readout | [0] None | All set-ups | | TRUE | - | UInt8 |
| 0-31 | Min Value of User-defined Readout | 0.00 CustomReadoutUnit | All set-ups | | TRUE | -2 | Int32 |
| 0-32 | Max Value of User-defined Readout | 100.00 CustomReadoutUnit | All set-ups | | TRUE | -2 | Int32 |
| 0-37 | Display Text 1 | 0 N/A | 1 set-up | | TRUE | 0 | VisStr[25] |
| 0-38 | Display Text 2 | 0 N/A | 1 set-up | | TRUE | 0 | VisStr[25] |
| 0-39 | Display Text 3 | 0 N/A | 1 set-up | | TRUE | 0 | VisStr[25] |
| 0-4* LCP Keypad | | | | | | | |
| 0-40 | [Hand on] Key on LCP | null | All set-ups | | TRUE | - | UInt8 |
| 0-41 | [Off] Key on LCP | null | All set-ups | | TRUE | - | UInt8 |
| 0-42 | [Auto on] Key on LCP | null | All set-ups | | TRUE | - | UInt8 |
| 0-43 | [Reset] Key on LCP | null | All set-ups | | TRUE | - | UInt8 |
| 0-44 | [Off/Reset] Key on LCP | null | All set-ups | | TRUE | - | UInt8 |
| 0-45 | [Drive Bypass] Key on LCP | null | All set-ups | | TRUE | - | UInt8 |
| 0-5* Copy/Save | | | | | | | |
| 0-50 | LCP Copy | [0] No copy | All set-ups | | FALSE | - | UInt8 |
| 0-51 | Set-up Copy | [0] No copy | All set-ups | | FALSE | - | UInt8 |
| 0-6* Password | | | | | | | |
| 0-60 | Main Menu Password | 100 N/A | 1 set-up | | TRUE | 0 | Int16 |
| 0-61 | Access to Main Menu w/o Password | [0] Full access | 1 set-up | | TRUE | - | UInt8 |
| 0-65 | Quick Menu Password | 200 N/A | 1 set-up | | TRUE | 0 | Int16 |
| 0-66 | Access to Quick Menu w/o Password | [0] Full access | 1 set-up | | TRUE | - | UInt8 |
| 0-67 | Bus Password Access | 0 N/A | All set-ups | | TRUE | 0 | UInt16 |

4.1.4 1-** Load/Motor

4

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|---------------------------------|-------------------------------------|----------------------|-------------|-------------|-------------------------|------------------|--------|
| 1-0* General Settings | | | | | | | |
| 1-00 | Configuration Mode | null | All set-ups | | TRUE | - | Uint8 |
| 1-01 | Motor Control Principle | null | All set-ups | | FALSE | - | Uint8 |
| 1-02 | Flux Motor Feedback Source | [1] 24V encoder | All set-ups | | FALSE | - | Uint8 |
| 1-03 | Torque Characteristics | [0] Constant torque | All set-ups | x | TRUE | - | Uint8 |
| 1-04 | Overload Mode | [0] High torque | All set-ups | | FALSE | - | Uint8 |
| 1-05 | Local Mode Configuration | [2] As mode par 1-00 | All set-ups | | TRUE | - | Uint8 |
| 1-06 | Clockwise Direction | [0] Normal | All set-ups | | FALSE | - | Uint8 |
| 1-1* Motor Selection | | | | | | | |
| 1-10 | Motor Construction | [0] Asynchron | All set-ups | | FALSE | - | Uint8 |
| 1-2* Motor Data | | | | | | | |
| 1-20 | Motor Power [kW] | App.Dependent | All set-ups | | FALSE | 1 | Uint32 |
| 1-21 | Motor Power [HP] | App.Dependent | All set-ups | | FALSE | -2 | Uint32 |
| 1-22 | Motor Voltage | App.Dependent | All set-ups | | FALSE | 0 | Uint16 |
| 1-23 | Motor Frequency | App.Dependent | All set-ups | | FALSE | 0 | Uint16 |
| 1-24 | Motor Current | App.Dependent | All set-ups | | FALSE | -2 | Uint32 |
| 1-25 | Motor Nominal Speed | App.Dependent | All set-ups | | FALSE | 67 | Uint16 |
| 1-26 | Motor Cont. Rated Torque | App.Dependent | All set-ups | | FALSE | -1 | Uint32 |
| 1-29 | Automatic Motor Adaptation (AMA) | [0] Off | All set-ups | | FALSE | - | Uint8 |
| 1-3* Adv. Motor Data | | | | | | | |
| 1-30 | Stator Resistance (Rs) | App.Dependent | All set-ups | | FALSE | -4 | Uint32 |
| 1-31 | Rotor Resistance (Rr) | App.Dependent | All set-ups | | FALSE | -4 | Uint32 |
| 1-33 | Stator Leakage Reactance (X1) | App.Dependent | All set-ups | | FALSE | -4 | Uint32 |
| 1-34 | Rotor Leakage Reactance (X2) | App.Dependent | All set-ups | | FALSE | -4 | Uint32 |
| 1-35 | Main Reactance (Xh) | App.Dependent | All set-ups | | FALSE | -4 | Uint32 |
| 1-36 | Iron Loss Resistance (Rfe) | App.Dependent | All set-ups | | FALSE | -3 | Uint32 |
| 1-37 | d-axis Inductance (Ld) | App.Dependent | All set-ups | x | FALSE | -4 | Int32 |
| 1-39 | Motor Poles | App.Dependent | All set-ups | | FALSE | 0 | Uint8 |
| 1-40 | Back EMF at 1000 RPM | App.Dependent | All set-ups | x | FALSE | 0 | Uint16 |
| 1-41 | Motor Angle Offset | 0 N/A | All set-ups | | FALSE | 0 | Int16 |
| 1-5* Load Indep. Setting | | | | | | | |
| 1-50 | Motor Magnetisation at Zero Speed | 100 % | All set-ups | | TRUE | 0 | Uint16 |
| 1-51 | Min Speed Normal Magnetising [RPM] | App.Dependent | All set-ups | | TRUE | 67 | Uint16 |
| 1-52 | Min Speed Normal Magnetising [Hz] | App.Dependent | All set-ups | | TRUE | -1 | Uint16 |
| 1-53 | Model Shift Frequency | App.Dependent | All set-ups | x | FALSE | -1 | Uint16 |
| 1-54 | Voltage reduction in fieldweakening | 0 V | All set-ups | | FALSE | 0 | Uint8 |
| 1-55 | U/f Characteristic - U | App.Dependent | All set-ups | | TRUE | -1 | Uint16 |
| 1-56 | U/f Characteristic - F | App.Dependent | All set-ups | | TRUE | -1 | Uint16 |
| 1-58 | Flystart Test Pulses Current | 30 % | All set-ups | | FALSE | 0 | Uint16 |
| 1-59 | Flystart Test Pulses Frequency | 200 % | All set-ups | | FALSE | 0 | Uint16 |

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|---------------------------------|---------------------------------------|-----------------------|-------------|-------------|-------------------------|------------------|--------|
| 1-6* Load Depen. Setting | | | | | | | |
| 1-60 | Low Speed Load Compensation | 100 % | All set-ups | | TRUE | 0 | Int16 |
| 1-61 | High Speed Load Compensation | 100 % | All set-ups | | TRUE | 0 | Int16 |
| 1-62 | Slip Compensation | App.Dependent | All set-ups | | TRUE | 0 | Int16 |
| 1-63 | Slip Compensation Time Constant | App.Dependent | All set-ups | | TRUE | -2 | UInt16 |
| 1-64 | Resonance Dampening | 100 % | All set-ups | | TRUE | 0 | UInt16 |
| 1-65 | Resonance Dampening Time Constant | 5 ms | All set-ups | | TRUE | -3 | UInt8 |
| 1-66 | Min. Current at Low Speed | 100 % | All set-ups | x | TRUE | 0 | UInt8 |
| 1-67 | Load Type | [0] Passive load | All set-ups | x | TRUE | - | UInt8 |
| 1-68 | Minimum Inertia | App.Dependent | All set-ups | x | FALSE | -4 | UInt32 |
| 1-69 | Maximum Inertia | App.Dependent | All set-ups | x | FALSE | -4 | UInt32 |
| 1-7* Start Adjustments | | | | | | | |
| 1-71 | Start Delay | 0.0 s | All set-ups | | TRUE | -1 | UInt8 |
| 1-72 | Start Function | [2] Coast/delay time | All set-ups | | TRUE | - | UInt8 |
| 1-73 | Flying Start | null | All set-ups | | FALSE | - | UInt8 |
| 1-74 | Start Speed [RPM] | App.Dependent | All set-ups | | TRUE | 67 | UInt16 |
| 1-75 | Start Speed [Hz] | App.Dependent | All set-ups | | TRUE | -1 | UInt16 |
| 1-76 | Start Current | 0.00 A | All set-ups | | TRUE | -2 | UInt32 |
| 1-8* Stop Adjustments | | | | | | | |
| 1-80 | Function at Stop | [0] Coast | All set-ups | | TRUE | - | UInt8 |
| 1-81 | Min Speed for Function at Stop [RPM] | App.Dependent | All set-ups | | TRUE | 67 | UInt16 |
| 1-82 | Min Speed for Function at Stop [Hz] | App.Dependent | All set-ups | | TRUE | -1 | UInt16 |
| 1-83 | Precise Stop Function | [0] Precise ramp stop | All set-ups | | FALSE | - | UInt8 |
| 1-84 | Precise Stop Counter Value | 100000 N/A | All set-ups | | TRUE | 0 | UInt32 |
| 1-85 | Precise Stop Speed Compensation Delay | 10 ms | All set-ups | | TRUE | -3 | UInt8 |
| 1-9* Motor Temperature | | | | | | | |
| 1-90 | Motor Thermal Protection | [0] No protection | All set-ups | | TRUE | - | UInt8 |
| 1-91 | Motor External Fan | [0] No | All set-ups | | TRUE | - | UInt16 |
| 1-93 | Thermistor Resource | [0] None | All set-ups | | TRUE | - | UInt8 |
| 1-94 | ATEX ETR cur.lim. speed reduction | 0.0% | 2 set-ups | x | TRUE | -1 | UInt16 |
| 1-95 | KTY Sensor Type | [0] KTY Sensor 1 | All set-ups | x | TRUE | - | UInt8 |
| 1-96 | KTY Thermistor Resource | [0] None | All set-ups | x | TRUE | - | UInt8 |
| 1-97 | KTY Threshold level | 80 °C | 1 set-up | x | TRUE | 100 | Int16 |
| 1-98 | ATEX ETR interpol. points freq. | App.Dependent | 1 set-up | x | TRUE | -1 | Int16 |
| 1-99 | ATEX ETR interpol points current | App.Dependent | 2 set-ups | x | TRUE | 0 | Int16 |

4.1.5 2-** Brakes

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|---------------------------------|-----------------------------|---------------------|-------------|-------------|-------------------------|------------------|--------|
| 2-0* DC-Brake | | | | | | | |
| 2-00 | DC Hold Current | 50 % | All set-ups | | TRUE | 0 | Uint8 |
| 2-01 | DC Brake Current | 50 % | All set-ups | | TRUE | 0 | Uint16 |
| 2-02 | DC Braking Time | 10.0 s | All set-ups | | TRUE | -1 | Uint16 |
| 2-03 | DC Brake Cut In Speed [RPM] | App.Dependent | All set-ups | | TRUE | 67 | Uint16 |
| 2-04 | DC Brake Cut In Speed [Hz] | App.Dependent | All set-ups | | TRUE | -1 | Uint16 |
| 2-05 | Maximum Reference | MaxReference (P303) | All set-ups | | TRUE | -3 | Int32 |
| 2-1* Brake Energy Funct. | | | | | | | |
| 2-10 | Brake Function | null | All set-ups | | TRUE | - | Uint8 |
| 2-11 | Brake Resistor (ohm) | App.Dependent | All set-ups | | TRUE | 0 | Uint16 |
| 2-12 | Brake Power Limit (kW) | App.Dependent | All set-ups | | TRUE | 0 | Uint32 |
| 2-13 | Brake Power Monitoring | [0] Off | All set-ups | | TRUE | - | Uint8 |
| 2-15 | Brake Check | [0] Off | All set-ups | | TRUE | - | Uint8 |
| 2-16 | AC brake Max. Current | 100.0 % | All set-ups | | TRUE | -1 | Uint32 |
| 2-17 | Over-voltage Control | [0] Disabled | All set-ups | | TRUE | - | Uint8 |
| 2-18 | Brake Check Condition | [0] At Power Up | All set-ups | | TRUE | - | Uint8 |
| 2-19 | Over-voltage Gain | 100 % | All set-ups | | TRUE | 0 | Uint16 |
| 2-2* Mechanical Brake | | | | | | | |
| 2-20 | Release Brake Current | ImaxVLT (P1637) | All set-ups | | TRUE | -2 | Uint32 |
| 2-21 | Activate Brake Speed [RPM] | App.Dependent | All set-ups | | TRUE | 67 | Uint16 |
| 2-22 | Activate Brake Speed [Hz] | App.Dependent | All set-ups | | TRUE | -1 | Uint16 |
| 2-23 | Activate Brake Delay | 0.0 s | All set-ups | | TRUE | -1 | Uint8 |
| 2-24 | Stop Delay | 0.0 s | All set-ups | | TRUE | -1 | Uint8 |
| 2-25 | Brake Release Time | 0.20 s | All set-ups | | TRUE | -2 | Uint16 |
| 2-26 | Torque Ref | 0.00 % | All set-ups | | TRUE | -2 | Int16 |
| 2-27 | Torque Ramp Time | 0.2 s | All set-ups | | TRUE | -1 | Uint8 |
| 2-28 | Gain Boost Factor | 1.00 N/A | All set-ups | | TRUE | -2 | Uint16 |

4.1.6 3-** Reference/Ramps

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|------------------------------|-------------------------------------|---------------------------|-------------|-------------|-------------------------|------------------|--------|
| 3-0* Reference Limits | | | | | | | |
| 3-00 | Reference Range | null | All set-ups | | TRUE | - | UInt8 |
| 3-01 | Reference/Feedback Unit | null | All set-ups | | TRUE | - | UInt8 |
| 3-02 | Minimum Reference | App.Dependent | All set-ups | | TRUE | -3 | Int32 |
| 3-03 | Maximum Reference | App.Dependent | All set-ups | | TRUE | -3 | Int32 |
| 3-04 | Reference Function | [0] Sum | All set-ups | | TRUE | - | UInt8 |
| 3-1* References | | | | | | | |
| 3-10 | Preset Reference | 0.00 % | All set-ups | | TRUE | -2 | Int16 |
| 3-11 | Jog Speed [Hz] | App.Dependent | All set-ups | | TRUE | -1 | UInt16 |
| 3-12 | Catch up/slow Down Value | 0.00 % | All set-ups | | TRUE | -2 | Int16 |
| 3-13 | Reference Site | [0] Linked to Hand / Auto | All set-ups | | TRUE | - | UInt8 |
| 3-14 | Preset Relative Reference | 0.00 % | All set-ups | | TRUE | -2 | Int32 |
| 3-15 | Reference Resource 1 | null | All set-ups | | TRUE | - | UInt8 |
| 3-16 | Reference Resource 2 | null | All set-ups | | TRUE | - | UInt8 |
| 3-17 | Reference Resource 3 | null | All set-ups | | TRUE | - | UInt8 |
| 3-18 | Relative Scaling Reference Resource | [0] No function | All set-ups | | TRUE | - | UInt8 |
| 3-19 | Jog Speed [RPM] | App.Dependent | All set-ups | | TRUE | 67 | UInt16 |
| 3-4* Ramp 1 | | | | | | | |
| 3-40 | Ramp 1 Type | [0] Linear | All set-ups | | TRUE | - | UInt8 |
| 3-41 | Ramp 1 Ramp up Time | App.Dependent | All set-ups | | TRUE | -2 | UInt32 |
| 3-42 | Ramp 1 Ramp Down Time | App.Dependent | All set-ups | | TRUE | -2 | UInt32 |
| 3-45 | Ramp 1 S-ramp Ratio at Accel. Start | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-46 | Ramp 1 S-ramp Ratio at Accel. End | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-47 | Ramp 1 S-ramp Ratio at Decel. Start | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-48 | Ramp 1 S-ramp Ratio at Decel. End | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-5* Ramp 2 | | | | | | | |
| 3-50 | Ramp 2 Type | [0] Linear | All set-ups | | TRUE | - | UInt8 |
| 3-51 | Ramp 2 Ramp up Time | App.Dependent | All set-ups | | TRUE | -2 | UInt32 |
| 3-52 | Ramp 2 Ramp down Time | App.Dependent | All set-ups | | TRUE | -2 | UInt32 |
| 3-55 | Ramp 2 S-ramp Ratio at Accel. Start | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-56 | Ramp 2 S-ramp Ratio at Accel. End | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-57 | Ramp 2 S-ramp Ratio at Decel. Start | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-58 | Ramp 2 S-ramp Ratio at Decel. End | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-6* Ramp 3 | | | | | | | |
| 3-60 | Ramp 3 Type | [0] Linear | All set-ups | | TRUE | - | UInt8 |
| 3-61 | Ramp 3 Ramp up Time | App.Dependent | All set-ups | | TRUE | -2 | UInt32 |
| 3-62 | Ramp 3 Ramp down Time | App.Dependent | All set-ups | | TRUE | -2 | UInt32 |
| 3-65 | Ramp 3 S-ramp Ratio at Accel. Start | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-66 | Ramp 3 S-ramp Ratio at Accel. End | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-67 | Ramp 3 S-ramp Ratio at Decel. Start | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-68 | Ramp 3 S-ramp Ratio at Decel. End | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-7* Ramp 4 | | | | | | | |
| 3-70 | Ramp 4 Type | [0] Linear | All set-ups | | TRUE | - | UInt8 |
| 3-71 | Ramp 4 Ramp up Time | App.Dependent | All set-ups | | TRUE | -2 | UInt32 |
| 3-72 | Ramp 4 Ramp Down Time | App.Dependent | All set-ups | | TRUE | -2 | UInt32 |
| 3-75 | Ramp 4 S-ramp Ratio at Accel. Start | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-76 | Ramp 4 S-ramp Ratio at Accel. End | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-77 | Ramp 4 S-ramp Ratio at Decel. Start | 50 % | All set-ups | | TRUE | 0 | UInt8 |
| 3-78 | Ramp 4 S-ramp Ratio at Decel. End | 50 % | All set-ups | | TRUE | 0 | UInt8 |

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-------------------------------|---|---------------|-------------|-------------|-------------------------|------------------|--------|
| 3-8* Other Ramps | | | | | | | |
| 3-80 | Jog Ramp Time | App.Dependent | All set-ups | | TRUE | -2 | Uint32 |
| 3-81 | Quick Stop Ramp Time | App.Dependent | 2 set-ups | | TRUE | -2 | Uint32 |
| 3-82 | Quick Stop Ramp Type | [0] Linear | All set-ups | | TRUE | - | Uint8 |
| 3-83 | Quick Stop S-ramp Ratio at Decel. Start | 50 % | All set-ups | | TRUE | 0 | Uint8 |
| 3-84 | Quick Stop S-ramp Ratio at Decel. End | 50 % | All set-ups | | TRUE | 0 | Uint8 |
| 3-9* Digital Pot.Meter | | | | | | | |
| 3-90 | Step Size | 0.10 % | All set-ups | | TRUE | -2 | Uint16 |
| 3-91 | Ramp Time | 1.00 s | All set-ups | | TRUE | -2 | Uint32 |
| 3-92 | Power Restore | [0] Off | All set-ups | | TRUE | - | Uint8 |
| 3-93 | Maximum Limit | 100 % | All set-ups | | TRUE | 0 | Int16 |
| 3-94 | Minimum Limit | -100 % | All set-ups | | TRUE | 0 | Int16 |
| 3-95 | Ramp Delay | App.Dependent | All set-ups | | TRUE | -3 | TimD |

4.1.7 4-** Limits / Warnings

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|------------------------------|--------------------------------------|------------------------------------|-------------|-------------|-------------------------|------------------|--------|
| 4-1* Motor Limits | | | | | | | |
| 4-10 | Motor Speed Direction | null | All set-ups | | FALSE | - | Uint8 |
| 4-11 | Motor Speed Low Limit [RPM] | App.Dependent | All set-ups | | TRUE | 67 | Uint16 |
| 4-12 | Motor Speed Low Limit [Hz] | App.Dependent | All set-ups | | TRUE | -1 | Uint16 |
| 4-13 | Motor Speed High Limit [RPM] | App.Dependent | All set-ups | | TRUE | 67 | Uint16 |
| 4-14 | Motor Speed High Limit [Hz] | App.Dependent | All set-ups | | TRUE | -1 | Uint16 |
| 4-16 | Torque Limit Motor Mode | App.Dependent | All set-ups | | TRUE | -1 | Uint16 |
| 4-17 | Torque Limit Generator Mode | 100.0 % | All set-ups | | TRUE | -1 | Uint16 |
| 4-18 | Current Limit | App.Dependent | All set-ups | | TRUE | -1 | Uint32 |
| 4-19 | Max Output Frequency | 132.0 Hz | All set-ups | | FALSE | -1 | Uint16 |
| 4-2* Limit Factors | | | | | | | |
| 4-20 | Torque Limit Factor Source | [0] No function | All set-ups | | TRUE | - | Uint8 |
| 4-21 | Speed Limit Factor Source | [0] No function | All set-ups | | TRUE | - | Uint8 |
| 4-3* Motor Speed Mon. | | | | | | | |
| 4-30 | Motor Feedback Loss Function | [2] Trip | All set-ups | | TRUE | - | Uint8 |
| 4-31 | Motor Feedback Speed Error | 300 RPM | All set-ups | | TRUE | 67 | Uint16 |
| 4-32 | Motor Feedback Loss Timeout | 0.05 s | All set-ups | | TRUE | -2 | Uint16 |
| 4-34 | Tracking Error Function | null | All set-ups | | TRUE | - | Uint8 |
| 4-35 | Tracking Error | 10 RPM | All set-ups | | TRUE | 67 | Uint16 |
| 4-36 | Tracking Error Timeout | 1.00 s | All set-ups | | TRUE | -2 | Uint16 |
| 4-37 | Tracking Error Ramping | 100 RPM | All set-ups | | TRUE | 67 | Uint16 |
| 4-38 | Tracking Error Ramping Timeout | 1.00 s | All set-ups | | TRUE | -2 | Uint16 |
| 4-39 | Tracking Error After Ramping Timeout | 5.00 s | All set-ups | | TRUE | -2 | Uint16 |
| 4-5* Adj. Warnings | | | | | | | |
| 4-50 | Warning Current Low | 0.00 A | All set-ups | | TRUE | -2 | Uint32 |
| 4-51 | Warning Current High | I _{maxVLT} (P1637) | All set-ups | | TRUE | -2 | Uint32 |
| 4-52 | Warning Speed Low | 0 RPM | All set-ups | | TRUE | 67 | Uint16 |
| 4-53 | Warning Speed High | outputSpeedHighLimit (P413) | All set-ups | | TRUE | 67 | Uint16 |
| 4-54 | Warning Reference Low | -999999.999 N/A | All set-ups | | TRUE | -3 | Int32 |
| 4-55 | Warning Reference High | 999999.999 N/A | All set-ups | | TRUE | -3 | Int32 |
| 4-56 | Warning Feedback Low | -999999.999 Reference-FeedbackUnit | All set-ups | | TRUE | -3 | Int32 |
| 4-57 | Warning Feedback High | 999999.999 Reference-FeedbackUnit | All set-ups | | TRUE | -3 | Int32 |
| 4-58 | Missing Motor Phase Function | null | All set-ups | | TRUE | - | Uint8 |
| 4-6* Speed Bypass | | | | | | | |
| 4-60 | Bypass Speed From [RPM] | App.Dependent | All set-ups | | TRUE | 67 | Uint16 |
| 4-61 | Bypass Speed From [Hz] | App.Dependent | All set-ups | | TRUE | -1 | Uint16 |
| 4-62 | Bypass Speed To [RPM] | App.Dependent | All set-ups | | TRUE | 67 | Uint16 |
| 4-63 | Bypass Speed To [Hz] | App.Dependent | All set-ups | | TRUE | -1 | Uint16 |

4.1.8 5-** Digital In/Out

4

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|------------------------------|---------------------------------|------------------------------|-------------|-------------|-------------------------|------------------|--------|
| 5-0* Digital I/O mode | | | | | | | |
| 5-00 | Digital I/O Mode | [0] PNP | All set-ups | | FALSE | - | Uint8 |
| 5-01 | Terminal 27 Mode | [0] Input | All set-ups | | TRUE | - | Uint8 |
| 5-02 | Terminal 29 Mode | [0] Input | All set-ups | x | TRUE | - | Uint8 |
| 5-1* Digital Inputs | | | | | | | |
| 5-10 | Terminal 18 Digital Input | null | All set-ups | | TRUE | - | Uint8 |
| 5-11 | Terminal 19 Digital Input | null | All set-ups | | TRUE | - | Uint8 |
| 5-12 | Terminal 27 Digital Input | null | All set-ups | | TRUE | - | Uint8 |
| 5-13 | Terminal 29 Digital Input | null | All set-ups | x | TRUE | - | Uint8 |
| 5-14 | Terminal 32 Digital Input | null | All set-ups | | TRUE | - | Uint8 |
| 5-15 | Terminal 33 Digital Input | null | All set-ups | | TRUE | - | Uint8 |
| 5-16 | Terminal X30/2 Digital Input | null | All set-ups | | TRUE | - | Uint8 |
| 5-17 | Terminal X30/3 Digital Input | null | All set-ups | | TRUE | - | Uint8 |
| 5-18 | Terminal X30/4 Digital Input | null | All set-ups | | TRUE | - | Uint8 |
| 5-19 | Terminal 37 Safe Stop | [1] Safe Stop Alarm | 1 set-up | | TRUE | - | Uint8 |
| 5-20 | Terminal X46/1 Digital Input | [0] No operation | All set-ups | | TRUE | - | Uint8 |
| 5-21 | Terminal X46/3 Digital Input | [0] No operation | All set-ups | | TRUE | - | Uint8 |
| 5-22 | Terminal X46/5 Digital Input | [0] No operation | All set-ups | | TRUE | - | Uint8 |
| 5-23 | Terminal X46/7 Digital Input | [0] No operation | All set-ups | | TRUE | - | Uint8 |
| 5-24 | Terminal X46/9 Digital Input | [0] No operation | All set-ups | | TRUE | - | Uint8 |
| 5-25 | Terminal X46/11 Digital Input | [0] No operation | All set-ups | | TRUE | - | Uint8 |
| 5-26 | Terminal X46/13 Digital Input | [0] No operation | All set-ups | | TRUE | - | Uint8 |
| 5-3* Digital Outputs | | | | | | | |
| 5-30 | Terminal 27 Digital Output | null | All set-ups | | TRUE | - | Uint8 |
| 5-31 | Terminal 29 Digital Output | null | All set-ups | x | TRUE | - | Uint8 |
| 5-32 | Term X30/6 Digi Out (MCB 101) | null | All set-ups | | TRUE | - | Uint8 |
| 5-33 | Term X30/7 Digi Out (MCB 101) | null | All set-ups | | TRUE | - | Uint8 |
| 5-4* Relays | | | | | | | |
| 5-40 | Function Relay | null | All set-ups | | TRUE | - | Uint8 |
| 5-41 | On Delay, Relay | 0.01 s | All set-ups | | TRUE | -2 | Uint16 |
| 5-42 | Off Delay, Relay | 0.01 s | All set-ups | | TRUE | -2 | Uint16 |
| 5-5* Pulse Input | | | | | | | |
| 5-50 | Term. 29 Low Frequency | 100 Hz | All set-ups | x | TRUE | 0 | Uint32 |
| 5-51 | Term. 29 High Frequency | 100 Hz | All set-ups | x | TRUE | 0 | Uint32 |
| 5-52 | Term. 29 Low Ref./Feedb. Value | 0.000 ReferenceFeed-backUnit | All set-ups | x | TRUE | -3 | Int32 |
| 5-53 | Term. 29 High Ref./Feedb. Value | App.Dependent | All set-ups | x | TRUE | -3 | Int32 |
| 5-54 | Pulse Filter Time Constant #29 | 100 ms | All set-ups | x | FALSE | -3 | Uint16 |
| 5-55 | Term. 33 Low Frequency | 100 Hz | All set-ups | | TRUE | 0 | Uint32 |
| 5-56 | Term. 33 High Frequency | 100 Hz | All set-ups | | TRUE | 0 | Uint32 |
| 5-57 | Term. 33 Low Ref./Feedb. Value | 0.000 ReferenceFeed-backUnit | All set-ups | | TRUE | -3 | Int32 |
| 5-58 | Term. 33 High Ref./Feedb. Value | App.Dependent | All set-ups | | TRUE | -3 | Int32 |
| 5-59 | Pulse Filter Time Constant #33 | 100 ms | All set-ups | | FALSE | -3 | Uint16 |

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-------------------------------|--------------------------------------|---------------|-------------|-------------|-------------------------|------------------|--------|
| 5-6* Pulse Output | | | | | | | |
| 5-60 | Terminal 27 Pulse Output Variable | null | All set-ups | | TRUE | - | Uint8 |
| 5-62 | Pulse Output Max Freq #27 | App.Dependent | All set-ups | | TRUE | 0 | Uint32 |
| 5-63 | Terminal 29 Pulse Output Variable | null | All set-ups | x | TRUE | - | Uint8 |
| 5-65 | Pulse Output Max Freq #29 | App.Dependent | All set-ups | x | TRUE | 0 | Uint32 |
| 5-66 | Terminal X30/6 Pulse Output Variable | null | All set-ups | | TRUE | - | Uint8 |
| 5-68 | Pulse Output Max Freq #X30/6 | App.Dependent | All set-ups | | TRUE | 0 | Uint32 |
| 5-7* 24V Encoder Input | | | | | | | |
| 5-70 | Term 32/33 Pulses per Revolution | 1024 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 5-71 | Term 32/33 Encoder Direction | [0] Clockwise | All set-ups | | FALSE | - | Uint8 |
| 5-8* I/O Options | | | | | | | |
| 5-80 | AHF Cap Reconnect Delay | 25s | 2 set-ups | | TRUE | 0 | Uint16 |
| 5-9* Bus Controlled | | | | | | | |
| 5-90 | Digital & Relay Bus Control | 0 N/A | All set-ups | | TRUE | 0 | Uint32 |
| 5-93 | Pulse Out #27 Bus Control | 0.00 % | All set-ups | | TRUE | -2 | N2 |
| 5-94 | Pulse Out #27 Timeout Preset | 0.00 % | 1 set-up | | TRUE | -2 | Uint16 |
| 5-95 | Pulse Out #29 Bus Control | 0.00 % | All set-ups | x | TRUE | -2 | N2 |
| 5-96 | Pulse Out #29 Timeout Preset | 0.00 % | 1 set-up | x | TRUE | -2 | Uint16 |
| 5-97 | Pulse Out #X30/6 Bus Control | 0.00 % | All set-ups | | TRUE | -2 | N2 |
| 5-98 | Pulse Out #X30/6 Timeout Preset | 0.00 % | 1 set-up | | TRUE | -2 | Uint16 |

4.1.9 6-** Analog In/Out

4

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-----------------------------|--------------------------------------|-------------------------|-------------|-------------|-------------------------|------------------|--------|
| 6-0* Analog I/O Mode | | | | | | | |
| 6-00 | Live Zero Timeout Time | 10 s | All set-ups | | TRUE | 0 | Uint8 |
| 6-01 | Live Zero Timeout Function | [0] Off | All set-ups | | TRUE | - | Uint8 |
| 6-1* Analog Input 1 | | | | | | | |
| 6-10 | Terminal 53 Low Voltage | 0.07 V | All set-ups | | TRUE | -2 | Int16 |
| 6-11 | Terminal 53 High Voltage | 10.00 V | All set-ups | | TRUE | -2 | Int16 |
| 6-12 | Terminal 53 Low Current | 0.14 mA | All set-ups | | TRUE | -5 | Int16 |
| 6-13 | Terminal 53 High Current | 20.00 mA | All set-ups | | TRUE | -5 | Int16 |
| 6-14 | Terminal 53 Low Ref./Feedb. Value | 0 ReferenceFeedbackUnit | All set-ups | | TRUE | -3 | Int32 |
| 6-15 | Terminal 53 High Ref./Feedb. Value | App.Dependent | All set-ups | | TRUE | -3 | Int32 |
| 6-16 | Terminal 53 Filter Time Constant | 0.001 s | All set-ups | | TRUE | -3 | Uint16 |
| 6-2* Analog Input 2 | | | | | | | |
| 6-20 | Terminal 54 Low Voltage | 0.07 V | All set-ups | | TRUE | -2 | Int16 |
| 6-21 | Terminal 54 High Voltage | 10.00 V | All set-ups | | TRUE | -2 | Int16 |
| 6-22 | Terminal 54 Low Current | 0.14 mA | All set-ups | | TRUE | -5 | Int16 |
| 6-23 | Terminal 54 High Current | 20.00 mA | All set-ups | | TRUE | -5 | Int16 |
| 6-24 | Terminal 54 Low Ref./Feedb. Value | 0 ReferenceFeedbackUnit | All set-ups | | TRUE | -3 | Int32 |
| 6-25 | Terminal 54 High Ref./Feedb. Value | App.Dependent | All set-ups | | TRUE | -3 | Int32 |
| 6-26 | Terminal 54 Filter Time Constant | 0.001 s | All set-ups | | TRUE | -3 | Uint16 |
| 6-3* Analog Input 3 | | | | | | | |
| 6-30 | Terminal X30/11 Low Voltage | 0.07 V | All set-ups | | TRUE | -2 | Int16 |
| 6-31 | Terminal X30/11 High Voltage | 10.00 V | All set-ups | | TRUE | -2 | Int16 |
| 6-34 | Term. X30/11 Low Ref./Feedb. Value | 0 ReferenceFeedbackUnit | All set-ups | | TRUE | -3 | Int32 |
| 6-35 | Term. X30/11 High Ref./Feedb. Value | App.Dependent | All set-ups | | TRUE | -3 | Int32 |
| 6-36 | Term. X30/11 Filter Time Constant | 0.001 s | All set-ups | | TRUE | -3 | Uint16 |
| 6-4* Analog Input 4 | | | | | | | |
| 6-40 | Terminal X30/12 Low Voltage | 0.07 V | All set-ups | | TRUE | -2 | Int16 |
| 6-41 | Terminal X30/12 High Voltage | 10.00 V | All set-ups | | TRUE | -2 | Int16 |
| 6-44 | Term. X30/12 Low Ref./Feedb. Value | 0 ReferenceFeedbackUnit | All set-ups | | TRUE | -3 | Int32 |
| 6-45 | Term. X30/12 High Ref./Feedb. Value | App.Dependent | All set-ups | | TRUE | -3 | Int32 |
| 6-46 | Term. X30/12 Filter Time Constant | 0.001 s | All set-ups | | TRUE | -3 | Uint16 |
| 6-5* Analog Output 1 | | | | | | | |
| 6-50 | Terminal 42 Output | null | All set-ups | | TRUE | - | Uint8 |
| 6-51 | Terminal 42 Output Min Scale | 0.00 % | All set-ups | | TRUE | -2 | Int16 |
| 6-52 | Terminal 42 Output Max Scale | 100.00 % | All set-ups | | TRUE | -2 | Int16 |
| 6-53 | Term 42 Output Bus Ctrl | 0.00 % | All set-ups | | TRUE | -2 | N2 |
| 6-54 | Terminal 42 Output Timeout Preset | 0.00 % | 1 set-up | | TRUE | -2 | Uint16 |
| 6-55 | Analog Output Filter | [0] Off | 1 set-up | | TRUE | - | Uint8 |
| 6-6* Analog Output 2 | | | | | | | |
| 6-60 | Terminal X30/8 Output | null | All set-ups | | TRUE | - | Uint8 |
| 6-61 | Terminal X30/8 Min. Scale | 0.00 % | All set-ups | | TRUE | -2 | Int16 |
| 6-62 | Terminal X30/8 Max. Scale | 100.00 % | All set-ups | | TRUE | -2 | Int16 |
| 6-63 | Terminal X30/8 Bus Control | 0.00 % | All set-ups | | TRUE | -2 | N2 |
| 6-64 | Terminal X30/8 Output Timeout Preset | 0.00 % | 1 set-up | | TRUE | -2 | Uint16 |

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-----------------------------|--------------------------------------|---------------|-------------|-------------|-------------------------|------------------|--------|
| 6-7* Analog Output 3 | | | | | | | |
| 6-70 | Terminal X45/1 Output | null | All set-ups | | TRUE | - | Uint8 |
| 6-71 | Terminal X45/1 Min. Scale | 0.00 % | All set-ups | | TRUE | -2 | Int16 |
| 6-72 | Terminal X45/1 Max. Scale | 100.00 % | All set-ups | | TRUE | -2 | Int16 |
| 6-73 | Terminal X45/1 Bus Control | 0.00 % | All set-ups | | TRUE | -2 | N2 |
| 6-74 | Terminal X45/1 Output Timeout Preset | 0.00 % | 1 set-up | | TRUE | -2 | Uint16 |
| 6-8* Analog Output 4 | | | | | | | |
| 6-80 | Terminal X45/3 Output | null | All set-ups | | TRUE | - | Uint8 |
| 6-81 | Terminal X45/3 Min. Scale | 0.00 % | All set-ups | | TRUE | -2 | Int16 |
| 6-82 | Terminal X45/3 Max. Scale | 100.00 % | All set-ups | | TRUE | -2 | Int16 |
| 6-83 | Terminal X45/3 Bus Control | 0.00 % | All set-ups | | TRUE | -2 | N2 |
| 6-84 | Terminal X45/3 Output Timeout Preset | 0.00 % | 1 set-up | | TRUE | -2 | Uint16 |

4.1.10 7-** Controllers

4

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|---------------------------------|---|-----------------|-------------|-------------|-------------------------|------------------|--------|
| 7-0* Speed PID Ctrl. | | | | | | | |
| 7-00 | Speed PID Feedback Source | null | All set-ups | | FALSE | - | Uint8 |
| 7-02 | Speed PID Proportional Gain | App.Dependent | All set-ups | | TRUE | -3 | Uint16 |
| 7-03 | Speed PID Integral Time | App.Dependent | All set-ups | | TRUE | -4 | Uint32 |
| 7-04 | Speed PID Differentiation Time | App.Dependent | All set-ups | | TRUE | -4 | Uint16 |
| 7-05 | Speed PID Diff. Gain Limit | 5.0 N/A | All set-ups | | TRUE | -1 | Uint16 |
| 7-06 | Speed PID Lowpass Filter Time | App.Dependent | All set-ups | | TRUE | -4 | Uint16 |
| 7-07 | Speed PID Feedback Gear Ratio | 1.0000 N/A | All set-ups | | FALSE | -4 | Uint32 |
| 7-08 | Speed PID Feed Forward Factor | 0 % | All set-ups | | FALSE | 0 | Uint16 |
| 7-1* Torque PI Ctrl. | | | | | | | |
| 7-12 | Torque PI Proportional Gain | 100 % | All set-ups | | TRUE | 0 | Uint16 |
| 7-13 | Torque PI Integration Time | 0.020 s | All set-ups | | TRUE | -3 | Uint16 |
| 7-2* Process Ctrl. Feedb | | | | | | | |
| 7-20 | Process CL Feedback 1 Resource | [0] No function | All set-ups | | TRUE | - | Uint8 |
| 7-22 | Process CL Feedback 2 Resource | [0] No function | All set-ups | | TRUE | - | Uint8 |
| 7-3* Process PID Ctrl. | | | | | | | |
| 7-30 | Process PID Normal/ Inverse Control | [0] Normal | All set-ups | | TRUE | - | Uint8 |
| 7-31 | Process PID Anti Windup | [1] On | All set-ups | | TRUE | - | Uint8 |
| 7-32 | Process PID Start Speed | 0 RPM | All set-ups | | TRUE | 67 | Uint16 |
| 7-33 | Process PID Proportional Gain | 0.01 N/A | All set-ups | | TRUE | -2 | Uint16 |
| 7-34 | Process PID Integral Time | 10000.00 s | All set-ups | | TRUE | -2 | Uint32 |
| 7-35 | Process PID Differentiation Time | 0.00 s | All set-ups | | TRUE | -2 | Uint16 |
| 7-36 | Process PID Diff. Gain Limit | 5.0 N/A | All set-ups | | TRUE | -1 | Uint16 |
| 7-38 | Process PID Feed Forward Factor | 0 % | All set-ups | | TRUE | 0 | Uint16 |
| 7-39 | On Reference Bandwidth | 5 % | All set-ups | | TRUE | 0 | Uint8 |
| 7-4* Adv. Process PID I | | | | | | | |
| 7-40 | Process PID I-part Reset | [0] No | All set-ups | | TRUE | - | Uint8 |
| 7-41 | Process PID Output Neg. Clamp | -100 % | All set-ups | | TRUE | 0 | Int16 |
| 7-42 | Process PID Output Pos. Clamp | 100 % | All set-ups | | TRUE | 0 | Int16 |
| 7-43 | Process PID Gain Scale at Min. Ref. | 100 % | All set-ups | | TRUE | 0 | Int16 |
| 7-44 | Process PID Gain Scale at Max. Ref. | 100 % | All set-ups | | TRUE | 0 | Int16 |
| 7-45 | Process PID Feed Fwd Resource | [0] No function | All set-ups | | TRUE | - | Uint8 |
| 7-46 | Process PID Feed Fwd Normal/ Inv. Ctrl. | [0] Normal | All set-ups | | TRUE | - | Uint8 |
| 7-48 | PCD Feed Forward | 0 N/A | All set-ups | x | TRUE | 0 | Uint16 |
| 7-49 | Process PID Output Normal/ Inv. Ctrl. | [0] Normal | All set-ups | | TRUE | - | Uint8 |
| 7-5* Adv. Process PID II | | | | | | | |
| 7-50 | Process PID Extended PID | [1] Enabled | All set-ups | | TRUE | - | Uint8 |
| 7-51 | Process PID Feed Fwd Gain | 1.00 N/A | All set-ups | | TRUE | -2 | Uint16 |
| 7-52 | Process PID Feed Fwd Ramp up | 0.01 s | All set-ups | | TRUE | -2 | Uint32 |
| 7-53 | Process PID Feed Fwd Ramp down | 0.01 s | All set-ups | | TRUE | -2 | Uint32 |
| 7-56 | Process PID Ref. Filter Time | 0.001 s | All set-ups | | TRUE | -3 | Uint16 |
| 7-57 | Process PID Fb. Filter Time | 0.001 s | All set-ups | | TRUE | -3 | Uint16 |

4.1.11 8-** Comm. and Options

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|---------------------------------|-------------------------------|-----------------------------|-------------|-------------|-------------------------|------------------|--------|
| 8-0* General Settings | | | | | | | |
| 8-01 | Control Site | [0] Digital and ctrl.word | All set-ups | | TRUE | - | Uint8 |
| 8-02 | Control Word Source | null | All set-ups | | TRUE | - | Uint8 |
| 8-03 | Control Word Timeout Time | 1.0 s | 1 set-up | | TRUE | -1 | Uint32 |
| 8-04 | Control Word Timeout Function | null | 1 set-up | | TRUE | - | Uint8 |
| 8-05 | End-of-Timeout Function | [1] Resume set-up | 1 set-up | | TRUE | - | Uint8 |
| 8-06 | Reset Control Word Timeout | [0] Do not reset | All set-ups | | TRUE | - | Uint8 |
| 8-07 | Diagnosis Trigger | [0] Disable | 2 set-ups | | TRUE | - | Uint8 |
| 8-08 | Readout Filtering | null | All set-ups | | TRUE | - | Uint8 |
| 8-1* Ctrl. Word Settings | | | | | | | |
| 8-10 | Control Word Profile | [0] FC profile | All set-ups | | TRUE | - | Uint8 |
| 8-13 | Configurable Status Word STW | null | All set-ups | | TRUE | - | Uint8 |
| 8-14 | Configurable Control Word CTW | [1] Profile default | All set-ups | | TRUE | - | Uint8 |
| 8-3* FC Port Settings | | | | | | | |
| 8-30 | Protocol | [0] FC | 1 set-up | | TRUE | - | Uint8 |
| 8-31 | Address | 1 N/A | 1 set-up | | TRUE | 0 | Uint8 |
| 8-32 | FC Port Baud Rate | null | 1 set-up | | TRUE | - | Uint8 |
| 8-33 | Parity / Stop Bits | [0] Even Parity, 1 Stop Bit | 1 set-up | | TRUE | - | Uint8 |
| 8-34 | Estimated cycle time | 0 ms | 2 set-ups | | TRUE | -3 | Uint32 |
| 8-35 | Minimum Response Delay | 10 ms | All set-ups | | TRUE | -3 | Uint16 |
| 8-36 | Max Response Delay | App.Dependent | 1 set-up | | TRUE | -3 | Uint16 |
| 8-37 | Max Inter-Char Delay | App.Dependent | 1 set-up | | TRUE | -5 | Uint16 |
| 8-4* FC MC protocol set | | | | | | | |
| 8-40 | Telegram selection | [1] Standard telegram 1 | 2 set-ups | | TRUE | - | Uint8 |
| 8-41 | Parameters for signals | 0 | All set-ups | | FALSE | - | Uint16 |
| 8-42 | PCD write configuration | App.Dependent | All set-ups | | TRUE | - | Uint16 |
| 8-43 | PCD read configuration | App.Dependent | All set-ups | | TRUE | - | Uint16 |
| 8-5* Digital/Bus | | | | | | | |
| 8-50 | Coasting Select | [3] Logic OR | All set-ups | | TRUE | - | Uint8 |
| 8-51 | Quick Stop Select | [3] Logic OR | All set-ups | | TRUE | - | Uint8 |
| 8-52 | DC Brake Select | [3] Logic OR | All set-ups | | TRUE | - | Uint8 |
| 8-53 | Start Select | [3] Logic OR | All set-ups | | TRUE | - | Uint8 |
| 8-54 | Reversing Select | [3] Logic OR | All set-ups | | TRUE | - | Uint8 |
| 8-55 | Set-up Select | [3] Logic OR | All set-ups | | TRUE | - | Uint8 |
| 8-56 | Preset Reference Select | [3] Logic OR | All set-ups | | TRUE | - | Uint8 |
| 8-57 | Profidrive OFF2 Select | [3] Logic OR | All set-ups | | TRUE | - | Uint8 |
| 8-58 | Profidrive OFF3 Select | [3] Logic OR | All set-ups | | TRUE | - | Uint8 |
| 8-8* FC Port Diagnostics | | | | | | | |
| 8-80 | Bus Message Count | 0 N/A | All set-ups | | TRUE | 0 | Uint32 |
| 8-81 | Bus Error Count | 0 N/A | All set-ups | | TRUE | 0 | Uint32 |
| 8-82 | Slave Messages Rcvd | 0 N/A | All set-ups | | TRUE | 0 | Uint32 |
| 8-83 | Slave Error Count | 0 N/A | All set-ups | | TRUE | 0 | Uint32 |
| 8-9* Bus Jog | | | | | | | |
| 8-90 | Bus Jog 1 Speed | 100 RPM | All set-ups | | TRUE | 67 | Uint16 |
| 8-91 | Bus Jog 2 Speed | App.Dependent | All set-ups | | TRUE | 67 | Uint16 |

4.1.12 9-** Profibus

4

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|------------|---------------------------|--------------------------|-------------|-------------|-------------------------|------------------|-----------|
| 9-00 | Setpoint | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 9-07 | Actual Value | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-15 | PCD Write Configuration | App.Dependent | 1 set-up | | TRUE | - | Uint16 |
| 9-16 | PCD Read Configuration | App.Dependent | 2 set-ups | | TRUE | - | Uint16 |
| 9-18 | Node Address | 126 N/A | 1 set-up | | TRUE | 0 | Uint8 |
| 9-22 | Telegram Selection | [100] None | 1 set-up | | TRUE | - | Uint8 |
| 9-23 | Parameters for Signals | 0 | All set-ups | | TRUE | - | Uint16 |
| 9-27 | Parameter Edit | [1] Enabled | 2 set-ups | | FALSE | - | Uint16 |
| 9-28 | Process Control | [1] Enable cyclic master | 2 set-ups | | FALSE | - | Uint8 |
| 9-44 | Fault Message Counter | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 9-45 | Fault Code | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 9-47 | Fault Number | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 9-52 | Fault Situation Counter | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 9-53 | Profibus Warning Word | 0 N/A | All set-ups | | TRUE | 0 | V2 |
| 9-63 | Actual Baud Rate | [255] No baudrate found | All set-ups | | TRUE | - | Uint8 |
| 9-64 | Device Identification | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 9-65 | Profile Number | 0 N/A | All set-ups | | TRUE | 0 | OctStr[2] |
| 9-67 | Control Word 1 | 0 N/A | All set-ups | | TRUE | 0 | V2 |
| 9-68 | Status Word 1 | 0 N/A | All set-ups | | TRUE | 0 | V2 |
| 9-71 | Profibus Save Data Values | [0] Off | All set-ups | | TRUE | - | Uint8 |
| 9-72 | ProfibusDriveReset | [0] No action | 1 set-up | | FALSE | - | Uint8 |
| 9-75 | DO Identification | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 9-80 | Defined Parameters (1) | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-81 | Defined Parameters (2) | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-82 | Defined Parameters (3) | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-83 | Defined Parameters (4) | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-84 | Defined Parameters (5) | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-90 | Changed Parameters (1) | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-91 | Changed Parameters (2) | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-92 | Changed Parameters (3) | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-93 | Changed parameters (4) | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-94 | Changed parameters (5) | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 9-99 | Profibus Revision Counter | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |

4.1.13 10-** CAN Fieldbus

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-------------------------------|--------------------------------|---------------|-------------|-------------|-------------------------|------------------|--------|
| 10-0* Common Settings | | | | | | | |
| 10-00 | CAN Protocol | null | 2 set-ups | | FALSE | - | Uint8 |
| 10-01 | Baud Rate Select | null | 2 set-ups | | TRUE | - | Uint8 |
| 10-02 | MAC ID | App.Dependent | 2 set-ups | | TRUE | 0 | Uint8 |
| 10-05 | Readout Transmit Error Counter | 0 N/A | All set-ups | | TRUE | 0 | Uint8 |
| 10-06 | Readout Receive Error Counter | 0 N/A | All set-ups | | TRUE | 0 | Uint8 |
| 10-07 | Readout Bus Off Counter | 0 N/A | All set-ups | | TRUE | 0 | Uint8 |
| 10-1* DeviceNet | | | | | | | |
| 10-10 | Process Data Type Selection | null | All set-ups | | TRUE | - | Uint8 |
| 10-11 | Process Data Config Write | App.Dependent | All set-ups | | TRUE | - | Uint16 |
| 10-12 | Process Data Config Read | App.Dependent | All set-ups | | TRUE | - | Uint16 |
| 10-13 | Warning Parameter | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 10-14 | Net Reference | [0] Off | 2 set-ups | | TRUE | - | Uint8 |
| 10-15 | Net Control | [0] Off | 2 set-ups | | TRUE | - | Uint8 |
| 10-2* COS Filters | | | | | | | |
| 10-20 | COS Filter 1 | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 10-21 | COS Filter 2 | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 10-22 | COS Filter 3 | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 10-23 | COS Filter 4 | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 10-3* Parameter Access | | | | | | | |
| 10-30 | Array Index | 0 N/A | 2 set-ups | | TRUE | 0 | Uint8 |
| 10-31 | Store Data Values | [0] Off | All set-ups | | TRUE | - | Uint8 |
| 10-32 | Devicenet Revision | App.Dependent | All set-ups | | TRUE | 0 | Uint16 |
| 10-33 | Store Always | [0] Off | 1 set-up | | TRUE | - | Uint8 |
| 10-34 | DeviceNet Product Code | App.Dependent | 1 set-up | | TRUE | 0 | Uint16 |
| 10-39 | Devicenet F Parameters | 0 N/A | All set-ups | | TRUE | 0 | Uint32 |
| 10-5* CANopen | | | | | | | |
| 10-50 | Process Data Config Write. | App.Dependent | 2 set-ups | | TRUE | - | Uint16 |
| 10-51 | Process Data Config Read. | App.Dependent | 2 set-ups | | TRUE | - | Uint16 |

4.1.14 12-** Ethernet

4

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|---------------------------------------|--------------------------------|-----------------|-------------|-------------|-------------------------|------------------|------------|
| 12-0* IP Settings | | | | | | | |
| 12-00 | IP Address Assignment | null | 2 set-ups | | TRUE | - | UInt8 |
| 12-01 | IP Address | 0 N/A | 1 set-up | | TRUE | 0 | OctStr[4] |
| 12-02 | Subnet Mask | 0 N/A | 1 set-up | | TRUE | 0 | OctStr[4] |
| 12-03 | Default Gateway | 0 N/A | 1 set-up | | TRUE | 0 | OctStr[4] |
| 12-04 | DHCP Server | 0 N/A | 2 set-ups | | TRUE | 0 | OctStr[4] |
| 12-05 | Lease Expires | App.Dependent | All set-ups | | TRUE | 0 | TimD |
| 12-06 | Name Servers | 0 N/A | 1 set-up | | TRUE | 0 | OctStr[4] |
| 12-07 | Domain Name | 0 N/A | 1 set-up | | TRUE | 0 | VisStr[48] |
| 12-08 | Host Name | 0 N/A | 1 set-up | | TRUE | 0 | VisStr[48] |
| 12-09 | Physical Address | 0 N/A | 1 set-up | | TRUE | 0 | VisStr[17] |
| 12-1* Ethernet Link Parameters | | | | | | | |
| 12-10 | Link Status | [0] No Link | 1 set-up | | TRUE | - | UInt8 |
| 12-11 | Link Duration | App.Dependent | All set-ups | | TRUE | 0 | TimD |
| 12-12 | Auto Negotiation | [1] On | 2 set-ups | | TRUE | - | UInt8 |
| 12-13 | Link Speed | [0] None | 2 set-ups | | TRUE | - | UInt8 |
| 12-14 | Link Duplex | [1] Full Duplex | 2 set-ups | | TRUE | - | UInt8 |
| 12-2* Process Data | | | | | | | |
| 12-20 | Control Instance | App.Dependent | 1 set-up | | TRUE | 0 | UInt8 |
| 12-21 | Process Data Config Write | App.Dependent | All set-ups | | TRUE | - | UInt16 |
| 12-22 | Process Data Config Read | App.Dependent | All set-ups | | TRUE | - | UInt16 |
| 12-23 | Process Data Config Write Size | 16 N/A | All set-ups | | TRUE | 0 | UInt32 |
| 12-24 | Process Data Config Read Size | 16 N/A | All set-ups | | TRUE | 0 | UInt32 |
| 12-27 | Primary Master | 0 N/A | 1 set-up | | FALSE | 0 | |
| 12-28 | Store Data Values | [0] Off | All set-ups | | TRUE | - | UInt8 |
| 12-29 | Store Always | [0] Off | 1 set-up | | TRUE | - | UInt8 |
| 12-3* EtherNet/IP | | | | | | | |
| 12-30 | Warning Parameter | 0 N/A | All set-ups | | TRUE | 0 | UInt16 |
| 12-31 | Net Reference | [0] Off | 2 set-ups | | TRUE | - | UInt8 |
| 12-32 | Net Control | [0] Off | 2 set-ups | | TRUE | - | UInt8 |
| 12-33 | CIP Revision | App.Dependent | All set-ups | | TRUE | 0 | UInt16 |
| 12-34 | CIP Product Code | App.Dependent | 1 set-up | | TRUE | 0 | UInt16 |
| 12-35 | EDS Parameter | 0 N/A | All set-ups | | TRUE | 0 | UInt32 |
| 12-37 | COS Inhibit Timer | 0 N/A | All set-ups | | TRUE | 0 | UInt16 |
| 12-38 | COS Filter | 0 N/A | All set-ups | | TRUE | 0 | UInt16 |
| 12-4* Modbus TCP | | | | | | | |
| 12-40 | Status Parameter | 0 N/A | All set-ups | | TRUE | 0 | UInt16 |
| 12-41 | Slave Message Count | 0 N/A | All set-ups | | TRUE | 0 | UInt32 |
| 12-42 | Slave Exception Message Count | 0 N/A | All set-ups | | TRUE | 0 | UInt32 |
| 12-5* EtherCAT | | | | | | | |
| 12-50 | Configured Station Alias | 0 N/A | 1 set-up | | FALSE | 0 | UInt16 |
| 12-51 | Configured Station Address | 0 N/A | All set-ups | | TRUE | 0 | UInt16 |
| 12-59 | EtherCAT Status | 0 N/A | All set-ups | | TRUE | 0 | UInt32 |

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|---|---------------------------------|--------------------|-------------|-------------|-------------------------|------------------|--------|
| 12-8* Other Ethernet Services | | | | | | | |
| 12-80 | FTP Server | [0] Disabled | 2 set-ups | | TRUE | - | Uint8 |
| 12-81 | HTTP Server | [0] Disabled | 2 set-ups | | TRUE | - | Uint8 |
| 12-82 | SMTP Service | [0] Disabled | 2 set-ups | | TRUE | - | Uint8 |
| 12-89 | Transparent Socket Channel Port | App.Dependent | 2 set-ups | | TRUE | 0 | Uint16 |
| 12-9* Advanced Ethernet Services | | | | | | | |
| 12-90 | Cable Diagnostic | [0] Disabled | 2 set-ups | | TRUE | - | Uint8 |
| 12-91 | MDI-X | [1] Enabled | 2 set-ups | | TRUE | - | Uint8 |
| 12-92 | IGMP Snooping | [1] Enabled | 2 set-ups | | TRUE | - | Uint8 |
| 12-93 | Cable Error Length | 0 N/A | 1 set-up | | TRUE | 0 | Uint16 |
| 12-94 | Broadcast Storm Protection | -1 % | 2 set-ups | | TRUE | 0 | Int8 |
| 12-95 | Broadcast Storm Filter | [0] Broadcast only | 2 set-ups | | TRUE | - | Uint8 |
| 12-96 | Port Mirroring | null | 2 set-ups | | TRUE | - | Uint8 |
| 12-98 | Interface Counters | 4000 N/A | All set-ups | | TRUE | 0 | Uint32 |
| 12-99 | Media Counters | 0 N/A | All set-ups | | TRUE | 0 | Uint32 |

4.1.15 13-** Smart Logic

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|----------------------------|-----------------------|----------------------|-------------|-------------|-------------------------|------------------|-------|
| 13-0* SLC Settings | | | | | | | |
| 13-00 | SL Controller Mode | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-01 | Start Event | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-02 | Stop Event | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-03 | Reset SLC | [0] Do not reset SLC | All set-ups | | TRUE | - | Uin8 |
| 13-1* Comparators | | | | | | | |
| 13-10 | Comparator Operand | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-11 | Comparator Operator | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-12 | Comparator Value | App.Dependent | 2 set-ups | | TRUE | -3 | Int32 |
| 13-1* RS Flip Flops | | | | | | | |
| 13-15 | RS-FF Operand S | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-16 | RS-FF Operand R | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-2* Timers | | | | | | | |
| 13-20 | SL Controller Timer | App.Dependent | 1 set-up | | TRUE | -3 | TimD |
| 13-4* Logic Rules | | | | | | | |
| 13-40 | Logic Rule Boolean 1 | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-41 | Logic Rule Operator 1 | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-42 | Logic Rule Boolean 2 | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-43 | Logic Rule Operator 2 | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-44 | Logic Rule Boolean 3 | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-5* States | | | | | | | |
| 13-51 | SL Controller Event | null | 2 set-ups | | TRUE | - | Uin8 |
| 13-52 | SL Controller Action | null | 2 set-ups | | TRUE | - | Uin8 |

4.1.16 14-** Special Functions

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|----------------------------------|-------------------------------------|----------------------|-------------|-------------|-------------------------|------------------|--------|
| 14-0* Inverter Switching | | | | | | | |
| 14-00 | Switching Pattern | null | All set-ups | | TRUE | - | UInt8 |
| 14-01 | Switching Frequency | null | All set-ups | | TRUE | - | UInt8 |
| 14-03 | Overmodulation | [1] On | All set-ups | | FALSE | - | UInt8 |
| 14-04 | PWM Random | [0] Off | All set-ups | | TRUE | - | UInt8 |
| 14-06 | Dead Time Compensation | [1] On | All set-ups | | TRUE | - | UInt8 |
| 14-1* Mains On/Off | | | | | | | |
| 14-10 | Mains Failure | [0] No function | All set-ups | | FALSE | - | UInt8 |
| 14-11 | Mains Voltage at Mains Fault | App.Dependent | All set-ups | | TRUE | 0 | UInt16 |
| 14-12 | Function at Mains Imbalance | [0] Trip | All set-ups | | TRUE | - | UInt8 |
| 14-13 | Mains Failure Step Factor | 1.0 N/A | All set-ups | | TRUE | -1 | UInt8 |
| 14-14 | Kin. Backup Time Out | 60 s | All set-ups | | TRUE | 0 | UInt8 |
| 14-2* Trip Reset | | | | | | | |
| 14-20 | Reset Mode | [0] Manual reset | All set-ups | | TRUE | - | UInt8 |
| 14-21 | Automatic Restart Time | App.Dependent | All set-ups | | TRUE | 0 | UInt16 |
| 14-22 | Operation Mode | [0] Normal operation | All set-ups | | TRUE | - | UInt8 |
| 14-23 | Typecode Setting | null | 2 set-ups | | FALSE | - | UInt8 |
| 14-24 | Trip Delay at Current Limit | 60 s | All set-ups | | TRUE | 0 | UInt8 |
| 14-25 | Trip Delay at Torque Limit | 60 s | All set-ups | | TRUE | 0 | UInt8 |
| 14-26 | Trip Delay at Inverter Fault | App.Dependent | All set-ups | | TRUE | 0 | UInt8 |
| 14-28 | Production Settings | [0] No action | All set-ups | | TRUE | - | UInt8 |
| 14-29 | Service Code | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 14-3* Current Limit Ctrl. | | | | | | | |
| 14-30 | Current Lim Ctrl, Proportional Gain | 100 % | All set-ups | | FALSE | 0 | UInt16 |
| 14-31 | Current Lim Ctrl, Integration Time | 0.020 s | All set-ups | | FALSE | -3 | UInt16 |
| 14-32 | Current Lim Ctrl, Filter Time | 1.0 ms | All set-ups | | TRUE | -4 | UInt16 |
| 14-35 | Stall Protection | [1] Enabled | All set-ups | | FALSE | - | UInt8 |
| 14-4* Energy Optimising | | | | | | | |
| 14-40 | VT Level | 66 % | All set-ups | | FALSE | 0 | UInt8 |
| 14-41 | AEO Minimum Magnetisation | App.Dependent | All set-ups | | TRUE | 0 | UInt8 |
| 14-42 | Minimum AEO Frequency | 10 Hz | All set-ups | | TRUE | 0 | UInt8 |
| 14-43 | Motor Cosphi | App.Dependent | All set-ups | | TRUE | -2 | UInt16 |
| 14-5* Environment | | | | | | | |
| 14-50 | RFI Filter | [1] On | 1 set-up | x | FALSE | - | UInt8 |
| 14-51 | DC Link Compensation | [1] On | 1 set-up | | TRUE | - | UInt8 |
| 14-52 | Fan Control | [0] Auto | All set-ups | | TRUE | - | UInt8 |
| 14-53 | Fan Monitor | [1] Warning | All set-ups | | TRUE | - | UInt8 |
| 14-55 | Output Filter | [0] No Filter | All set-ups | | FALSE | - | UInt8 |
| 14-56 | Capacitance Output Filter | App.Dependent | All set-ups | | FALSE | -7 | UInt16 |
| 14-57 | Inductance Output Filter | App.Dependent | All set-ups | | FALSE | -6 | UInt16 |
| 14-59 | Actual Number of Inverter Units | App.Dependent | 1 set-up | x | FALSE | 0 | UInt8 |

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-----------------------------|-----------------------------------|----------------------------|-------------|-------------|-------------------------|------------------|--------|
| 14-7* Compatibility | | | | | | | |
| 14-72 | Legacy Alarm Word | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |
| 14-73 | Legacy Warning Word | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |
| 14-74 | Leg. Ext. Status Word | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |
| 14-8* Options | | | | | | | |
| 14-80 | Option Supplied by External 24VDC | [1] Yes | 2 set-ups | | FALSE | - | Uint8 |
| 14-89 | Option Detection | [0] Protect Option Config. | 1 set-up | | TRUE | - | Uint8 |
| 14-9* Fault Settings | | | | | | | |
| 14-90 | Fault Level | null | 1 set-up | | TRUE | - | Uint8 |

4.1.17 15-** Drive Information

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-----------------------------------|-----------------------------------|------------------|-------------|-------------|-------------------------|------------------|------------|
| 15-0* Operating Data | | | | | | | |
| 15-00 | Operating Hours | 0 h | All set-ups | | FALSE | 74 | Uint32 |
| 15-01 | Running Hours | 0 h | All set-ups | | FALSE | 74 | Uint32 |
| 15-02 | kWh Counter | 0 kWh | All set-ups | | FALSE | 75 | Uint32 |
| 15-03 | Power Up's | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |
| 15-04 | Over Temp's | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 15-05 | Over Volt's | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 15-06 | Reset kWh Counter | [0] Do not reset | All set-ups | | TRUE | - | Uint8 |
| 15-07 | Reset Running Hours Counter | [0] Do not reset | All set-ups | | TRUE | - | Uint8 |
| 15-1* Data Log Settings | | | | | | | |
| 15-10 | Logging Source | 0 | 2 set-ups | | TRUE | - | Uint16 |
| 15-11 | Logging Interval | App.Dependent | 2 set-ups | | TRUE | -3 | TimD |
| 15-12 | Trigger Event | [0] False | 1 set-up | | TRUE | - | Uint8 |
| 15-13 | Logging Mode | [0] Log always | 2 set-ups | | TRUE | - | Uint8 |
| 15-14 | Samples Before Trigger | 50 N/A | 2 set-ups | | TRUE | 0 | Uint8 |
| 15-2* Historic Log | | | | | | | |
| 15-20 | Historic Log: Event | 0 N/A | All set-ups | | FALSE | 0 | Uint8 |
| 15-21 | Historic Log: Value | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |
| 15-22 | Historic Log: Time | 0 ms | All set-ups | | FALSE | -3 | Uint32 |
| 15-3* Fault Log | | | | | | | |
| 15-30 | Fault Log: Error Code | 0 N/A | All set-ups | | FALSE | 0 | Uint8 |
| 15-31 | Fault Log: Value | 0 N/A | All set-ups | | FALSE | 0 | Int16 |
| 15-32 | Fault Log: Time | 0 s | All set-ups | | FALSE | 0 | Uint32 |
| 15-4* Drive Identification | | | | | | | |
| 15-40 | FC Type | 0 N/A | All set-ups | | FALSE | 0 | VisStr[6] |
| 15-41 | Power Section | 0 N/A | All set-ups | | FALSE | 0 | VisStr[20] |
| 15-42 | Voltage | 0 N/A | All set-ups | | FALSE | 0 | VisStr[20] |
| 15-43 | Software Version | 0 N/A | All set-ups | | FALSE | 0 | VisStr[5] |
| 15-44 | Ordered Typecode String | 0 N/A | All set-ups | | FALSE | 0 | VisStr[40] |
| 15-45 | Actual Typecode String | 0 N/A | All set-ups | | FALSE | 0 | VisStr[40] |
| 15-46 | Frequency Converter Ordering No | 0 N/A | All set-ups | | FALSE | 0 | VisStr[8] |
| 15-47 | Power Card Ordering No | 0 N/A | All set-ups | | FALSE | 0 | VisStr[8] |
| 15-48 | LCP Id No | 0 N/A | All set-ups | | FALSE | 0 | VisStr[20] |
| 15-49 | SW ID Control Card | 0 N/A | All set-ups | | FALSE | 0 | VisStr[20] |
| 15-50 | SW ID Power Card | 0 N/A | All set-ups | | FALSE | 0 | VisStr[20] |
| 15-51 | Frequency Converter Serial Number | 0 N/A | All set-ups | | FALSE | 0 | VisStr[10] |
| 15-53 | Power Card Serial Number | 0 N/A | All set-ups | | FALSE | 0 | VisStr[19] |
| 15-59 | CSIV Filename | App.Dependent | 1 set-up | | FALSE | 0 | VisStr[16] |

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-----------------------------|---------------------------|---------------|-------------|-------------|-------------------------|------------------|------------|
| 15-6* Option Ident | | | | | | | |
| 15-60 | Option Mounted | 0 N/A | All set-ups | | FALSE | 0 | VisStr[30] |
| 15-61 | Option SW Version | 0 N/A | All set-ups | | FALSE | 0 | VisStr[20] |
| 15-62 | Option Ordering No | 0 N/A | All set-ups | | FALSE | 0 | VisStr[8] |
| 15-63 | Option Serial No | 0 N/A | All set-ups | | FALSE | 0 | VisStr[18] |
| 15-70 | Option in Slot A | 0 N/A | All set-ups | | FALSE | 0 | VisStr[30] |
| 15-71 | Slot A Option SW Version | 0 N/A | All set-ups | | FALSE | 0 | VisStr[20] |
| 15-72 | Option in Slot B | 0 N/A | All set-ups | | FALSE | 0 | VisStr[30] |
| 15-73 | Slot B Option SW Version | 0 N/A | All set-ups | | FALSE | 0 | VisStr[20] |
| 15-74 | Option in Slot C0 | 0 N/A | All set-ups | | FALSE | 0 | VisStr[30] |
| 15-75 | Slot C0 Option SW Version | 0 N/A | All set-ups | | FALSE | 0 | VisStr[20] |
| 15-76 | Option in Slot C1 | 0 N/A | All set-ups | | FALSE | 0 | VisStr[30] |
| 15-77 | Slot C1 Option SW Version | 0 N/A | All set-ups | | FALSE | 0 | VisStr[20] |
| 15-9* Parameter Info | | | | | | | |
| 15-92 | Defined Parameters | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 15-93 | Modified Parameters | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 15-98 | Drive Identification | 0 N/A | All set-ups | | FALSE | 0 | VisStr[40] |
| 15-99 | Parameter Metadata | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |

4.1.18 16-** Data Readouts

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|--------------------------------|------------------------|------------------------------|-------------|-------------|-------------------------|------------------|------------|
| 16-0* General Status | | | | | | | |
| 16-00 | Control Word | 0 N/A | All set-ups | | FALSE | 0 | V2 |
| 16-01 | Reference [Unit] | 0.000 ReferenceFeed-backUnit | All set-ups | | FALSE | -3 | Int32 |
| 16-02 | Reference % | 0.0 % | All set-ups | | FALSE | -1 | Int16 |
| 16-03 | Status Word | 0 N/A | All set-ups | | FALSE | 0 | V2 |
| 16-05 | Main Actual Value [%] | 0.00 % | All set-ups | | FALSE | -2 | N2 |
| 16-09 | Custom Readout | 0.00 CustomReadoutUnit | All set-ups | | FALSE | -2 | Int32 |
| 16-1* Motor Status | | | | | | | |
| 16-10 | Power [kW] | 0.00 kW | All set-ups | | FALSE | 1 | Int32 |
| 16-11 | Power [hp] | 0.00 hp | All set-ups | | FALSE | -2 | Int32 |
| 16-12 | Motor Voltage | 0.0 V | All set-ups | | FALSE | -1 | UInt16 |
| 16-13 | Frequency | 0.0 Hz | All set-ups | | FALSE | -1 | UInt16 |
| 16-14 | Motor Current | 0.00 A | All set-ups | | FALSE | -2 | Int32 |
| 16-15 | Frequency [%] | 0.00 % | All set-ups | | FALSE | -2 | N2 |
| 16-16 | Torque [Nm] | 0.0 Nm | All set-ups | | FALSE | -1 | Int16 |
| 16-17 | Speed [RPM] | 0 RPM | All set-ups | | FALSE | 67 | Int32 |
| 16-18 | Motor Thermal | 0 % | All set-ups | | FALSE | 0 | UInt8 |
| 16-19 | KTY sensor temperature | 0 °C | All set-ups | | FALSE | 100 | Int16 |
| 16-20 | Motor Angle | 0 N/A | All set-ups | | TRUE | 0 | UInt16 |
| 16-21 | Torque [%] High Res. | 0.0 % | All set-ups | | FALSE | -1 | Int16 |
| 16-22 | Torque [%] | 0 % | All set-ups | | FALSE | 0 | Int16 |
| 16-25 | Torque [Nm] High | 0.0 Nm | All set-ups | | FALSE | -1 | Int32 |
| 16-3* Drive Status | | | | | | | |
| 16-30 | DC Link Voltage | 0 V | All set-ups | | FALSE | 0 | UInt16 |
| 16-32 | Brake Energy /s | 0.000 kW | All set-ups | | FALSE | 0 | UInt32 |
| 16-33 | Brake Energy /2 min | 0.000 kW | All set-ups | | FALSE | 0 | UInt32 |
| 16-34 | Heatsink Temp. | 0 °C | All set-ups | | FALSE | 100 | UInt8 |
| 16-35 | Inverter Thermal | 0 % | All set-ups | | FALSE | 0 | UInt8 |
| 16-36 | Inv. Nom. Current | App.Dependent | All set-ups | | FALSE | -2 | UInt32 |
| 16-37 | Inv. Max. Current | App.Dependent | All set-ups | | FALSE | -2 | UInt32 |
| 16-38 | SL Controller State | 0 N/A | All set-ups | | FALSE | 0 | UInt8 |
| 16-39 | Control Card Temp. | 0 °C | All set-ups | | FALSE | 100 | UInt8 |
| 16-40 | Logging Buffer Full | [0] No | All set-ups | | TRUE | - | UInt8 |
| 16-41 | LCP Bottom Statusline | 0 N/A | All set-ups | | TRUE | 0 | VisStr[50] |
| 16-49 | Current Fault Source | 0 N/A | All set-ups | x | TRUE | 0 | UInt8 |
| 16-5* Ref. & Feedb. | | | | | | | |
| 16-50 | External Reference | 0.0 N/A | All set-ups | | FALSE | -1 | Int16 |
| 16-51 | Pulse Reference | 0.0 N/A | All set-ups | | FALSE | -1 | Int16 |
| 16-52 | Feedback [Unit] | 0.000 ReferenceFeed-backUnit | All set-ups | | FALSE | -3 | Int32 |
| 16-53 | Digi Pot Reference | 0.00 N/A | All set-ups | | FALSE | -2 | Int16 |
| 16-57 | Feedback [RPM] | 0 RPM | All set-ups | | FALSE | 67 | Int32 |

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-------------------------------------|----------------------------|---------------|-------------|-------------|-------------------------|------------------|--------|
| 16-6* Inputs & Outputs | | | | | | | |
| 16-60 | Digital Input | 0 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 16-61 | Terminal 53 Switch Setting | [0] Current | All set-ups | | FALSE | - | Uint8 |
| 16-62 | Analog Input 53 | 0.000 N/A | All set-ups | | FALSE | -3 | Int32 |
| 16-63 | Terminal 54 Switch Setting | [0] Current | All set-ups | | FALSE | - | Uint8 |
| 16-64 | Analog Input 54 | 0.000 N/A | All set-ups | | FALSE | -3 | Int32 |
| 16-65 | Analog Output 42 [mA] | 0.000 N/A | All set-ups | | FALSE | -3 | Int16 |
| 16-66 | Digital Output [bin] | 0 N/A | All set-ups | | FALSE | 0 | Int16 |
| 16-67 | Freq. Input #29 [Hz] | 0 N/A | All set-ups | x | FALSE | 0 | Int32 |
| 16-68 | Freq. Input #33 [Hz] | 0 N/A | All set-ups | | FALSE | 0 | Int32 |
| 16-69 | Pulse Output #27 [Hz] | 0 N/A | All set-ups | | FALSE | 0 | Int32 |
| 16-70 | Pulse Output #29 [Hz] | 0 N/A | All set-ups | x | FALSE | 0 | Int32 |
| 16-71 | Relay Output [bin] | 0 N/A | All set-ups | | FALSE | 0 | Int16 |
| 16-72 | Counter A | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 16-73 | Counter B | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 16-74 | Prec. Stop Counter | 0 N/A | All set-ups | | TRUE | 0 | Uint32 |
| 16-75 | Analog In X30/11 | 0.000 N/A | All set-ups | | FALSE | -3 | Int32 |
| 16-76 | Analog In X30/12 | 0.000 N/A | All set-ups | | FALSE | -3 | Int32 |
| 16-77 | Analog Out X30/8 [mA] | 0.000 N/A | All set-ups | | FALSE | -3 | Int16 |
| 16-78 | Analog Out X45/1 [mA] | 0.000 N/A | All set-ups | | FALSE | -3 | Int16 |
| 16-79 | Analog Out X45/3 [mA] | 0.000 N/A | All set-ups | | FALSE | -3 | Int16 |
| 16-8* Fieldbus & FC Port | | | | | | | |
| 16-80 | Fieldbus CTW 1 | 0 N/A | All set-ups | | FALSE | 0 | V2 |
| 16-82 | Fieldbus REF 1 | 0 N/A | All set-ups | | FALSE | 0 | N2 |
| 16-84 | Comm. Option STW | 0 N/A | All set-ups | | FALSE | 0 | V2 |
| 16-85 | FC Port CTW 1 | 0 N/A | All set-ups | | FALSE | 0 | V2 |
| 16-86 | FC Port REF 1 | 0 N/A | All set-ups | | FALSE | 0 | N2 |
| 16-9* Diagnosis Readouts | | | | | | | |
| 16-90 | Alarm Word | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |
| 16-91 | Alarm Word 2 | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |
| 16-92 | Warning Word | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |
| 16-93 | Warning Word 2 | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |
| 16-94 | Ext. Status Word | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |

4.1.19 17-** Motor Feedb.Option

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|----------------------------------|----------------------------|--------------------|-------------|-------------|-------------------------|------------------|--------|
| 17-1* Inc. Enc. Interface | | | | | | | |
| 17-10 | Signal Type | [1] RS422 (5V TTL) | All set-ups | | FALSE | - | Uint8 |
| 17-11 | Resolution (PPR) | 1024 N/A | All set-ups | | FALSE | 0 | Uint16 |
| 17-2* Abs. Enc. Interface | | | | | | | |
| 17-20 | Protocol Selection | [0] None | All set-ups | | FALSE | - | Uint8 |
| 17-21 | Resolution (Positions/Rev) | App.Dependent | All set-ups | | FALSE | 0 | Uint32 |
| 17-24 | SSI Data Length | 13 N/A | All set-ups | | FALSE | 0 | Uint8 |
| 17-25 | Clock Rate | App.Dependent | All set-ups | | FALSE | 3 | Uint16 |
| 17-26 | SSI Data Format | [0] Gray code | All set-ups | | FALSE | - | Uint8 |
| 17-34 | HIPERFACE Baudrate | [4] 9600 | All set-ups | | FALSE | - | Uint8 |
| 17-5* Resolver Interface | | | | | | | |
| 17-50 | Poles | 2 N/A | 1 set-up | | FALSE | 0 | Uint8 |
| 17-51 | Input Voltage | 7.0 V | 1 set-up | | FALSE | -1 | Uint8 |
| 17-52 | Input Frequency | 10.0 kHz | 1 set-up | | FALSE | 2 | Uint8 |
| 17-53 | Transformation Ratio | 0.5 N/A | 1 set-up | | FALSE | -1 | Uint8 |
| 17-56 | Encoder Sim. Resolution | [0] Disabled | 1 set-up | | FALSE | - | Uint8 |
| 17-59 | Resolver Interface | [0] Disabled | All set-ups | | FALSE | - | Uint8 |
| 17-6* Monitoring and App. | | | | | | | |
| 17-60 | Feedback Direction | [0] Clockwise | All set-ups | | FALSE | - | Uint8 |
| 17-61 | Feedback Signal Monitoring | [1] Warning | All set-ups | | TRUE | - | Uint8 |

4.1.20 18-** Data Readouts 2

4

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-------------------------------------|--------------------------------|---------------|-------------|-------------|-------------------------|------------------|--------|
| 18-3* Analog Readouts | | | | | | | |
| 18-36 | Analog Input X48/2 [mA] | 0.000 N/A | All set-ups | | TRUE | -3 | Int32 |
| 18-37 | Temp. Input X48/4 | 0 N/A | All set-ups | | TRUE | 0 | Int16 |
| 18-38 | Temp. Input X48/7 | 0 N/A | All set-ups | | TRUE | 0 | Int16 |
| 18-39 | Temp. Input X48/10 | 0 N/A | All set-ups | | TRUE | 0 | Int16 |
| 18-6* Inputs & Outputs 2 | | | | | | | |
| 18-60 | Digital Input 2 | 0 N/A | All set-ups | | FALSE | 0 | UInt16 |
| 18-90 PID Readouts | | | | | | | |
| 18-90 | Process PID Error | 0.0 % | All set-ups | | FALSE | -1 | Int16 |
| 18-91 | Process PID Output | 0.0 % | All set-ups | | FALSE | -1 | Int16 |
| 18-92 | Process PID Clamped Output | 0.0 % | All set-ups | | FALSE | -1 | Int16 |
| 18-93 | Process PID Gain Scaled Output | 0.0 % | All set-ups | | FALSE | -1 | Int16 |

4.1.21 30-** Special Features

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|--------------------------------|-------------------------------------|---------------------------|-------------|-------------|-------------------------|------------------|--------|
| 30-0* Wobbler | | | | | | | |
| 30-00 | Wobble Mode | [0] Abs. Freq., Abs. Time | All set-ups | | FALSE | - | Uint8 |
| 30-01 | Wobble Delta Frequency [Hz] | 5.0 Hz | All set-ups | | TRUE | -1 | Uint8 |
| 30-02 | Wobble Delta Frequency [%] | 25 % | All set-ups | | TRUE | 0 | Uint8 |
| 30-03 | Wobble Delta Freq. Scaling Resource | [0] No function | All set-ups | | TRUE | - | Uint8 |
| 30-04 | Wobble Jump Frequency [Hz] | 0.0 Hz | All set-ups | | TRUE | -1 | Uint8 |
| 30-05 | Wobble Jump Frequency [%] | 0 % | All set-ups | | TRUE | 0 | Uint8 |
| 30-06 | Wobble Jump Time | App.Dependent | All set-ups | | TRUE | -3 | Uint16 |
| 30-07 | Wobble Sequence Time | 10.0 s | All set-ups | | TRUE | -1 | Uint16 |
| 30-08 | Wobble Up/ Down Time | 5.0 s | All set-ups | | TRUE | -1 | Uint16 |
| 30-09 | Wobble Random Function | [0] Off | All set-ups | | TRUE | - | Uint8 |
| 30-10 | Wobble Ratio | 1.0 N/A | All set-ups | | TRUE | -1 | Uint8 |
| 30-11 | Wobble Random Ratio Max. | 10.0 N/A | All set-ups | | TRUE | -1 | Uint8 |
| 30-12 | Wobble Random Ratio Min. | 0.1 N/A | All set-ups | | TRUE | -1 | Uint8 |
| 30-19 | Wobble Delta Freq. Scaled | 0.0 Hz | All set-ups | | FALSE | -1 | Uint16 |
| 30-2* Adv. Start Adjust | | | | | | | |
| 30-20 | High Starting Torque Time [s] | 0.00 s | All set-ups | x | TRUE | -2 | Uint8 |
| 30-21 | High Starting Torque Current [%] | 100.0 % | All set-ups | x | TRUE | -1 | Uint32 |
| 30-22 | Locked Rotor Protection | [0] Off | All set-ups | x | TRUE | - | Uint8 |
| 30-23 | Locked Rotor Detection Time [s] | 0.10 s | All set-ups | x | TRUE | -2 | Uint8 |
| 30-8* Compatibility (I) | | | | | | | |
| 30-80 | d-axis Inductance (Ld) | App.Dependent | All set-ups | x | FALSE | -6 | Int32 |
| 30-81 | Brake Resistor (ohm) | App.Dependent | 1 set-up | | TRUE | -2 | Uint32 |
| 30-83 | Speed PID Proportional Gain | App.Dependent | All set-ups | | TRUE | -4 | Uint32 |
| 30-84 | Process PID Proportional Gain | 0.100 N/A | All set-ups | | TRUE | -3 | Uint16 |

4.1.22 32-** MCO Basic Settings

4

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|------------------------------|-----------------------------------|----------------------|-------------|-------------|-------------------------|------------------|--------|
| 32-0* Encoder 2 | | | | | | | |
| 32-00 | Incremental Signal Type | [1] RS422 (5V TTL) | 2 set-ups | | TRUE | - | Uint8 |
| 32-01 | Incremental Resolution | 1024 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-02 | Absolute Protocol | [0] None | 2 set-ups | | TRUE | - | Uint8 |
| 32-03 | Absolute Resolution | 8192 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-04 | Absolute Encoder Baudrate X55 | [4] 9600 | All set-ups | | FALSE | - | Uint8 |
| 32-05 | Absolute Encoder Data Length | 25 N/A | 2 set-ups | | TRUE | 0 | Uint8 |
| 32-06 | Absolute Encoder Clock Frequency | 262.000 kHz | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-07 | Absolute Encoder Clock Generation | [1] On | 2 set-ups | | TRUE | - | Uint8 |
| 32-08 | Absolute Encoder Cable Length | 0 m | 2 set-ups | | TRUE | 0 | Uint16 |
| 32-09 | Encoder Monitoring | [0] Off | 2 set-ups | | TRUE | - | Uint8 |
| 32-10 | Rotational Direction | [1] No action | 2 set-ups | | TRUE | - | Uint8 |
| 32-11 | User Unit Denominator | 1 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-12 | User Unit Numerator | 1 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-13 | Enc.2 Control | [0] No soft changing | 2 set-ups | | TRUE | - | Uint8 |
| 32-14 | Enc.2 node ID | 127 N/A | 2 set-ups | | TRUE | 0 | Uint8 |
| 32-15 | Enc.2 CAN guard | null | 2 set-ups | | TRUE | - | Uint8 |
| 32-3* Encoder 1 | | | | | | | |
| 32-30 | Incremental Signal Type | [1] RS422 (5V TTL) | 2 set-ups | | TRUE | - | Uint8 |
| 32-31 | Incremental Resolution | 1024 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-32 | Absolute Protocol | [0] None | 2 set-ups | | TRUE | - | Uint8 |
| 32-33 | Absolute Resolution | 8192 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-35 | Absolute Encoder Data Length | 25 N/A | 2 set-ups | | TRUE | 0 | Uint8 |
| 32-36 | Absolute Encoder Clock Frequency | 262.000 kHz | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-37 | Absolute Encoder Clock Generation | [1] On | 2 set-ups | | TRUE | - | Uint8 |
| 32-38 | Absolute Encoder Cable Length | 0 m | 2 set-ups | | TRUE | 0 | Uint16 |
| 32-39 | Encoder Monitoring | [0] Off | 2 set-ups | | TRUE | - | Uint8 |
| 32-40 | Encoder Termination | [1] On | 2 set-ups | | TRUE | - | Uint8 |
| 32-43 | Enc.1 Control | [0] No soft changing | 2 set-ups | | TRUE | - | Uint8 |
| 32-44 | Enc.1 node ID | 127 N/A | 2 set-ups | | TRUE | 0 | Uint8 |
| 32-45 | Enc.1 CAN guard | null | 2 set-ups | | TRUE | - | Uint8 |
| 32-5* Feedback Source | | | | | | | |
| 32-50 | Source Slave | [2] Encoder 2 | 2 set-ups | | TRUE | - | Uint8 |
| 32-51 | MCO 302 Last Will | [1] Trip | 2 set-ups | | TRUE | - | Uint8 |
| 32-52 | Source Master | [1] Encoder 1 X56 | 2 set-ups | | TRUE | - | Uint8 |

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|------------------------------------|---|-----------------------|-----------|-------------|-------------------------|------------------|--------|
| 32-6* PID Controller | | | | | | | |
| 32-60 | Proportional factor | 30 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-61 | Derivative factor | 0 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-62 | Integral factor | 0 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-63 | Limit Value for Integral Sum | 1000 N/A | 2 set-ups | | TRUE | 0 | Uint16 |
| 32-64 | PID Bandwidth | 1000 N/A | 2 set-ups | | TRUE | 0 | Uint16 |
| 32-65 | Velocity Feed-Forward | 0 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-66 | Acceleration Feed-Forward | 0 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-67 | Max. Tolerated Position Error | 20000 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-68 | Reverse Behavior for Slave | [0] Reversing allowed | 2 set-ups | | TRUE | - | Uint8 |
| 32-69 | Sampling Time for PID Control | 1 ms | 2 set-ups | | TRUE | -3 | Uint16 |
| 32-70 | Scan Time for Profile Generator | 1 ms | 2 set-ups | | TRUE | -3 | Uint8 |
| 32-71 | Size of the Control Window (Activation) | 0 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-72 | Size of the Control Window (Deactiv.) | 0 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-73 | Integral limit filter time | 0 ms | 2 set-ups | | TRUE | -3 | Int16 |
| 32-74 | Position error filter time | 0 ms | 2 set-ups | | TRUE | -3 | Int16 |
| 32-8* Velocity & Accel. | | | | | | | |
| 32-80 | Maximum Velocity (Encoder) | 1500 RPM | 2 set-ups | | TRUE | 67 | Uint32 |
| 32-81 | Shortest Ramp | 1.000 s | 2 set-ups | | TRUE | -3 | Uint32 |
| 32-82 | Ramp Type | [0] Linear | 2 set-ups | | TRUE | - | Uint8 |
| 32-83 | Velocity Resolution | 100 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-84 | Default Velocity | 50 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-85 | Default Acceleration | 50 N/A | 2 set-ups | | TRUE | 0 | Uint32 |
| 32-86 | Acc. up for limited jerk | 100 ms | 2 set-ups | | TRUE | -3 | Uint32 |
| 32-87 | Acc. down for limited jerk | 0 ms | 2 set-ups | | TRUE | -3 | Uint32 |
| 32-88 | Dec. up for limited jerk | 0 ms | 2 set-ups | | TRUE | -3 | Uint32 |
| 32-89 | Dec. down for limited jerk | 0 ms | 2 set-ups | | TRUE | -3 | Uint32 |
| 32-9* Development | | | | | | | |
| 32-90 | Debug Source | [0] Controlcard | 2 set-ups | | TRUE | - | Uint8 |

4.1.23 33-** MCO Adv. Settings

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|------------------------------|-------------------------------------|------------------------|-----------|-------------|-------------------------|------------------|--------|
| 33-0* Home Motion | | | | | | | |
| 33-00 | Force HOME | [0] Home not forced | 2 set-ups | | TRUE | - | UInt8 |
| 33-01 | Zero Point Offset from Home Pos. | 0 N/A | 2 set-ups | | TRUE | 0 | Int32 |
| 33-02 | Ramp for Home Motion | 10 N/A | 2 set-ups | | TRUE | 0 | UInt32 |
| 33-03 | Velocity of Home Motion | 10 N/A | 2 set-ups | | TRUE | 0 | Int32 |
| 33-04 | Behaviour during HomeMotion | [0] Revers and index | 2 set-ups | | TRUE | - | UInt8 |
| 33-1* Synchronization | | | | | | | |
| 33-10 | Sync Factor Master | 1 N/A | 2 set-ups | | TRUE | 0 | Int32 |
| 33-11 | Sync Factor Slave | 1 N/A | 2 set-ups | | TRUE | 0 | Int32 |
| 33-12 | Position Offset for Synchronization | 0 N/A | 2 set-ups | | TRUE | 0 | Int32 |
| 33-13 | Accuracy Window for Position Sync. | 1000 N/A | 2 set-ups | | TRUE | 0 | Int32 |
| 33-14 | Relative Slave Velocity Limit | 0 % | 2 set-ups | | TRUE | 0 | UInt8 |
| 33-15 | Marker Number for Master | 1 N/A | 2 set-ups | | TRUE | 0 | UInt16 |
| 33-16 | Marker Number for Slave | 1 N/A | 2 set-ups | | TRUE | 0 | UInt16 |
| 33-17 | Master Marker Distance | 4096 N/A | 2 set-ups | | TRUE | 0 | UInt32 |
| 33-18 | Slave Marker Distance | 4096 N/A | 2 set-ups | | TRUE | 0 | UInt32 |
| 33-19 | Master Marker Type | [0] Encoder Z positive | 2 set-ups | | TRUE | - | UInt8 |
| 33-20 | Slave Marker Type | [0] Encoder Z positive | 2 set-ups | | TRUE | - | UInt8 |
| 33-21 | Master Marker Tolerance Window | 0 N/A | 2 set-ups | | TRUE | 0 | UInt32 |
| 33-22 | Slave Marker Tolerance Window | 0 N/A | 2 set-ups | | TRUE | 0 | UInt32 |
| 33-23 | Start Behaviour for Marker Sync | [0] Start Function 1 | 2 set-ups | | TRUE | - | UInt16 |
| 33-24 | Marker Number for Fault | 10 N/A | 2 set-ups | | TRUE | 0 | UInt16 |
| 33-25 | Marker Number for Ready | 1 N/A | 2 set-ups | | TRUE | 0 | UInt16 |
| 33-26 | Velocity Filter | 0 us | 2 set-ups | | TRUE | -6 | Int32 |
| 33-27 | Offset Filter Time | 0 ms | 2 set-ups | | TRUE | -3 | UInt32 |
| 33-28 | Marker Filter Configuration | [0] Marker filter 1 | 2 set-ups | | TRUE | - | UInt8 |
| 33-29 | Filter Time for Marker Filter | 0 ms | 2 set-ups | | TRUE | -3 | Int32 |
| 33-30 | Maximum Marker Correction | 0 N/A | 2 set-ups | | TRUE | 0 | UInt32 |
| 33-31 | Synchronisation Type | [0] Standard | 2 set-ups | | TRUE | - | UInt8 |
| 33-32 | Feed Forward Velocity Adaptation | 0 N/A | 2 set-ups | | TRUE | 0 | UInt32 |
| 33-33 | Velocity Filter Window | 0 N/A | 2 set-ups | | TRUE | 0 | UInt32 |
| 33-34 | Slave Marker filter time | 0 ms | 2 set-ups | | TRUE | -3 | UInt32 |
| 33-4* Limit Handling | | | | | | | |
| 33-40 | Behaviour at End Limit Switch | [0] Call error handler | 2 set-ups | | TRUE | - | UInt8 |
| 33-41 | Negative Software End Limit | -500000 N/A | 2 set-ups | | TRUE | 0 | Int32 |
| 33-42 | Positive Software End Limit | 500000 N/A | 2 set-ups | | TRUE | 0 | Int32 |
| 33-43 | Negative Software End Limit Active | [0] Inactive | 2 set-ups | | TRUE | - | UInt8 |
| 33-44 | Positive Software End Limit Active | [0] Inactive | 2 set-ups | | TRUE | - | UInt8 |
| 33-45 | Time in Target Window | 0 ms | 2 set-ups | | TRUE | -3 | UInt8 |
| 33-46 | Target Window LimitValue | 1 N/A | 2 set-ups | | TRUE | 0 | UInt16 |
| 33-47 | Size of Target Window | 0 N/A | 2 set-ups | | TRUE | 0 | UInt16 |

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|--------------------------------|----------------------------------|---------------------|-----------|-------------|-------------------------|------------------|--------|
| 33-5* I/O Configuration | | | | | | | |
| 33-50 | Terminal X57/1 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-51 | Terminal X57/2 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-52 | Terminal X57/3 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-53 | Terminal X57/4 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-54 | Terminal X57/5 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-55 | Terminal X57/6 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-56 | Terminal X57/7 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-57 | Terminal X57/8 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-58 | Terminal X57/9 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-59 | Terminal X57/10 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-60 | Terminal X59/1 and X59/2 Mode | [1] Output | 2 set-ups | | FALSE | - | Uint8 |
| 33-61 | Terminal X59/1 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-62 | Terminal X59/2 Digital Input | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-63 | Terminal X59/1 Digital Output | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-64 | Terminal X59/2 Digital Output | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-65 | Terminal X59/3 Digital Output | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-66 | Terminal X59/4 Digital Output | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-67 | Terminal X59/5 Digital Output | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-68 | Terminal X59/6 Digital Output | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-69 | Terminal X59/7 Digital Output | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-70 | Terminal X59/8 Digital Output | [0] No function | 2 set-ups | | TRUE | - | Uint8 |
| 33-8* Global Parameters | | | | | | | |
| 33-80 | Activated Program Number | -1 N/A | 2 set-ups | | TRUE | 0 | Int8 |
| 33-81 | Power-up State | [1] Motor on | 2 set-ups | | TRUE | - | Uint8 |
| 33-82 | Drive Status Monitoring | [1] On | 2 set-ups | | TRUE | - | Uint8 |
| 33-83 | Behaviour afterError | [0] Coast | 2 set-ups | | TRUE | - | Uint8 |
| 33-84 | Behaviour afterEsc. | [0] Controlled stop | 2 set-ups | | TRUE | - | Uint8 |
| 33-85 | MCO Supplied by External 24VDC | [0] No | 2 set-ups | | TRUE | - | Uint8 |
| 33-86 | Terminal at alarm | [0] Relay 1 | 2 set-ups | | TRUE | - | Uint8 |
| 33-87 | Terminal state at alarm | [0] Do nothing | 2 set-ups | | TRUE | - | Uint8 |
| 33-88 | Status word at alarm | 0 N/A | 2 set-ups | | TRUE | 0 | Uint16 |
| 33-9* MCO Port Settings | | | | | | | |
| 33-90 | X62 MCO CAN node ID | 127 N/A | 2 set-ups | | TRUE | 0 | Uint8 |
| 33-91 | X62 MCO CAN baud rate | [20] 125 Kbps | 2 set-ups | | TRUE | - | Uint8 |
| 33-94 | X60 MCO RS485 serial termination | [0] Off | 2 set-ups | | TRUE | - | Uint8 |
| 33-95 | X60 MCO RS485 serial baud rate | [2] 9600 Baud | 2 set-ups | | TRUE | - | Uint8 |

4.1.24 34-** MCO Data Readouts

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|-----------------------------------|------------------------|---------------|-------------|-------------|-------------------------|------------------|--------|
| 34-0* PCD Write Par. | | | | | | | |
| 34-01 | PCD 1 Write to MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-02 | PCD 2 Write to MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-03 | PCD 3 Write to MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-04 | PCD 4 Write to MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-05 | PCD 5 Write to MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-06 | PCD 6 Write to MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-07 | PCD 7 Write to MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-08 | PCD 8 Write to MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-09 | PCD 9 Write to MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-10 | PCD 10 Write to MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-2* PCD Read Par. | | | | | | | |
| 34-21 | PCD 1 Read from MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-22 | PCD 2 Read from MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-23 | PCD 3 Read from MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-24 | PCD 4 Read from MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-25 | PCD 5 Read from MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-26 | PCD 6 Read from MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-27 | PCD 7 Read from MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-28 | PCD 8 Read from MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-29 | PCD 9 Read from MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-30 | PCD 10 Read from MCO | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-4* Inputs & Outputs | | | | | | | |
| 34-40 | Digital Inputs | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-41 | Digital Outputs | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-5* Process Data | | | | | | | |
| 34-50 | Actual Position | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-51 | Commanded Position | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-52 | Actual Master Position | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-53 | Slave Index Position | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-54 | Master Index Position | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-55 | Curve Position | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-56 | Track Error | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-57 | Synchronizing Error | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-58 | Actual Velocity | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-59 | Actual Master Velocity | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-60 | Synchronizing Status | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-61 | Axis Status | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-62 | Program Status | 0 N/A | All set-ups | | TRUE | 0 | Int32 |
| 34-64 | MCO 302 Status | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-65 | MCO 302 Control | 0 N/A | All set-ups | | TRUE | 0 | Uint16 |
| 34-7* Diagnosis readouts | | | | | | | |
| 34-70 | MCO Alarm Word 1 | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |
| 34-71 | MCO Alarm Word 2 | 0 N/A | All set-ups | | FALSE | 0 | Uint32 |

4.1.25 35-** Sensor Input Option

| Par. No. # | Parameter description | Default value | 4-set-up | FC 302 only | Change during operation | Conversion index | Type |
|---------------------------------|------------------------------------|-------------------|-------------|-------------|-------------------------|------------------|--------|
| 35-0* Temp. Input Mode | | | | | | | |
| 35-00 | Term. X48/4 Temp. Unit | [60] °C | All set-ups | | TRUE | - | Uint8 |
| 35-01 | Term. X48/4 Input Type | [0] Not Connected | All set-ups | | TRUE | - | Uint8 |
| 35-02 | Term. X48/7 Temp. Unit | [60] °C | All set-ups | | TRUE | - | Uint8 |
| 35-03 | Term. X48/7 Input Type | [0] Not Connected | All set-ups | | TRUE | - | Uint8 |
| 35-04 | Term. X48/10 Temp. Unit | [60] °C | All set-ups | | TRUE | - | Uint8 |
| 35-05 | Term. X48/10 Input Type | [0] Not Connected | All set-ups | | TRUE | - | Uint8 |
| 35-06 | Temperature Sensor Alarm Function | [5] Stop and trip | All set-ups | | TRUE | - | Uint8 |
| 35-1* Temp. Input X48/4 | | | | | | | |
| 35-14 | Term. X48/4 Filter Time Constant | 0.001 s | All set-ups | | TRUE | -3 | Uint16 |
| 35-15 | Term. X48/4 Temp. Monitor | [0] Disabled | All set-ups | | TRUE | - | Uint8 |
| 35-16 | Term. X48/4 Low Temp. Limit | App.Dependent | All set-ups | | TRUE | 0 | Int16 |
| 35-17 | Term. X48/4 High Temp. Limit | App.Dependent | All set-ups | | TRUE | 0 | Int16 |
| 35-2* Temp. Input X48/7 | | | | | | | |
| 35-24 | Term. X48/7 Filter Time Constant | 0.001 s | All set-ups | | TRUE | -3 | Uint16 |
| 35-25 | Term. X48/7 Temp. Monitor | [0] Disabled | All set-ups | | TRUE | - | Uint8 |
| 35-26 | Term. X48/7 Low Temp. Limit | App.Dependent | All set-ups | | TRUE | 0 | Int16 |
| 35-27 | Term. X48/7 High Temp. Limit | App.Dependent | All set-ups | | TRUE | 0 | Int16 |
| 35-3* Temp. Input X48/10 | | | | | | | |
| 35-34 | Term. X48/10 Filter Time Constant | 0.001 s | All set-ups | | TRUE | -3 | Uint16 |
| 35-35 | Term. X48/10 Temp. Monitor | [0] Disabled | All set-ups | | TRUE | - | Uint8 |
| 35-36 | Term. X48/10 Low Temp. Limit | App.Dependent | All set-ups | | TRUE | 0 | Int16 |
| 35-37 | Term. X48/10 High Temp. Limit | App.Dependent | All set-ups | | TRUE | 0 | Int16 |
| 35-4* Analog Input X48/2 | | | | | | | |
| 35-42 | Term. X48/2 Low Current | 4.00 mA | All set-ups | | TRUE | -5 | Int16 |
| 35-43 | Term. X48/2 High Current | 20.00 mA | All set-ups | | TRUE | -5 | Int16 |
| 35-44 | Term. X48/2 Low Ref./Feedb. Value | 0.000 N/A | All set-ups | | TRUE | -3 | Int32 |
| 35-45 | Term. X48/2 High Ref./Feedb. Value | 100.000 N/A | All set-ups | | TRUE | -3 | Int32 |
| 35-46 | Term. X48/2 Filter Time Constant | 0.001 s | All set-ups | | TRUE | -3 | Uint16 |

5 Troubleshooting

5.1.1 Warnings/Alarm Messages

A warning or an alarm is signalled by the relevant LED on the front of the frequency converter and indicated by a code on the display.

A warning remains active until its cause is no longer present. Under certain circumstances operation of the motor may still be continued. Warning messages may be critical, but are not necessarily so.

In the event of an alarm, the frequency converter will have tripped. Alarms must be reset to restart operation once their cause has been rectified.

This may be done in three ways:

1. By using the [RESET] control button on the LCP.
2. Via a digital input with the "Reset" function.
3. Via serial communication/optional fieldbus.

NOTE

After a manual reset using the [RESET] button on the LCP, the [AUTO ON] button must be pressed to restart the motor.

If an alarm cannot be reset, the reason may be that its cause has not been rectified, or the alarm is trip-locked (see also table on following page).

Alarms that are trip-locked offer additional protection, meaning that the mains supply must be switched off before the alarm can be reset. After being switched back on, the frequency converter is no longer blocked and may be reset as described above once the cause has been rectified.

Alarms that are not trip-locked can also be reset using the automatic reset function in *14-20 Reset Mode* (Warning: automatic wake-up is possible!)

If a warning and alarm is marked against a code in the table on the following page, this means that either a warning occurs before an alarm, or else that you can specify whether it is a warning or an alarm that is to be displayed for a given fault.

This is possible, for instance, in *1-90 Motor Thermal Protection*. After an alarm or trip, the motor carries on coasting, and the alarm and warning flash. Once the problem has been rectified, only the alarm continues flashing until the frequency converter is reset.

| No. | Description | Warning | Alarm/Trip | Alarm/Trip Lock | Parameter Reference |
|-----|-----------------------------------|---------|------------|-----------------|---|
| 1 | 10 Volts low | X | | | |
| 2 | Live zero error | (X) | (X) | | 6-01 <i>Live Zero Timeout Function</i> |
| 3 | No motor | (X) | | | 1-80 <i>Function at Stop</i> |
| 4 | Mains phase loss | (X) | (X) | (X) | 14-12 <i>Function at Mains Imbalance</i> |
| 5 | DC link voltage high | X | | | |
| 6 | DC link voltage low | X | | | |
| 7 | DC over-voltage | X | X | | |
| 8 | DC under voltage | X | X | | |
| 9 | Inverter overloaded | X | X | | |
| 10 | Motor ETR over temperature | (X) | (X) | | 1-90 <i>Motor Thermal Protection</i> |
| 11 | Motor thermistor over temperature | (X) | (X) | | 1-90 <i>Motor Thermal Protection</i> |
| 12 | Torque limit | X | X | | |
| 13 | Over Current | X | X | X | |
| 14 | Earth Fault | X | X | X | |
| 15 | Hardware mismatch | | X | X | |
| 16 | Short Circuit | | X | X | |
| 17 | Control word time-out | (X) | (X) | | 8-04 <i>Control Word Timeout Function</i> |
| 20 | Temp. Input Error | | | | |

| No. | Description | Warning | Alarm/Trip | Alarm/Trip Lock | Parameter Reference |
|-----|--|---------|------------|-----------------|--|
| 21 | Param Error | | | | |
| 22 | Hoist Mech. Brake | (X) | (X) | | Parameter group 2-2* |
| 23 | Internal Fans | X | | | |
| 24 | External Fans | X | | | |
| 25 | Brake resistor short-circuited | X | | | |
| 26 | Brake resistor power limit | (X) | (X) | | 2-13 <i>Brake Power Monitoring</i> |
| 27 | Brake chopper short-circuited | X | X | | |
| 28 | Brake check | (X) | (X) | | 2-15 <i>Brake Check</i> |
| 29 | Heatsink temp | X | X | X | |
| 30 | Motor phase U missing | (X) | (X) | (X) | 4-58 <i>Missing Motor Phase Function</i> |
| 31 | Motor phase V missing | (X) | (X) | (X) | 4-58 <i>Missing Motor Phase Function</i> |
| 32 | Motor phase W missing | (X) | (X) | (X) | 4-58 <i>Missing Motor Phase Function</i> |
| 33 | Inrush Fault | | X | X | |
| 34 | Fieldbus communication fault | X | X | | |
| 35 | Option Fault | | | | |
| 36 | Mains failure | X | X | | |
| 37 | Phase imbalance | | X | | |
| 38 | Internal Fault | | X | X | |
| 39 | Heatsink sensor | | X | X | |
| 40 | Overload of Digital Output Terminal 27 | (X) | | | 5-00 <i>Digital I/O Mode</i> , 5-01 <i>Terminal 27 Mode</i> |
| 41 | Overload of Digital Output Terminal 29 | (X) | | | 5-00 <i>Digital I/O Mode</i> , 5-02 <i>Terminal 29 Mode</i> |
| 42 | Ovrlid X30/6-7 | (X) | | | |
| 43 | Ext. Supply (option) | | | | |
| 45 | Earth Fault 2 | X | X | X | |
| 46 | Pwr. card supply | | X | X | |
| 47 | 24 V supply low | X | X | X | |
| 48 | 1.8 V supply low | | X | X | |
| 49 | Speed limit | X | | | |
| 50 | AMA calibration failed | | X | | |
| 51 | AMA check U_{nom} and I_{nom} | | X | | |
| 52 | AMA low I_{nom} | | X | | |
| 53 | AMA motor too big | | X | | |
| 54 | AMA motor too small | | X | | |
| 55 | AMA parameter out of range | | X | | |
| 56 | AMA interrupted by user | | X | | |
| 57 | AMA time-out | | X | | |
| 58 | AMA internal fault | X | X | | |
| 59 | Current limit | X | | | |
| 60 | External Interlock | X | X | | |
| 61 | Feedback Error | (X) | (X) | | 4-30 <i>Motor Feedback Loss Function</i> |
| 62 | Output Frequency at Maximum Limit | X | | | |
| 63 | Mechanical Brake Low | | (X) | | 2-20 <i>Release Brake Current</i> |
| 64 | Voltage Limit | X | | | |
| 65 | Control Board Over-temperature | X | X | X | |

| No. | Description | Warning | Alarm/Trip | Alarm/Trip Lock | Parameter Reference |
|-----|------------------------------------|---------|-------------------|-----------------|---------------------------------------|
| 66 | Heat sink Temperature Low | X | | | |
| 67 | Option Configuration has Changed | | X | | |
| 68 | Safe Stop | (X) | (X) ¹⁾ | | 5-19 Terminal 37 Safe Stop |
| 69 | Pwr. Card Temp | | X | X | |
| 70 | Illegal FC configuration | | | X | |
| 71 | PTC 1 Safe Stop | | | | |
| 72 | Dangerous failure | | | | |
| 73 | Safe Stop Auto Restart | (X) | (X) | | 5-19 Terminal 37 Safe Stop |
| 74 | PTC Thermistor | | | X | |
| 75 | Illegal Profile Sel. | | X | | |
| 76 | Power Unit Setup | X | | | |
| 77 | Reduced power mode | X | | | 14-59 Actual Number of Inverter Units |
| 78 | Tracking Error | (X) | (X) | | 4-34 Tracking Error Function |
| 79 | Illegal PS config | | X | X | |
| 80 | Drive Initialized to Default Value | | X | | |
| 81 | CSIV corrupt | | X | | |
| 82 | CSIV parameter error | | X | | |
| 83 | Illegal Option Combination | | | X | |
| 84 | No Safety Option | | X | | |
| 88 | Option Detection | | | X | |
| 89 | Mechanical Brake Sliding | X | | | |
| 90 | Feedback Monitor | (X) | (X) | | 17-61 Feedback Signal Monitoring |
| 91 | Analog input 54 wrong settings | | | X | S202 |
| 163 | ATEX ETR cur.lim.warning | X | | | |
| 164 | ATEX ETR cur.lim.alarm | | X | | |
| 165 | ATEX ETR freq.lim.warning | X | | | |
| 166 | ATEX ETR freq.lim.alarm | | X | | |
| 243 | Brake IGBT | X | X | X | |
| 244 | Heatsink temp | X | X | X | |
| 245 | Heatsink sensor | | X | X | |
| 246 | Pwr.card supply | | | X | |
| 247 | Pwr.card temp | | X | X | |
| 248 | Illegal PS config | | | X | |
| 249 | Rect. low temp. | X | | | |
| 250 | New spare parts | | | X | |
| 251 | New Type Code | | X | X | |

Table 5.1 Alarm/Warning code list

(X) Dependent on parameter

1) Can not be Auto reset via 14-20 Reset Mode

A trip is the action when an alarm has appeared. The trip will coast the motor and can be reset by pressing the reset button or make a reset by a digital input (parameter group 5-1* [1]). The origin event that caused an alarm cannot damage the frequency converter or cause dangerous conditions. A trip lock is an action when an alarm occurs, which may cause damage to the frequency converter or

connected parts. A Trip Lock situation can only be reset by a power cycling.

| LED indication | |
|----------------|----------------|
| Warning | yellow |
| Alarm | flashing red |
| Trip locked | yellow and red |

| Bit | Hex | Dec | Alarm Word | Alarm Word 2 | Warning Word | Warning Word 2 | Extended Status Word |
|--|----------|--------|-----------------------|---------------------------------|----------------------|----------------|---|
| Alarm Word Extended Status Word | | | | | | | |
| 0 | 00000001 | 1 | Brake Check (A28) | ServiceTrip, Read/Write | Brake Check (W28) | reserved | Ramping |
| 1 | 00000002 | 2 | Heatsink temp. (A29) | ServiceTrip, (reserved) | Heatsink temp. (W29) | reserved | AMA Running |
| 2 | 00000004 | 4 | Earth Fault (A14) | ServiceTrip, Typecode/Sparepart | Earth Fault (W14) | reserved | Start CW/CCW NOT start_possible start_possible is active, when the DI selections [12] OR [13] are active and the requested direction matches the reference sign |
| 3 | 00000008 | 8 | Ctrl.Card Temp (A65) | ServiceTrip, (reserved) | Ctrl.Card Temp (W65) | reserved | Slow Down slow down command active, e.g. via CTW bit 11 or DI |
| 4 | 00000010 | 16 | Ctrl. Word TO (A17) | ServiceTrip, (reserved) | Ctrl. Word TO (W17) | | Catch Up catch up command active, e.g. via CTW bit 12 or DI |
| 5 | 00000020 | 32 | Over Current (A13) | reserved | Over Current (W13) | reserved | Feedback High feedback > p4-57 |
| 6 | 00000040 | 64 | Torque Limit (A12) | reserved | Torque Limit (W12) | reserved | Feedback Low feedback < p4-56 |
| 7 | 00000080 | 128 | Motor Th Over (A11) | reserved | Motor Th Over (W11) | reserved | Output Current High current > p4-51 |
| 8 | 00000100 | 256 | Motor ETR Over (A10) | reserved | Motor ETR Over (W10) | reserved | Output Current Low current < p4-50 |
| 9 | 00000200 | 512 | Inverter Overld. (A9) | reserved | Inverter Overld (W9) | reserved | Output Freq High speed > p4-53 |
| 10 | 00000400 | 1024 | DC under Volt (A8) | reserved | DC under Volt (W8) | | Output Freq Low speed < p4-52 |
| 11 | 00000800 | 2048 | DC over Volt (A7) | reserved | DC over Volt (W7) | | Brake Check OK brake test NOT ok |
| 12 | 00001000 | 4096 | Short Circuit (A16) | reserved | DC Voltage Low (W6) | reserved | Braking Max BrakePower > BrakePowerLimit (p212) |
| 13 | 00002000 | 8192 | Inrush Fault (A33) | reserved | DC Voltage High (W5) | | Braking |
| 14 | 00004000 | 16384 | Mains ph. Loss (A4) | reserved | Mains ph. Loss (W4) | | Out of Speed Range |
| 15 | 00008000 | 32768 | AMA Not OK | reserved | No Motor (W3) | | OVC Active |
| 16 | 00010000 | 65536 | Live Zero Error (A2) | reserved | Live Zero Error (W2) | | AC Brake |
| 17 | 00020000 | 131072 | Internal Fault (A38) | KTY error | 10V Low (W1) | KTY Warn | Password Timelock number of allowed password trials exceeded - timelock active |
| 18 | 00040000 | 262144 | Brake Overload (A26) | Fans error | Brake Overload (W26) | Fans Warn | Password Protection p0-61 = ALL_NO_ACCESS OR BUS_NO_ACCESS OR BUS_READONLY |

| Bit | Hex | Dec | Alarm Word | Alarm Word 2 | Warning Word | Warning Word 2 | Extended Status Word |
|-----|----------|------------|------------------------|---------------------------|---------------------------|-----------------------|---|
| 19 | 00080000 | 524288 | U phase Loss (A30) | ECB error | Brake Resistor (W25) | ECB Warn | Reference High reference > p4-55 |
| 20 | 00100000 | 1048576 | V phase Loss (A31) | reserved | Brake IGBT (W27) | reserved | Reference Low reference < p4-54 |
| 21 | 00200000 | 2097152 | W phase Loss (A32) | reserved | Speed Limit (W49) | reserved | Local Reference reference site = REMOTE -> auto on pressed & active |
| 22 | 00400000 | 4194304 | Fieldbus Fault (A34) | reserved | Fieldbus Fault (W34) | reserved | Protection Mode |
| 23 | 00800000 | 8388608 | 24 V Supply Low (A47) | reserved | 24V Supply Low (W47) | reserved | Unused |
| 24 | 01000000 | 16777216 | Mains Failure (A36) | reserved | Mains Failure (W36) | reserved | Unused |
| 25 | 02000000 | 33554432 | 1.8V Supply Low (A48) | reserved | Current Limit (W59) | reserved | Unused |
| 26 | 04000000 | 67108864 | Brake Resistor (A25) | reserved | Low Temp (W66) | reserved | Unused |
| 27 | 08000000 | 134217728 | Brake IGBT (A27) | reserved | Voltage Limit (W64) | reserved | Unused |
| 28 | 10000000 | 268435456 | Option Change (A67) | reserved | Encoder loss (W90) | reserved | Unused |
| 29 | 20000000 | 536870912 | Drive Initialized(A80) | Feedback Fault (A61, A90) | Feedback Fault (W61, W90) | | Unused |
| 30 | 40000000 | 1073741824 | Safe Stop (A68) | PTC 1 Safe Stop (A71) | Safe Stop (W68) | PTC 1 Safe Stop (W71) | Unused |
| 31 | 80000000 | 2147483648 | Mech. brake low (A63) | Dangerous Failure (A72) | Extended Status Word | | Unused |

Table 5.2 Description of Alarm Word, Warning Word and Extended Status Word

The alarm words, warning words and extended status words can be read out via serial bus or optional fieldbus for diagnose. See also 16-94 Ext. Status Word.

WARNING 1, 10 Volts low

The control card voltage is below 10V from terminal 50. Remove some of the load from terminal 50, as the 10V supply is overloaded. Max. 15mA or minimum 590 Ω.

This condition can be caused by a short in a connected potentiometer or improper wiring of the potentiometer.

Troubleshooting

Remove the wiring from terminal 50. If the warning clears, the problem is with the customer wiring. If the warning does not clear, replace the control card.

WARNING/ALARM 2, Live zero error

This warning or alarm will only appear if programmed by the user in *6-01 Live Zero Timeout Function*. The signal on one of the analog inputs is less than 50% of the minimum value programmed for that input. This condition can be caused by broken wiring or faulty device sending the signal.

Troubleshooting

Check connections on all the analog input terminals. Control card terminals 53 and 54 for signals, terminal 55 common. MCB 101 terminals 11 and 12 for signals, terminal 10 common. MCB 109 terminals 1, 3, 5 for signals, terminals 2, 4, 6 common).

Check that the frequency converter programming and switch settings match the analog signal type.

Perform Input Terminal Signal Test.

WARNING/ALARM 3, No motor

No motor has been connected to the output of the frequency converter.

WARNING/ALARM 4, Mains phase loss

A phase is missing on the supply side, or the mains voltage imbalance is too high. This message also appears for a fault in the input rectifier on the frequency converter. Options are programmed at *14-12 Function at Mains Imbalance*.

Troubleshooting

Check the supply voltage and supply currents to the frequency converter.

WARNING 5, DC link voltage high

The intermediate circuit voltage (DC) is higher than the high voltage warning limit. The limit is dependent on the frequency converter voltage rating. The frequency converter is still active.

WARNING 6, DC link voltage low

The intermediate circuit voltage (DC) is lower than the low voltage warning limit. The limit is dependent on the frequency converter voltage rating. The frequency converter is still active.

WARNING/ALARM 7, DC overvoltage

If the intermediate circuit voltage exceeds the limit, the frequency converter trips after a time.

Troubleshooting

Connect a brake resistor

Extend the ramp time

Change the ramp type

Activate functions in *2-10 Brake Function*

Increase *14-26 Trip Delay at Inverter Fault*

WARNING/ALARM 8, DC under voltage

If the intermediate circuit voltage (DC) drops below the under voltage limit, the frequency converter checks if a 24V DC backup supply is connected. If no 24V DC backup supply is connected, the frequency converter trips after a fixed time delay. The time delay varies with unit size.

Troubleshooting

Check that the supply voltage matches the frequency converter voltage.

Perform Input voltage test

Perform soft charge and rectifier circuit test

WARNING/ALARM 9, Inverter overload

The frequency converter is about to cut out because of an overload (too high current for too long). The counter for electronic, thermal inverter protection gives a warning at 98% and trips at 100%, while giving an alarm. The frequency converter *cannot* be reset until the counter is below 90%. The fault is that the frequency converter is overloaded by more than 100% for too long.

Troubleshooting

Compare the output current shown on the LCP with the frequency converter rated current.

Compare the output current shown on the LCP with measured motor current.

Display the Thermal Drive Load on the LCP and monitor the value. When running above the frequency converter continuous current rating, the counter should increase. When running below the frequency converter continuous current rating, the counter should decrease.

See the derating section in the *Design Guide* for more details if a high switching frequency is required.

WARNING/ALARM 10, Motor overload temperature

According to the electronic thermal protection (ETR), the motor is too hot. Select whether the frequency converter gives a warning or an alarm when the counter reaches 100% in *1-90 Motor Thermal Protection*. The fault occurs when the motor is overloaded by more than 100% for too long.

Troubleshooting

Check for motor overheating.

Check if the motor is mechanically overloaded

Check that the motor current set in *1-24 Motor Current* is correct.

Ensure that Motor data in parameters 1-20 through 1-25 are set correctly.

If an external fan is in use, check in *1-91 Motor External Fan* that it is selected.

Running AMA in *1-29 Automatic Motor Adaptation (AMA)* may tune the frequency converter to the motor more accurately and reduce thermal loading.

WARNING/ALARM 11, Motor thermistor over temp

The thermistor might be disconnected. Select whether the frequency converter gives a warning or an alarm in *1-90 Motor Thermal Protection*.

Troubleshooting

Check for motor overheating.

Check if the motor is mechanically overloaded.

When using terminal 53 or 54, check that the thermistor is connected correctly between either terminal 53 or 54 (analog voltage input) and terminal 50 (+10V supply) and that the terminal switch for 53 or 54 is set for voltage. Check *1-93 Thermistor Source* selects terminal 53 or 54.

When using digital inputs 18 or 19, check that the thermistor is connected correctly between either terminal 18 or 19 (digital input PNP only) and terminal 50. Check *1-93 Thermistor Source* selects terminal 18 or 19.

WARNING/ALARM 12, Torque limit

The torque has exceeded the value in *4-16 Torque Limit Motor Mode* or the value in *4-17 Torque Limit Generator Mode*. *14-25 Trip Delay at Torque Limit* can change this from a warning only condition to a warning followed by an alarm.

Troubleshooting

If the motor torque limit is exceeded during ramp up, extend the ramp up time.

If the generator torque limit is exceeded during ramp down, extend the ramp down time.

If torque limit occurs while running, possibly increase the torque limit. Be sure the system can operate safely at a higher torque.

Check the application for excessive current draw on the motor.

WARNING/ALARM 13, Over current

The inverter peak current limit (approx. 200% of the rated current) is exceeded. The warning lasts about 1.5 sec., then the frequency converter trips and issues an alarm. This fault may be caused by shock loading or fast acceleration with high inertia loads. If extended mechanical brake control is selected, trip can be reset externally.

Troubleshooting

Remove power and check if the motor shaft can be turned.

Check that the motor size matches the frequency converter.

Check parameters 1-20 through 1-25 for correct motor data.

ALARM 14, Earth (ground) fault

There is current from the output phases to earth, either in the cable between the frequency converter and the motor or in the motor itself.

Troubleshooting

Remove power to the frequency converter and repair the earth fault.

Check for earth faults in the motor by measuring the resistance to ground of the motor leads and the motor with a megohmmeter.

ALARM 15, Hardware mismatch

A fitted option is not operational with the present control board hardware or software.

Record the value of the following parameters and contact your Danfoss supplier:

15-40 FC Type

15-41 Power Section

15-42 Voltage

15-43 Software Version

15-45 Actual Typecode String

15-49 SW ID Control Card

15-50 SW ID Power Card

15-60 Option Mounted

15-61 Option SW Version

ALARM 16, Short circuit

There is a short circuit in the motor or motor wiring.

Remove power to the frequency converter and repair the short circuit.

WARNING/ALARM 17, Control word timeout

There is no communication to the frequency converter.

The warning will only be active when *8-04 Control Timeout Function* is NOT set to [0] OFF.

If *8-04 Control Timeout Function* is set to *Stop and Trip*, a warning appears and the frequency converter ramps down until it stops then displays an alarm.

Troubleshooting

Check connections on the serial communication cable.

Increase *8-03 Control Timeout Time*

Check operation of the communication equipment.

Verify proper installation based on EMC requirements.

WARNING/ALARM 20, Temp. input error

The temperature sensor is not connected.

WARNING/ALARM 21, Parameter error

The parameter is out of range. The parameter number is reported in the LCP. The affected parameter must be set to a valid value.

WARNING/ALARM 22, Hoist mechanical brake

Report value will show what kind it is. 0 = The torque ref. was not reached before timeout. 1 = There was no brake feedback before timeout.

WARNING 23, Internal fan fault

The fan warning function checks if the fan is running. The fan warning can be disabled in *14-53 Fan Monitor*.

Troubleshooting

Check for proper fan operation.

Cycle power to the frequency converter and check that the fan operates briefly at start up.

Check the sensors on the heatsink and control card.

WARNING 24, External fan fault

The fan warning function checks if the fan is running. The fan warning can be disabled in *14-53 Fan Monitor*.

Troubleshooting

Check for proper fan operation.

Cycle power to the frequency converter and check that the fan operates briefly at start up.

Check the sensors on the heatsink and control card.

WARNING 25, Brake resistor short circuit

The brake resistor is monitored during operation. If a short circuit occurs, the brake function is disabled and the warning appears. The frequency converter is still operational but without the brake function. Remove power to the frequency converter and replace the brake resistor (see *2-15 Brake Check*).

WARNING/ALARM 26, Brake resistor power limit

The power transmitted to the brake resistor is calculated as a mean value over the last 120 seconds of run time. The calculation is based on the intermediate circuit voltage and the brake resistance value set in *2-16 AC brake Max. Current*. The warning is active when the dissipated braking is higher than 90% of the brake resistance power. If *Trip [2]* is selected in *2-13 Brake Power Monitoring*, the frequency converter will trip when the dissipated braking power reaches 100%.

WARNING/ALARM 27, Brake chopper fault

The brake transistor is monitored during operation and if a short circuit occurs, the brake function is disabled and a warning is issued. The frequency converter is still operational but, since the brake transistor has short-circuited, substantial power is transmitted to the brake resistor, even if it is inactive.

Remove power to the frequency converter and remove the brake resistor.

WARNING/ALARM 28, Brake check failed

The brake resistor is not connected or not working. Check *2-15 Brake Check*.

ALARM 29, Heatsink temp

The maximum temperature of the heatsink has been exceeded. The temperature fault will not reset until the temperature falls below the reset heatsink temperature. The trip and reset points are based on the frequency converter power size.

Troubleshooting

Check for the following conditions.

Ambient temperature too high.

Motor cable too long.

Incorrect airflow clearance above and below the frequency converter.

Blocked airflow around the frequency converter.

Damaged heatsink fan.

Dirty heatsink.

ALARM 30, Motor phase U missing

Motor phase U between the frequency converter and the motor is missing.

Remove power from the frequency converter and check motor phase U.

ALARM 31, Motor phase V missing

Motor phase V between the frequency converter and the motor is missing.

Remove power from the frequency converter and check motor phase V.

ALARM 32, Motor phase W missing

Motor phase W between the frequency converter and the motor is missing.

Remove power from the frequency converter and check motor phase W.

ALARM 33, Inrush fault

Too many power-ups have occurred within a short time period. Let the unit cool to operating temperature.

WARNING/ALARM 34, communication fault

Communication between the and the communication option card is not operating.

WARNING/ALARM 35, Option fault

An option alarm is received. The alarm is option specific. The most likely cause is a power-up or a communication fault.

WARNING/ALARM 36, Mains failure

This warning/alarm is only active if the supply voltage to the frequency converter is lost and *14-10 Mains Failure* is NOT set to [0] *No Function*. Check the fuses to the frequency converter and mains power supply to the unit.

ALARM 37, Phase imbalance

There is a current imbalance between the power units

ALARM 38, Internal fault

When an internal fault occurs, a code number defined in the table below is displayed.

Troubleshooting

- Cycle power to the frequency converter.
- Check that the option is properly installed.
- Check for loose or missing wiring.

It may be necessary to contact your Danfoss supplier or service department. Note the code number for further troubleshooting directions.

| No. | Text |
|-----------|---|
| 0 | Serial port cannot be initialised. Contact yourDanfoss supplier or DanfossService Department. |
| 256-258 | Power EEPROM data is defect or too old |
| 512-519 | Internal fault. Contact yourDanfoss supplier or Danfoss Service Department. |
| 783 | Parameter value outside of min/max limits |
| 1024-1284 | Internal fault. Contact your Danfoss supplier or the Danfoss Service Department. |
| 1299 | Option SW in slot A is too old |
| 1300 | Option SW in slot B is too old |
| 1302 | Option SW in slot C1 is too old |
| 1315 | Option SW in slot A is not supported (not allowed) |
| 1316 | Option SW in slot B is not supported (not allowed) |
| 1318 | Option SW in slot C1 is not supported (not allowed) |
| 1379-2819 | Internal fault. Contact yourDanfoss supplier or DanfossService Department. |
| 2820 | LCP stack overflow |
| 2821 | Serial port overflow |
| 2822 | USB port overflow |
| 3072-5122 | Parameter value is outside its limits |
| 5123 | Option in slot A: Hardware incompatible with control board hardware |
| 5124 | Option in slot B: Hardware incompatible with control board hardware |
| 5125 | Option in slot C0: Hardware incompatible with control board hardware |
| 5126 | Option in slot C1: Hardware incompatible with control board hardware |
| 5376-6231 | Internal fault. Contact yourDanfoss supplier or DanfossService Department. |

ALARM 39, Heatsink sensor

No feedback from the heatsink temperature sensor.

The signal from the IGBT thermal sensor is not available on the power card. The problem could be on the power card, on the gate drive card, or the ribbon cable between the power card and gate drive card.

WARNING 40, Overload of digital output terminal 27

Check the load connected to terminal 27 or remove short-circuit connection. Check *5-00 Digital I/O Mode* and *5-01 Terminal 27 Mode*.

WARNING 41, Overload of digital output terminal 29

Check the load connected to terminal 29 or remove short-circuit connection. Check *5-00 Digital I/O Mode* and *5-02 Terminal 29 Mode*.

WARNING 42, Overload of digital output on X30/6 or overload of digital output on X30/7

For X30/6, check the load connected to X30/6 or remove short-circuit connection. Check *5-32 Term X30/6 Digi Out (MCB 101)*.

For X30/7, check the load connected to X30/7 or remove short-circuit connection. Check *5-33 Term X30/7 Digi Out (MCB 101)*.

ALARM 43, Ext. supply

MCB 113 Ext. Relay Option is mounted without ext. 24V DC. Either connect an ext. 24V DC supply or specify that no external supply is used via *14-80 Option Supplied by External 24VDC* [0]. A change in *14-80 Option Supplied by External 24VDC* requires a power cycle.

ALARM 45, Earth fault 2

Earth (ground) fault on start up.

Troubleshooting

- Check for proper earthing (grounding) and loose connections.
- Check for proper wire size.
- Check motor cables for short-circuits or leakage currents.

ALARM 46, Power card supply

The supply on the power card is out of range.

There are three power supplies generated by the switch mode power supply (SMPS) on the power card: 24V, 5V, +/-18V. When powered with 24V DC with the MCB 107 option, only the 24V and 5V supplies are monitored. When powered with three phase mains voltage, all three supplied are monitored.

Troubleshooting

- Check for a defective power card.
- Check for a defective control card.
- Check for a defective option card.
- If a 24V DC power supply is used, verify proper supply power.

WARNING 47, 24V supply low

The 24 V DC is measured on the control card. The external 24V DC backup power supply may be overloaded, otherwise contact your Danfoss supplier.

WARNING 48, 1.8V supply low

The 1.8V DC supply used on the control card is outside of allowable limits. The power supply is measured on the control card. Check for a defective control card. If an option card is present, check for an overvoltage condition.

WARNING 49, Speed limit

When the speed is not within the specified range in *4-11 Motor Speed Low Limit [RPM]* and *4-13 Motor Speed High Limit [RPM]*, the frequency converter will show a warning. When the speed is below the specified limit in *1-86 Trip Speed Low [RPM]* (except when starting or stopping) the frequency converter will trip.

ALARM 50, AMA calibration failed

Contact your Danfoss supplier or Danfoss Service Department.

ALARM 51, AMA check U_{nom} and I_{nom}

The settings for motor voltage, motor current, and motor power are wrong. Check the settings in parameters 1-20 to 1-25.

ALARM 52, AMA low I_{nom}

The motor current is too low. Check the setting in *4-18 Current Limit*.

ALARM 53, AMA motor too big

The motor is too big for the AMA to operate.

ALARM 54, AMA motor too small

The motor is too small for the AMA to operate.

ALARM 55, AMA Parameter out of range

The parameter values of the motor are outside of the acceptable range. AMA will not run.

ALARM 56, AMA interrupted by user

The AMA has been interrupted by the user.

ALARM 57, AMA timeout

Try to restart AMA again. Repeated restarts may over heat the motor.

ALARM 58, AMA internal fault

Contact your Danfoss supplier.

WARNING 59, Current limit

The current is higher than the value in *4-18 Current Limit*. Ensure that Motor data in parameters 1-20 through 1-25 are set correctly. Possibly increase the current limit. Be sure the system can operate safely at a higher limit.

ALARM 60, External interlock

A digital input signal is indicating a fault condition external to the frequency converter. An external interlock has commanded the frequency converter to trip. Clear the external fault condition. To resume normal operation, apply 24V DC to the terminal programmed for external interlock. Reset the frequency converter.

WARNING/ALARM 61, Feedback error

An error between calculated speed and speed measurement from feedback device. The function Warning/Alarm/Disabling setting is in *4-30 Motor Feedback Loss Function*. Accepted error setting in *4-31 Motor Feedback Speed Error* and the allowed time the error occur setting in *4-32 Motor Feedback Loss Timeout*. During a commissioning procedure the function may be effective.

WARNING 62, Output frequency at maximum limit

The output frequency has reached the value set in *4-19 Max Output Frequency*. Check the application to determine the cause. Possibly increase the output frequency limit. Be sure the system can operate safely at a higher output frequency. The warning will clear when the output drops below the maximum limit.

ALARM 63, Mechanical brake low

The actual motor current has not exceeded the "release brake" current within the "Start delay" time window.

WARNING/ALARM 65, Control card over temperature

The cutout temperature of the control card is 80° C.

Troubleshooting

Check that the ambient operating temperature is within limits.

Check for clogged filters.

Check fan operation.

Check the control card.

WARNING 66, Heatsink temperature low

The frequency converter is too cold to operate. This warning is based on the temperature sensor in the IGBT module. Increase the ambient temperature of the unit. Also, a trickle amount of current can be supplied to the frequency converter whenever the motor is stopped by setting *2-00 DC Hold/Preheat Current* at 5% and *1-80 Function at Stop*.

ALARM 67, Option module configuration has changed

One or more options have either been added or removed since the last power down. Check that the configuration change is intentional and reset the frequency converter.

ALARM 68, Safe stop activated

Loss of the 24V DC signal on terminal 37 has caused the frequency converter to trip. To resume normal operation, apply 24V DC to terminal 37 and reset the frequency converter.

ALARM 69, Power card temperature Power card temperature

The temperature sensor on the power card is either too hot or too cold.

Troubleshooting

Check that the ambient operating temperature is within limits.

Check for clogged filters.

Check fan operation.

Check the power card.

ALARM 70, Illegal FC configuration

The control card and power card are incompatible. Contact your supplier with the typecode of the unit from the nameplate and the part numbers of the cards to check compatibility.

ALARM 71, PTC 1 safe stop

Safe Stop has been activated from the MCB 112 PTC Thermistor Card (motor too warm). Normal operation can be resumed when the MCB 112 applies 24 V DC to T-37 again

(when the motor temperature reaches an acceptable level) and when the Digital Input from the MCB 112 is deactivated. When that happens, a reset signal must be sent (via Bus, Digital I/O, or by pressing [RESET]).

ALARM 72, Dangerous failure

Safe Stop with Trip Lock. The Dangerous Failure Alarm is issued if the combination of safe stop commands is unexpected. This is the case if the MCB 112 VLT PTC Thermistor Card enables X44/10 but safe stop is somehow not enabled. Furthermore, if the MCB 112 is the only device using safe stop (specified through selection [4] or [5] in *5-19 Terminal 37 Safe Stop*), an unexpected combination is activation of safe stop without the X44/10 being activated. The following table summarizes the unexpected combinations that lead to Alarm 72. Note that if X44/10 is activated in selection 2 or 3, this signal is ignored! However, the MCB 112 will still be able to activate Safe Stop.

WARNING 73, Safe stop auto restart

Safe stopped. Note that with automatic restart enabled, the motor may start when the fault is cleared.

ALARM 74, PTC Thermistor

Alarm related to the ATEX option. The PTC is not working.

ALARM 75, Illegal profile sel.

Parameter value must not be written while motor is running. Stop motor before writing MCO profile to *8-10 Control Word Profile* for instance.

WARNING 76, Power unit setup

The required number of power units does not match the detected number of active power units.

Troubleshooting:

When replacing an F-frame module, this will occur if the power specific data in the module power card does not match the rest of the frequency converter. Please confirm the spare part and its power card are the correct part number.

77 WARNING, Reduced power mode

This warning indicates that the frequency converter is operating in reduced power mode (i.e. less than the allowed number of inverter sections). This warning will be generated on power cycle when the frequency converter is set to run with fewer inverters and will remain on.

ALARM 78, Tracking error

The difference between set point value and actual value has exceeded the value in *4-35 Tracking Error*. Disable the function by *4-34 Tracking Error Function* or select an alarm/warning also in *4-34 Tracking Error Function*. Investigate the mechanics around the load and motor, Check feedback connections from motor – encoder – to frequency converter. Select motor feedback function in *4-30 Motor Feedback Loss Function*. Adjust tracking error band in *4-35 Tracking Error* and *4-37 Tracking Error Ramping*.

ALARM 79, Illegal power section configuration

The scaling card is the incorrect part number or not installed. Also MK102 connector on the power card could not be installed.

ALARM 80, Drive initialised to default value

Parameter settings are initialised to default settings after a manual reset. Reset the unit to clear the alarm.

ALARM 81, CSIV corrupt

CSIV file has syntax errors.

ALARM 82, CSIV parameter error

CSIV failed to init a parameter.

ALARM 83, Illegal option combination

The mounted options are not supported to work together.

ALARM 84, No safety option

The safety option was removed without applying a general reset. Reconnect the safety option.

ALARM 88, Option detection

A change in the option layout has been detected. This alarm occurs when *14-89 Option Detection* is set to [0] *Frozen configuration* and the option layout for some reason has changed. An option layout change has to be enabled in *14-89 Option Detection* before the change is accepted. If the change of configuration is not accepted, it is only possible to reset Alarm 88 (Trip-lock) when the option configuration has been re-established/corrected.

WARNING 89, Mechanical brake sliding

The hoist brake monitor has detected a motor speed > 10rpm.

ALARM 90, Feedback monitor

Check the connection to encoder/ resolver option and eventually replace the MCB 102 or MCB 103.

ALARM 91, Analogue input 54 wrong settings

Switch S202 has to be set in position OFF (voltage input) when a KTY sensor is connected to analogue input terminal 54.

ALARM 92, No flow

A no-flow condition has been detected in the system. *22-23 No-Flow Function* is set for alarm. Troubleshoot the system and reset the frequency converter after the fault has been cleared.

ALARM 93, Dry pump

A no-flow condition in the system with the frequency converter operating at high speed may indicate a dry pump. *22-26 Dry Pump Function* is set for alarm. Troubleshoot the system and reset the frequency converter after the fault has been cleared.

ALARM 94, End of curve

Feedback is lower than the set point. This may indicate leakage in the system. *22-50 End of Curve Function* is set for alarm. Troubleshoot the system and reset the frequency converter after the fault has been cleared.

ALARM 95, Broken belt

Torque is below the torque level set for no load, indicating a broken belt. *22-60 Broken Belt Function* is set for alarm.

Troubleshoot the system and reset the frequency converter after the fault has been cleared.

ALARM 96, Start delayed

Motor start has been delayed due to short-cycle protection. *22-76 Interval between Starts* is enabled. Troubleshoot the system and reset the frequency converter after the fault has been cleared.

WARNING 97, Stop delayed

Stopping the motor has been delayed due to short cycle protection. *22-76 Interval between Starts* is enabled. Troubleshoot the system and reset the frequency converter after the fault has been cleared.

WARNING 98, Clock fault

Time is not set or the RTC clock has failed. Reset the clock in *0-70 Date and Time*.

WARNING 163, ATEX ETR cur.lim.warning

The warning limit of ATEX ETR rated current curve has been reached. The warning is activated at 83% and de-activated at 65% of the permitted thermal overload.

ALARM 164, ATEX ETR cur.lim.alarm

The ATEX ETR permitted thermal overload has been exceeded.

WARNING 165, ATEX ETR freq.lim.warning

The frequency converter is running more than 50 seconds below the permitted minimum frequency (*1-98 ATEX ETR interpol. points freq. [0]*).

ALARM 166, ATEX ETR freq.lim.alarm

The frequency converter has operated more than 60 second (in a period of 600 seconds) below the permitted minimum frequency (*1-98 ATEX ETR interpol. points freq. [0]*).

ALARM 243, Brake IGBT

This alarm is only for F Frame drives. It is equivalent to Alarm 27. The report value in the alarm log indicates which power module generated the alarm:

ALARM 244, Heatsink temperature

This alarm is only for F Frame frequency converters. It is equivalent to Alarm 29. The report value in the alarm log indicates which power module generated the alarm:

ALARM 245, Heatsink sensor

This alarm is only for F Frame frequency converters. It is equivalent to Alarm 39. The report value in the alarm log indicates which power module generated the alarm

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 frequency converter.
- 2 = right inverter module in F1 or F3 frequency converter.
- 3 = right inverter module in F2 or F4 frequency converter.

5 = rectifier module.

ALARM 246, Power card supply

This alarm is only for F Frame frequency converter. It is equivalent to Alarm 46. The report value in the alarm log indicates which power module generated the alarm

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 frequency converter.
- 2 = right inverter module in F1 or F3 frequency converter.
- 3 = right inverter module in F2 or F4 frequency converter.
- 5 = rectifier module.

ALARM 69, Power card temperature

This alarm is only for F Frame frequency converter. It is equivalent to Alarm 69. The report value in the alarm log indicates which power module generated the alarm

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 frequency converter.
- 2 = right inverter module in F1 or F3 frequency converter.
- 3 = right inverter module in F2 or F4 frequency converter.
- 5 = rectifier module.

ALARM 248, Illegal power section configuration

This alarm is only for F Frame frequency converters. It is equivalent to Alarm 79. The report value in the alarm log indicates which power module generated the alarm:

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 frequency converter.
- 2 = right inverter module in F1 or F3 frequency converter.
- 3 = right inverter module in F2 or F4 frequency converter.
- 5 = rectifier module.

WARNING 249, Rect. low temperature

IGBT sensor fault (highpower units only).

WARNING 250, New spare part

A component in the frequency converter has been replaced. Reset the frequency converter for normal operation.

WARNING 251, New typecode

A component in the frequency converter has been replaced and the typecode changed. Reset the frequency converter for normal operation.

Index

| | |
|---|----------|
| A | |
| Abbreviations..... | 3 |
| Alarm | |
| Log..... | 150 |
| Messages..... | 204 |
| Word..... | 102 |
| Analog Inputs..... | 4, 209 |
| | |
| B | |
| Brake Power..... | 5 |
| Braking..... | 211 |
| Break-away Torque..... | 4 |
| Bus Controlled..... | 85 |
| | |
| C | |
| Cabling..... | 123 |
| Catch Up..... | 71 |
| Change-Of-State..... | 122 |
| Changing | |
| A Group Of Numeric Data Values..... | 18 |
| A Text Value..... | 18 |
| Data..... | 18 |
| Clearance..... | 211 |
| Clockwise..... | 41 |
| Coasting..... | 4, 13 |
| Communication Option..... | 211 |
| Configuration..... | 101, 121 |
| Control Cables..... | 9 |
| Cooling..... | 46 |
| Current | |
| Limit..... | 210 |
| Rating..... | 209 |
| | |
| D | |
| Data Log Settings..... | 148 |
| DC Link..... | 209 |
| Default Settings..... | 1, 167 |
| Definitions..... | 4 |
| Derating..... | 209 |
| DeviceNet..... | 116 |
| Digital Input..... | 210 |
| Display | |
| Mode..... | 14 |
| Mode - Selection Of Read-Outs..... | 14 |
| Drive Identification..... | 150 |
| | |
| E | |
| Electrical Terminals..... | 8 |
| EMC..... | 210 |
| Encoder Pulses..... | 85 |
| Environment..... | 145 |
| Ethernet..... | 120, 122 |
| EtherNet/IP..... | 121 |
| ETR..... | 153 |
| | |
| F | |
| Feedback..... | 212, 214 |
| Forward Open..... | 122 |
| Freeze Output..... | 4 |
| Fuses..... | 211 |
| | |
| G | |
| Graphical Display..... | 11 |
| | |
| H | |
| Historic Log..... | 149 |
| | |
| I | |
| IGMP..... | 122 |
| Incremental Encoder..... | 154 |
| Indexed Parameters..... | 19 |
| Indicator Lights..... | 12 |
| Infinitely Variable Change Of Numeric Data Value..... | 19 |
| Initialisation..... | 1 |
| Input | |
| Terminals..... | 209 |
| Voltage..... | 209 |
| Installation..... | 210 |
| | |
| J | |
| Jog..... | 4 |
| | |
| L | |
| Language | |
| Package 1..... | 23 |
| Package 2..... | 23 |
| Package 3..... | 23 |
| Package 4..... | 23 |
| LCP..... | 11 |
| LEDs..... | 11 |
| Local | |
| Control Keys..... | 1 |
| Reference..... | 23 |

M

Main

Menu..... 15
 Menu Mode..... 12, 18
 Reactance..... 36

Mains

Supply..... 6
 Voltage..... 209, 212

MCB

113..... 73, 74, 78, 93, 94
 114..... 164

Motor

Current..... 209, 213
 Data..... 210, 213
 Leads..... 210
 Power..... 213
 Protection..... 44
 Status..... 152

Multicast..... 123

N

Network..... 120, 121, 122, 123
Numerical Local Control Panel..... 19

O

Operating Mode..... 23
Option Ident..... 151

Output

Current..... 209
 Speed..... 41

P

Parameter

Access..... 119
 Info..... 151
 Selection..... 18
 Set-Up..... 15

Password..... 31

Potentiometer Reference..... 10

Programming..... 209

Protection Mode..... 7

Pulse Start/Stop..... 10

Q

Quick

Menu..... 12, 16
 Menu Mode..... 12, 15
 Transfer Of Parameter Settings Between Multiple Frequency Converters..... 13

R

Rated Motor Speed..... 4

RCD..... 5

Reference..... 121

Relay Outputs..... 74

Reset..... 209, 211, 214, 13

S

Safety Precautions..... 6

Screened/armoured..... 9

Serial Communication..... 4, 210

Speed Up/Down..... 10

Start

Delay..... 41
 Function..... 41

Start/Stop..... 9

Stator Leakage Reactance..... 36

Status

Status..... 12
 Messages..... 11

Step-by-Step..... 19

Supply Voltage..... 209, 211

Switching Frequency..... 209

Symbols..... 3

Synchronous Motor Speed..... 4

T

Terminal

X45/1 Output Min Scale, 6-71..... 94
 X45/3 Output Min Scale, 6-81..... 94

Thermal Load..... 38, 153

Thermistor..... 44, 210, 6

Trip Reset..... 142

V

Value..... 19

Voltage Reference Via A Potentiometer..... 10

VVCplus..... 6

W

Warning Word..... 102

Warnings..... 204



www.danfoss.com/drives

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

