

护手罩

VLT® Soft Starter MCD 600

1 说明

1.1 简介



警告

触电危险

软启动器在连接到电网电压时带有危险电压。在软启动器与电源相连时，如果连接或拆除附件，可能导致严重伤亡。

- 连接或拆除附件前，应先将软启动器与主电源电压断开。
- 所有端子都应安装护手罩，未连接电缆的端子也无例外。

通过将护手罩安装到软启动器的电源端子上，可以提升 IP 防护等级，防止不慎接触带电端子。

对于直径为 22 mm 或更大直径的电缆，护手罩可提供 IP20 级保护。

1.2 部件列表

项目	数量
护手罩	6
固定支架	6
束线带	6
安装指南	1

表 1: 订购号

套件	订购号
护手罩套件 IP20, 型号 0144B - 0579B	175G0186

2 安装


2.1 安装护手罩

步骤

1. 将软启动器与主电源及控制电压断开。
2. 每条母线上放 1 个固定支架，并将支架卡入软启动器底部。
3. 让每条电源电缆穿过每一个护手罩的窄端。
4. 将电缆连接到软启动器的正确端子。

如果电缆穿不过护手罩，请截短护手罩的窄端，扩大开口。

5. 将护手罩推到每个固定支架上，用束线带固定到位。

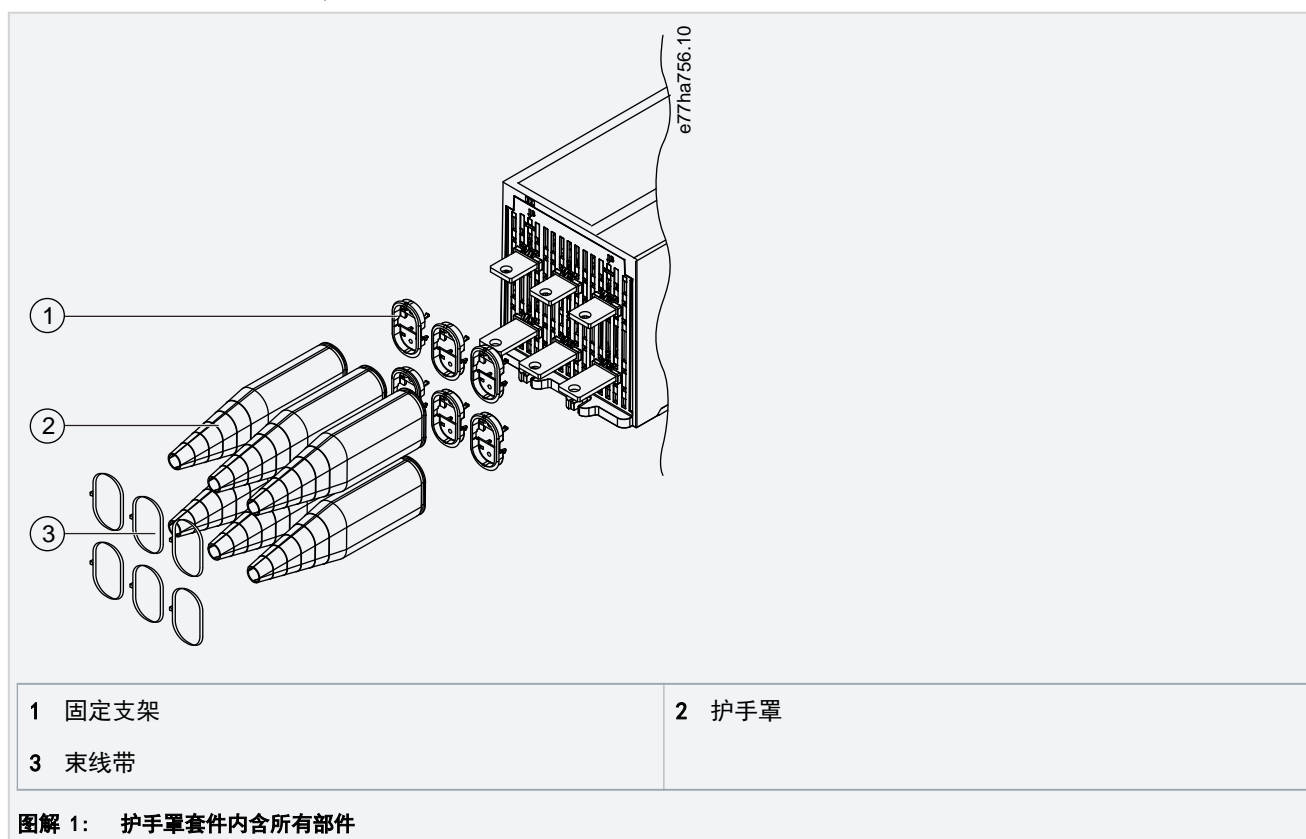

.....
Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.
.....

Danfoss A/S
Ulsnaes 1
DK-6300 Graasten
vlt-drives.danfoss.com

