

# 觸電防護

## VLT® Soft Starter MCD 600

### 1 明

#### 1.1 簡介



警告



#### 電擊危險

緩衝動器在連接至主電源電壓時具有危險電壓。若在緩衝動器連接至主電源時連接或拆卸零件，可能導致死亡或重傷。

- 請在連接或拆卸零件前，將緩衝動器與主電源電壓隔離。
- 請將觸電防護裝在所有端子上，即使電纜線未接上亦然。

請將觸摸防護裝在緩衝動器的電源端子上，以增加 IP 額定 並預防意外接觸到通電端子。

觸電防護於使用直徑為 22 mm 或以上的電纜線時可提供 IP20 的防護。

#### 1.2 備品表

項目	數量
觸摸防護	6
固定托架	6
電纜線綁帶	6
安裝指南	1

表 1: 訂購代碼

套件	訂購代碼
觸摸防護套件 IP20, 型號 0144B-0579B	175G0186

## 2 安裝


### 2.1 安裝觸摸防護

#### 程序

1. 將緩衝動器與主電源及控制電壓斷開連接。
2. 將 1 個固定托架放在每個總線列上，並將其夾在緩衝動器的底座。
3. 透過每個觸摸防護的窄端送入每條電源電纜線。
4. 將電纜線連接至適當的緩衝動器端子。

如果無法透過觸摸防護裝入電纜線，請縮短觸摸防護的窄端，使開口更大。

5. 將觸摸防護推至每個固定架之上，並使用電纜線綁帶固定。

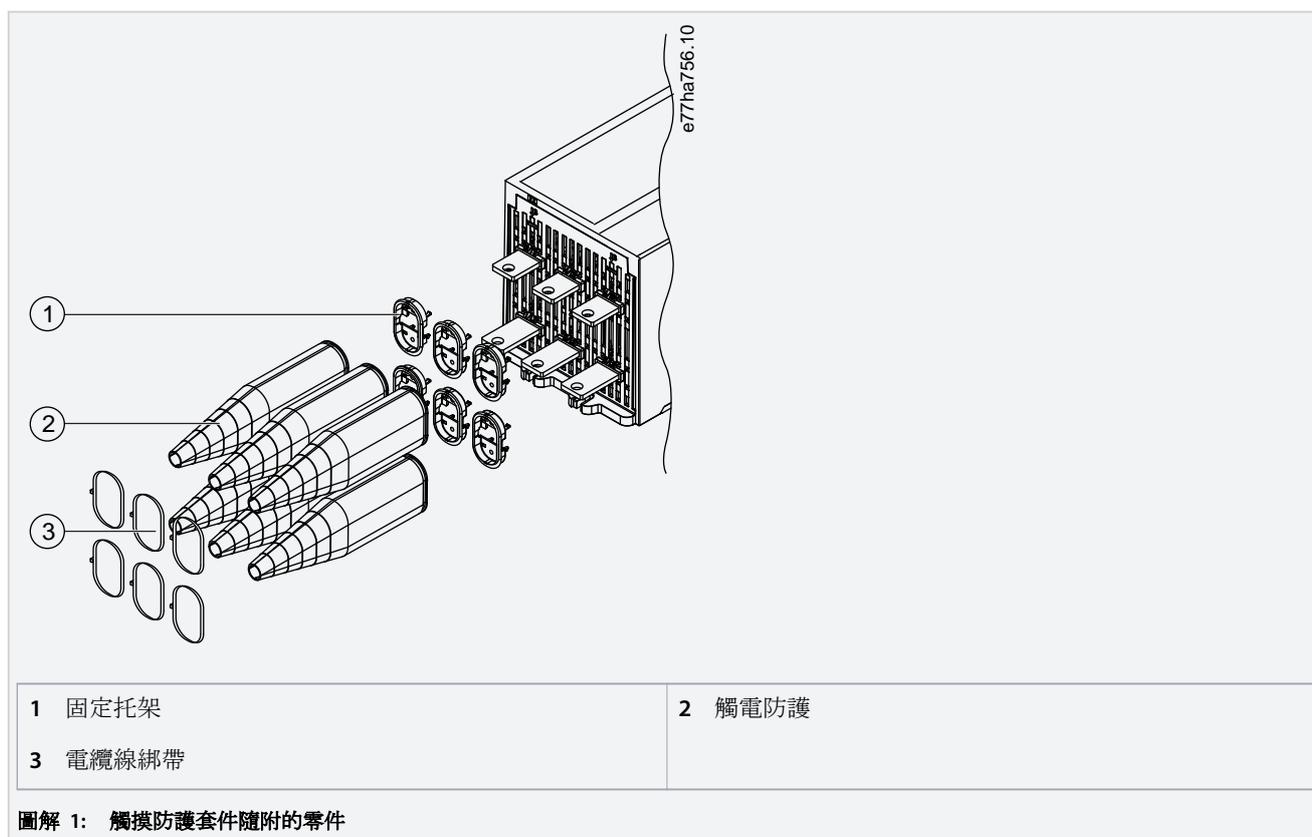



.....  
Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.  
.....

Danfoss A/S  
Ulsnaes 1  
DK-6300 Graasten  
[vlt-drives.danfoss.com](http://vlt-drives.danfoss.com)

