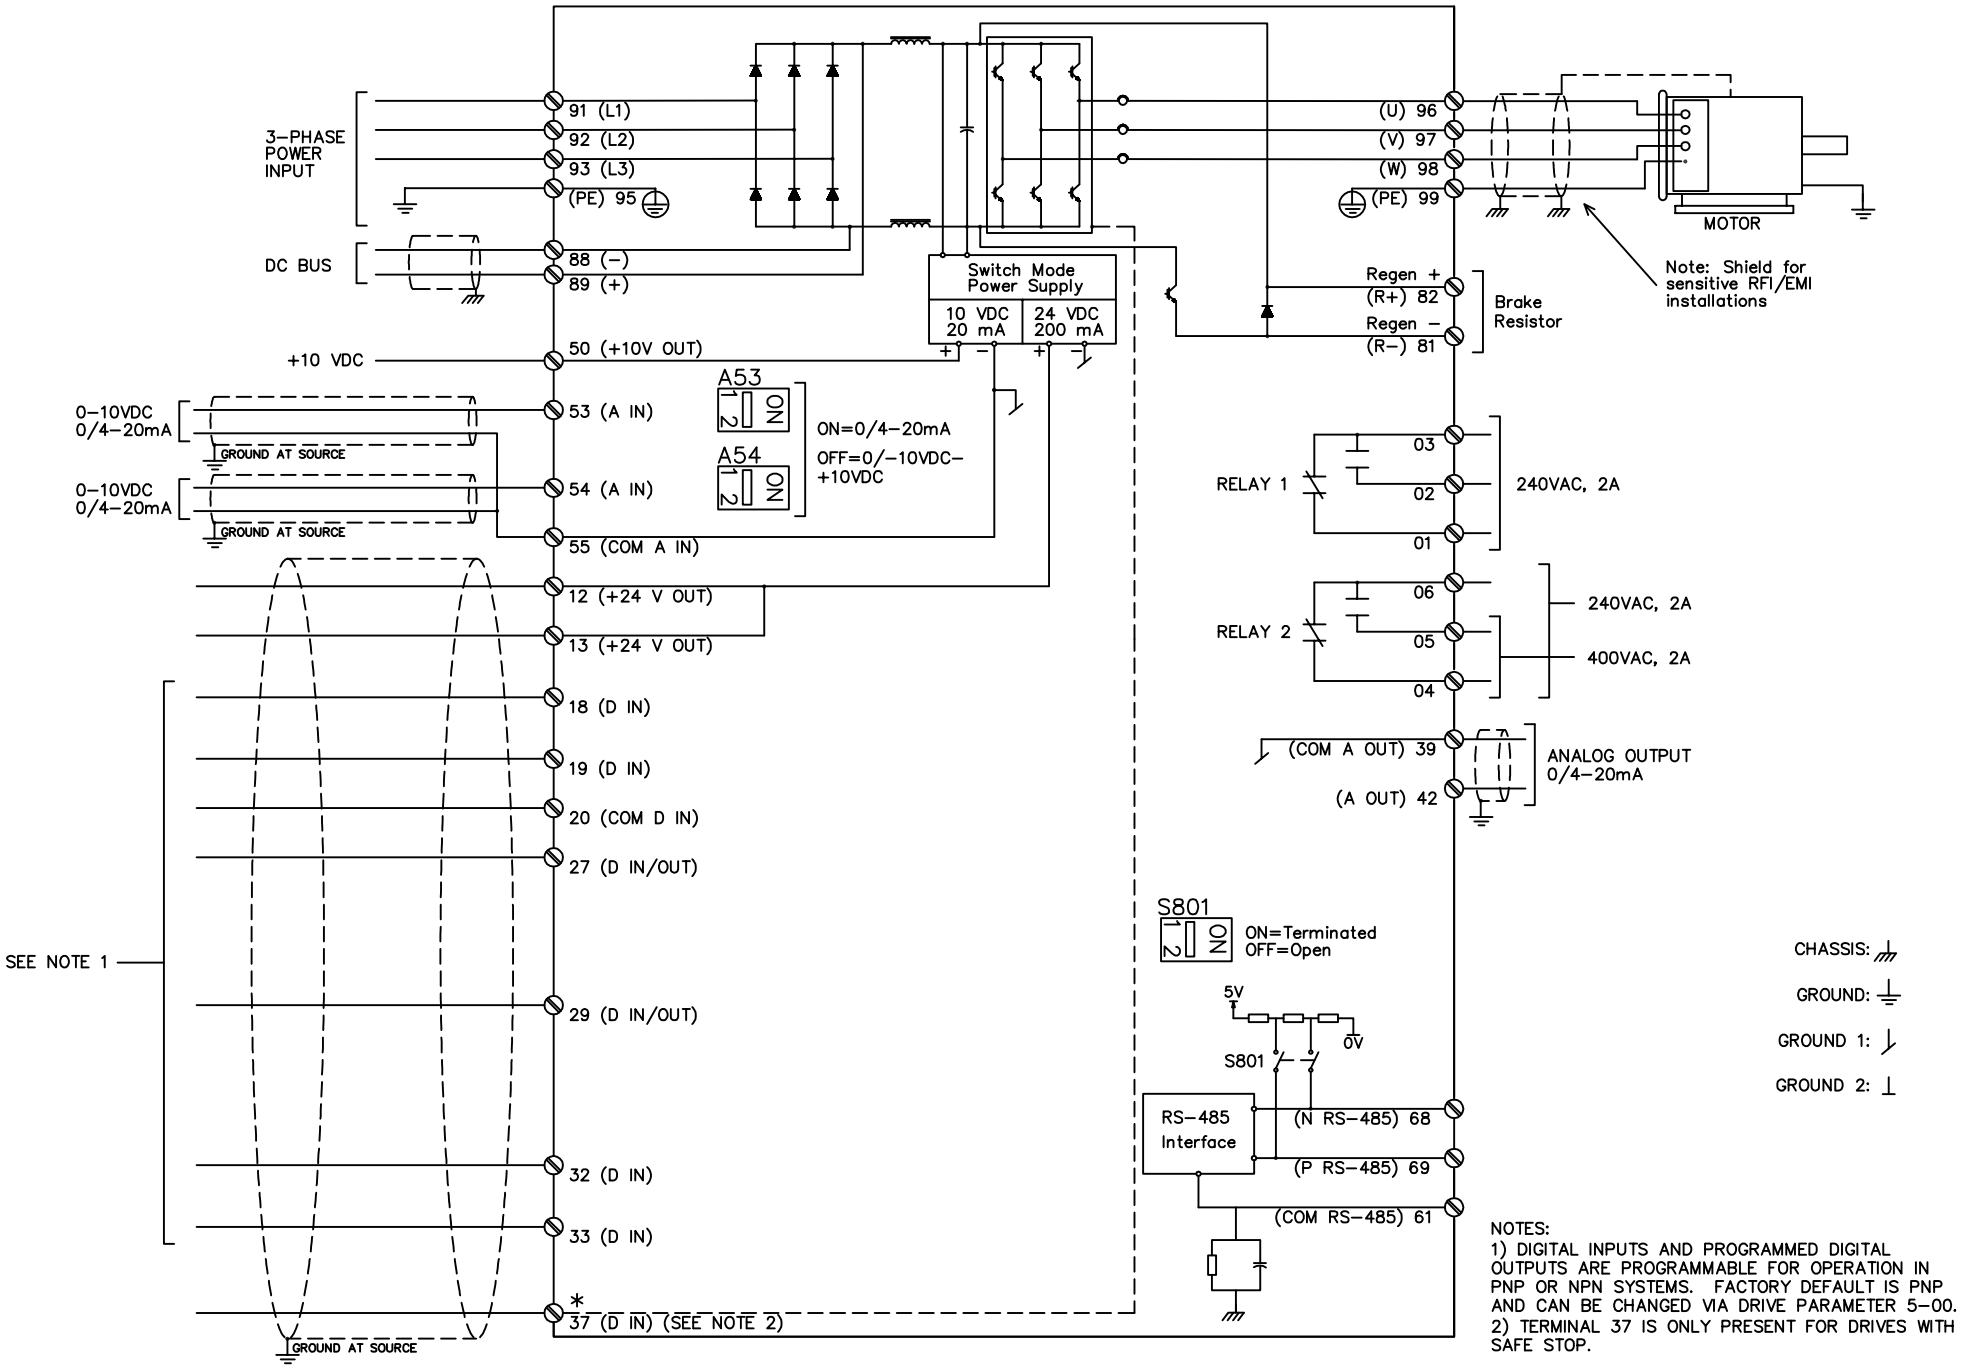

NOTES:
1) DIGITAL INPUTS AND PROGRAMMED DIGITAL OUTPUTS ARE PROGRAMMABLE FOR OPERATION IN PNP OR NPN SYSTEMS. FACTORY DEFAULT IS PNP AND CAN BE CHANGED VIA DRIVE PARAMETER 5-00.
2) TERMINAL 37 IS ONLY PRESENT FOR DRIVES WITH SAFE STOP.

B			– NOTICE – THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES. IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	DRN PCN 7/13/16	NAME SCHEMATIC DIAGRAM FC-102 E-F FRAME DRIVE (6-Pulse) CONNECTONS		Danfoss
A							
DR	2016XXXX	7/14/16		APR MJM 7/13/16	MODEL FC-102	PAGE 1 OF 1	SIZE A	DWG NO.
REV	ECN	DATE					