


Installation guide – Spare parts and accessories

Overhaul kit | Code number 027F0611  
PMFL, size 80-1

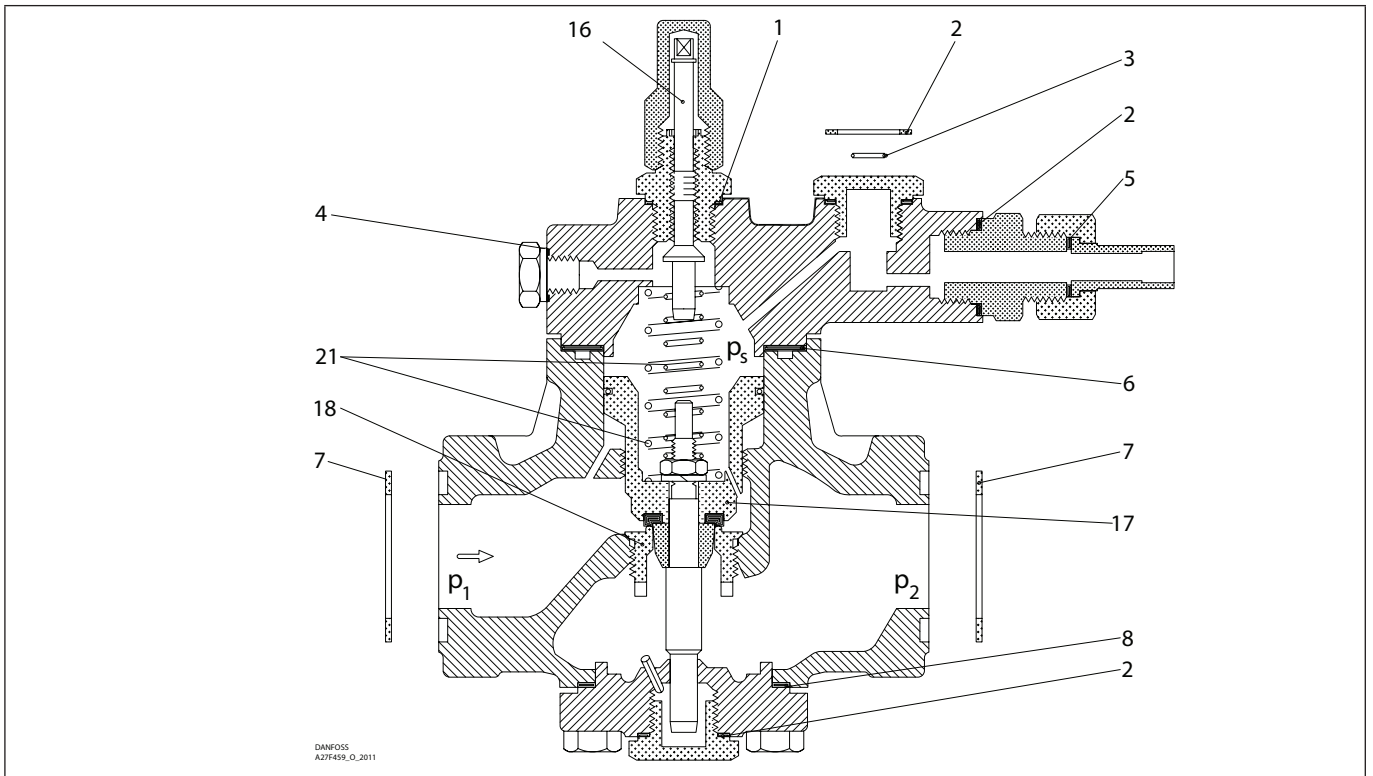

<p><b>1</b></p> <p>— = Alu.</p> <p>Ø26 mm Ø1.02"</p> <p>Total no. = 1</p>	<p><b>2</b></p> <p>— = Fibre</p> <p>Ø33 mm Ø1.28"</p> <p>Total no. = 4</p>	<p><b>3</b></p> <p>Ø9 mm Ø0.36"</p> <p>Total no. = 3</p>	<p><b>4</b></p> <p>— = Alu.</p> <p>Ø18 mm Ø0.70"</p> <p>Total no. = 1</p>	<p><b>5</b></p> <p>— = Alu.</p> <p>Ø14 mm Ø0.55"</p> <p>Total no. = 1</p>	<p><b>6</b></p> <p>— = Fibre</p> <p>Ø75 mm Ø2.95"</p> <p>Total no. = 1</p>
<p><b>7</b></p> <p>— = Fibre</p> <p>Ø39 mm Ø1.54"</p> <p>Total no. = 2</p>	<p><b>8</b></p> <p>— = Fibre</p> <p>Ø60 mm Ø2.36"</p> <p>Total no. = 1</p>	<p><b>9*</b></p> <p>— = Alu.</p> <p>Ø32 mm Ø1.26"</p> <p>Total no. = 1</p>	<p><b>10*</b></p> <p>— = Alu.</p> <p>Ø22 mm Ø0.87"</p> <p>Total no. = 1</p>	<p><b>16</b></p>	<p><b>17</b></p> <p>Ø80 mm Ø3.15"</p>
<p><b>18</b></p> <p>Ø18 mm Ø0.71"</p>	<p><b>21</b> Standard</p> <p>Ø13 mm Ø0.51"</p> <p>Ø25 mm Ø0.98"</p> <p>1 set</p>	<p><b>21</b> Weak</p> <p>Ø12 mm Ø0.45"</p> <p>Ø25 mm Ø0.98"</p> <p>1 set</p>	<p><b>21</b> Strong</p> <p>Ø13 mm Ø0.52"</p> <p>Ø25 mm Ø0.98"</p> <p>1 set</p>		

\* The spare part is included in the package but is not used for PMFL size 80-1.