


Installation Guide

Overhaul kit

PMFL, size 200 | Code number 027F0638

027R9897

027R9897

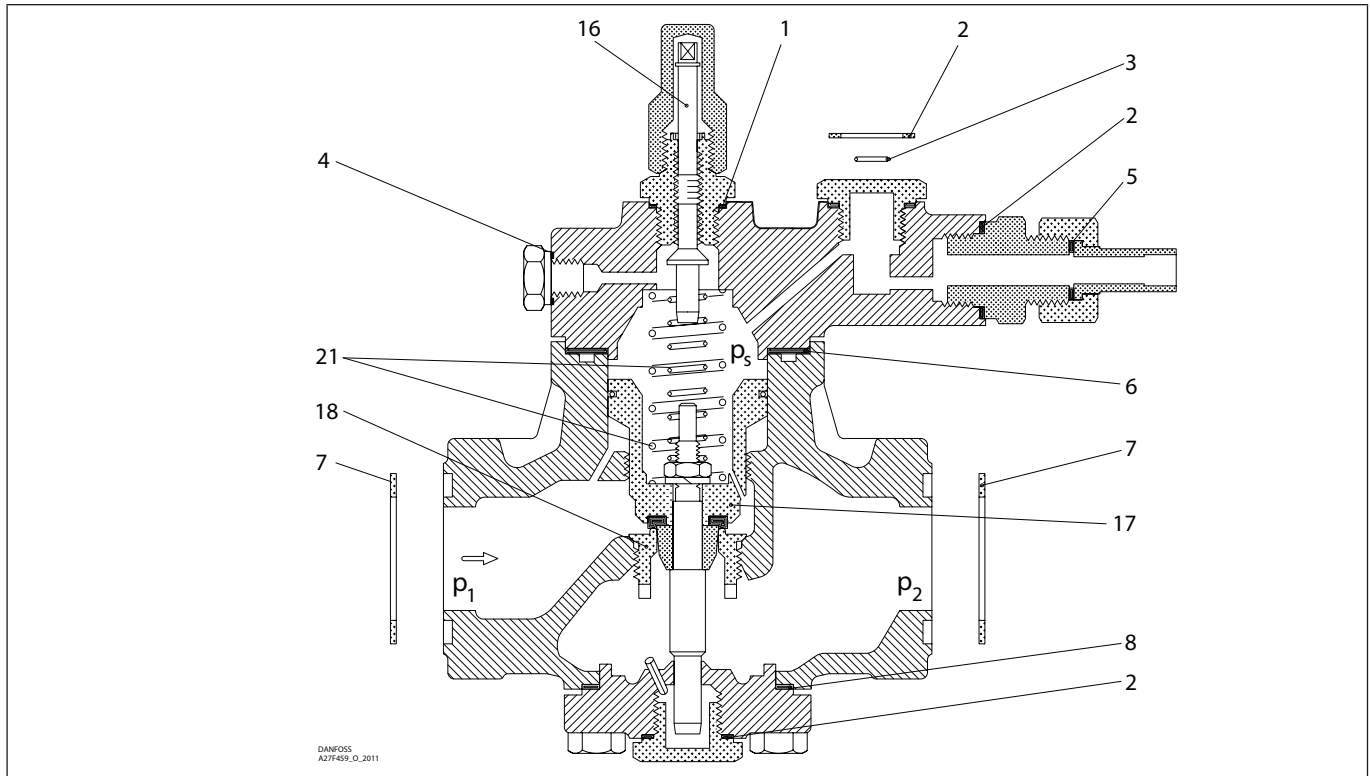

| | | | | | |
|--|--|--|---|---|--|
| <p>1</p> <p>▨ = Alu.</p> <p>Ø26 mm Ø1.02"</p> <p>Total no. = 1</p> | <p>2</p> <p>▨ = Fibre</p> <p>Ø33 mm Ø1.28"</p> <p>Total no. = 4</p> | <p>3</p> <p>Ø9 mm Ø0.36"</p> <p>Total no. = 3</p> | <p>4</p> <p>▨ = Alu.</p> <p>Ø18 mm Ø0.70"</p> <p>Total no. = 1</p> | <p>5</p> <p>▨ = Alu.</p> <p>Ø14 mm Ø0.55"</p> <p>Total no. = 1</p> | <p>6</p> <p>▨ = Fibre</p> <p>Ø93 mm Ø3.66"</p> <p>Total no. = 1</p> |
| <p>7</p> <p>▨ = Fibre</p> <p>Ø65 mm Ø2.56"</p> <p>Total no. = 2</p> | <p>8</p> <p>▨ = Fibre</p> <p>Ø78 mm Ø3.07"</p> <p>Total no. = 1</p> | <p>9*</p> <p>▨ = Alu.</p> <p>Ø32 mm Ø1.26"</p> <p>Total no. = 1</p> | <p>10*</p> <p>▨ = Alu.</p> <p>Ø22 mm Ø0.87"</p> <p>Total no. = 1</p> | <p>16</p> <p>20 mm 0.79"</p> | <p>17</p> <p>Ø68 mm Ø2.68"</p> |
| <p>18</p> <p>Ø34 mm Ø1.34"</p> | <p>21 Standard</p> <p>Ø16 mm Ø0.63" Ø35 mm Ø1.38"</p> <p>1 set</p> | <p>21 Weak</p> <p>Ø15 mm Ø0.59" Ø35 mm Ø1.38"</p> <p>1 set</p> | | | |

* The spare part is included in the package but is not used for PMFL size 200.