



Installation guide – Spare parts and accessories

Inspection kit | Code number 027F3077

PM, PML, PMLX, MRV, size 40 | MEV, PMFH, PMFL, size 200

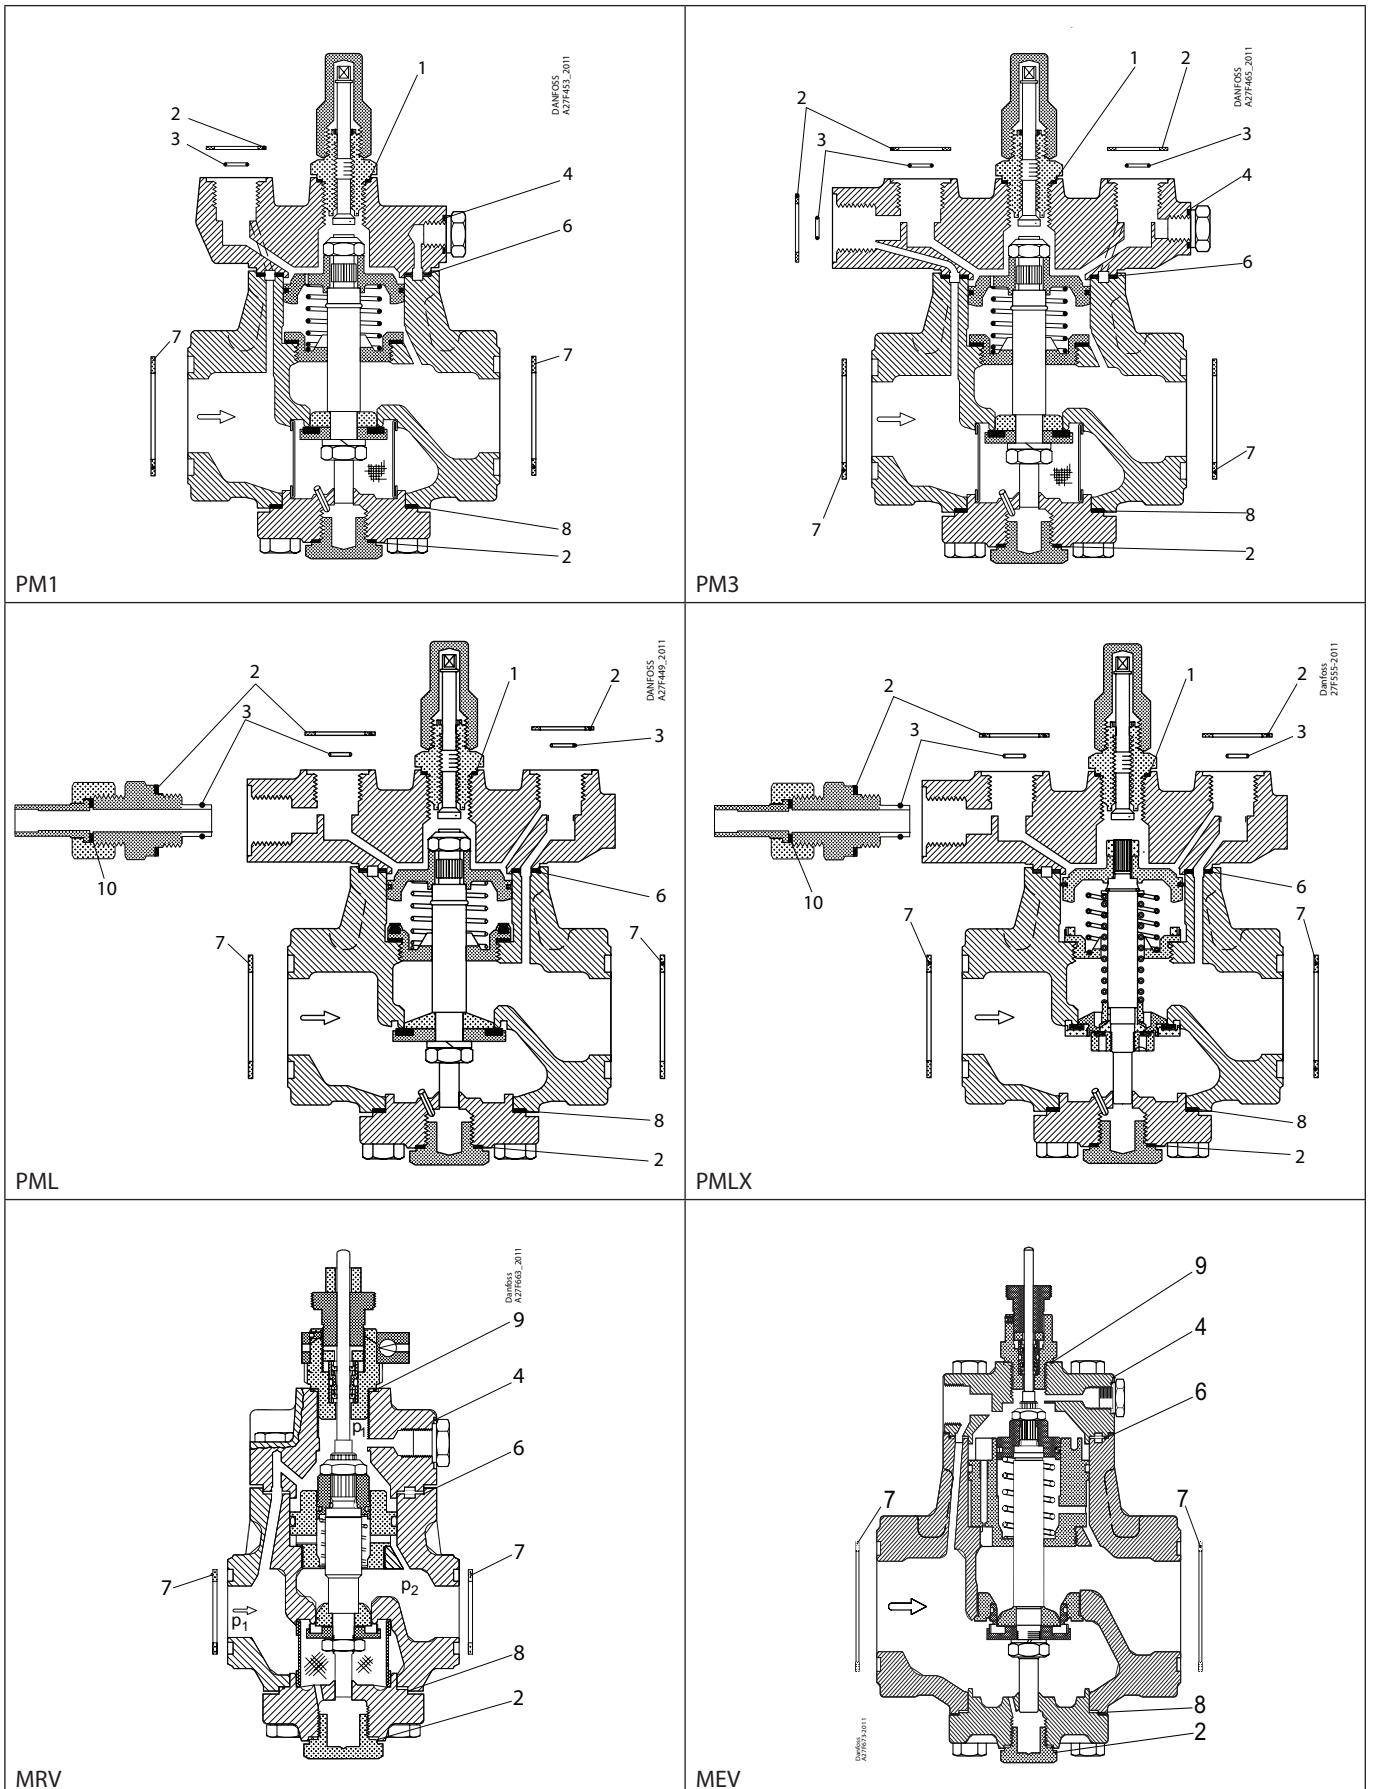

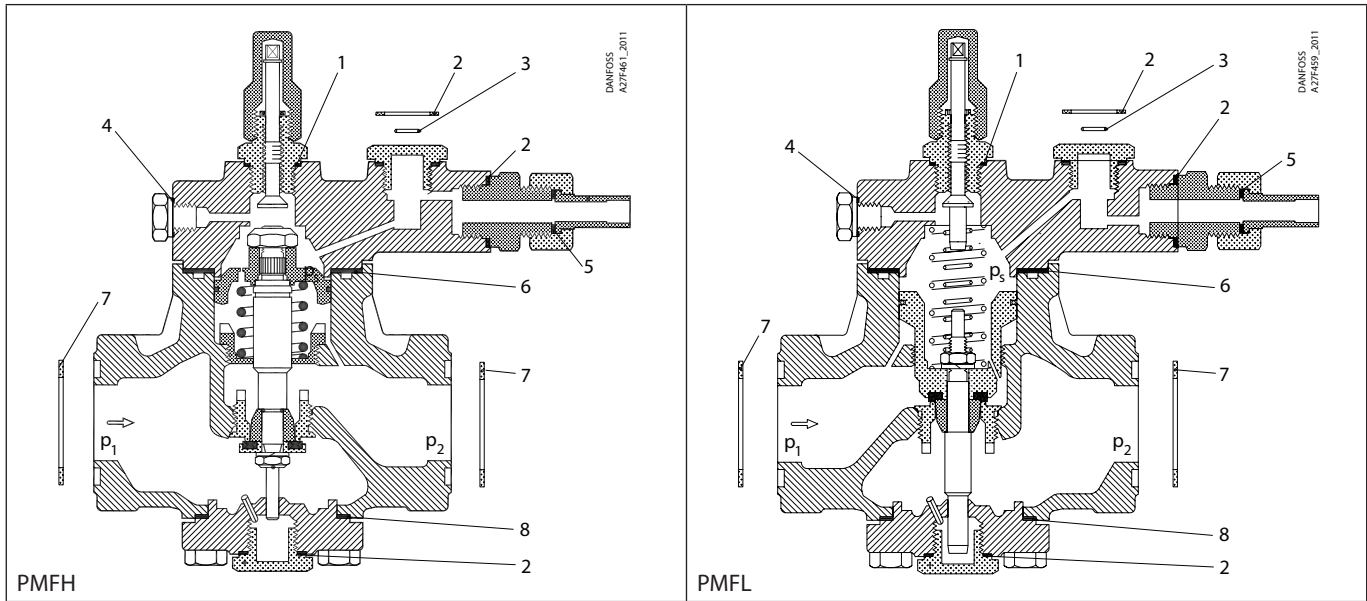

<p><b>1</b></p> <p> = Alu.</p> <p>  <math>\varnothing 26 \text{ mm}</math>  <math>\varnothing 1.02''</math></p> <p>Total no. = 1</p>	<p><b>2</b></p> <p> = Fibre</p> <p>  <math>\varnothing 33 \text{ mm}</math>  <math>\varnothing 1.28''</math></p> <p>Total no. = 4</p>	<p><b>3</b></p> <p> = Alu.</p> <p>  <math>\varnothing 9 \text{ mm}</math>  <math>\varnothing 0.36''</math></p> <p>Total no. = 3</p>	<p><b>4</b></p> <p> = Alu.</p> <p>  <math>\varnothing 18 \text{ mm}</math>  <math>\varnothing 0.70''</math></p> <p>Total no. = 1</p>
<p><b>5</b></p> <p> = Alu.</p> <p>  <math>\varnothing 14 \text{ mm}</math>  <math>\varnothing 0.55''</math></p> <p>Total no. = 1</p>	<p><b>6</b></p> <p> = Fibre</p> <p>  <math>\varnothing 93 \text{ mm}</math>  <math>\varnothing 3.66''</math></p> <p>Total no. = 1</p>	<p><b>7</b></p> <p> = Fibre</p> <p>  <math>\varnothing 65 \text{ mm}</math>  <math>\varnothing 2.56''</math></p> <p>Total no. = 2</p>	<p><b>8</b></p> <p> = Fibre</p> <p>  <math>\varnothing 78 \text{ mm}</math>  <math>\varnothing 3.07''</math></p> <p>Total no. = 1</p>
<p><b>9</b></p> <p> = Alu.</p> <p>  <math>\varnothing 32 \text{ mm}</math>  <math>\varnothing 1.26''</math></p> <p>Total no. = 1</p>	<p><b>10</b></p> <p> = Alu.</p> <p>  <math>\varnothing 22 \text{ mm}</math>  <math>\varnothing 0.87''</math></p> <p>Total no. = 1</p>		