



# Installation guide – Spare parts and accessories

**Inspection kit | Code number 148B6051**

**SVA-S/L, SVA-ST/LT, REG-SA/SB, REG, SVA-HS, SCA/X, FIA, CHV/X sizes 15 - 20**

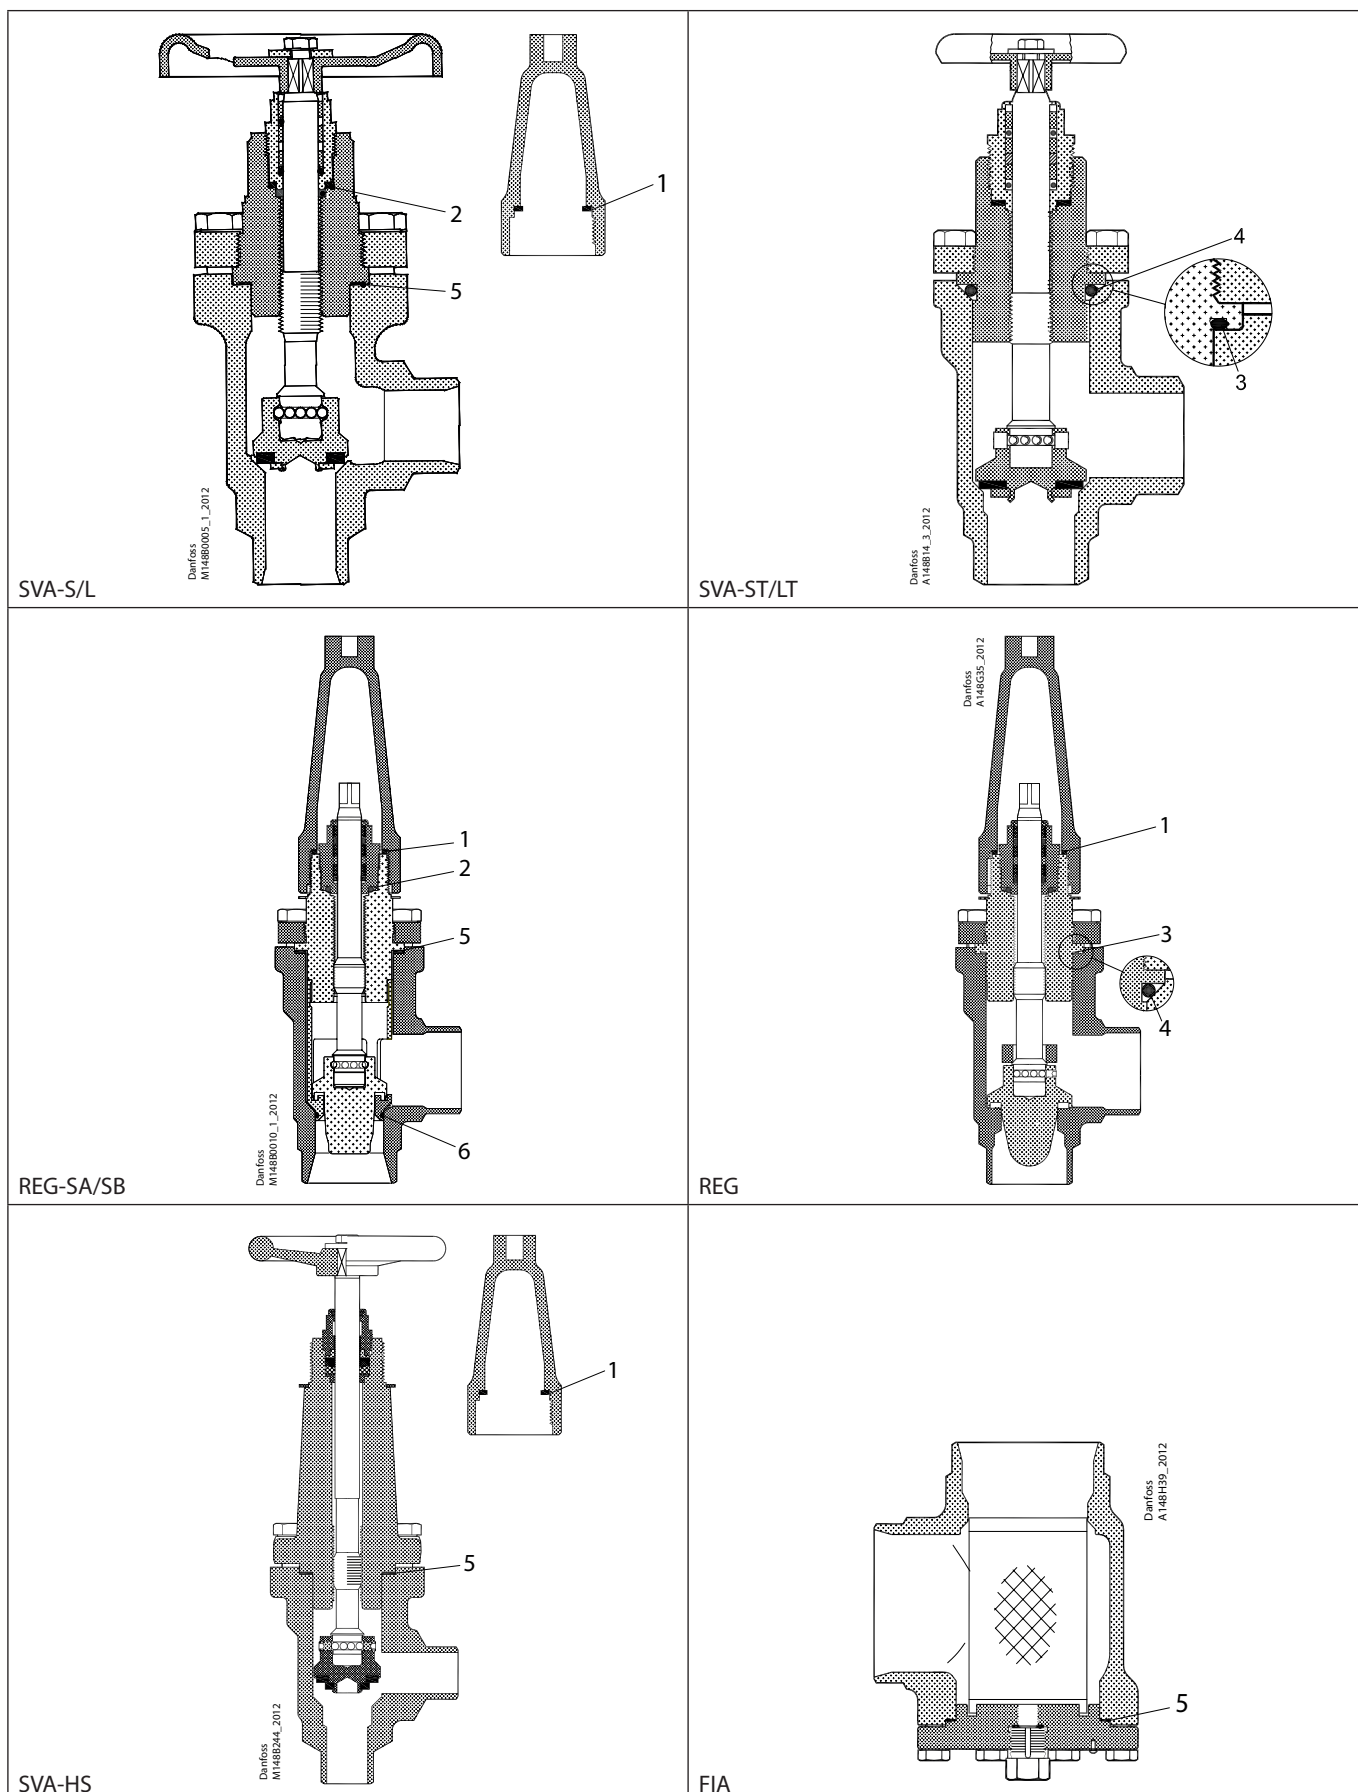

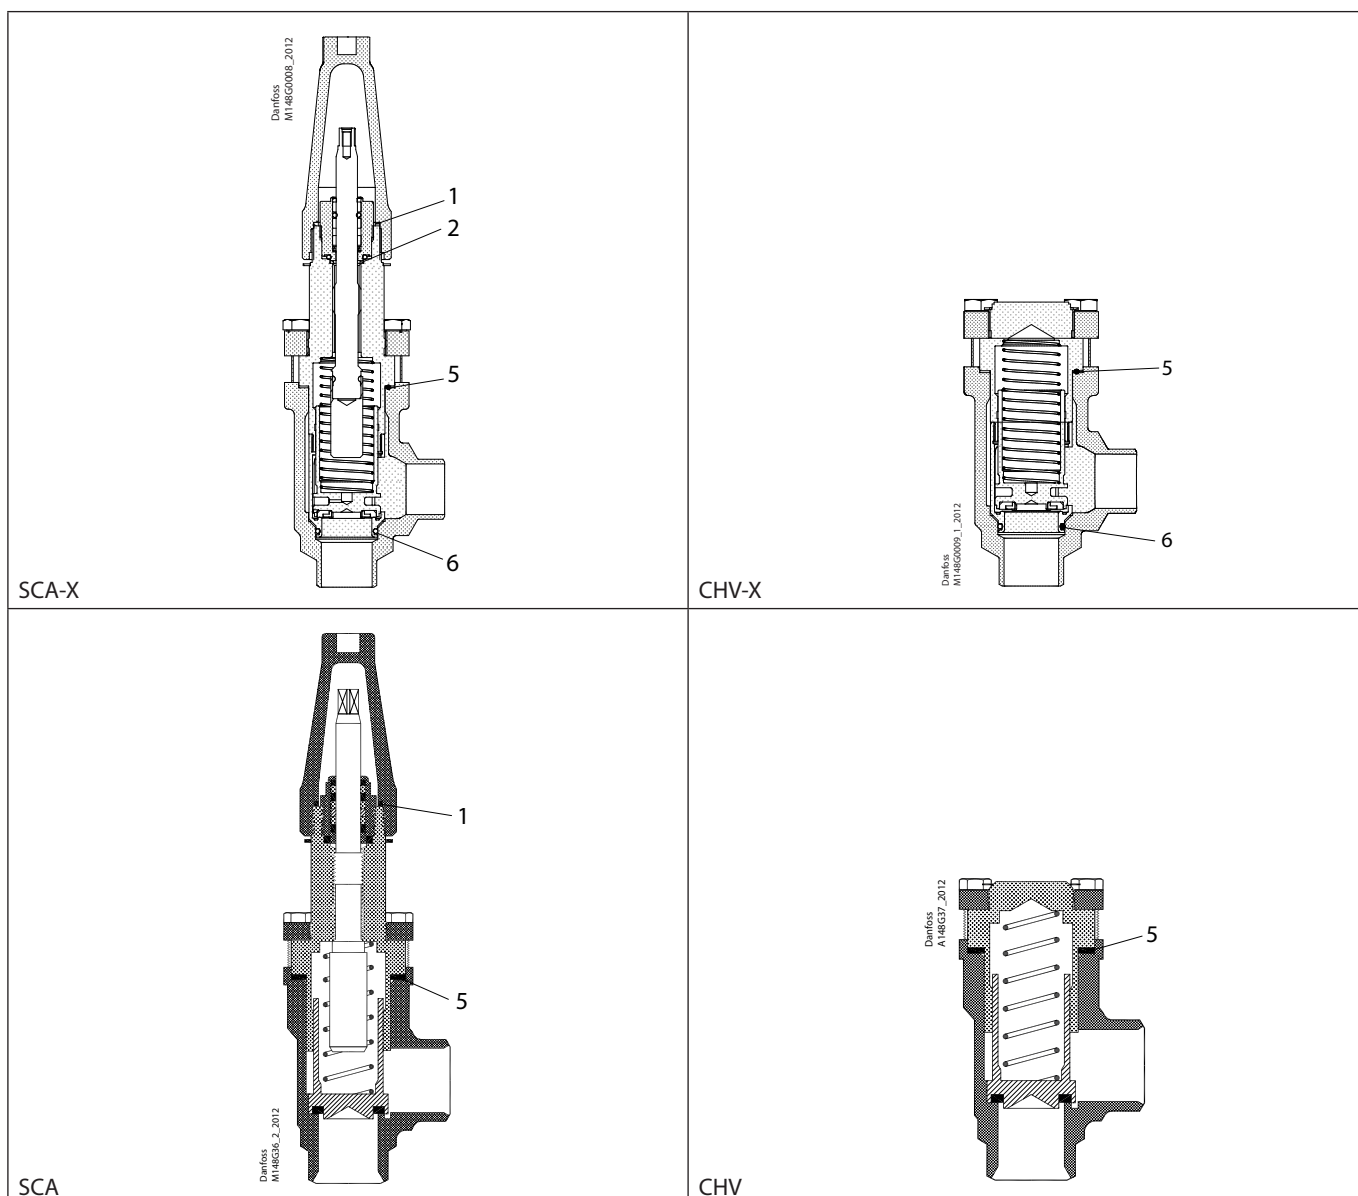

<p><b>1</b></p> <p> = Nylon</p> <p><math>\varnothing 28 \text{ mm}</math> <math>\varnothing 1.1''</math></p> <p>Total no. = 1</p>	<p><b>2</b></p> <p> = Alu.</p> <p><math>\varnothing 18 \text{ mm}</math> <math>\varnothing 0.69''</math></p> <p>Total no. = 1</p>	<p><b>3</b></p> <p> =</p> <p><math>\varnothing 27 \text{ mm}</math> <math>\varnothing 1.06''</math></p> <p>Total no. = 1</p>	<p><b>4</b></p> <p> =</p> <p><math>\varnothing 23 \text{ mm}</math> <math>\varnothing 0.91''</math></p> <p>Total no. = 1</p>	<p><b>5</b></p> <p> = Fibre</p> <p><math>\varnothing 39 \text{ mm}</math> <math>\varnothing 1.55''</math></p> <p>Total no. = 1</p>
<p><b>6</b></p> <p> =</p> <p><math>\varnothing 17 \text{ mm}</math> <math>\varnothing 0.67''</math></p> <p>Total no. = 1</p>				