



Installation guide – Spare parts and accessories

Inspection kit | Code number 148B6052

SVA-S/L, SVA-ST/LT, REG-SA/SB, REG, SVA-HS, SCA/X, FIA, CHV/X sizes 25-40

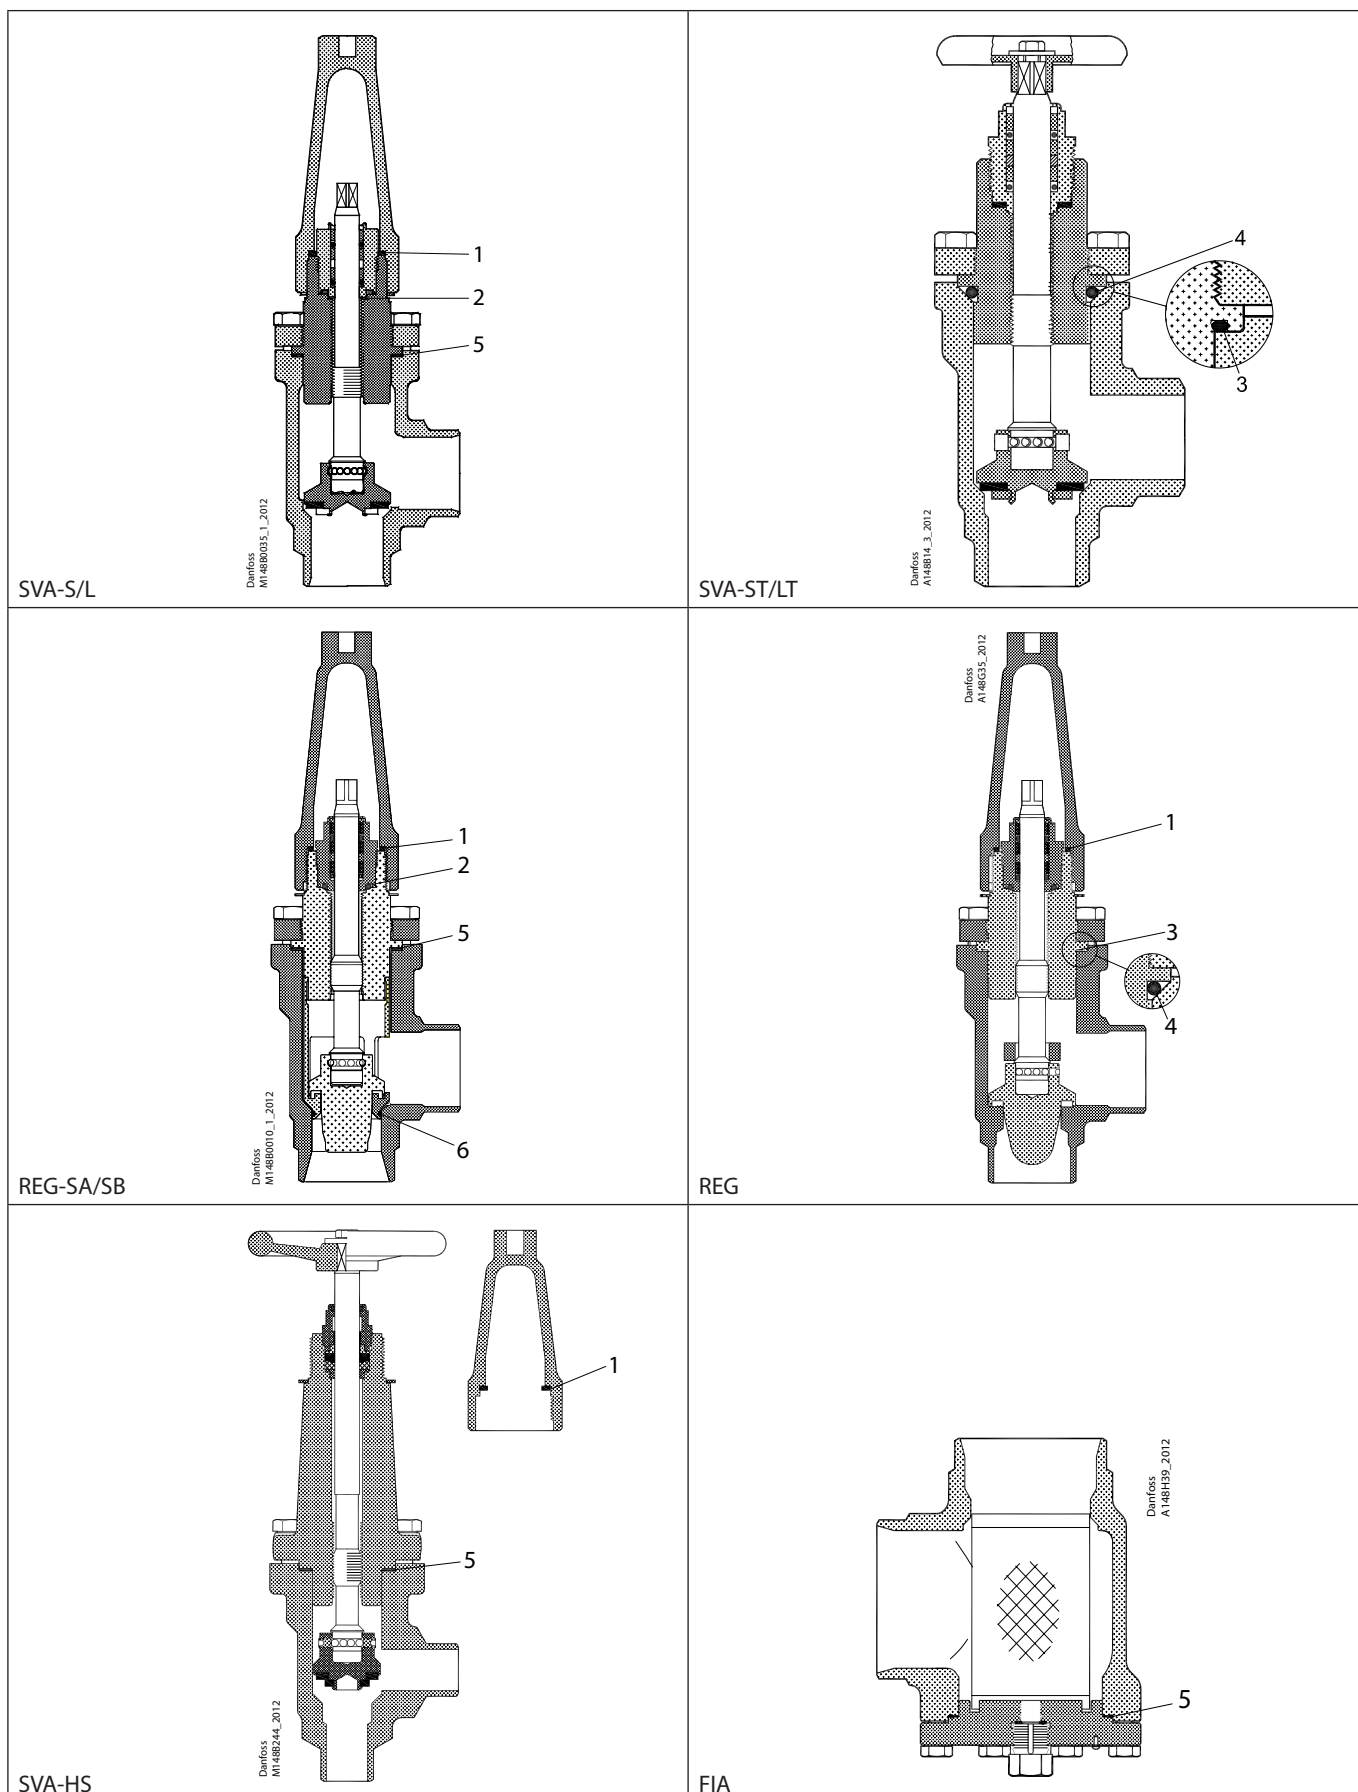

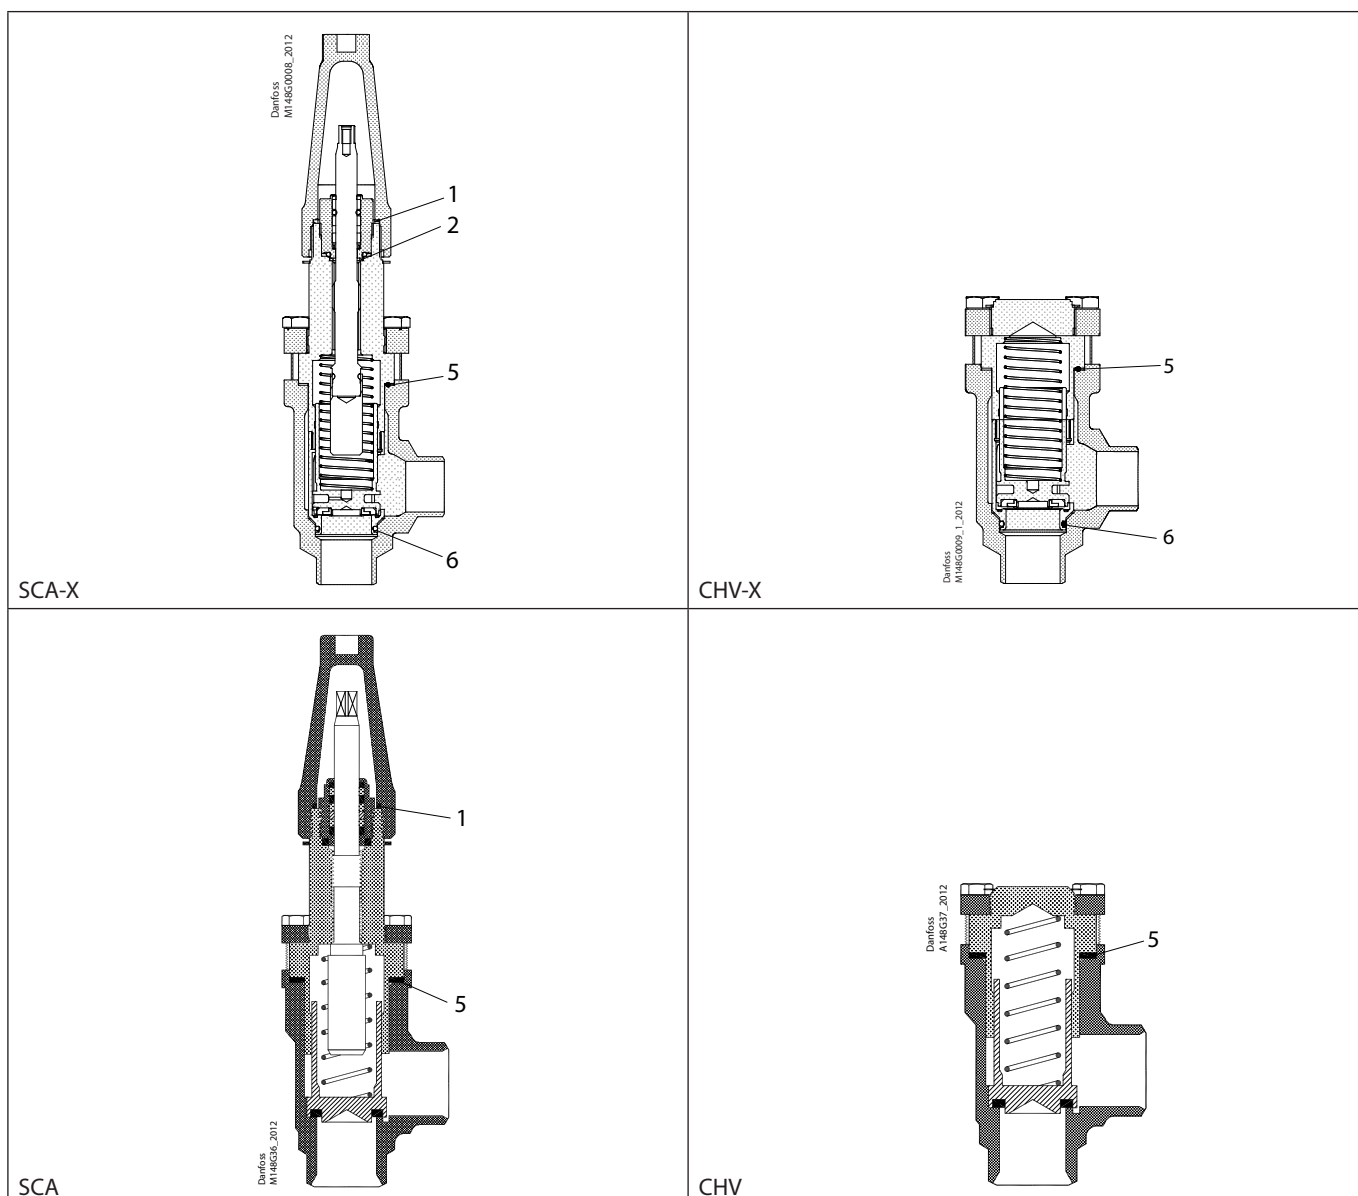

<p>1</p> <p> = Nylon</p> <p>$\varnothing 37 \text{ mm}$ $\varnothing 1.46''$</p> <p>Total no. = 1</p>	<p>2</p> <p> = Alu.</p> <p>$\varnothing 19 \text{ mm}$ $\varnothing 0.75''$</p> <p>Total no. = 1</p>	<p>3</p> <p> =</p> <p>$\varnothing 31 \text{ mm}$ $\varnothing 1.22''$</p> <p>Total no. = 1</p>	<p>4</p> <p> =</p> <p>$\varnothing 37 \text{ mm}$ $\varnothing 1.46''$</p> <p>Total no. = 1</p>	<p>5</p> <p> = Fibre</p> <p>$\varnothing 54 \text{ mm}$ $\varnothing 2.13''$</p> <p>Total no. = 1</p>
<p>6</p> <p> =</p> <p>$\varnothing 30 \text{ mm}$ $\varnothing 1.17''$</p> <p>Total no. = 1</p>				