


Installation guide – Spare parts and accessories

Overhaul kit | Code number 148B6157
SVA-S/L, SVA-ST/LT, SVA-HS, size 125

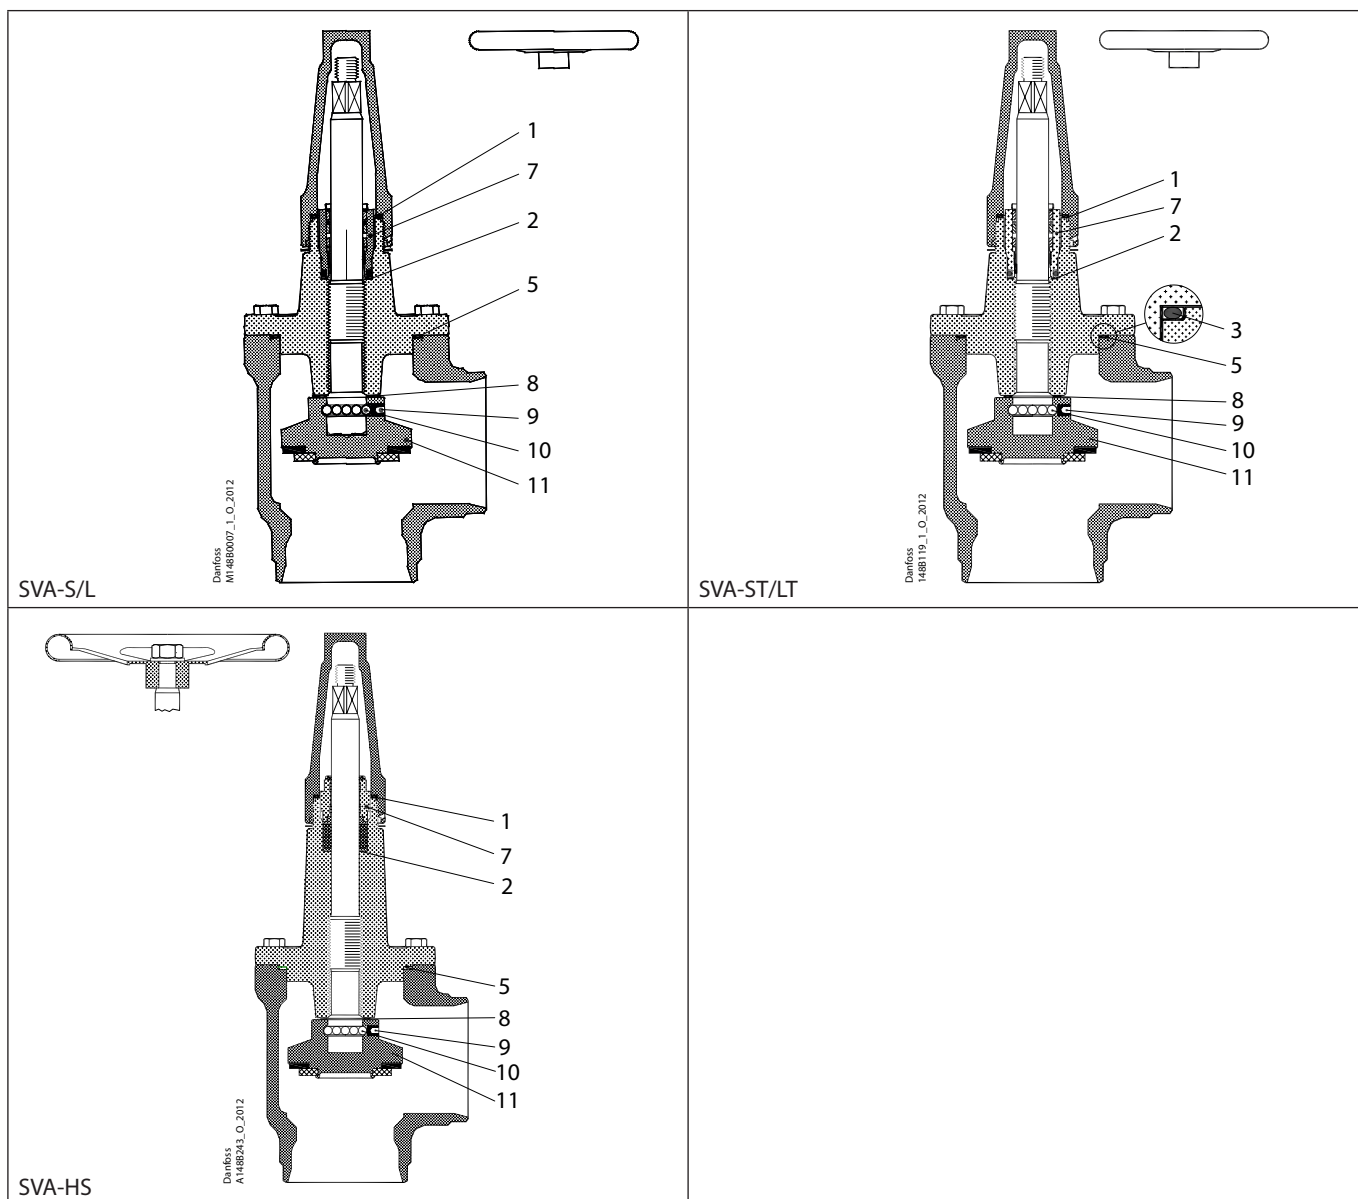

1 = Nylon Total no. = 1	2 = Alu. Total no. = 1	3 Total no. = 1	5 = Fibre Total no. = 1	7 Total no. = 1
8 = PTFE Total no. = 1	9 Total no. = 1	10 Total no. = 13	11 Total no. = 1	12 Total no. = 1

NOTE: When replacing the packing gland (pos. 7) in SVA-S/L, SVA-ST/LT or SVA-HS the aluminium gasket (pos. 2) is needed.