VACON®NX AC DRIVES

MOUNTING OF CABLE ACCESSORIES FR4-FR8 AND MF4-MF6



TABLE OF CONTENTS

Document ID: DPD01422B Document revision: B Release date: 24.08.2015

1. FR4	-FR6 and MF4-MF6 cable accessories	. 2
1.1	Accessories bag contents	2
	and FR8 cable accessories	
2.1	Accessories bag contents	5
2.2	Mounting the accessories	6

1. FR4-FR6 AND MF4-MF6 CABLE ACCESSORIES

Enclosed to your VACON® NX or NXL AC drive you have received a plastic bag containing components that are needed for the installation of the mains and motor cables in the AC drive.

1.1 ACCESSORIES BAG CONTENTS

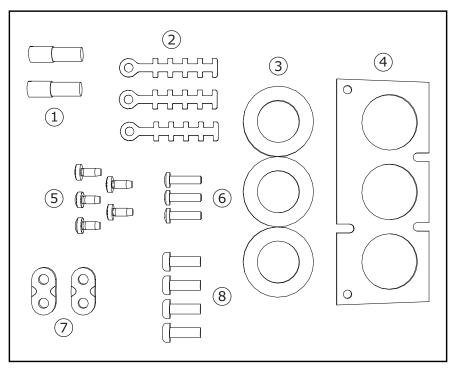


Figure 1. The cable accessories for FR4-FR6 and MF4-MF6

Components:

- 1. The grounding terminals (FR4, FR5/MF4, MF5), 2 pieces
- 2. The grounding clamps for control cable, 3 pieces
- 3. The rubber grommets (sizes vary from class to class), 3 pieces
- 4. The cable entry flange
- 5. Screws, M4x10, 5 pieces
- 6. Screws, M4x16, 3 pieces
- 7. The grounding clamps for grounding conductor (FR6, MF6), 2 pieces
- 8. The grounding screws M5x16 (FR6, MF6), 4 pieces

NOTE! The cable accessories installation kit for AC drives of protection class IP54 includes all components except 4 and 5.

1.2 MOUNTING THE ACCESSORIES

1	Make sure that the plastic bag you have received contains all necessary components.				
2	Open the cover of the AC drive. Figure 2.				
3	Remove the cable cover. See the locations for: 1. the grounding terminals (FR4/FR5; MF4/MF6). 2. the grounding clamps for grounding conductor (FR6/MF6). Figure 3.				

Attach again the cable cover. Attach the grounding clamps for control cable with 3 pieces of M4x16 screws. **NOTE!** The location of the grounding bar in FR6/MF6 is different from the picture. 4 Figure 4. Put the rubber grommets in the openings. 5 Figure 5. Attach the cable entry flange to the frame of the AC drive with 5 pieces of M4x10 screws. Close the cover of the AC drive. 6 Figure 6.

2. FR7 AND FR8 CABLE ACCESSORIES

Enclosed to your $VACON^{\circledR}$ NX AC drive you have received a plastic bag containing components that are needed for the installation of the mains and motor cables in the AC drive.

2.1 ACCESSORIES BAG CONTENTS

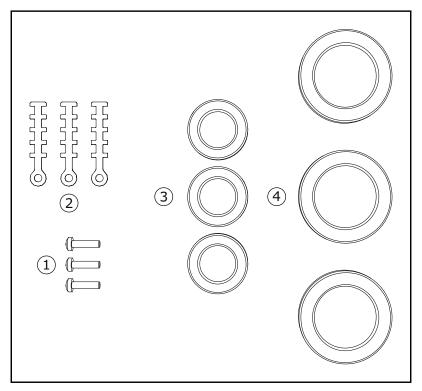



Figure 7. The cable accessories for FR7 and FR8

Components:

- 1. Screws, M4x16, 3 pieces
- 2. The grounding clamps for control cable, 3 pieces
- 3. The rubber grommets GD21 (FR7 IP54), 3 pieces / (FR8), 6 pieces
- 4. The rubber grommets GDM36 (FR7), 3 pieces

2.2 MOUNTING THE ACCESSORIES

1	Make sure that the plastic bag you have received contains all necessary components.							
2	Open the cover of the AC drive.							
	Attach the grounding clamps for control cable on the grounding level with M4x16 screws:							
	 FR7 standard, FR7 profibus, FR8 standard, FR8 profibus. 							
3								
	3							
	Figure 8.							

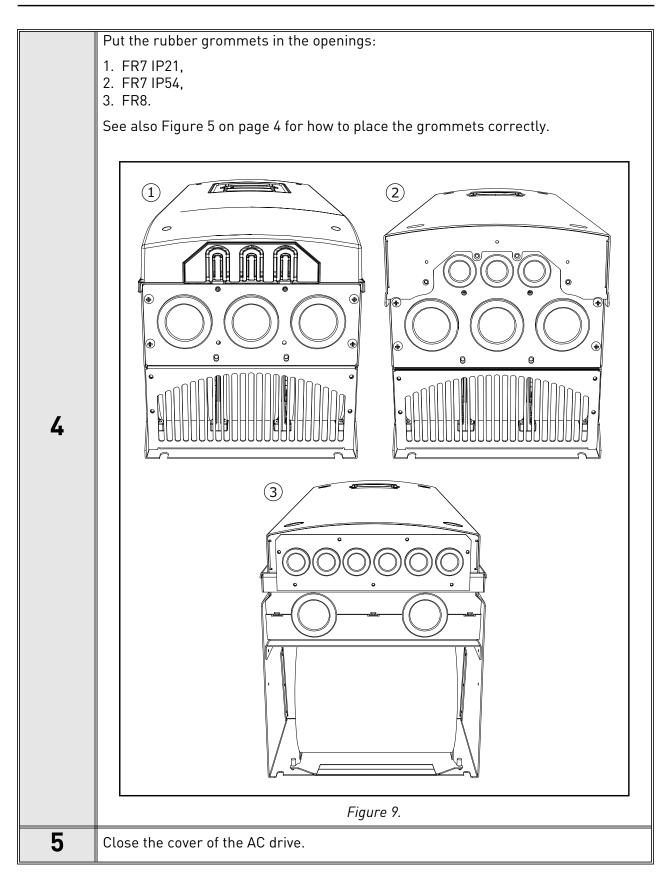



Find your nearest Vacon office on the Internet at:

www.vacon.com

Manual authoring: documentation@vacon.com

Vacon Plc. Runsorintie 7 65380 Vaasa Finland

Subject to change without prior notice © 2015 Vacon Plc.



Rev. B