

Installation Instructions

TR150 NEMA 1 Kit for H1, H2, H3, H4 and H5



Step 1

Fit top cover onto frequency converter.

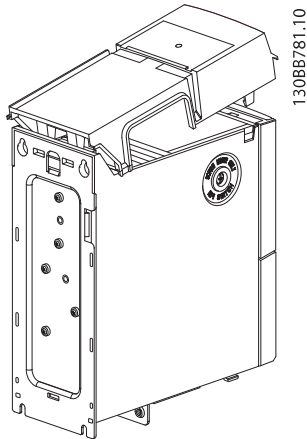


Illustration 1.1 Fit Top Cover

Step 2

Mount metal bracket onto frequency converter and tighten to M4 X 10 screws.

Tightening torque: 2 Nm

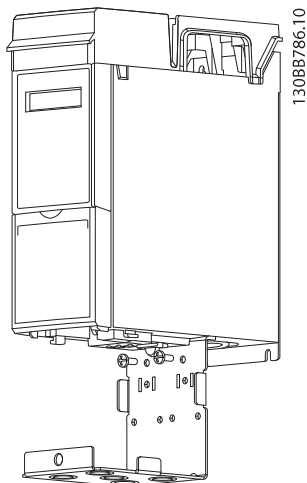


Illustration 1.2 Mount Metal Bracket

Step 3

Fit bottom cover onto frequency converter and tighten a M4 X 10 screw.

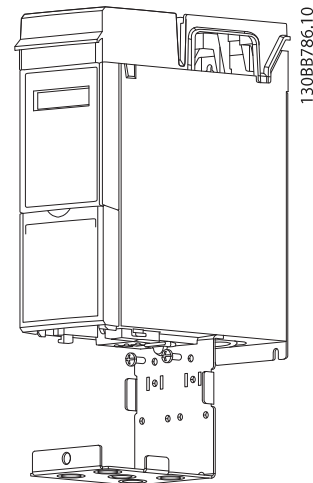


Illustration 1.3 Mount Bottom Cover

Enclosure	Conduit size
H1	Ø22.5 mm X 5
H2	Ø22.5 mm X 2, Ø28.4 mm X 3
H3	Ø22.5 mm X 2, Ø28.4 mm X 3
H4	Ø22.5 mm X 2, Ø34.7 mm X 3
H5	Ø22.5 mm X 2, Ø34.7 mm X 3

Table 1.1 NEMA 1 Kit



www.trane.com

For more information, contact your local Trane office or e-mail us at comfort@trane.com

Literature Order Number	BAS-SVN12A-EN
Date	April 2013
Supersedes	

Trane has a policy of continuous product and product data improvement and reserves the right to change design and specifications without notice.

