

# Installation Instructions

## NEMA 1 Kit for H6, H7 and H8



### Step 1

Fit top cover onto frequency converter with M5 screws.

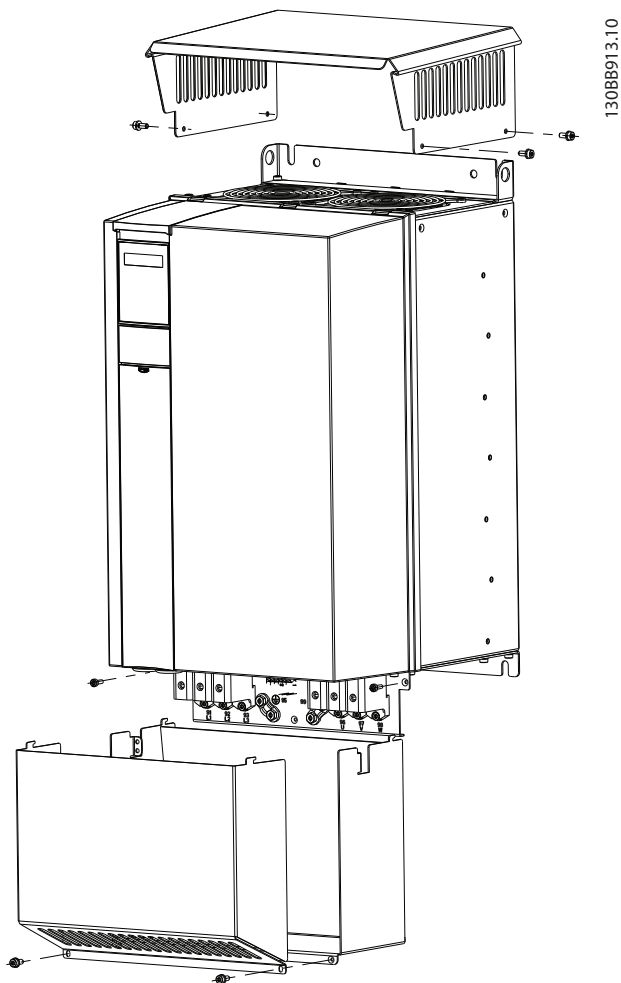


Illustration 1.1 Fit Top Cover

### Step 2

Fit bottom cover onto frequency converter and tighten an M4 screw.

### NOTE

IP21 is only achieved with keypad mounted.



[www.trane.com](http://www.trane.com)

For more information, contact your local Trane office or e-mail us at [comfort@trane.com](mailto:comfort@trane.com)

---

Literature Order Number BAS-SVN13A-EN

---

Date April 2013

---

Supersedes

---

Trane has a policy of continuous product and product data improvement and reserves the right to change design and specifications without notice.

