

Installation Instructions

TR150 NEMA 1 Kit for H9 and H10

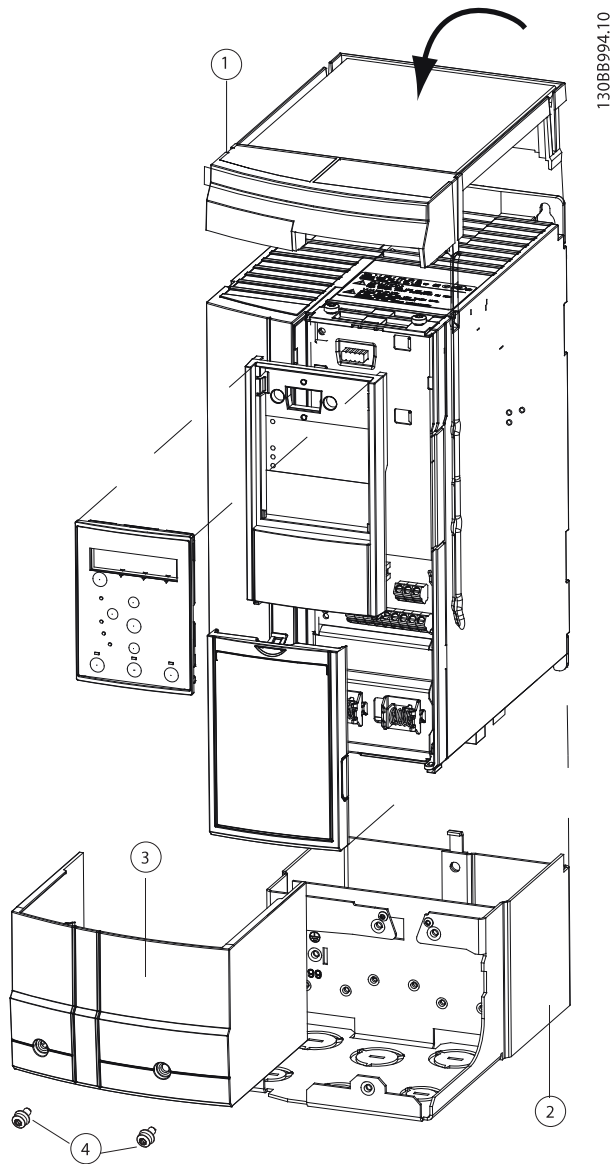


Illustration 1.1 Mounting of NEMA 1 Kit

1	Top cover
2	Base part
3	Base cover
4	Screw(s)

Table 1.1 Legend to *Illustration 1.1*

