




■ AF-60 LP™ Remote Mounting Kit Mounting Instruction



Step 1

Fit gasket on keypad

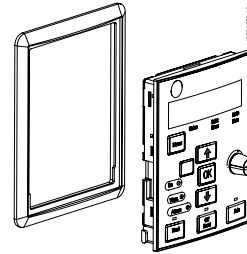

Step 2


Place keypad on panel - see dimensions of hole on drawing

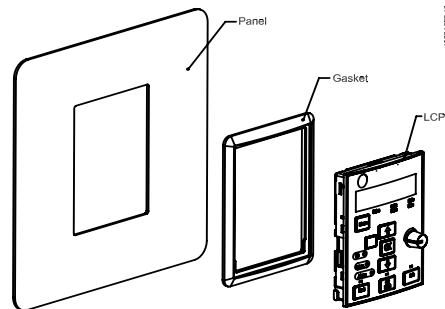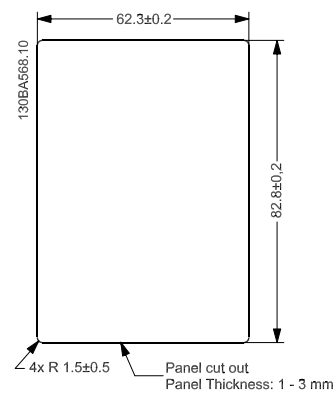

Step 3

Place bracket on back of the keypad, then slide down. Tighten screws and connect cable to keypad.

NOTE! Use the provided thread cutting screws to fasten connector to keypad. Tightening torque: 1.3 Nm

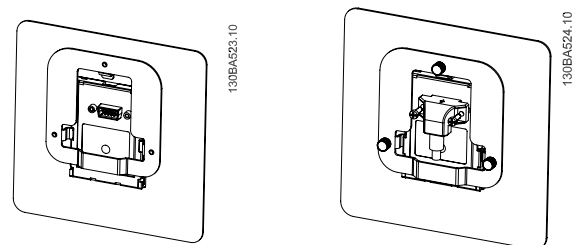

Step 4

Connect cable to drive

NOTE! Use the provided thread cutting screws to fasten connector to the drive. Tightening torque: 1.3 Nm

