




■ AF-60 LP™ Nema1 Kit Mounting Instruction

Step 1

Mount metal plate on drive and tighten the screws. Tightening torque: 2 Nm.

Conduit size: ½".

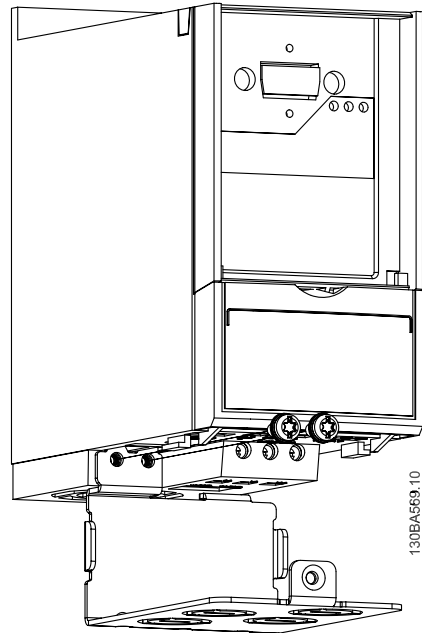

Step 2

Fit bottom cover on drive and tighten screw.

