

DRIVE PARAMETERS			
PARAMETER #	NAME	SETTING	VALUE
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
5-01	TERMINAL 27	1	OUTPUT
5-02	TERMINAL 29	2	OUTPUT
5-11	TERMINAL 19	52	RUN PERMISSIVE
5-14	TERMINAL 32	7	EXTERNAL INTERLOCK
5-15	TERMINAL 33	37	FIRE MODE
5-30	TERMINAL 27	188	FILTER CAP CONNECT
5-31	TERMINAL 29	5	RUNNING
5-40(0)	RELAY 1	160	NO ALARM
5-40(1)	RELAY 2	167	START COMMAND ACTIVE
14-51	DC LINK COMP.	0	OFF

SOFTSTART PARAMETERS			
PARAMETER #	NAME	SETTING	VALUE
3-1	LOCAL/REMOTE	1	LCL/RMT ANYTIME
3-3	INPUT A FUNCTION	5	EMERGENCY RUN
3-8	REMOTE RESET	2	NORMALLY OPEN
15-5	MAIN CONTACTOR TIME	1500	START DELAY

- NOTES:
- * INDICATES COMPONENTS NOT SUPPLIED BY FACTORY.
 - FEEDER CIRCUIT PROTECTION AND INPUT AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C. ANY APPLICABLE LOCAL CODES AND THE DRIVE PANEL NAMEPLATE RATING. DANFOSS RECOMMENDS AN INSULATED BONDING WIRE FROM MOTOR TO DRIVE RUNNING WITH MOTOR LEADS INSIDE CONDUIT OR SHIELDED CABLE.
 - REPLACE JUMPER WITH N.C. SAFETY INTERLOCK CONTACT AS APPLICABLE.
 - REFER TO THE INSTALLATION OPERATION MANUAL FOR THE PROPER DRIVE FUSING. DRIVE FUSES ARE INTERNAL TO DRIVE ON UNITS > 125 HP.
 - ADD JUMPER TO ENABLE AUTO BYPASS FUNCTION.
 - JUMPER FROM H2 TO H3 IS NOT PRESENT ON TRANSFORMER PRIMARY FOR 575V INPUT.
 - REMOVE JUMPER TO ENABLE DAMPER FEEDBACK IN FIRE MODE.
 - ADD JUMPER TO FORCE BYPASS IN FIRE MODE.
 - MOTOR/LINE AND CONDUIT GROUND CONNECTIONS TO BE MADE ON CABINET GROUND BAR.


NOTE: ALL DRIVE WIRES #18 AWG BLUE UNLESS OTHERWISE NOTED
 NOTE: ANALOG PAIRS ARE 18 AWG BELDEN #9460

RELEASE	0	SP14067	11/05/14
DESCRIPTION	REV	ECN	DATE
	3		
	2		
	1		

- NOTICE -

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES. IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.

DRN SJG	TOLERANCE Unless Otherwise Specified 2 PLC. ±.02 3 PLC. ±.005	NAME POWER DISTRIBUTION WIRING DIAGRAM PHD PANEL HVAC SOFT-START BYPASS 460/575 VAC FUUSED DISC., TYPE 3R, WITH DV/DT FILTER		
APR SJG	SCALE 1.0	MODEL FC102	SHEET 1 OF 2	

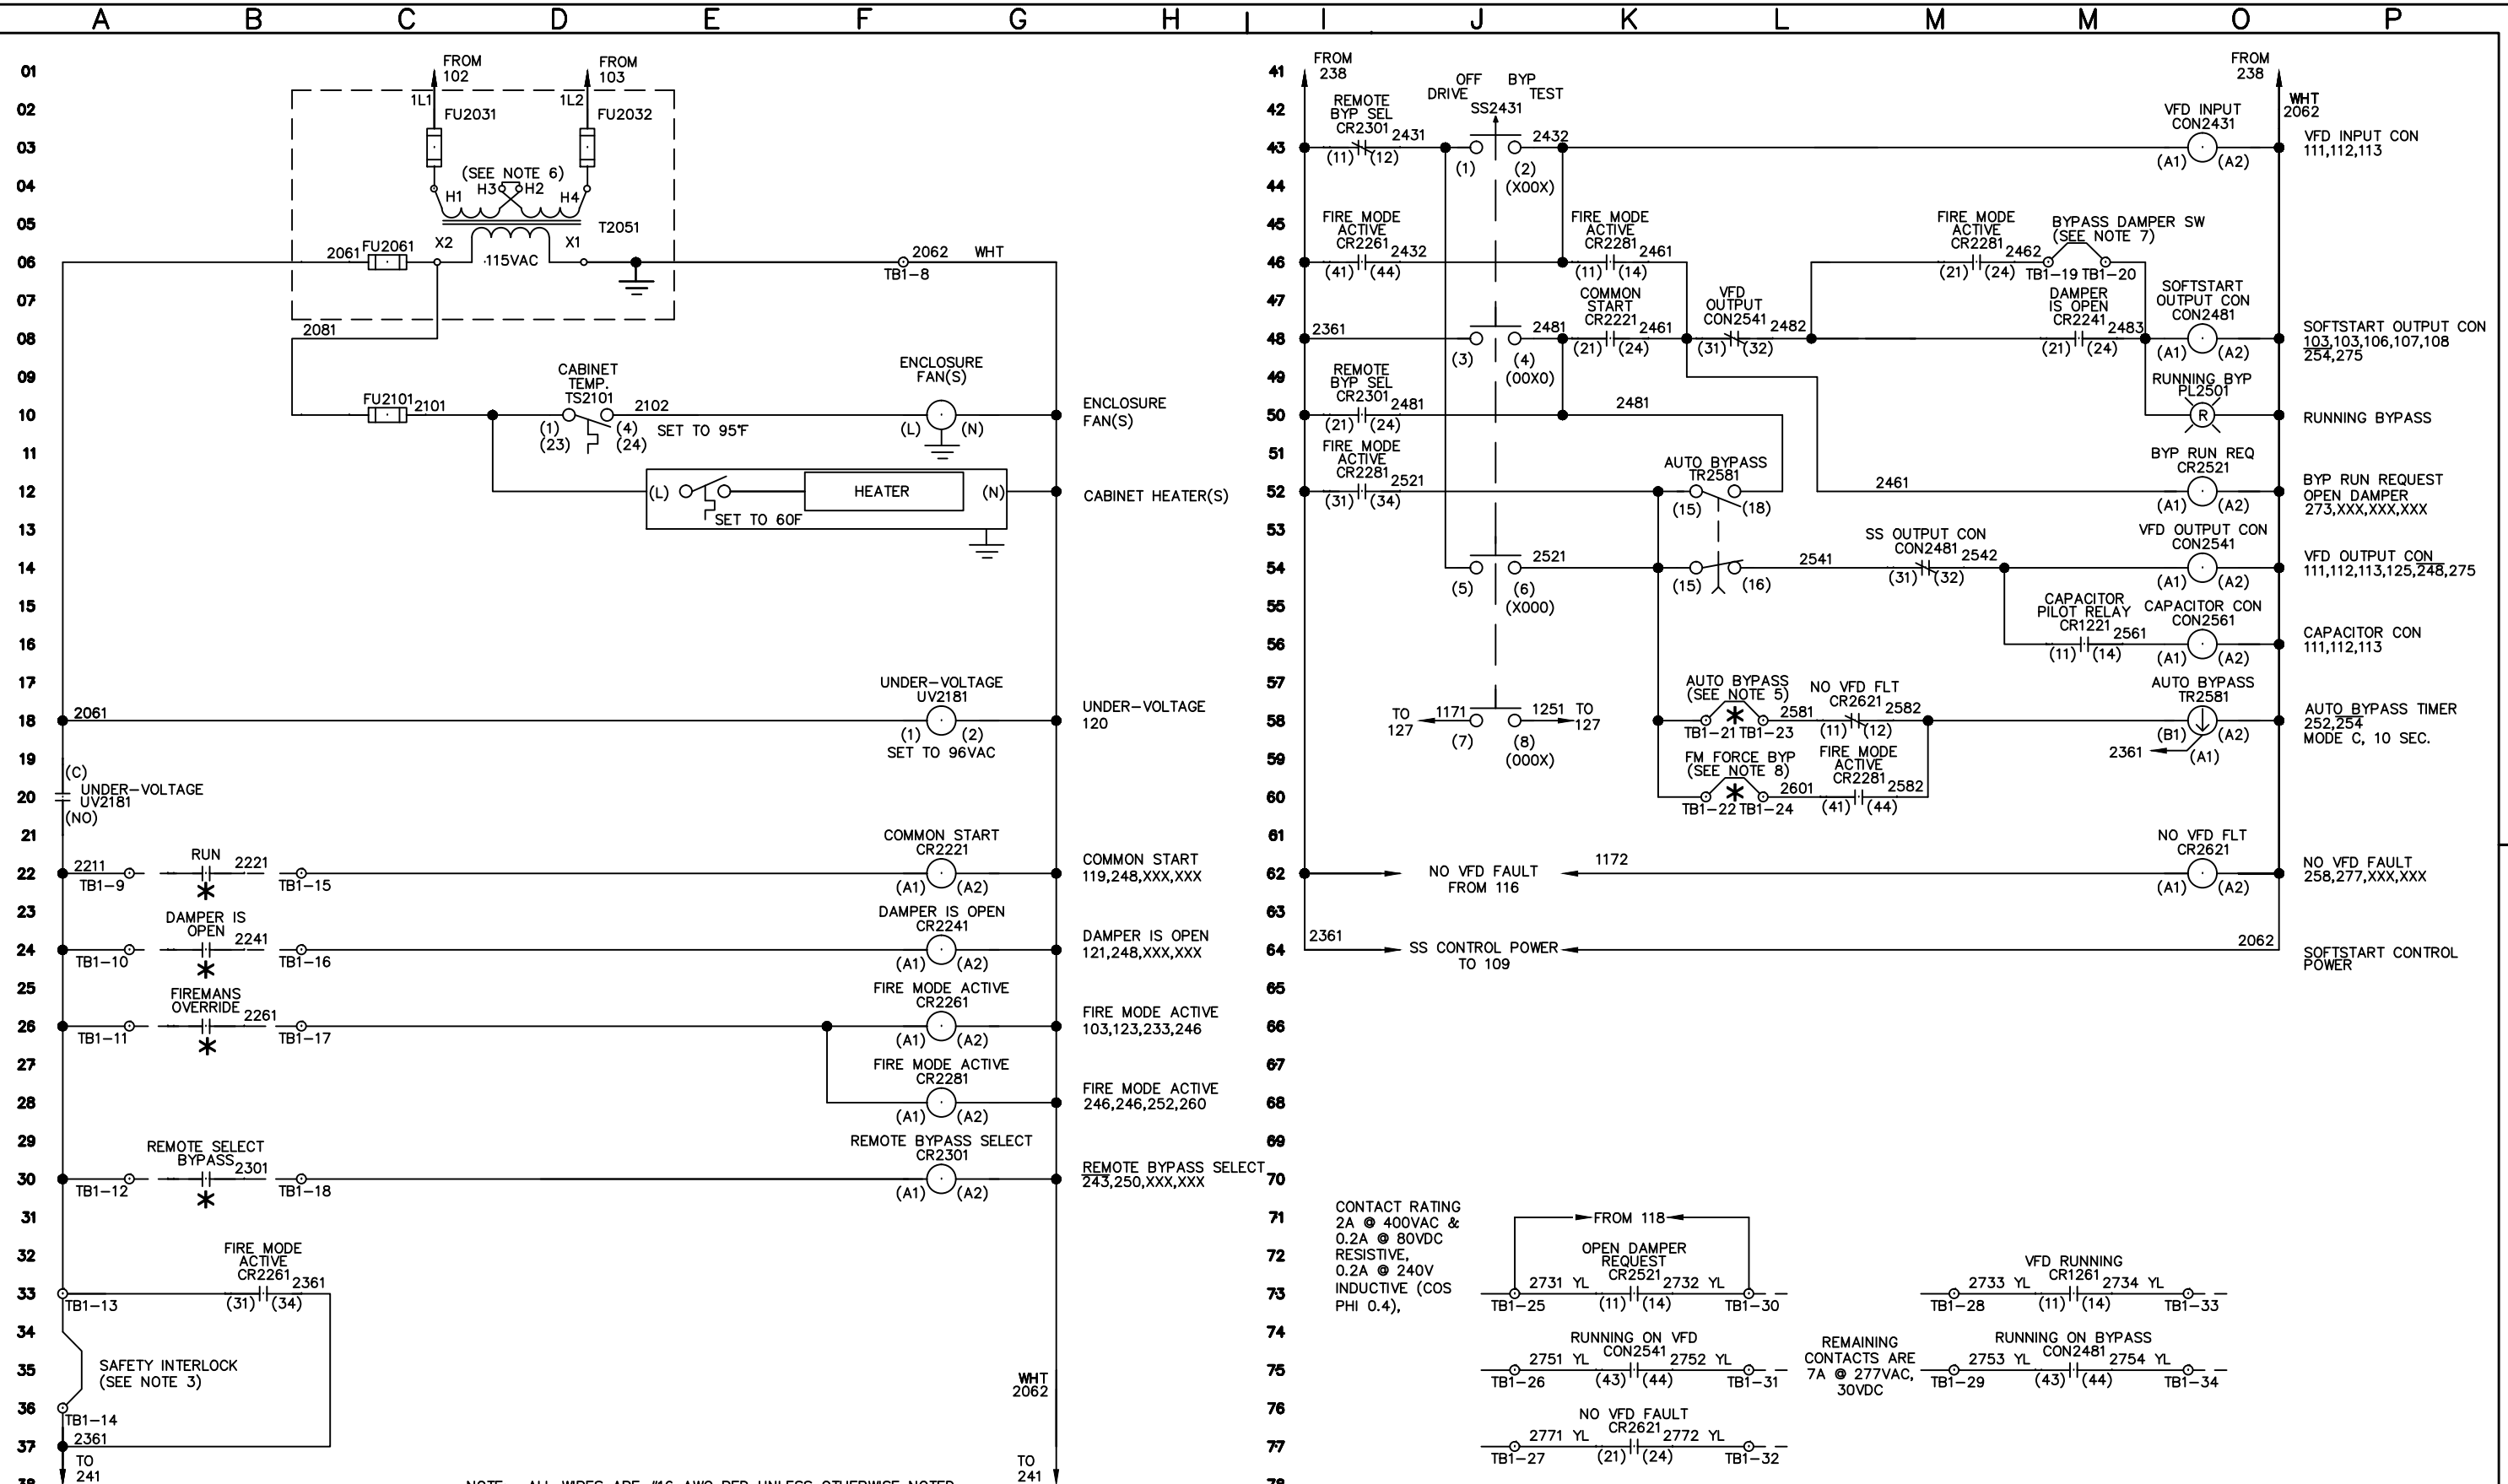

NOTE: ALL WIRES ARE #16 AWG RED UNLESS OTHERWISE NOTED

- NOTICE -

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES. IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.

	3		
	2		
	1		
RELEASE	0	SP14067	11/05/14
DESCRIPTION	REV	ECN	DATE

DRN	SJG	TOLERANCE	NAME		CONTROL WIRING DIAGRAM	
	APR	Unless Otherwise Specified	PHD PANEL HVAC SOFT-START BYPASS 460/575 VAC		FUSED DISC., TYPE 3R, WITH DV/DT FILTER	
	SJG	2 PLC ±.02 3 PLC ±.005	MODEL	FC102	SHEET 2 OF 2	SIZE D
		SCALE 1.0			DWG. NO.	174N9968

