WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE RED - AC CONTROL - DRIVE TERMINAL WHITE - AC GROUNDED - CUSTOMER TERMINAL CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND GRN / \neg * AC MOTOR OL 4T1 (L1) M2 (T1) 2T1 *CUSTOMER L1_(L1) (T1) BLK 2L1 3L1 (U1) (U2) 4L1 (F16A) 5L1 L1/R/91 VLT (L1)_{XX}_T1_ INPUT SUPPLIED T1/U/96 3L2 (V1) (V2) 4L2 (F16B) 5L2 (L2/S/92 POWER ADJUSTABLE FREQUENCY 4T2 (L2) (T2) (L2) T2 _ _ _ _ FEEDER L2 (L2) T15B] (T2) BLK 2L2 T2/V/97 3 PH, 480V, 3L3 (W1) (W2) 4L3 ||F16C|| 5L3 ||L2/5/92 ||L3/T/93 || DRIVE CIRCUIT L3 (L3) - IF15CII (T3) BLK 2L3 4T3 (L3) (T3) PROTECTION T3/W/98 (AFD) 60Hz (SEE NOTE 3) INPUT DRIVE INPUT FUSES DRIVE DISCONNECT DISCONNECT REACTOR (L1) (T1) (L2) (T2) EARTH GROUND GRN (L3) (T3) 163 RED X2 100 WHT F12 115VAC 250V CR6 (12) 5 (11) TS1 HEATER (SET: 65° F) CR6 167 1 (9) (5) 2)FAN 1 (SET: 80°F) (23) (24) TB2 TS1

TO SHEET 2

WARNING!

THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.

1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

- REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS: 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT

TO SHEET 2

- HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.		AUTO ENERGY OPTIM VT
5-02	02 TERMINAL 29 TYPE		OUTPUT
5-31	1 TERMINAL 29		RUNNING
14-20	14-20 RESET MODE		INFINITE AUTO REST

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.	DRN	NAME N	EMA 3R,480V,2C	- Lu
А	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED	DIM	1	DISC, DRIVE DISC, DRIVE FUSE	Janjuso
DR	SP10076	09/10	IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED	APR	MODEL ,, =	R,SINGLE MOTOR,1 FAN	
REV	ECN	DATE	TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	D TM	VLT	PAGE 1 OF 2 SIZE A NO. 1 8	<u> </u>

WIRE COLOR SCHEME
BLACK - LINE VOLTAGE
RED - AC CONTROL
WHITE - AC GROUNDED

WHITE - AC GROUNDED CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND

TERMINAL IDENTIFCATION

X - DRIVE TERMINAL


CUSTOMER TERMINAL


CUSTOMER DRY CONTACT RATINGS

RELAY	CONTACT RATING	
CR1, CR6	5A @ 120VAC 1/10 HP @ 120VAC	
M2, M3	10A @ 120/240VAC	

CONTACT SEQUENCE CHART FOR S1 X INDICATES CONTACT CLOSED

A INDICATES CONTACT CLUSED			
POSITION			
CONTACT	DRIVE	OFF	BYPASS
13-14			X
23-24	Χ		

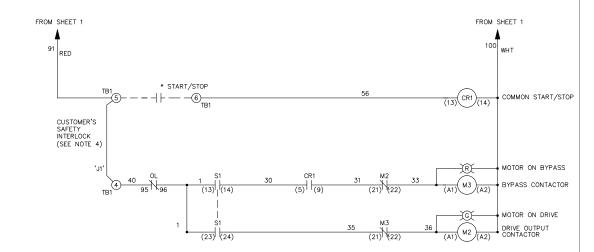

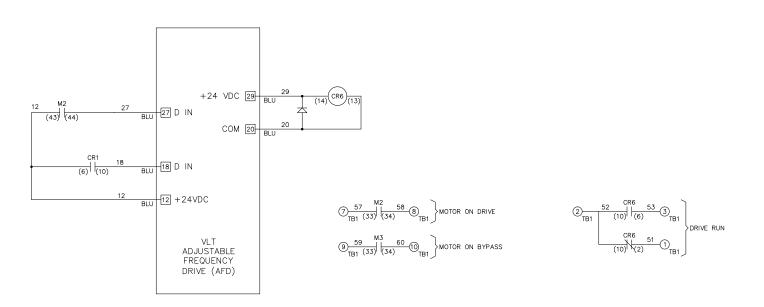

В		
Α	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

- NOTICE
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.
IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND
THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD
AND REFERENCE PURPOSSES, SHALL NOT BE USED OR CAUSED TO BE USED
IN ANY WAY PREJUDICAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL
NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED
TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES
AND SHALL BE RETURNED UPON REQUEST.

	DRN	
)		D TM

DTM

NAME NEMA 3R,480V,2C ,MAIN FUSE DISC, DRIVE DISC, DRIVE FUSE ,3MB1,IR,SINGLE MOTOR,1 FAN



MODEL

VLT

PAGE <u>2</u> OF <u>2</u>

- SIZE

PWG 185B0555