WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE RED - AC CONTROL X - DRIVE TERMINAL WHITE - AC GROUNDED - CUSTOMER TERMINAL CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND \neg 4T1 (L1) (T1) 2T1 4T2 (L2) (T2) 2 * AC MOTOR 1 *CUSTOMER L1 (L1) (T1) BLK 2L1 5L1 L1/R/91 VLT (L1) (T1) 1T1 (L1) T1 INPUT SUPPLIED T1/U/96 [F16A] F16B 5L2 POWER ADJUSTABLE FREQUENCY 2T2 (L2) (T2) 1T2 (L2) T2 BRANCH L2 (L2) (T2) BLK 2L2 T2/V/97 3 PH, 600V, L2/S/92 DRIVE 2T3 (L3) (T3) 1T3 (L3) T3 |F16B| 5L3 | L2/5/92 | |F16C| 5L3 | L3/T/93 CIRCUIT L3 (L3) (T3) BLK 2L3 4T3 (L3) (T3) T3/W/98 PROTECTION (AFD) 60Hz (SEE NOTE 3) DRIVE INPUT FUSES MAIN DISCONNECT (L1) (T1) (L2) (T2) (L1) (T1) 3T1 (L1) T1 (L2) (T2) 3T2 (L2) T2 *AC MOTOR 2 EARTH GROUND GRN (L3) (T3) (L3) (T3) 3T3 (L3) 163 RED 100 WHT -| F12 |-X2 X3 250V 115VAC T2 (12) 5 (11) TS1 HEATER (SET: 65° F) CR6 167 (9) (5) (2) FAN 1 (SET: 80° F) (23) (24) TB2 TS1 TO SHEET 2 TO SHEET 2

WARNING!

THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.


DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT
5-02	TERMINAL 29 TYPE	1	OUTPUT
5-31	TERMINAL 29	5	RUNNING
14-20	RESET MODE	13	INFINITE AUTO REST

NOTES:

- 1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.
- 2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. BRANCHCIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.	DRN	NAME		EMA 3R,600V,2C			- Les
А	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD	DIM		·	N DISC, DRIVE FU		A N I	Janjuss
DR	SP10076	09/10	AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL	APR		, SMB, CONTA	ACT MOTOR SELE	ECT,1 F	AIN	
REV	ECN	DATE	NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	D TM	MODEL	VLT	PAGE <u>1</u> OF <u>2</u>	SIZE	NO. 18	5B0686

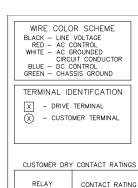

CR6

5A @ 120VAC

1/10 HP @ 120VAC

10A @ 120/240VAC





X INDICATES CONTACT CLUSED						
POSITION						
CONTACT	DRIVE	OFF	BYPASS			
13-14			Χ			
23-24	Χ					


CONTACT SEQUENCE CHART FOR S1

CONTACT	SEQUENCE	CHART	FOR	S2

X INDICATES CONTACT CLOSED						
POSITION						
CONTACT	MOTOR 1	AUTO	MOTOR 2			
11-12	X	 X				
13-14			Χ			
21-22		X	—X			
23-24	Х					

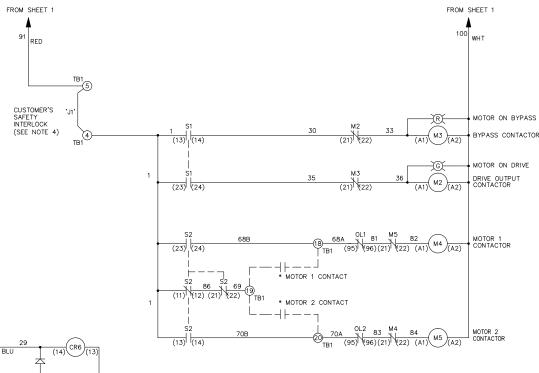

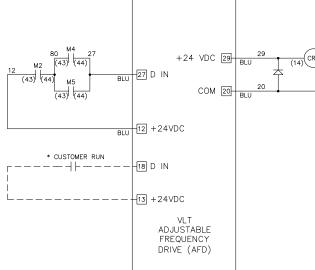

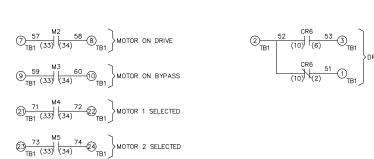

В		
Α	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

- NOTICE -
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.
IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND
THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD
AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED
IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL
NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED
TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES
AND SHALL BE RETURNED UPON REQUEST.

DRN		NAME	
	D TM		
			.3M
٨٥٥			, 0101

DTM

NEMA 3R,600V,2C ,MAIN DISC, DRIVE FUSE MB, CONTACT MOTOR SELECT, 1 FAN



MODEL PAGE <u>2</u> OF <u>2</u> VLT