WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE - DRIVE TERMINAL RED - AC CONTROL WHITE - AC GROUNDED - CUSTOMER TERMINAL CIRCUIT CONDUCTOR BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND H* AC MOTOR OL 4T1 (L1) M2 (T1) 2T1 *CUSTOMER L1 (L1) (T1) BLK 2L1 (U1) (U2) 4L1 (F16A) 5L1 (L1/R/91 VLT (L1)_{XX} <u>T1</u> INPUT SUPPLIED T1/U/96 POWER (V1) (V2) 4L2 (F16B) 5L2 ADJUSTABLE FREQUENCY 4T2 (L2) (T2) (L2) T2 BRANCH L2 (L2) (T2) BLK 2L2 3 PH, 600V, L2/S/92 T2/V/97 (W1) (W2) 4L3 |F16B| 5L3 |L2/5/92 |L3/T/93 DRIVE CIRCUIT (L3) <u>T3</u> L3 (L3) (T3) BLK 2L3 4T3 (L3) (T3) PROTECTION T3/W/98 (AFD) 60Hz (SEE NOTE 3) INPUT DRIVE INPUT FUSES MAIN DISCONNECT REACTOR (L1) (T1) (L2) (T2) EARTH GROUND GRN (L3) (T3) 163 RED 100 WHT F12 X2 X3 115VAC T2 HEATER (SET: 65° F) (12) 5 (11) TS1 CR6 167 (9) (5) (2) FAN 1 (SET: 80° F) (23) (24) TB2 TS1 FAN 2 2)FAN 3 FAN 4 WARNING! THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED TO SHEET 2 TO SHEET 2 FOR YOUR APPLICATION.

NOTES:

- 1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.
- 2. REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. BRANCHCIRCUIT PROTECTION, INPUT POWER AND MOTOR WIRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS:
- 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- 5.2. HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

000/5	0.40.445750	OFTTILLOO
DRIVE	PARAMETER	SE LIINGS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT
5-02	TERMINAL 29 TYPE	1	OUTPUT
5-31	TERMINAL 29	5	RUNNING
14-20	RESET MODE	13	INFINITE AUTO REST

В		
Α	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

- NOTICE
THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.
IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND
THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD
AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED
IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL
NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED
TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES
AND SHALL BE RETURNED UPON REQUEST.

DRN	D TM

D TM

NAME

MODEL

NEMA 3R,600V,2C ,MAIN DISC, DRIVE FUSE ,3MB,IR,SINGLE MOTOR,4 FAN



VLT PAGE 1 OF 2 SIZE A NO. 1858213.

WIRE COLOR SCHEME WIRE COLUM SCHEME
BLACK - LINE VOLTAGE
RED - AC CONTROL
WHITE - AC GROUNDED
CIRCUIT CONDUCTOR
BLUE - DC CONTROL
GREEN - CHASSIS GROUND

TERMINAL IDENTIFICATION

X - DRIVE TERMINAL


 $\overline{\otimes}$ - CUSTOMER TERMINAL


CUSTOMER DRY CONTACT RATINGS

RELAY	CONTACT RATING
CR6	5A @ 120VAC 1/10 HP @ 120VAC
M2, M3	10A @ 120/240VAC

CONTACT SEQUENCE CHART FOR S1

A INDICATES CONTACT CLUSED			
POSITION			
CONTACT	DRIVE	OFF	BYPASS
13-14			Χ
23-24	Χ		

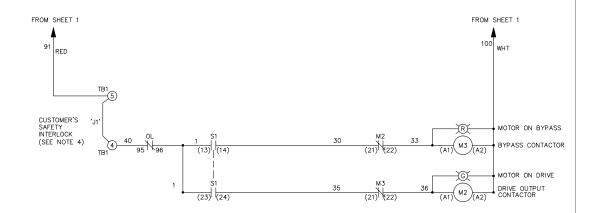

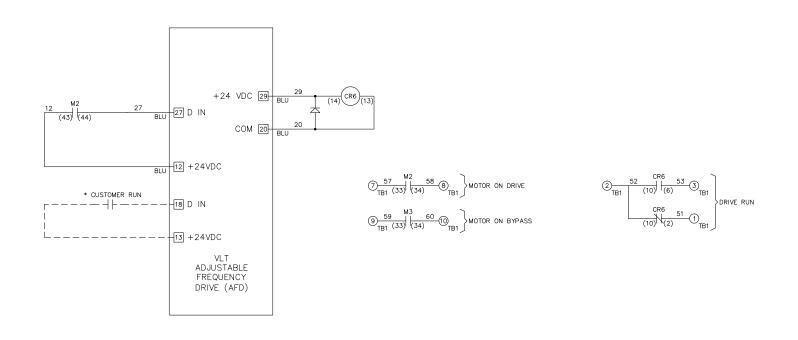

В		
Α	SP10119	11/10
DR	SP10076	09/10
REV	ECN	DATE

- NOTICE -THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES. IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.

)	DRN	D TM

DTM

NAME NEMA 3R,600V,2C ,MAIN DISC, DRIVE FUSE ,3MB,IR,SINGLE MOTOR,4 FAN

MODEL

VLT

PAGE <u>2</u> OF <u>2</u>