


KIT REAR BEARING SENSOR/MOTOR SENSOR CABLE

110039.

 <p>Installation and servicing of Danfoss Turbocor® compressors by qualified and product trained personnel only. Follow these instructions and sound refrigeration/electrical/servicing practices relating to installation, commissioning, maintenance and service.</p>			
<p>Consult the appropriate Danfoss Turbocor Compressors Inc. (DTC) Service Manual on turbocoroem.com for detailed service instructions.</p>	<p>Never power compressor without covers in place and secured.</p> <p>Opening the drive panel will expose you to a voltage hazard of up to 575V AC and 900V DC. Ensure the mains input power is off and locked out before opening panel.</p> <p>Before opening the drive panel, wait at least 20 minutes after isolating AC power to allow the high voltage capacitors to discharge.</p>	<p>Always wear appropriately rated safety equipment when working around equipment and/or components energized with high voltage.</p> <p>This equipment contains hazardous voltages that can cause serious injury or death.</p>	<p>Recover all refrigerant from compressor in accordance with local codes and ensure pressure is fully vented before the removal of refrigerant containing components.</p>

1 - Introduction

VTT/VTX Rear Bearing Sensor/Motor Sensor Cable replacement.

This kit contains the Rear Bearing Sensor/Motor Sensor Cable. Please refer to our Service Manual for details regarding the replacement of this cable.

We have made the **VTT/VTX Service Manual** available to anyone. To access the manual, you may scan the applicable QR code below or you may go to our DTC website at www.turbocoroem.com. At the top of the page there is a pull-down menu called "Quick Links." Click this menu and select the appropriate service manual.

Refer to the applicable QR code below to download the VTT/VTX Service Manual.

English

Chinese



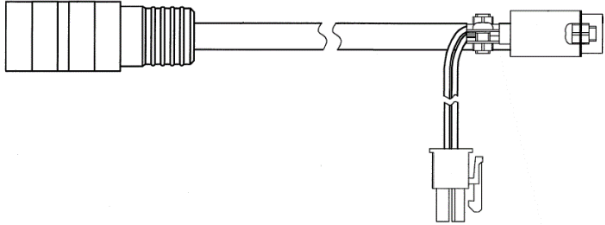
2 - REAR BEARING SENSOR/MOTOR SENSOR CABLE Removal Instructions

1. Isolate VTT/VTX power as described in Section "Electrical Isolation of the VFD" of the Service Manual (M-SV-VT-001).
2. Remove the Service Electronics Cover.
3. Remove the 9-pin connector from the CCM board.
4. Remove the motor sensor connector from J1 ST RTD on the CCM board.
5. Twist and pull to remove the sensor cable connection from the feedthrough.

3 - REAR BEARING SENSOR/MOTOR SENSOR CABLE Installation Instructions

1. Attach the bearing sensor cable to the feedthrough.
2. Install the 9-pin connector onto the CCM board.
3. Install motor sensor connector to J1 ST RTD on the CCM board.
4. Install the Service Side Cover.
5. Return the compressor to normal operation.
6. Test run the compressor to verify proper operation.

4 - Kit Contents

Kit numbers	Compressor models	
110039	VTT/VTX	
QTY	Part(s) Description	Picture(s)
1	CABLE - COMBO SIGNAL REAR	

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without consequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.