

# Rittal – The System.

Faster – better – worldwide.



Filterlüfter  
Fan-and-filter unit  
Ventilateur à filtre  
Ventilator  
Filterfläkt  
Ventilatore-filtro  
Ventilador con filtro  
フィルターファン

SK 3237.xxx  
SK 3238.xxx  
SK 3239.xxx  
SK 3240.xxx

SK 3241.xxx  
SK 3243.xxx  
SK 3244.xxx  
SK 3245.xxx

Montage-, Installations- und Bedienungsanleitung  
Assembly and operating instructions  
Notice d'emploi, d'installation et de montage  
Montage- en bedieningshandleiding  
Montage- och hanteringsanvisning  
Istruzioni di montaggio e funzionamento  
Instrucciones de montaje y funcionamiento  
取扱説明書



ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES



## Contents

<b>1</b>	<b>Notes on documentation</b>	<b>4</b>	<b>5</b>	<b>Carrying out the electrical installation</b>	<b>9</b>
1.1	Other applicable documents	4	5.1	Installing the power supply	9
1.2	Storing the documents	4	5.2	Rotating the voltage connection	9
1.3	Symbols used	4	5.3	Changing the direction of airflow	9
<b>2</b>	<b>Safety notes</b>	<b>5</b>	<b>6</b>	<b>Commissioning</b>	<b>10</b>
<b>3</b>	<b>Device description</b>	<b>5</b>	6.1	Properties	10
3.1	Functional description	5	<b>7</b>	<b>Changing the filter</b>	<b>10</b>
3.1.1	How it works	5	7.1	Installing the filter media	10
3.1.2	Control	6	<b>8</b>	<b>Inspection and maintenance</b>	<b>11</b>
3.1.3	Safety equipment	6	8.1	General	11
3.1.4	Filter mats	6	<b>9</b>	<b>Storage and disposal</b>	<b>11</b>
3.2	Proper use	6	<b>10</b>	<b>Technical specifications</b>	<b>12</b>
3.3	Scope of supply	6	<b>11</b>	<b>Cut-out/drilling dimensions</b>	<b>16</b>
<b>4</b>	<b>Assembly and connection</b>	<b>7</b>	<b>12</b>	<b>EMC fan/outlet filter</b>	<b>17</b>
4.1	Choosing the installation site	7	<b>13</b>	<b>Connection diagrams</b>	<b>18</b>
4.2	Assembly instructions	7	<b>14</b>	<b>EC declaration of conformity</b>	<b>20</b>
4.2.1	General	7			
4.2.2	Layout of the components in the enclosure	7			
4.3	Fitting the fan-and-filter unit or outlet filter	7			
4.3.1	Cutting out the enclosure	7			
4.3.2	Fitting the fan-and-filter unit	7			
4.4	Notes on electrical installation	8			
4.4.1	Connection data	8			
4.4.2	Overvoltage protection and supply line load	8			
4.4.3	PE conductor connection	8			

# 1 Notes on documentation

---

EN

## 1 Notes on documentation

These assembly instructions are aimed at tradespersons who are familiar with assembly and installation of the fan-and-filter unit, and at trained specialists who are familiar with operation of the fan-and-filter unit.

### 1.1 Other applicable documents

There is one set of instructions for the unit types described here:

- Assembly, installation and operating instructions enclosed with the unit as a printed document and/or on CD-ROM.

We cannot accept any liability for damage associated with failure to observe these instructions. The instructions for the accessories used should also be observed where applicable.

### 1.2 Storing the documents

These instructions and all associated documents are part of the product. They must be given to the plant operator. The operator is responsible for storage of the documents so they are readily available when needed.

## 1.3 Symbols used

Please observe the following safety instructions and other notes in this guide:

### Symbol for an instructed action:

- The bullet point indicates that you should perform an action.

### Safety and other notes:

---



**Danger!**  
**Immediate danger to life and limb!**

---



**Caution!**  
**Potential threat to the product and its environment.**

---



**Note:**  
Useful information and special features.

---

## 2 Safety notes

Please observe the following general safety notes when assembling and operating the unit:

- Assembly, installation and servicing may only be performed by properly trained specialists.
- Do not obstruct the air inlet and outlet of the fan-and-filter unit inside and outside the enclosure (see also section “4.2.2 Layout of the components in the enclosure”, page 7).
- The heat loss of the components installed in the enclosure must not exceed the specific air throughput of the fan-and-filter unit.
- Fan-and-filter units must always be installed on vertical panels (door or walls).
- The louvres must always have their opening pointing downwards.
- Use only original spare parts and accessories.
- Do not make any changes to the fan-and-filter unit other than those described in these and other applicable instructions.
- The fan-and-filter unit must only be connected to the mains with the system de-energised. Connect the pre-fuse specified on the rating plate.
- Changes to the direction of airflow must only be carried out with the system de-energised.
- Changes to the positioning of the mains connection must only be carried out with the system de-energised.
- Never insert your fingers into the rotating fan wheel.
- Electrical connection and any repairs may only be carried out by authorised specialist personnel.

## 3 Device description

Depending on the model chosen, your fan-and-filter unit may vary in appearance from the illustrations contained in these instructions. However, the functions are identical in principle.

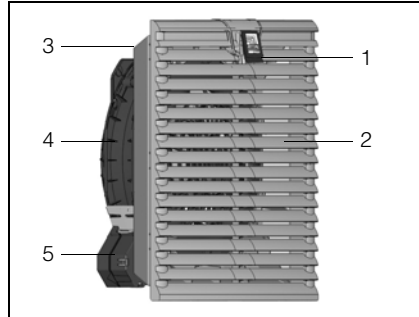


Fig. 1: Device description

### Key

- 1 Function logo  
(to release the louvred grille)
- 2 Louvred grille
- 3 Filter box with filter mat
- 4 Fan housing
- 5 Variable electrical connection

### 3.1 Functional description

The fan-and-filter unit in conjunction with the corresponding outlet filter(s) is used to dissipate heat loss from enclosures and ventilate the enclosure, thereby protecting temperature-sensitive components. This is achieved via the direct infeed of ambient air, the temperature of which must be less than the admissible enclosure interior temperature. The system is fitted into prepared cut-outs in the door or walls of the enclosure.

#### 3.1.1 How it works

The fan-and-filter unit is comprised of the following four main components: Fan motor, filter box, louvred grille with function logo and filter medium.

# 3 Device description

EN

## 3.1.2 Control

Rittal fan-and-filter units may be controlled more efficiently using a thermostat (Model No. SK 3110.000), digital temperature display (Model No. SK 3114.200), temperature-dependent speed control (Model No. SK 3120.200) and/or hygrostat (Model No. SK 3118.000).  
Control unit (Model No. SK 3235.440) for fan-and-filter unit SK 3245.xxx only.

## 3.1.3 Safety equipment

The fan is equipped with thermal winding protection devices for protection against excess current and even, in some cases, against overtemperature. For rotary current fans, the winding protection is located in the star earthing of the motor.

## 3.1.4 Filter mats

The fan-and-filter unit/outlet filter is supplied with a standard filter mat already installed. Depending on the incidence of dust, you will need to replace the filter mat from time to time.

In order to increase the protection category, and in the case of dust with a grain size of  $< 10 \mu\text{m}$ , we recommend the use of fine filter mats.



### Note:

The air throughput volume will be reduced.  
Special filter mats are required for EMC fan-and-filter units (see accessories).

## 3.2 Proper use

Rittal fan-and-filter units were developed and designed in accordance with the state of the art and the recognised rules governing technical safety. Nevertheless, if used improperly, they may pose a threat to life and limb or cause damage to property. The unit is only intended for ventilating enclosures and electronic cases. Any other use is deemed improper. The manufacturer will not be liable for any damages caused as a result of improper use, or for incorrect assembly, installation or use. All risk is borne solely by the user.  
Proper usage also includes the observation of all valid documents and compliance with the inspection and servicing conditions.

## 3.3 Scope of supply

The fan is supplied in a packaging unit in a fully assembled state and ready to connect.  
Please check the scope of supply for completeness.

Qty.	Description
1	Fan-and-filter unit
4	– Mounting screws (not for SK 3237.1xx to SK 3239.1xx)
1	– Assembly, installation and operating instructions
1	Drilling template, self-adhesive

Tab. 1: *Scope of supply*

## 4 Assembly and connection

### 4.1 Choosing the installation site

When choosing the installation site for the enclosure, please observe the following:

- The site for the enclosure, and hence the arrangement of the fan-and-filter unit, must be carefully selected so as to ensure good ventilation.
- The site must be free from excessive dirt and moisture.
- The ambient temperature must be lower than the permissible enclosure interior temperature.
- The mains connection data as stated on the rating plate of the unit must be guaranteed.

### 4.2 Assembly instructions

#### 4.2.1 General

- Check that the packaging does not show any signs of damage. Packaging damage may be the cause of a subsequent functional failure.
- The fan-and-filter unit and outlet filter must always be mounted on an enclosure in order to ensure air exchange.

**Note:**

The outlet filter should be at least the same size as the fan-and-filter unit.

- The enclosure must be sealed on all sides (IP 54). If the enclosure has a leak, unfiltered, contaminated air may enter the enclosure, depending on the direction of airflow of the fan.

#### 4.2.2 Layout of the components in the enclosure

Exercise particular caution with the airflow from the blowers of built-in components. For installation, it is important to ensure that the airflows of fans and built-in components do not have a negative influence on one another (air short-circuit).

The corresponding minimum distances between the fan and component must be observed in order to ensure unhindered air circulation.

### 4.3 Fitting the fan-and-filter unit or outlet filter

The fan-and-filter unit or outlet filter is mounted on a vertical panel of the enclosure:

- For this purpose, the appropriate door, side or rear panel must be cut out using the supplied drilling template.

The fan-and-filter unit is generally fitted in the lower part of the enclosure, and the outlet filter in the upper part.

#### 4.3.1 Cutting out the enclosure

- Stick the supplied self-adhesive drilling template to the envisaged position on the door, side or rear panel of the enclosure.

There are dimensioning lines on the drilling plate for the cut-out and for the holes required for mounting and securing the fan, depending on the metal thickness (cf. also Fig. 8 and Fig. 9, page 16).

**Risk of injury!**

**Carefully deburr all cut-outs to prevent injuries caused by sharp edges.**

- Make the cut-outs including the line width as per the drilling template. Deburr the cut-outs.

#### 4.3.2 Fitting the fan-and-filter unit

- The fan may be fitted without tools, by simply snapping into the preconfigured mounting cut-out.
- However, if the metal thickness is greater than 3 mm, the fan will need to be screw-fastened. To this end, remove the louvred grille in order to gain access to the lower mounting holes.

# 4 Assembly and connection

EN

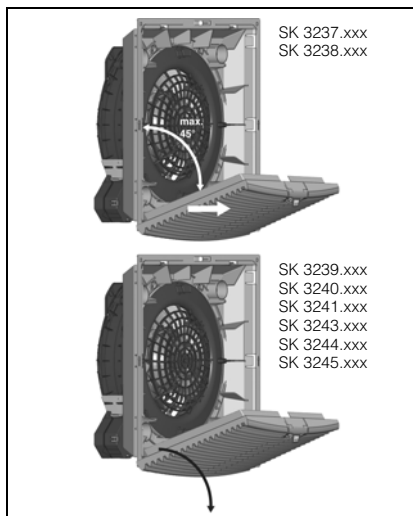


Fig. 2: Remove the louvred grille

- If transporting over long distances or to a different installation site, we strongly recommend that you screw-fasten the fan to prevent it from falling out of the mounting cut-out.
- The fan-and-filter unit is a rotating component that may transfer vibrations and oscillations. Suitable design measures to dampen vibrations should be implemented in advance before constructing the system.
- The protection category can be increased by means of the following accessories:
  - IP 55 by using an additional fine filter mat or hose-proof hood.
  - IP 56 by using a hose-proof hood.



### Note:

To increase the protection category, an additional fine filter mat or hose-proof hood must be used in both the fan-and-filter unit and the outlet filter.

## 4.4 Notes on electrical installation

When performing the electrical installation, it is important to observe all valid national and regional regulations as well as the provisions of the responsible power supply company. Electrical installation must only be carried out by a qualified electrician who is responsible for compliance with the existing standards and regulations.

### 4.4.1 Connection data

- The voltage and frequency of the connection must correspond to the values stated on the rating plate.
- Electrical connection and any repairs may only be carried out by authorised specialist personnel.  
Use only original spare parts!
- For 1~ and 24 V (DC) fans, install the pre-fuse prescribed on the rating plate (circuit-breaker or slow fuse) to protect against short-circuiting.
- With the rotary current variant, install the pre-fuse prescribed on the rating plate or a circuit-breaker/back-up protection to protect against short-circuiting, and set it to the prescribed rating value.
- The direction of airflow and the direction of rotation are each marked on the motor housing with an arrow.
- If a phase is missing, the fan will not start. If the rotary field is incorrect, the fan will run backwards.

### 4.4.2 Overvoltage protection and supply line load

The unit does not have its own overvoltage protection. Measures must be taken by the operator at the supply end to ensure effective protection against lightning and overvoltage. The mains voltage must not exceed a tolerance of  $\pm 10\%$ .

### 4.4.3 PE conductor connection

The PE conductor connection must be connected to the PE conductor system of the overall system.



# 5 Carrying out the electrical

EN

## 5 Carrying out the electrical installation

### 5.1 Installing the power supply

- Complete the electrical installation by following the wiring plans.



**Note:**

For technical data refer to the rating plate.

- Remove the red cover from the electrical connection.

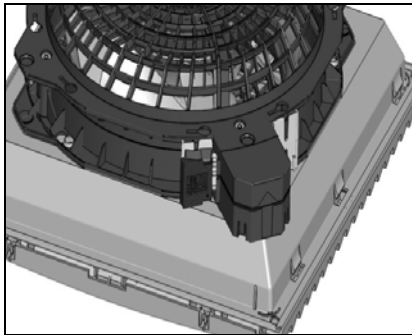


Fig. 3: Access the electrical connection

- Insert the connection cable with wire end ferrules into the screwless spring terminals. Choose an appropriate pre-fuse according to the line cross-section (2 x 0.75 – 2.5 mm<sup>2</sup> multi-wire, 2 x 1.5 – 2.5 mm<sup>2</sup> fine-wire soldered).



**Caution!**

If no wire end ferrules are used, the insulation of the individual wires should be stripped to a max. of 9 mm (to comply with clearance and creepage distances).

- Re-attach the electrical connection cover.

### 5.2 Rotating the voltage connection

If the position of the voltage connection is not ideally accessible, it may be rotated through 90° and snapped into position. To this end, press down on the release button of the bayonet connection at the rear of the

fan. Units SK 3238.xxx to SK 3239.xxx are released by pulling out the clip (see Fig. 4) of the bayonet connection.

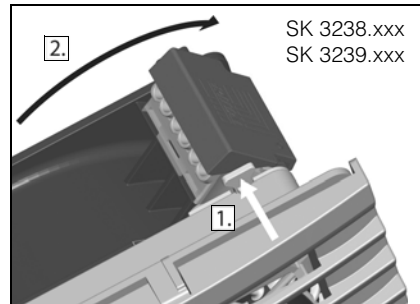


Fig. 4: Release the bayonet connection

Units SK 3240.xxx, SK 3241.xxx, SK 3243.xxx to SK 3245.xxx are released by pressing the release button of the bayonet connection (see Fig. 5), located on the opposite corner from the connection terminal.

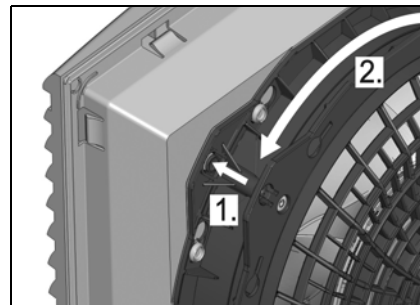


Fig. 5: Release the bayonet connection

### 5.3 Changing the direction of airflow

The direction of airflow blows into the enclosure from the outside as standard. Should it become necessary to change the direction of airflow for technical reasons (space, specific component air routing etc.), this is easily achieved. Simply release the fan housing and rotate it through 180°.

To release, please follow the same procedure as described under "5.2 Rotating the voltage connection", page 9.

Please also observe the instructions outlined under "4.2.1 General", page 7.

# 6 Commissioning

EN

## 6 Commissioning

- Once all the assembly and installation work is complete, switch on the power supply to the fan-and-filter unit. The fan-and-filter unit operates automatically, in other words, the fan will start up once the power has been switched on.

### 6.1 Properties

- Four voltage variants are supported:
  - 24 V DC
  - 115 V, 1~
  - 230 V, 1~
  - 400/460 V, 3-phase

## 7 Changing the filter

### 7.1 Installing the filter media

The fan-and-filter unit and outlet filter are supplied as standard with a standard filter mat for the pre-filtering of dry, coarse dust and lint. In order to increase the protection category, and in the case of dust with a grain size of  $< 10 \mu\text{m}$ , we recommend the use of fine filter mats (optionally available). Depending on the incidence of dust, you will need to replace the filter mat from time to time.



**Caution!**  
**Only change the filter mat while the fan wheel is stationary.**  
**Never insert your fingers into the fan wheel.**

- Use your finger to pull the function logo in the louvred grille upwards slightly to unlock it. The grille will now flip open by about  $70^\circ$  to allow the filter mat to be replaced easily.

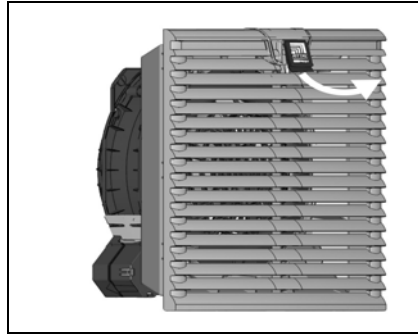


Fig. 6: Release the louvred grille

- Insert the filter mat into the louvred grille as shown in Fig. 7 and push the louvred grille back onto the enclosure until it snaps audibly into position.



#### Note:

The progressive side of the filter mat is pointing towards the fan wheel.

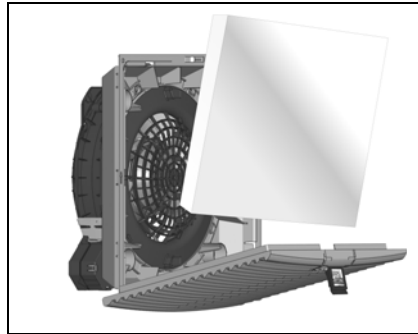


Fig. 7: Install the filter mat

# 8 Inspection and maintenance

EN

## 8 Inspection and maintenance



### **Risk of electric shock!**

**The unit is live.**

**Switch off the power supply before opening, and take suitable precautions against it being accidentally switched back on.**



### **Caution!**

**Risk of fire!**

**Never use flammable liquids for cleaning.**

Sequence of maintenance measures:

- Check the level of dirt.
- Filter soiling?  
Replace the filter if necessary.
- Fan membranes soiled?  
Clean if necessary.
- Check the noise generation of the fan.
- Compressed air cleaning.

### 8.1 General

The built-in, maintenance-free fan is mounted on a friction bearing (SK 3237.xxx, SK 3238.xxx and SK 3239.xxx) or ball bearing (SK 3240.xxx, SK 3241.xxx, SK 3243.xxx to SK 3245.xxx), and is protected against humidity and dust, and equipped with a temperature monitor. The life expectancy is at least 40,000 operating hours (L10, 40°C). The fan-and-filter unit is thus largely maintenance free.

From time to time, the components may need to be cleaned using a vacuum cleaner or compressed air if they become visibly dirty.

Any stubborn, oily stains may be removed using a non-flammable detergent, such as degreaser.

Maintenance interval: 2000 operating hours. Depending on the level of contamination in the ambient air, the maintenance interval may be reduced to suit the air pollution intensity.

## 9 Storage and disposal



### **Caution!**

**Risk of damage!**

**The cooling unit must not be stored at temperatures above +70°C or below –30°C.**

Disposal can be performed at the Rittal plant.

Please contact us for advice.

# 10 Technical specifications

EN

## 10 Technical specifications

- Observe the mains connection data (voltage and frequency) as per the rating plate.
- Observe the pre-fuse as per the specifications on the rating plate.

	Unit	Model No. SK					
<b>Fan-and-filter unit, RAL 7035</b>	–	<b>3237.100</b>	<b>3237.110</b>	<b>3237.124</b>	<b>3238.100</b>	<b>3238.110</b>	<b>3238.124</b>
<b>EMC fan-and-filter unit, RAL 7035</b>	–	<b>3237.600</b>	–	–	<b>3238.600</b>	–	–
Rated operating voltage	V Hz	230, 1~, 50/60	115, 1~, 50/60	24 (DC)	230, 1~, 50/60	115, 1~, 50/60	24 (DC)
Rated current max.	A	0.065/ 0.052	0.14/ 0.12	0.14	0.12/ 0.11	0.24/ 0.23	0.28
Power consumption	W	11/9		3	19/17		6
Pre-fuse T	A	2					
Dimensions							
B1/H1	mm	116.5 x 116.5			148.5 x 148.5		
B2/H2	mm	92 x 92			124 x 124		
T1	mm	16					
T2 (max. installation depth)	mm	43			58.5		
Air throughput, unimpeded air flow	m <sup>3</sup> /h	20/25		20	55/66		55
Air throughput with outlet filter including standard filter mat	m <sup>3</sup> /h	1 x 3237.200: 15/18			1 x 3238.200: 43/50		
		–			2 x 3238.200: 46/56		
<b>Outlet filter</b>	–	<b>3237.200</b>			<b>3238.200</b>		
<b>EMC outlet filter</b>	–	<b>3237.060</b>			<b>3238.060</b>		
Fan	–	Axial, self-starting shaded pole motor		Axial, DC motor	Diagonal, self-starting shaded pole motor		Diagonal, DC motor
Noise pressure level	dB (A)	38/43		38	46/49		46
Operating temperature	°C	–15 to +55					
Storage temperature	°C	–30 to +70					
Protection category (to EN 60 529)	–	IP 54 standard IP 55 with hose-proof hood IP 56 with hose-proof hood			IP 54 standard IP 55 with hose-proof hood IP 56 with hose-proof hood		

Tab. 2: Technical specifications

We reserve the right to make technical modifications.

# 10 Technical specifications

EN

	Unit	Model No. SK		
<b>Fan-and-filter unit, RAL 7035</b>	–	<b>3239.100</b>	<b>3239.110</b>	<b>3239.124</b>
<b>EMC fan-and-filter unit, RAL 7035</b>	–	<b>3239.600</b>	–	–
Rated operating voltage	V Hz	230, 1~, 50/60	115, 1~, 50/60	24 (DC)
Rated current max.	A	0.12/0.11	0.24/0.23	0.28
Power consumption	W	19/17		6
Pre-fuse T	A	2		
Dimensions				
B1/H1	mm	204 x 204		
B2/H2	mm	177 x 177		
T1	mm	24		
T2 (max. installation depth)	mm	90		
Air throughput, unimpeded air flow	m³/h	105/120		105
Air throughput with outlet filter including standard filter mat	m³/h	1 x 3239.200: 87/100		
		2 x 3239.200: 93/108		
		1 x 3240.200: 98/111		
<b>Outlet filter</b>	–	<b>3239.200</b>		
<b>EMC outlet filter</b>	–	<b>3239.060</b>		
Fan	–	Diagonal, self-starting shaded pole motor		Diagonal, DC motor
Noise pressure level	dB (A)	46/49		46
Operating temperature	°C	–15 to +55		
Storage temperature	°C	–30 to +70		
Protection category (to EN 60 529)	–	IP 54 standard IP 55 with additional fine filter mat or hose-proof hood IP 56 with hose-proof hood		

Tab. 3: Technical specifications

We reserve the right to make technical modifications.

# 10 Technical specifications

EN

	Unit	Model No. SK					
<b>Fan-and-filter unit, RAL 7035</b>	–	<b>3240.100</b>	<b>3240.110</b>	<b>3240.124</b>	<b>3241.100</b>	<b>3241.110</b>	<b>3241.124</b>
<b>EMC fan-and-filter unit, RAL 7035</b>	–	<b>3240.600</b>	–	–	<b>3241.600</b>	–	–
Rated operating voltage	V Hz	230, 1~, 50/60	115, 1~, 50/60	24 (DC)	230, 1~, 50/60	115, 1~, 50/60	24 (DC)
Rated current max.	A	0.19/0.18	0.38/0.36	0.07	0.27/0.28	0.54/0.52	0.2
Power consumption	W	33/33		10	42/46	43/46	25
Pre-fuse T	A	2	4	2	4		2
Dimensions							
B1/H1	mm	255 x 255					
B2/H2	mm	224 x 224					
T1	mm	25					
T2 (max. installation depth)	mm	107					
Air throughput, unimpeded air flow	m³/h	180/160		180	230/250		230
Air throughput with outlet filter including standard filter mat	m³/h	1 x 3240.200: 138/121			1 x 3240.200: 183/205		
		2 x 3240.200: 165/140			2 x 3240.200: 203/230		
		1 x 3243.200: 165/140			1 x 3243.200: 203/230		
<b>Outlet filter</b>	–	<b>3240.200</b>					
<b>EMC outlet filter</b>	–	<b>3240.060</b>					
Fan	–	Diagonal, self-starting shaded pole motor		Diagonal, DC motor	Diagonal, self-starting shaded pole motor		Diagonal, DC motor
Noise pressure level	dB (A)	51/46		51	54/56		54
Operating temperature	°C	–30 to +55					
Storage temperature	°C	–30 to +70					
Protection category (to EN 60 529)	–	IP 54 standard IP 55 with additional fine filter mat or hose-proof hood IP 56 with hose-proof hood					

Tab. 4: Technical specifications

We reserve the right to make technical modifications.

# 10 Technical specifications

EN

	Unit	Model No. SK							
<b>Fan-and-filter unit, RAL 7035</b>	–	<b>3243.100</b>	<b>3243.110</b>	<b>3244.100</b>	<b>3244.110</b>	<b>3244.140</b>	<b>3245.500</b>	<b>3245.510</b>	
<b>EMC fan-and-filter unit, RAL 7035</b>	–	<b>3243.600</b>	–	<b>3244.600</b>	–	–	<b>3245.600</b>	–	
Rated operating voltage	V Hz	230, 1~, 50/60	115, 1~, 50/60	230, 1~, 50/60	115, 1~, 50/60	400/460, 3~, 50/60	230, 1~, 50/60	115, 1~, 50/60	
Rated current max.	A	0.37/ 0.43	0.75/ 0.80	0.59/ 0.81	1.0/ 1.4	0.22/ 0.24	1.3	2.5	
Power consumption	W	71/89	70/80	109/155	110/156	96/138	170	170	
Pre-fuse T	A	4	6	4	6	Motor circuit-breaker	4	6	
Dimensions									
B1/H1	mm	323 x 323							
B2/H2	mm	292 x 292							
T1	mm	25							
T2 (max. installation depth)	mm	118.5		130.5			130.5		
Air throughput, unimpeded air flow	m³/h	550/600		700/770			900		
Air throughput with outlet filter including standard filter mat	m³/h	1 x 3243.200: 465/510		1 x 3243.200: 544/587			1 x 3243.200: 680		
		2 x 3243.200: 508/548		2 x 3243.200: 614/662			2 x 3243.200: 820		
<b>Outlet filter</b>	–	<b>3243.200</b>							
<b>EMC outlet filter</b>	–	<b>3243.060</b>							
Fan	–	Diagonal, capacitor motor				Diagonal, rotary current motor	Diagonal, EC motor		
Noise pressure level	dB (A)	59/61		65/68		67/70	72		
Operating temperature	°C	–30 to +55							
Storage temperature	°C	–30 to +70							
Protection category (to EN 60 529)	–	IP 54 standard IP 55 with additional fine filter mat or hose-proof hood IP 56 with hose-proof hood					IP 51 standard IP 52 with additional fine filter mat IP 56 with hose-proof hood		

Tab. 5: Technical specifications

We reserve the right to make technical modifications.

# 11 Cut-out/drilling dimensions

EN

## 11 Cut-out/drilling dimensions

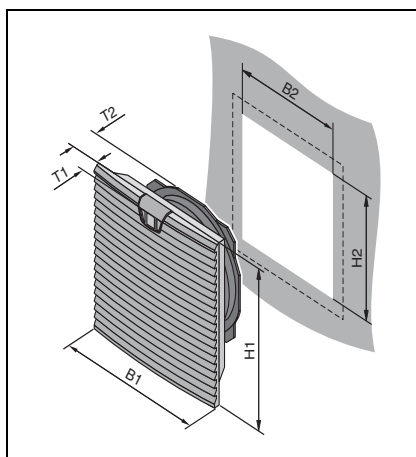


Fig. 8: Cut-out dimensions

B = Width  
T = Depth

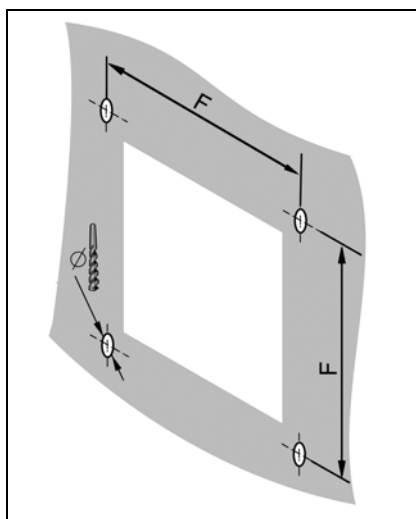


Fig. 9: Drilling pattern

Model No. SK	Ø mm	F mm
<b>3237.xxx</b>	3.5	100.5
<b>3238.xxx</b>	3.5	132.5
<b>3239.xxx</b>	4.5	185
<b>3240.xxx</b>	4.5	234
<b>3241.xxx</b>	4.5	234
<b>3243.xxx</b>	4.5	302
<b>3244.xxx</b>	4.5	302
<b>3245.xxx</b>	4.5	302

Tab. 6: Drilling dimensions



## 12 EMC fan/outlet filter

To achieve EMC protection, the EMC fans and EMC outlet filters should be snapped into the mounting cut-out and screw-fastened using the supplied screws. Next, the four contact foils should be stuck on all-round between the fan-and-filter unit and the inside of the enclosure as shown in the following illustration.

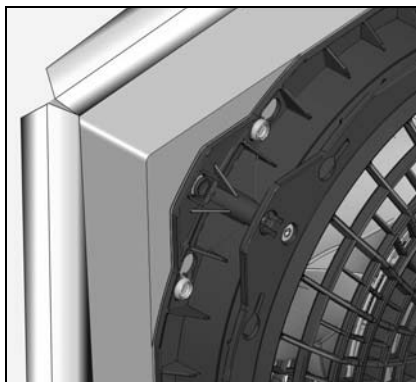


Fig. 10: EMC contact foils



---

**Note:**

Only use original EMC filter mats (see Accessories in the Rittal Catalogue).

---

# 13 Connection diagrams

EN

## 13 Connection diagrams

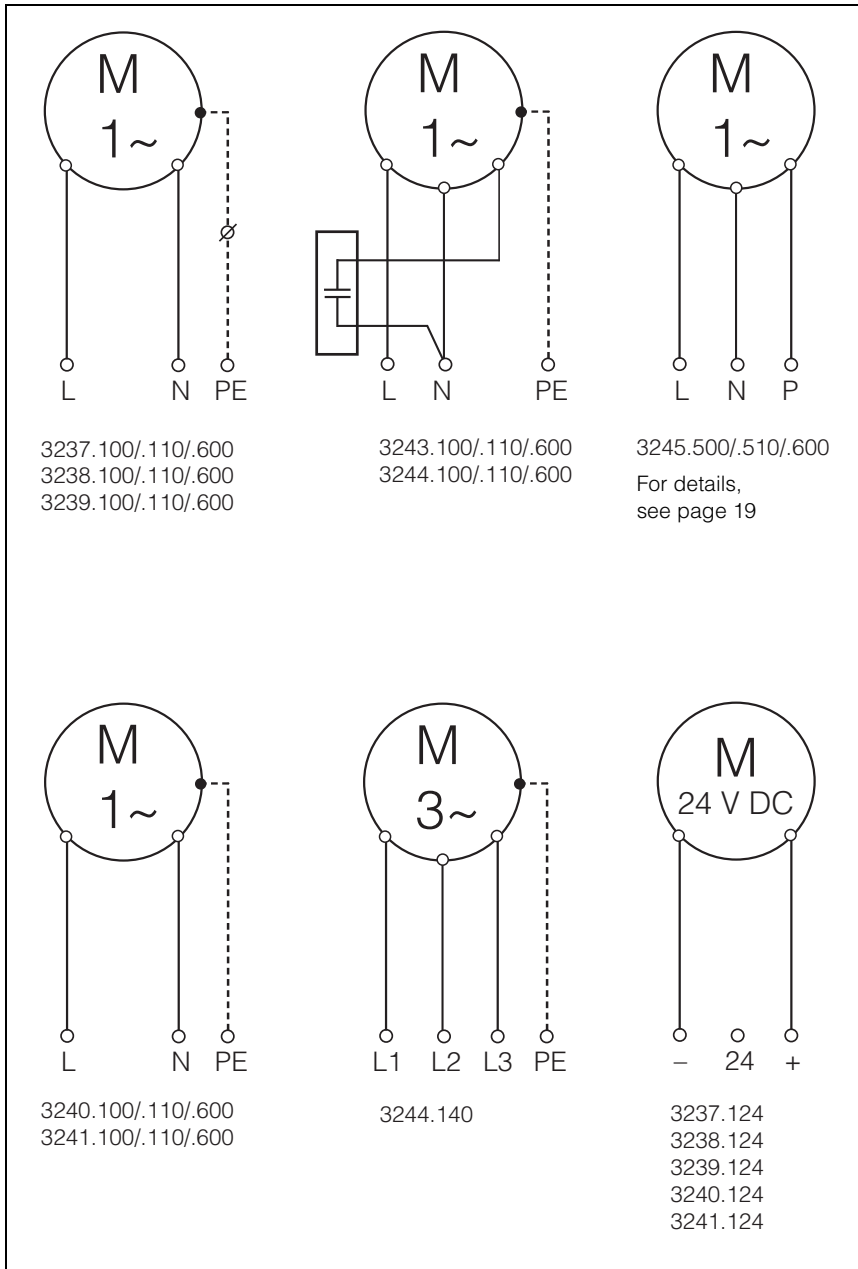


Fig. 11: Connection diagrams

# 13 Connection diagrams

EN

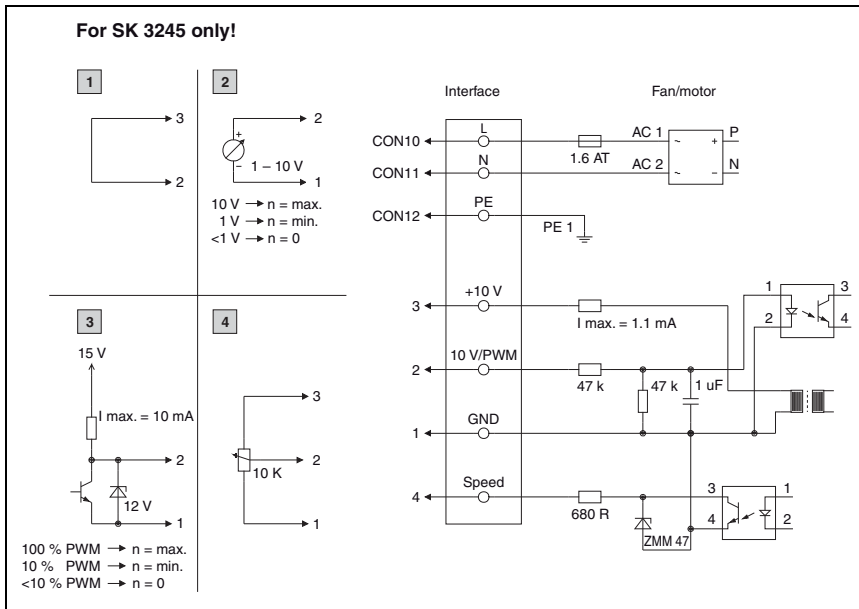


Fig. 12: Connection diagram SK 3245

- 1** Max. speed (as delivered)
- 2** Adjustable speed
- 3** Adjustable speed via PWM 1 – 10 kHz
- 4** Adjustable speed via potentiometer

No.	Connection	Function/Assignment
CON10	L	Power supply 200 – 240 V AC, 50 – 60 Hz
CON11	N	Neutral conductor
CON12	PE	PE conductor
1	GND	GND connection of the control interface
2	0 – 10 V/PWM	Control input 0 – 10 V or PWM, galvanically isolated, impedance 100 kΩ
3	+10 V	Voltage output 10 V max. 1.1 mA, galvanically isolated, not short circuit-protected
4	Speed	Speed output Open Collector, 1 pulse per revolution, galvanically isolated

Tab. 7: Explanations to Fig. 12

# 14 EC declaration of conformity

EN

## 14 EC declaration of conformity

**EG-Konformitätserklärung**  
**Maschinenrichtlinie 2006/42/EG Anhang II A**  
*EC Declaration of Conformity*  
*Machinery Directive 2006/42/EC Annex II A*

Hiermit erklären wir, *(We hereby declare)*

**Rittal GmbH & Co. KG, Auf dem Stützelberg, D-35745 Herborn**

dass die Filterlüfter: *(that the fan-and-filter units:)*

**SK 3237.xxx SK 3238.xxx SK 3239.xxx SK 3240.xxx SK 3241.xxx SK 3243.xxx SK 3244.xxx**

„xxx“ steht für *(“xxx” applies to):*

100, 109, 110, 124<sup>a)</sup>, 140, 600, 609, 610

<sup>a)</sup> 24 VDC Version; nicht nach NSpRI 2006/95/EG *(does not comply with LVD 2006/95/EC)*

folgenden Richtlinien entsprechen: *(comply with the following directives:)*

**Maschinenrichtlinie 2006/42/EG** *(Machinery directive 2006/42/EC)*

**Elektromagnetische Verträglichkeit 2004/108/EG** *(Electromagnetic compatibility 2004/108/EC)*


**Bei einer nicht mit uns abgestimmten Änderung der Maschine verliert diese EG-Konformitätserklärung ihre Gültigkeit.**

***This declaration of EC conformity shall become null and void when the assembly is subjected to any modification that has not met with our approval.***

Herborn, 29.9.2010

Verantwortlich für Dokumentation  
*(Responsible for documentation)*

**Rittal GmbH & Co. KG**  
Auf dem Stützelberg  
D-35745 Herborn

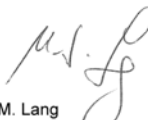

Dr. M. Lang  
Leitung Qualitätsmanagement  
*(Vice President Quality Management)*

Mehr Informationen finden Sie auf [www.rittal.de](http://www.rittal.de)  
*Please find further information at [www.rittal.com](http://www.rittal.com)*

# Rittal – The System.

---

**Faster – better – worldwide.**

- Enclosures
- Power Distribution
- Climate Control
- IT Infrastructure
- Software & Services

RITTAL GmbH & Co. KG  
Postfach 1662 • D-35726 Herborn  
Phone +49(0)2772 505-0 • Fax +49(0)2772 505-2319  
E-mail: [info@rittal.de](mailto:info@rittal.de) • [www.rittal.com](http://www.rittal.com)

ENCLOSURES

POWER DISTRIBUTION

CLIMATE CONTROL

IT INFRASTRUCTURE

SOFTWARE & SERVICES



FRIEDHELM LOH GROUP