



Operating Instructions

VLT[®] AQUA Drive FC 202

0.25-90 kW



Contents

| | |
|--|-----------|
| 1 Introduction | 3 |
| 1.1 Purpose of the Manual | 3 |
| 1.2 Additional Resources | 3 |
| 1.3 Document and Software Version | 3 |
| 1.4 Product Overview | 3 |
| 1.5 Approvals and Certifications | 6 |
| 1.6 Disposal | 6 |
| 2 Safety | 7 |
| 2.1 Safety Symbols | 7 |
| 2.2 Qualified Personnel | 7 |
| 2.3 Safety Precautions | 7 |
| 3 Mechanical Installation | 9 |
| 3.1 Unpacking | 9 |
| 3.2 Installation Environments | 9 |
| 3.3 Mounting | 9 |
| 4 Electrical Installation | 11 |
| 4.1 Safety Instructions | 11 |
| 4.2 EMC-compliant Installation | 11 |
| 4.3 Grounding | 11 |
| 4.4 Wiring Schematic | 12 |
| 4.5 Access | 14 |
| 4.6 Motor Connection | 14 |
| 4.7 AC Mains Connection | 15 |
| 4.8 Control Wiring | 15 |
| 4.8.1 Control Terminal Types | 16 |
| 4.8.2 Wiring to Control Terminals | 17 |
| 4.8.3 Enabling Motor Operation (Terminal 27) | 17 |
| 4.8.4 Voltage/Current Input Selection (Switches) | 18 |
| 4.8.5 Safe Torque Off (STO) | 18 |
| 4.8.6 RS-485 Serial Communication | 18 |
| 4.9 Installation Check List | 19 |
| 5 Commissioning | 20 |
| 5.1 Safety Instructions | 20 |
| 5.2 Applying Power | 20 |
| 5.3 Local Control Panel Operation | 21 |
| 5.4 Basic Programming | 23 |

| | |
|---|-----------|
| 5.4.1 Commissioning with SmartStart | 23 |
| 5.4.2 Commissioning via [Main Menu] | 24 |
| 5.4.3 Asynchronous Motor Setup | 24 |
| 5.4.4 PM Motor Setup in VVC ^{plus} | 25 |
| 5.4.5 Automatic Energy Optimisation (AEO) | 26 |
| 5.4.6 Automatic Motor Adaptation (AMA) | 26 |
| 5.5 Checking Motor Rotation | 26 |
| 5.6 Local-control Test | 27 |
| 5.7 System Start-up | 27 |
| 6 Application Set-up Examples | 28 |
| 7 Maintenance, Diagnostics and Troubleshooting | 32 |
| 7.1 Maintenance and Service | 32 |
| 7.2 Status Messages | 32 |
| 7.3 Warning and Alarm Types | 34 |
| 7.4 List of Warnings and Alarms | 35 |
| 7.5 Troubleshooting | 42 |
| 8 Specifications | 44 |
| 8.1 Electrical Data | 44 |
| 8.1.1 Mains Supply 1x200-240 V AC | 44 |
| 8.1.2 Mains Supply 3x200-240 V AC | 44 |
| 8.1.3 Mains Supply 1x380-480 V AC | 45 |
| 8.1.4 Mains Supply 3x380-480 V AC | 46 |
| 8.1.5 Mains Supply 3x525-600 V AC | 48 |
| 8.1.6 Mains Supply 3x525-690 V AC | 49 |
| 8.2 Mains Supply | 51 |
| 8.3 Motor Output and Motor Data | 51 |
| 8.4 Ambient Conditions | 52 |
| 8.5 Cable Specifications | 52 |
| 8.6 Control Input/Output and Control Data | 52 |
| 8.7 Connection Tightening Torques | 55 |
| 8.8 Fuses and Circuit Breakers | 56 |
| 8.9 Power Ratings, Weight and Dimensions | 63 |
| 9 Appendix | 64 |
| 9.1 Symbols, Abbreviations and Conventions | 64 |
| 9.2 Parameter Menu Structure | 64 |
| Index | 69 |

1 Introduction

1.1 Purpose of the Manual

These operating instructions provide information for safe installation and commissioning of the frequency converter.

The operating instructions are intended for use by qualified personnel.

Read and follow the operating instructions to use the frequency converter safely and professionally, and pay particular attention to the safety instructions and general warnings. Keep these operating instructions available with the frequency converter at all times.

1.2 Additional Resources

Other resources are available to understand advanced frequency converter functions and programming.

- The *VLT® Programming Guide* provides greater detail on working with parameters and many application examples.
- The *VLT® Design Guide* provides detailed information about capabilities and functionality to design motor control systems.
- Instructions for operation with optional equipment.

Supplementary publications and manuals are available from Danfoss. See www.danfoss.com/BusinessAreas/DrivesSolutions/Documentations/VLT+Technical+Documentation.htm for listings.

Disclosure, duplication and sale of this document, as well as communication of its content, are prohibited unless explicitly permitted. Infringement of this prohibition incurs liability for damages. All rights reserved with regard to patents, utility patents and registered designs. VLT® is a registered trademark.

1.3 Document and Software Version

This manual is regularly reviewed and updated. All suggestions for improvement are welcome. *Table 1.1* shows the document version and the corresponding software version.

| Edition | Remarks | Software version |
|----------|-------------------|------------------|
| MG20MAxx | Replaces MG20M9xx | 2.xx |

Table 1.1 Document and Software Version

1.4 Product Overview

1.4.1 Intended Use

The frequency converter is an electronic motor controller intended for

- regulation of motor speed in response to system feedback or to remote commands from external controllers. A power drive system consists of the frequency converter, the motor, and equipment driven by the motor.
- system and motor status surveillance.

Depending on configuration, the frequency converter can be used in standalone applications or form part of a larger appliance or installation.

The frequency converter is allowed for use in residential, industrial, and commercial environments in accordance with local laws and standards.

Single phase frequency converters (S2 and S4) installed in the EU

The following limitations apply:

Units with an input current below 16 A and an input power above 1 kW are only intended for professional use in trades, professions, or industries and not for sale to the general public. Designated application areas are public pools, public water supplies, agriculture, commercial buildings, and industries. All other single phase units are only intended for use in private low-voltage systems interfacing with public supply only at a medium or high voltage level. Operators of private systems must ensure that the EMC environment complies with IEC 610000-3-6 and/or the contractual agreements.

NOTICE

In a residential environment, this product can cause radio interference, in which case supplementary mitigation measures can be required.

Foreseeable misuse


Do not use the frequency converter in applications which are non-compliant with specified operating conditions and environments. Ensure compliance with the conditions specified in *8 Specifications*.

1.4.2 Features

The VLT® AQUA Drive FC 202 is designed for water and wastewater applications. The range of standard and optional features includes:


- Cascade control • Dry run detection • End of curve detection
- Motor alternation • Deragging • 2-step ramps
- Check valve protection • Safe Torque Off • Low flow detection
- Pipe fill mode • Sleep mode • Real-time clock
- Password protection • Overload protection • Smart logic control

1.4.3 Exploded Views

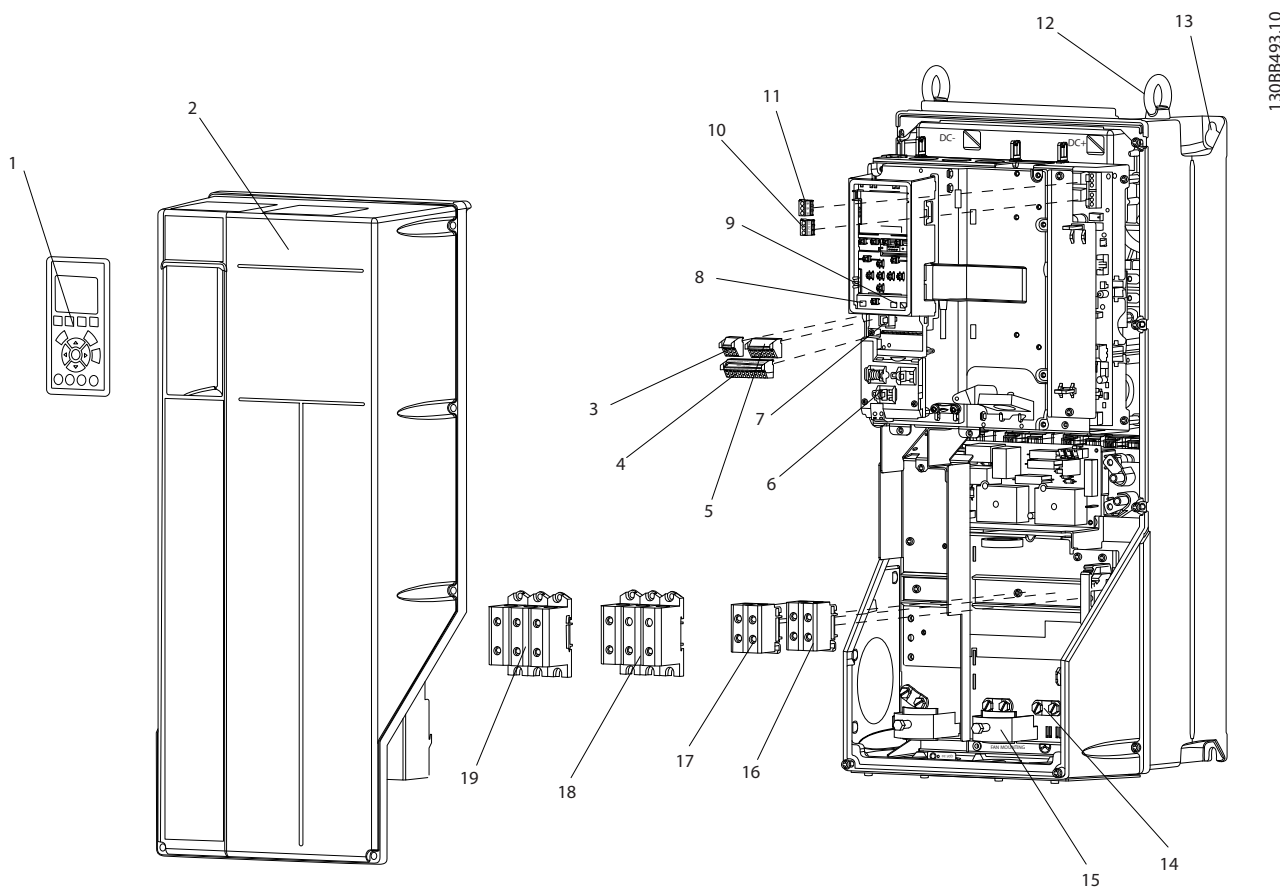

| | | | |
|----|-----------------------------------|----|---|
| 1 | Local control panel (LCP) | 11 | Relay 2 (04, 05, 06) |
| 2 | Cover | 12 | Lifting ring |
| 3 | RS-485 serial bus connector | 13 | Mounting slot |
| 4 | Digital I/O and 24 V power supply | 14 | Grounding clamp (PE) |
| 5 | Analog I/O connector | 15 | Cable screen connector |
| 6 | Cable screen connector | 16 | Brake terminal (-81, +82) |
| 7 | USB connector | 17 | Load sharing terminal (DC bus) (-88, +89) |
| 8 | Serial bus terminal switch | 18 | Motor output terminals 96 (U), 97 (V), 98 (W) |
| 9 | Analog switches (A53), (A54) | 19 | Mains input terminals 91 (L1), 92 (L2), 93 (L3) |
| 10 | Relay 1 (01, 02, 03) | | |

Illustration 1.1 Exploded View Enclosure Types B and C, IP55 and IP66

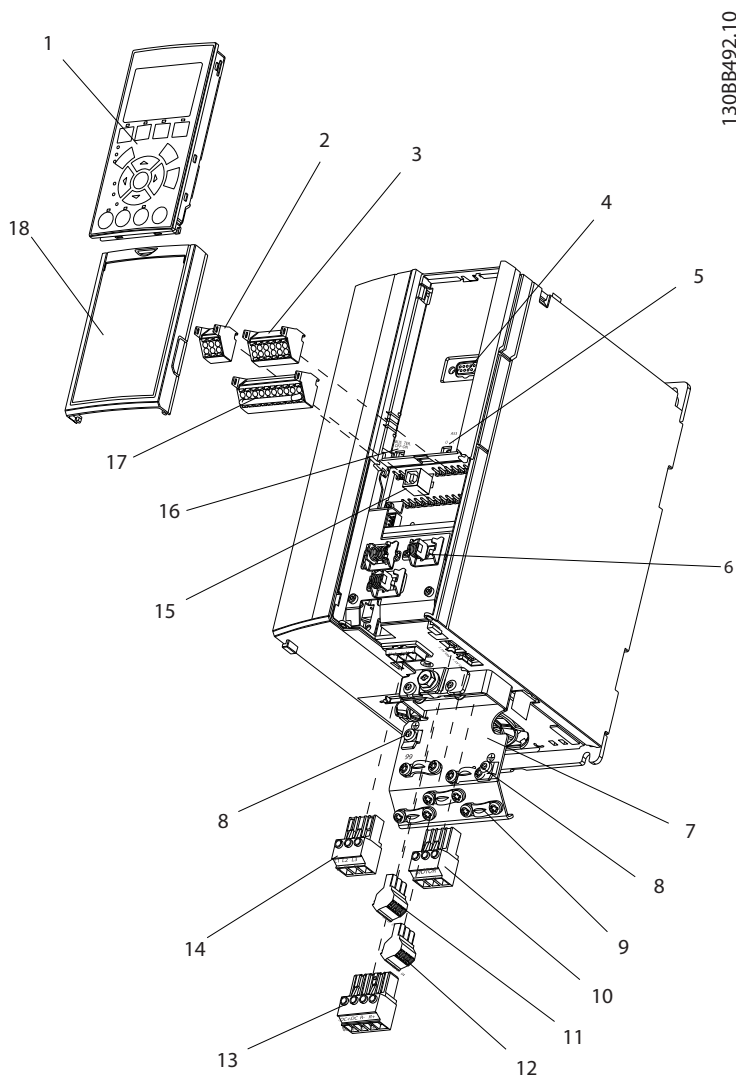

| | | | |
|---|--|----|--|
| 1 | Local control panel (LCP) | 10 | Motor output terminals 96 (U), 97 (V), 98 (W) |
| 2 | RS-485 serial bus connector (+68, -69) | 11 | Relay 2 (01, 02, 03) |
| 3 | Analog I/O connector | 12 | Relay 1 (04, 05, 06) |
| 4 | LCP input plug | 13 | Brake (-81, +82) and load sharing (-88, +89) terminals |
| 5 | Analog switches (A53), (A54) | 14 | Mains input terminals 91 (L1), 92 (L2), 93 (L3) |
| 6 | Cable screen connector | 15 | USB connector |
| 7 | Decoupling plate | 16 | Serial bus terminal switch |
| 8 | Grounding clamp (PE) | 17 | Digital I/O and 24 V power supply |
| 9 | Screened cable grounding clamp and strain relief | 18 | Cover |

Illustration 1.2 Exploded View Enclosure Type A, IP20

1.4.4 Block Diagram of the Frequency Converter

Illustration 1.3 is a block diagram of the internal components of the frequency converter. See Table 1.4 for their functions.



Illustration 1.3 Frequency Converter Block Diagram

| Area | Title | Functions |
|------|-----------------|--|
| 1 | Mains input | <ul style="list-style-type: none"> 3-phase AC mains power supply to the frequency converter |
| 2 | Rectifier | <ul style="list-style-type: none"> The rectifier bridge converts the AC input to DC current to supply inverter power |
| 3 | DC bus | <ul style="list-style-type: none"> Intermediate DC-bus circuit handles the DC current |
| 4 | DC reactors | <ul style="list-style-type: none"> Filter the intermediate DC circuit voltage Prevent line transient protection Reduce RMS current Raise the power factor reflected back to the line Reduce harmonics on the AC input |
| 5 | Capacitor bank | <ul style="list-style-type: none"> Stores the DC power Provides ride-through protection for short power losses |
| 6 | Inverter | <ul style="list-style-type: none"> Converts the DC into a controlled PWM AC waveform for a controlled variable output to the motor |
| 7 | Output to motor | <ul style="list-style-type: none"> Regulated 3-phase output power to the motor |

| Area | Title | Functions |
|------|-------------------|---|
| 8 | Control circuitry | <ul style="list-style-type: none"> Input power, internal processing, output, and motor current are monitored to provide efficient operation and control User interface and external commands are monitored and performed Status output and control can be provided |

Table 1.2 Legend to Illustration 1.3

1.4.5 Enclosure Types and Power Ratings

For enclosure types and power ratings of the frequency converters, refer to 8.9 Power Ratings, Weight and Dimensions.

1.5 Approvals and Certifications



Table 1.3 Approvals and Certifications

More approvals and certifications are available. Contact local Danfoss partner. Frequency converters of enclosure type T7 (525-690 V) are not certified for UL.

The frequency converter complies with UL508C thermal memory retention requirements. For more information, refer to the section *Motor Thermal Protection* in the *Design Guide*.

For compliance with the European Agreement concerning International Carriage of Dangerous Goods by Inland Waterways (ADN), refer to *ADN-compliant Installation* in the *Design Guide*.

1.6 Disposal

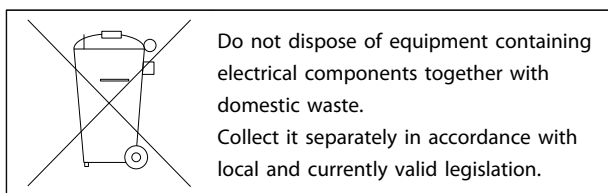


Table 1.4 Disposal Instruction

2 Safety

2.1 Safety Symbols

The following symbols are used in this document:

⚠ WARNING

Indicates a potentially hazardous situation which could result in death or serious injury.

⚠ CAUTION

Indicates a potentially hazardous situation which could result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE

Indicates important information, including situations that may result in damage to equipment or property.

2.2 Qualified Personnel

Correct and reliable transport, storage, installation, operation and maintenance are required for the trouble-free and safe operation of the frequency converter. Only qualified personnel is allowed to install or operate this equipment.

Qualified personnel is defined as trained staff, who are authorised to install, commission, and maintain equipment, systems and circuits in accordance with pertinent laws and regulations. Additionally, the personnel must be familiar with the instructions and safety measures described in this document.

2.3 Safety Precautions

⚠ WARNING

HIGH VOLTAGE

Frequency converters contain high voltage when connected to AC mains input power. Failure to perform installation, start-up, and maintenance by qualified personnel could result in death or serious injury.

- Installation, start-up, and maintenance must be performed by qualified personnel only.

⚠ WARNING

UNINTENDED START

When the frequency converter is connected to AC mains, the motor may start at any time, causing risk of death, serious injury, equipment, or property damage. The motor can start by means of an external switch, a serial bus command, an input reference signal from the LCP or LOP, or after a cleared fault condition.

- Disconnect the frequency converter from mains whenever personal safety considerations make it necessary to avoid unintended motor start.
- Press [Off] on the LCP, before programming parameters.
- The frequency converter, motor, and any driven equipment must be in operational readiness when the frequency converter is connected to AC mains.

⚠ WARNING

DISCHARGE TIME

The frequency converter contains DC-link capacitors, which can remain charged even when the frequency converter is not powered. Failure to wait the specified time after power has been removed before performing service or repair work, could result in death or serious injury.

1. Stop motor.
2. Disconnect AC mains, permanent magnet type motors, and remote DC-link power supplies, including battery back-ups, UPS, and DC-link connections to other frequency converters.
3. Wait for the capacitors to discharge fully, before performing any service or repair work. The duration of waiting time is specified in *Table 2.1*.

| Voltage [V] | Minimum waiting time [minutes] | | |
|-------------|--------------------------------|------------|-----------|
| | 4 | 7 | 15 |
| 200-240 | 0.25-3.7 kW | | 5.5-45 kW |
| 380-480 | 0.37-7.5 kW | | 11-90 kW |
| 525-600 | 0.75-7.5 kW | | 11-90 kW |
| 525-690 | | 1.1-7.5 kW | 11-90 kW |

High voltage may be present even when the warning LED indicator lights are off.

Table 2.1 Discharge Time

⚠ WARNING**LEAKAGE CURRENT HAZARD**

Leakage currents exceed 3.5 mA. Failure to ground the frequency converter properly could result in death or serious injury.

- Ensure correct grounding of the equipment by a certified electrical installer.

⚠ WARNING**EQUIPMENT HAZARD**

Contact with rotating shafts and electrical equipment can result in death or serious injury.

- Ensure only trained and qualified personnel perform installation, start up, and maintenance.
- Ensure that electrical work conforms to national and local electrical codes.
- Follow the procedures in this manual.

⚠ CAUTION**WINDMILLING**

Unintended rotation of permanent magnet motors causes risk of personal injury and equipment damage.

- Ensure that permanent magnet motors are blocked to prevent unintended rotation.

⚠ CAUTION**POTENTIAL HAZARD IN THE EVENT OF INTERNAL FAILURE**

Risk of personal injury when the frequency converter is not properly closed.

- Before applying power, ensure all safety covers are in place and securely fastened.

3 Mechanical Installation

3.1 Unpacking

3.1.1 Items Supplied

Items supplied may vary according to product configuration.

- Make sure the items supplied and the information on the nameplate correspond to the order confirmation.
- Check the packaging and the frequency converter visually for damage caused by inappropriate handling during shipment. File any claim for damage with the carrier. Retain damaged parts for clarification.

NOTICE

Do not remove the nameplate from the frequency converter (loss of warranty).

3.1.2 Storage

Ensure that requirements for storage are fulfilled. Refer to 8.4 *Ambient Conditions* for further details.

3.2 Installation Environments

NOTICE

In environments with airborne liquids, particles, or corrosive gases, ensure that the IP/Type rating of the equipment matches the installation environment. Failure to meet requirements for ambient conditions can reduce lifetime of the frequency converter. Ensure that requirements for air humidity, temperature and altitude are met.

Vibration and Shock

The frequency converter complies with requirements for units mounted on the walls and floors of production premises, as well as in panels bolted to walls or floors.

For detailed ambient conditions specifications, refer to 8.4 *Ambient Conditions*.


3.3 Mounting

NOTICE

Improper mounting can result in overheating and reduced performance.

Cooling

- Ensure that top and bottom clearance for air cooling is provided. See *Illustration 3.2* for clearance requirements.

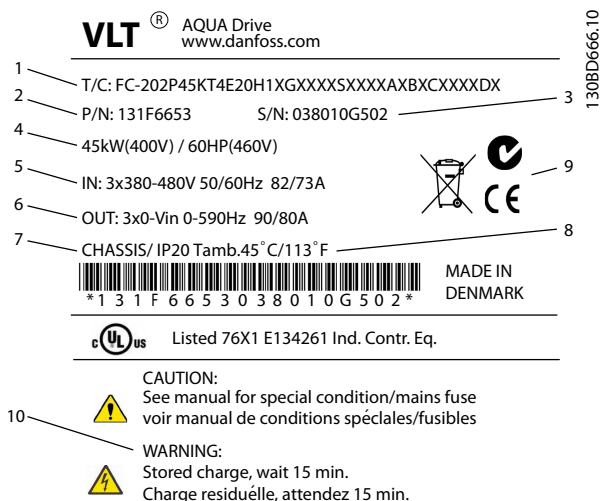

| | |
|----|--|
| 1 | Type code |
| 2 | Order number |
| 3 | Serial number |
| 4 | Power rating |
| 5 | Input voltage, frequency and current (at low/high voltages) |
| 6 | Output voltage, frequency and current (at low/high voltages) |
| 7 | Enclosure type and IP rating |
| 8 | Maximum ambient temperature |
| 9 | Certifications |
| 10 | Discharge time (Warning) |

Illustration 3.1 Product Nameplate (Example)

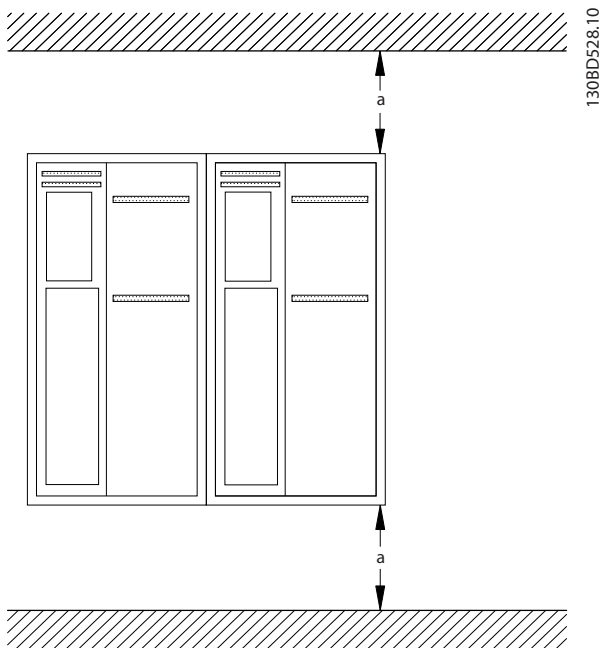


Illustration 3.2 Top and Bottom Cooling Clearance

| Enclosure | A2-A5 | B1-B4 | C1, C3 | C2, C4 |
|-----------|-------|-------|--------|--------|
| a [mm] | 100 | 200 | 200 | 225 |

Table 3.1 Minimum Airflow Clearance Requirements

Lifting

- To determine a safe lifting method, check the weight of the unit, see 8.9 Power Ratings, Weight and Dimensions.
- Ensure that the lifting device is suitable for the task.
- If necessary, plan for a hoist, crane, or forklift with the appropriate rating to move the unit.
- For lifting, use hoist rings on the unit, when provided.

Mounting

1. Ensure that the strength of the mounting location supports the unit weight. The frequency converter allows side-by-side installation.
2. Locate the unit as near to the motor as possible. Keep the motor cables as short as possible.
3. Mount the unit vertically to a solid flat surface or to the optional back plate to provide cooling airflow.
4. Use the slotted mounting holes on the unit for wall mounting, when provided.

Mounting with back plate and railings

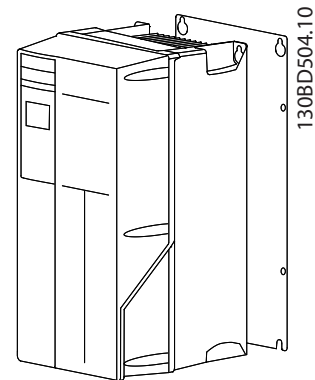


Illustration 3.3 Proper Mounting with Back Plate

NOTICE

Back plate is required when mounted on railings.

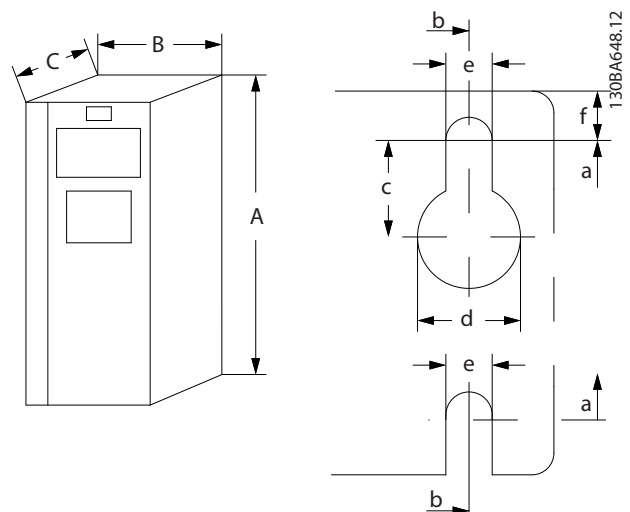


Illustration 3.4 Top and Bottom Mounting Holes (See 8.9 Power Ratings, Weight and Dimensions)

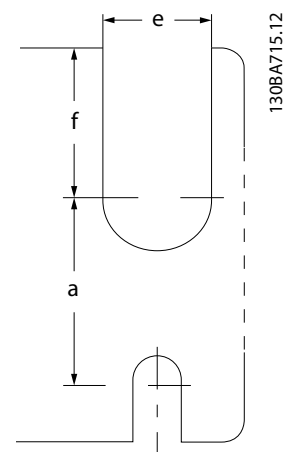


Illustration 3.5 Top and Bottom Mounting Holes (B4, C3, C4)

4 Electrical Installation

4.1 Safety Instructions

See 2 *Safety* for general safety instructions.

⚠ WARNING

INDUCED VOLTAGE

Induced voltage from output motor cables that run together can charge equipment capacitors even with the equipment turned off and locked out. Failure to run output motor cables separately or use screened cables could result in death or serious injury.

- run output motor cables separately, or
- use screened cables

⚠ CAUTION

SHOCK HAZARD

The frequency converter can cause a DC current in the PE conductor. Failure to follow the recommendation below means the RCD may not provide the intended protection.

- When a residual current-operated protective device (RCD) is used for protection against electrical shock, only an RCD of Type B is permitted on the supply side.

Over-current Protection

- Additional protective equipment such as short-circuit protection or motor thermal protection between frequency converter and motor is required for applications with multiple motors.
- Input fusing is required to provide short-circuit and over-current protection. If not factory-supplied, fuses must be provided by the installer. See maximum fuse ratings in 8.8 *Fuses and Circuit Breakers*.

Wire Type and Ratings

- All wiring must comply with local and national regulations regarding cross-section and ambient temperature requirements.
- Power connection wire recommendation: minimum 75 °C rated copper wire.

See 8.1 *Electrical Data* and 8.5 *Cable Specifications* for recommended wire sizes and types.

4.2 EMC-compliant Installation

To obtain an EMC-compliant installation, follow the instructions provided in 4.3 *Grounding*, 4.4 *Wiring Schematic*, 4.6 *Motor Connection*, and 4.8 *Control Wiring*.

4.3 Grounding

⚠ WARNING

LEAKAGE CURRENT HAZARD

Leakage currents exceed 3.5 mA. Failure to ground the frequency converter properly could result in death or serious injury.

- Ensure correct grounding of the equipment by a certified electrical installer.

For electrical safety

- Ground the frequency converter in accordance with applicable standards and directives.
- Use a dedicated ground wire for input power, motor power and control wiring.
- Do not ground one frequency converter to another in a "daisy chain" fashion.
- Keep the ground wire connections as short as possible.
- Follow motor manufacturer wiring requirements.
- Minimum cable cross-section: 10 mm² (or 2 rated ground wires terminated separately).

For EMC-compliant installation

- Establish electrical contact between cable screen and frequency converter enclosure by using metal cable glands or by using the clamps provided on the equipment (see *Illustration 4.5* and *Illustration 4.6*).
- Use high-strand wire to reduce electrical interference.
- Do not use pigtailed.

NOTICE

POTENTIAL EQUALISATION!

Risk of electrical interference, when the ground potential between the frequency converter and the system is different. Install equalising cables between the system components. Recommended cable cross-section: 16 mm².

4.4 Wiring Schematic

4

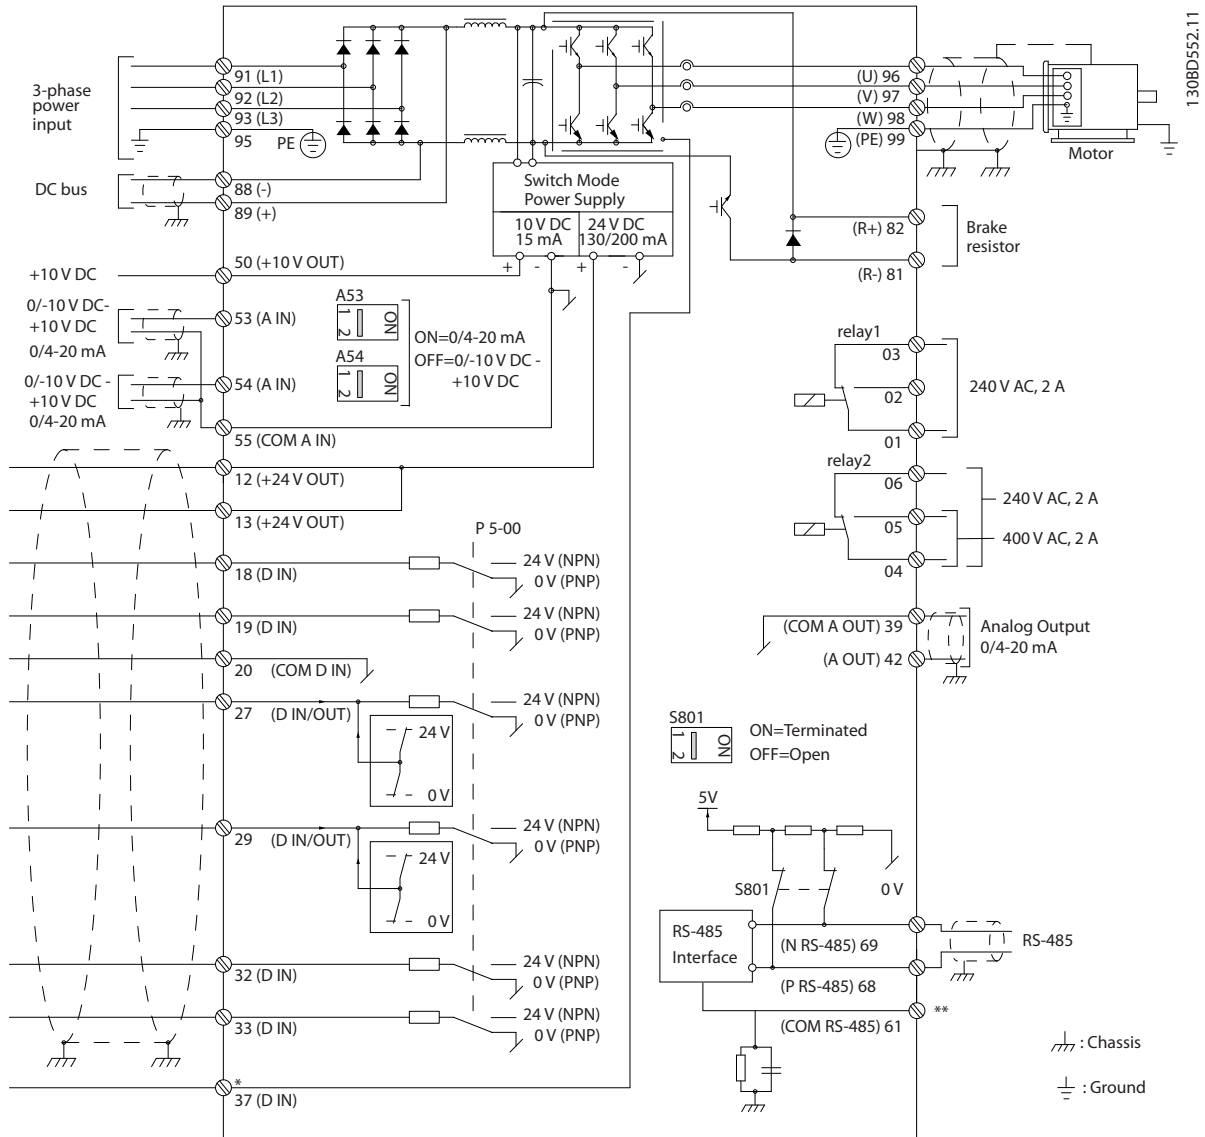


Illustration 4.1 Basic Wiring Schematic

A=Analog, D=Digital

*Terminal 37 (optional) is used for Safe Torque Off. For Safe Torque Off installation instructions, refer to the *Safe Torque Off Operating Instructions for Danfoss VLT® Frequency Converters*.

**Do not connect cable screen.

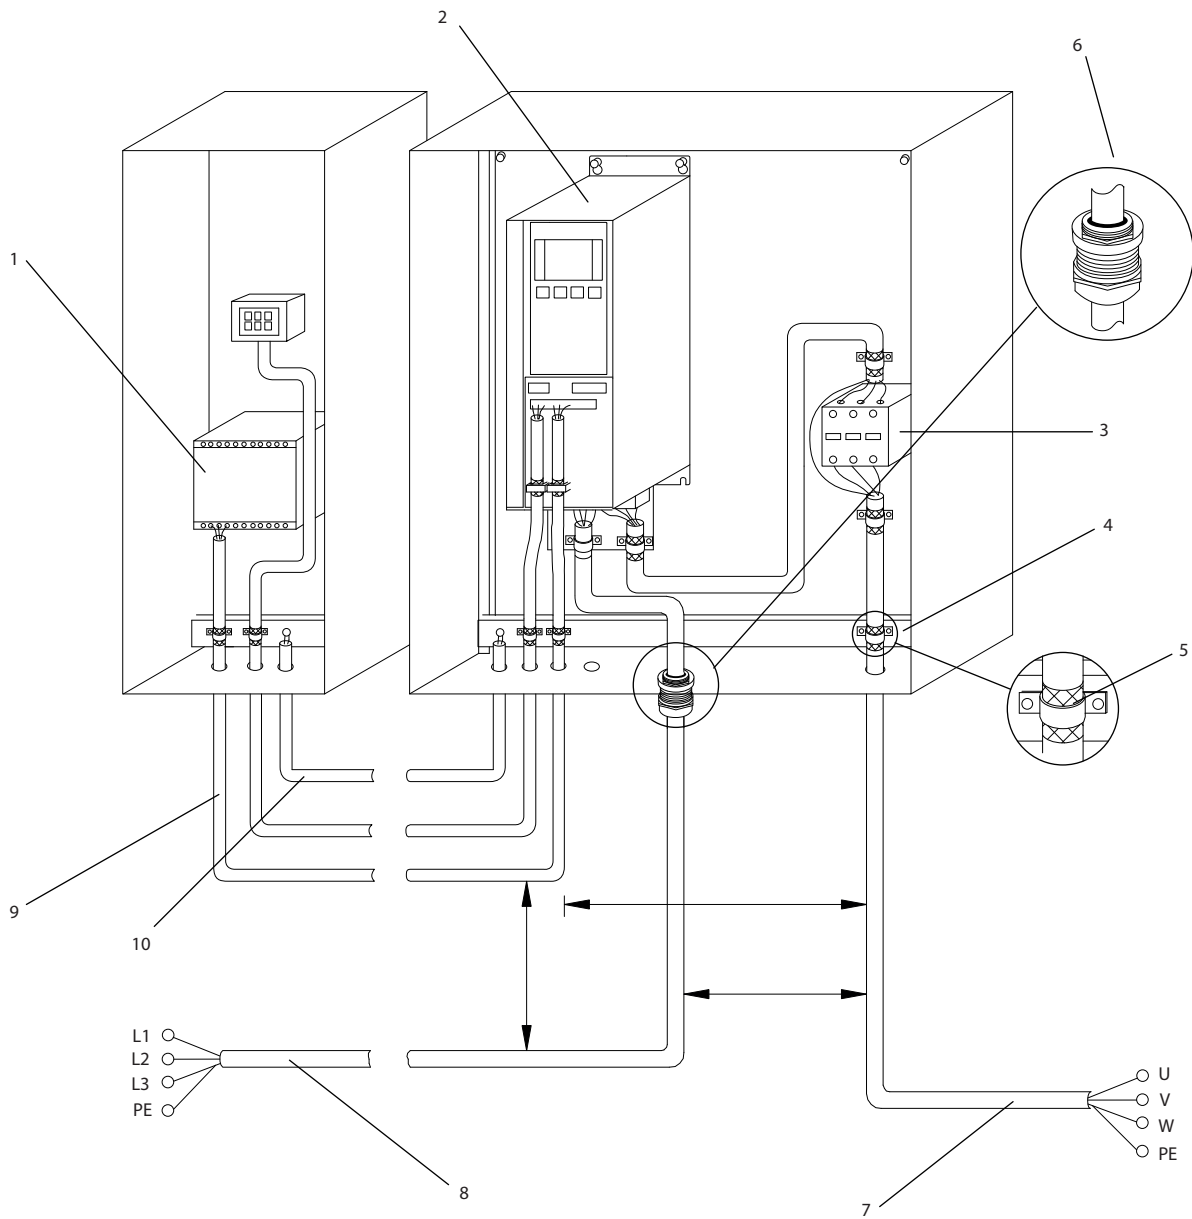


Illustration 4.2 EMC-compliant Electrical Connection

| | | | |
|---|-----------------------------|----|---|
| 1 | PLC | 6 | Cable gland |
| 2 | Frequency converter | 7 | Motor, 3-phase and PE |
| 3 | Output contactor | 8 | Mains, 3-phase and reinforced PE |
| 4 | Grounding rail (PE) | 9 | Control wiring |
| 5 | Cable insulation (stripped) | 10 | Equalising min. 16 mm ² (0.025 in) |

Table 4.1 Legend to *Illustration 4.2*

NOTICE

EMC INTERFERENCE!

Use screened cables for motor and control wiring, and separate cables for input power, motor wiring and control wiring. Failure to isolate power, motor and control cables can result in unintended behaviour or reduced performance. Minimum 200 mm (7.9 in) clearance between power, motor and control cables is required.

4.5 Access

- Remove cover with a screw driver (See *Illustration 4.3*) or by loosening attaching screws (See *Illustration 4.4*).

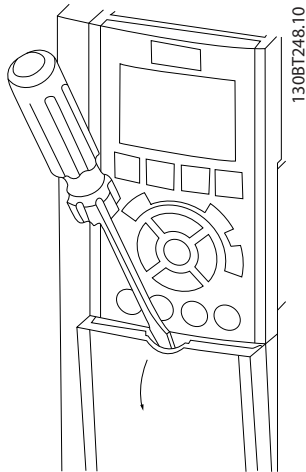


Illustration 4.3 Access to Wiring for IP20 and IP21 Enclosures

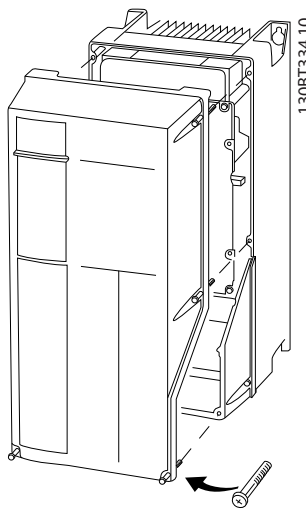


Illustration 4.4 Access to Wiring for IP55 and IP66 Enclosures

See *Table 4.2* before tightening the covers.

| Enclosure | IP55 | IP66 |
|---|------|------|
| A4/A5 | 2 | 2 |
| B1/B2 | 2.2 | 2.2 |
| C1/C2 | 2.2 | 2.2 |
| No screws to tighten for A2/A3/B3/B4/C3/C4. | | |

Table 4.2 Tightening Torques for Covers [Nm]

4.6 Motor Connection

WARNING


INDUCED VOLTAGE

Induced voltage from output motor cables that run together can charge equipment capacitors even with the equipment turned off and locked out. Failure to run output motor cables separately or use screened cables could result in death or serious injury.

- run output motor cables separately, or
- use screened cables
- Comply with local and national electrical codes for cable sizes. For maximum wire sizes see *8.1 Electrical Data*.
- Follow motor manufacturer wiring requirements.
- Motor wiring knockouts or access panels are provided at the base of IP21 (NEMA1/12) and higher units.
- Do not wire a starting or pole-changing device (e.g. Dahlander motor or slip ring induction motor) between the frequency converter and the motor.

Procedure


- Strip a section of the outer cable insulation.
- Position the stripped wire under the cable clamp to establish mechanical fixation and electrical contact between cable screen and ground.
- Connect ground wire to the nearest grounding terminal in accordance with grounding instructions provided in *4.3 Grounding*, see *Illustration 4.5*.
- Connect the 3-phase motor wiring to terminals 96 (U), 97 (V), and 98 (W), see *Illustration 4.5*.
- Tighten terminals in accordance with the information provided in *8.7 Connection Tightening Torques*.

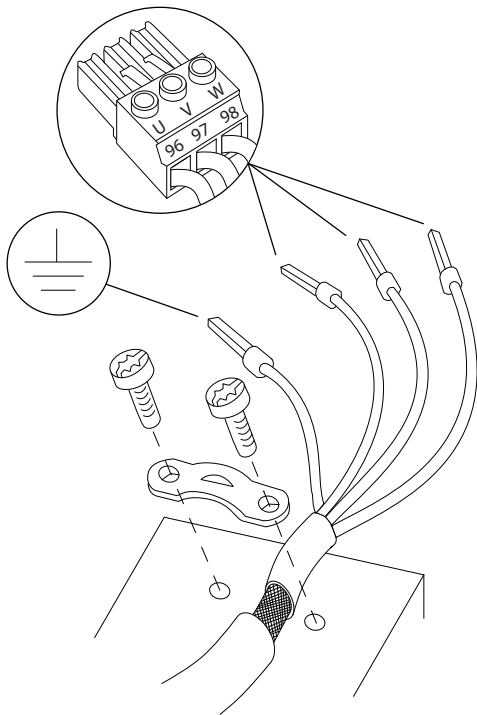

1308D531.10

Illustration 4.5 Motor Connection

Illustration 4.6 represents mains input, motor, and earth grounding for basic frequency converters. Actual configurations vary with unit types and optional equipment.

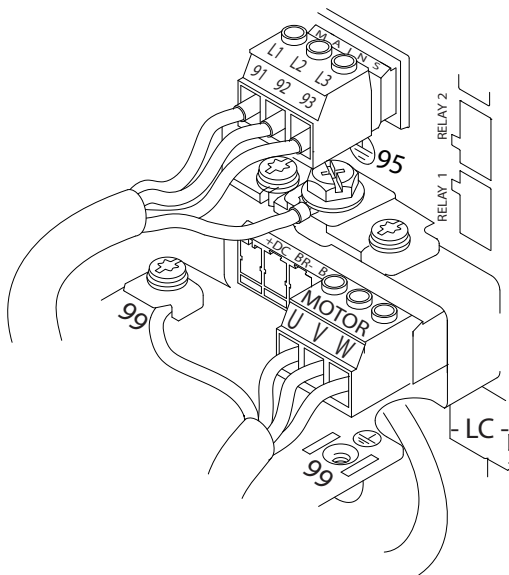

1308B920.10

Illustration 4.6 Example of Motor, Mains and Ground Wiring

4.7 AC Mains Connection

- Size wiring based upon the input current of the frequency converter. For maximum wire sizes see 8.1 *Electrical Data*.
- Comply with local and national electrical codes for cable sizes.

Procedure

1. Connect 3-phase AC input power wiring to terminals L1, L2, and L3 (see *Illustration 4.6*).
2. Depending on the configuration of the equipment, input power is connected to the mains input terminals or the input disconnect.
3. Ground the cable in accordance with grounding instructions provided in 4.3 *Grounding*.
4. When supplied from an isolated mains source (IT mains or floating delta) or TT/TN-S mains with a grounded leg (grounded delta), ensure that 14-50 RFI Filter is set to OFF to avoid damage to the intermediate circuit and to reduce earth capacity currents in accordance with IEC 61800-3.

4.8 Control Wiring

- Isolate control wiring from high power components in the frequency converter.
- When the frequency converter is connected to a thermistor, ensure that the thermistor control wiring is screened and reinforced/double insulated. A 24 V DC supply voltage is recommended.

4.8.1 Control Terminal Types

Illustration 4.7 and Illustration 4.8 show the removable frequency converter connectors. Terminal functions and default settings are summarised in Table 4.3.

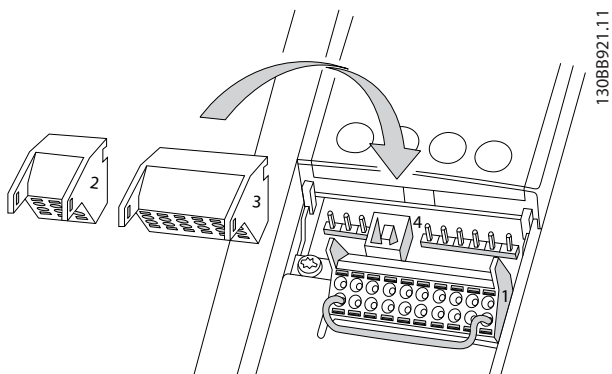


Illustration 4.7 Control Terminal Locations

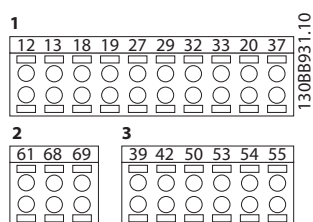


Illustration 4.8 Terminal Numbers

- **Connector 1** provides 4 programmable digital inputs terminals, 2 additional digital terminals programmable as either input or output, a 24 V DC terminal supply voltage, and a common for optional customer supplied 24 V DC voltage.
- **Connector 2** terminals (+)68 and (-)69 are for an RS-485 serial communication connection
- **Connector 3** provides 2 analog inputs, 1 analog output, 10 V DC supply voltage, and commons for the inputs and output
- **Connector 4** is a USB port available for use with the MCT 10 Set-up Software

| Terminal description | | | |
|-------------------------------|-----------|-----------------------|---|
| Terminal | Parameter | Default setting | Description |
| Digital Inputs/Outputs | | | |
| 12, 13 | - | +24 V DC | 24 V DC supply voltage for digital inputs and external transducers. Maximum output current 200 mA for all 24 V loads. |
| 18 | 5-10 | [8] Start | Digital inputs. |
| 19 | 5-11 | [0] No operation | |
| 32 | 5-14 | [0] No operation | |
| 33 | 5-15 | [0] No operation | |
| 27 | 5-12 | [2] Coast inverse | For digital input or output. Default setting is input. |
| 29 | 5-13 | [14] JOG | |
| 20 | - | | Common for digital inputs and 0 V potential for 24 V supply. |
| 37 | - | Safe Torque Off (STO) | Safe input (optional). Used for STO. |
| Analog Inputs/Outputs | | | |
| 39 | - | | Common for analog output |
| 42 | 6-50 | Speed 0 - High Limit | Programmable analog output. 0-20 mA or 4-20 mA at a maximum of 500 Ω |
| 50 | - | +10 V DC | 10 V DC analog supply voltage for potentiometer or thermistor. 15 mA maximum |
| 53 | 6-1 | Reference | Analog input. For voltage or current. Switches A53 and A54 select mA or V. |
| 54 | 6-2 | Feedback | |
| 55 | - | | Common for analog input |
| Serial Communication | | | |
| 61 | - | | Integrated RC-Filter for cable screen. ONLY for connecting the screen in the event of EMC problems. |
| 68 (+) | 8-3 | | RS-485 Interface. A control card switch is provided for termination resistance. |
| 69 (-) | 8-3 | | |
| Relays | | | |

| | | | |
|------------|----------|-------------|--|
| 01, 02, 03 | 5-40 [0] | [9] Alarm | Form C relay output. |
| 04, 05, 06 | 5-40 [1] | [5] Running | For AC or DC voltage and resistive or inductive loads. |

Table 4.3 Terminal Description

Additional terminals:

- 2 form C relay outputs. Location of the outputs depends on frequency converter configuration.
- Terminals located on built-in optional equipment. See the manual provided with the equipment option.

4.8.2 Wiring to Control Terminals

Control terminal connectors can be unplugged from the frequency converter for ease of installation, as shown in *Illustration 4.7*.

NOTICE

Keep control wires as short as possible and separate from high power cables to minimise interference.

1. Open the contact by inserting a small screw driver into the slot above the contact and push the screw driver slightly upwards.

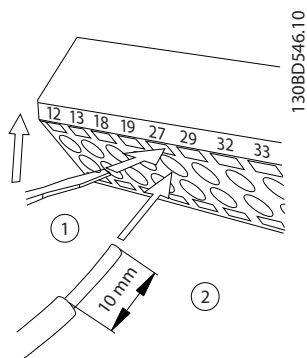


Illustration 4.9 Connecting Control Wires

2. Insert the bared control wire into the contact.
3. Remove the screw driver to fasten the control wire into the contact.
4. Ensure the contact is firmly established and not loose. Loose control wiring can be the source of equipment faults or less than optimal operation.

See 8.5 *Cable Specifications* for control terminal wiring sizes and 6 *Application Set-up Examples* for typical control wiring connections.

4.8.3 Enabling Motor Operation (Terminal 27)

A jumper wire may be required between terminal 12 (or 13) and terminal 27 for the frequency converter to operate when using factory default programming values.

- Digital input terminal 27 is designed to receive an 24 V DC external interlock command. In many applications, the user wires an external interlock device to terminal 27.
- When no interlock device is used, wire a jumper between control terminal 12 (recommended) or 13 to terminal 27. This provides an internal 24 V signal on terminal 27.
- When the status line at the bottom of the LCP reads AUTO REMOTE COAST, this indicates that the unit is ready to operate but is missing an input signal on terminal 27.
- When factory installed optional equipment is wired to terminal 27, do not remove that wiring.

NOTICE

The frequency converter cannot operate without a signal on terminal 27 unless terminal 27 is re-programmed.

4.8.4 Voltage/Current Input Selection (Switches)

The analog input terminals 53 and 54 allow setting of input signal to voltage (0-10 V) or current (0/4-20 mA).

Default parameter settings:

- Terminal 53: speed reference signal in open loop (see 16-61 Terminal 53 Switch Setting).
- Terminal 54: feedback signal in closed loop (see 16-63 Terminal 54 Switch Setting).

NOTICE

Disconnect power to the frequency converter before changing switch positions.

1. Remove the local control panel (see *Illustration 4.10*).
2. Remove any optional equipment covering the switches.
3. Set switches A53 and A54 to select the signal type. U selects voltage, I selects current.

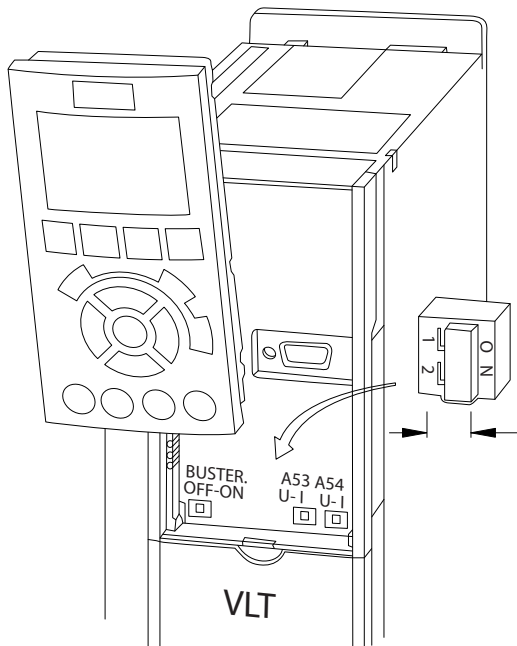


Illustration 4.10 Location of Terminals 53 and 54 Switches

4.8.5 Safe Torque Off (STO)

To run Safe Torque Off, additional wiring for the frequency converter is required, refer to *Safe Torque Off Operating Instructions for Danfoss VLT® Frequency Converters* for further information.

4.8.6 RS-485 Serial Communication

Connect RS-485 serial communication wiring to terminals (+)68 and (-)69.

- Use screened serial communication cable (recommended)
- See 4.3 *Grounding* for proper grounding

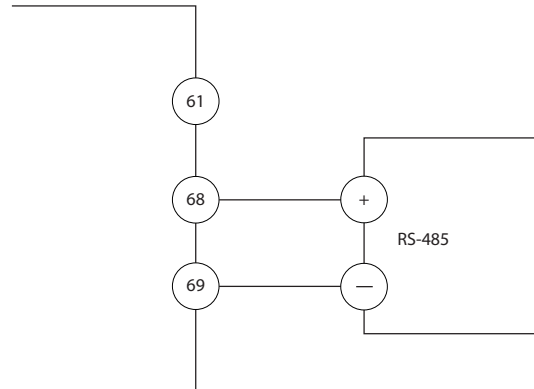


Illustration 4.11 Serial Communication Wiring Diagram

For basic serial communication set-up, select the following:

1. Protocol type in 8-30 *Protocol*.
 2. Frequency converter address in 8-31 *Address*.
 3. Baud rate in 8-32 *Baud Rate*.
- 2 communication protocols are internal to the frequency converter.
 Danfoss FC
 Modbus RTU
 - Functions can be programmed remotely using the protocol software and RS-485 connection or in parameter group 8-** *Communications and Options*
 - Selecting a specific communication protocol changes various default parameter settings to match that protocol's specifications along with making additional protocol-specific parameters available
 - Option cards which install into the frequency converter are available to provide additional communication protocols. See the option-card documentation for installation and operation instructions

4.9 Installation Check List

Before completing installation of the unit, inspect the entire installation as detailed in *Table 4.4*. Check and mark the items when completed.

| Inspect for | Description | <input checked="" type="checkbox"/> |
|-------------------------------|---|-------------------------------------|
| Auxiliary equipment | <ul style="list-style-type: none"> Look for auxiliary equipment, switches, disconnects, or input fuses/circuit breakers that may reside on the input power side of the frequency converter or output side to the motor. Ensure that they are ready for full-speed operation Check function and installation of any sensors used for feedback to the frequency converter Remove any power factor correction caps on motor(s) Adjust any power factor correction caps on the mains side and ensure that they are dampened | |
| Cable routing | <ul style="list-style-type: none"> Ensure that motor wiring and control wiring are separated or screened or in 3 separate metallic conduits for high-frequency interference isolation | |
| Control wiring | <ul style="list-style-type: none"> Check for broken or damaged wires and loose connections Check that control wiring is isolated from power and motor wiring for noise immunity Check the voltage source of the signals, if necessary The use of screened cable or twisted pair is recommended. Ensure that the shield is terminated correctly | |
| Cooling clearance | <ul style="list-style-type: none"> Measure that top and bottom clearance is adequate to ensure proper air flow for cooling, see <i>3.3 Mounting</i> | |
| Ambient conditions | <ul style="list-style-type: none"> Check that requirements for ambient conditions are met | |
| Fusing and circuit breakers | <ul style="list-style-type: none"> Check for proper fusing or circuit breakers Check that all fuses are inserted firmly and are in operational condition and that all circuit breakers are in the open position | |
| Grounding | <ul style="list-style-type: none"> Check for sufficient ground connections that are tight and free of oxidation Grounding to conduit, or mounting the back panel to a metal surface, is not a suitable grounding | |
| Input and output power wiring | <ul style="list-style-type: none"> Check for loose connections Check that motor and mains are in separate conduit or separated screened cables | |
| Panel interior | <ul style="list-style-type: none"> Inspect that the unit interior is free of dirt, metal chips, moisture, and corrosion Check that the unit is mounted on an unpainted, metal surface | |
| Switches | <ul style="list-style-type: none"> Ensure that all switch and disconnect settings are in the proper positions | |
| Vibration | <ul style="list-style-type: none"> Check that the unit is mounted solidly, or that shock mounts are used, as necessary Check for an unusual amount of vibration | |

Table 4.4 Installation Check List

CAUTION

POTENTIAL HAZARD IN THE EVENT OF INTERNAL FAILURE

Risk of personal injury when the frequency converter is not properly closed.

- Before applying power, ensure all safety covers are in place and securely fastened.

5 Commissioning

5.1 Safety Instructions

See 2 *Safety* for general safety instructions.

⚠ WARNING

HIGH VOLTAGE

Frequency converters contain high voltage when connected to AC mains input power. Failure to perform installation, start-up, and maintenance by qualified personnel could result in death or serious injury.

- Installation, start-up, and maintenance must be performed by qualified personnel only.

Before applying power:

1. Close cover properly.
2. Check that all cable glands are firmly tightened.
3. Ensure that input power to the unit is OFF and locked out. Do not rely on the frequency converter disconnect switches for input power isolation.
4. Verify that there is no voltage on input terminals L1 (91), L2 (92), and L3 (93), phase-to-phase and phase-to-ground.
5. Verify that there is no voltage on output terminals 96 (U), 97 (V), and 98 (W), phase-to-phase and phase-to-ground.
6. Confirm continuity of the motor by measuring ohm values on U-V (96-97), V-W (97-98), and W-U (98-96).
7. Check for proper grounding of the frequency converter as well as the motor.
8. Inspect the frequency converter for loose connections on terminals.
9. Confirm that the supply voltage matches voltage of frequency converter and motor.

5.2 Applying Power

⚠ WARNING

UNINTENDED START

When the frequency converter is connected to AC mains, the motor may start at any time, causing risk of death, serious injury, equipment, or property damage.

Examples: start by means of an external switch; via a serial bus command; via an input reference signal from the LCP or LOP; or after a cleared fault condition.

- Disconnect the frequency converter from mains whenever personal safety considerations make it necessary to avoid unintended motor start.
- Press [Off] on the LCP, before programming parameters.
- The frequency converter, motor, and any driven equipment must be in operational readiness when the frequency converter is connected to AC mains.

1. Confirm that the input voltage is balanced within 3%. If not, correct input voltage imbalance before proceeding. Repeat this procedure after the voltage correction.
2. Ensure that optional equipment wiring, if present, matches the installation application.
3. Ensure that all operator devices are in the OFF position. Panel doors must be closed or cover mounted.
4. Apply power to the unit. DO NOT start the frequency converter at this time. For units with a disconnect switch, turn to the ON position to apply power to the frequency converter.

NOTICE

If the status line at the bottom of the LCP reads **AUTO REMOTE COASTING** or *Alarm 60 External Interlock* is displayed, this indicates that the unit is ready to operate but is missing an input signal on terminal 27. See *4.8.3 Enabling Motor Operation (Terminal 27)* for details.

5.3 Local Control Panel Operation

5.3.1 Local Control Panel

The local control panel (LCP) is the combined display and keypad on the front of the unit.

The LCP has several user functions:

- Start, stop, and control speed when in local control
- Display operational data, status, warnings and cautions
- Programming frequency converter functions
- Manually reset the frequency converter after a fault when auto-reset is inactive

An optional numeric LCP (NLCP) is also available. The NLCP operates in a manner similar to the LCP. See the *Programming Guide* for details on use of the NLCP.

NOTICE

For commissioning via PC, install MCT 10 Set-up Software. The software is available for download (basic version) or for ordering (advanced version, order number 130B1000). For more information and downloads, see www.danfoss.com/BusinessAreas/DrivesSolutions/Software+MCT10/MCT10+Downloads.htm.

5.3.2 LCP Layout

The LCP is divided into 4 functional groups (see *Illustration 5.1*).

- A. Display area
- B. Display menu keys
- C. Navigation keys and indicator lights (LEDs)
- D. Operation keys and reset

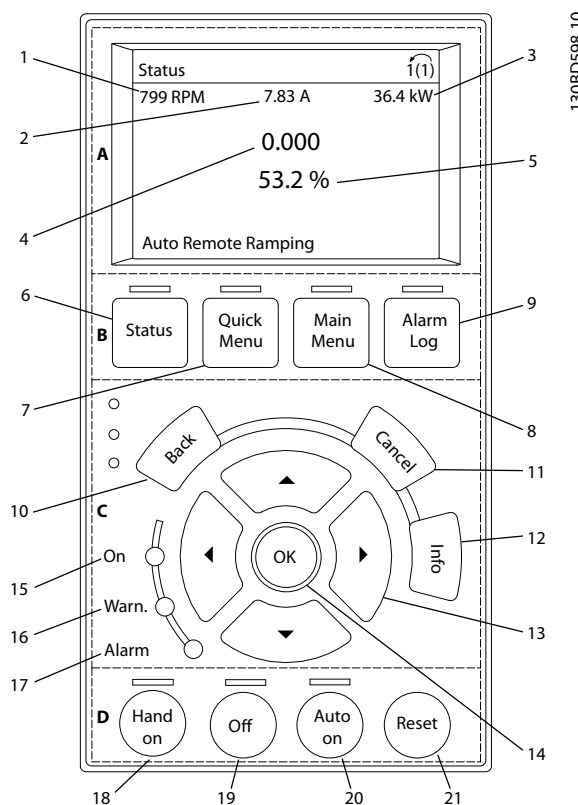


Illustration 5.1 Local Control Panel (LCP)

A. Display area

The display area is activated when the frequency converter receives power from mains voltage, a DC bus terminal, or an external 24 V DC supply.

The information displayed on the LCP can be customised for user application. Select options in the *Quick Menu Q3-13 Display Settings*.

| Display | Parameter number | Default setting |
|---------|------------------|-----------------|
| 1 | 0-20 | Speed [RPM] |
| 2 | 0-21 | Motor Current |
| 3 | 0-22 | Power [kW] |
| 4 | 0-23 | Frequency |
| 5 | 0-24 | Reference [%] |

Table 5.1 Legend to *Illustration 5.1*, Display Area

B. Display menu keys

Menu keys are used for menu access for parameter set-up, toggling through status display modes during normal operation, and viewing fault log data.

| Key | Function |
|---------------------|---|
| 6 Status | Shows operational information. |
| 7 Quick Menu | Allows access to programming parameters for initial set-up instructions and many detailed application instructions. |

| | Key | Function |
|---|-----------|---|
| 8 | Main Menu | Allows access to all programming parameters. |
| 9 | Alarm Log | Displays a list of current warnings, the last 10 alarms, and the maintenance log. |

Table 5.2 Legend to *Illustration 5.1, Display Menu Keys*

C. Navigation keys and indicator lights (LEDs)

Navigation keys are used for programming functions and moving the display cursor. The navigation keys also provide speed control in local operation. There are also 3 frequency converter status indicator lights in this area.

| | Key | Function |
|----|-----------------|---|
| 10 | Back | Reverts to the previous step or list in the menu structure. |
| 11 | Cancel | Cancels the last change or command as long as the display mode has not changed. |
| 12 | Info | Press for a definition of the function being displayed. |
| 13 | Navigation Keys | Use the 4 navigation keys to move between items in the menu. |
| 14 | OK | Use to access parameter groups or to enable a choice. |

Table 5.3 Legend to *Illustration 5.1, Navigation Keys*

| | Indicator | Light | Function |
|----|-----------|--------|---|
| 15 | On | Green | The ON light activates when the frequency converter receives power from mains voltage, a DC bus terminal, or an external 24 V supply. |
| 16 | Warn | Yellow | When warning conditions are met, the yellow WARN light comes on and text appears in the display area identifying the problem. |
| 17 | Alarm | Red | A fault condition causes the red alarm light to flash and an alarm text is displayed. |

Table 5.4 Legend to *Illustration 5.1, Indicator Lights (LEDs)*

D. Operation keys and reset

Operation keys are located at the bottom of the LCP.

| | Key | Function |
|----|---------|---|
| 18 | Hand On | Starts the frequency converter in local control. <ul style="list-style-type: none"> An external stop signal by control input or serial communication overrides the local hand on |
| 19 | Off | Stops the motor but does not remove power to the frequency converter. |
| 20 | Auto On | Puts the system in remote operational mode. <ul style="list-style-type: none"> Responds to an external start command by control terminals or serial communication |
| 21 | Reset | Resets the frequency converter manually after a fault has been cleared. |

Table 5.5 Legend to *Illustration 5.1, Operation Keys and Reset*

NOTICE

The display contrast can be adjusted by pressing [Status] and [▲]/[▼] keys.

5.3.3 Parameter Settings

Establishing the correct programming for applications often requires setting functions in several related parameters. Details for parameters are provided in *9.2 Parameter Menu Structure*.

Programming data are stored internally in the frequency converter.

- For back-up, upload data into the LCP memory
- To download data to another frequency converter, connect the LCP to that unit and download the stored settings
- Restoring factory default settings does not change data stored in the LCP memory

5.3.4 Uploading/Downloading Data to/from the LCP

- Press [Off] to stop the motor before uploading or downloading data.
- Go to [Main Menu] 0-50 LCP Copy and Press [OK].
- Select [1] All to LCP to upload data to LCP or select [2] All from LCP to download data from the LCP.
- Press [OK]. A progress bar shows the uploading or downloading process.
- Press [Hand On] or [Auto On] to return to normal operation.

5.3.5 Changing Parameter Settings

View changes

Quick Menu Q5 - Changes Made lists all parameters changed from default settings.

- The list shows only parameters which have been changed in the current edit-setup.
- Parameters which have been reset to default values are not listed.
- The message 'Empty' indicates that no parameters have been changed.

Changing settings

Parameter settings can be accessed and changed from the [Quick Menu] or from the [Main Menu]. The [Quick Menu] only gives access to a limited number of parameters.

1. Press [Quick Menu] or [Main Menu] on the LCP.
2. Press [▲] [▼] to browse through the parameter groups, press [OK] to select a parameter group.
3. Press [▲] [▼] to browse through the parameters, press [OK] to select a parameter.
4. Press [▲] [▼] to change the value of a parameter setting.
5. Press [◀] [▶] to shift digit when a decimal parameter is in the editing state.
6. Press [OK] to accept the change.
7. Press either [Back] twice to enter "Status", or press [Main Menu] once to enter "Main Menu".

5.3.6 Restoring Default Settings

NOTICE

Risk of losing programming, motor data, localisation, and monitoring records by restoration of default settings. To provide a backup, upload data to the LCP before initialisation.

Restoring the default parameter settings is done by initialisation of the frequency converter. Initialisation is carried out through *14-22 Operation Mode* (recommended) or manually.

- Initialisation using *14-22 Operation Mode* does not reset frequency converter settings such as operating hours, serial communication selections, personal menu settings, fault log, alarm log, and other monitoring functions.
- Manual initialisation erases all motor, programming, localisation, and monitoring data and restores factory default settings.

Recommended initialisation procedure, via *14-22 Operation Mode*

1. Press [Main Menu] twice to access parameters.
2. Scroll to *14-22 Operation Mode* and press [OK].
3. Scroll to *Initialisation* and press [OK].
4. Remove power to the unit and wait for the display to turn off.
5. Apply power to the unit.

Default parameter settings are restored during start-up. This may take slightly longer than normal.

6. Alarm 80 is displayed.
7. Press [Reset] to return to operation mode.

Manual initialisation procedure

1. Remove power to the unit and wait for the display to turn off.
2. Press and hold [Status], [Main Menu], and [OK] at the same time while applying power to the unit (approximately 5 s or until audible click and fan starts).

Factory default parameter settings are restored during start-up. This may take slightly longer than normal.

Manual initialisation does not reset the following frequency converter information:

- *15-00 Operating hours*
- *15-03 Power Up's*
- *15-04 Over Temp's*
- *15-05 Over Volt's*

5.4 Basic Programming

5.4.1 Commissioning with SmartStart

The SmartStart wizard enables fast configuration of basic motor and application parameters.

- At first power up or after initialisation of the frequency converter, SmartStart starts by itself.
- Follow on-screen instructions to complete commissioning of the frequency converter. Always reactivate SmartStart by selecting *Quick Menu Q4 - SmartStart*.
- For commissioning without use of the SmartStart wizard, refer to *5.4.2 Commissioning via [Main Menu]* or the *Programming Guide*.

NOTICE

Motor data are required for the SmartStart setup. The required data are normally available on the motor nameplate.

The SmartStart configures the frequency converter in 3 phases, each consisting of several steps, see Table 5.6.

| Phase | | Comment |
|-------|-------------------------|--|
| 1 | Basic Programming | Program e.g. motor data |
| 2 | Application Section | Select and program appropriate application: <ul style="list-style-type: none"> • Single pump/motor • Motor alternation • Basic cascade control • Master/follower |
| 3 | Water and Pump Features | Go to water and pump dedicated parameters |

Table 5.6 SmartStart, Setup in 3 Phases

5.4.2 Commissioning via [Main Menu]

Recommended parameter settings are intended for start-up and checkout purposes. Application settings may vary.

Enter data with power ON, but before operating the frequency converter.

1. Press [Main Menu] on the LCP.
2. Press the navigation keys to scroll to parameter group 0-** Operation/Display and press [OK].

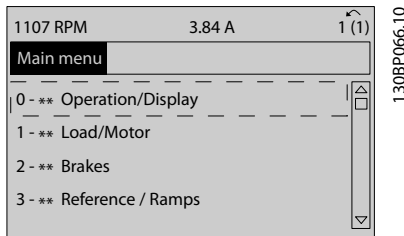


Illustration 5.2 Main Menu

3. Press navigation keys to scroll to parameter group 0-0* Basic Settings and press [OK].

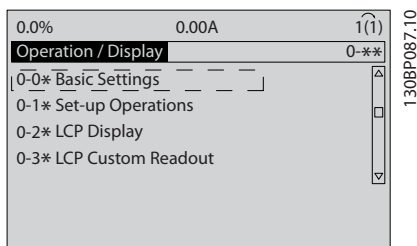


Illustration 5.3 Operation/Display

4. Press navigation keys to scroll to 0-03 Regional Settings and press [OK].

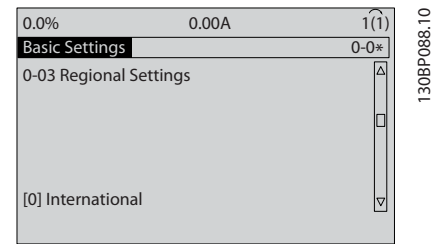


Illustration 5.4 Basic Settings

5. Press navigation keys to select [0] International or [1] North America as appropriate and press [OK]. (This changes the default settings for a number of basic parameters).
6. Press [Main Menu] on the LCP.
7. Press the navigation keys to scroll to 0-01 Language.
8. Select language and press [OK].
9. If a jumper wire is in place between control terminals 12 and 27, leave 5-12 Terminal 27 Digital Input at factory default. Otherwise, select No Operation in 5-12 Terminal 27 Digital Input. For frequency converters with an optional bypass, no jumper wire is required between control terminals 12 and 27.
10. 3-02 Minimum Reference
11. 3-03 Maximum Reference
12. 3-41 Ramp 1 Ramp Up Time
13. 3-42 Ramp 1 Ramp Down Time
14. 3-13 Reference Site. Linked to Hand/Auto Local Remote.

5.4.3 Asynchronous Motor Setup

Enter the motor data in parameter 1-20 Motor Power [kW] or 1-21 Motor Power [HP] to 1-25 Motor Nominal Speed. The information can be found on the motor nameplate.

1. 1-20 Motor Power [kW] or 1-21 Motor Power [HP]
2. 1-22 Motor Voltage
3. 1-23 Motor Frequency
4. 1-24 Motor Current
5. 1-25 Motor Nominal Speed

5.4.4 PM Motor Setup in VVC^{plus}

NOTICE

Only use permanent magnet (PM) motor with fans and pumps.

Initial Programming Steps

1. Activate PM motor operation *1-10 Motor Construction*, select (1) *PM, non salient SPM*
2. Set *0-02 Motor Speed Unit* to [0] RPM

Programming motor data

After selecting PM motor in *1-10 Motor Construction*, the PM motor-related parameters in parameter groups *1-2* Motor Data*, *1-3* Adv. Motor Data* and *1-4** are active. The necessary data can be found on the motor nameplate and in the motor data sheet.

Program the following parameters in the listed order

1. *1-24 Motor Current*
2. *1-26 Motor Cont. Rated Torque*
3. *1-25 Motor Nominal Speed*
4. *1-39 Motor Poles*
5. *1-30 Stator Resistance (Rs)*
Enter line to common stator winding resistance (Rs). If only line-line data are available, divide the line-line value with 2 to achieve the line to common (starpoint) value.
6. *1-37 d-axis Inductance (Ld)*
Enter line to common direct axis inductance of the PM motor.
If only line-line data are available, divide the line-line value with 2 to achieve the line-common (starpoint) value.
7. *1-40 Back EMF at 1000 RPM*
Enter line to line back EMF of PM Motor at 1000 RPM mechanical speed (RMS value). Back EMF is the voltage generated by a PM motor when no drive is connected and the shaft is turned externally. Back EMF is normally specified for nominal motor speed or for 1000 RPM measured between 2 lines. If the value is not available for a motor speed of 1000 RPM, calculate the correct value as follows: If back EMF is e.g. 320 V at 1800 RPM, it can be calculated at 1000 RPM as follows:
Back EMF = (Voltage / RPM)*1000 = (320/1800)*1000 = 178. This is the value that must be programmed for *1-40 Back EMF at 1000 RPM*.

Test Motor Operation

1. Start the motor at low speed (100 to 200 RPM). If the motor does not turn, check installation, general programming and motor data.
2. Check if start function in *1-70 PM Start Mode* fits the application requirements.

Rotor detection

This function is the recommended choice for applications where the motor starts from standstill, e.g. pumps or conveyors. On some motors, an acoustic sound is heard when the impulse is sent out. This does not harm the motor.

Parking

This function is the recommended choice for applications where the motor is rotating at slow speed e.g. windmilling in fan applications. *2-06 Parking Current* and *2-07 Parking Time* can be adjusted. Increase the factory setting of these parameters for applications with high inertia.

Start the motor at nominal speed. If the application does not run well, check the VVC^{plus} PM settings. Recommendations in different applications can be seen in *Table 5.7*.

| Application | Settings |
|---|---|
| Low inertia applications $I_{Load}/I_{Motor} < 5$ | <i>1-17 Voltage filter time const.</i> to be increased by factor 5 to 10 <i>1-14 Damping Gain</i> should be reduced <i>1-66 Min. Current at Low Speed</i> should be reduced (<100%) |
| Low inertia applications $50 > I_{Load}/I_{Motor} > 5$ | Keep calculated values |
| High inertia applications $I_{Load}/I_{Motor} > 50$ | <i>1-14 Damping Gain</i> , <i>1-15 Low Speed Filter Time Const.</i> and <i>1-16 High Speed Filter Time Const.</i> should be increased |
| High load at low speed <30% (rated speed) | <i>1-17 Voltage filter time const.</i> should be increased <i>1-66 Min. Current at Low Speed</i> should be increased (>100% for a prolonged time can overheat the motor) |

Table 5.7 Recommendations in Different Applications

If the motor starts oscillating at a certain speed, increase *1-14 Damping Gain*. Increase the value in small steps. Depending on the motor, a good value for this parameter can be 10% or 100% higher than the default value.

Starting torque can be adjusted in *1-66 Min. Current at Low Speed*. 100% provides nominal torque as starting torque.

5.4.5 Automatic Energy Optimisation (AEO)

NOTICE

AEO is not relevant for PM motors.

Automatic Energy Optimisation (AEO) is recommended for

- Automatic compensation for oversized motors
- Automatic compensation for slow system load change
- Automatic compensation for seasonal changes
- Automatic compensation for low motor loading
- Reduced energy consumption
- Reduced motor heating
- Reduced motor noise

To activate AEO, set parameter *1-03 Torque Characteristics* to *[2] Auto Energy Optim. CT* or *[3] Auto Energy Optim. VT*.

5.4.6 Automatic Motor Adaptation (AMA)

NOTICE

AMA is not relevant for PM motors.

Automatic motor adaptation (AMA) is a procedure that optimises compatibility between the frequency converter and the motor.

- The frequency converter builds a mathematical model of the motor for regulating output motor current. The procedure also tests the input phase balance of electrical power. It compares the motor characteristics with the data entered in parameters 1-20 to 1-25 .
- The motor shaft does not turn and no harm is done to the motor while running the AMA.
- Some motors may be unable to run the complete version of the test. In that case, select *[2] Enable reduced AMA*.
- If an output filter is connected to the motor, select *Enable reduced AMA*.
- If warnings or alarms occur, see *7.4 List of Warnings and Alarms*.
- Run this procedure on a cold motor for best results.

To run AMA

1. Press [Main Menu] to access parameters.
2. Scroll to parameter group *1-** Load and Motor* and press [OK].
3. Scroll to parameter group *1-2* Motor Data* and press [OK].

4. Scroll to *1-29 Automatic Motor Adaptation (AMA)* and press [OK].
5. Select *[1] Enable complete AMA* and press [OK].
6. Follow on-screen instructions.
7. The test runs automatically and indicate when it is complete.

5.5 Checking Motor Rotation

WARNING

MOTOR START

Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage. Before start,

- Ensure equipment is safe to operate under any condition.
- Ensure that the motor, system, and any attached equipment are ready for start.

NOTICE

Risk of damage to pumps/compressors caused by motor running in wrong direction. Before running the frequency converter, check the motor rotation.

The motor runs briefly at 5 Hz or the minimum frequency set in *4-12 Motor Speed Low Limit [Hz]*.

1. Press [Main Menu].
2. Scroll to *1-28 Motor Rotation Check* and press [OK].
3. Scroll to *[1] Enable*.

The following text appears: *Note! Motor may run in wrong direction.*

4. Press [OK].
5. Follow the on-screen instructions.

NOTICE

To change the direction of rotation, remove power to the frequency converter and wait for power to discharge. Reverse the connection of any 2 of the 3 motor wires on the motor or frequency converter side of the connection.

If warnings or alarms occur, see 7.4 *List of Warnings and Alarms*.

5.6 Local-control Test

▲WARNING

MOTOR START

Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage. Before start,

- Ensure equipment is safe to operate under any condition.
 - Ensure that the motor, system, and any attached equipment are ready for start.
1. Press [Hand On] to provide a local start command to the frequency converter.
 2. Accelerate the frequency converter by pressing [▲] to full speed. Moving the cursor left of the decimal point provides quicker input changes.
 3. Note any acceleration problems.
 4. Press [Off]. Note any deceleration problems.

In the event of acceleration or deceleration problems, see 7.5 *Troubleshooting*. See 7.4 *List of Warnings and Alarms* for resetting the frequency converter after a trip.

5.7 System Start-up

The procedure in this section requires user-wiring and application programming to be completed. The following procedure is recommended after application set-up is completed.

▲WARNING

MOTOR START

Failure to ensure that the motor, system, and any attached equipment are ready for start can result in personal injury or equipment damage. Before start,

- Ensure equipment is safe to operate under any condition.
 - Ensure that the motor, system, and any attached equipment are ready for start.
1. Press [Auto On].
 2. Apply an external run command.
 3. Adjust the speed reference throughout the speed range.
 4. Remove the external run command.
 5. Check sound and vibration level of the motor to ensure that the system is working as intended.

6 Application Set-up Examples

The examples in this section are intended as a quick reference for common applications.

- Parameter settings are the regional default values unless otherwise indicated (selected in *0-03 Regional Settings*).
- Parameters associated with the terminals and their settings are shown next to the drawings.
- Where switch settings for analog terminals A53 or A54 are required, these are also shown.

6

NOTICE

When the optional Safe Torque Off feature is used, a jumper wire may be required between terminal 12 (or 13) and terminal 37 for the frequency converter to operate when using factory default programming values.

6.1 Application Examples

6.1.1 Feedback

| FC | | Parameters | |
|----------|-------------|---|---------|
| Function | Setting | Function | Setting |
| +24 V 12 | 130BB675.10 | 6-22 Terminal 54 Low Current | 4 mA* |
| +24 V 13 | | 6-23 Terminal 54 High Current | 20 mA* |
| D IN 18 | | 6-24 Terminal 54 Low Ref./Feedb. Value | 0* |
| D IN 19 | | 6-25 Terminal 54 High Ref./Feedb. Value | 50* |
| COM 20 | | * = Default Value | |
| D IN 27 | | Notes/comments: D IN 37 is an option. | |
| D IN 29 | | | |
| D IN 32 | | | |
| D IN 33 | | | |
| D IN 37 | | | |
| +10 V 50 | U - I | | |
| A IN 53 | | | |
| A IN 54 | | | |
| COM 55 | | | |
| A OUT 42 | | | |
| COM 39 | | | |
| A 54 | | | |

Table 6.1 Analog Current Feedback Transducer

| FC | | Parameters | |
|----------|-------------|---|---------|
| Function | Setting | Function | Setting |
| +24 V 12 | 130BB676.10 | 6-20 Terminal 54 Low Voltage | 0.07 V* |
| +24 V 13 | | 6-21 Terminal 54 High Voltage | 10 V* |
| D IN 18 | | 6-24 Terminal 54 Low Ref./Feedb. Value | 0* |
| D IN 19 | | 6-25 Terminal 54 High Ref./Feedb. Value | 50* |
| COM 20 | | * = Default Value | |
| D IN 27 | | Notes/comments: D IN 37 is an option. | |
| D IN 29 | | | |
| D IN 32 | | | |
| D IN 33 | | | |
| D IN 37 | | | |
| +10 V 50 | U - I | | |
| A IN 53 | | | |
| A IN 54 | | | |
| COM 55 | | | |
| A OUT 42 | | | |
| COM 39 | | | |
| A 54 | | | |

Table 6.2 Analog Voltage Feedback Transducer (3-wire)

| FC | | Parameters | |
|----------|-------------|---|---------|
| Function | Setting | Function | Setting |
| +24 V 12 | 130BB677.10 | 6-20 Terminal 54 Low Voltage | 0.07 V* |
| +24 V 13 | | 6-21 Terminal 54 High Voltage | 10 V* |
| D IN 18 | | 6-24 Terminal 54 Low Ref./Feedb. Value | 0* |
| D IN 19 | | 6-25 Terminal 54 High Ref./Feedb. Value | 50* |
| COM 20 | | * = Default Value | |
| D IN 27 | | Notes/comments: D IN 37 is an option. | |
| D IN 29 | | | |
| D IN 32 | | | |
| D IN 33 | | | |
| D IN 37 | | | |
| +10 V 50 | U - I | | |
| A IN 53 | | | |
| A IN 54 | | | |
| COM 55 | | | |
| A OUT 42 | | | |
| COM 39 | | | |
| A 54 | | | |

Table 6.3 Analog Voltage Feedback Transducer (4-wire)

6.1.2 Speed

| | | Parameters | |
|-------|----|---|---------|
| FC | | Function | Setting |
| +24 V | 12 | 6-10 Terminal 53 | 0.07 V* |
| +24 V | 13 | Low Voltage | |
| D IN | 18 | 6-11 Terminal 53 | 10 V* |
| D IN | 19 | High Voltage | |
| COM | 20 | 6-14 Terminal 53 | 0 Hz |
| D IN | 27 | Low Ref./Feedb. Value | |
| D IN | 29 | 6-15 Terminal 53 | 50 Hz |
| D IN | 32 | High Ref./Feedb. Value | |
| D IN | 33 | * = Default Value | |
| D IN | 37 | Notes/comments: D IN 37 is an option. | |
| +10 V | 50 | | |
| A IN | 53 | | |
| A IN | 54 | | |
| COM | 55 | | |
| A OUT | 42 | | |
| COM | 39 | | |

Table 6.4 Analog Speed Reference (Voltage)

| | | Parameters | |
|-------|----|---|---------|
| FC | | Function | Setting |
| +24 V | 12 | 6-12 Terminal 53 | 4 mA* |
| +24 V | 13 | Low Current | |
| D IN | 18 | 6-13 Terminal 53 | 20 mA* |
| D IN | 19 | High Current | |
| COM | 20 | 6-14 Terminal 53 | 0 Hz |
| D IN | 27 | Low Ref./Feedb. Value | |
| D IN | 29 | 6-15 Terminal 53 | 50 Hz |
| D IN | 32 | High Ref./Feedb. Value | |
| D IN | 33 | * = Default Value | |
| D IN | 37 | Notes/comments: D IN 37 is an option. | |
| +10 V | 50 | | |
| A IN | 53 | | |
| A IN | 54 | | |
| COM | 55 | | |
| A OUT | 42 | | |
| COM | 39 | | |

Table 6.5 Analog Speed Reference (Current)

| | | Parameters | |
|-------|----|---|---------|
| FC | | Function | Setting |
| +24 V | 12 | 6-10 Terminal 53 | 0.07 V* |
| +24 V | 13 | Low Voltage | |
| D IN | 18 | 6-11 Terminal 53 | 10 V* |
| D IN | 19 | High Voltage | |
| COM | 20 | 6-14 Terminal 53 | 0 Hz |
| D IN | 27 | Low Ref./Feedb. Value | |
| D IN | 29 | 6-15 Terminal 53 | 1500 Hz |
| D IN | 32 | High Ref./Feedb. Value | |
| D IN | 33 | * = Default Value | |
| D IN | 37 | Notes/comments: D IN 37 is an option. | |
| +10 V | 50 | | |
| A IN | 53 | | |
| A IN | 54 | | |
| COM | 55 | | |
| A OUT | 42 | | |
| COM | 39 | | |

Table 6.6 Speed Reference (Using a Manual Potentiometer)

6.1.3 Run/Stop

| | | Parameters | |
|-------|----|---|------------------------|
| FC | | Function | Setting |
| +24 V | 12 | 5-10 Terminal 18 | [8] Start* |
| +24 V | 13 | Digital Input | |
| D IN | 18 | 5-12 Terminal 27 | [7] External Interlock |
| D IN | 19 | Digital Input | |
| COM | 20 | * = Default Value | |
| D IN | 27 | Notes/comments: D IN 37 is an option. | |
| D IN | 29 | | |
| D IN | 32 | | |
| D IN | 33 | | |
| D IN | 37 | | |
| +10 V | 50 | | |
| COM | 39 | | |

Table 6.7 Run/Stop Command with External Interlock

| | | Parameters | |
|-------|----|---|------------------------|
| FC | | Function | Setting |
| +24 V | 12 | 5-10 Terminal 18 | [8] Start* |
| +24 V | 13 | Digital Input | |
| D IN | 18 | 5-12 Terminal 27 | [7] External Interlock |
| D IN | 19 | Digital Input | |
| COM | 20 | * = Default Value | |
| D IN | 27 | Notes/comments: | |
| D IN | 29 | If 5-12 Terminal 27 Digital Input is set to [0] No operation, a jumper wire to terminal 27 is not needed. | |
| D IN | 32 | D IN 37 is an option. | |
| D IN | 33 | | |
| D IN | 37 | | |
| +10 V | 50 | | |
| A IN | 53 | | |
| A IN | 54 | | |
| COM | 55 | | |
| A OUT | 42 | | |
| COM | 39 | | |
| R1 | 01 | | |
| | 02 | | |
| | 03 | | |
| R2 | 04 | | |
| | 05 | | |
| | 06 | | |

Table 6.8 Run/Stop Command without External Interlock

6.1.4 External Alarm Reset

| | | Parameters | |
|-------|----|------------------------|-----------|
| FC | | Function | Setting |
| +24 V | 12 | 5-11 Terminal 19 | [1] Reset |
| +24 V | 13 | Digital Input | |
| D IN | 18 | * = Default Value | |
| D IN | 19 | Notes/comments: | |
| COM | 20 | D IN 37 is an option. | |
| D IN | 27 | | |
| D IN | 29 | | |
| D IN | 32 | | |
| D IN | 33 | | |
| D IN | 37 | | |
| +10 V | 50 | | |
| A IN | 53 | | |
| A IN | 54 | | |
| COM | 55 | | |
| A OUT | 42 | | |
| COM | 39 | | |

Table 6.10 External Alarm Reset

| | | Parameters | |
|-------|----|------------------------|--------------------------|
| FC | | Function | Setting |
| +24 V | 12 | 5-10 Terminal 18 | [8] Start* |
| +24 V | 13 | Digital Input | |
| D IN | 18 | 5-11 Terminal 19 | [52] Run Permissive |
| D IN | 19 | Digital Input | |
| COM | 20 | 5-12 Terminal 27 | [7] External Interlock |
| D IN | 27 | Digital Input | |
| D IN | 29 | 5-40 Function Relay | [167] Start command act. |
| D IN | 32 | * = Default Value | |
| D IN | 33 | Notes/comments: | |
| D IN | 37 | D IN 37 is an option. | |
| +10 V | 50 | | |
| A IN | 53 | | |
| A IN | 54 | | |
| COM | 55 | | |
| A OUT | 42 | | |
| COM | 39 | | |
| R1 | 01 | | |
| | 02 | | |
| | 03 | | |
| R2 | 04 | | |
| | 05 | | |
| | 06 | | |

Table 6.9 Run Permissive

6.1.5 RS-485

| | | Parameters | |
|-------|----|---|---------|
| FC | | Function | Setting |
| +24 V | 12 | 8-30 Protocol | FC* |
| +24 V | 13 | 8-31 Address | 1* |
| D IN | 18 | 8-32 Baud Rate | 9600* |
| D IN | 19 | * = Default Value | |
| COM | 20 | Notes/comments: | |
| D IN | 27 | Select protocol, address and baud rate in the above mentioned parameters. | |
| D IN | 29 | D IN 37 is an option. | |
| D IN | 32 | | |
| D IN | 33 | | |
| D IN | 37 | | |
| +10 V | 50 | | |
| A IN | 53 | | |
| A IN | 54 | | |
| COM | 55 | | |
| A OUT | 42 | | |
| COM | 39 | | |

Table 6.11 RS-485 Network Connection

6.1.6 Motor Thermistor

CAUTION

THERMISTOR INSULATION

Risk of equipment damage exists.

- Use only thermistors with reinforced or double insulation to meet PELV insulation requirements.

| | | Parameters | |
|-------|----|--|---------------------|
| VLT | | Function | Setting |
| +24 V | 12 | 1-90 Motor Thermal Protection | [2] Thermistor trip |
| +24 V | 13 | 1-93 Thermistor Source | [1] Analog input 53 |
| D IN | 18 | * = Default Value | |
| D IN | 19 | Notes/comments: | |
| COM | 20 | If only a warning is desired, 1-90 Motor Thermal Protection should be set to [1] Thermistor warning. | |
| D IN | 27 | D IN 37 is an option. | |
| D IN | 29 | | |
| D IN | 32 | | |
| D IN | 33 | | |
| D IN | 37 | | |
| +10 V | 50 | | |
| A IN | 53 | | |
| A IN | 54 | | |
| COM | 55 | | |
| A OUT | 42 | | |
| COM | 39 | | |

Table 6.12 Motor Thermistor

7 Maintenance, Diagnostics and Troubleshooting

This chapter includes maintenance and service guidelines, status messages, warnings and alarms and basic troubleshooting.

7.1 Maintenance and Service

Under normal operating conditions and load profiles, the frequency converter is maintenance-free throughout its designed lifetime. To prevent breakdown, danger, and damage, examine the frequency converter at regular intervals depending on the operating conditions. Replace worn or damaged parts with original spare parts or standard parts. For service and support, refer to www.danfoss.com/contact/sales_and_services/.

⚠ WARNING


HIGH VOLTAGE

Frequency converters contain high voltage when connected to AC mains input power. Failure to perform installation, start-up, and maintenance by qualified personnel could result in death or serious injury.

- Installation, start-up, and maintenance must be performed by qualified personnel only.

7.2 Status Messages

When the frequency converter is in status mode, status messages are generated automatically and appear in the bottom line of the display (see *Illustration 7.1*).

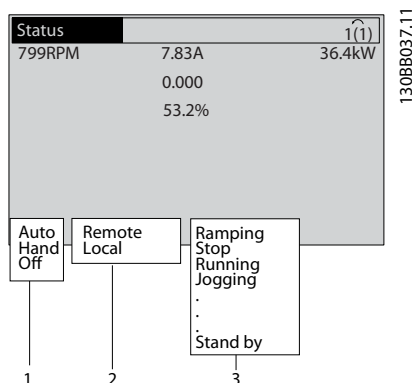

| | |
|---|--|
| 1 | Operation mode (see <i>Table 7.2</i>) |
| 2 | Reference site (see <i>Table 7.3</i>) |
| 3 | Operation status (see <i>Table 7.4</i>) |

Illustration 7.1 Status Display

Table 7.2 to *Table 7.4* describe the displayed status messages.

| | |
|---------|--|
| Off | The frequency converter does not react to any control signal until [Auto On] or [Hand On] is pressed. |
| Auto On | The frequency converter is controlled from the control terminals and/or the serial communication. |
| Hand On | The frequency converter is controlled by the navigation keys on the LCP. Stop commands, reset, reversing, DC brake, and other signals applied to the control terminals override local control. |

Table 7.1 Operation Mode

| | |
|--------|--|
| Remote | The speed reference is given from external signals, serial communication, or internal preset references. |
| Local | The frequency converter uses [Hand On] control or reference values from the LCP. |

Table 7.2 Reference Site

| | |
|-----------------|--|
| AC Brake | AC Brake was selected in <i>2-10 Brake Function</i> . The AC brake over-magnetises the motor to achieve a controlled slow-down. |
| AMA finish OK | Automatic motor adaptation (AMA) was carried out successfully. |
| AMA ready | AMA is ready to start. Press [Hand On] to start. |
| AMA running | AMA process is in progress. |
| Braking | The brake chopper is in operation. Generative energy is absorbed by the brake resistor. |
| Braking max. | The brake chopper is in operation. The power limit for the brake resistor defined in <i>2-12 Brake Power Limit (kW)</i> has been reached. |
| Coast | <ul style="list-style-type: none"> • Coast inverse was selected as a function for a digital input (parameter group <i>5-1* Digital Inputs</i>). The corresponding terminal is not connected. • Coast activated by serial communication |
| Ctrl. Ramp-down | Control Ramp-down was selected in <i>14-10 Mains Failure</i> . <ul style="list-style-type: none"> • The mains voltage is below the value set in <i>14-11 Mains Voltage at Mains Fault</i> at mains fault • The frequency converter ramps down the motor using a controlled ramp down |

| | |
|-----------------------|---|
| Current High | The frequency converter output current is above the limit set in 4-51 <i>Warning Current High</i> . |
| Current Low | The frequency converter output current is below the limit set in 4-52 <i>Warning Speed Low</i> . |
| DC Hold | DC hold is selected in 1-80 <i>Function at Stop</i> and a stop command is active. The motor is held by a DC current set in 2-00 <i>DC Hold/Preheat Current</i> . |
| DC Stop | <p>The motor is held with a DC current (2-01 <i>DC Brake Current</i>) for a specified time (2-02 <i>DC Braking Time</i>).</p> <ul style="list-style-type: none"> DC Brake is activated in 2-03 <i>DC Brake Cut In Speed [RPM]</i> and a stop command is active. DC Brake (inverse) is selected as a function for a digital input (parameter group 5-1* <i>Digital Inputs</i>). The corresponding terminal is not active. The DC Brake is activated via serial communication. |
| Feedback high | The sum of all active feedbacks is above the feedback limit set in 4-57 <i>Warning Feedback High</i> . |
| Feedback low | The sum of all active feedbacks is below the feedback limit set in 4-56 <i>Warning Feedback Low</i> . |
| Freeze output | <p>The remote reference is active, which holds the present speed.</p> <ul style="list-style-type: none"> Freeze output was selected as a function for a digital input (parameter group 5-1* <i>Digital Inputs</i>). The corresponding terminal is active. Speed control is only possible via the terminal functions Speed Up and Speed Down. Hold ramp is activated via serial communication. |
| Freeze output request | A freeze output command was given, but the motor remains stopped until a run permissive signal is received. |
| Freeze ref. | <i>Freeze Reference</i> was selected as a function for a digital input (parameter group 5-1* <i>Digital Inputs</i>). The corresponding terminal is active. The frequency converter saves the actual reference. Changing the reference is now only possible via terminal functions Speed Up and Speed Down. |
| Jog request | A jog command was given, but the motor remains stopped until a run permissive signal is received via a digital input. |

| | |
|---------------|---|
| Jogging | <p>The motor is running as programmed in 3-19 <i>Jog Speed [RPM]</i>.</p> <ul style="list-style-type: none"> <i>Jog</i> was selected as function for a digital input (parameter group 5-1* <i>Digital Inputs</i>). The corresponding terminal (e.g. Terminal 29) is active. The Jog function is activated via the serial communication. The Jog function was selected as a reaction for a monitoring function (e.g. No signal). The monitoring function is active. |
| Motor check | In 1-80 <i>Function at Stop, Motor Check</i> was selected. A stop command is active. To ensure that a motor is connected to the frequency converter, a permanent test current is applied to the motor. |
| OVC control | <i>Overvoltage</i> control was activated in 2-17 <i>Overvoltage Control, [2] Enabled</i> . The connected motor is supplying the frequency converter with generative energy. The overvoltage control adjusts the V/Hz ratio to run the motor in controlled mode and to prevent the frequency converter from tripping. |
| PowerUnit Off | (Only frequency converters with an external 24 V power supply installed). Mains supply to the frequency converter was removed, and the control card is supplied by the external 24 V. |
| Protection md | <p>Protection mode is active. The unit has detected a critical status (overcurrent or overvoltage).</p> <ul style="list-style-type: none"> To avoid tripping, switching frequency is reduced to 4 kHz. If possible, protection mode ends after approximately 10 s. Protection mode can be restricted in 14-26 <i>Trip Delay at Inverter Fault</i>. |
| QStop | <p>The motor is decelerating using 3-81 <i>Quick Stop Ramp Time</i>.</p> <ul style="list-style-type: none"> <i>Quick stop inverse</i> was selected as a function for a digital input (parameter group 5-1* <i>Digital Inputs</i>). The corresponding terminal is not active. The quick stop function was activated via serial communication. |
| Ramping | The motor is accelerating/decelerating using the active Ramp Up/Down. The reference, a limit value, or a standstill is not yet reached. |
| Ref. high | The sum of all active references is above the reference limit set in 4-55 <i>Warning Reference High</i> . |
| Ref. low | The sum of all active references is below the reference limit set in 4-54 <i>Warning Reference Low</i> . |

| | |
|---------------|---|
| Run on ref. | The frequency converter is running in the reference range. The feedback value matches the setpoint value. |
| Run request | A start command was given, but the motor remains stopped until a run permissive signal is received via digital input. |
| Running | The motor is driven by the frequency converter. |
| Sleep Mode | The energy-saving function is enabled. The motor has stopped, but restarts automatically when required. |
| Speed high | Motor speed is above the value set in 4-53 <i>Warning Speed High</i> . |
| Speed low | Motor speed is below the value set in 4-52 <i>Warning Speed Low</i> . |
| Standby | In Auto On mode, the frequency converter starts the motor with a start signal from a digital input or serial communication. |
| Start delay | In 1-71 <i>Start Delay</i> , a delay starting time was set. A start command is activated and the motor starts after the start delay time expires. |
| Start fwd/rev | Start forward and start reverse were selected as functions for 2 different digital inputs (parameter group 5-1* <i>Digital Inputs</i>). The motor starts in forward or reverse depending on which corresponding terminal is activated. |
| Stop | The frequency converter has received a stop command from the LCP, digital input, or serial communication. |
| Trip | An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, the frequency converter can be reset manually by pressing [Reset] or remotely by control terminals or serial communication. |
| Trip lock | An alarm occurred and the motor is stopped. Once the cause of the alarm is cleared, power must be cycled to the frequency converter. The frequency converter can then be reset manually by pressing [Reset] or remotely by control terminals or serial communication. |

Table 7.3 Operation Status

NOTICE

In auto/remote mode, the frequency converter requires external commands to execute functions.

7.3 Warning and Alarm Types

Warnings

A warning is issued when an alarm condition is impending or when an abnormal operating condition is present and may result in the frequency converter issuing an alarm. A warning clears by itself when the abnormal condition is removed.

Alarms

Trip

An alarm is issued when the frequency converter is tripped, which means that the frequency converter suspends operation to prevent frequency converter or system damage. The motor coasts to a stop. The frequency converter logic continues to operate and monitor the frequency converter status. After the fault condition is remedied, the frequency converter can be reset. It is then ready to start operation again.

Resetting the frequency converter after trip/trip lock

A trip can be reset in any of 4 ways:


- Press [Reset] on the LCP
- Digital reset input command
- Serial communication reset input command
- Auto reset

Trip lock

Input power is cycled. The motor coasts to a stop. The frequency converter continues to monitor the frequency converter status. Remove input power to the frequency converter, correct the cause of the fault, and reset the frequency converter.

Warning and Alarm Displays

- A warning is displayed in the LCP along with the warning number.
- An alarm flashes along with the alarm number.

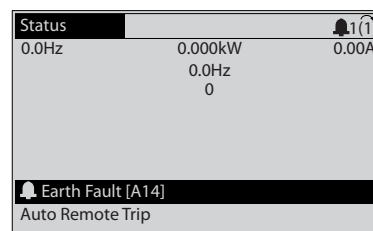

130BP086.11

Illustration 7.2 Alarm Display Example

In addition to the text and alarm code in the LCP, there are 3 status indicator lights.

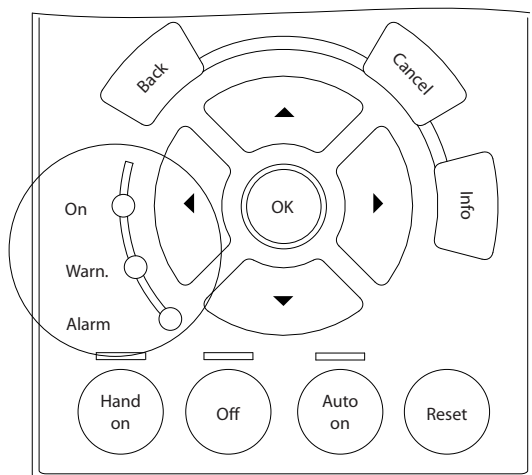


Illustration 7.3 Status Indicator Lights

| | Warning LED | Alarm LED |
|-----------|-------------|---------------|
| Warning | On | Off |
| Alarm | Off | On (Flashing) |
| Trip-Lock | On | On (Flashing) |

Table 7.4 Status Indicator Lights Explanations

7.4 List of Warnings and Alarms

The warning/alarm information below defines each warning/alarm condition, provides the probable cause for the condition, and details a remedy or troubleshooting procedure.

WARNING 1, 10 Volts low

The control card voltage is below 10 V from terminal 50. Remove some of the load from terminal 50, as the 10 V supply is overloaded. Max. 15 mA or minimum 590 Ω.

This condition can be caused by a short in a connected potentiometer or improper wiring of the potentiometer.

Troubleshooting

Remove the wiring from terminal 50. If the warning clears, the problem is with the customer wiring. If the warning does not clear, replace the control card.

WARNING/ALARM 2, Live zero error

This warning or alarm only appears if programmed by the user in 6-01 Live Zero Timeout Function. The signal on one of the analog inputs is less than 50% of the minimum value programmed for that input. Broken wiring or faulty device sending the signal can cause this condition.

Troubleshooting

- Check connections on all the analog input terminals. Control card terminals 53 and 54 for signals, terminal 55 common. MCB 101 terminals 11 and 12 for signals, terminal 10 common. MCB

109 terminals 1, 3, 5 for signals, terminals 2, 4, 6 common).

- Check that the frequency converter programming and switch settings match the analog signal type
- Perform Input Terminal Signal Test

WARNING/ALARM 3, No motor

No motor has been connected to the output of the frequency converter.

WARNING/ALARM 4, Mains phase loss

A phase is missing on the supply side, or the mains voltage imbalance is too high. This message also appears for a fault in the input rectifier on the frequency converter. Options are programmed at 14-12 Function at Mains Imbalance.

Troubleshooting

Check the supply voltage and supply currents to the frequency converter.

WARNING 5, DC link voltage high

The intermediate circuit voltage (DC) is higher than the high voltage warning limit. The limit is dependent on the frequency converter voltage rating. The unit is still active.

WARNING 6, DC link voltage low

The intermediate circuit voltage (DC) is lower than the low voltage warning limit. The limit is dependent on the frequency converter voltage rating. The unit is still active.

WARNING/ALARM 7, DC overvoltage

If the intermediate circuit voltage exceeds the limit, the frequency converter trips after a time.

Troubleshooting

- Connect a brake resistor
- Extend the ramp time
- Change the ramp type
- Activate the functions in 2-10 Brake Function
- Increase 14-26 Trip Delay at Inverter Fault

WARNING/ALARM 8, DC under voltage

If the intermediate circuit voltage (DC link) drops below the under voltage limit, the frequency converter checks if a 24 V DC back-up supply is connected. If no 24 V DC back-up supply is connected, the frequency converter trips after a fixed time delay. The time delay varies with unit size.

Troubleshooting

- Check that the supply voltage matches the frequency converter voltage.
- Perform input voltage test.
- Perform soft charge circuit test.

WARNING/ALARM 9, Inverter overload

The frequency converter is about to cut out because of an overload (too high current for too long). The counter for electronic, thermal inverter protection gives a warning at 98% and trips at 100%, while giving an alarm. The

frequency converter *cannot* be reset until the counter is below 90%.

The fault is that the frequency converter is overloaded by more than 100% for too long.

Troubleshooting

- Compare the output current shown on the LCP with the frequency converter rated current
- Compare the output current shown on the LCP with measured motor current
- Display the Thermal Drive Load on the LCP and monitor the value. When running above the frequency converter continuous current rating, the counter should increase. When running below the frequency converter continuous current rating, the counter should decrease

WARNING/ALARM 10, Motor overload temperature

According to the electronic thermal protection (ETR), the motor is too hot. Select whether the frequency converter gives a warning or an alarm when the counter reaches 100% in *1-90 Motor Thermal Protection*. The fault occurs when the motor is overloaded by more than 100% for too long.

Troubleshooting

- Check for motor overheating
- Check if the motor is mechanically overloaded
- Check that the motor current set in *1-24 Motor Current* is correct
- Ensure that Motor data in parameters 1-20 through 1-25 are set correctly
- If an external fan is in use, check in *1-91 Motor External Fan* that it is selected
- Running AMA in *1-29 Automatic Motor Adaptation (AMA)* tunes the frequency converter to the motor more accurately and reduces thermal loading

WARNING/ALARM 11, Motor thermistor over temp

The thermistor might be disconnected. Select whether the frequency converter gives a warning or an alarm in *1-90 Motor Thermal Protection*.

Troubleshooting

- Check for motor overheating
- Check if the motor is mechanically overloaded
- Check that the thermistor is connected correctly between either terminal 53 or 54 (analog voltage input) and terminal 50 (+10 V supply) and that the terminal switch for 53 or 54 is set for voltage. Check *1-93 Thermistor Source* selects terminal 53 or 54
- When using digital inputs 18 or 19, check that the thermistor is connected correctly between

either terminal 18 or 19 (digital input PNP only) and terminal 50

- If a KTY sensor is used, check for correct connection between terminals 54 and 55
- If using a thermal switch or thermistor, check that the programming if *1-93 Thermistor Resource* matches sensor wiring
- If using a KTY sensor, check the programming of *1-95 KTY Sensor Type*, *1-96 KTY Thermistor Resource*, and *1-97 KTY Threshold level* match sensor wiring

WARNING/ALARM 12, Torque limit

The torque has exceeded the value in *4-16 Torque Limit Motor Mode* or the value in *4-17 Torque Limit Generator Mode*. *14-25 Trip Delay at Torque Limit* can change this from a warning only condition to a warning followed by an alarm.

Troubleshooting

- If the motor torque limit is exceeded during ramp up, extend the ramp up time
- If the generator torque limit is exceeded during ramp down, extend the ramp down time
- If torque limit occurs while running, possibly increase the torque limit. Be sure the system can operate safely at a higher torque
- Check the application for excessive current draw on the motor

WARNING/ALARM 13, Over current

The inverter peak current limit (approximately 200% of the rated current) is exceeded. The warning lasts about 1.5 s, then the frequency converter trips and issues an alarm. This fault may be caused by shock loading or fast acceleration with high inertia loads. If extended mechanical brake control is selected, trip can be reset externally.

Troubleshooting

- Remove power and check if the motor shaft can be turned
- Check that the motor size matches the frequency converter
- Check parameters 1-20 to 1-25. for correct motor data

ALARM 14, Earth (ground) fault

There is current from the output phases to ground, either in the cable between the frequency converter and the motor or in the motor itself.

Troubleshooting:

- Remove power to the frequency converter and repair the earth fault
- Check for earth faults in the motor by measuring the resistance to ground of the motor leads and the motor with a megohmmeter

- Perform current sensor test

ALARM 15, Hardware mismatch

A fitted option is not operational with the present control board hardware or software.

Record the value of the following parameters and contact the Danfoss supplier:

- 15-40 FC Type
- 15-41 Power Section
- 15-42 Voltage
- 15-43 Software Version
- 15-45 Actual Typecode String
- 15-49 SW ID Control Card
- 15-50 SW ID Power Card
- 15-60 Option Mounted
- 15-61 Option SW Version (for each option slot)

ALARM 16, Short circuit

There is short-circuiting in the motor or motor wiring.

Remove power to the frequency converter and repair the short circuit.

WARNING/ALARM 17, Control word timeout

There is no communication to the frequency converter.

The warning is only active when 8-04 Control Word Timeout Function is NOT set to OFF.

If 8-04 Control Word Timeout Function is set to Stop and Trip, a warning appears and the frequency converter ramps down until it trips then displays an alarm.

Troubleshooting:

- Check connections on the serial communication cable
- Increase 8-03 Control Word Timeout Time
- Check the operation of the communication equipment
- Verify a proper installation based on EMC requirements

WARNING/ALARM 22, Hoist mechanical brake

Report value shows what kind it is.

0 = The torque ref. was not reached before timeout.

1 = There was no brake feedback before timeout.

WARNING 23, Internal fan fault

The fan warning function is an extra protective function that checks if the fan is running/mounted. The fan warning can be disabled in 14-53 Fan Monitor ([0] Disabled).

Troubleshooting

- Check fan resistance
- Check soft charge fuses

WARNING 24, External fan fault

The fan warning function is an extra protective function that checks if the fan is running/mounted. The fan warning can be disabled in 14-53 Fan Monitor ([0] Disabled).

Troubleshooting

- Check fan resistance
- Check soft charge fuses

WARNING 25, Brake resistor short circuit

The brake resistor is monitored during operation. If a short circuit occurs, the brake function is disabled and the warning appears. The frequency converter is still operational but without the brake function. Remove power to the frequency converter and replace the brake resistor (see 2-15 Brake Check).

WARNING/ALARM 26, Brake resistor power limit

The power transmitted to the brake resistor is calculated as a mean value over the last 120 s of run time. The calculation is based on the intermediate circuit voltage and the brake resistance value set in 2-16 AC brake Max. Current. The warning is active when the dissipated braking is higher than 90% of the brake resistance power. If [2] Trip is selected in 2-13 Brake Power Monitoring, the frequency converter trips when the dissipated braking power reaches 100%.

WARNING

There is a risk of substantial power being transmitted to the brake resistor if the brake transistor is short-circuited.

WARNING/ALARM 27, Brake chopper fault

The brake transistor is monitored during operation and if a short circuit occurs, the brake function is disabled and a warning is issued. The frequency converter is still operational but, since the brake transistor has short-circuited, substantial power is transmitted to the brake resistor, even if it is inactive.

Remove power to the frequency converter and remove the brake resistor.

This alarm/warning could also occur should the brake resistor overheat. Terminals 104 and 106 are available as brake resistors Klixon ininputs, see Brake Resistor Temperature Switch in the Design Guide.

WARNING/ALARM 28, Brake check failed

The brake resistor is not connected or not working.

Check 2-15 Brake Check.

ALARM 29, Heat Sink temp

The maximum temperature of the heatsink has been exceeded. The temperature fault does not reset until the temperature drops below a defined heatsink temperature. The trip and reset points are different based on the frequency converter power size.

Troubleshooting

Check for the following conditions

- Ambient temperature too high
- Motor cable too long
- Incorrect airflow clearance above and below the frequency converter

- Blocked airflow around the frequency converter
- Damaged heatsink fan
- Dirty heatsink

This alarm is based on the temperature measured by the heatsink sensor mounted inside the IGBT modules

Troubleshooting

- Check fan resistance
- Check soft charge fuses
- IGBT thermal sensor

ALARM 30, Motor phase U missing

Motor phase U between the frequency converter and the motor is missing.

Remove power from the frequency converter and check motor phase U.

ALARM 31, Motor phase V missing

Motor phase V between the frequency converter and the motor is missing.

Remove power from the frequency converter and check motor phase V.

ALARM 32, Motor phase W missing

Motor phase W between the frequency converter and the motor is missing.

Remove power from the frequency converter and check motor phase W.

ALARM 33, Inrush fault

Too many power-ups have occurred within a short time period. Let the unit cool to operating temperature.

WARNING/ALARM 34, Fieldbus communication fault

The fieldbus on the communication option card is not working.

WARNING/ALARM 36, Mains failure

This warning/alarm is only active if the supply voltage to the frequency converter is lost and *14-10 Mains Failure* is NOT set to [0] *No Function*. Check the fuses to the frequency converter and mains power supply to the unit.

ALARM 38, Internal fault

When an internal fault occurs, a code number defined in the *Table 7.6* is displayed.

Troubleshooting

- Cycle power
- Check that the option is properly installed
- Check for loose or missing wiring

Contact the Danfoss supplier or service department if required. Note the code number for further troubleshooting directions.

| No. | Text |
|-----------|--|
| 0 | Serial port cannot be initialised. Contact theDanfoss supplier or Danfoss Service Department. |
| 256-258 | Power EEPROM data is defective or too old. |
| 512 | Control board EEPROM data is defective or too old. |
| 513 | Communication time out reading EEPROM data. |
| 514 | Communication time out reading EEPROM data. |
| 515 | Application oriented control cannot recognize the EEPROM data. |
| 516 | Cannot write to the EEPROM because a write command is on progress. |
| 517 | Write command is under time out. |
| 518 | Failure in the EEPROM. |
| 519 | Missing or invalid barcode data in EEPROM. |
| 783 | Parameter value outside of min/max limits. |
| 1024-1279 | A centelegram that has to be sent couldn't be sent. |
| 1281 | Digital signal processor flash timeout. |
| 1282 | Power micro software version mismatch. |
| 1283 | Power EEPROM data version mismatch. |
| 1284 | Cannot read digital signal processor software version. |
| 1299 | Option SW in slot A is too old. |
| 1300 | Option SW in slot B is too old. |
| 1301 | Option SW in slot C0 is too old. |
| 1302 | Option SW in slot C1 is too old. |
| 1315 | Option SW in slot A is not supported (not allowed). |
| 1316 | Option SW in slot B is not supported (not allowed). |
| 1317 | Option SW in slot C0 is not supported (not allowed). |
| 1318 | Option SW in slot C1 is not supported (not allowed). |
| 1379 | Option A did not respond when calculating platform version. |
| 1380 | Option B did not respond when calculating platform version. |
| 1381 | Option C0 did not respond when calculating platform version. |
| 1382 | Option C1 did not respond when calculating platform version. |
| 1536 | An exception in the application oriented control is registered. Debug information written in LCP. |
| 1792 | DSP watchdog is active. Debugging of power part data, motor oriented control data not transferred correctly. |
| 2049 | Power data restarted. |
| 2064-2072 | H081x: option in slot x has restarted. |
| 2080-2088 | H082x: option in slot x has issued a powerup-wait. |
| 2096-2104 | H983x: option in slot x has issued a legal powerup-wait. |
| 2304 | Could not read any data from power EEPROM. |

| No. | Text |
|-----------|---|
| 2305 | Missing SW version from power unit. |
| 2314 | Missing power unit data from power unit. |
| 2315 | Missing SW version from power unit. |
| 2316 | Missint lo_statepage from power unit. |
| 2324 | Power card configuration is determined to be incorrect at power up. |
| 2325 | A power card has stopped communicating while main power is applied. |
| 2326 | Power card configuration is determined to be incorrect after the delay for power cards to register. |
| 2327 | Too many power card locations have been registered as present. |
| 2330 | Power size information between the power cards does not match. |
| 2561 | No communication from DSP to ATACD. |
| 2562 | No communication from ATACD to DSP (state running). |
| 2816 | Stack overflow control board module. |
| 2817 | Scheduler slow tasks. |
| 2818 | Fast tasks. |
| 2819 | Parameter thread. |
| 2820 | LCP stack overflow. |
| 2821 | Serial port overflow. |
| 2822 | USB port overflow. |
| 2836 | cfListMempool too small. |
| 3072-5122 | Parameter value is outside its limits. |
| 5123 | Option in slot A: Hardware incompatible with control board hardware. |
| 5124 | Option in slot B: Hardware incompatible with Control board hardware. |
| 5125 | Option in slot C0: Hardware incompatible with control board hardware. |
| 5126 | Option in slot C1: Hardware incompatible with control board hardware. |
| 5376-6231 | Out of memory. |

Table 7.5 Code Numbers for Internal Faults

ALARM 39, Heat Sink sensor

No feedback from the heatsink temperature sensor.

The signal from the IGBT thermal sensor is not available on the power card. The problem could be on the power card, on the gate drive card, or the ribbon cable between the power card and gate drive card.

WARNING 40, Overload of digital output terminal 27

Check the load connected to terminal 27 or remove short-circuit connection. Check 5-00 *Digital I/O Mode* and 5-01 *Terminal 27 Mode*.

WARNING 41, Overload of digital output terminal 29

Check the load connected to terminal 29 or remove short-circuit connection. Check 5-00 *Digital I/O Mode* and 5-02 *Terminal 29 Mode*.

WARNING 42, Overload of digital output on X30/6 or overload of digital output on X30/7

For X30/6, check the load connected to X30/6 or remove the short-circuit connection. Check 5-32 *Term X30/6 Digi Out (MCB 101)*.

For X30/7, check the load connected to X30/7 or remove the short-circuit connection. Check 5-33 *Term X30/7 Digi Out (MCB 101)*.

ALARM 46, Power card supply

The supply on the power card is out of range.

There are 3 power supplies generated by the switch mode power supply (SMPS) on the power card: 24 V, 5 V, ±18 V. When powered with 24 V DC with the MCB 107 option, only the 24 V and 5 V supplies are monitored. When powered with 3 phase mains voltage, all 3 supplies are monitored.

WARNING 47, 24 V supply low

The 24 V DC is measured on the control card. The external 24 V DC backup power supply may be overloaded, otherwise contact the Danfoss supplier.

WARNING 48, 1.8 V supply low

The 1.8 V DC supply used on the control card is outside of allowable limits. The power supply is measured on the control card. Check for a defective control card. If an option card is present, check for an overvoltage condition.

WARNING 49, Speed limit

When the speed is not within the specified range in 4-11 *Motor Speed Low Limit [RPM]* and 4-13 *Motor Speed High Limit [RPM]*, the frequency converter shows a warning. When the speed is below the specified limit in 1-86 *Trip Speed Low [RPM]* (except when starting or stopping) the frequency converter trips.

ALARM 50, AMA calibration failed

Contact the Danfoss supplier or Danfoss Service Department.

ALARM 51, AMA check U_{nom} and I_{nom}

The settings for motor voltage, motor current, and motor power are wrong. Check the settings in parameters 1-20 to 1-25.

ALARM 52, AMA low I_{nom}

The motor current is too low. Check the settings.

ALARM 53, AMA motor too big

The motor is too big for the AMA to operate.

ALARM 54, AMA motor too small

The motor is too small for the AMA to operate.

ALARM 55, AMA parameter out of range

The parameter values of the motor are outside of the acceptable range. AMA will not run.

ALARM 56, AMA interrupted by user

The user has interrupted the AMA.

ALARM 57, AMA internal fault

Try to restart AMA again a number of times, until the AMA is carried out. Note that repeated runs may heat the motor to a level where the resistance R_s and R_r are increased. In most cases, however, this is not critical.

AMA internal fault

Contact the Danfoss supplier.

WARNING 59, Current limit

The current is higher than the value in *4-18 Current Limit*. Ensure that motor data in parameters 1-20 to 1-25 are set correctly. Possibly increase the current limit. Be sure that the system can operate safely at a higher limit.

WARNING 60, External interlock

External interlock has been activated. To resume normal operation, apply 24 V DC to the terminal programmed for external interlock and reset the frequency converter (via serial communication, digital I/O, or by pressing [Reset]).

WARNING 62, Output frequency at maximum limit

The output frequency is higher than the value set in *4-19 Max Output Frequency*.

ALARM 64, Voltage Limit

The load and speed combination demands a motor voltage higher than the actual DC-link voltage.

WARNING/ALARM 65, Control card over temperature

The control card has reached its trip temperature of 75 °C.

WARNING 66, Heat sink temperature low

The frequency converter is too cold to operate. This warning is based on the temperature sensor in the IGBT module. Increase the ambient temperature of the unit. Also, a trickle amount of current can be supplied to the frequency converter whenever the motor is stopped by setting *2-00 DC Hold/Preheat Current* at 5% and *1-80 Function at Stop*.

Troubleshooting

The heatsink temperature measured as 0 °C could indicate that the temperature sensor is defective, causing the fan speed to increase to the maximum. If the sensor wire between the IGBT and the gate drive card is disconnected, this warning would result. Also, check the IGBT thermal sensor.

ALARM 67, Option module configuration has changed

One or more options have either been added or removed since the last power-down. Check that the configuration change is intentional and reset the unit.

ALARM 68, Safe Stop activated

Safe stop has been activated. To resume normal operation, apply 24 V DC to terminal 37, then send a reset signal (via Bus, Digital I/O, or by pressing [Reset]).

ALARM 69, Power card temperature

The temperature sensor on the power card is either too hot or too cold.

Troubleshooting

- Check the operation of the door fans
- Check that the filters for the door fans are not blocked
- Check that the gland plate is properly installed on IP21/IP54 (NEMA 1/12) frequency converters

ALARM 70, Illegal FC configuration

The control card and power card are incompatible. Contact the supplier with the type code of the unit from the nameplate and the part numbers of the cards to check compatibility.

ALARM 71, PTC 1 safe stop

Safe Stop has been activated from the MCB 112 PTC Thermistor Card (motor too warm). Normal operation can be resumed when the MCB 112 applies 24 V DC to T37 again (when the motor temperature reaches an acceptable level) and when the Digital Input from the MCB 112 is deactivated. When that happens, a reset signal must be sent (via Bus, Digital I/O, or by pressing [Reset]).

NOTICE

If automatic restart is enabled, the motor may start when the fault is cleared.

ALARM 72, Dangerous failure

Safe Stop with Trip Lock. Unexpected signal levels on safe stop and digital input from the MCB 112 PTC thermistor card.

WARNING 73, Safe Stop auto restart

Safe stopped. With automatic restart enabled, the motor may start when the fault is cleared.

WARNING 76, Power unit setup

The required number of power units does not match the detected number of active power units.

Troubleshooting:

When replacing an F-frame module, this occurs if the power specific data in the module power card does not match the rest of the frequency converter. Confirm the spare part and its power card are the correct part number.

WARNING 77, Reduced power mode

This warning indicates that the frequency converter is operating in reduced power mode (i.e. less than the allowed number of inverter sections). This warning is generated on power cycle when the frequency converter is set to run with fewer inverters and remains on.

ALARM 79, Illegal power section configuration

The scaling card is the incorrect part number or not installed. Also MK102 connector on the power card could not be installed.

ALARM 80, Drive initialised to default value

Parameter settings are initialised to default settings after a manual reset. Reset the unit to clear the alarm.

ALARM 81, CSIV corrupt

CSIV (Customer Specific Initialisation Values) file has syntax errors.

ALARM 82, CSIV parameter error

CSIV (Customer Specific Initialisation Values) failed to init a parameter.

ALARM 85, Dang fail PB

Profibus/Profisafe Error.

ALARM 92, No flow

A no-flow condition has been detected in the system. 22-23 *No-Flow Function* is set for alarm. Troubleshoot the system and reset the frequency converter after the fault has been cleared.

ALARM 93, Dry pump

A no-flow condition in the system with the frequency converter operating at high speed may indicate a dry pump. 22-26 *Dry Pump Function* is set for alarm. Troubleshoot the system and reset the frequency converter after the fault has been cleared.

ALARM 94, End of curve

Feedback is lower than the set point. This may indicate leakage in the system. 22-50 *End of Curve Function* is set for alarm. Troubleshoot the system and reset the frequency converter after the fault has been cleared.

ALARM 95, Broken belt

Torque is below the torque level set for no load, indicating a broken belt. 22-60 *Broken Belt Function* is set for alarm. Troubleshoot the system and reset the frequency converter after the fault has been cleared.

ALARM 100, Derag limit fault

The Deragging feature failed during execution. Check pump impeller for blockage.

WARNING/ALARM 104, Mixing fan fault

The fan monitor checks that the fan is spinning at frequency converter power-up or whenever the mixing fan is turned on. If the fan is not operating, then the fault is annunciated. The mixing-fan fault can be configured as a warning or an alarm trip by 14-53 *Fan Monitor*.

Troubleshooting

Cycle power to the frequency converter to determine if the warning/alarm returns.

WARNING 250, New spare part

A component in the frequency converter has been replaced. Reset the frequency converter for normal operation.

WARNING 251, New typecode

The power card or other components have been replaced and the typecode changed. Reset to remove the warning and resume normal operation.

7.5 Troubleshooting

| Symptom | Possible cause | Test | Solution |
|-------------------------------------|---|--|--|
| Display dark/No function | Missing input power | See <i>Table 4.4</i> . | Check the input power source. |
| | Missing or open fuses or circuit breaker tripped | See open fuses and tripped circuit breaker in this table for possible causes. | Follow the recommendations provided. |
| | No power to the LCP | Check the LCP cable for proper connection or damage. | Replace the faulty LCP or connection cable. |
| | Shortcut on control voltage (terminal 12 or 50) or at control terminals | Check the 24 V control voltage supply for terminals 12/13 to 20-39 or 10 V supply for terminals 50 to 55. | Wire the terminals properly. |
| | Incompatible LCP (LCP from VLT® 2800 or 5000/6000/8000/FCD or FCM) | | Use only LCP 101 (P/N 130B1124) or LCP 102 (P/N 130B1107). |
| | Wrong contrast setting | | Press [Status] + [▲]/[▼] to adjust the contrast. |
| | Display (LCP) is defective | Test using a different LCP. | Replace the faulty LCP or connection cable. |
| | Internal voltage supply fault or SMPS is defective | | Contact supplier. |
| Intermittent display | Overloaded power supply (SMPS) due to improper control wiring or a fault within the frequency converter | To rule out a problem in the control wiring, disconnect all control wiring by removing the terminal blocks. | If the display stays lit, then the problem is in the control wiring. Check the wiring for short circuits or incorrect connections. If the display continues to cut out, follow the procedure for display dark. |
| Motor not running | Service switch open or missing motor connection | Check if the motor is connected and the connection is not interrupted (by a service switch or other device). | Connect the motor and check the service switch. |
| | No mains power with 24 V DC option card | If the display is functioning but no output, check that mains power is applied to the frequency converter. | Apply mains power to run the unit. |
| | LCP Stop | Check if [Off] has been pressed. | Press [Auto On] or [Hand On] (depending on operation mode) to run the motor. |
| | Missing start signal (Standby) | Check <i>5-10 Terminal 18 Digital Input</i> for correct setting for terminal 18 (use default setting). | Apply a valid start signal to start the motor. |
| | Motor coast signal active (Coasting) | Check <i>5-12 Coast inv.</i> for correct setting for terminal 27 (use default setting). | Apply 24 V on terminal 27 or program this terminal to <i>No operation</i> . |
| | Wrong reference signal source | Check reference signal: Local, remote or bus reference? Preset reference active? Terminal connection correct? Scaling of terminals correct? Reference signal available? | Program correct settings. Check <i>3-13 Reference Site</i> . Set preset reference active in parameter group <i>3-1* References</i> . Check for correct wiring. Check scaling of terminals. Check reference signal. |
| Motor running in wrong direction | Motor rotation limit | Check that <i>4-10 Motor Speed Direction</i> is programmed correctly. | Program correct settings. |
| | Active reversing signal | Check if a reversing command is programmed for the terminal in parameter group <i>5-1* Digital inputs</i> . | Deactivate reversing signal. |
| | Wrong motor phase connection | | See <i>5.5 Checking Motor Rotation</i> . |
| Motor is not reaching maximum speed | Frequency limits set wrong | Check output limits in <i>4-13 Motor Speed High Limit [RPM]</i> , <i>4-14 Motor Speed High Limit [Hz]</i> and <i>4-19 Max Output Frequency</i> . | Program correct limits. |
| | Reference input signal not scaled correctly | Check reference input signal scaling in <i>6-0* Analog I/O Mode</i> and parameter group <i>3-1* References</i> . Reference limits in parameter group <i>3-0* Reference Limit</i> . | Program correct settings. |

| Symptom | Possible cause | Test | Solution |
|---|---|---|---|
| Motor speed unstable | Possible incorrect parameter settings | Check the settings of all motor parameters, including all motor compensation settings. For closed-loop operation, check PID settings. | Check settings in parameter group 1-6* <i>Load Depen. Setting</i> . For closed-loop operation, check settings in parameter group 20-0* <i>Feedback</i> . |
| Motor runs rough | Possible over-magnetisation | Check for incorrect motor settings in all motor parameters. | Check motor settings in parameter groups 1-2* <i>Motor Data</i> , 1-3* <i>Adv Motor Data</i> , and 1-5* <i>Load Indep. Setting</i> . |
| Motor will not brake | Possible incorrect settings in the brake parameters. Possible too short ramp-down times | Check brake parameters. Check ramp-time settings. | Check parameter group 2-0* <i>DC Brake</i> and 3-0* <i>Reference Limits</i> . |
| Open power fuses or circuit breaker trip | Phase to phase short | Motor or panel has a short phase to phase. Check motor and panel phase for shorts. | Eliminate any short circuits detected. |
| | Motor overload | Motor is overloaded for the application. | Perform startup test and verify motor current is within specifications. If motor current is exceeding nameplate full load current, motor may run only with reduced load. Review the specifications for the application. |
| | Loose connections | Perform pre-startup check for loose connections. | Tighten loose connections. |
| Mains current imbalance greater than 3% | Problem with mains power (See <i>Alarm 4 Mains phase loss</i> description) | Rotate input power leads into the frequency converter 1 position: A to B, B to C, C to A. | If imbalanced leg follows the wire, it is a power problem. Check mains power supply. |
| | Problem with the frequency converter | Rotate input power leads into the frequency converter 1 position: A to B, B to C, C to A. | If imbalance leg stays on same input terminal, it is a problem with the unit. Contact the supplier. |
| Motor current imbalance greater than 3% | Problem with motor or motor wiring | Rotate output motor leads 1 position: U to V, V to W, W to U. | If imbalanced leg follows the wire, the problem is in the motor or motor wiring. Check motor and motor wiring. |
| | Problem with the frequency converter | Rotate output motor leads 1 position: U to V, V to W, W to U. | If imbalance leg stays on same output terminal, it is a problem with the unit. Contact the supplier. |
| Frequency converter acceleration problems | Motor data are entered incorrectly | If warnings or alarms occur, see 7.4 <i>List of Warnings and Alarms</i> . Check that motor data are entered correctly. | Increase the ramp-up time in 3-41 <i>Ramp 1 Ramp Up Time</i> . Increase current limit in 4-18 <i>Current Limit</i> . Increase torque limit in 4-16 <i>Torque Limit Motor Mode</i> . |
| Frequency converter deceleration problems | Motor data are entered incorrectly | If warnings or alarms occur, see 7.4 <i>List of Warnings and Alarms</i> . Check that motor data are entered correctly. | Increase the ramp-down time in 3-42 <i>Ramp 1 Ramp Down Time</i> . Enable overvoltage control in 2-17 <i>Over-voltage Control</i> . |
| Acoustic noise or vibration | Resonances | Bypass critical frequencies by using parameters in parameter group 4-6* <i>Speed Bypass</i> . | Check if noise and/or vibration have been reduced to an acceptable limit. |
| | | Turn off over-modulation in 14-03 <i>Overmodulation</i> . | |
| | | Change switching pattern and frequency in parameter group 14-0* <i>Inverter Switching</i> . | |
| | | Increase Resonance Dampening in 1-64 <i>Resonance Dampening</i> . | |

Table 7.6 Troubleshooting

8 Specifications

8.1 Electrical Data

8.1.1 Mains Supply 1x200-240 V AC

| Type Designation | P1K1 | P1K5 | P2K2 | P3K0 | P3K7 | P5K5 | P7K5 | P15K | P22K |
|--|----------------|------|------|------|------|----------|----------|------------|------------|
| Typical Shaft Output [kW] | 1.1 | 1.5 | 2.9 | 4.0 | 4.9 | 7.5 | 10 | 20 | 30 |
| Typical Shaft Output [HP] at 240 V | 1.5 | 2.0 | 2.9 | 4.0 | 4.9 | 7.5 | 10 | 20 | 30 |
| IP20/Chassis | A3 | - | - | - | - | - | - | - | - |
| IP21/Type 1 | - | B1 | B1 | B1 | B1 | B1 | B2 | C1 | C2 |
| IP55/Type 12 | A5 | B1 | B1 | B1 | B1 | B1 | B2 | C1 | C2 |
| IP66/NEMA 4X | A5 | B1 | B1 | B1 | B1 | B1 | B2 | C1 | C2 |
| Output current | | | | | | | | | |
| Continuous (3x200-240 V) [A] | 6.6 | 7.5 | 10.6 | 12.5 | 16.7 | 24.2 | 30.8 | 59.4 | 88 |
| Intermittent (3x200-240 V) [A] | 7.3 | 8.3 | 11.7 | 13.8 | 18.4 | 26.6 | 33.4 | 65.3 | 96.8 |
| Continuous kVA (208 V AC) [kVA] | - | - | - | - | - | 5.00 | 6.40 | 12.27 | 18.30 |
| Max. input current | | | | | | | | | |
| Continuous (1x200-240 V) [A] | 12.5 | 15 | 20.5 | 24 | 32 | 46 | 59 | 111 | 172 |
| Intermittent (1x200-240 V) [A] | 13.8 | 16.5 | 22.6 | 26.4 | 35.2 | 50.6 | 64.9 | 122.1 | 189.2 |
| Max. pre-fuses ¹⁾ [A] | 20 | 30 | 40 | 40 | 60 | 80 | 100 | 150 | 200 |
| Additional specifications | | | | | | | | | |
| Estimated power loss at rated max. load [W] ⁴⁾ | 44 | 30 | 44 | 60 | 74 | 110 | 150 | 300 | 440 |
| Max. cable size (mains, motor, brake) [mm ²]/(AWG) ²⁾ | [0.2-4]/(4-10) | | | | | [10]/(7) | [35]/(2) | [50]/(1/0) | [95]/(4/0) |
| Efficiency ³⁾ | 0.968 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 |

Table 8.1 Mains Supply 1x200-240 V AC - Normal Overload 110% for 1 Minute, P1K1-P22K

8.1.2 Mains Supply 3x200-240 V AC

| Type Designation | PK25 | PK37 | PK55 | PK75 | P1K1 | P1K5 | P2K2 | P3K0 | P3K7 |
|--|----------------|------|------|------|------|------|------|------|------|
| Typical Shaft Output [kW] | 0.25 | 0.37 | 0.55 | 0,75 | 1.1 | 1.5 | 2.2 | 3.0 | 3.7 |
| Typical Shaft Output [HP] at 208 V | 0.25 | 0.37 | 0.55 | 0,75 | 1.5 | 2.0 | 2.9 | 4.0 | 4.9 |
| IP20/Chassis ⁶⁾ | A2 | A2 | A2 | A2 | A2 | A2 | A2 | A3 | A3 |
| IP21/Type 1 | A2 | A2 | A2 | A2 | A2 | A2 | A2 | A3 | A3 |
| IP55/Type 12 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 |
| IP66/NEMA 4X | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 |
| Output current | | | | | | | | | |
| Continuous (3x200-240 V) [A] | 1.8 | 2.4 | 3.5 | 4.6 | 6.6 | 7.5 | 10.6 | 12.5 | 16.7 |
| Intermittent (3x200-240 V) [A] | 1.98 | 2.64 | 3.85 | 5.06 | 7.26 | 8.3 | 11.7 | 13.8 | 18.4 |
| Continuous kVA (208 V AC) [kVA] | 0.65 | 0.86 | 1.26 | 1.66 | 2.38 | 2.70 | 3.82 | 4.50 | 6.00 |
| Max. input current | | | | | | | | | |
| Continuous (3x200-240 V) [A] | 1.6 | 2.2 | 3.2 | 4.1 | 5.9 | 6.8 | 9.5 | 11.3 | 15.0 |
| Intermittent (3x200-240 V) [A] | 1.7 | 2.42 | 3.52 | 4.51 | 6.5 | 7.5 | 10.5 | 12.4 | 16.5 |
| Max. pre-fuses ¹⁾ [A] | 10 | 10 | 10 | 10 | 20 | 20 | 20 | 32 | 32 |
| Additional Specifications | | | | | | | | | |
| Estimated power loss at rated max. load [W] ⁴⁾ | 21 | 29 | 42 | 54 | 63 | 82 | 116 | 155 | 185 |
| Max. cable size (mains, motor, brake) [mm ²]/(AWG) ²⁾ | [0.2-4]/(4-10) | | | | | | | | |
| Efficiency ³⁾ | 0.94 | 0.94 | 0.95 | 0.95 | 0.96 | 0.96 | 0.96 | 0.96 | 0.96 |

Table 8.2 Mains Supply 3x200-240 V AC - Normal overload 110% for 1 minute, PK25-P3K7

| Type Designation | P5K5 | P7K5 | P11K | P15K | P18K | P22K | P30K | P37K | P45K |
|--|----------|------|----------|------------|------|------|------------|-----------------|-------|
| Typical Shaft Output [kW] | 5.5 | 7.5 | 11 | 15 | 18.5 | 22 | 30 | 37 | 45 |
| Typical Shaft Output [HP] at 208 V | 7.5 | 10 | 15 | 20 | 25 | 30 | 40 | 50 | 60 |
| IP20/Chassis ⁷⁾ | B3 | B3 | B3 | B4 | B4 | C3 | C3 | C4 | C4 |
| IP21/Type 1 | B1 | B1 | B1 | B2 | C1 | C1 | C1 | C2 | C2 |
| IP55/Type 12 | B1 | B1 | B1 | B2 | C1 | C1 | C1 | C2 | C2 |
| IP66/NEMA 4X | B1 | B1 | B1 | B2 | C1 | C1 | C1 | C2 | C2 |
| Output current | | | | | | | | | |
| Continuous (3x200-240 V) [A] | 24.2 | 30.8 | 46.2 | 59.4 | 74.8 | 88.0 | 115 | 143 | 170 |
| Intermittent (3x200-240 V) [A] | 26.6 | 33.9 | 50.8 | 65.3 | 82.3 | 96.8 | 127 | 157 | 187 |
| Continuous kVA (208 V AC) [kVA] | 8.7 | 11.1 | 16.6 | 21.4 | 26.9 | 31.7 | 41.4 | 51.5 | 61.2 |
| Max. input current | | | | | | | | | |
| Continuous (3x200-240 V) [A] | 22.0 | 28.0 | 42.0 | 54.0 | 68.0 | 80.0 | 104.0 | 130.0 | 154.0 |
| Intermittent (3x200-240 V) [A] | 24.2 | 30.8 | 46.2 | 59.4 | 74.8 | 88.0 | 114.0 | 143.0 | 169.0 |
| Max. pre-fuses ¹⁾ [A] | 63 | 63 | 63 | 80 | 125 | 125 | 160 | 200 | 250 |
| Additional Specifications | | | | | | | | | |
| Estimated power loss at rated max. load [W] ⁴⁾ | 269 | 310 | 447 | 602 | 737 | 845 | 1140 | 1353 | 1636 |
| Max. cable size (mains, motor, brake) [mm ² /(AWG)] ²⁾ | [10]/(7) | | [35]/(2) | [50]/(1/0) | | | [95]/(4/0) | [120]/(250 MCM) | |
| Efficiency ³⁾ | 0.96 | 0.96 | 0.96 | 0.96 | 0.96 | 0.97 | 0.97 | 0.97 | 0.97 |

Table 8.3 Mains Supply 3x200-240 V AC - Normal overload 110% for 1 minute, P5K5-P45K

8.1.3 Mains Supply 1x380-480 V AC

| Type Designation | P7K5 | P11K | P18K | P37K |
|--|----------|----------|------------|-------------|
| Typical Shaft Output [kW] | 7.5 | 11 | 18.5 | 37 |
| Typical Shaft Output [HP] at 240 V | 10 | 15 | 25 | 50 |
| IP21/Type 1 | B1 | B2 | C1 | C2 |
| IP55/Type 12 | B1 | B2 | C1 | C2 |
| IP66/NEMA 4X | B1 | B2 | C1 | C2 |
| Output current | | | | |
| Continuous (3x380-440 V) [A] | 16 | 24 | 37.5 | 73 |
| Intermittent (3x380-440 V) [A] | 17.6 | 26.4 | 41.2 | 80.3 |
| Continuous (3x441-480 V) [A] | 14.5 | 21 | 34 | 65 |
| Intermittent (3x441-480 V) [A] | 15.4 | 23.1 | 37.4 | 71.5 |
| Continuous kVA (400 V AC) [kVA] | 11.0 | 16.6 | 26 | 50.6 |
| Continuous kVA (460 V AC) [kVA] | 11.6 | 16.7 | 27.1 | 51.8 |
| Max. input current | | | | |
| Continuous (1x380-440 V) [A] | 33 | 48 | 78 | 151 |
| Intermittent (1x380-440 V) [A] | 36 | 53 | 85.5 | 166 |
| Continuous (1x441-480 V) [A] | 30 | 41 | 72 | 135 |
| Intermittent (1x441-480 V) [A] | 33 | 46 | 79.2 | 148 |
| Max. pre-fuses ¹⁾ [A] | 63 | 80 | 160 | 250 |
| Additional specifications | | | | |
| Estimated power loss at rated max. load [W] ⁴⁾ | 300 | 440 | 740 | 1480 |
| Max. cable size (mains, motor, brake) [mm ²]/(AWG) ²⁾ | [10]/(7) | [35]/(2) | [50]/(1/0) | [120]/(4/0) |
| Efficiency ³⁾ | 0.96 | 0.96 | 0.96 | 0.96 |

Table 8.4 Mains Supply 1x380-480 V AC - Normal Overload 110% for 1 Minute, P7K5-P37K

8.1.4 Mains Supply 3x380-480 V AC

| Type Designation | PK37 | PK55 | PK75 | P1K1 | P1K5 | P2K2 | P3K0 | P4K0 | P5K5 | P7K5 |
|--|----------|------|------|------|------|------|------|------|------|------|
| Typical Shaft Output [kW] | 0.37 | 0.55 | 0.75 | 1.1 | 1.5 | 2.2 | 3.0 | 4.0 | 5.5 | 7.5 |
| Typical Shaft Output [HP] at 460 V | 0.5 | 0.75 | 1.0 | 1.5 | 2.0 | 2.9 | 4.0 | 5.3 | 7.5 | 10 |
| IP20/Chassis ⁶⁾ | A2 | A2 | A2 | A2 | A2 | A2 | A2 | A2 | A3 | A3 |
| IP21/Type 1 | - | - | - | - | - | - | - | - | - | - |
| IP55/Type 12 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 |
| IP66/NEMA 4X | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 |
| Output current | | | | | | | | | | |
| Continuous (3x380-440 V) [A] | 1.3 | 1.8 | 2.4 | 3.0 | 4.1 | 5.6 | 7.2 | 10 | 13 | 16 |
| Intermittent (3x380-440 V) [A] | 1.43 | 1.98 | 2.64 | 3.3 | 4.5 | 6.2 | 7.9 | 11 | 14.3 | 17.6 |
| Continuous (3x441-480 V) [A] | 1.2 | 1.6 | 2.1 | 2.7 | 3.4 | 4.8 | 6.3 | 8.2 | 11 | 14.5 |
| Intermittent (3x441-480 V) [A] | 1.32 | 1.76 | 2.31 | 3.0 | 3.7 | 5.3 | 6.9 | 9.0 | 12.1 | 15.4 |
| Continuous kVA (400 V AC) [kVA] | 0.9 | 1.3 | 1.7 | 2.1 | 2.8 | 3.9 | 5.0 | 6.9 | 9.0 | 11.0 |
| Continuous kVA (460 V AC) [kVA] | 0.9 | 1.3 | 1.7 | 2.4 | 2.7 | 3.8 | 5.0 | 6.5 | 8.8 | 11.6 |
| Max. input current | | | | | | | | | | |
| Continuous (3x380-440 V) [A] | 1.2 | 1.6 | 2.2 | 2.7 | 3.7 | 5.0 | 6.5 | 9.0 | 11.7 | 14.4 |
| Intermittent (3x380-440 V) [A] | 1.32 | 1.76 | 2.42 | 3.0 | 4.1 | 5.5 | 7.2 | 9.9 | 12.9 | 15.8 |
| Continuous (3x441-480 V) [A] | 1.0 | 1.4 | 1.9 | 2.7 | 3.1 | 4.3 | 5.7 | 7.4 | 9.9 | 13.0 |
| Intermittent (3x441-480 V) [A] | 1.1 | 1.54 | 2.09 | 3.0 | 3.4 | 4.7 | 6.3 | 8.1 | 10.9 | 14.3 |
| Max. pre-fuses ¹⁾ [A] | 10 | 10 | 10 | 10 | 10 | 20 | 20 | 20 | 30 | 30 |
| Additional specifications | | | | | | | | | | |
| Estimated power loss at rated max. load [W] ⁴⁾ | 35 | 42 | 46 | 58 | 62 | 88 | 116 | 124 | 187 | 225 |
| Max. cable size (mains, motor, brake) [mm ²]/(AWG) ²⁾ | [4]/(10) | | | | | | | | | |
| Efficiency ³⁾ | 0.93 | 0.95 | 0.96 | 0.96 | 0.97 | 0.97 | 0.97 | 0.97 | 0.97 | 0.97 |

Table 8.5 Mains Supply 3x380-480 V AC - Normal overload 110% for 1 minute, PK37-P7K5

| Type Designation | P11K | P15K | P18K | P22K | P30K | P37K | P45K | P55K | P75K | P90K |
|--|----------|------|------|----------|------|------------|------|------|-------------|-------------|
| Typical Shaft Output [kW] | 11 | 15 | 18.5 | 22 | 30 | 37 | 45 | 55 | 75 | 90 |
| Typical Shaft Output [HP] at 460 V | 15 | 20 | 25 | 30 | 40 | 50 | 60 | 75 | 100 | 125 |
| IP20/Chassis ⁷⁾ | B3 | B3 | B3 | B4 | B4 | B4 | C3 | C3 | C4 | C4 |
| IP21/Type 1 | B1 | B1 | B1 | B2 | B2 | C1 | C1 | C1 | C2 | C2 |
| IP55/Type 12 | B1 | B1 | B1 | B2 | B2 | C1 | C1 | C1 | C2 | C2 |
| IP66/NEMA 4X | B1 | B1 | B1 | B2 | B2 | C1 | C1 | C1 | C2 | C2 |
| Output current | | | | | | | | | | |
| Continuous (3x380-440 V) [A] | 24 | 32 | 37.5 | 44 | 61 | 73 | 90 | 106 | 147 | 177 |
| Intermittent (3x380-440 V) [A] | 26.4 | 35.2 | 41.3 | 48.4 | 67.1 | 80.3 | 99 | 117 | 162 | 195 |
| Continuous (3x441-480 V) [A] | 21 | 27 | 34 | 40 | 52 | 65 | 80 | 105 | 130 | 160 |
| Intermittent (3x441-480 V) [A] | 23.1 | 29.7 | 37.4 | 44 | 61.6 | 71.5 | 88 | 116 | 143 | 176 |
| Continuous kVA (400 V AC) [kVA] | 16.6 | 22.2 | 26 | 30.5 | 42.3 | 50.6 | 62.4 | 73.4 | 102 | 123 |
| Continuous kVA (460 V AC) [kVA] | 16.7 | 21.5 | 27.1 | 31.9 | 41.4 | 51.8 | 63.7 | 83.7 | 104 | 128 |
| Max. input current | | | | | | | | | | |
| Continuous (3x380-440 V) [A] | 22 | 29 | 34 | 40 | 55 | 66 | 82 | 96 | 133 | 161 |
| Intermittent (3x380-440 V) [A] | 24.2 | 31.9 | 37.4 | 44 | 60.5 | 72.6 | 90.2 | 106 | 146 | 177 |
| Continuous (3x441-480 V) [A] | 19 | 25 | 31 | 36 | 47 | 59 | 73 | 95 | 118 | 145 |
| Intermittent (3x441-480 V) [A] | 20.9 | 27.5 | 34.1 | 39.6 | 51.7 | 64.9 | 80.3 | 105 | 130 | 160 |
| Max. pre-fuses ¹⁾ [A] | 63 | 63 | 63 | 63 | 80 | 100 | 125 | 160 | 250 | 250 |
| Additional specifications | | | | | | | | | | |
| Estimated power loss at rated max. load [W] ⁴⁾ | 278 | 392 | 465 | 525 | 698 | 739 | 843 | 1083 | 1384 | 1474 |
| Max. cable size (mains, motor, brake) [mm ²]/(AWG) ²⁾ | [10]/(7) | | | [35]/(2) | | [50]/(1/0) | | | [120]/(4/0) | [120]/(4/0) |
| Efficiency ³⁾ | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.99 |

Table 8.6 Mains Supply 3x380-480 V AC - Normal overload 110% for 1 minute, P11K-P90K

8.1.5 Mains Supply 3x525-600 V AC

| Type Designation | PK75 | P1K1 | P1K5 | P2K2 | P3K0 | P4K0 | P5K5 | P7K5 | P11K |
|--|-----------------|------|------|------|------|------|------|------|----------|
| Typical Shaft Output [kW] | 0.75 | 1.1 | 1.5 | 2.2 | 3.0 | 4.0 | 5.5 | 7.5 | 11 |
| IP20/Chassis | A2 | A2 | A2 | A2 | A2 | A2 | A3 | A3 | B3 |
| IP21/Type 1 | A2 | A2 | A2 | A2 | A2 | A2 | A3 | A3 | B1 |
| IP55/Type 12 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | B1 |
| IP66/NEMA 4X | A5 | A5 | A5 | A5 | A5 | A5 | A5 | A5 | B1 |
| Output current | | | | | | | | | |
| Continuous (3x525-550 V) [A] | 1.8 | 2.6 | 2.9 | 4.1 | 5.2 | 6.4 | 9.5 | 11.5 | 19 |
| Intermittent (3x525-550 V) [A] | - | 2.9 | 3.2 | 4.5 | 5.7 | 7.0 | 10.5 | 12.7 | 21 |
| Continuous (3x525-600 V) [A] | 1.7 | 2.4 | 2.7 | 3.9 | 4.9 | 6.1 | 9.0 | 11.0 | 18 |
| Intermittent (3x525-600 V) [A] | - | 2.6 | 3.0 | 4.3 | 5.4 | 6.7 | 9.9 | 12.1 | 20 |
| Continuous kVA (525 V AC) [kVA] | 1.7 | 2.5 | 2.8 | 3.9 | 5.0 | 6.1 | 9.0 | 11.0 | 18.1 |
| Continuous kVA (575 V AC) [kVA] | 1.7 | 2.4 | 2.7 | 3.9 | 4.9 | 6.1 | 9.0 | 11.0 | 17.9 |
| Max. input current | | | | | | | | | |
| Continuous (3x525-600 V) [A] | 1.7 | 2.4 | 2.7 | 4.1 | 5.2 | 5.8 | 8.6 | 10.4 | 17.2 |
| Intermittent (3x525-600 V) [A] | - | 2.7 | 3.0 | 4.5 | 5.7 | 6.4 | 9.5 | 11.5 | 19 |
| Max. pre-fuses ¹⁾ [A] | 10 | 10 | 10 | 20 | 20 | 20 | 32 | 32 | 40 |
| Additional specifications | | | | | | | | | |
| Estimated power loss at rated max. load [W] ⁴⁾ | 35 | 50 | 65 | 92 | 122 | 145 | 195 | 261 | 225 |
| Max. cable size (mains, motor, brake) [mm ²]/(AWG) ²⁾ | [0.2-4]/(24-10) | | | | | | | | [16]/(6) |
| Efficiency ³⁾ | 0.97 | 0.97 | 0.97 | 0.97 | 0.97 | 0.97 | 0.97 | 0.97 | 0.98 |

Table 8.7 Mains Supply 3x525-600 V AC - Normal overload 110% for 1 minute, PK75-P11K

| Type Designation | P15K | P18K | P22K | P30K | P37K | P45K | P55K | P75K | P90K |
|--|------|------|----------|------|------|----------|------|---------------------------|-------|
| Typical Shaft Output [kW] | 15 | 18.5 | 22 | 30 | 37 | 45 | 55 | 75 | 90 |
| IP20/Chassis | B3 | B3 | B4 | B4 | B4 | C3 | C3 | C4 | C4 |
| IP21/Type 1 | B1 | B1 | B2 | B2 | B2 | C1 | C1 | C2 | C2 |
| IP55/Type 12 | B1 | B1 | B2 | B2 | B2 | C1 | C1 | C2 | C2 |
| IP66/NEMA 4X | B1 | B1 | B2 | B2 | B2 | C1 | C1 | C2 | C2 |
| Output current | | | | | | | | | |
| Continuous (3x525-550 V) [A] | 23 | 28 | 36 | 43 | 54 | 65 | 87 | 105 | 137 |
| Intermittent (3x525-550 V) [A] | 25 | 31 | 40 | 47 | 59 | 72 | 96 | 116 | 151 |
| Continuous (3x525-600 V) [A] | 22 | 27 | 34 | 41 | 52 | 62 | 83 | 100 | 131 |
| Intermittent (3x525-600 V) [A] | 24 | 30 | 37 | 45 | 57 | 68 | 91 | 110 | 144 |
| Continuous kVA (525 V AC) [kVA] | 21.9 | 26.7 | 34.3 | 41 | 51.4 | 61.9 | 82.9 | 100 | 130.5 |
| Continuous kVA (575 V AC) [kVA] | 21.9 | 26.9 | 33.9 | 40.8 | 51.8 | 61.7 | 82.7 | 99.6 | 130.5 |
| Max. input current | | | | | | | | | |
| Continuous (3x525-600 V) [A] | 20.9 | 25.4 | 32.7 | 39 | 49 | 59 | 78.9 | 95.3 | 124.3 |
| Intermittent (3x525-600 V) [A] | 23 | 28 | 36 | 43 | 54 | 65 | 87 | 105 | 137 |
| Max. pre-fuses ¹⁾ [A] | 40 | 50 | 60 | 80 | 100 | 150 | 160 | 225 | 250 |
| Additional specifications | | | | | | | | | |
| Estimated power loss at rated max. load [W] ⁴⁾ | 285 | 329 | 460 | 560 | 740 | 860 | 890 | 1020 | 1130 |
| Max. cable size (mains, motor, brake) [mm ²]/(AWG) ²⁾ | - | | [35]/(2) | | | [50]/(1) | | [95 ⁵⁾]/(3/0) | |
| Efficiency ³⁾ | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 |

Table 8.8 Mains supply 3x525-600 V AC - Normal overload 110% for 1 minute, P15K-P90K

8.1.6 Mains Supply 3x525-690 V AC

| Type Designation | P1K1 | P1K5 | P2K2 | P3K0 | P4K0 | P5K5 | P7K5 |
|--|--------------------------------------|------|------|------|------|------|------|
| Typical Shaft output (kW) | 1.1 | 1.5 | 2.2 | 3.0 | 4.0 | 5.5 | 7.5 |
| IP20/ Chassis | A3 | A3 | A3 | A3 | A3 | A3 | A3 |
| Output current | | | | | | | |
| Continuous (3x525-550 V) [A] | 2.1 | 2.7 | 3.9 | 4.9 | 6.1 | 9.0 | 11.0 |
| Intermittent (3x525-550 V) [A] | 3.4 | 4.3 | 6.2 | 7.8 | 9.8 | 14.4 | 17.6 |
| Continuous (3x551-690 V) [A] | 1.6 | 2.2 | 3.2 | 4.5 | 5.5 | 7.5 | 10.0 |
| Intermittent (3x551-690 V) [A] | 2.6 | 3.5 | 5.1 | 7.2 | 8.8 | 12.0 | 16.0 |
| Continuous KVA 525 V AC | 1.9 | 2.5 | 3.5 | 4.5 | 5.5 | 8.2 | 10.0 |
| Continuous KVA 690 V AC | 1.9 | 2.6 | 3.8 | 5.4 | 6.6 | 9.0 | 12.0 |
| Max. input current | | | | | | | |
| Continuous (3x525-550 V) [A] | 1.9 | 2.4 | 3.5 | 4.4 | 5.5 | 8.1 | 9.9 |
| Intermittent (3x525-550 V) [A] | 3.0 | 3.9 | 5.6 | 7.0 | 8.8 | 12.9 | 15.8 |
| Continuous (3x551-690 V) [A] | 1.4 | 2.0 | 2.9 | 4.0 | 4.9 | 6.7 | 9.0 |
| Intermittent (3x551-690 V) [A] | 2.3 | 3.2 | 4.6 | 6.5 | 7.9 | 10.8 | 14.4 |
| Additional specifications | | | | | | | |
| Max. cable cross-section ⁵⁾ for mains, motor, brake and load sharing [mm ²] ([AWG]) | 4, 4, 4 (12, 12, 12) (min. 0.2 (24)) | | | | | | |
| Max. Cable cross-section ⁵⁾ for disconnect [mm ²] ([AWG]) | 6, 4, 4 (10, 12, 12) | | | | | | |
| Estimated power loss at rated max. load (W) ⁴⁾ | 44 | 60 | 88 | 120 | 160 | 220 | 300 |
| Efficiency ³⁾ | 0.96 | 0.96 | 0.96 | 0.96 | 0.96 | 0.96 | 0.96 |

8

Table 8.9 A3 Enclosure, Mains Supply 3x525-690 V AC IP20/Protected Chassis, P1K1-P7K5

| Type Designation | P11K | P15K | P18K | P22K |
|---|----------------------|------|------|------|
| Typical Shaft output at 550 V [kW] | 11 | 15 | 18.5 | 22 |
| Typical Shaft output at 690 V [kW] | 15 | 18.5 | 22 | 30 |
| IP20/Chassis | B4 | B4 | B4 | B4 |
| IP21/Type 1, IP55/Type 12 | B2 | B2 | B2 | B2 |
| Output current | | | | |
| Continuous (3x525-550 V) [A] | 19.0 | 23.0 | 28.0 | 36.0 |
| Intermittent (60 s overload) (3x525-550 V) [A] | 20.9 | 25.3 | 30.8 | 39.6 |
| Continuous (3x551-690 V) [A] | 18.0 | 22.0 | 27.0 | 34.0 |
| Intermittent (60 s overload) (3x551-690 V) [A] | 19.8 | 24.2 | 29.7 | 37.4 |
| continuous KVA (at 550 V) [KVA] | 18.1 | 21.9 | 26.7 | 34.3 |
| continuous KVA (at 690 V AC) [KVA] | 21.5 | 26.3 | 32.3 | 40.6 |
| Max. input current | | | | |
| Continuous (at 550 V) (A) | 19.5 | 24.0 | 29.0 | 36.0 |
| Intermittent (60 s overload) (at 550 V) (A) | 21.5 | 26.4 | 31.9 | 39.6 |
| Continuous (at 690 V) (A) | 19.5 | 24.0 | 29.0 | 36.0 |
| Intermittent (60 s overload) (at 690 V) (A) | 21.5 | 26.4 | 31.9 | 39.6 |
| Additional specifications | | | | |
| Max. cable cross-section ⁵⁾ for mains/motor, load share and brake [mm ²] ([AWG]) | 35, 25, 25 (2, 4, 4) | | | |
| Max cable cross-section ⁵⁴⁾ for mains disconnect [mm ²] ([AWG]) | 16,10,10 (6, 8, 8) | | | |
| Estimated power loss at rated max. load (W) ⁴⁾ | 220 | 300 | 370 | 440 |
| Efficiency ³⁾ | 0.98 | 0.98 | 0.98 | 0.98 |

Table 8.10 B2/B4 Enclosure, Mains Supply 3x525-690 V AC IP20/IP21/IP55 - Chassis/NEMA 1/NEMA 12, P11K-P22K

| Type Designation | P30K | P37K | P45K | P55K | P75K |
|---|-------------------------------|------|------|--|-------|
| Typical Shaft output at 550 V (kW) | 30 | 37 | 45 | 55 | 75 |
| Typical Shaft output at 690 V [kW] | 37 | 45 | 55 | 75 | 90 |
| IP20/Chassis | B4 | C3 | C3 | D3h | D3h |
| IP21/Type 1, IP55/Type 12 | C2 | C2 | C2 | C2 | C2 |
| Output current | | | | | |
| Continuous (3x525-550 V) [A] | 43.0 | 54.0 | 65.0 | 87.0 | 105 |
| Intermittent (60 s overload) (3x525-550 V) [A] | 47.3 | 59.4 | 71.5 | 95.7 | 115.5 |
| Continuous (3x551-690 V) [A] | 41.0 | 52.0 | 62.0 | 83.0 | 100 |
| Intermittent (60 s overload) (3x551-690 V) [A] | 45.1 | 57.2 | 68.2 | 91.3 | 110 |
| continuous KVA (at 550 V AC) [KVA] | 41.0 | 51.4 | 61.9 | 82.9 | 100 |
| continuous KVA (at 690 V AC) [KVA] | 49.0 | 62.1 | 74.1 | 99.2 | 119.5 |
| Max. input current | | | | | |
| Continuous (at 550 V) [A] | 49.0 | 59.0 | 71.0 | 87.0 | 99.0 |
| Intermittent (60 s overload) (at 550 V) [A] | 53.9 | 64.9 | 78.1 | 95.7 | 108.9 |
| Continuous (at 690 V) [A] | 48.0 | 58.0 | 70.0 | 86.0 | - |
| Intermittent (60 s overload) (at 690 V) [A] | 52.8 | 63.8 | 77.0 | 94.6 | - |
| Additional specifications | | | | | |
| Max. cable-cross section for mains and motor [mm ²] ([AWG]) | 150 (300 MCM) | | | | |
| Max. cable cross-section for load share and brake [mm ²] ([AWG]) | 95 (3/0) | | | | |
| Max cable cross-section ⁵⁾ for mains disconnect [mm ²] ([AWG]) | 95, 70, 70 (3/0, 2/0, 2/0) | | | 185, 150, 120 (350 MCM, 300 MCM, 4/0) | - |
| Estimated power loss at rated max. load [W] ⁴⁾ | 740 | 900 | 1100 | 1500 | 1800 |
| Efficiency ³⁾ | 0.98 | 0.98 | 0.98 | 0.98 | 0.98 |

Table 8.11 B4, C2, C3 Enclosure, Mains Supply 3x525-690 V AC IP20/IP21/IP55 - Chassis/NEMA1/NEMA 12, P30K-P75K
¹⁾ For type of fuse see 8.8 Fuses and Circuit Breakers.

²⁾ American Wire Gauge.

³⁾ Measured using 5 m screened motor cables at rated load and rated frequency.

⁴⁾ The typical power loss is at normal load conditions and expected to be within ±15% (tolerance relates to variety in voltage and cable conditions).

Values are based on a typical motor efficiency. Lower efficiency motors will also add to the power loss in the frequency converter and vice versa. If the switching frequency is raised from nominal, the power losses may rise significantly.

LCP and typical control card power consumptions are included. Further options and customer load may add up to 30 W to the losses. (Though typically only 4 W extra for a fully loaded control card or options for slot A or slot B, each).

Although measurements are made with state of the art equipment, some measurement inaccuracy must be allowed for (±5%).

⁵⁾ Motor and mains cable: 300 MCM/150 mm².

⁶⁾ A2+A3 may be converted to IP21 using a conversion kit. See also Mechanical mounting and IP21/Type 1 Enclosure kit in the Design Guide.

⁷⁾ B3+4 and C3+4 may be converted to IP21 using a conversion kit. See also Mechanical mounting and IP21/Type 1 Enclosure kit in the Design Guide.

8.2 Mains Supply

Mains supply (L1, L2, L3)

| | |
|----------------|---------------------|
| Supply voltage | 200-240 V \pm 10% |
| Supply voltage | 380-480 V \pm 10% |
| Supply voltage | 525-600 V \pm 10% |
| Supply voltage | 525-690 V \pm 10% |

Mains voltage low/mains drop-out:

During low mains voltage or a mains drop-out, the frequency converter continues until the intermediate circuit voltage drops below the minimum stop level, which corresponds typically to 15% below the lowest rated supply voltage of the frequency converter. Power-up and full torque cannot be expected at mains voltage lower than 10% below the lowest rated supply voltage of the frequency converter.

| | |
|------------------|-----------------|
| Supply frequency | 50/60 Hz +4/-6% |
|------------------|-----------------|

The frequency converter power supply is tested in accordance with IEC61000-4-28, 50 Hz +4/-6%.

| | |
|--|---|
| Max. imbalance temporary between mains phases | 3.0% of rated supply voltage |
| True Power Factor (λ) | \geq 0.9 nominal at rated load |
| Displacement Power Factor ($\cos\phi$) near unity | (> 0.98) |
| Switching on input supply L1, L2, L3 (power-ups) \leq 7.5 kW | maximum 2 times/min. |
| Switching on input supply L1, L2, L3 (power-ups) 11-90 kW | maximum 1 time/min. |
| Environment according to EN60664-1 | overvoltage category III/pollution degree 2 |

The unit is suitable for use on a circuit capable of delivering not more than 100.000 RMS symmetrical Amperes, 240/480/600/690 V maximum.

8

8.3 Motor Output and Motor Data

Motor output (U, V, W)

| | |
|---------------------|--------------------------|
| Output voltage | 0-100% of supply voltage |
| Output frequency | 0-590 Hz* |
| Switching on output | Unlimited |
| Ramp times | 1-3600 s |

* Dependent on power size.

Torque characteristics

| | |
|-----------------------------------|---------------------------|
| Starting torque (Constant torque) | maximum 110% for 1 min.* |
| Starting torque | maximum 135% up to 0.5 s* |
| Overload torque (Constant torque) | maximum 110% for 1 min.* |

*Percentage relates to the nominal torque of the frequency converter.

8.4 Ambient Conditions

Environment

| | |
|---|--|
| Enclosure type A | IP20/Chassis, IP21/Type 1, IP55/Type 12, IP66/Type 4X |
| Enclosure type B1/B2 | IP21/Type 1, IP55/Type 12, IP66/Type 4X |
| Enclosure type B3/B4 | IP20/Chassis |
| Enclosure type C1/C2 | IP21/Type 1, IP55/Type 12, IP66/Type 4X |
| Enclosure type C3/C4 | IP20/Chassis |
| Enclosure kit available ≤ enclosure type A | IP21/TYPE 1/IP4X top |
| Vibration test enclosure A/B/C | 1.0 g |
| Max. relative humidity | 5% - 95% (IEC 721-3-3; Class 3K3 (non-condensing) during operation |
| Aggressive environment (IEC 721-3-3), uncoated | class 3C2 |
| Aggressive environment (IEC 721-3-3), coated | class 3C3 |
| Test method according to IEC 60068-2-43 H2S (10 days) | |
| Ambient temperature | Max. 50 °C |

Derating for high ambient temperature, see section on special conditions in the Design Guide.

| | |
|---|------------------|
| Minimum ambient temperature during full-scale operation | 0 °C |
| Minimum ambient temperature at reduced performance | - 10 °C |
| Temperature during storage/transport | -25 to +65/70 °C |
| Maximum altitude above sea level without derating | 1000 m |
| Maximum altitude above sea level with derating | 3000 m |

Derating for high altitude, see section on special conditions in the Design Guide.

| | |
|-------------------------|------------|
| EMC standards, Emission | EN 61800-3 |
| EMC standards, Immunity | EN 61800-3 |

See section on special conditions in the Design Guide.

8.5 Cable Specifications

Cable lengths and cross-sections for control cables¹⁾

| | |
|--|---|
| Max. motor cable length, screened/armoured | 150 m |
| Max. motor cable length, unscreened/unarmoured | 300 m |
| Max. cross section to motor, mains, load sharing and brake * | |
| Maximum cross section to control terminals, rigid wire | 1.5 mm ² /16 AWG (2 x 0.75 mm ²) |
| Maximum cross section to control terminals, flexible cable | 1 mm ² /18 AWG |
| Maximum cross section to control terminals, cable with enclosed core | 0.5 mm ² /20 AWG |
| Minimum cross section to control terminals | 0.25 mm ² |

¹⁾For power cables, see electrical data tables in 8.1 Electrical Data.

* See electrical data tables in 8.1 Electrical Data for more information!

8.6 Control Input/Output and Control Data

Control card, RS-485 serial communication

| | |
|--------------------|----------------------------------|
| Terminal number | 68 (P,TX+, RX+), 69 (N,TX-, RX-) |
| Terminal number 61 | Common for terminals 68 and 69 |

The RS-485 serial communication circuit is functionally seated from other central circuits and galvanically isolated from the supply voltage (PELV).

Analog inputs

| | |
|-------------------------|--------------------|
| Number of analog inputs | 2 |
| Terminal number | 53, 54 |
| Modes | Voltage or current |

| | |
|------------------------------|-----------------------------------|
| Mode select | Switch S201 and switch S202 |
| Voltage mode | Switch S201/switch S202 = OFF (U) |
| Voltage level | 0 to +10 V (scaleable) |
| Input resistance, R_i | approx. 10 k Ω |
| Max. voltage | ± 20 V |
| Current mode | Switch S201/switch S202 = ON (I) |
| Current level | 0/4 to 20 mA (scaleable) |
| Input resistance, R_i | approx. 200 Ω |
| Max. current | 30 mA |
| Resolution for analog inputs | 10 bit (+ sign) |
| Accuracy of analog inputs | Max. error 0.5% of full scale |
| Bandwidth | 200 Hz |

The analog inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

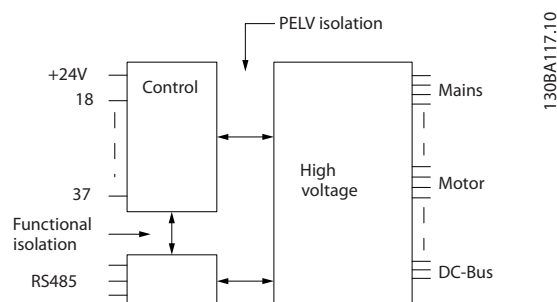


Illustration 8.1 PELV Isolation of Analog Inputs

Analog output

| | |
|---|--------------------------------|
| Number of programmable analog outputs | 1 |
| Terminal number | 42 |
| Current range at analog output | 0/4-20 mA |
| Max. resistor load to common at analog output | 500 Ω |
| Accuracy on analog output | Max. error: 0.8% of full scale |
| Resolution on analog output | 8 bit |

The analog output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Digital inputs

| | |
|------------------------------|---|
| Programmable digital inputs | 4 (6) |
| Terminal number | 18, 19, 27 ¹⁾ , 29 ¹⁾ , 32, 33, |
| Logic | PNP or NPN |
| Voltage level | 0-24 V DC |
| Voltage level, logic '0' PNP | <5 V DC |
| Voltage level, logic '1' PNP | >10 V DC |
| Voltage level, logic '0' NPN | >19 V DC |
| Voltage level, logic '1' NPN | <14 V DC |
| Maximum voltage on input | 28 V DC |
| Input resistance, R_i | approx. 4 k Ω |

All digital inputs are galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

1) Terminals 27 and 29 can also be programmed as output.

Digital output

| | |
|---|----------------------|
| Programmable digital/pulse outputs | 2 |
| Terminal number | 27, 29 ¹⁾ |
| Voltage level at digital/frequency output | 0-24 V |
| Max. output current (sink or source) | 40 mA |
| Max. load at frequency output | 1 k Ω |
| Max. capacitive load at frequency output | 10 nF |

| | |
|--|--------------------------------|
| Minimum output frequency at frequency output | 0 Hz |
| Maximum output frequency at frequency output | 32 kHz |
| Accuracy of frequency output | Max. error: 0.1% of full scale |
| Resolution of frequency outputs | 12 bit |

1) Terminal 27 and 29 can also be programmed as input.

The digital output is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Pulse inputs

| | |
|------------------------------------|--------------------------------|
| Programmable pulse inputs | 2 |
| Terminal number pulse | 29, 33 |
| Max. frequency at terminal, 29, 33 | 110 kHz (Push-pull driven) |
| Max. frequency at terminal, 29, 33 | 5 kHz (open collector) |
| Min. frequency at terminal 29, 33 | 4 Hz |
| Voltage level | see 8.6.1 |
| Maximum voltage on input | 28 V DC |
| Input resistance, R_i | approx. 4 k Ω |
| Pulse input accuracy (0.1-1 kHz) | Max. error: 0.1% of full scale |
| Control card, 24 V DC output | |

| | |
|-----------------|--------|
| Terminal number | 12, 13 |
| Max. load | 200 mA |

The 24 V DC supply is galvanically isolated from the supply voltage (PELV), but has the same potential as the analog and digital inputs and outputs.

Relay outputs

| | |
|--|---|
| Programmable relay outputs | 2 |
| Relay 01 Terminal number | 1-3 (break), 1-2 (make) |
| Max. terminal load (AC-1) ¹⁾ on 1-3 (NC), 1-2 (NO) (Resistive load) | 240 V AC, 2 A |
| Max. terminal load (AC-15) ¹⁾ (Inductive load @ $\cos\phi$ 0.4) | 240 V AC, 0.2 A |
| Max. terminal load (DC-1) ¹⁾ on 1-2 (NO), 1-3 (NC) (Resistive load) | 60 V DC, 1 A |
| Max. terminal load (DC-13) ¹⁾ (Inductive load) | 24 V DC, 0.1 A |
| Relay 02 Terminal number | 4-6 (break), 4-5 (make) |
| Max. terminal load (AC-1) ¹⁾ on 4-5 (NO) (Resistive load) ²⁾³⁾ | 400 V AC, 2 A |
| Max. terminal load (AC-15) ¹⁾ on 4-5 (NO) (Inductive load @ $\cos\phi$ 0.4) | 240 V AC, 0.2 A |
| Max. terminal load (DC-1) ¹⁾ on 4-5 (NO) (Resistive load) | 80 V DC, 2 A |
| Max. terminal load (DC-13) ¹⁾ on 4-5 (NO) (Inductive load) | 24 V DC, 0.1 A |
| Max. terminal load (AC-1) ¹⁾ on 4-6 (NC) (Resistive load) | 240 V AC, 2 A |
| Max. terminal load (AC-15) ¹⁾ on 4-6 (NC) (Inductive load @ $\cos\phi$ 0.4) | 240 V AC, 0.2 A |
| Max. terminal load (DC-1) ¹⁾ on 4-6 (NC) (Resistive load) | 50 V DC, 2 A |
| Max. terminal load (DC-13) ¹⁾ on 4-6 (NC) (Inductive load) | 24 V DC, 0.1 A |
| Min. terminal load on 1-3 (NC), 1-2 (NO), 4-6 (NC), 4-5 (NO) | 24 V DC 10 mA, 24 V AC 20 mA |
| Environment according to EN 60664-1 | overvoltage category III/pollution degree 2 |

1) IEC 60947 parts 4 and 5

The relay contacts are galvanically isolated from the rest of the circuit by reinforced isolation (PELV).

2) Overvoltage Category II

3) UL applications 300 V AC 2 A

Control card, 10 V DC output

| | |
|-----------------|--------------------|
| Terminal number | 50 |
| Output voltage | 10.5 V \pm 0.5 V |
| Max. load | 25 mA |

The 10 V DC supply is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

Control characteristics

| | |
|---|----------------------------|
| Resolution of output frequency at 0-590 Hz | \pm 0.003 Hz |
| System response time (terminals 18, 19, 27, 29, 32, 33) | \leq 2 ms |
| Speed control range (open loop) | 1:100 of synchronous speed |

Speed accuracy (open loop) 30-4000 rpm: Maximum error of ±8 RPM

All control characteristics are based on a 4-pole asynchronous motor

Control card performance

Scan interval 5 ms

Control card, USB serial communication

USB standard 1.1 (Full speed)

USB plug USB type B "device" plug

⚠ CAUTION

Connection to PC is carried out via a standard host/device USB cable.

The USB connection is galvanically isolated from the supply voltage (PELV) and other high-voltage terminals.

The USB connection is not galvanically isolated from protection earth. Use only isolated laptop/PC as connection to the USB connector on the frequency converter, or an isolated USB cable/converter.

8.7 Connection Tightening Torques

| Enclosure | Torque [Nm] | | | | | |
|-----------|---------------------|---------------------|---------------|-------|--------|-------|
| | Mains | Motor | DC connection | Brake | Ground | Relay |
| A2 | 1.8 | 1.8 | 1.8 | 1.8 | 3 | 0.6 |
| A3 | 1.8 | 1.8 | 1.8 | 1.8 | 3 | 0.6 |
| A4 | 1.8 | 1.8 | 1.8 | 1.8 | 3 | 0.6 |
| A5 | 1.8 | 1.8 | 1.8 | 1.8 | 3 | 0.6 |
| B1 | 1.8 | 1.8 | 1.5 | 1.5 | 3 | 0.6 |
| B2 | 4.5 | 4.5 | 3.7 | 3.7 | 3 | 0.6 |
| B3 | 1.8 | 1.8 | 1.8 | 1.8 | 3 | 0.6 |
| B4 | 4.5 | 4.5 | 4.5 | 4.5 | 3 | 0.6 |
| C1 | 10 | 10 | 10 | 10 | 3 | 0.6 |
| C2 | 14/24 ¹⁾ | 14/24 ¹⁾ | 14 | 14 | 3 | 0.6 |
| C3 | 10 | 10 | 10 | 10 | 3 | 0.6 |
| C4 | 14/24 ¹⁾ | 14/24 ¹⁾ | 14 | 14 | 3 | 0.6 |

Table 8.12 Tightening of Terminals

¹⁾ For different cable dimensions x/y, where $x \leq 95 \text{ mm}^2$ and $y \geq 95 \text{ mm}^2$.

8.8 Fuses and Circuit Breakers

Use recommended fuses and/or circuit breakers on the supply side as protection in case of component break-down inside the frequency converter (first fault).

NOTICE

Use of fuses on the supply side is mandatory for IEC 60364 (CE) and NEC 2009 (UL) compliant installations.

Recommendations

- Fuses of the type gG
- Circuit breakers of Moeller types. By use of other circuit breaker types, ensure that the energy into the frequency converter is equal to or lower than the energy provided by Moeller types.

If fuses/circuit breakers according to recommendations are chosen, possible damages on the frequency converter will mainly be limited to damages inside the unit. For further information, see *Application Note Fuses and Circuit Breakers, MN90T*.

The fuses below are suitable for use on a circuit capable of delivering 100,000 Arms (symmetrical), depending on the frequency converter voltage rating. With the proper fusing the frequency converter Short Circuit Current Rating (SCCR) is 100,000 Arms.

8

8.8.1 CE Compliance

200-240 V

| Enclosure | Power [kW] | Recommended fuse size | Recommended max. fuse | Recommended circuit breaker Moeller | Max. trip level [A] |
|-----------|------------|--|---------------------------------|-------------------------------------|---------------------|
| A2 | 0.25-2.2 | gG-10 (0.25-1.5) gG-16 (2.2) | gG-25 | PKZM0-25 | 25 |
| A3 | 3.0-3.7 | gG-16 (3) gG-20 (3.7) | gG-32 | PKZM0-25 | 25 |
| A4 | 0.25-2.2 | gG-10 (0.25-1.5) gG-16 (2.2) | gG-32 | PKZM0-25 | 25 |
| A5 | 0.25-3.7 | gG-10 (0.25-1.5) gG-16 (2.2-3) gG-20 (3.7) | gG-32 | PKZM0-25 | 25 |
| B1 | 5.5-11 | gG-25 (5.5) gG-32 (7.5) | gG-80 | PKZM4-63 | 63 |
| B2 | 15 | gG-50 | gG-100 | NZMB1-A100 | 100 |
| B3 | 5.5-11 | gG-25 | gG-63 | PKZM4-50 | 50 |
| B4 | 15-18 | gG-32 (7.5) gG-50 (11) gG-63 (15) | gG-125 | NZMB1-A100 | 100 |
| C1 | 18.5-30 | gG-63 (15) gG-80 (18.5) gG-100 (22) | gG-160 (15-18.5) aR-160 (22) | NZMB2-A200 | 160 |
| C2 | 37-45 | aR-160 (30) aR-200 (37) | aR-200 (30) aR-250 (37) | NZMB2-A250 | 250 |
| C3 | 22-30 | gG-80 (18.5) aR-125 (22) | gG-150 (18.5) aR-160 (22) | NZMB2-A200 | 150 |
| C4 | 37-45 | aR-160 (30) aR-200 (37) | aR-200 (30) aR-250 (37) | NZMB2-A250 | 250 |

Table 8.13 200-240 V, Enclosure Types A, B and C

380-480 V

| Enclosure | Power [kW] | Recommended fuse size | Recommended max. fuse | Recommended circuit breaker Moeller | Max. trip level [A] |
|-----------|------------|--|----------------------------|-------------------------------------|---------------------|
| A2 | 1.1-4.0 | gG-10 (0.37-3) gG-16 (4) | gG-25 | PKZM0-25 | 25 |
| A3 | 5.5-7.5 | gG-16 | gG-32 | PKZM0-25 | 25 |
| A4 | 1.1-4.0 | gG-10 (0.37-3) gG-16 (4) | gG-32 | PKZM0-25 | 25 |
| A5 | 1.1-7.5 | gG-10 (0.37-3) gG-16 (4-7.5) | gG-32 | PKZM0-25 | 25 |
| B1 | 11-18.5 | gG-40 | gG-80 | PKZM4-63 | 63 |
| B2 | 22-30 | gG-50 (18.5) gG-63 (22) | gG-100 | NZMB1-A100 | 100 |
| B3 | 11-18 | gG-40 | gG-63 | PKZM4-50 | 50 |
| B4 | 22-37 | gG-50 (18.5) gG-63 (22) gG-80 (30) | gG-125 | NZMB1-A100 | 100 |
| C1 | 37-55 | gG-80 (30) gG-100 (37) gG-160 (45) | gG-160 | NZMB2-A200 | 160 |
| C2 | 75-90 | aR-200 (55) aR-250 (75) | aR-250 | NZMB2-A250 | 250 |
| C3 | 45-55 | gG-100 (37) gG-160 (45) | gG-150 (37) gG-160 (45) | NZMB2-A200 | 150 |
| C4 | 75-90 | aR-200 (55) aR-250 (75) | aR-250 | NZMB2-A250 | 250 |

8

Table 8.14 380-480 V, Enclosure Types A, B and C

525-600 V

| Enclosure | Power [kW] | Recommended fuse size | Recommended max. fuse | Recommended circuit breaker Moeller | Max. trip level [A] |
|-----------|------------|--|-------------------------------|-------------------------------------|---------------------|
| A2 | 1.1-4.0 | gG-10 | gG-25 | PKZM0-25 | 25 |
| A3 | 5.5-7.5 | gG-10 (5.5) gG-16 (7.5) | gG-32 | PKZM0-25 | 25 |
| A5 | 1.1-7.5 | gG-10 (0.75-5.5) gG-16 (7.5) | gG-32 | PKZM0-25 | 25 |
| B1 | 11-18 | gG-25 (11) gG-32 (15) gG-40 (18.5) | gG-80 | PKZM4-63 | 63 |
| B2 | 22-30 | gG-50 (22) gG-63 (30) | gG-100 | NZMB1-A100 | 100 |
| B3 | 11-18.5 | gG-25 (11) gG-32 (15) | gG-63 | PKZM4-50 | 50 |
| B4 | 22-37 | gG-40 (18.5) gG-50 (22) gG-63 (30) | gG-125 | NZMB1-A100 | 100 |
| C1 | 37-55 | gG-63 (37) gG-100 (45) aR-160 (55) | gG-160 (37-45) aR-250 (55) | NZMB2-A200 | 160 |
| C2 | 75-90 | aR-200 (75) | aR-250 | NZMB2-A250 | 250 |
| C3 | 45-55 | gG-63 (37) gG-100 (45) | gG-150 | NZMB2-A200 | 150 |
| C4 | 75-90 | aR-160 (55) aR-200 (75) | aR-250 | NZMB2-A250 | 250 |

Table 8.15 525-600 V, Enclosure Types A, B and C

525-690 V

| Enclosure | Power [kW] | Recommended fuse size | Recommended max. fuse | Recommended circuit breaker Danfoss | Max. trip level [A] |
|-----------|------------|-----------------------|-----------------------|-------------------------------------|---------------------|
| A3 | 1.1 | gG-6 | gG-25 | CTI25M 10-16 | 16 |
| | 1.5 | gG-6 | gG-25 | CTI25M 10-16 | 16 |
| | 2.2 | gG-6 | gG-25 | CTI25M 10-16 | 16 |
| | 3 | gG-10 | gG-25 | CTI25M 10-16 | 16 |
| | 4 | gG-10 | gG-25 | CTI25M 10-16 | 16 |
| | 5.5 | gG-16 | gG-25 | CTI25M 10-16 | 16 |
| | 7.5 | gG-16 | gG-25 | CTI25M 10-16 | 16 |
| B2 | 11 | gG-25 | gG-63 | | |
| | 15 | gG-25 | gG-63 | | |
| | 18 | gG-32 | | | |
| | 22 | gG-32 | | | |
| C2 | 30 | gG-40 | | | |
| | 37 | gG-63 | gG-80 | | |
| | 45 | gG-63 | gG-100 | | |
| | 55 | gG-80 | gG-125 | | |
| | 75 | gG-100 | gG-160 | | |
| C3 | 37 | gG-100 | gG-125 | | |
| | 45 | gG-125 | gG-160 | | |

Table 8.16 525-690 V, Enclosure Types A, B, C

8.8.2 UL Compliance

1x200-240 V

| Recommended max. fuse | | | | | | | | | | | | | |
|-----------------------|-----------------------|----------------|--------------|------------|------------|-------------|-------------|-------------|-------------|-----------------|-------------------|--------------------|------------------|
| Power [kW] | Max. prefuse size [A] | Bussmann JFHR2 | Bussmann RK1 | Bussmann J | Bussmann T | Bussmann CC | Bussmann CC | Bussmann CC | SIBA RK1 | Littel fuse RK1 | Ferraz-Shawmut CC | Ferraz-Shawmut RK1 | Ferraz-Shawmut J |
| 1.1 | 15 | FWX-15 | KTN-R15 | JKS-15 | JJN-15 | FNQ-R-15 | KTK-R-15 | LP-CC-15 | 5017906-016 | KLN-R15 | ATM-R15 | A2K-15R | HSJ15 |
| 1.5 | 20 | FWX-20 | KTN-R20 | JKS-20 | JJN-20 | FNQ-R-20 | KTK-R-20 | LP-CC-20 | 5017906-020 | KLN-R20 | ATM-R20 | A2K-20R | HSJ20 |
| 2.2 | 30* | FWX-30 | KTN-R30 | JKS-30 | JJN-30 | FNQ-R-30 | KTK-R-30 | LP-CC-30 | 5012406-032 | KLN-R30 | ATM-R30 | A2K-30R | HSJ30 |
| 3.0 | 35 | FWX-35 | KTN-R35 | JKS-35 | JJN-35 | | | | --- | KLN-R35 | --- | A2K-35R | HSJ35 |
| 3.7 | 50 | FWX-50 | KTN-R50 | JKS-50 | JJN-50 | | | | 5014006-050 | KLN-R50 | --- | A2K-50R | HSJ50 |
| 5.5 | 60** | FWX-60 | KTN-R60 | JKS-60 | JJN-60 | | | | 5014006-063 | KLN-R60 | --- | A2K-60R | HSJ60 |
| 7.5 | 80 | FWX-80 | KTN-R80 | JKS-80 | JJN-80 | | | | 5014006-080 | KLN-R80 | --- | A2K-80R | HSJ80 |
| 15 | 150 | FWX-150 | KTN-R150 | JKS-150 | JJN-150 | | | | 2028220-150 | KLN-R150 | | A2K-150R | HSJ150 |
| 22 | 200 | FWX-200 | KTN-R200 | JKS-200 | JJN-200 | | | | 2028220-200 | KLN-R200 | | A2K-200R | HSJ200 |

Table 8.17 1x200-240 V, Enclosure Types A, B and C

* Siba allowed up to 32 A.

** Siba allowed up to 63 A.

1x380-500 V

| Recommended max. fuse | | | | | | | | | | | | | |
|-----------------------|-----------------------|----------------|--------------|------------|------------|-------------|-------------|-------------|-------------|-----------------|-------------------|--------------------|------------------|
| Power [kW] | Max. prefuse size [A] | Bussmann JFHR2 | Bussmann RK1 | Bussmann J | Bussmann T | Bussmann CC | Bussmann CC | Bussmann CC | SIBA RK1 | Littel fuse RK1 | Ferraz-Shawmut CC | Ferraz-Shawmut RK1 | Ferraz-Shawmut J |
| 7.5 | 60 | FWH-60 | KTS-R60 | JKS-60 | JJS-60 | | | | 5014006-063 | KLS-R60 | - | A6K-60R | HSJ60 |
| 11 | 80 | FWH-80 | KTS-R80 | JKS-80 | JJS-80 | | | | 2028220-100 | KLS-R80 | - | A6K-80R | HSJ80 |
| 22 | 150 | FWH-150 | KTS-R150 | JKS-150 | JJS-150 | | | | 2028220-160 | KLS-R150 | - | A6K-150R | HSJ150 |
| 37 | 200 | FWH-200 | KTS-R200 | JKS-200 | JJS-200 | | | | 2028220-200 | KLS-200 | | A6K-200R | HSJ200 |

Table 8.18 1x380-500 V, Enclosure Types B and C

KTS-fuses from Bussmann may substitute KTN for 240 V frequency converters.

FWH-fuses from Bussmann may substitute FWX for 240 V frequency converters.

JJS-fuses from Bussmann may substitute JJN for 240 V frequency converters.

KLSR fuses from Littel fuse may substitute KLN-R fuses for 240 V frequency converters.

A6KR fuses from Ferraz-Shawmut may substitute A2KR for 240 V frequency converters.



3x200-240 V

| Power [kW] | Recommended max. fuse | | | | | |
|------------|---------------------------------|-----------------|-----------------|------------------|----------|------------------|
| | Bussmann Type RK1 ¹⁾ | Bussmann Type J | Bussmann Type T | Bussmann Type CC | Bussmann | Bussmann Type CC |
| 0.25-0.37 | KTN-R-05 | JKS-05 | JJN-05 | FNQ-R-5 | KTK-R-5 | LP-CC-5 |
| 0.55-1.1 | KTN-R-10 | JKS-10 | JJN-10 | FNQ-R-10 | KTK-R-10 | LP-CC-10 |
| 1.5 | KTN-R-15 | JKS-15 | JJN-15 | FNQ-R-15 | KTK-R-15 | LP-CC-15 |
| 2.2 | KTN-R-20 | JKS-20 | JJN-20 | FNQ-R-20 | KTK-R-20 | LP-CC-20 |
| 3.0 | KTN-R-25 | JKS-25 | JJN-25 | FNQ-R-25 | KTK-R-25 | LP-CC-25 |
| 3.7 | KTN-R-30 | JKS-30 | JJN-30 | FNQ-R-30 | KTK-R-30 | LP-CC-30 |
| 5.5-7.5 | KTN-R-50 | KS-50 | JJN-50 | - | - | - |
| 11 | KTN-R-60 | JKS-60 | JJN-60 | - | - | - |
| 15 | KTN-R-80 | JKS-80 | JJN-80 | - | - | - |
| 18.5-22 | KTN-R-125 | JKS-125 | JJN-125 | - | - | - |
| 30 | KTN-R-150 | JKS-150 | JJN-150 | - | - | - |
| 37 | KTN-R-200 | JKS-200 | JJN-200 | - | - | - |
| 45 | KTN-R-250 | JKS-250 | JJN-250 | - | - | - |

Table 8.19 3x200-240 V, Enclosure Types A, B and C

8

| Power [kW] | Recommended max. fuse | | | | | | | |
|------------|-----------------------|----------------------|------------------------|---------------------------------------|-----------------------------------|-------------------|------------------------------------|------------------|
| | SIBA Type RK1 | Littel fuse Type RK1 | Ferraz-Shawmut Type CC | Ferraz-Shawmut Type RK1 ³⁾ | Bussmann Type JFHR2 ²⁾ | Littel fuse JFHR2 | Ferraz-Shawmut JFHR2 ⁴⁾ | Ferraz-Shawmut J |
| 0.25-0.37 | 5017906-005 | KLN-R-05 | ATM-R-05 | A2K-05-R | FWX-5 | - | - | HSJ-6 |
| 0.55-1.1 | 5017906-010 | KLN-R-10 | ATM-R-10 | A2K-10-R | FWX-10 | - | - | HSJ-10 |
| 1.5 | 5017906-016 | KLN-R-15 | ATM-R-15 | A2K-15-R | FWX-15 | - | - | HSJ-15 |
| 2.2 | 5017906-020 | KLN-R-20 | ATM-R-20 | A2K-20-R | FWX-20 | - | - | HSJ-20 |
| 3.0 | 5017906-025 | KLN-R-25 | ATM-R-25 | A2K-25-R | FWX-25 | - | - | HSJ-25 |
| 3.7 | 5012406-032 | KLN-R-30 | ATM-R-30 | A2K-30-R | FWX-30 | - | - | HSJ-30 |
| 5.5-7.5 | 5014006-050 | KLN-R-50 | - | A2K-50-R | FWX-50 | - | - | HSJ-50 |
| 11 | 5014006-063 | KLN-R-60 | - | A2K-60-R | FWX-60 | - | - | HSJ-60 |
| 15 | 5014006-080 | KLN-R-80 | - | A2K-80-R | FWX-80 | - | - | HSJ-80 |
| 18.5-22 | 2028220-125 | KLN-R-125 | - | A2K-125-R | FWX-125 | - | - | HSJ-125 |
| 30 | 2028220-150 | KLN-R-150 | - | A2K-150-R | FWX-150 | L25S-150 | A25X-150 | HSJ-150 |
| 37 | 2028220-200 | KLN-R-200 | - | A2K-200-R | FWX-200 | L25S-200 | A25X-200 | HSJ-200 |
| 45 | 2028220-250 | KLN-R-250 | - | A2K-250-R | FWX-250 | L25S-250 | A25X-250 | HSJ-250 |

Table 8.20 3x200-240 V, Enclosure Types A, B and C

- 1) KTS-fuses from Bussmann may substitute KTN for 240 V frequency converters.
- 2) FWH-fuses from Bussmann may substitute FWX for 240 V frequency converters.
- 3) A6KR fuses from Ferraz-Shawmut may substitute A2KR for 240 V frequency converters.
- 4) A50X fuses from Ferraz-Shawmut may substitute A25X for 240 V frequency converters.

3x380-480 V

| Power [kW] | Recommended max. fuse | | | | | |
|------------|-----------------------|-----------------|-----------------|------------------|------------------|------------------|
| | Bussmann Type RK1 | Bussmann Type J | Bussmann Type T | Bussmann Type CC | Bussmann Type CC | Bussmann Type CC |
| - | KTS-R-6 | JKS-6 | JJS-6 | FNQ-R-6 | KTK-R-6 | LP-CC-6 |
| 1.1-2.2 | KTS-R-10 | JKS-10 | JJS-10 | FNQ-R-10 | KTK-R-10 | LP-CC-10 |
| 3 | KTS-R-15 | JKS-15 | JJS-15 | FNQ-R-15 | KTK-R-15 | LP-CC-15 |
| 4 | KTS-R-20 | JKS-20 | JJS-20 | FNQ-R-20 | KTK-R-20 | LP-CC-20 |
| 5.5 | KTS-R-25 | JKS-25 | JJS-25 | FNQ-R-25 | KTK-R-25 | LP-CC-25 |
| 7.5 | KTS-R-30 | JKS-30 | JJS-30 | FNQ-R-30 | KTK-R-30 | LP-CC-30 |
| 11 | KTS-R-40 | JKS-40 | JJS-40 | - | - | - |
| 15 | KTS-R-50 | JKS-50 | JJS-50 | - | - | - |
| 22 | KTS-R-60 | JKS-60 | JJS-60 | - | - | - |
| 30 | KTS-R-80 | JKS-80 | JJS-80 | - | - | - |
| 37 | KTS-R-100 | JKS-100 | JJS-100 | - | - | - |
| 45 | KTS-R-125 | JKS-125 | JJS-125 | - | - | - |
| 55 | KTS-R-150 | JKS-150 | JJS-150 | - | - | - |
| 75 | KTS-R-200 | JKS-200 | JJS-200 | - | - | - |
| 90 | KTS-R-250 | JKS-250 | JJS-250 | - | - | - |

Table 8.21 3x380-480 V, Enclosure Types A, B and C

8

| Power [kW] | Recommended max. fuse | | | | | | | |
|------------|-----------------------|----------------------|------------------------|-------------------------|----------------|------------------|------------------------------------|-------------------|
| | SIBA Type RK1 | Littel fuse Type RK1 | Ferraz-Shawmut Type CC | Ferraz-Shawmut Type RK1 | Bussmann JFHR2 | Ferraz-Shawmut J | Ferraz-Shawmut JFHR2 ¹⁾ | Littel fuse JFHR2 |
| - | 5017906-006 | KLS-R-6 | ATM-R-6 | A6K-6-R | FWH-6 | HSJ-6 | - | - |
| 1.1-2.2 | 5017906-010 | KLS-R-10 | ATM-R-10 | A6K-10-R | FWH-10 | HSJ-10 | - | - |
| 3 | 5017906-016 | KLS-R-15 | ATM-R-15 | A6K-15-R | FWH-15 | HSJ-15 | - | - |
| 4 | 5017906-020 | KLS-R-20 | ATM-R-20 | A6K-20-R | FWH-20 | HSJ-20 | - | - |
| 5.5 | 5017906-025 | KLS-R-25 | ATM-R-25 | A6K-25-R | FWH-25 | HSJ-25 | - | - |
| 7.5 | 5012406-032 | KLS-R-30 | ATM-R-30 | A6K-30-R | FWH-30 | HSJ-30 | - | - |
| 11 | 5014006-040 | KLS-R-40 | - | A6K-40-R | FWH-40 | HSJ-40 | - | - |
| 15 | 5014006-050 | KLS-R-50 | - | A6K-50-R | FWH-50 | HSJ-50 | - | - |
| 22 | 5014006-063 | KLS-R-60 | - | A6K-60-R | FWH-60 | HSJ-60 | - | - |
| 30 | 2028220-100 | KLS-R-80 | - | A6K-80-R | FWH-80 | HSJ-80 | - | - |
| 37 | 2028220-125 | KLS-R-100 | - | A6K-100-R | FWH-100 | HSJ-100 | - | - |
| 45 | 2028220-125 | KLS-R-125 | - | A6K-125-R | FWH-125 | HSJ-125 | - | - |
| 55 | 2028220-160 | KLS-R-150 | - | A6K-150-R | FWH-150 | HSJ-150 | - | - |
| 75 | 2028220-200 | KLS-R-200 | - | A6K-200-R | FWH-200 | HSJ-200 | A50-P-225 | L50-S-225 |
| 90 | 2028220-250 | KLS-R-250 | - | A6K-250-R | FWH-250 | HSJ-250 | A50-P-250 | L50-S-250 |

Table 8.22 3x380-480 V, Enclosure Types A, B and C

1) Ferraz-Shawmut A50QS fuses may substitute A50P fuses.

3x525-600 V

| Power [kW] | Recommended max. fuse | | | | | | | | | |
|------------|-----------------------|------------------|-----------------|------------------|-------------------|-------------------|---------------|----------------------|-------------------------|------------------|
| | Bussmann Type RK1 | Bussman n Type J | Bussmann Type T | Bussmann Type CC | Bussman n Type CC | Bussman n Type CC | SIBA Type RK1 | Littel fuse Type RK1 | Ferraz-Shawmut Type RK1 | Ferraz-Shawmut J |
| 0.75-1.1 | KTS-R-5 | JKS-5 | JJS-6 | FNQ-R-5 | KTK-R-5 | LP-CC-5 | 5017906-005 | KLS-R-005 | A6K-5-R | HSJ-6 |
| 1.5-2.2 | KTS-R-10 | JKS-10 | JJS-10 | FNQ-R-10 | KTK-R-10 | LP-CC-10 | 5017906-010 | KLS-R-010 | A6K-10-R | HSJ-10 |
| 3 | KTS-R15 | JKS-15 | JJS-15 | FNQ-R-15 | KTK-R-15 | LP-CC-15 | 5017906-016 | KLS-R-015 | A6K-15-R | HSJ-15 |
| 4 | KTS-R20 | JKS-20 | JJS-20 | FNQ-R-20 | KTK-R-20 | LP-CC-20 | 5017906-020 | KLS-R-020 | A6K-20-R | HSJ-20 |
| 5.5 | KTS-R-25 | JKS-25 | JJS-25 | FNQ-R-25 | KTK-R-25 | LP-CC-25 | 5017906-025 | KLS-R-025 | A6K-25-R | HSJ-25 |
| 7.5 | KTS-R-30 | JKS-30 | JJS-30 | FNQ-R-30 | KTK-R-30 | LP-CC-30 | 5017906-030 | KLS-R-030 | A6K-30-R | HSJ-30 |
| 11-15 | KTS-R-35 | JKS-35 | JJS-35 | - | - | - | 5014006-040 | KLS-R-035 | A6K-35-R | HSJ-35 |
| 18 | KTS-R-45 | JKS-45 | JJS-45 | - | - | - | 5014006-050 | KLS-R-045 | A6K-45-R | HSJ-45 |
| 22 | KTS-R-50 | JKS-50 | JJS-50 | - | - | - | 5014006-050 | KLS-R-050 | A6K-50-R | HSJ-50 |
| 30 | KTS-R-60 | JKS-60 | JJS-60 | - | - | - | 5014006-063 | KLS-R-060 | A6K-60-R | HSJ-60 |
| 37 | KTS-R-80 | JKS-80 | JJS-80 | - | - | - | 5014006-080 | KLS-R-075 | A6K-80-R | HSJ-80 |
| 45 | KTS-R-100 | JKS-100 | JJS-100 | - | - | - | 5014006-100 | KLS-R-100 | A6K-100-R | HSJ-100 |
| 55 | KTS-R-125 | JKS-125 | JJS-125 | - | - | - | 2028220-125 | KLS-R-125 | A6K-125-R | HSJ-125 |
| 75 | KTS-R-150 | JKS-150 | JJS-150 | - | - | - | 2028220-150 | KLS-R-150 | A6K-150-R | HSJ-150 |
| 90 | KTS-R-175 | JKS-175 | JJS-175 | - | - | - | 2028220-200 | KLS-R-175 | A6K-175-R | HSJ-175 |

Table 8.23 3x525-600 V, Enclosure Types A, B and C

1) 170M fuses shown from Bussmann use the -/80 visual indicator. -TN/80 Type T, -/110 or TN/110 Type T indicator fuses of the same size and amperage may be substituted.

3x525-690 V

| Power [kW] | Recommended max. fuse | | | | | | | |
|------------|-----------------------|--------------------------|-----------------------|-----------------------|-----------------------|----------------------------|---------------------------------------|----------------------------|
| | Max. prefuse [A] | Bussmann E52273 RK1/JDDZ | Bussmann E4273 J/JDDZ | Bussmann E4273 T/JDDZ | SIBA E180276 RK1/JDDZ | LittelFuse E81895 RK1/JDDZ | Ferraz-Shawmut E163267/E2137 RK1/JDDZ | Ferraz-Shawmut E2137 J/HSJ |
| 11-15 | 30 | KTS-R-30 | JKS-30 | JKJS-30 | 5017906-030 | KLS-R-030 | A6K-30-R | HST-30 |
| 22 | 45 | KTS-R-45 | JKS-45 | JJS-45 | 5014006-050 | KLS-R-045 | A6K-45-R | HST-45 |
| 30 | 60 | KTS-R-60 | JKS-60 | JJS-60 | 5014006-063 | KLS-R-060 | A6K-60-R | HST-60 |
| 37 | 80 | KTS-R-80 | JKS-80 | JJS-80 | 5014006-080 | KLS-R-075 | A6K-80-R | HST-80 |
| 45 | 90 | KTS-R-90 | JKS-90 | JJS-90 | 5014006-100 | KLS-R-090 | A6K-90-R | HST-90 |
| 55 | 100 | KTS-R-100 | JKS-100 | JJS-100 | 5014006-100 | KLS-R-100 | A6K-100-R | HST-100 |
| 75 | 125 | KTS-R-125 | JKS-125 | JJS-125 | 2028220-125 | KLS-150 | A6K-125-R | HST-125 |
| 90 | 150 | KTS-R-150 | JKS-150 | JJS-150 | 2028220-150 | KLS-175 | A6K-150-R | HST-150 |

Table 8.24 3x525-690 V, Enclosure Types B and C

8.9 Power Ratings, Weight and Dimensions

| Enclosure Type [kW] | A2 | A3 | A4 | A5 | B1 | B2 | B3 | B4 | C1 | C2 | C3 | C4 |
|---|----------------|----------------|------------|------------|--------------|--------------|---------|---------|--------------|--------------|---------|---------|
| 1x200-240 V | S2 | 1.1 | 1.1-2.2 | 1.1 | 1.5-3.7 | 7.5 | - | - | 15 | 22 | - | - |
| 3x200-240 V | T2 | 3.7 | 0.25-2.2 | 0.25-3.7 | 5.5-11 | 15 | 5.5-11 | 15-18.5 | 18.5-30 | 37-45 | 22-30 | 37-45 |
| 1x380-480 V | S4 | - | 1.1-4.0 | - | 7.5 | 11 | - | - | 18 | 37 | - | - |
| 3x380-480 V | T4 | 5.5-7.5 | 0.37-4.0 | 0.37-7.5 | 11-18.5 | 22-30 | 11-18.5 | 22-37 | 37-55 | 75-90 | 45-55 | 75-90 |
| 3x525-600 V | T6 | 0.75-7.5 | - | 0.75-7.5 | 11-18.5 | 22-30 | 11-18.5 | 22-37 | 37-55 | 75-90 | 45-55 | 75-90 |
| 3x525-690 V | T7 | - | - | - | - | 11-30 | - | - | - | 37-90 | - | - |
| IP | 20 | 20 | 55/66 | 55/66 | 21/55/66 | 21/55/66 | 20 | 20 | 21/55/66 | 21/55/66 | 20 | 20 |
| NEMA | Chassis Type 1 | Chassis Type 1 | Type 12/4X | Type 12/4X | Type 1/12/4X | Type 1/12/4X | Chassis | Chassis | Type 1/12/4X | Type 1/12/4X | Chassis | Chassis |
| Height [mm] | | | | | | | | | | | | |
| Height of back plate | A* 268 | 268 | 390 | 420 | 480 | 650 | 399 | 520 | 680 | 770 | 550 | 660 |
| Height with de-coupling plate for Fieldbus cables | A 374 | 374 | - | - | - | - | 419 | 595 | - | - | 630 | 800 |
| Distance between mounting holes | a 257 | 350 | 401 | 402 | 454 | 624 | 380 | 495 | 648 | 739 | 521 | 631 |
| Width [mm] | | | | | | | | | | | | |
| Width of back plate | B 90 | 130 | 200 | 242 | 242 | 242 | 165 | 231 | 308 | 370 | 308 | 370 |
| Width of back plate with one C option | B 130 | 170 | - | 242 | 242 | 242 | 205 | 231 | 308 | 370 | 308 | 370 |
| Width of back plate with two C option | B 90 | 130 | - | 242 | 242 | 242 | 165 | 231 | 308 | 370 | 308 | 370 |
| Distance between mounting holes | b 70 | 110 | 171 | 215 | 210 | 210 | 140 | 200 | 272 | 334 | 270 | 330 |
| Depth** [mm] | | | | | | | | | | | | |
| Without option A/B | C 205 | 205 | 175 | 200 | 260 | 260 | 248 | 242 | 310 | 335 | 333 | 333 |
| With option A/B | C 220 | 220 | 175 | 200 | 260 | 260 | 262 | 242 | 310 | 335 | 333 | 333 |
| Screw holes [mm] | | | | | | | | | | | | |
| c | 8.0 | 8.0 | 8.25 | 8.2 | 12 | 12 | 8 | - | 12 | 12 | - | - |
| d | ø11 | ø11 | ø12 | ø12 | ø19 | ø19 | 12 | - | ø19 | ø19 | - | - |
| e | ø5.5 | ø5.5 | ø6.5 | ø6.5 | ø9 | ø9 | 6.8 | 8.5 | ø9.0 | ø9.0 | 8.5 | 8.5 |
| f | 9 | 9 | 6 | 9 | 9 | 9 | 7.9 | 15 | 9.8 | 9.8 | 17 | 17 |
| Max weight [kg] | 4.9 | 5.3 | 9.7 | 14 | 23 | 27 | 12 | 23.5 | 45 | 65 | 35 | 50 |

* See *Illustration 3.4* and *Illustration 3.5* for top and bottom mounting holes.

** Depth of enclosure will vary with different options installed.

Table 8.25 Power Ratings, Weight and Dimensions

9 Appendix

9.1 Symbols, Abbreviations and Conventions

| | |
|---------------|--|
| AC | Alternating Current |
| AEO | Automatic Energy Optimization |
| AWG | American Wire Gauge |
| AMA | Automatic Motor Adaptation |
| °C | Degrees Celsius |
| DC | Direct Current |
| EMC | Electro Magnetic Compatibility |
| ETR | Electronic Thermal Relay |
| FC | Frequency Converter |
| LCP | Local Control Panel |
| MCT | Motion Control Tool |
| IP | Ingress Protection |
| $I_{M,N}$ | Nominal Motor Current |
| $f_{M,N}$ | Nominal Motor Frequency |
| $P_{M,N}$ | Nominal Motor Power |
| $U_{M,N}$ | Nominal Motor Voltage |
| PM Motor | Permanent Magnet Motor |
| PELV | Protective Extra Low Voltage |
| PCB | Printed Circuit Board |
| PWM | Pulse Width Modulated |
| I_{LIM} | Current Limit |
| I_{INV} | Rated Inverter Output Current |
| RPM | Revolutions Per Minute |
| Regen | Regenerative Terminals |
| n_s | Synchronous Motor Speed |
| T_{LIM} | Torque Limit |
| $I_{VLT,MAX}$ | The Maximum Output Current |
| $I_{VLT,N}$ | The Rated Output Current Supplied by the Frequency Converter |

Table 9.1 Symbols and Abbreviations

Conventions

Numbered lists indicate procedures.

Bullet lists indicate other information and description of illustrations.

Italicised text indicates

- cross reference
- link
- parameter name

9.2 Parameter Menu Structure

| | | | | | | | | |
|------|--------------------------------------|---|------|----------------------------------|------|---------------------------------|------|--------------------------------------|
| 0-0* | Operation / Display | Motor Control Principle | 1-01 | Motor Control Principle | 4-1* | Motor Limits | 5-57 | Term. 33 Low Ref./Feedb. Value |
| 0-0* | Basic Settings | Torque Characteristics | 1-03 | Trip Speed Low [RPM] | 4-10 | Motor Speed Direction | 5-58 | Term. 33 High Ref./Feedb. Value |
| 0-01 | Language | Clockwise Direction | 1-06 | Motor Temperature | 4-11 | Motor Speed Low Limit [RPM] | 5-59 | Pulse Filter Time Constant #33 |
| 0-02 | Motor Speed Unit | Motor Selection | 1-1* | Motor Thermal Protection | 4-12 | Motor Speed High Limit [RPM] | 5-6* | Pulse Output |
| 0-03 | Regional Settings | Motor Construction | 1-90 | Motor External Fan | 4-13 | Motor Speed High Limit [Hz] | 5-60 | Terminal 27 Pulse Output Variable |
| 0-04 | Operating State at Power-up | WVC+ PM | 1-93 | Thermistor Source | 4-14 | Motor Speed High Limit [Hz] | 5-62 | Pulse Output Max Freq #27 |
| 0-05 | Local Mode Unit | 1-14 Damping Gain | 2-* | Brakes | 4-16 | Torque Limit Motor Mode | 5-63 | Terminal 29 Pulse Output Variable |
| 0-1* | Set-up Operations | 1-15 Low Speed Filter Time Const. | 2-0* | DC Brake | 4-17 | Current Limit | 5-65 | Pulse Output Max Freq #29 |
| 0-10 | Active Set-up | 1-16 High Speed Filter Time Const. | 2-00 | DC Hold/Preheat Current | 4-18 | Current Limit | 5-66 | Terminal X30/6 Pulse Output Variable |
| 0-11 | This Set-up Linked to | 1-17 Voltage filter time const. | 2-01 | DC Brake Current | 4-19 | Max Output Frequency | 5-68 | Pulse Output Max Freq #X30/6 |
| 0-12 | Program Set-up | 1-2* | 2-02 | DC Braking Time | 4-5* | Adj. Warnings | 5-8* | I/O Options |
| 0-13 | Readout: Linked Set-ups | 1-20 Motor Power [kW] | 2-03 | DC Brake Cut In Speed [RPM] | 4-50 | Warning Current Low | 5-80 | AHF Cap Reconnect Delay |
| 0-14 | Readout: Prog. Set-ups / Channel | 1-21 Motor Power [HP] | 2-04 | DC Brake Cut In Speed [Hz] | 4-51 | Warning Current High | 5-9* | Bus Controlled |
| 0-2* | LCP Display | 1-22 Motor Voltage | 2-06 | Parking Current | 4-52 | Warning Speed Low | 5-90 | Digital & Relay Bus Control |
| 0-20 | Display Line 1.1 Small | 1-23 Motor Frequency | 2-07 | Parking Time | 4-53 | Warning Speed High | 5-93 | Pulse Out #27 Bus Control |
| 0-21 | Display Line 1.2 Small | 1-24 Motor Current | 2-1* | Brake Energy Funct. | 4-54 | Warning Reference Low | 5-94 | Pulse Out #29 Bus Control |
| 0-22 | Display Line 1.3 Small | 1-25 Motor Nominal Speed | 2-10 | Brake Function | 4-55 | Warning Reference High | 5-95 | Pulse Out #29 Bus Control |
| 0-23 | Display Line 2 Large | 1-26 Motor Cont. Rated Torque | 2-11 | Brake Resistor (ohm) | 4-56 | Warning Feedback Low | 5-96 | Pulse Out #29 Timeout Preset |
| 0-24 | Display Line 3 Large | 1-28 Motor Rotation Check | 2-12 | Brake Power Limit (kW) | 4-57 | Warning Feedback High | 5-97 | Pulse Out #X30/6 Bus Control |
| 0-25 | My Personal Menu | 1-29 Automatic Motor Adaptation (AMA) | 2-13 | Brake Power Monitoring | 4-58 | Missing Motor Phase Function | 5-98 | Pulse Out #X30/6 Timeout Preset |
| 0-3* | LCP Custom Readout | 1-3* | 2-15 | Brake Check | 4-6* | Speed Bypass | 6-3* | Analog In/Out |
| 0-30 | Custom Readout Unit | 1-30 Stator Resistance (Rs) | 2-16 | AC brake Max. Current | 4-60 | Bypass Speed From [RPM] | 6-0* | Analog I/O Mode |
| 0-31 | Custom Readout Min Value | 1-31 Rotor Resistance (Rr) | 2-17 | Over-voltage Control | 4-61 | Bypass Speed From [Hz] | 6-00 | Live Zero Timeout Time |
| 0-32 | Custom Readout Max Value | 1-33 Stator Leakage Reactance (X1) | 3-3* | Reference / Ramps | 4-62 | Bypass Speed To [RPM] | 6-01 | Live Zero Timeout Function |
| 0-37 | Display Text 1 | 1-34 Rotor Leakage Reactance (X2) | 3-0* | Reference Limits | 4-63 | Bypass Speed To [Hz] | 6-1* | Analog Input 53 |
| 0-38 | Display Text 2 | 1-35 Main Reactance (Xh) | 3-02 | Minimum Reference | 4-64 | Semi-Auto Bypass Set-up | 6-10 | Terminal 53 Low Voltage |
| 0-39 | Display Text 3 | 1-36 Iron Loss Resistance (Rfe) | 3-03 | Maximum Reference | 5-* | Digital In/Out | 6-11 | Terminal 53 High Voltage |
| 0-4* | LCP keypad | 1-37 d-axis Inductance (Ld) | 3-04 | Reference Function | 5-0* | Digital I/O mode | 6-12 | Terminal 53 Low Current |
| 0-40 | [Hand on] Key on LCP | 1-39 Motor Poles | 3-1* | References | 5-00 | Digital I/O Mode | 6-13 | Terminal 53 High Current |
| 0-41 | [Off] Key on LCP | 1-40 Back EMF at 1000 RPM | 3-10 | Preset Reference | 5-01 | Terminal 27 Mode | 6-14 | Terminal 53 Low Ref./Feedb. Value |
| 0-42 | [Auto on] Key on LCP | 1-46 Position Detection Gain | 3-11 | Jog Speed [Hz] | 5-02 | Terminal 29 Mode | 6-15 | Terminal 53 High Ref./Feedb. Value |
| 0-43 | [Reset] Key on LCP | 1-5* | 3-13 | Reference Site | 5-1* | Digital Inputs | 6-16 | Terminal 53 Filter Time Constant |
| 0-44 | [Off/Res] Key on LCP | 1-50 Motor Magnetisation at Zero Speed | 3-14 | Preset Relative Reference | 5-10 | Terminal 18 Digital Input | 6-17 | Terminal 53 Live Zero |
| 0-45 | [Drive Bypass] Key on LCP | 1-51 Min Speed Normal Magnetising [RPM] | 3-15 | Reference 1 Source | 5-11 | Terminal 19 Digital Input | 6-2* | Analog Input 54 |
| 0-5* | Copy/Save | 1-52 Min Speed Normal Magnetising [Hz] | 3-16 | Reference 2 Source | 5-12 | Terminal 27 Digital Input | 6-20 | Terminal 54 Low Voltage |
| 0-50 | LCP Copy | 1-55 V/f Characteristic - V | 3-17 | Reference 3 Source | 5-13 | Terminal 29 Digital Input | 6-21 | Terminal 54 High Voltage |
| 0-51 | Set-up Copy | 1-56 V/f Characteristic - f | 3-19 | Jog Speed [RPM] | 5-14 | Terminal 32 Digital Input | 6-22 | Terminal 54 Low Current |
| 0-6* | Password | 1-58 Flystart Test Pulses Current | 3-4* | Ramp 1 | 5-15 | Terminal 33 Digital Input | 6-23 | Terminal 54 High Current |
| 0-60 | Main Menu Password | 1-59 Flystart Test Pulses Frequency | 3-41 | Ramp 1 Ramp Up Time | 5-16 | Terminal X30/2 Digital Input | 6-24 | Terminal 54 Low Ref./Feedb. Value |
| 0-61 | Access to Main Menu w/o Password | 1-6* | 3-42 | Ramp 1 Ramp Down Time | 5-17 | Terminal X30/3 Digital Input | 6-25 | Terminal 54 High Ref./Feedb. Value |
| 0-65 | Personal Menu Password | 1-60 Low Speed Load Compensation | 3-5* | Ramp 2 | 5-18 | Terminal X30/4 Digital Input | 6-26 | Terminal 54 Filter Time Constant |
| 0-66 | Access to Personal Menu w/o Password | 1-61 High Speed Load Compensation | 3-52 | Ramp 2 Ramp Down Time | 5-19 | Terminal 37 Digital Input | 6-27 | Terminal 54 Live Zero |
| 0-67 | Bus Password Access | 1-62 Slip Compensation | 3-8* | Other Ramps | 5-3* | Digital Outputs | 6-3* | Analog Input X30/11 |
| 0-7* | Clock Settings | 1-63 Slip Compensation Time Constant | 3-80 | Jog Ramp Time | 5-30 | Terminal 27 Digital Output | 6-30 | Terminal X30/11 Low Voltage |
| 0-70 | Date and Time | 1-64 Resonance Dampening | 3-81 | Quick Stop Ramp Time | 5-31 | Terminal 29 Digital Output | 6-31 | Terminal X30/11 High Voltage |
| 0-71 | Date Format | 1-65 Resonance Dampening Time Constant | 3-82 | Initial Ramp Time | 5-32 | Term X30/6 Digi Out (MCB 101) | 6-34 | Term. X30/11 Low Ref./Feedb. Value |
| 0-72 | Time Format | 1-66 Min. Current at Low Speed | 3-84 | Check Valve Ramp Time | 5-33 | Term X30/7 Digi Out (MCB 101) | 6-35 | Term. X30/11 High Ref./Feedb. Value |
| 0-74 | DST/Summerime | 1-7* | 3-85 | Check Valve Ramp End Speed [RPM] | 5-4* | Relays | 6-36 | Term. X30/11 Filter Time Constant |
| 0-76 | DST/Summerime Start | 1-70 PM Start Mode | 3-86 | Check Valve Ramp End Speed [Hz] | 5-40 | Function Relay | 6-37 | Term. X30/11 Live Zero |
| 0-77 | DST/Summerime End | 1-71 Start Delay | 3-87 | Final Ramp Time | 5-41 | Off Delay, Relay | 6-4* | Analog Input X30/12 |
| 0-79 | Clock Fault | 1-72 Start Function | 3-88 | Digital Pot.Meter | 5-42 | On Delay, Relay | 6-40 | Terminal X30/12 Low Voltage |
| 0-81 | Working Days | 1-73 Flying Start | 3-90 | Step Size | 5-5* | Pulse Input | 6-41 | Terminal X30/12 High Voltage |
| 0-82 | Additional Working Days | 1-74 Start Speed [RPM] | 3-91 | Ramp Time | 5-50 | Term. 29 Low Frequency | 6-44 | Term. X30/12 Low Ref./Feedb. Value |
| 0-83 | Additional Non-Working Days | 1-75 Start Speed [Hz] | 3-92 | Power Restore | 5-51 | Term. 29 High Frequency | 6-45 | Term. X30/12 High Ref./Feedb. Value |
| 0-89 | Date and Time Readout | 1-76 Start Current | 3-93 | Maximum Limit | 5-52 | Term. 29 Low Ref./Feedb. Value | 6-46 | Term. X30/12 Filter Time Constant |
| 1-* | Load and Motor | 1-8* | 3-94 | Minimum Limit | 5-53 | Term. 29 High Ref./Feedb. Value | 6-47 | Term. X30/12 Live Zero |
| 1-0* | General Settings | 1-80 Function at Stop | 3-95 | Ramp Delay | 5-54 | Pulse Filter Time Constant #29 | 6-5* | Analog Output 42 |
| 1-00 | Configuration Mode | 1-81 Min Speed for Function at Stop [RPM] | 4-* | Limits / Warnings | 5-55 | Term. 33 Low Frequency | 6-50 | Terminal 42 Output |
| | | 1-82 Min Speed for Function at Stop [Hz] | 5-56 | Term. 33 High Frequency | | | 6-51 | Terminal 42 Output Min Scale |

| | | | | | | | | | | | | |
|---------------------------------|--------------------------------------|-------------------------------|--------------------------------|--------------------------|-------------------------------|---------------------------|-------------------------------|--------------------------------|-------------------------------------|--------------------------------|-----------------------------------|-----------------|
| 6-52 | Terminal 42 Output Max Scale | 8-96 | Bus Feedback 3 | 10-32 | Devicenet Revision | 13-00 | SL Controller Mode | 14-80 | Option Supplied by External 24VDC | | | |
| 6-53 | Terminal 42 Output Bus Control | 9-** PROFIDrive | 9-00 | Setpoint | 10-33 | Store Always | 13-01 | Start Event | 14-9* Fault Settings | | | |
| 6-54 | Terminal 42 Output Timeout Preset | 9-07 | Actual Value | 10-34 | DeviceNet Product Code | 13-02 | Stop Event | 14-90 | Fault Level | | | |
| 6-55 | Terminal 42 Output Filter | 9-15 | PCD Write Configuration | 12-** Ethernet | 12-00 | Devicenet F Parameters | 13-03 | Reset SLC | 15-** Drive Information | | | |
| 6-60 | Terminal X30/8 Output | 9-16 | PCD Read Configuration | 12-0* IP Settings | 12-00 | IP Address Assignment | 13-10 | Comparator Operand | 15-00 | Operating hours | | |
| 6-61 | Terminal X30/8 Min. Scale | 9-18 | Node Address | 12-01 | IP Address | 12-01 | IP Address | 13-11 | Comparator Operator | 15-01 | Running Hours | |
| 6-62 | Terminal X30/8 Max. Scale | 9-22 | Telegram Selection | 12-02 | Subnet Mask | 12-02 | Subnet Mask | 13-12 | Comparator Value | 15-02 | kWh Counter | |
| 6-63 | Terminal X30/8 Output Bus Control | 9-23 | Parameters for Signals | 12-03 | Parameter Edit | 12-03 | Parameter Edit | 13-2* | Timers | 15-03 | Power Up's | |
| 6-64 | Terminal X30/8 Output Timeout Preset | 9-27 | Process Control | 12-04 | Default Gateway | 12-04 | DHCP Server | 13-20 | SL Controller Timer | 15-04 | Over Temp's | |
| 8-** Comm. and Options | | 9-28 | Safe Address | 12-05 | Lease Expires | 12-05 | Lease Expires | 13-4* | Logic Rules | 15-05 | Over Volt's | |
| 8-0* General Settings | | 9-31 | Fault Message Counter | 12-06 | Name Servers | 12-06 | Name Servers | 13-40 | Logic Rule Boolean 1 | 15-06 | Reset kWh Counter | |
| 8-01 | Control Site | 9-44 | Fault Code | 12-07 | Domain Name | 12-07 | Domain Name | 13-41 | Logic Rule Operator 1 | 15-07 | Reset Running Hours Counter | |
| 8-02 | Control Source | 9-45 | Fault Number | 12-08 | Host Name | 12-08 | Host Name | 13-42 | Logic Rule Boolean 2 | 15-08 | Number of Starts | |
| 8-03 | Control Timeout Time | 9-47 | Fault Situation Counter | 12-09 | Physical Address | 12-09 | Physical Address | 13-43 | Logic Rule Operator 2 | 15-1* Data Log Settings | | |
| 8-04 | Control Timeout Function | 9-52 | Profibus Warning Word | 12-1* | Ethernet Link Parameters | 12-1* | Ethernet Link Parameters | 13-44 | Logic Rule Boolean 3 | 15-10 | Logging Source | |
| 8-05 | End-of-Timeout Function | 9-53 | Actual Baud Rate | 12-10 | Link Status | 12-10 | Link Status | 13-5* | States | 15-11 | Logging Interval | |
| 8-06 | Reset Control Timeout | 9-63 | Device Identification | 12-11 | Link Duration | 12-11 | Link Duration | 13-51 | SL Controller Event | 15-12 | Trigger Event | |
| 8-07 | Diagnosis Trigger | 9-64 | Profile Number | 12-12 | Auto Negotiation | 12-12 | Auto Negotiation | 13-52 | SL Controller Action | 15-13 | Logging Mode | |
| 8-08 | Readout Filtering | 9-65 | Control Word 1 | 12-13 | Link Speed | 12-13 | Link Speed | 14-** Special Functions | | 15-14 | Samples Before Trigger | |
| 8-1* Control Settings | | 9-67 | Status Word 1 | 12-14 | Link Duplex | 12-14 | Link Duplex | 14-0* | Inverter Switching | 15-2* | Historic Log | |
| 8-10 | Control Profile | 9-68 | Profibus Save Data Values | 12-2* | Process Data | 12-2* | Process Data | 14-00 | Switching Pattern | 15-20 | Historic Log: Event | |
| 8-13 | Configurable Status Word STW | 9-71 | Profibus DriveReset | 12-20 | Control Instance | 12-20 | Control Instance | 14-01 | Switching Frequency | 15-21 | Historic Log: Value | |
| 8-14 | Configurable Control Word CTW | 9-72 | DO Identification | 12-21 | Process Data Config Write | 12-21 | Process Data Config Write | 14-03 | Overmodulation | 15-22 | Historic Log: Time | |
| 8-3* FC Port Settings | | 9-75 | Defined Parameters (1) | 12-22 | Process Data Config Read | 12-22 | Process Data Config Read | 14-04 | PWM Random | 15-23 | Historic Log: Date and Time | |
| 8-30 | Protocol | 9-80 | Defined Parameters (2) | 12-27 | Primary Master | 12-27 | Primary Master | 14-1* | Mains On/Off | 15-3* Alarm Log | | |
| 8-31 | Address | 9-81 | Defined Parameters (3) | 12-28 | Store Data Values | 12-28 | Store Data Values | 14-10 | Mains Failure | 15-30 | Alarm Log: Error Code | |
| 8-32 | Baud Rate | 9-82 | Defined Parameters (4) | 12-29 | Store Always | 12-29 | Store Always | 14-11 | Mains Voltage at Mains Fault | 15-31 | Alarm Log: Value | |
| 8-33 | Parity / Stop Bits | 9-83 | Defined Parameters (5) | 12-3* EtherNet/IP | 12-30 | Warning Parameter | 12-30 | Warning Parameter | 14-12 | Function at Mains Imbalance | 15-32 | Alarm Log: Time |
| 8-35 | Minimum Response Delay | 9-90 | Changed Parameters (1) | 12-31 | Net Reference | 12-31 | Net Reference | 14-2* | Reset Functions | 15-33 | Alarm Log: Date and Time | |
| 8-36 | Max Response Delay | 9-92 | Changed Parameters (2) | 12-32 | Net Control | 12-32 | Net Control | 14-20 | Reset Mode | 15-34 | Alarm Log: Setpoint | |
| 8-37 | Maximum Inter-Char Delay | 9-93 | Changed Parameters (3) | 12-33 | CIP Revision | 12-33 | CIP Revision | 14-21 | Automatic Restart Time | 15-35 | Alarm Log: Feedback | |
| 8-4* FC MC protocol set | | 9-94 | Changed Parameters (4) | 12-34 | CIP Product Code | 12-34 | CIP Product Code | 14-22 | Operation Mode | 15-36 | Alarm Log: Current Demand | |
| 8-40 | Telegram Selection | 9-99 | Changed Parameters (5) | 12-35 | EDS Parameter | 12-35 | EDS Parameter | 14-23 | Typecode Setting | 15-37 | Alarm Log: Process Ctrl Unit | |
| 8-42 | PCD Write Configuration | 10-** CAN Fieldbus | 10-00 | Common Settings | 12-37 | COS Inhibit Timer | 12-37 | COS Inhibit Timer | 14-25 | Trip Delay at Torque Limit | 15-4* Drive Identification | |
| 8-43 | PCD Read Configuration | 10-01 | CAN Protocol | 10-01 | Baud Rate Select | 10-01 | Baud Rate Select | 14-26 | Trip Delay at Inverter Fault | 15-40 | FC Type | |
| 8-5* | Digital/Bus | 10-02 | MAC ID | 10-02 | MAC ID | 10-02 | MAC ID | 14-28 | Production Settings | 15-41 | Power Section | |
| 8-50 | Coasting Select | 10-05 | Readout Transmit Error Counter | 10-05 | Readout Receive Error Counter | 10-05 | Readout Receive Error Counter | 14-29 | Service Code | 15-42 | Voltage | |
| 8-52 | DC Brake Select | 10-06 | Readout Bus Off Counter | 10-06 | Readout Bus Off Counter | 10-06 | Readout Bus Off Counter | 14-3* | Current Limit Ctrl. | 15-43 | Software Version | |
| 8-53 | Start Select | 10-07 | DeviceNet | 10-07 | DeviceNet | 10-07 | DeviceNet | 14-30 | Current Lim Ctrl, Proportional Gain | 15-44 | Ordered Typecode String | |
| 8-54 | Reversing Select | 10-10 | Process Data Type Selection | 10-10 | Process Data Type Selection | 10-10 | Process Data Type Selection | 14-31 | Current Lim Ctrl, Integration Time | 15-45 | Actual Typecode String | |
| 8-55 | Set-up Select | 10-11 | Process Data Config Write | 10-11 | Process Data Config Write | 10-11 | Process Data Config Write | 14-32 | Current Lim Ctrl, Filter Time | 15-46 | Frequency Converter Ordering No | |
| 8-56 | Preset Reference Select | 10-12 | Warning Parameter | 10-12 | Warning Parameter | 10-12 | Warning Parameter | 14-4* | Energy Optimising | 15-47 | Power Card Ordering No | |
| 8-7* | BACnet | 10-13 | Net Reference | 10-13 | Net Reference | 10-13 | Net Reference | 14-40 | VT Level | 15-48 | LCP Id No | |
| 8-70 | BACnet Device Instance | 10-14 | Net Control | 10-14 | Net Control | 10-14 | Net Control | 14-41 | AEO Minimum Magnetisation | 15-49 | SW ID Control Card | |
| 8-72 | MS/TP Max Masters | 10-15 | Net Control | 10-15 | Net Control | 10-15 | Net Control | 14-42 | Minimum AEO Frequency | 15-50 | SW ID Power Card | |
| 8-73 | MS/TP Max Info Frames | 10-2* | COS Filters | 10-2* | COS Filters | 10-2* | COS Filters | 14-43 | Motor Cosphi | 15-51 | Frequency Converter Serial Number | |
| 8-74 | "I-An" Service | 10-20 | COS Filter 1 | 10-20 | COS Filter 1 | 10-20 | COS Filter 1 | 14-5* | Environment | 15-53 | Power Card Serial Number | |
| 8-75 | Initialisation Password | 10-21 | COS Filter 2 | 10-21 | COS Filter 2 | 10-21 | COS Filter 2 | 14-50 | RFI Filter | 15-59 | CSV Filename | |
| 8-8* FC Port Diagnostics | | 10-22 | COS Filter 3 | 10-22 | COS Filter 3 | 10-22 | COS Filter 3 | 14-51 | DC Link Compensation | 15-6* Option Ident | | |
| 8-80 | Bus Message Count | 10-23 | COS Filter 4 | 10-23 | COS Filter 4 | 10-23 | COS Filter 4 | 14-52 | Fan Control | 15-60 | Option Mounted | |
| 8-81 | Bus Error Count | 10-30 | Array Index | 10-30 | Array Index | 10-30 | Array Index | 14-53 | Fan Monitor | 15-61 | Option SW Version | |
| 8-82 | Slave Message Rcvd | 10-31 | Store Data Values | 10-31 | Store Data Values | 10-31 | Store Data Values | 14-55 | Output Filter | 15-62 | Option Ordering No | |
| 8-83 | Slave Error Count | 10-3* Parameter Access | | 13-** Smart Logic | | 13-0* SLC Settings | | 14-59 | Broadcast Storm Protection | 15-63 | Option Serial No | |
| 8-9* Bus Jog / Feedback | | 10-31 | Store Data Values | 10-31 | Store Data Values | 10-31 | Store Data Values | 14-6* | Auto Derate | 15-70 | Option in Slot A | |
| 8-90 | Bus Jog 1 Speed | 10-32 | Parameter Access | 10-32 | Parameter Access | 10-32 | Parameter Access | 14-60 | Function at Over Temperature | 15-71 | Slot A Option SW Version | |
| 8-91 | Bus Jog 2 Speed | 10-33 | Array Index | 10-33 | Array Index | 10-33 | Array Index | 14-61 | Function at Inverter Overload | 15-72 | Option in Slot B | |
| 8-94 | Bus Feedback 1 | 10-34 | Store Data Values | 10-34 | Store Data Values | 10-34 | Store Data Values | 14-62 | Inv. Overload Derate Current | 15-73 | Slot B Option SW Version | |
| 8-95 | Bus Feedback 2 | 10-35 | Store Data Values | 10-35 | Store Data Values | 10-35 | Store Data Values | 14-8* | Options | 15-74 | Option in Slot CO/E0 | |

| | | | | |
|------------------------------------|--------------------------------------|-------------------------------------|---------------------------------------|---|
| 15-75 Slot CO/EO Option SW Version | 16-69 Pulse Output #27 [Hz] | 20-70 Closed Loop Type | 21-51 Ext. 3 Minimum Reference | 22-8* Flow Compensation |
| 15-76 Option in Slot C1/E1 | 16-70 Pulse Output #29 [Hz] | 20-71 PID Performance | 21-52 Ext. 3 Maximum Reference | 22-80 Flow Compensation |
| 15-77 Slot C1/E1 Option SW Version | 16-71 Relay Output [bin] | 20-72 PID Output Change | 21-53 Ext. 3 Reference Source | 22-81 Square-linear Curve Approximation |
| 15-9* Parameter Info | 16-72 Counter A | 20-73 Minimum Feedback Level | 21-54 Ext. 3 Feedback Source | 22-82 Work Point Calculation |
| 15-92 Defined Parameters | 16-73 Counter B | 20-74 Maximum Feedback Level | 21-55 Ext. 3 Setpoint | 22-83 Speed at No-Flow [RPM] |
| 15-93 Modified Parameters | 16-75 Analog In X30/11 | 20-79 PID Autotuning | 21-57 Ext. 3 Reference [Unit] | 22-84 Speed at No-Flow [Hz] |
| 15-98 Drive Identification | 16-76 Analog In X30/12 | 20-8* PID Basic Settings | 21-58 Ext. 3 Feedback [Unit] | 22-85 Speed at Design Point [RPM] |
| 15-99 Parameter Metadata | 16-77 Analog Out X30/8 [mA] | 20-81 PID Normal/ Inverse Control | 21-59 Ext. 3 Output [%] | 22-86 Speed at Design Point [Hz] |
| 16** Data Readouts | 16-8* Fieldbus & FC Port | 20-82 PID Start Speed [RPM] | 21-6* Ext. CL 3 PID | 22-87 Pressure at No-Flow Speed |
| 16-0* General Status | 16-80 Fieldbus CTW 1 | 20-83 PID Start Speed [Hz] | 21-60 Ext. 3 Normal/Inverse Control | 22-88 Pressure at Rated Speed |
| 16-00 Control Word | 16-82 Fieldbus REF 1 | 20-84 On Reference Bandwidth | 21-61 Ext. 3 Proportional Gain | 22-89 Flow at Design Point |
| 16-01 Reference [Unit] | 16-84 Comm. Option STW | 20-9* PID Controller | 21-62 Ext. 3 Integral Time | 22-90 Flow at Rated Speed |
| 16-02 Reference [%] | 16-85 FC Port CTW 1 | 20-91 PID Anti Windup | 21-63 Ext. 3 Differentiation Time | 23** Time-based Functions |
| 16-03 Status Word | 16-86 FC Port REF 1 | 20-93 PID Proportional Gain | 21-64 Ext. 3 Dif. Gain Limit | 23-0* Timed Actions |
| 16-05 Main Actual Value [%] | 16-9* Diagnosis Readouts | 20-94 PID Integral Time | 22** Appl. Functions | 23-00 ON Time |
| 16-09 Custom Readout | 16-90 Alarm Word | 20-95 PID Differentiation Time | 22-0* Miscellaneous | 23-01 ON Action |
| 16-1* Motor Status | 16-91 Alarm Word 2 | 20-96 PID Diff. Gain Limit | 22-00 External Interlock Delay | 23-02 OFF Time |
| 16-10 Power [kW] | 16-92 Warning Word | 21** Ext. Closed Loop | 22-2* No-Flow Detection | 23-03 OFF Action |
| 16-11 Power [hp] | 16-93 Warning Word 2 | 21-0* Ext. CL Autotuning | 22-20 Low Power Auto Set-up | 23-04 Occurrence |
| 16-12 Motor Voltage | 16-94 Ext. Status Word | 21-00 Closed Loop Type | 22-21 Low Power Detection | 23-1* Maintenance |
| 16-13 Frequency | 16-95 Ext. Status Word 2 | 21-01 PID Performance | 22-22 Low Speed Detection | 23-10 Maintenance Item |
| 16-14 Motor current | 16-96 Maintenance Word | 21-02 PID Output Change | 22-23 No-Flow Function | 23-11 Maintenance Action |
| 16-15 Frequency [%] | 18** Info & Readouts | 21-03 Minimum Feedback Level | 22-24 No-Flow Delay | 23-12 Maintenance Time Base |
| 16-16 Torque [Nm] | 18-0* Maintenance Log | 21-04 Maximum Feedback Level | 22-26 Dry Pump Function | 23-13 Maintenance Time Interval |
| 16-17 Speed [RPM] | 18-00 Maintenance Log: Item | 21-09 PID Auto Tuning | 22-27 Dry Pump Delay | 23-14 Maintenance Date and Time |
| 16-18 Motor Thermal | 18-01 Maintenance Log: Action | 21-1* Ext. CL 1 Ref./Fb. | 22-28 No-Flow Low Speed [RPM] | 23-1* Maintenance Reset |
| 16-20 Motor Angle | 18-02 Maintenance Log: Time | 21-10 Ext. 1 Ref./Feedback Unit | 22-29 No-Flow Low Speed [Hz] | 23-15 Reset Maintenance Word |
| 16-22 Torque [%] | 18-03 Maintenance Log: Date and Time | 21-11 Ext. 1 Minimum Reference | 22-3* No-Flow Power Tuning | 23-16 Maintenance Text |
| 16-3* Drive Status | 18-3* Analog Readouts | 21-12 Ext. 1 Maximum Reference | 22-30 No-Flow Power | 23-5* Energy Log |
| 16-30 DC Link Voltage | 18-30 Analog Input X42/1 | 21-13 Ext. 1 Reference Source | 22-31 Power Correction Factor | 23-50 Energy Log Resolution |
| 16-32 Brake Energy /s | 18-31 Analog Input X42/3 | 21-14 Ext. 1 Feedback Source | 22-32 Low Speed [RPM] | 23-51 Period Start |
| 16-33 Brake Energy /2 min | 18-32 Analog Input X42/5 | 21-15 Ext. 1 Setpoint | 22-33 Low Speed [Hz] | 23-53 Energy Log |
| 16-34 Heatsink Temp. | 18-33 Analog Out X42/7 [V] | 21-17 Ext. 1 Reference [Unit] | 22-34 Low Speed Power [kW] | 23-54 Reset Energy Log |
| 16-35 Inverter Thermal | 18-34 Analog Out X42/9 [V] | 21-18 Ext. 1 Feedback [Unit] | 22-35 Low Speed Power [HP] | 23-6* Trending |
| 16-36 Inv. Nom. Current | 18-35 Analog Out X42/11 [V] | 21-19 Ext. 1 Output [%] | 22-36 High Speed [RPM] | 23-60 Trend Variable |
| 16-37 Inv. Max. Current | 18-36 Analog Input X48/2 [mA] | 21-2* Ext. CL 1 PID | 22-37 High Speed [Hz] | 23-61 Continuous Bin Data |
| 16-38 SL Controller State | 18-37 Temp. Input X48/4 | 21-20 Ext. 1 Normal/Inverse Control | 22-38 High Speed Power [kW] | 23-62 Timed Bin Data |
| 16-39 Control Card Temp. | 18-38 Temp. Input X48/7 | 21-21 Ext. 1 Proportional Gain | 22-39 High Speed Power [HP] | 23-63 Timed Period Start |
| 16-40 Logging Buffer Full | 18-39 Temp. Input X48/10 | 21-22 Ext. 1 Integral Time | 22-4* Sleep Mode | 23-64 Timed Period Stop |
| 16-49 Current Fault Source | 18-6* Inputs & Outputs 2 | 21-23 Ext. 1 Differentiation Time | 22-40 Minimum Run Time | 23-65 Minimum Bin Value |
| 16-5* Ref. & Feeds | 18-60 Digital Input 2 | 21-24 Ext. 1 Dif. Gain Limit | 22-41 Minimum Sleep Time | 23-66 Reset Continuous Bin Data |
| 16-50 External Reference | 20** Drive Closed Loop | 21-3* Ext. CL 2 Ref./Fb. | 22-42 Wake-up Speed [RPM] | 23-67 Reset Timed Bin Data |
| 16-52 Feedback[Unit] | 20-0* Feedback | 21-30 Ext. 2 Ref./Feedback Unit | 22-43 Wake-up Speed [Hz] | 23-8* Payback Counter |
| 16-53 Digi Pot Reference | 20-00 Feedback 1 Source | 21-31 Ext. 2 Minimum Reference | 22-44 Wake-up Ref./FB Difference | 23-80 Power Reference Factor |
| 16-54 Feedback 1 [Unit] | 20-01 Feedback 1 Conversion | 21-32 Ext. 2 Maximum Reference | 22-45 Setpoint Boost | 23-81 Energy Cost |
| 16-55 Feedback 2 [Unit] | 20-02 Feedback 1 Source Unit | 21-33 Ext. 2 Reference Source | 22-46 Maximum Boost Time | 23-82 Investment |
| 16-56 Feedback 3 [Unit] | 20-03 Feedback 2 Source | 21-34 Ext. 2 Feedback Source | 22-5* End of Curve | 23-83 Energy Savings |
| 16-58 PID Output [%] | 20-04 Feedback 2 Conversion | 21-35 Ext. 2 Setpoint | 22-50 End of Curve Function | 23-84 Cost Savings |
| 16-59 Adjusted Setpoint | 20-05 Feedback 2 Source Unit | 21-37 Ext. 2 Reference [Unit] | 22-51 End of Curve Delay | 24** Appl. Functions 2 |
| 16-6* Inputs & Outputs | 20-06 Feedback 3 Source | 21-38 Ext. 2 Feedback [Unit] | 22-6* Broken Belt Detection | 24-1* Drive Bypass |
| 16-60 Digital Input | 20-07 Feedback 3 Conversion | 21-39 Ext. 2 Output [%] | 22-60 Broken Belt Function | 24-10 Drive Bypass Function |
| 16-61 Terminal 53 Switch Setting | 20-08 Feedback 3 Source Unit | 21-4* Ext. CL 2 PID | 22-61 Broken Belt Torque | 24-11 Drive Bypass Delay Time |
| 16-62 Analog Input 53 | 20-12 Reference/Feedback Unit | 21-40 Ext. 2 Normal/Inverse Control | 22-62 Broken Belt Delay | 25** Cascade Controller |
| 16-63 Terminal 54 Switch Setting | 20-2* Feedback/Setpoint | 21-41 Ext. 2 Proportional Gain | 22-7* Short Cycle Protection | 25-0* System Settings |
| 16-64 Analog Input 54 | 20-20 Feedback Function | 21-42 Ext. 2 Integral Time | 22-75 Short Cycle Protection | 25-00 Cascade Controller |
| 16-65 Analog Output 42 [mA] | 20-21 Setpoint 1 | 21-43 Ext. 2 Differentiation Time | 22-76 Interval between Starts | 25-02 Motor Start |
| 16-66 Digital Output [bin] | 20-22 Setpoint 2 | 21-44 Ext. 2 Dif. Gain Limit | 22-77 Minimum Run Time | 25-04 Pump Cycling |
| 16-67 Pulse Input #29 [Hz] | 20-23 Setpoint 3 | 21-5* Ext. CL 3 Ref./Fb. | 22-78 Minimum Run Time Override | 25-05 Fixed Lead Pump |
| 16-68 Pulse Input #33 [Hz] | 20-7* PID Autotuning | 21-50 Ext. 3 Ref./Feedback Unit | 22-79 Minimum Run Time Override Value | 25-06 Number of Pumps |

| | | | | | | | |
|--------------|------------------------------------|--------------|------------------------------------|--------------|-------------------------------------|--------------|------------------------------------|
| 25-2* | Bandwidth Settings | 26-26 | Term. X42/3 Filter Time Constant | 27-42 | Ramp Up Delay | 29-29 | High Speed [Hz] |
| 25-20 | Staging Bandwidth | 26-27 | Term. X42/3 Live Zero | 27-43 | Staging Threshold | 29-30 | High Speed Power [kW] |
| 25-21 | Override Bandwidth | 26-3* | Analog Input X42/5 | 27-44 | Destaging Threshold | 29-31 | High Speed Power [HP] |
| 25-22 | Fixed Speed Bandwidth | 26-30 | Terminal X42/5 Low Voltage | 27-45 | Staging Speed [RPM] | 29-32 | Derag On Ref Bandwidth |
| 25-23 | SBW Staging Delay | 26-31 | Terminal X42/5 High Voltage | 27-46 | Staging Speed [Hz] | 29-33 | Power Derag Limit |
| 25-24 | SBW Destaging Delay | 26-34 | Term. X42/5 Low Ref./Feedb. Value | 27-47 | Destaging Speed [RPM] | 29-34 | Consecutive Derag Interval |
| 25-25 | OBW Time | 26-35 | Term. X42/5 High Ref./Feedb. Value | 27-48 | Destaging Speed [Hz] | 30-8* | Special Features |
| 25-26 | Derag At No-Flow | 26-36 | Term. X42/5 Filter Time Constant | 27-5* | Alternate Settings | 30-8* | Compatibility (I) |
| 25-27 | Stage Function | 26-37 | Term. X42/5 Live Zero | 27-50 | Automatic Alternation | 30-81 | Brake Resistor (ohm) |
| 25-28 | Stage Function Time | 26-4* | Analog Out X42/7 | 27-51 | Alternation Event | 31-0* | Bypass Mode |
| 25-29 | Stage Function | 26-40 | Terminal X42/7 Output | 27-52 | Alternation Time Interval | 31-00 | Bypass Mode |
| 25-30 | Destage Function Time | 26-41 | Terminal X42/7 Min. Scale | 27-53 | Alternation Timer Value | 31-01 | Bypass Start Time Delay |
| 25-40 | Staging Settings | 26-42 | Terminal X42/7 Max. Scale | 27-54 | Alternation At Time of Day | 31-02 | Bypass Trip Time Delay |
| 25-40 | Ramp Down Delay | 26-43 | Terminal X42/7 Bus Control | 27-55 | Alternation Predefined Time | 31-03 | Test Mode Activation |
| 25-41 | Ramp Up Delay | 26-44 | Terminal X42/7 Timeout Preset | 27-56 | Alternate Capacity is < | 31-10 | Bypass Status Word |
| 25-42 | Staging Threshold | 26-5* | Analog Out X42/9 | 27-58 | Run Next Pump Delay | 31-11 | Bypass Running Hours |
| 25-43 | Destaging Threshold | 26-50 | Terminal X42/9 Output | 27-6* | Digital Inputs | 31-19 | Remote Bypass Activation |
| 25-44 | Staging Speed [RPM] | 26-51 | Terminal X42/9 Min. Scale | 27-60 | Terminal X66/1 Digital Input | 35-0* | Sensor Input Option |
| 25-45 | Staging Speed [Hz] | 26-52 | Terminal X42/9 Max. Scale | 27-61 | Terminal X66/3 Digital Input | 35-0* | Temp. Input Mode |
| 25-46 | Destaging Speed [RPM] | 26-53 | Terminal X42/9 Bus Control | 27-62 | Terminal X66/5 Digital Input | 35-00 | Term. X48/4 Temperature Unit |
| 25-47 | Destaging Speed [Hz] | 26-54 | Terminal X42/9 Timeout Preset | 27-63 | Terminal X66/7 Digital Input | 35-01 | Term. X48/4 Input Type |
| 25-50 | Lead Pump Alternation | 26-6* | Analog Out X42/11 | 27-64 | Terminal X66/9 Digital Input | 35-02 | Term. X48/7 Temperature Unit |
| 25-51 | Alternation Event | 26-60 | Terminal X42/11 Output | 27-65 | Terminal X66/11 Digital Input | 35-03 | Term. X48/7 Input Type |
| 25-52 | Alternation Time Interval | 26-61 | Terminal X42/11 Min. Scale | 27-66 | Terminal X66/13 Digital Input | 35-04 | Term. X48/10 Temperature Unit |
| 25-53 | Alternation Timer Value | 26-62 | Terminal X42/11 Max. Scale | 27-7* | Connections | 35-05 | Term. X48/10 Input Type |
| 25-54 | Alternation Predefined Time | 26-63 | Terminal X42/11 Bus Control | 27-70 | Relay | 35-06 | Temperature Sensor Alarm Function |
| 25-55 | Alternate if Load < 50% | 26-64 | Terminal X42/11 Timeout Preset | 27-9* | Readouts | 35-1* | Temp. Input X48/4 |
| 25-56 | Staging Mode at Alternation | 27-0* | Cascade CTL Option | 27-91 | Cascade Reference | 35-14 | Term. X48/4 Filter Time Constant |
| 25-58 | Run Next Pump Delay | 27-01 | Pump Status | 27-92 | % Of Total Capacity | 35-15 | Term. X48/4 Temp. Monitor |
| 25-59 | Run on Mains Delay | 27-02 | Manual Pump Control | 27-93 | Cascade Option Status | 35-16 | Term. X48/4 Low Temp. Limit |
| 25-8* | Status | 27-03 | Current Runtime Hours | 27-94 | Cascade System Status | 35-17 | Term. X48/4 High Temp. Limit |
| 25-80 | Cascade Status | 27-04 | Pump Total Lifetime Hours | 27-95 | Advanced Cascade Relay Output [bin] | 35-2* | Temp. Input X48/7 |
| 25-81 | Pump Status | 27-04 | Pump Total Lifetime Hours | 27-96 | Extended Cascade Relay Output [bin] | 35-24 | Term. X48/7 Filter Time Constant |
| 25-82 | Lead Pump | 27-1* | Configuration | 29-0* | Water Application Functions | 35-25 | Term. X48/7 Temp. Monitor |
| 25-83 | Relay Status | 27-10 | Cascade Controller | 29-00 | Pipe Fill Enable | 35-26 | Term. X48/7 Low Temp. Limit |
| 25-84 | Pump ON Time | 27-11 | Number Of Drives | 29-01 | Pipe Fill Speed [RPM] | 35-27 | Term. X48/7 High Temp. Limit |
| 25-85 | Relay ON Time | 27-12 | Number Of Pumps | 29-02 | Pipe Fill Speed [Hz] | 35-3* | Temp. Input X48/10 |
| 25-86 | Reset Relay Counters | 27-14 | Pump Capacity | 29-03 | Pipe Fill Time | 35-34 | Term. X48/10 Filter Time Constant |
| 25-90 | Pump Interlock | 27-16 | Runtime Balancing | 29-04 | Pipe Fill Rate | 35-35 | Term. X48/10 Temp. Monitor |
| 25-91 | Manual Alternation | 27-17 | Motor Starters | 29-05 | Filled Setpoint | 35-36 | Term. X48/10 Low Temp. Limit |
| 26-0* | Analog I/O Option | 27-18 | Spin Time for Unused Pumps | 29-06 | No-Flow Disable Timer | 35-37 | Term. X48/10 High Temp. Limit |
| 26-00 | Terminal X42/1 Mode | 27-19 | Reset Current Runtime Hours | 29-1* | Deragging Function | 35-4* | Analog Input X48/2 |
| 26-01 | Terminal X42/3 Mode | 27-20 | Normal Operating Range | 29-10 | Derag Cycles | 35-42 | Term. X48/2 Low Current |
| 26-02 | Terminal X42/5 Mode | 27-21 | Override Limit | 29-11 | Derag at Start/Stop | 35-43 | Term. X48/2 High Current |
| 26-1* | Analog Input X42/1 | 27-22 | Fixed Speed Only Operating Range | 29-12 | Deragging Run Time | 35-44 | Term. X48/2 Low Ref./Feedb. Value |
| 26-10 | Terminal X42/1 Low Voltage | 27-23 | Staging Delay | 29-13 | Derag Speed [RPM] | 35-45 | Term. X48/2 High Ref./Feedb. Value |
| 26-11 | Terminal X42/1 High Voltage | 27-24 | Destaging Delay | 29-14 | Derag Speed [Hz] | 35-46 | Term. X48/2 Filter Time Constant |
| 26-14 | Term. X42/1 Low Ref./Feedb. Value | 27-25 | Override Hold Time | 29-15 | Derag Off Delay | 35-47 | Term. X48/2 Live Zero |
| 26-15 | Term. X42/1 High Ref./Feedb. Value | 27-27 | Min Speed Destage Delay | 29-2* | Derag Power Tuning | | |
| 26-16 | Term. X42/1 Filter Time Constant | 27-27 | Staging Speed | 29-20 | Derag Power [kW] | | |
| 26-17 | Term. X42/1 Live Zero | 27-30 | Auto Tune Staging Speeds | 29-21 | Derag Power [HP] | | |
| 26-2* | Analog Input X42/3 | 27-31 | Stage On Speed [RPM] | 29-22 | Derag Power Factor | | |
| 26-20 | Terminal X42/3 Low Voltage | 27-32 | Stage On Speed [Hz] | 29-23 | Derag Power Delay | | |
| 26-21 | Terminal X42/3 High Voltage | 27-33 | Stage Off Speed [RPM] | 29-24 | Low Speed [RPM] | | |
| 26-24 | Term. X42/3 Low Ref./Feedb. Value | 27-34 | Stage Off Speed [Hz] | 29-25 | Low Speed [Hz] | | |
| 26-25 | Term. X42/3 High Ref./Feedb. Value | 27-4* | Staging Settings | 29-26 | Low Speed Power [kW] | | |
| | | 27-40 | Auto Tune Staging Settings | 29-27 | Low Speed Power [HP] | | |
| | | 27-41 | Ramp Down Delay | 29-28 | High Speed [RPM] | | |

Index

A

Abbreviations..... 64

AC

input..... 6, 15

mains..... 6, 15

waveform..... 6

Additional Resources..... 3

AEO..... 26

Alarm Log..... 21

Alarms..... 34

AMA..... 26, 32, 36, 39

Ambient Conditions..... 52

Analog

input..... 16

inputs..... 35, 52

output..... 16, 53

signal..... 35

speed reference..... 29

Approvals..... 6

Auto On..... 22, 27, 32, 34

Auto-reset..... 21

Auxiliary equipment..... 19

B

Back plate..... 10

Braking..... 37, 32

C

Cable routing..... 19

Certifications..... 6

Circuit

breakers..... 19

Breakers..... 56

Clearance requirements..... 9

Closed loop..... 18

Communication option..... 38

Conduit..... 19

Control

card..... 35

Card performance..... 55

card, 10 V DC output..... 54

Card, 24 V DC output..... 54

card, RS-485 serial communication..... 52

card, USB serial communication..... 55

characteristics..... 54

signal..... 32

terminals..... 24, 32, 34, 22

wiring..... 11, 13, 17, 19

Conventions..... 64

Cooling

Cooling..... 9

clearance..... 19

Current

limit..... 43

rating..... 36

D

DC

current..... 6, 33

link..... 35

Default settings..... 23

Digital

input..... 16, 34, 36, 17

inputs..... 53

Output..... 53

Discharge time..... 7

Disconnect switch..... 20

Disposal Instruction..... 6

E

Electrical interference..... 11

EMC

EMC..... 11

interference..... 13

Environment..... 52

Exploded View..... 5

External

Alarm Reset..... 30

commands..... 6, 34

controllers..... 3

interlock..... 17

Interlock..... 29

F

Fault log..... 21

FC..... 18

Feedback..... 18, 19, 28, 39, 33, 41

Floating delta..... 15

Fuses..... 11, 19, 38, 42, 56

G

Ground

connections..... 19

wire..... 11

Grounded delta..... 15

Grounding..... 14, 15, 20, 19

H

Hand On..... 22, 32

Harmonics..... 6

High voltage..... 7, 20, 32

I

IEC 61800-3..... 15

Initialisation..... 23

Input

 current..... 15

 disconnect..... 15

 power..... 11, 13, 15, 19, 20, 34, 42, 6

 power wiring..... 19

 signal..... 18

 terminal..... 15, 18, 20

 terminals..... 35

 voltage..... 20

Installation

 Installation..... 17, 18, 19

 Environments..... 9

Intended Use..... 3

Interference isolation..... 19

Isolated mains..... 15

Items supplied..... 9

J

Jumper..... 17

L

Leakage current..... 8, 11

Lifting..... 10

Local

 control..... 21, 32, 22

 control panel (LCP)..... 21

M

Main Menu..... 21

Mains voltage..... 21, 32

Maintenance..... 32

Manual initialisation..... 23

MCT 10..... 16, 21

Menu

 keys..... 21

 Keys..... 21

 structure..... 22

Modbus RTU..... 18

Motor

 cables..... 11, 0 , 14, 0

 current..... 6, 26, 39, 21

 Current..... 21

 data..... 24, 43, 36, 40

 Data..... 26

 output..... 51

 power..... 11, 39, 21

 rotation..... 26

 speeds..... 24

 status..... 3

 thermistor..... 31

 wiring..... 13, 19

Mounting..... 10, 19

Multiple frequency converters..... 11

N

Nameplate..... 9

Navigation keys..... 24, 32, 21, 22

O

Open loop..... 18

Operation keys..... 21

Optional equipment..... 15, 17, 20

Output

 current..... 33, 36

 Performance (U, V, W)..... 51

 power wiring..... 19

 terminal..... 20

Over-current protection..... 11

Overvoltage..... 43, 33

P

Parameter Menu Structure..... 65

PELV..... 31

Phase loss..... 35

PM Motor..... 25

Potential equalisation..... 11

Power

 connection..... 11

 factor..... 6, 19

Programming..... 17, 22, 35, 21

Pulse Inputs..... 54

Q

Qualified personnel..... 7

Quick

 menu..... 21

 Menu..... 21

R

Ramp-down time..... 43

| | | | |
|------------------------------|----------------------------|-----------------------------------|--------|
| Ramp-up time..... | 43 | Torque | |
| Reference..... | 28, 32, 33, 21 | characteristics..... | 51 |
| Relay Outputs..... | 54 | limit..... | 43 |
| Relays..... | 16 | Transient protection | 6 |
| Remote | | Trip | |
| commands..... | 3 | Trip..... | 34 |
| reference..... | 33 | lock..... | 34 |
| Reset..... | 21, 34, 35, 40, 21, 22, 23 | Troubleshooting | 42 |
| RFI filter..... | 15 | | |
| RMS current..... | 6 | U | |
| RS-485 | | Unintended start..... | 7, 20 |
| network connection..... | 31 | | |
| Serial Communication..... | 18 | V | |
| Run | | Vibration..... | 9 |
| command..... | 27 | Voltage | |
| permissive..... | 33 | imbalance..... | 35 |
| Permissive..... | 30 | level..... | 53 |
| Run/Stop Command..... | 29 | VVCplus..... | 25 |
| | | | |
| S | | W | |
| Safe Torque Off..... | 18 | Warnings..... | 34 |
| Screened cable..... | 13, 19 | Windmilling..... | 8 |
| Serial communication..... | 16, 32, 33, 34, 55, 22 | Wire sizes..... | 11, 14 |
| Service..... | 32 | Wiring Schematic..... | 12 |
| Setpoint..... | 34 | | |
| Set-up..... | 27, 21 | | |
| Shock..... | 9 | | |
| Short circuit..... | 37 | | |
| Sleep Mode..... | 34 | | |
| Specifications..... | 18 | | |
| Speed reference..... | 18, 27, 29, 32 | | |
| Start up..... | 23 | | |
| Status mode..... | 32 | | |
| Storage..... | 9 | | |
| Supply voltage..... | 15, 16, 20, 38 | | |
| Switch..... | 18 | | |
| Switching frequency..... | 33 | | |
| Symbols..... | 64 | | |
| System feedback..... | 3 | | |
| | | | |
| T | | | |
| Terminal | | | |
| 53..... | 18 | | |
| 54..... | 18 | | |
| Thermal Protection..... | 6 | | |
| Thermistor | | | |
| Thermistor..... | 15, 31, 36 | | |
| control wiring..... | 15 | | |
| Tightening of Terminals..... | 55 | | |



www.danfoss.com/drives

Danfoss Power Electronics A/S
Ulsnaes 1
6300 Graasten
Denmark
www.danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

