



Programming Guide

VLT® AutomationDrive

Contents

1 Introduction	1-1
1.1.1 Approvals	1-1
1.1.2 Symbols	1-1
1.1.3 Abbreviations	1-1
1.1.4 Definitions	1-2
1.1.5 Electrical Wiring - Control Cables	1-6
2 How to Program	2-1
2.1 The Graphical and Numerical Local Control Panels	2-1
2.1.1 How to Program on the Graphical LCP	2-1
2.1.2 The LCD Display	2-1
2.1.4 Display Mode	2-4
2.1.5 Display Mode - Selection of Readouts	2-4
2.1.6 Parameter Set-up	2-5
2.1.7 Quick Menu Key Functions	2-5
2.1.9 Main Menu Mode	2-8
2.1.10 Parameter Selection	2-8
2.1.14 Infinitely Variable Change of Numeric Data Value	2-9
2.1.16 Readout and Programming of Indexed Parameters	2-9
2.1.17 How to Program on the Numerical Local Control Panel	2-9
2.1.18 Local Control Keys	2-11
2.1.19 Initialization to Default Settings	2-11
3 Parameter Descriptions	3-1
3.2 Parameters: 0-** Operation and Display	3-2
3.3 Parameters: 1-** Load and Motor	3-13
3.3.10.1 PTC Thermistor Connection	3-25
3.3.10.2 KTY Sensor Connection	3-25
3.3.10.3 ETR	3-26
3.3.10.4 ATEX ETR	3-26
3.3.10.5 Klixon	3-27
3.4 Parameters: 2-** Brakes	3-29
3.5 Parameters: 3-** Reference / Ramps	3-34
3.6 Parameters: 4-** Limits/Warnings	3-44
3.7 Parameters: 5-** Digital In/Out	3-49
3.8 Parameters: 6-** Analog In/Out	3-69
3.9 Parameters: 7-** Controllers	3-78
3.10 Parameters: 8-** Communications and Options	3-84


3.11 Parameters: 9-** Profibus	3-94
3.12 Parameters: 10-** DeviceNet CAN Fieldbus	3-101
3.13 Parameters: 12-** Ethernet	3-105
3.14 Parameters: 13-** Smart Logic Control	3-110
3.15 Parameters: 14-** Special Functions	3-127
3.16 Parameters: 15-** Drive Information	3-136
3.17 Parameters: 16-** Data Read-outs	3-141
3.18 Parameters: 17-** Motor Feedb. Option	3-148
3.19 Parameters: 18-** Data Readouts 2	3-150
3.20 Parameters: 30-** Special Features	3-151
3.21 Parameters: 35-** Sensor Input Option	3-154
4 Parameter Lists	4-1
4.1.1 Conversion	4-1
4.1.2 Active/Inactive Parameters in Different Drive Control Modes	4-2
5 Troubleshooting	5-1
5.1.1 Warnings/Alarm Messages	5-1
6 Index	6-1

1 Introduction

Programming Guide
Software version: 6.5x

This Programming Guide can be used for all FC 300 adjustable frequency drives with software version 6.5x. The software version number can be seen from *15-43 Software Version*.

1.1.1 Approvals

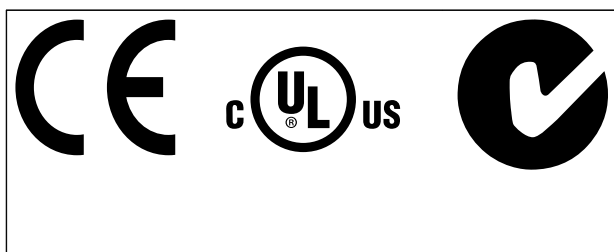

1.1.2 Symbols

Symbols used in this guide.

NOTE!

Indicates something to be noted by the reader.



Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or equipment damage.



Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

* Indicates default setting

1.1.3 Abbreviations

Alternating current	AC
American wire gauge	AWG
Ampere/AMP	A
Automatic Motor Adaptation	AMA
Current limit	I _{LIM}
Degrees Celsius	°C
Direct current	DC
Drive Dependent	D-TYPE
Electro Magnetic Compatibility	EMC
Electronic Thermal Relay	ETR
Adjustable frequency drive	FC
Gram	g
Hertz	Hz
Horsepower	hp
Kilohertz	kHz
Local Control Panel	LCP
Meter	m
Millihenry Inductance	mH
Milliamper	mA
Millisecond	ms
Minute	min
Motion Control Tool	MCT
Nanofarad	nF
Newton Meters	Nm
Nominal motor current	I _{M,N}
Nominal motor frequency	f _{M,N}
Nominal motor power	P _{M,N}
Nominal motor voltage	U _{M,N}
Permanent Magnet motor	PM motor
Protective Extra Low Voltage	PELV
Printed Circuit Board	PCB
Rated Inverter Output Current	I _{INV}
Revolutions Per Minute	RPM
Regenerative terminals	Regen
Second	sec.
Synchronous Motor Speed	n _s
Torque limit	T _{LIM}
Volts	V
The maximum output current	I _{VLT,MAX}
The rated output current supplied by the Adjustable frequency drive	I _{VLT,N}

1.1.4 Definitions

Adjustable frequency drive:

$I_{VLT,MAX}$

Maximum output current.

$I_{VLT,N}$

Rated output current supplied by the Adjustable frequency drive.

$U_{VLT,MAX}$

Maximum output voltage.

Input:

Control command

Start and stop the connected motor by means of LCP and digital inputs.

Functions are divided into two groups.

Functions in group 1 have higher priority than functions in group 2.

Group 1	Reset, Coasting stop, Reset and Coasting stop, Quick stop, DC braking, Stop and the [OFF] key.
Group 2	Start, Pulse start, Reversing, Start reversing, Jog and Freeze output

Motor:

Motor Running

Torque generated on output shaft and speed from zero rpm to max. speed on motor.

f_{JOG}

Motor frequency when the jog function is activated (via digital terminals).

f_M

Motor frequency.

f_{MAX}

Maximum motor frequency.

f_{MIN}

Minimum motor frequency.

$f_{M,N}$

Rated motor frequency (nameplate data).

I_M

Motor current (actual).

$I_{M,N}$

Rated motor current (nameplate data).

$n_{M,N}$

Rated motor speed (nameplate data).

n_s

Synchronous motor speed

$$n_s = \frac{2 \times \text{par. } 1 - 23 \times 60 \text{ s}}{\text{par. } 1 - 39}$$

$P_{M,N}$

Rated motor power (nameplate data in kW or HP).

$T_{M,N}$

Rated torque (motor).


U_M

Instantaneous motor voltage.

$U_{M,N}$

Rated motor voltage (nameplate data).

Break-away torque

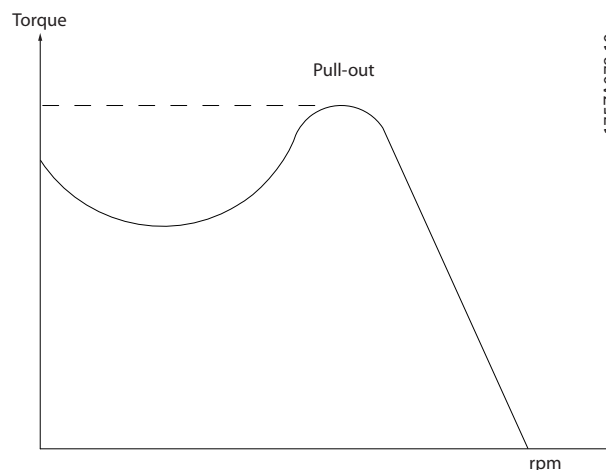

175ZA078.10

η_{VLT}

The efficiency of the Adjustable frequency drive is defined as the ratio between the power output and the power input.

Start-disable command

A stop command belonging to the group 1 control commands - see this group.

Stop command

See Control commands.

References:

Analog Reference

A signal transmitted to the analog inputs 53 or 54, can be voltage or current.

Binary Reference

A signal transmitted to the serial communication port.

Preset Reference

A defined preset reference to be set from -100% to +100% of the reference range. Selection of eight preset references via the digital terminals.

Pulse Reference

A pulse frequency signal transmitted to the digital inputs (terminal 29 or 33).

Ref_{MAX}

Determines the relationship between the reference input at 100% full scale value (typically 10 V, 20 mA) and the resulting reference. The maximum reference value set in 3-03 *Maximum Reference*.

Ref_{MIN}

Determines the relationship between the reference input at 0% value (typically 0 V, 0 mA, 4 mA) and the resulting reference. The minimum reference value set in 3-02 *Minimum Reference*.

Miscellaneous:Analog Inputs

The analog inputs are used for controlling various functions of the Adjustable frequency drive.

There are two types of analog inputs:

Current input, 0-20 mA and 4-20 mA

Voltage input, 0-10 V DC (FC 301)

Voltage input, -10 - +10 V DC (FC 302/FC 102).

Analog Outputs

The analog outputs can supply a signal of 0–20 mA, 4–20 mA.

Automatic Motor Adaptation, AMA

AMA algorithm determines the electrical parameters for the connected motor at standstill.

Brake Resistor

The brake resistor is a module capable of absorbing the braking energy generated in regenerative braking. This regenerative braking energy increases the intermediate circuit voltage and a brake chopper ensures that the power is transmitted to the brake resistor.

CT Characteristics

Constant torque characteristics used for all applications such as conveyor belts, displacement pumps and cranes.

Digital Inputs

The digital inputs can be used for controlling various functions of the Adjustable frequency drive.

Digital Outputs

The Adjustable frequency drive features two solid state outputs that can supply a 24 V DC (max. 40 mA) signal.

DSP

Digital Signal Processor.

ETR

Electronic Thermal Relay is a thermal load calculation based on present load and time. Its purpose is to estimate the motor temperature.

Hiperface®

Hiperface® is a registered trademark by Stegmann.

Initializing

If initialization is carried out (14-22 *Operation Mode*), the Adjustable frequency drive returns to the default setting.

Intermittent Duty Cycle

An intermittent duty rating refers to a sequence of duty cycles. Each cycle consists of an on-load and an off-load period. The operation can be either periodic duty or non-periodic duty.

LCP

The Local Control Panel makes up a complete interface for control and programming of the Adjustable frequency drive. The control panel is detachable and can be installed up to 10 ft [3 m] from the Adjustable frequency drive, i.e., in a front panel by means of the installation kit option.

lsb

Least significant bit.

msb

Most significant bit.

MCM

Short for Mille Circular Mil, an American measuring unit for cable cross-section. 1 MCM = 0.5067 mm².

Online/Offline Parameters

Changes to online parameters are activated immediately after the data value is changed. Changes to offline parameters are not activated until you enter [OK] on the LCP.

Process PID

The PID control maintains the desired speed, pressure, temperature, etc. by adjusting the output frequency to match the varying load.

PCD

Process Control Data

Power Cycle

Switch off line power until the display (LCP) is dark – then turn power on again.

Pulse Input/Incremental Encoder

An external, digital pulse transmitter used for feeding back information on motor speed. The encoder is used in applications where great accuracy in speed control is required.

RCD

Residual Current Device.

Set-up

You can save parameter settings in four set-ups. Change between the four parameter set-ups, and edit one set-up, while another set-up is active.

SFAVM

Switching pattern called Stator Flux oriented Asynchronous Vector Modulation (14-00 *Switching Pattern*).

Slip Compensation

The Adjustable frequency drive compensates for the motor slip by giving the frequency a supplement that follows the measured motor load keeping the motor speed almost constant.

Smart Logic Control (SLC)

The SLC is a sequence of user-defined actions executed when the associated user-defined events are evaluated as true by the Smart Logic Controller. (Par. group 13-** [Smart Logic Control \(SLC\)](#)).

STW

Status Word

FC Standard Bus

Includes RS-485 bus with FC protocol or MC protocol. See [8-30 Protocol](#).

Thermistor

A temperature-dependent resistor placed where the temperature is to be monitored (Adjustable frequency drive or motor).

Trip

A state entered in fault situations, e.g., if the Adjustable frequency drive is subject to an over-temperature or when the Adjustable frequency drive is protecting the motor, process or mechanism. Restart is prevented until the cause of the fault has disappeared and the trip state is cancelled by activating reset or, in some cases, by being programmed to reset automatically. Trip may not be used for personal safety.

Trip Locked

A state entered in fault situations when the Adjustable frequency drive is protecting itself and requiring physical intervention, e.g., if the Adjustable frequency drive is subject to a short circuit on the output. A locked trip can only be canceled by cutting off line power, removing the cause of the fault, and reconnecting the Adjustable frequency drive. Restart is prevented until the trip state is cancelled by activating reset or, in some cases, by being programmed to reset automatically. Trip may not be used for personal safety.

VT Characteristics

Variable torque characteristics used for pumps and fans.

VVC^{plus}

If compared with standard voltage/frequency ratio control, Voltage Vector Control (VVC^{plus}) improves the dynamics and the stability, both when the speed reference is changed and in relation to the load torque.

60° AVM

Switching pattern called 60° Asynchronous Vector Modulation (14-00 Switching Pattern).

Power Factor

The power factor is the relation between I_1 and I_{RMS} .

$$\text{Power factor} = \frac{\sqrt{3} \times U \times I_1 \cos\varphi}{\sqrt{3} \times U \times I_{RMS}}$$

The power factor for 3-phase control:

$$= \frac{I_1 \times \cos\varphi_1}{I_{RMS}} = \frac{I_1}{I_{RMS}} \text{ since } \cos\varphi_1 = 1$$

The power factor indicates to which extent the Adjustable frequency drive imposes a load on the line power supply. The lower the power factor, the higher the I_{RMS} for the same hp [kW] performance.

$$I_{RMS} = \sqrt{I_1^2 + I_5^2 + I_7^2 + \dots + I_n^2}$$

In addition, a high power factor indicates that the different harmonic currents are low.

The adjustable frequency drive's built-in DC coils produce a high power factor, which minimizes the imposed load on the line power supply.

⚠ WARNING

The voltage of the Adjustable frequency drive is dangerous whenever connected to line power. Incorrect installation of the motor, Adjustable frequency drive or serial communication bus may cause death, serious personal injury or damage to the equipment. Consequently, the instructions in this manual, as well as national and local rules and safety regulations, must be complied with.

Safety Regulations

1. The line power supply to the Adjustable frequency drive must be disconnected whenever repair work is to be carried out. Make sure that the line power supply has been disconnected and that the necessary time has elapsed before removing motor and line power supply plugs.
2. The [OFF] button on the control panel of the Adjustable frequency drive does not disconnect the line power supply and consequently it must not be used as a safety switch.
3. The equipment must be properly grounded, the user must be protected against supply voltage and the motor must be protected against overload in accordance with applicable national and local regulations.
4. The ground leakage current exceeds 3.5 mA.
5. Protection against motor overload is not included in the factory setting. If this function is desired, set *1-90 Motor Thermal Protection* to data value ETR trip 1 [4] or data value ETR warning 1 [3].

6. Do not remove the plugs for the motor and line power supply while the Adjustable frequency drive is connected to line power. Make sure that the line power supply has been disconnected and that the necessary time has elapsed before removing motor and line power plugs.
7. Please note that the Adjustable frequency drive has more voltage sources than L1, L2 and L3, when load sharing (linking of DC intermediate circuit) or external 24 V DC are installed. Make sure that all voltage sources have been disconnected and that the necessary time has elapsed before commencing repair work.

Warning against unintended start

1. The motor can be brought to a stop by means of digital commands, bus commands, references or a local stop, while the Adjustable frequency drive is connected to line power. If personal safety considerations (e.g., risk of personal injury caused by contact with moving machine parts following an unintentional start) make it necessary to ensure that no unintended start occurs, these stop functions are not sufficient. In such cases, the line power supply must be disconnected or the *Safe Stop* function must be activated.
2. The motor may start while setting the parameters. If this means that personal safety may be compromised (e.g., personal injury caused by contact with moving machine parts), motor starting must be prevented, for instance by use of the *Safe Stop* function or secure disconnection of the motor connection.
3. A motor that has been stopped with the line power supply connected may start if faults occur in the electronics of the Adjustable frequency drive through temporary overload or if a fault in the power supply grid or motor connection is remedied. If unintended start must be prevented for personal safety reasons (e.g., risk of injury caused by contact with moving machine parts), the normal stop functions of the Adjustable frequency drive are not sufficient. In such cases, the line power supply must be disconnected or the *Safe Stop* function must be activated.

NOTE!

When using the *Safe Stop* function, always follow the instructions in the section *Safe Stop* of the VLT AutomationDrive Design Guide.

4. Control signals from or internally within the Adjustable frequency drive may in rare cases be

activated in error, be delayed or fail to occur entirely. When used in situations where safety is critical, e.g., when controlling the electromagnetic brake function of a hoist application, these control signals must not be relied on exclusively.

▲WARNING

High Voltage

Touching the electrical parts may be fatal - even after the equipment has been disconnected from line power. Also make sure that other voltage inputs have been disconnected, such as external 24V DC, load sharing (linkage of DC intermediate circuit), as well as the motor connection for kinetic backup. Systems where adjustable frequency drives are installed must, if necessary, be equipped with additional monitoring and protective devices according to the valid safety regulations, e.g., law on mechanical tools, regulations for the prevention of accidents, etc. Modifications on the adjustable frequency drives by means of the operating software are allowed.

NOTE!

Hazardous situations shall be identified by the machine builder/ integrator who is responsible for taking necessary preventive means into consideration. Additional monitoring and protective devices may be included, always according to valid national safety regulations, e.g., law on mechanical tools, regulations for the prevention of accidents.

NOTE!

Crane, Lifts and Hoists:

The controlling of external brakes must always have a redundant system. The Adjustable frequency drive can in no circumstances be the primary safety circuit. Comply with relevant standards, e.g.,

Hoists and cranes: IEC 60204-32

Lifts: EN 81

Protection Mode

Once a hardware limit on motor current or DC link voltage is exceeded, the Adjustable frequency drive will enter "Protection mode". "Protection mode" means a change of the PWM modulation strategy and a low switching frequency to minimize losses. This continues 10 sec after the last fault and increases the reliability and the robustness of the Adjustable frequency drive while re-establishing full control of the motor.

In hoist applications, "protection mode" is not usable because the Adjustable frequency drive will usually not be able to leave this mode again and therefore it will extend the time before activating the brake - which is not recommended.

The "protection mode" can be disabled by setting 14-26 Trip Delay at Inverter Fault to zero which means that the Adjustable frequency drive will trip immediately if one of the hardware limits is exceeded.

NOTE!

It is recommended to disable protection mode in hoisting applications (14-26 Trip Delay at Inverter Fault = 0)

1.1.5 Electrical Wiring - Control Cables

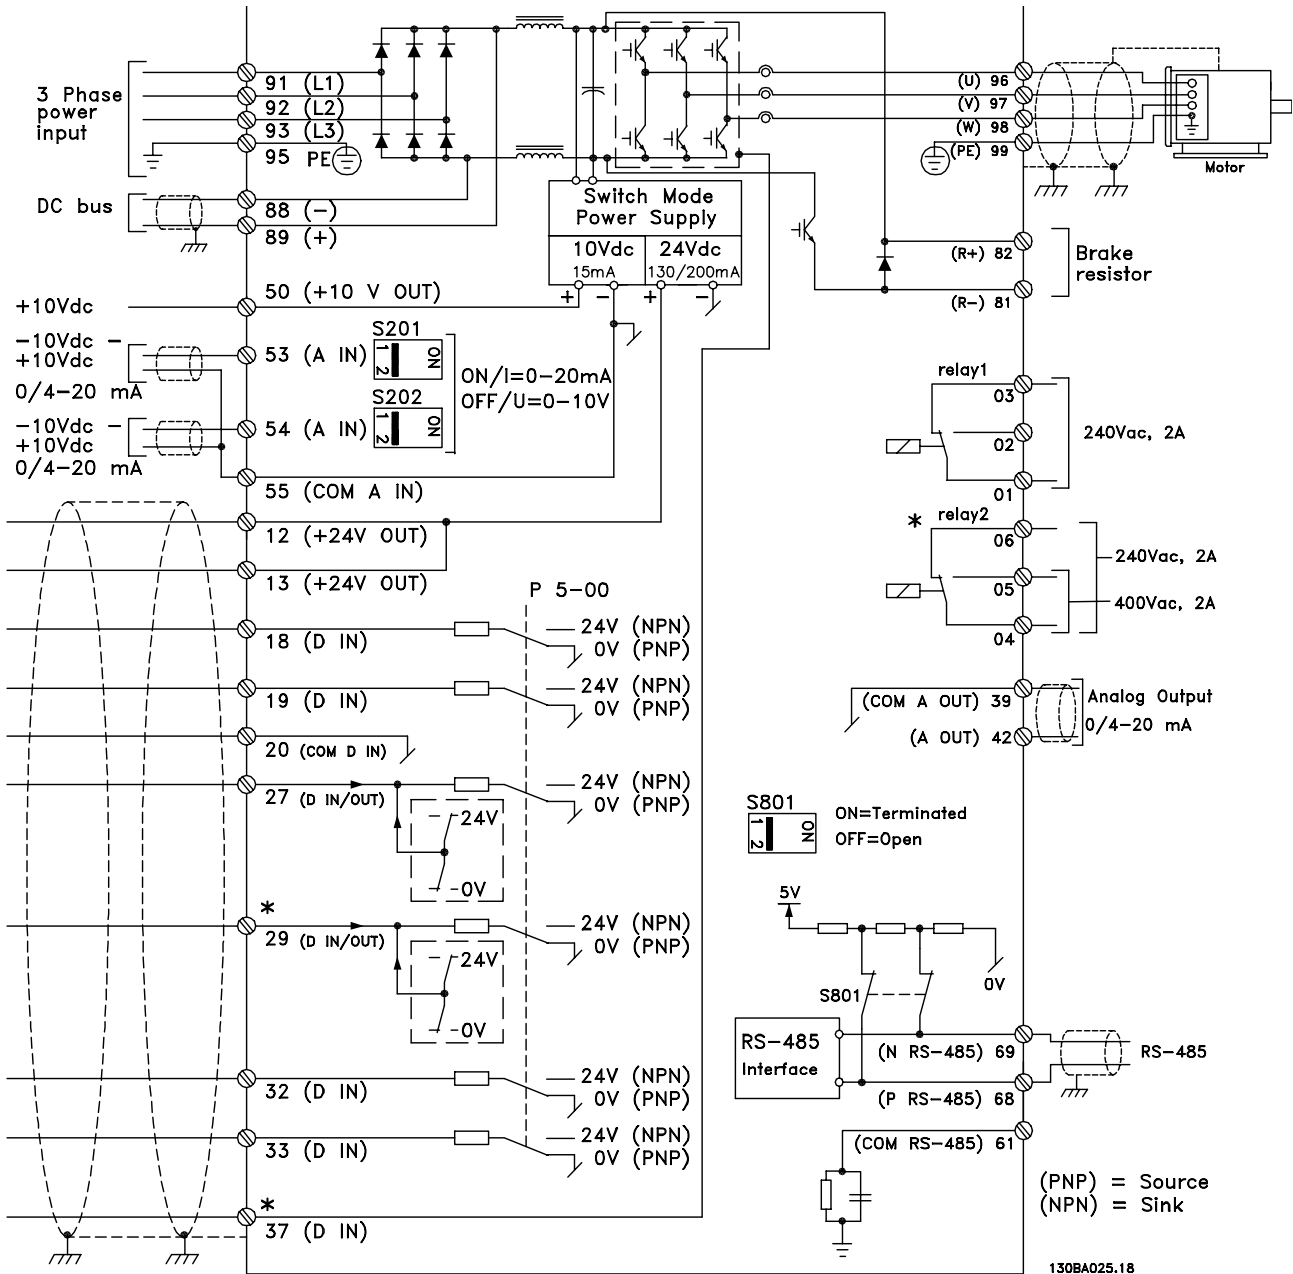


Figure 1.1 Diagram showing all electrical terminals without options.

Terminal 37 is the input to be used for Safe Stop. For instructions on Safe Stop installation please, refer to the section *Safe Stop Installation of the Design Guide*.

* Terminal 37 is not included in FC 301 (Except FC 301 A1, which includes Safe Stop).




Terminal 29 and Relay 2, are not included in FC 301.

In rare cases, and depending on the installation, very long control cables and analog signals may result in 50/60 Hz ground loops due to noise from line power supply cables.

If this occurs, it may be necessary to break the shield or insert a 100 nF capacitor between shield and chassis.

The digital and analog inputs and outputs must be connected separately to the common inputs (terminal 20, 55, 39) of the Adjustable frequency drive to avoid ground currents from both groups to affect other groups. For example, switching on the digital input may disturb the analog input signal.

Input polarity of control terminals

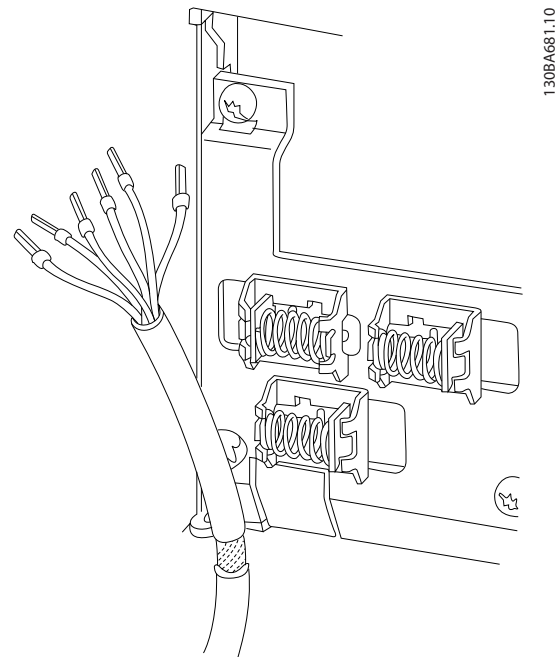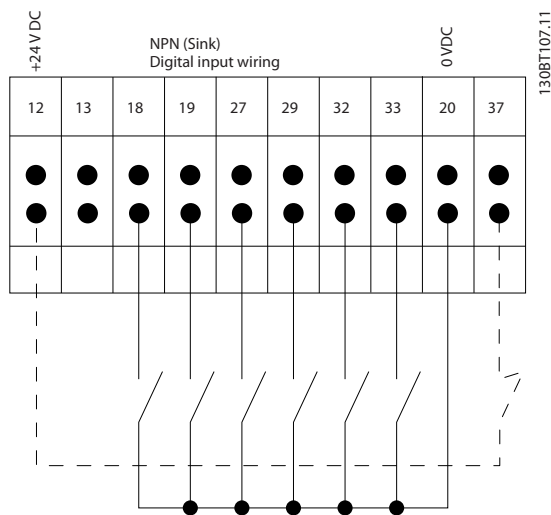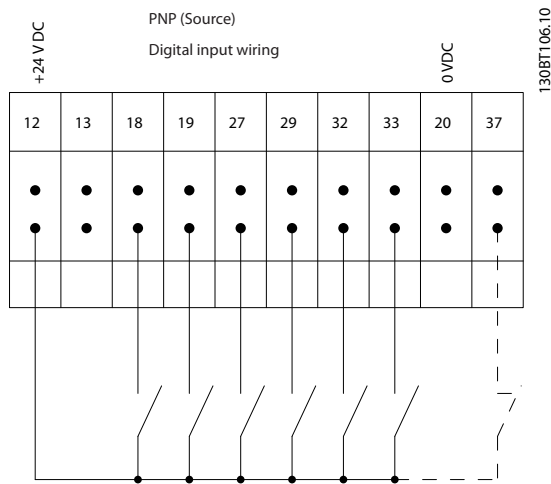



1.1.6 Start/Stop

- Terminal 18 = 5-10 Terminal 18 Digital Input [8] Start
- Terminal 27 = 5-12 Terminal 27 Digital Input [0] No operation (Default coast inverse)
- Terminal 37 = Safe stop (where available)

NOTE!



Control cables must be shielded/armored.

See section on grounding of shielded/armored control cables in the Design Guide for the correct termination of control cables.

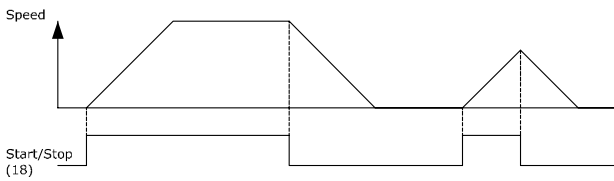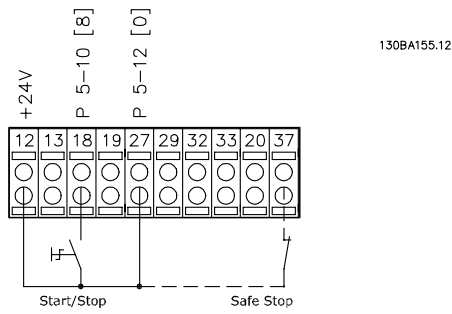

1.1.7 Pulse Start/Stop

Terminal 18 = 5-10 Terminal 18 Digital Input Latched start, [9]
 Terminal 27 = 5-12 Terminal 27 Digital Input Stop inverse, [6]
 Terminal 37 = Safe stop (where available)

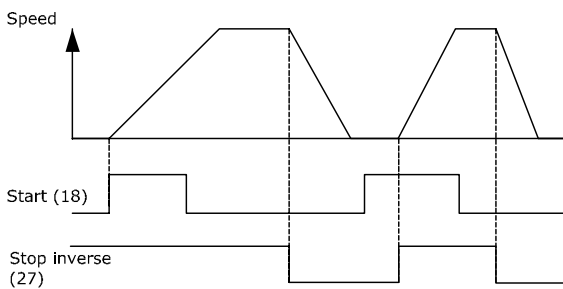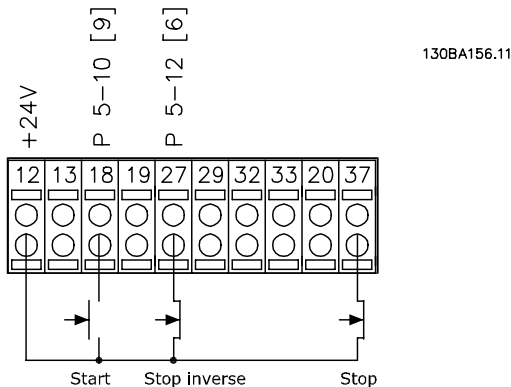


1.1.8 Speed Up/Down

Terminals 29/32 = Speed up/down

- Terminal 18 = 5-10 Terminal 18 Digital Input Start [9] (default)
- Terminal 27 = 5-12 Terminal 27 Digital Input Freeze reference [19]
- Terminal 29 = 5-13 Terminal 29 Digital Input Speed up [21]
- Terminal 32 = 5-14 Terminal 32 Digital Input Slow [22]

NOTE: Terminal 29 only in FC x02 (x=series type).


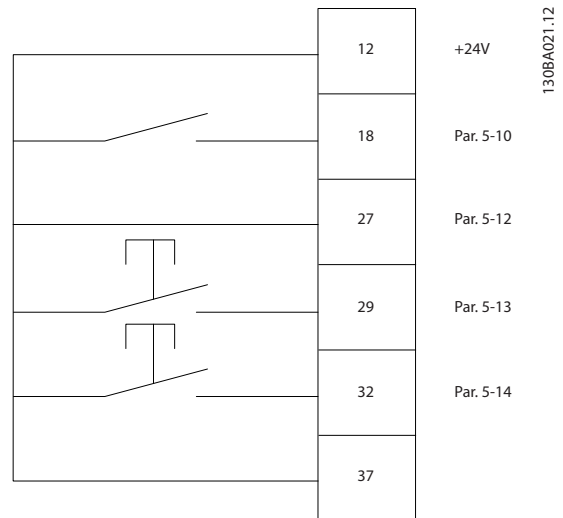


1.1.9 Potentiometer Reference

Voltage reference via a potentiometer

- Reference Source 1 = [1] Analog input 53 (default)
- Terminal 53, Low Voltage = 0V
- Terminal 53, High Voltage = 10V
- Terminal 53, Low Ref./Feedback = 0 RPM
- Terminal 53, High Ref./Feedback = 1500 RPM
- Switch S201 = OFF (U)

130BA154.11

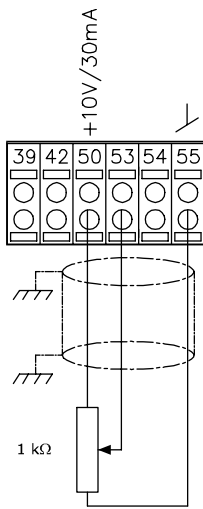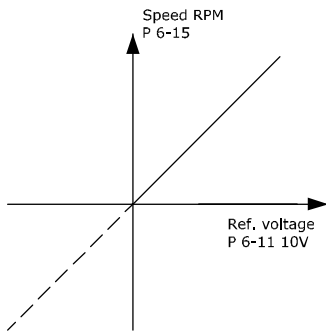

2 How to Program

2.1 The Graphical and Numerical Local Control Panels

The easiest programming of the Adjustable frequency drive is performed by the Graphical LCP (LCP 102). It is necessary to consult the Adjustable frequency drive Design Guide, when using the Numeric Local Control Panel (LCP 101).

2.1.1 How to Program on the Graphical LCP

The following instructions are valid for the graphical LCP(LCP 102)


The control panel is divided into four functional groups.

1. Graphical display with Status lines.
2. Menu keys and LEDs - changing parameters and switching between display functions.
3. Navigation keys and LEDs (LEDs).
4. Operation keys and LEDs.

All data is displayed in a graphical LCP display, which can show up to five items of operating data while displaying [Status].

Display lines

- a. **Status line:** Status messages displaying icons and graphic.
- b. **Line 1-2:** Operator data lines displaying data defined or chosen by the user. By pressing the [Status] key, up to one extra line can be added.
- c. **Status line:** Status messages displaying text.

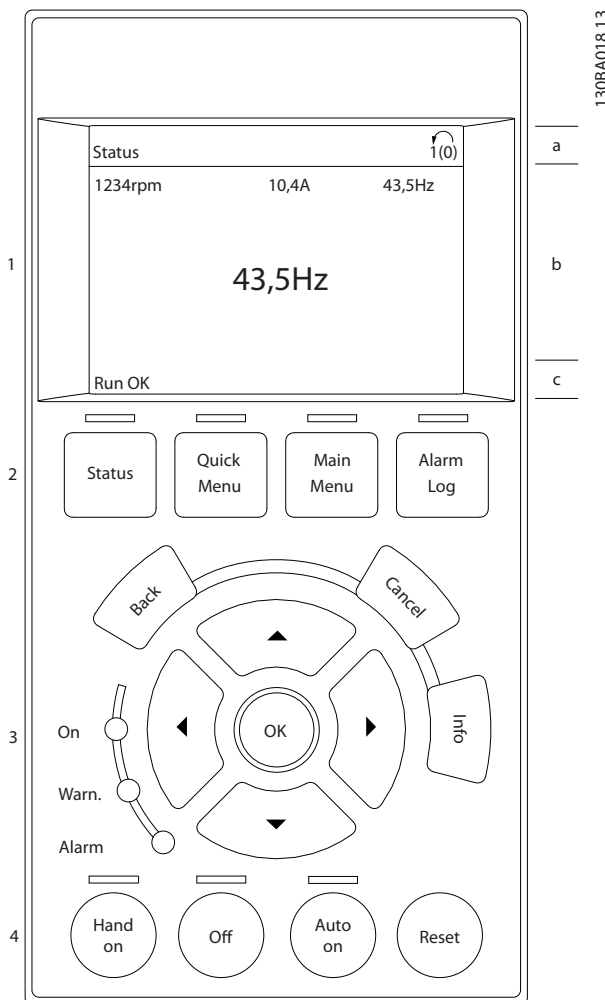


2.1.2 The LCD Display

The LCD display has back lighting and a total of 6 alphanumeric lines. The display lines show the direction of rotation (arrow), the chosen Set-up as well as the programming Set-up. The display is divided into three sections.

Top section shows up to two measurements in normal operating status.

The top line in the **Middle section** shows up to five measurements with related unit, regardless of status (except in the case of alarm/warning).

The bottom section always shows the state of the Adjustable frequency drive in status mode.

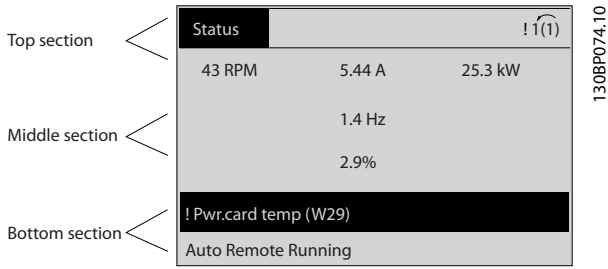

The control keys are divided into functions. The keys below the display and LEDs are used for parameter set-up, including choice of display indication during normal operation.



The Active Set-up (selected as the Active Set-up in 0-10 Active Set-up) is shown. When programming another set-up than the active set-up, the number of the programmed set-up appears to the right.

Display Contrast Adjustment

Press [status] and [▲] for darker display
 Press [status] and [▼] for brighter display


Most parameter set-ups can be changed immediately via the LCP, unless a password has been created via 0-60 Main Menu Password or via 0-65 Quick Menu Password.

LEDs

If certain threshold values are exceeded, the alarm and/or warning LED lights up. A status and alarm text appear on the LCP.

The ON LED is activated when the Adjustable frequency drive receives AC line voltage or via a DC bus terminal or 24V external supply. At the same time, the back light is on.

- Green LED/On: Control section is working.
- Yellow LED/Warn.: Indicates a warning.
- Flashing Red LED/Alarm: Indicates an alarm.

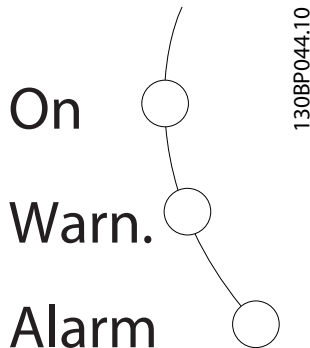

[Status] indicates the status of the Adjustable frequency drive and/or the motor. Choose between three different readouts by pressing the [Status] key: Five line readouts, four line readouts or Smart Logic Control.

Use **[Status]** for selecting the mode of display or for changing back to display mode from either the quick menu mode, the main menu mode or alarm mode. Also use the [Status] key to toggle single or double readout mode.

[Quick Menu] allows quick access to different quick menus such as

- My Personal Menu
- Quick Set-up
- Changes Made
- Loggings

Use **[Quick Menu]** for programming the parameters belonging to the Quick Menu. It is possible to switch directly between Quick Menu mode and Main Menu mode.

[Main Menu] is used for programming all parameters. It is possible to switch directly between Main Menu mode and Quick Menu mode. Parameter shortcut can be carried out by pressing down the **[Main Menu]** key for 3 seconds. The parameter shortcut allows direct access to any parameter.

[Alarm Log] displays an alarm list of the five latest alarms (numbered A1-A5). To obtain additional details about an alarm, use the arrow keys to navigate to the alarm number and press [OK]. You will now receive information about the condition of your Adjustable frequency drive right before entering alarm mode.

[Back] takes you to the previous step or layer in the navigation structure.

[Cancel] annuls your last change or command as long as the display has not been changed.

LCP Keys

[Info] supplies information about a command, parameter, or function in any display window. [Info] provides detailed information whenever help is needed. Exit info mode by pressing either [Info], [Back], or [Cancel].




Navigation Keys

The four navigation arrows are used to navigate between the different choices available in [Quick Menu], [Main Menu] and [Alarm Log]. Use the keys to move the cursor.

[OK] is used for choosing a parameter marked by the cursor and for enabling the change of a parameter.

Local Control Key for local control is found at the bottom of the LCP.

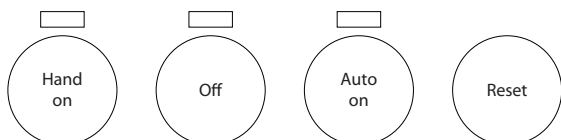

1308P046.10

[Hand On] enables control of the Adjustable frequency drive via the LCP. [Hand on] also starts the motor, and it is now possible to enter the motor speed data by means of the arrow keys. The key can be selected as Enable [1] or Disable [0] via 0-40 [Hand on] Key on LCP. External stop signals activated by means of control signals or a serial bus will override a "start" command via the LCP. The following control signals will still be active when [Hand on] is activated.

- [Hand on] - [Off] - [Auto on]
- Reset
- Coasting stop inverse
- Reversing
- Set-up select bit 0 - Set-up select bit 1
- Stop command from serial communication
- Quick stop

- DC brake

[Off] stops the connected motor. The key can be selected as Enable [1] or Disable [0] via 0-41 [Off] Key on LCP. If no external stop function is selected and the [Off] key is inactive, the motor can be stopped by disconnecting the voltage.

[Auto On] enables the Adjustable frequency drive to be controlled via the control terminals and/or serial communication. When a start signal is applied on the control terminals and/or the bus, the Adjustable frequency drive will start. The key can be selected as Enable [1] or Disable [0] via 0-42 [Auto on] Key on LCP.

NOTE!


An active HAND-OFF-AUTO signal via the digital inputs has higher priority than the control keys [Hand on] – [Auto on].

[Reset] is used for resetting the Adjustable frequency drive after an alarm (trip). It can be selected as Enable [1] or Disable [0] via 0-43 [Reset] Key on LCP.

The parameter shortcut can be carried out by holding down the [Main Menu] key for 3 seconds. The parameter shortcut allows direct access to any parameter.

2.1.3 Quick Transfer of Parameter Settings between Multiple Adjustable Frequency Drives

Once the set-up of a Adjustable frequency drive is complete, we recommend that you store the data in the LCP or on a PC via MCT 10 Set-up Software Tool.

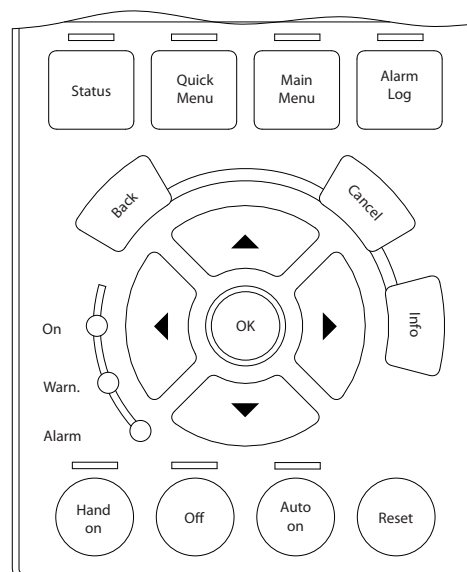

1308A027.10

Data storage in LCP

1. Go to 0-50 LCP Copy
2. Press the [OK] key
3. Select "All to LCP"
4. Press the [OK] key

All parameter settings are now stored in the LCP indicated by the progress bar. When 100% is reached, press [OK].

NOTE!

Stop the motor before performing this operation.

Connect the LCP to another Adjustable frequency drive and copy the parameter settings to this Adjustable frequency drive as well.

Data transfer from LCP to Adjustable frequency drive

1. Go to 0-50 LCP Copy
2. Press the [OK] key
3. Select "All from LCP"
4. Press the [OK] key

The parameter settings stored in the LCP are now transferred to the Adjustable frequency drive indicated by the progress bar. When 100% is reached, press [OK].

NOTE!

Stop the motor before performing this operation.

2.1.4 Display Mode

In normal operation, up to 5 different operating variables can be indicated continuously in the middle section: 1.1, 1.2, and 1.3 as well as 2 and 3.

2.1.5 Display Mode - Selection of Readouts

It is possible to toggle between three status readout screens by pressing the [Status] key. Operating variables with different formatting are shown in each status screen - see below.

Table 2.1 shows the measurements you can link to each of the operating variables. When Options are mounted, additional measurements are available. Define the links via 0-20 Display Line 1.1 Small, 0-21 Display Line 1.2 Small, 0-22 Display Line 1.3 Small, 0-23 Display Line 2 Large, and 0-24 Display Line 3 Large.


Each readout parameter selected in 0-20 Display Line 1.1 Small to 0-24 Display Line 3 Large has its own scale and

digits after a possible decimal point. The larger the numeric value for a parameter, the fewer digits displayed after the decimal point.

Ex.: Current readout 5.25A; 15.2A 105A.

Operating variable:	Unit:
16-00 Control Word	hex
16-01 Reference [Unit]	[unit]
16-02 Reference [%]	%
16-03 Status Word	hex
16-05 Main Actual Value [%]	%
16-10 Power [kW]	[kW]
16-11 Power [hp]	[HP]
16-12 Motor Voltage	[V]
16-13 Frequency	[Hz]
16-14 Motor Current	[A]
16-16 Torque [Nm]	Nm
16-17 Speed [RPM]	[RPM]
16-18 Motor Thermal	%
16-20 Motor Angle	
16-30 DC Link Voltage	V
16-32 Brake Energy /s	kW
16-33 Brake Energy /2 min	kW
16-34 Heatsink Temp.	C
16-35 Inverter Thermal	%
16-36 Inv. Nom. Current	A
16-37 Inv. Max. Current	A
16-38 SL Controller State	
16-39 Control Card Temp.	C
16-40 Logging Buffer Full	
16-50 External Reference	
16-51 Pulse Reference	
16-52 Feedback [Unit]	[Unit]
16-53 Digi Pot Reference	
16-60 Digital Input	bin
16-61 Terminal 53 Switch Setting	V
16-62 Analog Input 53	
16-63 Terminal 54 Switch Setting	V
16-64 Analog Input 54	
16-65 Analog Output 42 [mA]	[mA]
16-66 Digital Output [bin]	[bin]
16-67 Pulse Input #29 [Hz]	[Hz]
16-68 Freq. Input #33 [Hz]	[Hz]
16-69 Pulse Output #27 [Hz]	[Hz]
16-70 Pulse Output #29 [Hz]	[Hz]
16-71 Relay Output [bin]	
16-72 Counter A	
16-73 Counter B	
16-80 Fieldbus CTW 1	hex
16-82 Fieldbus REF 1	hex
16-84 Comm. Option STW	hex

Operating variable:	Unit:
16-85 FC Port CTW 1	hex
16-86 FC Port REF 1	hex
16-90 Alarm Word	
16-92 Warning Word	
16-94 Ext. Status Word	

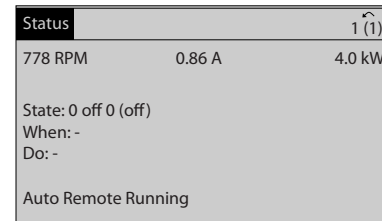


130BP063.10

Status screen I

This readout state is standard after start-up or initialization. Use [INFO] to obtain information about the measurement links to the displayed operating variables (1.1, 1.2, 1.3, 2 and 3).

See the operating variables shown in the screen below.

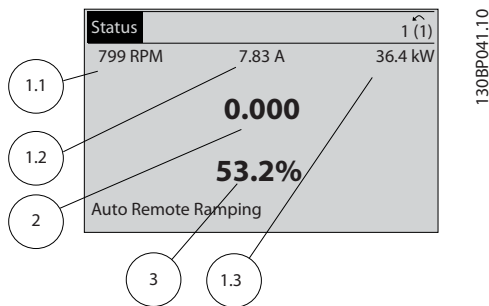


130BP041.10

Status screen II

See the operating variables (1.1, 1.2, 1.3 and 2) shown in the screen below.

In the example, Speed, Motor current, Motor power and Frequency are selected as variables in the first and second.

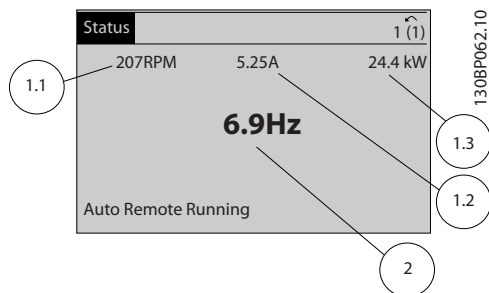

130BP062.10

Status screen III

This state displays the event and action of the Smart Logic Control. For further information, see section *Smart Logic Control*.

2.1.6 Parameter Set-up

The Adjustable frequency drive can be used for practically all assignments, which is why the number of parameters is quite large. The Adjustable frequency drive offers a choice between two programming modes - a Main Menu and a Quick Menu mode.

The former provides access to all parameters. The latter takes the user through a few parameters making it possible to start operating the Adjustable frequency drive. Regardless of the mode of programming, you can change a parameter both in the main menu and quick menu modes.

2.1.7 Quick Menu Key Functions

Pressing [Quick Menus] The list indicates the different areas contained in the Quick menu.

Select *My Personal Menu* to display the chosen personal parameters. These parameters are selected in 0-25 *My Personal Menu*. Up to 20 different parameters can be added in this menu.



130BP064.11

Select *Quick set-up* to go through a limited amount of parameters to get the motor running almost optimally. The default setting for the other parameters considers the desired control functions and the configuration of signal inputs/outputs (control terminals).

Parameters are selected by using the arrow keys. The parameters in the following table are accessible.

Parameter	Setting
0-01 Language	
1-20 Motor Power [kW]	[kW]
1-22 Motor Voltage	[V]
1-23 Motor Frequency	[Hz]
1-24 Motor Current	[A]
1-25 Motor Nominal Speed	[rpm]
5-12 Terminal 27 Digital Input	[0] No function*
1-29 Automatic Motor Adaptation (AMA)	[1] Enable complete AMA
3-02 Minimum Reference	[rpm]
3-03 Maximum Reference	[rpm]
3-41 Ramp 1 Ramp up Time	[sec]
3-42 Ramp 1 Ramp Down Time	[sec]
3-13 Reference Site	

* If terminal 27 is set to "no function", no connection to +24 V on terminal 27 is necessary.

Select *Changes made* to get information about:

- the last 10 changes. Use the [▲] [▼] navigation keys to scroll between the last 10 changed parameters.
- the changes made since default setting.

Select *Loggings* to get information about the display line readouts. The information is shown as graphs.

Only display parameters selected in *0-20 Display Line 1.1 Small* and *0-24 Display Line 3 Large* can be viewed. It is possible to store up to 120 samples in the memory for later reference.


2.1.8 Initial Commissioning

The easiest way of carrying out the initial commissioning is by using the quick menu button and follow the quick set-up procedure using LCP 102 (read table from left to right). The example applies to open-loop applications.

Press				
		Q2 Quick Menu		
0-01 <i>Language</i>		Set language		
1-20 <i>Motor Power [kW]</i>		Set motor nameplate power		
1-22 <i>Motor Voltage</i>		Set nameplate voltage		
1-23 <i>Motor Frequency</i>		Set nameplate frequency		
1-24 <i>Motor Current</i>		Set nameplate current		
1-25 <i>Motor Nominal Speed</i>		Set Nameplate speed in RPM		
5-12 <i>Terminal 27 Digital Input</i>		If terminal default is <i>Coast inverse</i> , it is possible to change this setting to <i>No function</i> . No connection to terminal 27 is then needed for running AMA		
1-29 <i>Automatic Motor Adaptation (AMA)</i>		Set desired AMA function. Enabling complete AMA is recommended		
3-02 <i>Minimum Reference</i>		Set the minimum speed of the motor shaft		
3-03 <i>Maximum Reference</i>		Set the maximum speed of the motor shaft		
3-41 <i>Ramp 1 Ramp up Time</i>		Set the ramping-up time with reference to synchronous motor speed, ns.		
3-42 <i>Ramp 1 Ramp Down Time</i>		Set the ramping-down time with reference to synchronous motor speed, ns.		
3-13 <i>Reference Site</i>		Set the site from where the reference must work		

2.1.9 Main Menu Mode

Start main menu mode by pressing the [Main Menu] key. The readout shown to the right appears on the display. The middle and bottom sections on the display show a list of parameter groups which can be chosen by toggling the up and down buttons.

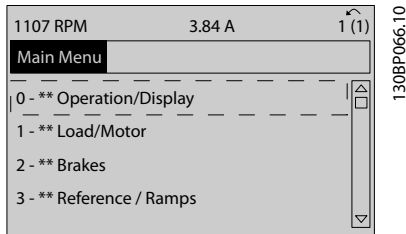


Each parameter has a name and number which remain the same regardless of the programming mode. In main menu mode, the parameters are divided into groups. The first digit of the parameter number (from the left) indicates the parameter group number.

All parameters can be changed in the Main Menu. However, depending on the choice of configuration (1-00 Configuration Mode), some parameters can be "missing". For example, open-loop hides all the PID parameters, and other enabled options make more parameter groups visible.

2.1.10 Parameter Selection

In main menu mode, the parameters are divided into groups. Select a parameter group with the navigation keys. The following parameter groups are accessible:

After selecting a par. group, choose a parameter by means of the navigation keys. The middle section on the display shows the parameter number and name as well as the selected parameter value.

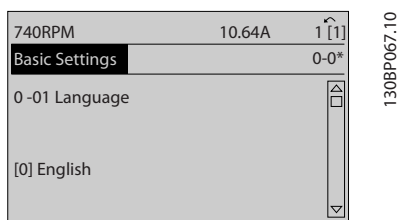


2.1.11 Changing Data

The procedure for changing data is the same whether you select a parameter in the quick menu or the main menu mode. Press [OK] to change the selected parameter. The procedure for changing data depends on whether the selected parameter represents a numerical data value or a text value.


2.1.12 Changing a Text Value

If the selected parameter is a text value, change the text value with the [▲] [▼] navigation keys. The up key increases the value, and the down key decreases the value. Place the cursor on the value you want to save and press [OK].

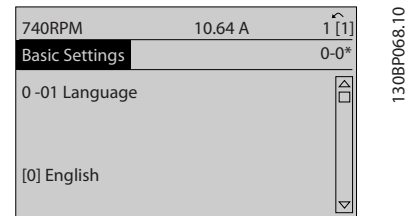


2.1.13 Changing a Group of Numeric Data Values

If the chosen parameter represents a numeric data value, change the chosen data value by means of the [◀] [▶] navigation keys as well as the [▲] [▼] navigation keys. Use the [◀] [▶] navigation keys to move the cursor horizontally.

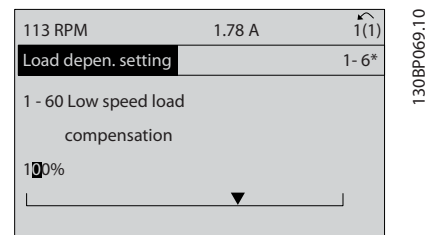

Use the [▲] [▼] navigation keys to change the data value. The up key enlarges the data value, and the down key reduces the data value. Place the cursor on the value you want to save and press [OK].

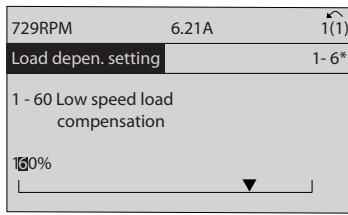


130BP070.10

15-30 Fault Log: Error Code to 15-32 Alarm Log: Time contain a fault log which can be read out. Choose a parameter, press [OK], and use the [▲] [▼] navigation keys to scroll through the value log.

Use 3-10 Preset Reference as another example: Choose the parameter, press [OK], and use the [▲] [▼] navigation keys to scroll through the indexed values. To change the parameter value, select the indexed value and press [OK]. Change the value by using the [▲] [▼] keys. Press [OK] to accept the new setting. Press [CANCEL] to abort. Press [Back] to leave the parameter.

2.1.14 Infinitely Variable Change of Numeric Data Value

If the chosen parameter represents a numeric data value, select a digit with the [◀] [▶] navigation keys.

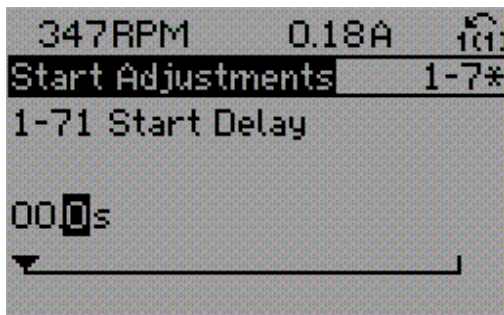

130BP073.10

2.1.17 How to Program on the Numerical Local Control Panel

The following instructions are valid for the Numerical LCP (LCP 101).


The control panel is divided into four functional groups:

1. Numerical display.
2. Menu keys and LEDs - changing parameters and switching between display functions.
3. Navigation keys and LEDs (LEDs).
4. Operation keys and LEDs.

Change the selected digit infinitely variably with the [▲] [▼] navigation keys.

The chosen digit is indicated by the cursor. Place the cursor on the digit you want to save and press [OK].

Display line: Status messages displaying icons and numeric value.

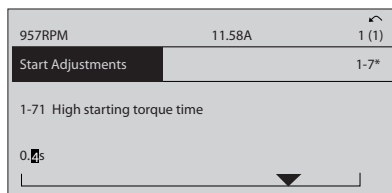

130BP072.10

LEDs

- Green LED/On: Indicates if control section is on.
- Yellow LED/Wrn.: Indicates a warning.
- Flashing red LED/Alarm: Indicates an alarm.

2.1.15 Value, Step-by-Step

Certain parameters can be changed step by step or infinitely varying. This applies to 1-20 Motor Power [kW], 1-22 Motor Voltage and 1-23 Motor Frequency.

The parameters are changed both as a group of numeric data values and as numeric data values infinitely varying.

2.1.16 Readout and Programming of Indexed Parameters


Parameters are indexed when placed in a rolling stack.

2

LCP keys

[Menu] Select one of the following modes:

- Status
- Quick Setup
- Main Menu

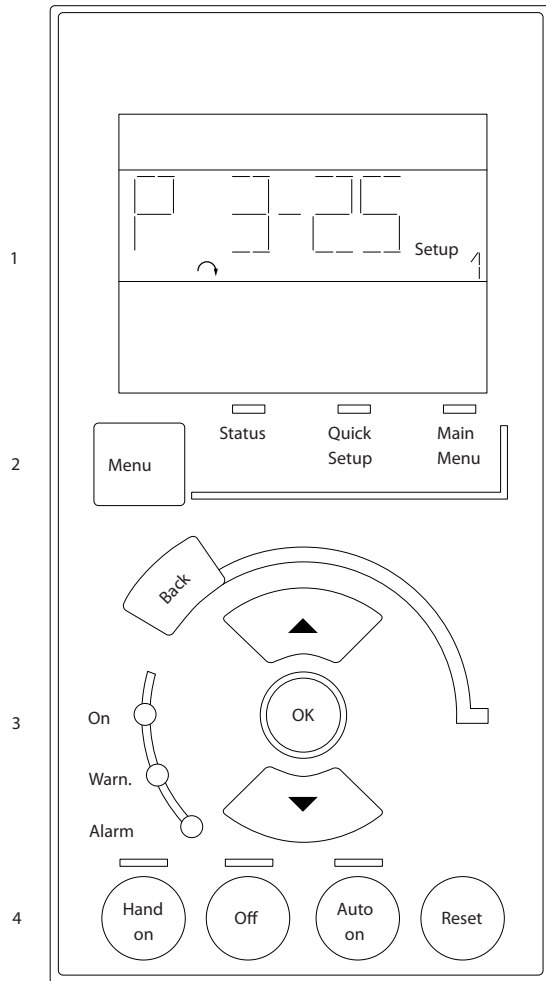

Status Mode


Displays the status of the Adjustable frequency drive or the motor.

If an alarm occurs, the NLCP automatically switches to status mode.

A number of alarms can be displayed.

NOTE!

Parameter copy is not possible with LCP 101 Numerical Local Control Panel.

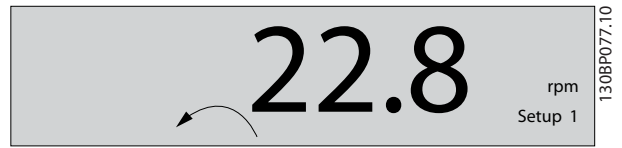

Main Menu/Quick Set-up is used for programming all parameters or only the parameters in the Quick Menu (see also description of the LCP 102 earlier in this chapter).

The parameter values can be changed using the [▲] [▼] keys when the value is flashing.

Select Main Menu by pressing the [Menu] key a number of times.

Select the parameter group [xx-] and press [OK]

Select the parameter [-xx] and press [OK]


If the parameter is an array parameter, select the array number and press [OK]

Select the wanted data value and press [OK]

Parameters with functional choices display values such as [1], [2], etc. For a description of the different choices, see the individual description of the parameters in the *Parameter Selection* section


[Back] for stepping backwards

Arrow [▲] [▼] keys are used for navigating between commands and within parameters.

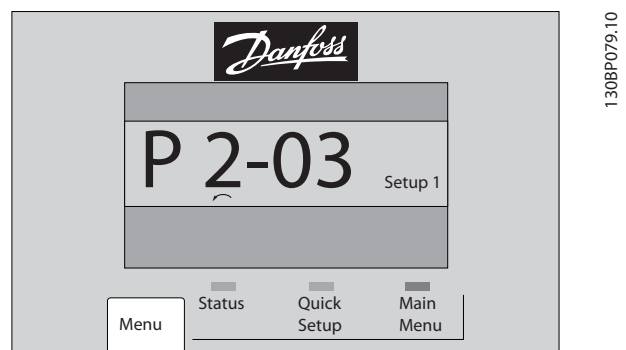

2.1.18 Local Control Keys

Keys for local control are found at the bottom of the LCP.

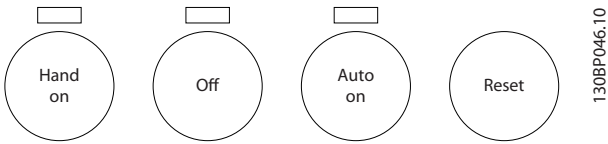

[Hand on] enables control of the Adjustable frequency drive via the LCP. [Hand on] also starts the motor and it is now possible to enter the motor speed data by means of the arrow keys. The key can be selected as Enable [1] og Disable [0] via 0-40 [Hand on] Key on LCP.

External stop signals activated by means of control signals or a serial bus will override a 'start' command via the LCP. The following control signals will still be active when [Hand on] is activated:

- [Hand on] - [Off] - [Auto on]
- Reset
- Coasting stop inverse
- Reversing
- Set-up select lsb - Set-up select msb
- Stop command from serial communication
- Quick stop
- DC brake

[Off] stops the connected motor. The key can be selected as Enable [1] or Disable [0] via 0-41 [Off] Key on LCP. If no external stop function is selected and the [Off] key is inactive, the motor can be stopped by disconnecting the voltage.

[Auto on] enables the Adjustable frequency drive to be controlled via the control terminals and/or serial communication. When a start signal is applied on the control terminals and/or the bus, the Adjustable frequency drive will start. The key can be selected as Enable [1] or Disable [0] via 0-42 [Auto on] Key on LCP.

NOTE!

An active HAND-OFF-AUTO signal via the digital inputs has higher priority than the control keys [Hand on] [Auto on].

[Reset] is used for resetting the Adjustable frequency drive after an alarm (trip). It can be selected as Enable [1] or Disable [0] via 0-43 [Reset] Key on LCP.

2.1.19 Initialization to Default Settings

Initialize the Adjustable frequency drive to default settings in two ways.

Recommended initialization (via 14-22 Operation Mode)

1.	Select 14-22 Operation Mode
2.	Press [OK]
3.	Select "Initialization"
4.	Press [OK]
5.	Cut off the line power supply and wait until the display turns off.
6.	Reconnect the line power supply - the Adjustable frequency drive is now reset.

14-22 Operation Mode initializes all except:
14-50 RFI Filter
8-30 Protocol
8-31 Address
8-32 FC Port Baud Rate
8-35 Minimum Response Delay
8-36 Max Response Delay
8-37 Max Inter-Char Delay
15-00 Operating Hours to 15-05 Over Volt's
15-20 Historic Log: Event to 15-22 Historic Log: Time
15-30 Fault Log: Error Code to 15-32 Alarm Log: Time

Manual initialization

1.	Disconnect from the line power and wait until the display turns off.
2a.	Press [Status] - [Main Menu] - [OK] at the same time during power-up for LCP 102, Graphical Display
2b.	Press [Menu] while powering up for LCP 101, Numerical Display
3.	Release the keys after 5 s.
4.	The Adjustable frequency drive is now programmed according to default settings.

This procedure initializes all except:
15-00 Operating Hours
15-03 Power Up's
15-04 Over Temp's
15-05 Over Volt's

NOTE!

A manual initialization also resets serial communication, RFI filter settings (14-50 RFI Filter) and fault log settings.

3 Parameter Descriptions

3.1 Parameter Selection

Parameters for FC 300 are grouped into various parameter groups for easy selection of the correct parameters for optimized operation of the Adjustable frequency drive.

0-** Operation and Display parameters

- Basic settings, set-up handling
- Display and Local Control Panel parameters for choosing readouts, setting up selections and copying functions

1-** Load and Motor parameters includes all load and motor related parameters

2-** Brake parameters

- DC brake
- Dynamic brake (resistor brake)
- Mechanical brake
- Overvoltage Control

3-** References and ramping parameters includes DigiPot function

4-** Limits / Warnings; setting of limits and warning parameters

5-** Digital inputs and outputs includes relay controls

6-** Analog inputs and outputs

7-** Controls; Setting parameters for speed and process controls

8-** Communication and option parameters for setting of FC RS485 and FC USB port parameters.

9-** Profibus parameters

10-** DeviceNet and CAN Fieldbus parameters

12-** Ethernet parameters

13-** Smart Logic Control parameters

14-** Special function parameters

15-** Drive information parameters

16-** Readout parameters

17-** Encoder Option parameters

18-** Readout 2 parameters

30-** Special Features

32-** MCO Basic Settings parameters

33-** MCO Adv. Settings parameters

34-** MCO Data Readouts

35-** Sensor Input Option parameters

3.2 Parameters: 0-** Operation and Display

Parameters related to the fundamental functions of the Adjustable frequency drive, function of the LCP buttons and configuration of the LCP display.

3.2.1 0-0* Basic Settings

0-01 Language		
Option:	Function:	
		Defines the language to be used in the display. The adjustable frequency drive can be delivered with 4 different language packages. English and German are included in all packages. English cannot be erased or manipulated.
[0] *	English	Part of Language packages 1 - 4
[1]	Deutsch	Part of Language packages 1 - 4
[2]	Francais	Part of Language package 1
[3]	Dansk	Part of Language package 1
[4]	Spanish	Part of Language package 1
[5]	Italiano	Part of Language package 1
	Svenska	Part of Language package 1
[7]	Nederlands	Part of Language package 1
[10]	Chinese	Part of Language package 2
	Suomi	Part of Language package 1
[22]	English US	Part of Language package 4
	Greek	Part of Language package 4
	Bras.port	Part of Language package 4
	Slovenian	Part of Language package 3
	Korean	Part of Language package 2
	Japanese	Part of Language package 2
	Turkish	Part of Language package 4
	Trad.Chinese	Part of Language package 2
	Bulgarian	Part of Language package 3
	Srpski	Part of Language package 3
	Romanian	Part of Language package 3
	Magyar	Part of Language package 3
	Czech	Part of Language package 3

0-01 Language		
Option:	Function:	
	Polski	Part of Language package 4
	Russian	Part of Language package 3
	Thai	Part of Language package 2
	Bahasa Indonesia	Part of Language package 2
[52]	Hrvatski	

0-02 Motor Speed Unit		
Option:	Function:	
		The display showing depends on settings in 0-02 Motor Speed Unit and 0-03 Regional Settings. The default setting of 0-02 Motor Speed Unit and 0-03 Regional Settings depends on which region of the world the Adjustable frequency drive is supplied to, but can be re-programmed as required. NOTE! Changing the <i>Motor Speed Unit</i> will reset certain parameters to their initial value. It is recommended to select the motor speed unit first before modifying other parameters.
[0]	RPM	Selects display of motor speed variables and parameters (i.e. references, feedbacks and limits) in terms of motor speed (RPM).
[1] *	Hz	Selects display of motor speed variables and parameters (i.e., references, feedbacks and limits) in terms of output frequency to the motor (Hz).

NOTE!

This parameter cannot be adjusted while the motor is running.

0-03 Regional Settings		
Option:	Function:	
[0] *	International	Activates 1-20 Motor Power [kW] for setting the motor power in kW and sets the default value of 1-23 Motor Frequency to 50 Hz.
[1] *	US	Activates 1-20 Motor Power [kW] for setting the motor power in HP and sets the default value of 1-23 Motor Frequency to 60 Hz.

NOTE!

This parameter cannot be adjusted while the motor is running.

0-04 Operating State at Power-up (Hand)		
Option:	Function:	
		Selects the operating mode upon reconnection of the Adjustable frequency drive to AC line voltage after power-down in hand (local) operation mode.
[0]	Resume	Restarts the Adjustable frequency drive maintaining the same local reference and the same start/stop settings (applied by [HAND ON/OFF]) as before the Adjustable frequency drive was powered down.
[1] *	Forced stop, ref=old	Restarts the Adjustable frequency drive with a saved local reference, after AC line voltage reappears and after pressing [HAND ON].
[2]	Forced stop, ref=0	Resets the local reference to 0 upon restarting the Adjustable frequency drive.


3.2.2 0-1* Set-up Operations

Define and control the individual parameter set-ups. The Adjustable frequency drive has four parameter set-ups that can be programmed independently of each other. This makes the Adjustable frequency drive very flexible and able to solve advanced control functionality problems, often saving the cost of external control equipment. For example, these can be used to program the Adjustable frequency drive to operate according to one control scheme in one set-up (e.g., motor 1 for horizontal movement) and another control scheme in another set-up (e.g., motor 2 for vertical movement). Alternatively they can be used by an OEM machine builder to identically program all their factory fitted adjustable frequency drives for different machine types within a range to have the same parameters and then during production/commissioning simply select a specific set-up depending on which machine the Adjustable frequency drive is installed on. The active set-up (i.e., the set-up in which the Adjustable frequency drive is currently operating) can be selected in *0-10 Active Set-up* and is displayed in the LCP. Using Multi set-up, it is possible to switch between set-ups with the Adjustable frequency drive running or stopped, via digital input or serial communication commands. If it is necessary to change set-ups while running, ensure *0-12 This Set-up Linked to* is programmed as required. Using *0-11 Edit Set-up*, it is possible to edit parameters within any of the set-ups whilst continuing the Adjustable frequency drive operation in its Active Set-up which can be a different set-up to that being edited. Using *0-51 Set-up Copy*, it is possible to copy parameter settings between the set-ups to enable quicker commissioning if similar parameter settings are required in different set-ups.

0-10 Active Set-up		
Option:	Function:	
		Select the set-up to control the Adjustable frequency drive functions.
[0]	Factory setup	Cannot be changed. It contains the Danfoss data set, and can be used as a data source when returning the other set-ups to a known state.
[1] *	Set-up 1	<i>Set-up 1</i> [1] to <i>Set-up 4</i> [4] are the four separate parameter set-ups within which all parameters can be programmed.
[2]	Set-up 2	
[3]	Set-up 3	
[4]	Set-up 4	
[9]	Multi Set-up	Remote selection of set-ups using digital inputs and the serial communication port. This set-up uses the settings from <i>0-12 This Set-up Linked to</i> . Stop the Adjustable frequency drive before making changes to open-loop and closed-loop functions

Use *0-51 Set-up Copy* to copy a set-up to one or all other set-ups. Stop the Adjustable frequency drive before switching between set-ups where parameters marked 'not changeable during operation' have different values. To avoid conflicting settings of the same parameter within two different set-ups, link the set-ups together using *0-12 This Set-up Linked to*. Parameters which are 'not changeable during operation' are marked FALSE in the parameter lists in the section *Parameter Lists*.

0-11 Edit Set-up		
Option:	Function:	
		Select the set-up to be edited (i.e., programmed) during operation: either the active set-up or one of the inactive set-ups.
[0]	Factory setup	Cannot be edited, but it is useful as a data source for returning the other set-ups to a known state.
[1] *	Set-up 1	<i>Set-up 1</i> [1] to <i>Set-up 4</i> [4] can be edited freely during operation, independently of the active set-up.
[2]	Set-up 2	
[3]	Set-up 3	
[4]	Set-up 4	
[9]	Active Set-up	Can also be edited during operation. Edit the chosen set-up from a range of sources: LCP, FC RS-485, FC USB or up to five serial communication bus sites.

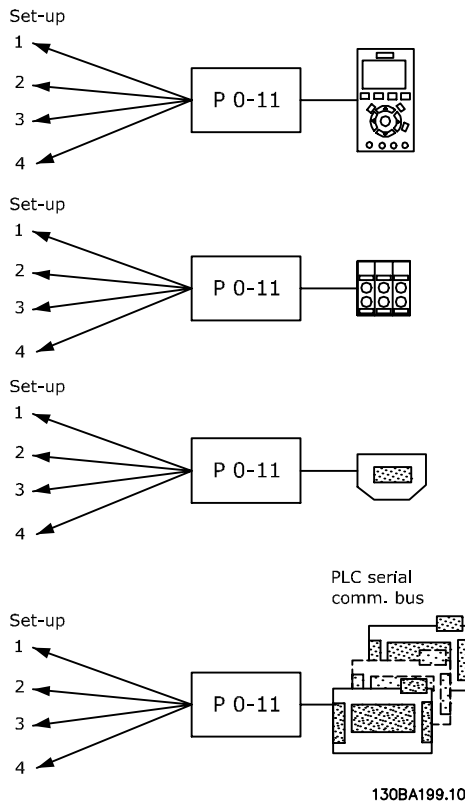

0-12 This Set-up Linked to	
Option:	Function:
	<p>To enable conflict-free changes from one set-up to another during operation, link set-ups containing parameters that are not changeable during operation. The link will ensure the proper synchronization of the 'not changeable during operation' parameter values when moving from one set-up to another during operation. 'Not changeable during operation' parameters can be identified by the label FALSE in the parameter lists in the section <i>Parameter Lists</i>.</p> <p>0-12 This Set-up Linked to is used by Multi set-up in 0-10 Active Set-up. Multi set-up is used to move from one set-up to another during operation (i.e., while the motor is running).</p> <p>Example: Use Multi set-up to shift from Set-up 1 to Set-up 2 while the motor is running. Program in Set-up 1 first, then ensure that Set-up 1 and Set-up 2 are synchronized (or 'linked'). Synchronization can be performed in two ways:</p> <ol style="list-style-type: none"> 1. Change the edit set-up to Set-up 2 [2] in 0-11 Edit Set-up and set 0-12 This Set-up Linked to to Set-up 1 [1]. This will start the linking (synchronizing) process.

0-12 This Set-up Linked to	
Option:	Function:
	<p>OR</p> <p>2. While still in Set-up 1, copy Set-up 1 to Set-up 2. Then set 0-12 This Set-up Linked to to Set-up 2 [2]. This will start the linking process.</p> <p>After the link is complete, 0-13 Readout: Linked Set-ups will read {1,2} to indicate that all 'not changeable during operation' parameters are now the same in Set-up 1 and Set-up 2. If there are changes to a "not changeable during operation" parameter, e.g., 1-30 Stator Resistance (Rs) in Set-up 2, they will also be changed automatically in Set-up 1. A switch between Set-up 1 and Set-up 2 during operation is now possible.</p>
[0] *	Not linked
[1]	Set-up 1
[2]	Set-up 2
[3]	Set-up 3
[4]	Set-up 4

0-13 Readout: Linked Set-ups														
Array [5]														
Range:	Function:													
0* [0 - 255]	View a list of all the set-ups linked by means of 0-12 <i>This Set-up Linked to</i> . The parameter has one index for each parameter set-up. The parameter value displayed for each index represents which set-ups are linked to that parameter set-up.													
	<table border="1"> <thead> <tr> <th>Index</th> <th>LCP value</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>{0}</td> </tr> <tr> <td>1</td> <td>{1,2}</td> </tr> <tr> <td>2</td> <td>{1,2}</td> </tr> <tr> <td>3</td> <td>{3}</td> </tr> <tr> <td>4</td> <td>{4}</td> </tr> </tbody> </table>	Index	LCP value	0	{0}	1	{1,2}	2	{1,2}	3	{3}	4	{4}	
Index	LCP value													
0	{0}													
1	{1,2}													
2	{1,2}													
3	{3}													
4	{4}													
	<p>Table 3.2 Example: Set-up 1 and Set-up 2 are linked</p>													

0-14 Readout: Edit Set-ups / Channel		
Range:	Function:	
0* [-2147483648 - 2147483647]	View the setting of 0-11 <i>Edit Set-up</i> for each of the four different communication channels. When the number is displayed in hex, as it is in the LCP, each number represents one channel. Numbers 1-4 represent a set-up number; 'F' means factory setting; and 'A' means active set-up. The channels are, from right to left: LCP , FC-bus, USB, HPFB1-5. Example: The number AAAAAA21h means that the FC bus selected Set-up 2 in 0-11 <i>Edit Set-up</i> , the LCP selected Set-up 1 and all others used the active set-up.	

0-15 Readout: actual setup		
Range:	Function:	
0* [0 - 255]	Makes it possible to read out the active set-up, also when multi set-up is selected in par. 0-10.	

3.2.3 0-2* LCP Display

Define the variables displayed in the Graphical Local Control Panel.

NOTE!

Please refer to 0-37 *Display Text 1*, 0-38 *Display Text 2* and 0-39 *Display Text 3* for information on how to write display texts.

0-20 Display Line 1.1 Small		
Option:	Function:	
		Select a variable for display in line 1, left position.
[0] *	None	No display value selected.
[9]	Performance Monitor	
[15]	Readout: actual setup	
[37]	Display Text 1	
[38]	Display Text 2	
[39]	Display Text 3	
[748]	PCD Feed Forward	
[953]	Profibus Warning Word	
[1005]	Readout Transmit Error Counter	
[1006]	Readout Receive Error Counter	
[1007]	Readout Bus Off Counter	
[1013]	Warning Parameter	
[1230]	Warning Parameter	
[1472]	Legacy Alarm Word	
[1473]	Legacy Warning Word	
[1474]	Leg. Ext. Status Word	
[1501]	Running Hours	
[1502]	kWh Counter	
[1600]	Control Word	Present control word
[1601]	Reference [Unit]	Total reference (sum of digital/analog/preset/bus/freeze ref./catch up and slow-down) in selected unit.
[1602]	Reference %	Total reference (sum of digital/analog/preset/bus/freeze ref./catch up and slow-down) in percent.
[1603]	Status Word	Present status word.
[1605]	Main Actual Value [%]	Actual value as a percentage.
[1609]	Custom Readout	
[1610]	Power [kW]	Actual power consumed by the motor in kW.
[1611]	Power [hp]	Actual power consumed by the motor in HP.
[1612]	Motor Voltage	Voltage supplied to the motor.
[1613]	Frequency	Motor frequency, i.e., the output frequency from the Adjustable frequency drive in Hz

0-20 Display Line 1.1 Small		
Option:	Function:	
[1614]	Motor Current	Phase current of the motor measured as effective value.
[1615]	Frequency [%]	Motor frequency, i.e., the output frequency from the Adjustable frequency drive in percent.
[1616]	Torque [Nm]	Actual motor torque in Nm
[1617] *	Speed [RPM]	Speed in RPM (revolutions per minute), i.e., the motor shaft speed in closed-loop.
[1618]	Motor Thermal	Thermal load on the motor, calculated by the ETR function.
[1619]	KTY sensor temperature	
[1620]	Motor Angle	
[1621]	Torque [%] High Res.	
[1622]	Torque [%]	Present motor load as a percentage of the rated motor torque.
[1625]	Torque [Nm] High	
[1630]	DC Link Voltage	Intermediate circuit voltage in the Adjustable frequency drive.
[1632]	Brake Energy /s	Present braking energy transferred to an external brake resistor. Stated as an instantaneous value.
[1633]	Brake Energy /2 min	Braking energy transferred to an external brake resistor. The mean power is calculated continuously for the most recent 120 seconds.
[1634]	Heatsink Temp.	Present heatsink temperature of the Adjustable frequency drive. The cut-out limit is 203°±9°F [95°±5°C]; cutting back in occurs at 158°F ±9°F [70°C ± 5°C].
[1635]	Inverter Thermal	Percentage load of the inverters.
[1636]	Inv. Nom. Current	Nominal current of the Adjustable frequency drive.
[1637]	Inv. Max. Current	Maximum current of the Adjustable frequency drive.
[1638]	SL Controller State	State of the event executed by the control.
[1639]	Control Card Temp.	Temperature of the control card.
[1650]	External Reference	Sum of the external reference as a percentage, i.e., the sum of analog/pulse/bus.

0-20 Display Line 1.1 Small		
Option:	Function:	
[1651]	Pulse Reference	Frequency in Hz connected to the digital inputs (18, 19 or 32, 33).
[1652]	Feedback [Unit]	Reference value from programmed digital input(s).
[1653]	Digi Pot Reference	
[1657]	Feedback [RPM]	
[1660]	Digital Input	Signal states from the 6 digital terminals (18, 19, 27, 29, 32 and 33). There are 16 bits in total, but only six of them are used. Input 18 corresponds to the leftmost of the used bits. Signal low = 0; Signal high = 1.
[1661]	Terminal 53 Switch Setting	Setting of input terminal 54. Current = 0; Voltage = 1.
[1662]	Analog Input 53	Actual value at input 53 either as a reference or protection value.
[1663]	Terminal 54 Switch Setting	Setting of input terminal 54. Current = 0; Voltage = 1.
[1664]	Analog Input 54	Actual value at input 54 either as reference or protection value.
[1665]	Analog Output 42 [mA]	Actual value at output 42 in mA. Use 6-50 Terminal 42 Output to select the value to be shown.
[1666]	Digital Output [bin]	Binary value of all digital outputs.
[1667]	Freq. Input #29 [Hz]	Actual value of the frequency applied at terminal 29 as an impulse input.
[1668]	Freq. Input #33 [Hz]	Actual value of the frequency applied at terminal 33 as an impulse input.
[1669]	Pulse Output #27 [Hz]	Actual value of impulses applied to terminal 27 in digital output mode.
[1670]	Pulse Output #29 [Hz]	Actual value of impulses applied to terminal 29 in digital output mode.
[1671]	Relay Output [bin]	
[1672]	Counter A	Application dependent (e.g., SLC Control)
[1673]	Counter B	Application dependent (e.g., SLC Control)
[1674]	Prec. Stop Counter	Display the actual counter value.

0-20 Display Line 1.1 Small		
Option:	Function:	
[1675]	Analog In X30/11	Actual value at input X30/11 either as reference or protection value.
[1676]	Analog In X30/12	Actual value at input X30/12 either as reference or protection value.
[1677]	Analog Out X30/8 [mA]	Actual value at output X30/8 in mA. Use <i>6-60 Terminal X30/8 Output</i> to select the value to be shown.
[1678]	Analog Out X45/1 [mA]	
[1679]	Analog Out X45/3 [mA]	
[1680]	Fieldbus CTW 1	Control word (CTW) received from the bus master.
[1682]	Fieldbus REF 1	Main reference value sent with control word from the bus master.
[1684]	Comm. Option STW	Extended serial communication option status word.
[1685]	FC Port CTW 1	Control word (CTW) received from the bus master.
[1686]	FC Port REF 1	Status word (STW) sent to the bus master.
[1690]	Alarm Word	One or more alarms in a Hex code.
[1691]	Alarm Word 2	One or more alarms in a Hex code.
[1692]	Warning Word	One or more warnings in a Hex code.
[1693]	Warning Word 2	One or more warnings in a Hex code.
[1694]	Ext. Status Word	One or more status conditions in a Hex code.
[1836]	Analog Input X48/2 [mA]	
[1837]	Temp. Input X48/4	
[1838]	Temp. Input X48/7	
[1839]	Temp. Input X48/10	
[1860]	Digital Input 2	
[1890]	Process PID Error	
[1891]	Process PID Output	
[1892]	Process PID Clamped Output	
[1893]	Process PID Gain Scaled Output	

0-20 Display Line 1.1 Small		
Option:	Function:	
[3019]	Wobble Delta Freq. Scaled	
[3110]	Bypass Status Word	
[3111]	Bypass Running Hours	
[3401]	PCD 1 Write to MCO	
[3402]	PCD 2 Write to MCO	
[3403]	PCD 3 Write to MCO	
[3404]	PCD 4 Write to MCO	
[3405]	PCD 5 Write to MCO	
[3406]	PCD 6 Write to MCO	
[3407]	PCD 7 Write to MCO	
[3408]	PCD 8 Write to MCO	
[3409]	PCD 9 Write to MCO	
[3410]	PCD 10 Write to MCO	
[3421]	PCD 1 Read from MCO	
[3422]	PCD 2 Read from MCO	
[3423]	PCD 3 Read from MCO	
[3424]	PCD 4 Read from MCO	
[3425]	PCD 5 Read from MCO	
[3426]	PCD 6 Read from MCO	
[3427]	PCD 7 Read from MCO	
[3428]	PCD 8 Read from MCO	
[3429]	PCD 9 Read from MCO	
[3430]	PCD 10 Read from MCO	
[3440]	Digital Inputs	
[3441]	Digital Outputs	
[3450]	Actual Position	
[3451]	Commanded Position	
[3452]	Actual Master Position	
[3453]	Slave Index Position	
[3454]	Master Index Position	
[3455]	Curve Position	
[3456]	Track Error	
[3457]	Synchronizing Error	
[3458]	Actual Velocity	
[3459]	Actual Master Velocity	
[3460]	Synchronizing Status	

0-20 Display Line 1.1 Small		
Option:	Function:	
[3461]	Axis Status	
[3462]	Program Status	
[3464]	MCO 302 Status	
[3465]	MCO 302 Control	
[3470]	MCO Alarm Word 1	
[3471]	MCO Alarm Word 2	
[4285]	Active Safe Func.	
[4286]	Safe Option Info	
[9913]	Idle time	
[9914]	Paramdb requests in queue	
[9917]	tCon1 time	
[9918]	tCon2 time	
[9919]	Time Optimize Measure	
[9920]	HS Temp. (PC1)	
[9921]	HS Temp. (PC2)	
[9922]	HS Temp. (PC3)	
[9923]	HS Temp. (PC4)	
[9924]	HS Temp. (PC5)	
[9925]	HS Temp. (PC6)	
[9926]	HS Temp. (PC7)	
[9927]	HS Temp. (PC8)	

0-21 Display Line 1.2 Small		
Option:	Function:	
[0] *	None	Select a variable for display in line 1, middle position. The options are the same as listed for 0-20 Display Line 1.1 Small.

0-22 Display Line 1.3 Small		
Option:	Function:	
[30120] *	Mains Current [A]	Select a variable for display in line 1, right position. The options are the same as listed for 0-20 Display Line 1.1 Small.

0-23 Display Line 2 Large		
Option:	Function:	
[30100] *	Output Current [A]	Select a variable for display in line 2. The options are the same as listed for 0-20 Display Line 1.1 Small.

0-24 Display Line 3 Large		
Select a variable for display in line 3.		
Option:	Function:	
[30121] *	Mains Frequency	The options are the same as those listed in 0-20 Display Line 1.1 Small.


0-25 My Personal Menu		
Range:	Function:	
Application dependent* [0 - 9999]	Define up to 50 parameters to appear in the Q1 Personal Menu, accessible via the [Quick Menu] key on the LCP. The parameters will be displayed in the Q1 Personal menu in the order they are programmed into this array parameter. Delete parameters by setting the value to '0000'. For example, this can be used to provide quick, simple access to just one or up to 50 parameters which require changing on a regular basis (e.g., for plant maintenance reasons) or by an OEM to enable simple commissioning of their equipment.	

3.2.4 0-3* LCP Custom Readout

It is possible to customize the display elements for various purposes: *Custom Readout. Value proportional to speed (linear, squared or cubed depending on unit selected in 0-30 Custom Readout Unit) *Display Text. Text string stored in a parameter.

Custom Readout

The calculated value to be displayed is based on settings in 0-30 Custom Readout Unit, 0-31 Custom Readout Min Value (linear only), 0-32 Custom Readout Max Value, 4-13 Motor Speed High Limit [RPM], 4-14 Motor Speed High Limit [Hz] and actual speed.

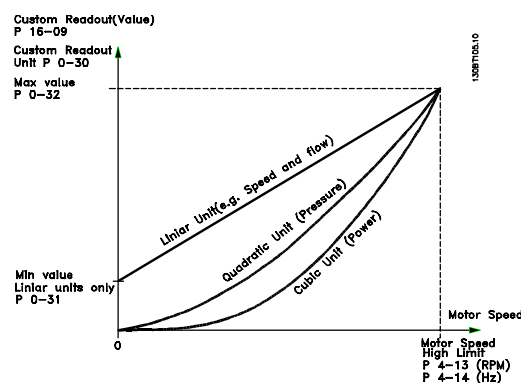

The relation will depend on the type of unit selected in 0-30 Custom Readout Unit:

Unit Type	Speed Relation
Dimensionless	Linear
Speed	
Flow, volume	
Flow, mass	
Velocity	
Length	
Temperature	
Pressure	Quadratic
Power	Cubic

0-30 Unit for User-defined Readout		
Option:	Function:	
		It is possible to program a value to be shown in the display of the LCP. The value will have a linear, squared or cubed relation to speed. This relation will depend on the unit selected (see table above). The actual calculated value can be read in <i>16-09 Custom Readout</i> , and/or shown in the display by selecting Custom Readout [16-09] in <i>0-20 Display Line 1.1 Small</i> to <i>0-24 Display Line 3 Large</i> .
[0] *	None	
[1]	%	
[5]	PPM	
[10]	1/min	
[11]	rpm	
[12]	Pulse/s	
[20]	l/s	
[21]	l/min	
[22]	l/h	
[23]	m ³ /s	
[24]	m ³ /min	
[25]	m ³ /h	
[30]	kg/s	
[31]	kg/min	
[32]	kg/h	
[33]	t/min	
[34]	t/h	
[40]	m/s	
[41]	m/min	
[45]	m	
[60]	°C	
[70]	mbar	
[71]	bar	
[72]	Pa	
[73]	kPa	
[74]	m WG	
[80]	kW	
[120]	GPM	
[121]	gal/s	
[122]	gal/min	

0-30 Unit for User-defined Readout		
Option:	Function:	
[123]	gal/h	
[124]	CFM	
[125]	ft ³ /s	
[126]	ft ³ /min	
[127]	ft ³ /h	
[130]	lb/s	
[131]	lb/min	
[132]	lb/h	
[140]	ft/s	
[141]	ft/min	
[145]	ft	
[160]	°F	
[170]	psi	
[171]	lb/in ²	
[172]	in WG	
[173]	ft WG	
[180]	HP	

0-31 Min Value of User-defined Readout		
Range:	Function:	
0.00 Custom-ReadoutUnit*	[Application dependant]	This parameter sets the min. value of the custom defined readout (occurs at zero speed). Only possible to set different from 0 is when selecting a linear unit in <i>0-30 Unit for User-defined Readout</i> . For quadratic and cubic units, the minimum value will be 0.
0.00 Custom-ReadoutUnit*	[Application dependant]	This parameter sets the min. value of the custom defined readout (occurs at zero speed). Only possible to set different from 0 is when selecting a linear unit in <i>0-30 Unit for User-defined Readout</i> . For quadratic and cubic units, the minimum value will be 0.

0-32 Custom Readout Max Value		
Range:	Function:	
100.00 Custom-ReadoutUnit*	[par. 0-31 - 999999.99 CustomReadoutUnit]	This parameter sets the max value to be shown when the speed of the motor has reached the set value for <i>4-13 Motor Speed High Limit [RPM]</i> or <i>4-14 Motor Speed High Limit [Hz]</i> (depends on setting in <i>0-02 Motor Speed Unit</i>).

0-37 Display Text 1		
Range:	Function:	
0* [0 - 0]	Enter a text which can be viewed in the graphical display by selecting Display Text 1 [37] in <i>0-20 Display Line 1.1 Small, 0-21 Display Line 1.2 Small, 0-22 Display Line 1.3 Small, 0-23 Display Line 2 Large or 0-24 Display Line 3 Large.</i>	

0-38 Display Text 2		
Range:	Function:	
0* [0 - 0]	Enter a text which can be viewed in the graphical display by selecting Display Text 2 [38] in <i>0-20 Display Line 1.1 Small, 0-21 Display Line 1.2 Small, 0-22 Display Line 1.3 Small, 0-23 Display Line 2 Large or 0-24 Display Line 3 Large.</i>	

0-39 Display Text 3		
Range:	Function:	
0* [0 - 0]	Enter a text which can be viewed in the graphical display by selecting Display Text 3 [39] in <i>0-20 Display Line 1.1 Small, 0-21 Display Line 1.2 Small, 0-22 Display Line 1.3 Small, 0-23 Display Line 2 Large or 0-24 Display Line 3 Large.</i>	

3.2.5 0-4* LCP Keypad

Enable, disable and password protect individual keys on the LCP.

0-40 [Hand on] Key on LCP		
Option:	Function:	
[0] * Disabled	No effect when [Hand on] is pressed. Select [0] Disabled to avoid accidental start of the Adjustable frequency drive in <i>Hand on</i> mode.	
[1] * Enabled	The LCP switches to <i>Hand on</i> mode directly when [Hand on] is pressed.	
[2] Password	After pressing [Hand on], a password is required. If <i>0-40 [Hand on] Key on LCP</i> is included in <i>My Personal Menu</i> , define the password in <i>0-65 Quick Menu Password</i> . Otherwise, define the password in <i>0-60 Main Menu Password</i> .	
[3] Hand Off/On	When [Hand on] is pressed once, the LCP switches to <i>Off</i> mode. When pressed again, the LCP switches to <i>Hand on</i> mode.	
[4] Hand Off/On w. Passw.	Same as [3] but a password is required (see [2]).	
[9] Enabled, ref = 0		

0-41 [Off] Key on LCP		
Option:	Function:	
[0] * Disabled	Avoids accidental stop of the Adjustable frequency drive.	
[1] * Enabled		
[2] Password	Avoids unauthorized stop. If <i>0-41 [Off] Key on LCP</i> is included in the Quick Menu, then define the password in <i>0-65 Quick Menu Password</i> .	

0-42 [Auto on] Key on LCP		
Option:	Function:	
[0] * Disabled	Avoid accidental start of the Adjustable frequency drive in auto mode.	
[1] * Enabled		
[2] Password	Avoids unauthorized start in auto mode. If <i>0-42 [Auto on] Key on LCP</i> is included in the Quick Menu, then define the password in <i>0-65 Quick Menu Password</i> .	

0-43 [Reset] Key on LCP		
Option:	Function:	
[0] * Disabled	No effect when [Reset] is pressed. Avoids accidental alarm reset.	
[1] * Enabled		
[2] Password	Avoids unauthorized resetting. If <i>0-43 [Reset] Key on LCP</i> is included in the Quick Menu, then define the password in <i>0-65 Quick Menu Password</i> .	
[7] Enabled without OFF	Resets the Adjustable frequency drive without setting it in <i>Off</i> mode.	
[8] Password without OFF	Resets the Adjustable frequency drive without setting it in <i>Off</i> mode. A password is required when pressing [Reset] (see [2]).	

3.2.6 0-5* Copy/Save

Copy parameter settings between set-ups and to/from the LCP.

0-50 LCP Copy		
Option:	Function:	
[0] * No copy		
[1] All to LCP	Copies all parameters in all set-ups from the Adjustable frequency drive memory to the LCP memory.	
[2] All from LCP	Copies all parameters in all set-ups from the LCP memory to the Adjustable frequency drive memory.	

0-50 LCP Copy		
Option:	Function:	
[3]	Size indep. from LCP	Copy only the parameters that are independent of the motor size. The latter selection can be used to program several adjustable frequency drives with the same function without disturbing motor data.
[4]	File from MCO to LCP	
[5]	File from LCP to MCO	
[6]	Data from DYN to LCP	
[7]	Data from LCP to DYN	

NOTE!

This parameter cannot be adjusted while the motor is running.

0-51 Set-up Copy		
Option:	Function:	
[0] *	No copy	No function
[1]	Copy to set-up 1	Copies all parameters in the present Programming Set-up (defined in <i>0-11 Programming Set-up</i>) to Set-up 1.
[2]	Copy to set-up 2	Copies all parameters in the present Programming Set-up (defined in <i>0-11 Programming Set-up</i>) to Set-up 2.
[3]	Copy to set-up 3	Copies all parameters in the present Programming Set-up (defined in <i>0-11 Programming Set-up</i>) to Set-up 3.
[4]	Copy to set-up 4	Copies all parameters in the present Programming Set-up (defined in <i>0-11 Programming Set-up</i>) to Set-up 4.
[9]	Copy to all	Copies the parameters in the present set-up over to each of the set-ups 1 to 4.

3.2.7 0-6* Password

0-60 Main Menu Password		
Range:	Function:	
100 *	[0 - 999]	Define the password for access to the main menu via the [Main Menu] key. If <i>0-61 Access to Main Menu w/o Password</i> is set to <i>Full access</i> [0], this parameter will be ignored.

0-61 Access to Main Menu w/o Password		
Option:	Function:	
[0] *	Full access	Disables password defined in <i>0-60 Main Menu Password</i> .
[1]	LCP: Read only	Prevent unauthorized editing of main menu parameters.
[2]	LCP: No access	Prevent unauthorized viewing and editing of main menu parameters.
[3]	Bus: Read only	Read-only functions for parameters on Serial communication bus and/or FC standard bus.
[4]	Bus: No access	No access to parameters is allowed via Serial communication bus and/or FC standard bus.
[5]	All: Read only	Read-only function for parameters on LCP, Serial communication bus or FC standard bus.
[6]	All: No access	No access from LCP, Serial communication bus or FC standard bus is allowed.

If *Full access* [0] is selected then *0-60 Main Menu Password*, *0-65 Personal Menu Password* and *0-66 Access to Personal Menu w/o Password* will be ignored.

NOTE!

More complex password protection is available for OEMs upon request.

0-65 Quick Menu Password		
Range:	Function:	
200*	[-9999 - 9999]	Define the password for access to the quick menu via the [Quick Menu] key. If <i>0-66 Access to Quick Menu w/o Password</i> is set to <i>Full access</i> [0], this parameter will be ignored.

0-66 Access to Quick Menu w/o Password		
Option:	Function:	
[0] *	Full access	Disables the password defined in <i>0-65 Quick Menu Password</i> .
[1]	LCP: Read only	Prevents unauthorized editing of quick menu parameters.
[3]	Bus: Read only	Read only functions for quick menu parameters on Serial communication bus and/ or FC standard bus.
[5]	All: Read only	read only function for quick menu parameters on LCP, Serial communication bus or FC standard bus.

If *0-61 Access to Main Menu w/o Password* is set to *Full access* [0], then this parameter will be ignored.

3

0-67 Bus Password Access		
Range:		Function:
0*	[0 - 9999]	Writing to this parameter enables users to unlock the adjustable frequency drive from bus/MCT 10 Set-up Software.

3.3 Parameters: 1-** Load and Motor

3.3.1 1-0* General Settings

Define whether the Adjustable frequency drive operates in speed mode or torque mode; and whether the internal PID control should be active or not.

1-00 Configuration Mode		
Option:	Function:	
		Select the application control principle to be used when a remote reference (i.e., via analog input or serial communication bus) is active. A remote reference can only be active when 3-13 <i>Reference Site</i> is set to [0] or [1].
[0] *	Speed open loop	Enables speed control (without feedback signal from motor) with automatic slip compensation for almost constant speed at varying loads. Compensations are active but can be disabled in the Load/Motor parameter group 1-0*.
[1]	Speed closed loop	Enables Speed closed-loop control with feedback. Obtain full holding torque at 0 RPM. For increased speed accuracy, provide a feedback signal and set the speed PID control.
[2]	Torque	Enables torque closed-loop control with feedback. Only possible with "Flux with motor feedback" option, 1-01 <i>Motor Control Principle</i> . FC 302 only.
[3]	Process	Enables the use of process control in the Adjustable frequency drive. The process control parameters are set in parameter groups 7-2* and 7-3*.
[4]	Torque open loop	Enables the use of torque open-loop in VVC+ mode (1-01 <i>Motor Control Principle</i>). The torque PID parameters are set in parameter group 7-1*.
[5]	Wobble	Enables the wobble functionality in 30-00 <i>Wobble Mode</i> to 30-19 <i>Wobble Delta Freq. Scaled</i> .
[6]	Surface Winder	Enables the surface winder control specific parameters in parameter group 7-2* and 7-3*.
[7]	Extended PID Speed OL	Specific parameters in parameter group 7-2* to 7-5*.
[8]	Extended PID Speed CL	Specific parameters in parameter group 7-2* to 7-5*.

1-01 Motor Control Principle		
Option:	Function:	
		Select which motor control principle to employ.
[0] *	U/f	special motor mode, for parallel connected motors in special motor applications. When U/f is selected the characteristic of the control principle can be edited in 1-55 <i>U/f Characteristic - U</i> and 1-56 <i>U/f Characteristic - F</i> .
[1]	VVC+	Voltage vector control principle suitable for most applications. The main benefit of VVC ^{plus} operation is that it uses a robust motor model.
[2]	Flux sensorless	Flux Vector control without encoder feedback, for simple installation and robustness against sudden load changes. FC 302 only.
[3]	Flux w/ motor feedb	very high accuracy speed and torque control, suitable for the most demanding applications. FC 302 only.

3

The best shaft performance is normally achieved using either of the two flux vector control modes *Flux sensorless* [2] and *Flux with encoder feedback* [3].

NOTE!

This parameter cannot be adjusted while the motor is running.

NOTE!

An overview of possible combinations of the settings in 1-00 *Configuration Mode* and 1-01 *Motor Control Principle* can be found in 4.1.1 *Conversion*.

1-02 Flux Motor Feedback Source		
Option:	Function:	
		Select the interface at which to receive feedback from the motor.
[0]	Motor feedb. P1-02	
[1] *	24V encoder	A and B channel encoder, which can only be connected to the digital input terminals 32/33. Terminals 32/33 must be programmed to <i>No operation</i> .
[2]	MCB 102	Encoder module option which can be configured in parameter group 17-1* FC 302 only.
[3]	MCB 103	Optional resolver interface module which can be configured in parameter group 17-5*

1-02 Flux Motor Feedback Source		
Option:	Function:	
[4]	MCO Encoder 1 X56	Encoder interface 1 of the optional programmable motion controller MCO 305.
[5]	MCO Encoder 2 X55	Encoder interface 2 of the optional programmable motion controller MCO 305.
[6]	Analog input 53	
[7]	Analog input 54	
[8]	Frequency input 29	
[9]	Frequency input 33	

NOTE!

This parameter cannot be adjusted while the motor is running.

1-03 Torque Characteristics		
Option:	Function:	
		Select the torque characteristic required. VT and AEO are both energy saving operations.
[0]	Constant torque *	Motor shaft output provides constant torque under variable speed control.
[1]	Variable torque	Motor shaft output provides variable torque under variable speed control. Set the variable torque level in <i>14-40 VT Level</i> .
[2]	Auto Energy Optim.	Automatically optimizes energy consumption by minimizing magnetization and frequency via <i>14-41 AEO Minimum Magnetisation</i> and <i>14-42 Minimum AEO Frequency</i> .
[5]	Constant Power	<p>The function provides a constant power in the field weakening area.</p> <p>The torque shape of motor mode is used as a limit in generator mode. This is done to limit the power in generatoric mode that otherwise becomes considerable larger than in motor mode, due to the high DC link voltage available in generator mode.</p> $P_{\text{shaft}}[W] = \omega_{\text{mech}}[\text{rad} / \text{s}] \times T[\text{Nm}]$ <p>This relationship with the constant power is illustrated in the following graph:</p>

NOTE!

This parameter cannot be adjusted while the motor is running.

1-04 Overload Mode		
Option:	Function:	
[0] *	High torque	Allows up to 160% overtorque.
[1]	Normal torque	For oversized motor - allows up to 110% overtorque.

NOTE!

This parameter cannot be adjusted while the motor is running.

1-05 Local Mode Configuration		
Option:	Function:	
		Select which application configuration mode (<i>1-00 Configuration Mode</i>), i.e., the application control principle, to use when a Local (LCP) Reference is active. A local reference can be active only when <i>3-13 Reference Site</i> is set to [0] or [2]. By default, the local reference is active in hand mode only.
[0]	Speed open loop	
[1]	Speed closed loop	
[2] *	As mode par 1-00	

1-06 Clockwise Direction		
Option:	Function:	
[0] *	Normal	Motor shaft will turn in clockwise direction when the Adjustable frequency drive is connected U -> U; V -> V, and W -> W to motor.
[1]	Inverse	Motor shaft will turn in counter clockwise direction when the Adjustable frequency drive is connected U -> U; V -> V, and W -> W to motor.

NOTE!

This parameter cannot be changed while the motor is running.

3.3.2 1-1* Motor Selection

NOTE!

This parameter group cannot be adjusted while the motor is running.

1-10 Motor Construction		
Option:	Function:	
		Select the motor construction type.
[0] *	Asynchron	For asynchronous motors.
[1]	PM, non salient SPM	For permanent magnet (PM) motors. Note that PM motors are divided into two groups, with either surface mounted (non-salient) or interior (salient) magnets.

Motor construction can either be asynchronous or permanent magnet (PM) motor.

3.3.3 1-2* Motor Data

Parameter group 1-2* comprises input data from the nameplate on the connected motor.

NOTE!

Changing the value of these parameters affects the setting of other parameters.

1-20 Motor Power [kW]		
Range:	Function:	
Application dependent*	[Application dependant]	Enter the nominal motor power in kW according to the motor nameplate data. The default value corresponds to the nominal rated output of the unit. This parameter cannot be adjusted while the motor is running. This parameter is visible in LCP if <i>0-03 Regional Settings is International</i> [0].
NOTE! Four sizes down, one size up from nominal unit rating.		

1-21 Motor Power [HP]		
Range:	Function:	
Application dependent*	[Application dependant]	Enter the nominal motor power in HP according to the motor nameplate data. The default value corresponds to the nominal rated output of the

1-21 Motor Power [HP]		
Range:	Function:	
		unit. This parameter is visible in LCP if <i>0-03 Regional Settings is US</i> [1]

1-22 Motor Voltage		
Range:	Function:	
Application dependent*	[Application dependant]	Enter the nominal motor voltage according to the motor nameplate data. The default value corresponds to the nominal rated output of the unit.

1-23 Motor Frequency		
Range:	Function:	
Application dependent*	[20 - 1000 Hz]	Min - Max motor frequency: 20–1000Hz. Select the motor frequency value from the motor nameplate data. If a value different from 50Hz or 60Hz is selected, it is necessary to adapt the load independent settings in <i>1-50 Motor Magnetisation at Zero Speed to 1-53 Model Shift Frequency</i> . For 87Hz operation with 230/400V motors, set the nameplate data for 230V/50Hz. Adapt <i>4-13 Motor Speed High Limit [RPM]</i> and <i>3-03 Maximum Reference</i> to the 87Hz application.

1-24 Motor Current		
Range:	Function:	
Application dependent*	[Application dependant]	Enter the nominal motor current value from the motor nameplate data. The data are used for calculating torque, motor protection, etc.

1-25 Motor Nominal Speed		
Range:	Function:	
Application dependent*	[10 - 60000 RPM]	Enter the nominal motor speed value from the motor nameplate data. The data are used for calculating motor compensations.

1-26 Motor Cont. Rated Torque		
Range:	Function:	
Application dependent*	[0.1 - 10000.0 Nm]	Enter the value from the motor nameplate data. The default value corresponds to the nominal rated

1-26 Motor Cont. Rated Torque		
Range:		Function:
		output. This parameter is available when <i>1-10 Motor Construction</i> is set to <i>PM, non salient SPM</i> [1], i.e., the parameter is valid for PM and non-salient SPM motors only.
Application dependent*	[0.1 - 10000.0 Nm]	Enter the value from the motor nameplate data. The default value corresponds to the nominal rated output. This parameter is available when <i>1-10 Motor Construction</i> is set to <i>PM, non salient SPM</i> [1], i.e., the parameter is valid for PM and non-salient SPM motors only.

1-29 Automatic Motor Adaptation (AMA)		
Option:	Function:	
		The AMA function optimizes dynamic motor performance by automatically optimizing the advanced motor parameters (<i>1-30 Stator Resistance (Rs)</i> to <i>1-35 Main Reactance (Xh)</i>) at motor standstill. Activate the AMA function by pressing [Hand on] after selecting [1] or [2]. See also the section <i>Automatic Motor Adaptation</i> in the Design Guide. After a normal sequence, the display will read: "Press [OK] to finish AMA". After pressing the [OK] key, the Adjustable frequency drive is ready for operation. This parameter cannot be adjusted while the motor is running.
[0] *	Off	
[1]	Enable complete AMA	Performs AMA of the stator resistance R_s , the rotor resistance R_r , the stator leakage reactance X_1 , the rotor leakage reactance X_2 and the main reactance X_h . Do <i>not</i> select this option if an LC filter is used between the Adjustable frequency drive and the motor. FC 301: The Complete AMA does not include X_h measurement for FC 301. Instead, the X_h value is determined from the motor database. R_s is the best adjustment method (see <i>1-3* Adv. Motor Data</i>). T4/T5 E and F frames, T7 D, E and F frames will only run a reduced AMA when the complete AMA is selected. It is recommended to obtain the Advanced Motor Data from the motor manufacturer to enter into <i>1-31 Rotor Resistance (Rr)</i> through <i>1-36 Iron Loss Resistance (Rfe)</i> for best performance.

1-29 Automatic Motor Adaptation (AMA)		
Option:	Function:	
[2]	Enable reduced AMA	Performs a reduced AMA of the stator resistance R_s in the system only.

Note:

- For the best adaptation of the Adjustable frequency drive,, run AMA on a cold motor.
- AMA cannot be performed while the motor is running.
- AMA cannot be performed on permanent magnet motors.

NOTE!

It is important to set motor parameter group 1-2* correctly, since these form part of the AMA algorithm. An AMA must be performed to achieve optimum dynamic motor performance. It may take up to 10 min, depending on the power rating of the motor.

NOTE!

Avoid generating external torque during AMA.

NOTE!

If one of the settings in parameter group 1-2* is changed, *1-30 Stator Resistance (Rs)* to *1-39 Motor Poles*, the advanced motor parameters, will return to default setting.

NOTE!

AMA will work problem-free on 1 motor size down, typically work on 2 motor sizes down, rarely work on 3 sizes down and never work on 4 sizes down. Please keep in mind that the accuracy of the measured motor data will be poorer when you operate on motors smaller than nominal VLT size.

3.3.4 1-3* Addl. Motor Data

Parameters for advanced motor data. The motor data in *1-30 Stator Resistance (Rs)* to *1-39 Motor Poles* must match the relevant motor in order to run the motor optimally. The default settings are figures based on common motor parameter values from standard motors. If the motor parameters are not set correctly, a malfunction of the Adjustable frequency drive system may occur. If the motor data is not known, running an AMA (Automatic Motor Adaptation) is recommended. See the *Automatic Motor Adaptation* section in the Design Guide. The AMA sequence will adjust all motor parameters except the

moment of inertia of the rotor and the iron loss resistance (1-36 Iron Loss Resistance (Rfe)).

Parameter groups 1-3* and 1-4* cannot be adjusted while the motor is running.

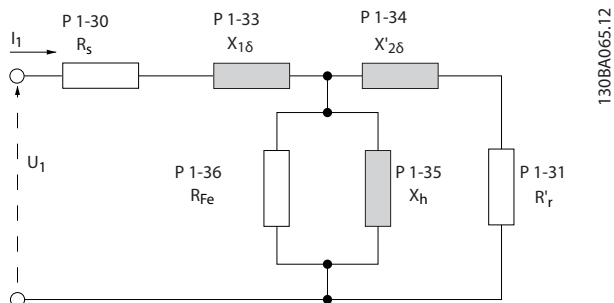


Figure 3.1 Motor equivalent diagram for an asynchronous motor

NOTE!

A simple check of the X1 + Xh sum value is to divide the line to line motor voltage by the sqrt(3) and divide this value by the motor no load current. $[VL-L/\sqrt{3}]/I_{NL} = X1 + Xh$. These values are important to properly magnetize the motor. For high pole motors it is highly recommended to perform this check.

1-30 Stator Resistance (Rs)		
Range:		Function:
Application dependent*	[Application dependant]	

1-31 Rotor Resistance (Rr)		
Range:		Function:
Application dependent*	[Application dependant]	Fine-tuning R _r will improve shaft performance. Set the rotor resistance value using one of these methods: <ol style="list-style-type: none"> 1. Run an AMA on a cold motor. The Adjustable frequency drive will measure the value from the motor. All compensations are reset to 100%. 2. Enter the R_r value manually. Obtain the value from the motor supplier. 3. Use the R_r default setting. The Adjustable frequency drive establishes the setting on the basis of the motor nameplate data.

1-33 Stator Leakage Reactance (X1)		
Range:		Function:
Application dependent*	[Application dependant]	Set the stator leakage reactance of the motor using one of these methods: <ol style="list-style-type: none"> 1. Run an AMA on a cold motor. The Adjustable frequency drive will measure the value from the motor. 2. Enter the X₁ value manually. Obtain the value from the motor supplier. 3. Use the X₁ default setting. The Adjustable frequency drive establishes the setting on the basis of the motor nameplate data.

1-34 Rotor Leakage Reactance (X2)		
Range:		Function:
Application dependent*	[Application dependant]	

1-35 Main Reactance (Xh)		
Range:		Function:
Application dependent*	[Application dependant]	Set the main reactance of the motor using one of these methods: <ol style="list-style-type: none"> 1. Run an AMA on a cold motor. The Adjustable frequency drive will measure the value from the motor. 2. Enter the X_h value manually. Obtain the value from the motor supplier. 3. Use the X_h default setting. The Adjustable frequency drive establishes the setting on the basis of the motor nameplate data.

1-36 Iron Loss Resistance (Rfe)		
Range:		Function:
Application dependent*	[Application dependant]	

1-37 d-axis Inductance (Ld)		
Range:		Function:
Application dependent*	[Application dependant]	

1-39 Motor Poles		
Range:		Function:
Application dependent*	[2 - 100]	Enter the number of motor poles.
Application dependent*	[2 - 100]	Value 2 - 100 poles

Poles	~n _n @ 50Hz	~n _n @60Hz
2	2700–2880	3250–3460
4	1350–1450	1625–1730
6	700–960	840–1153

The table shows the number of poles for normal speed ranges of various motor types. Define motors designed for other frequencies separately. The motor pole value is always an even number, because it refers to the total number of poles, not pairs of poles. The Adjustable frequency drive creates the initial setting of *1-39 Motor Poles* based on *1-23 Motor Frequency* and *1-25 Motor Nominal Speed*.

1-40 Back EMF at 1000 RPM		
Range:		Function:
Application dependent*	[Application dependant]	Set the nominal back EMF for the motor when running at 1000 RPM. This parameter is only active when <i>1-10 Motor Construction</i> is set to <i>PM motor</i> [1] (Permanent Magnet Motor). FC 302 only.
<p>NOTE! When using PM motors, it is recommended to use brake resistors.</p>		

1-41 Motor Angle Offset		
Range:		Function:
0*	[-32768 - 32767]	Enter the correct offset angle between the PM motor and the index position (single-turn) of the attached encoder or resolver. The value range of 0–32768 corresponds to 0–2 * pi (radians). To obtain the offset angle value: After Adjustable frequency drive start-up, apply DC hold and enter the value of <i>16-20 Motor Angle</i> into this parameter. This parameter is only active when <i>1-10 Motor Construction</i> is set to <i>PM, non-salient SPM</i> [1] (Permanent Magnet Motor).

3.3.5 1-5* Load Indep. Setting

1-50 Motor Magnetisation at Zero Speed		
Range:		Function:
100 %*	[0 - 300 %]	

NOTE!

1-50 Motor Magnetisation at Zero Speed will not have effect when *1-10 Motor Construction* = [1] PM, non-salient SPM.

1-51 Min Speed Normal Magnetising [RPM]		
Range:		Function:
Size related*	[10 - 300 RPM]	Set the required speed for normal magnetizing current. If the speed is set lower than the motor slip speed, <i>1-50 Motor Magnetisation at Zero Speed</i> and <i>1-51 Min Speed Normal Magnetising [RPM]</i> are of no significance. Use this parameter along with <i>1-50 Motor Magnetisation at Zero Speed</i> . See .

NOTE!

1-51 Min Speed Normal Magnetising [RPM] will not have effect when *1-10 Motor Construction* = [1] PM, non-salient SPM.

1-52 Min Speed Normal Magnetising [Hz]		
Range:		Function:
Application dependent*	[Application dependant]	

1-53 Model Shift Frequency		
Range:		Function:
Application dependent*	[Application dependant]	<p>Flux Model shift Enter the frequency value for shift between two models for determining motor speed. Choose the value based on settings in <i>1-00 Configuration Mode</i> and <i>1-01 Motor Control Principle</i>. There are two options: shift between Flux model 1 and Flux model 2; or shift between Variable Current mode and Flux model 2.FC 302 only. This parameter cannot be adjusted while the motor is running.</p> <p>Flux model 1 – Flux model 2 This model is used when <i>1-00 Configuration Mode</i> is set to <i>Speed closed-loop</i> [1] or <i>Torque</i> [2] and <i>1-01 Motor Control Principle</i> is set to <i>Flux w/motor feedback</i> [3].</p>


1-53 Model Shift Frequency	
Range:	Function:
	<p>With this parameter it is possible to make an adjustment of the shifting point where FC 302 changes between Flux model 1 and Flux model 2, which is useful in some sensitive speed and torque control applications.</p> <p>Figure 3.2 1-00 Configuration Mode = [1] Speed closed-loop or [2] Torque and 1-01 Motor Control Principle = [3] Flux w/motor feedback</p> <p>Variable Current - Flux model - Sensorless</p> <p>This model is used when 1-00 Configuration Mode is set to Speed open-loop [0] and 1-01 Motor Control Principle is set to Flux sensorless [2].</p> <p>In speed open-loop in flux mode, the speed is determined by the current measurement.</p> <p>Below $f_{norm} \times 0.1$, the Adjustable frequency drive runs on a variable current model. Above $f_{norm} \times 0.125$ the Adjustable frequency drive runs on a flux model.</p> <p>Figure 3.3 1-00 Configuration Mode = [0] Speed open-loop, 1-01 Motor Control Principle = [2] Flux sensorless</p>

1-54 Voltage reduction in fieldweakening	
Range:	Function:
0 V* [0 - 100 V]	The value of this parameter will reduce the maximal voltage available for the flux of the

1-54 Voltage reduction in fieldweakening	
Range:	Function:
	motor in fieldweakening, giving more voltage available for torque. Be aware that a value that is too high may cause stalling problems at high speed.

1-55 U/f Characteristic - U		
Range:	Function:	
Application dependent* [0.0 - 1000.0 V]	Enter the voltage at each frequency point to manually form a U/f characteristic matching the motor.	
	The frequency points are defined in 1-56 U/f Characteristic - F.	
	This parameter is an array parameter [0-5] and is only accessible when 1-01 Motor Control Principle is set to U/f [0].	

1-56 U/f Characteristic - F		
Range:	Function:	
Application dependent* [Application dependant]	Enter the frequency points to manually form a U/f-characteristic matching the motor.	
	The voltage at each point is defined in 1-55 U/f Characteristic - U.	
	This parameter is an array parameter [0-5] and is only accessible when 1-01 Motor Control Principle is set to U/f [0].	

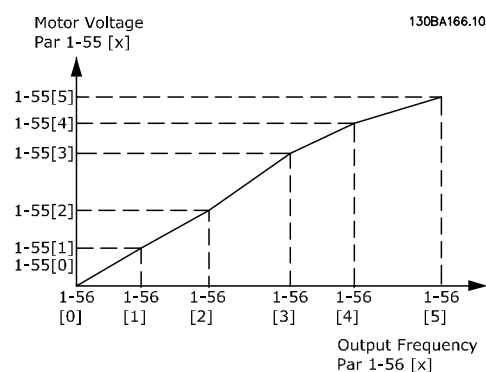

1-58 Flystart Test Pulses Current		
Range:	Function:	
30 %* [0 - 200 %]	Control the percentage of the magnetizing current for the pulses used to detect the motor direction. Reducing this value will reduce the generated torque. 100% means nominal motor current. The parameter is	


1-58 Flystart Test Pulses Current		
Range:		Function:
		active when 1-73 <i>Flying Start</i> is enabled. This parameter is only available in VVC ^{plus} .

1-59 Flystart Test Pulses Frequency		
Range:		Function:
200 %*	[0 - 500 %]	Control the percentage of the frequency for the pulses used to detect the motor direction. Increasing this value will reduce the generated torque. 100% means 2 times the slip frequency. The parameter is active when 1-73 <i>Flying Start</i> is enabled. This parameter is only available in VVC ^{plus} .

3.3.6 1-6* Load Depend. Setting

1-60 Low Speed Load Compensation		
Range:		Function:
100 %*	[0 - 300 %]	

Motor size	Change-over
0.34–10 hp [0.25–7.5 kW]	< 10Hz

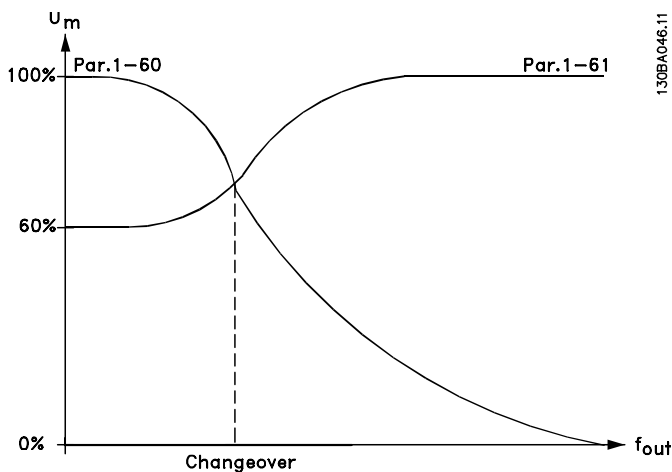

130BA046.11

1-61 High Speed Load Compensation		
Range:		Function:
100 %*	[0 - 300 %]	

Motor size	Change-over
0.34–10 hp [0.25–7.5 kW]	> 10Hz

1-62 Slip Compensation		
Range:		Function:
Application dependent*	[-500 - 500 %]	Enter the % value for slip compensation to compensate for tolerances in the

1-62 Slip Compensation		
Range:		Function:
		value of $n_{M,N}$. Slip compensation is calculated automatically, i.e., on the basis of the rated motor speed $n_{M,N}$. This function is not active when 1-00 <i>Configuration Mode</i> is set to <i>Speed closed-loop</i> [1] or <i>Torque</i> [2] Torque control with speed feedback or when 1-01 <i>Motor Control Principle</i> is set to U/f [0] special motor mode.

1-63 Slip Compensation Time Constant		
Range:		Function:
Size related*	[0.05 - 5.00 s]	Enter the slip compensation reaction speed. A high value results in slow reaction, and a low value results in quick reaction. If low-frequency resonance problems arise, use a longer time setting.

NOTE!

1-63 *Slip Compensation Time Constant* will not have effect when 1-10 *Motor Construction* = [1] PM, non-salient SPM.

1-64 Resonance Dampening		
Range:		Function:
100 %*	[0 - 500 %]	

NOTE!

1-64 *Resonance Dampening* will not have effect when 1-10 *Motor Construction* = [1] PM, non-salient SPM.

1-65 Resonance Dampening Time Constant		
Range:		Function:
5 ms*	[5 - 50 ms]	Set 1-64 <i>Resonance Dampening</i> and 1-65 <i>Resonance Dampening Time Constant</i> to help eliminate high-frequency resonance problems. Enter the time constant that provides the best dampening.

NOTE!

1-65 *Resonance Dampening Time Constant* will not have effect when 1-10 *Motor Construction* = [1] PM, non-salient SPM.

1-66 Min. Current at Low Speed		
Range:		Function:
100 %*	[Application dependant]	

1-67 Load Type		
Option:	Function:	
[0] *	Passive load	For conveyers, fan and pump applications.
[1]	Active load	For hoisting applications, used in slip compensation at low speed. When <i>Active Load</i> [1] is selected, set <i>1-66 Min. Current at Low Speed</i> to a level which corresponds to maximum torque.

FC 302 only.

1-68 Minimum Inertia		
Range:	Function:	
Application dependent*	[Application dependant]	Needed for average inertia calculation. Enter the minimum moment of inertia of the mechanical system. <i>1-68 Minimum Inertia</i> and <i>1-69 Maximum Inertia</i> are used for pre-adjustment of the Proportional Gain in the speed control, see <i>30-83 Speed PID Proportional Gain</i> . FC 302 only.

This parameter cannot be adjusted while motor is running.

1-69 Maximum Inertia		
Range:	Function:	
Application dependent*	[Application dependant]	Active in flux open-loop only. Used to compute the acceleration torque at low speed. Used in the torque limit controller. FC 302 only.

This parameter cannot be adjusted while motor is running.

3.3.7 1-7* Start Adjustments

1-71 Start Delay		
Range:	Function:	
0.0 s*	[0.0 - 25.5 s]	This parameter refers to the start function selected in <i>1-72 Start Function</i> . Enter the time delay required before commencing acceleration.

1-72 Start Function		
Option:	Function:	
		Select the start function during start delay. This parameter is linked to <i>1-71 Start Delay</i> .
[0]	DC Hold/ delay time	Energizes motor with a DC holding current (<i>2-00 DC Hold Current</i>) during the start delay time.

1-72 Start Function		
Option:	Function:	
[1]	DC Brake/ delay time	Energizes motor with a DC braking current (<i>2-01 DC Brake Current</i>) during the start delay time.
[2]	Coast/delay time *	Motor coasted during the start delay time (inverter off).
[3]	Start speed cw	Only possible with VVC ^{plus} . Connect the function described in <i>1-74 Start Speed [RPM]</i> and <i>1-76 Start Current</i> in the start delay time. Regardless of the value applied by the reference signal, the output speed applies the setting of the start speed in <i>1-74 Start Speed [RPM]</i> or <i>1-75 Start Speed [Hz]</i> and the output current corresponds to the setting of the start current in <i>1-76 Start Current</i> . This function is typically used in hoisting applications without counterweight, and especially in applications with a cone motor where the start is clockwise, followed by rotation in the reference direction.
[4]	Horizontal operation	Only possible with VVC ^{plus} . For obtaining the function described in <i>1-74 Start Speed [RPM]</i> and <i>1-76 Start Current</i> during the start delay time. The motor rotates in the reference direction. If the reference signal equals zero (0), <i>1-74 Start Speed [RPM]</i> is ignored and the output speed equals zero (0). The output current corresponds to the setting of the start current in <i>1-76 Start Current</i> .
[5]	VVC+/Flux clockwise	for the function described in <i>1-74 Start Speed [RPM]</i> only. The start current is calculated automatically. This function uses the start speed in the start delay time only. Regardless of the value set by the reference signal, the output speed equals the setting of the start speed in <i>1-74 Start Speed [RPM]</i> . <i>Start speed/ current clockwise</i> [3] and <i>VVC^{plus}/Flux clockwise</i> [5] are typically used in hoisting applications. <i>Start speed/current in reference direction</i> [4] is particularly used in applications with counterweight and horizontal movement.
[6]	Hoist Mech. Brake Rel	For utilizing mechanical brake control functions, <i>2-24 Stop Delay</i> to <i>2-28 Gain Boost Factor</i> . This parameter is only active when <i>1-01 Motor Control Principle</i> is set to [3] <i>Flux w/ motor feedback (FC 302 only)</i> .
[7]	VVC+/Flux counter-cw	

1-73 Flying Start		
Option:	Function:	
		This function makes it possible to catch a motor that is spinning freely due to a line drop-out.
[0] *	Disabled	No function
[1]	Enabled	Enables the Adjustable frequency drive to "catch" and control a spinning motor. When 1-73 Flying Start is enabled, 1-71 Start Delay and 1-72 Start Function have no function.
[2]	Enabled Always	
[3]	Enabled Ref. Dir.	
[4]	Enab. Always Ref. Dir.	

NOTE!

This parameter cannot be adjusted while motor is running.

NOTE!

This function is not recommended for hoisting applications.

For power levels above 75 hp [55 kW], flux mode must be used to achieve the best performance.

NOTE!

To obtain the best flying start performance the advanced motor data, parameters 1-30 through 1-35, must be correct.

1-74 Start Speed [RPM]		
Range:	Function:	
Application dependent*	[0 - 600 RPM]	This parameter can be used for hoist applications (cone rotor).

1-75 Start Speed [Hz]		
Range:	Function:	
Application dependent*	[Application dependant]	This parameter can be used for hoist applications (cone rotor). Set a motor start speed. After the start signal, the output speed leaps to set value. Set the start function in 1-72 Start Function to [3], [4] or [5], and set a start delay time in 1-71 Start Delay.

1-76 Start Current		
Range:	Function:	
0.00 A*	[Application dependant]	Some motors, e.g., cone rotor motors, need extra current/starting speed to

1-76 Start Current		
Range:	Function:	
		disengage the rotor. To obtain this boost, set the required current in 1-76 Start Current. Set 1-74 Start Speed [RPM]. Set 1-72 Start Function to [3] or [4], and set a start delay time in 1-71 Start Delay.
		This parameter can be used for hoist applications (cone rotor).

3.3.8 1-8* Stop Adjustments

1-80 Function at Stop		
Option:	Function:	
		Select the Adjustable frequency drive function after a stop command or after the speed is ramped down to the settings in 1-81 Min Speed for Function at Stop [RPM].
[0] *	Coast	Leaves motor in free mode. The motor is disconnected from the Adjustable frequency drive.
[1]	DC hold	Energizes motor with a DC holding current (see 2-00 DC Hold Current).
[2]	Motor check	Checks if a motor has been connected.
[3]	Pre-magnetizing	Builds up a magnetic field while the motor is stopped. This allows the motor to produce torque quickly at subsequent start commands (asynchronous motors only). This pre-magnetizing function does not help the very first start command. Two different solutions are available to pre-magnetize the machine for the first start command: <ol style="list-style-type: none"> 1. Start the Adjustable frequency drive with a 0RPM reference and wait 2 to 4 rotor time constants (see below) before increasing the speed reference. 2a. Set 1-71 Start Delay to the desired pre-mag time (2 to 4 rotor time constants - see below). 2b. Set 1-72 to either [0] DC-hold or [1] DC Brake. Set the DC hold or DC brake current magnitude (2-00 or 2-01) to be equal to $I_{pre-mag} = I_{nom} / (1.73 \times X_h)$ Sample rotor time constants = $(X_h + X_2) / (6.3 \times Freq_{nom} \times R_r)$

1-80 Function at Stop		
Option:	Function:	
		1.35 hp [1 kW] = 0.2 seconds 13.5 hp [10 kW] = 0.5 seconds 135 hp [100 kW] = 1.7 seconds 1,350 hp [1,000 kW] = 2.5 seconds
[4]	DC Voltage U0	When the motor is stopped, the P1-55 [0] parameter defines the voltage at 0 Hz.
[5]	Coast at low reference	When the reference is below <i>1-81 Min Speed for Function at Stop [RPM]</i> , the motor is disconnected from the Adjustable frequency drive.

1-81 Min Speed for Function at Stop [RPM]		
Range:	Function:	
Size related*	[0 - 600 RPM]	Set the speed at which to activate <i>1-80 Function at Stop</i> .

1-82 Min Speed for Function at Stop [Hz]		
Range:	Function:	
Size related*	[0.0 - 20.0 Hz]	

1-83 Precise Stop Function		
Option:	Function:	
[0]	Precise ramp stop	Only optimal when the operational speed of, for example, the conveyor belt is constant. This is an open-loop control. Achieves high repetitive precision at the stopping point.
[1]	Cnt stop with reset	Counts the number of pulses, typically from an encoder and generates a stop signal after a pre-programmed number of pulses - <i>1-84 Precise Stop Counter Value</i> - has been received at T29 or T33 [30]. This is a direct feedback with one-way closed-loop control. The counter function is activated (starts timing) at the edge of the start signal (when it changes from stop to start). After each precise stop, the number of pulses counted during ramp-down to 0 rpm is reset.
[2]	Cnt stop w/o reset	Same as [1] but the number of pulses counted during ramp-down to 0 rpm is deducted from the counter value entered in <i>1-84 Precise Stop Counter Value</i> . This reset function can, for example, be used to compensate for the extra distance done during ramping down and to reduce the impact of gradual wear on mechanical parts.
[3]	Speed comp stop	Stops at precisely the same point, regardless of the present speed, the stop signal is delayed internally when the present speed is lower than

1-83 Precise Stop Function		
Option:	Function:	
		the maximum speed (set in <i>4-19 Max Output Frequency</i>). The delay is calculated on the basis of the reference speed of the Adjustable frequency drive and not on the basis of the actual speed. Please therefore make sure that the Adjustable frequency drive has ramped up before you activate the speed compensated stop.
[4]	Com cnt stop w/rst	Same as [3] but after each precise stop, the number of pulses counted during ramp-down to 0 rpm is reset.
[5]	Comp cnt stop w/o r	Same as [3] but the number of pulses counted during ramp-down to 0 rpm is deducted from the counter value entered in <i>1-84 Precise Stop Counter Value</i> . This reset function can, for example, be used to compensate for the extra distance done during ramping down and to reduce the impact of gradual wear on mechanical parts.

The precise stop functions are advantageous in applications where high precision is required. If you use a standard stop command the accuracy is determined by the internal task time. That is not the case when you use the precise stop function; it eliminates the task time dependence and increases the accuracy substantially.

The Adjustable frequency drive tolerance is normally given by its task time. However, by using its special precise stop function the tolerance is independent of the task time because the stop signal immediately interrupts the execution of the Adjustable frequency drive program. The precise stop function gives a highly reproducible delay from the stop signal is given until the ramping down starts. A test must be done to find this delay as it is a sum of sensor, PLC, Adjustable frequency drive and mechanical parts.

To ensure optimum accuracy, there should be at least 10 cycles during ramping down, see *3-42 Ramp 1 Ramp Down Time*, *3-52 Ramp 2 Ramp down Time*, *3-62 Ramp 3 Ramp down Time* and *3-72 Ramp 4 Ramp Down Time*.

The precise stop function is set up here and enabled from DI T29 or T33.

NOTE!

This parameter cannot be adjusted while the motor is running.

1-84 Precise Stop Counter Value		
Range:	Function:	
100000* [0 - 999999999]	Enter the counter value to be used in the integrated precise stop function, <i>1-83 Precise Stop Function</i> . The maximum permissible frequency at terminal 29 or 33 is 110kHz. Not used for selection [0] and [3] in <i>1-83 Precise Stop Function</i>	

1-85 Precise Stop Speed Compensation Delay		
Range:	Function:	
10 ms* [0 - 100 ms]	Enter the delay time for sensors, PLCs, etc. for use in <i>1-83 Precise Stop Function</i> . In speed compensated stop mode, the delay time at different frequencies has a major influence on the stop function. Not used for selection [0], [1] and [2] in <i>1-83 Precise Stop Function</i>	

3.3.9 1-9* Motor Temperature

1-90 Motor Thermal Protection		
Option:	Function:	
	Thermal motor protection can be implemented using a range of techniques: <ul style="list-style-type: none"> Via a PTC sensor in the motor windings connected to one of the analog or digital inputs (<i>1-93 Thermistor Source</i>). See <i>3.3.10.1 PTC Thermistor Connection</i>. Via a KTY sensor in the motor winding connected to an analog input (<i>1-96 KTY Thermistor Resource</i>). See <i>3.3.10.2 KTY Sensor Connection</i>. Via calculation (ETR = Electronic Thermal Relay) of the thermal load, based on the actual load and time. The calculated thermal load is compared with the rated motor current $I_{M,N}$ and the rated motor frequency $f_{M,N}$. See <i>3.3.10.3 ETR</i> and <i>3.3.10.4 ATEX ETR</i>. Via a mechanical thermal switch (Klixon type). See <i>3.3.10.5 Klixon</i>. For the North American market: The ETR functions provide class 20 motor overload protection in accordance with NEC.	

1-90 Motor Thermal Protection		
Option:	Function:	
[0] * No protection	Continuously overloaded motor, when no warning or trip of the Adjustable frequency drive is required.	
[1] Thermistor warning	Activates a warning when the connected thermistor or KTY sensor in the motor reacts in the event of motor overtemperature.	
[2] Thermistor trip	Stops (trips) Adjustable frequency drive when connected thermistor or KTY sensor in the motor reacts in the event of motor overtemperature. The thermistor cut-out value must be > 3 kΩ. Integrate a thermistor (PTC sensor) in the motor for winding protection.	
[3] ETR warning 1	Calculates the load when set-up 1 is active and activates a warning on the display when the motor is overloaded. Program a warning signal via one of the digital outputs.	
[4] ETR trip 1	Calculates the load when set-up 1 is active and stops (trips) Adjustable frequency drive when the motor is overloaded. Program a warning signal via one of the digital outputs. The signal appears in the event of a warning and if the Adjustable frequency drive trips (thermal warning).	
[5] ETR warning 2		
[6] ETR trip 2		
[7] ETR warning 3		
[8] ETR trip 3		
[9] ETR warning 4		
[10] ETR trip 4		
[20] ATEX ETR	Activates the thermal monitoring function for Ex-e motors for ATEX. Enables <i>1-94 ATEX ETR cur.lim. speed reduction</i> , <i>1-98 ATEX ETR interpol. points freq.</i> and <i>1-99 ATEX ETR interpol points current</i> .	
[21] Advanced ETR		

NOTE!

If [20] is selected, follow the instructions exactly as described in the dedicated chapter in the VLT AutomationDrive design guide and the instructions given by the motor manufacturer.

NOTE!

If [20] is selected, 4-18 Current Limit must be set to 150%.

3.3.10.1 PTC Thermistor Connection

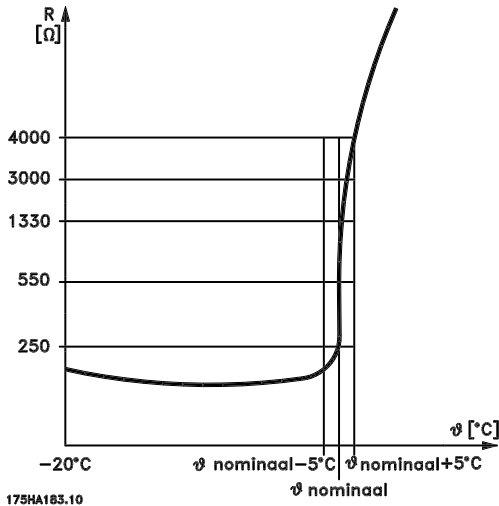


Figure 3.4 PTC profile


Using a digital input and 10 V as power supply:

Example: The Adjustable frequency drive trips when the motor temperature is too high.


Parameter set-up:

Set 1-90 Motor Thermal Protection to Thermistor Trip [2]

Set 1-93 Thermistor Source to Digital Input [6]

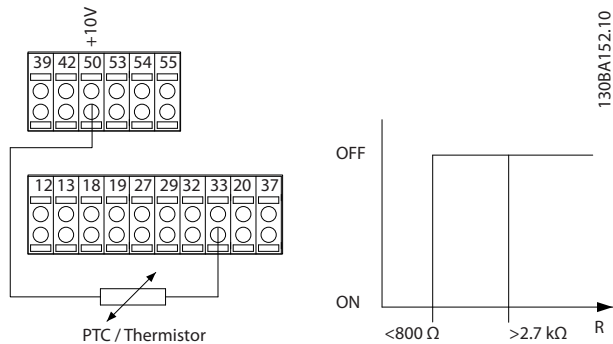

130BA152.10

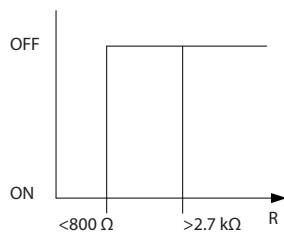


Using an analog input and 10 V as power supply:

Example: The Adjustable frequency drive trips when the motor temperature is too high.

Parameter set-up:

Set 1-90 Motor Thermal Protection to Thermistor Trip [2]

Set 1-93 Thermistor Source to Analog Input 54 [2]

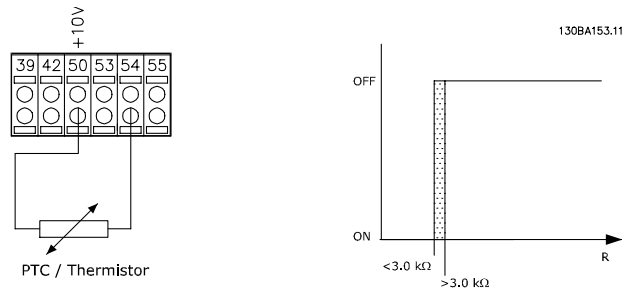

130BA153.11

Input Digital/analog	Supply Voltage	Threshold Cut-out Values
Digital	10 V	< 800Ω - > 2.7 kΩ
Analog	10 V	< 3.0 kΩ - > 3.0 kΩ

NOTE!

Ensure that the chosen supply voltage follows the specification of the thermistor element utilized.

3.3.10.2 KTY Sensor Connection

(FC 302 only)

KTY sensors are used especially in permanent magnet servo motors (PM motors) for dynamic adjusting of motor parameters as stator resistance (1-30 Stator Resistance (Rs)) for PM motors and also rotor resistance (1-31 Rotor Resistance (Rr)) for asynchronous motors, depending on winding temperature. The calculation is:

$$R_s = R_{s20^\circ C} \times (1 + \alpha_{cu} \times \Delta T) [\Omega] \text{ where } \alpha_{cu} = 0.00393$$

KTY sensors can be used for motor protecting (1-97 KTY Threshold level).

FC 302 can handle three types of KTY sensors, defined in 1-95 KTY Sensor Type. The actual sensor temperature can be read out from 16-19 KTY sensor temperature.

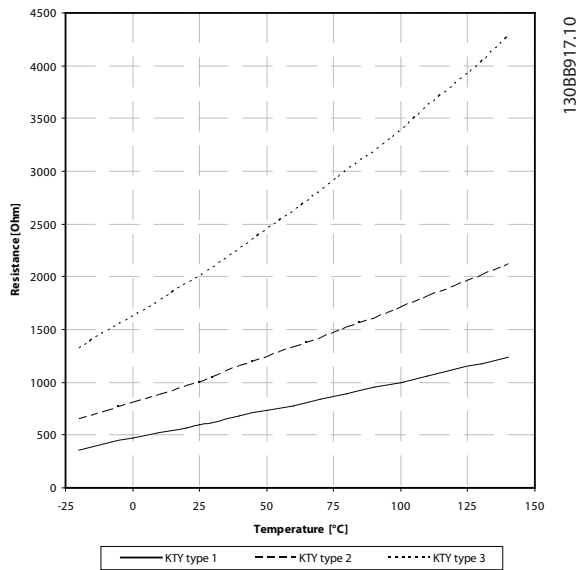


Figure 3.5 KTY type selection

KTY Sensor 1: KTY 84-1 with 1kΩ at 212°F [100°C]
 KTY Sensor 2: KTY 81-1, KTY 82-1 with 1kΩ at 77°F [25°C]
 KTY Sensor 3: KTY 81-2, KTY 82-2 with 2kΩ at 77°F [25°C]

NOTE!

If the temperature of the motor is utilized through a thermistor or KTY sensor, the PELV is not complied with in the event of short circuits between motor windings and sensor. In order to comply with PELV, the sensor must be extra isolated.

3.3.10.3 ETR

The calculations estimate the need for a lower load at lower speed due to less cooling from the fan incorporated in the motor.

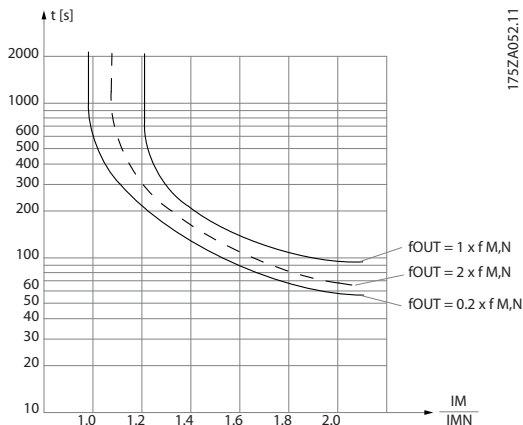


Figure 3.6 ETR profile

3.3.10.4 ATEX ETR

The B option MCB 112 PTC Thermistor option offers ATEX approved monitoring of motor temperature. Alternatively, an external ATEX approved PTC protection device can be used.

NOTE!

Only ATEX Ex-e approved motors may be used for this function. See motor nameplate, approval certificate, data sheet or contact motor supplier.

When controlling an Ex-e motor with “Increased Safety”, it is important to ensure certain limitations. The parameters that must be programmed are presented in the following application example.

Parameters	
Function	Setting
1-90 Motor Thermal Protection	[20] ATEX ETR
1-94 ATEX ETR cur.lim. speed reduction	20%
1-98 ATEX ETR interpol. points freq.	Motor nameplate
1-99 ATEX ETR interpol points current	
1-23 Motor Frequency	Enter the same value as for 4-19 Max Output Frequency
4-19 Max Output Frequency	Motor nameplate, possibly reduced for long motor cables, sinus filter or reduced supply voltage
4-18 Current Limit	Forced to 150% by 1-90 [20]
5-15 Terminal 33 Digital Input	[80] PTC Card 1
5-19 Terminal 37 Safe Stop	[4] PTC 1 Alarm
14-01 Switching Frequency	Check that the default value fulfils the requirement for Motor nameplate. If not, use the sine-wave filter.
14-26 Trip Delay at Inverter Fault	0

CAUTION

It is mandatory to compare the minimum switching frequency requirement stated by the motor manufacturer to the minimum switching frequency of the Adjustable frequency drive, the default value in 14-01 Switching Frequency. If the Adjustable frequency drive does not meet this requirement, a sine-wave filter must be used.

More information about ATEX ETR Thermal Monitoring can be found in the Application Note MN.33.GX.YY.

3.3.10.5 Klixon

The Klixon type thermal circuit breaker uses a KLIXON® metal dish. At a predetermined overload, the heat caused by the current through the disc causes a trip.


Using a digital input and 24 V as power supply:

Example: The Adjustable frequency drive trips when the motor temperature is too high

Parameter set-up:

Set 1-90 Motor Thermal Protection to Thermistor Trip [2]

Set 1-93 Thermistor Source to Digital Input [6]

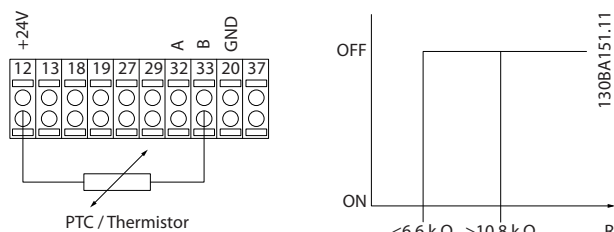

1-91 Motor External Fan		
Option:	Function:	
[0] *	No	No external fan is required, i.e., the motor is derated at low speed.
[1]	Yes	Applies an external motor fan (external ventilation), so that no derating of the motor is required at low speed. The upper curve in graph above (fout = 1 x fM,N) is followed if the motor current is lower than nominal motor current (see 1-24 Motor Current). If the motor current exceeds nominal current, the operation time still decreases as if no fan were installed.

1-93 Thermistor Source		
Option:	Function:	
		Select the input to which the thermistor (PTC sensor) should be connected. An analog input option [1] or [2] cannot be selected if the analog input is already in use as a reference source (selected in 3-15 Reference 1 Source, 3-16 Reference 2 Source or 3-17 Reference 3 Source). When using MCB 112, choice [0] None must always be selected.
[0] *	None	
[1]	Analog input 53	
[2]	Analog input 54	
[3]	Digital input 18	
[4]	Digital input 19	
[5]	Digital input 32	
[6]	Digital input 33	

NOTE!

This parameter cannot be adjusted while the motor is running.

NOTE!

Digital input should be set to [0] PNP - Active at 24V in 5-00 Digital I/O Mode.

1-94 ATEX ETR cur.lim. speed reduction		
FC 302 only. Only visible if 1-90 Motor Thermal Protection is set to [20].		
Range:	Function:	
0.0 %*	[0.0 - 100.0 %]	

The reaction for operating in Ex-e current limit must be configured.

0%: The Adjustable frequency drive does not change anything besides issuing warning 163 ATEX ETR cur.lim.warning.

>0%: The Adjustable frequency drive issuing warning 163 and reduces motor speed following ramp 2 (parameter group 3-5*).

Example:

Actual reference = 50 RPM

1-94 ATEX ETR cur.lim. speed reduction = 20%

Resulting reference = 40 RPM

1-95 KTY Sensor Type		
Option:	Function:	
		Select the used type of KTY sensor. FC 302 only.
[0] *	KTY Sensor 1	1kΩ at 212° F [100° C]
[1]	KTY Sensor 2	1kΩ at 77 °F [25 °C]
[2]	KTY Sensor 3	2kΩ at 77 °F [25 °C]

1-96 KTY Thermistor Resource		
Option:	Function:	
		Selecting analog input terminal 54 to be used as KTY sensor input. Terminal 54 cannot be selected as KTY source if otherwise used as reference (see 3-15 Reference Resource 1 to 3-17 Reference Resource 3).
		FC 302 only.
		NOTE! Connection of KTY sensor between term. 54 and 55 (GND). See picture in section KTY Sensor Connection.
[0] *	None	

1-96 KTY Thermistor Resource		
Option:	Function:	
[2]	Analog input 54	

1-97 KTY Threshold level		
Range:	Function:	
80 C*	[-40 - 140 C]	

1-98 ATEX ETR interpol. points freq.		
FC 302 only. Only visible if 1-90 Motor Thermal Protection is set to [20].		
Range:	Function:	
Application dependent*	[Application dependant]	Definition of thermal limitation curve.

Enter the four frequency points [Hz] from the motor nameplate into this array. Together with 1-99 ATEX ETR interpol points current, these make up a table (f [Hz],I [%]).

NOTE!

All frequency/current limit points from the motor nameplate or motor data sheet must be programmed.

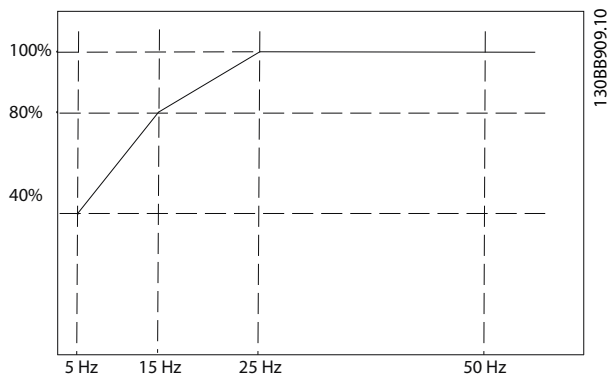


Figure 3.7 Example of ATEX ETR thermal limitation curve.

x-axis: f_m [Hz]

y-axis: $I_m/I_{m,n} \times 100$ [%]

1-98 ATEX ETR interpol. points freq.	1-99 ATEX ETR interpol points current
[0] = 5 Hz	[0] = 40%
[1] = 15 Hz	[1] = 80%
[2] = 25 Hz	[2] = 100%
[3] = 50 Hz	[3] = 100%

All operating points underneath the curve are allowed continuously. Above the line, however, only for a limited time calculated as a function of the overload. In the event

of a machine current greater than 1.5 times the rated current, shut down is immediate.

1-99 ATEX ETR interpol points current		
FC 302 only. Only visible if 1-90 Motor Thermal Protection is set to [20] or [21].		
Range:	Function:	
Application dependent*	[0 - 100 %]	Definition of thermal limitation curve. For example, see 1-98 ATEX ETR interpol. points freq.

Use the four current points [A] from the motor nameplate. Calculate the values as percentage of nominal motor current, $I_m/I_{m,n} \times 100$ [%], and enter into this array.

Together with 1-98 ATEX ETR interpol. points freq., these make up a table (f [Hz],I [%]).

NOTE!

All frequency/current limit points from the motor nameplate or motor data sheet must be programmed.

3.4 Parameters: 2-** Brakes

3.4.1 2-0* DC Brakes

Parameter group for configuring the DC brake and DC hold functions.

2-00 DC Hold Current		
Range:		Function:
50 %*	[Application dependant]	Enter a value for holding current as a percentage of the rated motor current $I_{M,N}$ set in 1-24 <i>Motor Current</i> . 100% DC holding current corresponds to $I_{M,N}$. This parameter holds the motor function (holding torque) or pre-heats the motor. This parameter is active if <i>DC hold</i> is selected in 1-72 <i>Start Function</i> [0] or 1-80 <i>Function at Stop</i> [1].

NOTE!

The maximum value depends on the rated motor current. Avoid 100% current for too long. It may damage the motor.

Low values of DC hold will produce larger than expected currents with larger motor power sizes. This error will increase as the motor power increases.

2-01 DC Brake Current		
Range:		Function:
50 %*	[Application dependant]	Enter a value for current as a percentage of the rated motor current $I_{M,N}$, see 1-24 <i>Motor Current</i> . 100% DC braking current corresponds to $I_{M,N}$. DC brake current is applied on a stop command, when the speed is lower than the limit set in 2-03 <i>DC Brake Cut In Speed [RPM]</i> ; when the DC Brake Inverse function is active; or via the serial communication port. The braking current is active during the time period set in 2-02 <i>DC Braking Time</i> .

NOTE!

The maximum value depends on the rated motor current. Avoid 100% current for too long. It may damage the motor.

2-02 DC Braking Time		
Range:		Function:
10.0 s*	[0.0 - 60.0 s]	Set the duration of the DC braking current set in 2-01 <i>DC Brake Current</i> , once activated.

2-03 DC Brake Cut In Speed [RPM]		
Range:		Function:
Application dependent*	[Application dependant]	Set the DC brake cut-in speed for activation of the DC braking current set in 2-01 <i>DC Brake Current</i> , upon a stop command.

2-04 DC Brake Cut In Speed [Hz]		
Range:		Function:
Application dependent*	[Application dependant]	

3.4.2 2-1* Brake Energy Funct.

Parameter group for selecting dynamic braking parameters. Only valid for drives with brake chopper.

2-10 Brake Function		
Option:		Function:
[0] *	Off	No brake resistor is installed.
[1]	Resistor brake	A brake resistor is incorporated in the system, for dissipating surplus brake energy as heat. Connecting a brake resistor allows a higher DC link voltage during braking (generating operation). The resistor brake function is only active in adjustable frequency drives with an integral dynamic brake.
[2]	AC brake	Is selected to improve braking without using a brake resistor. This parameter controls an overmagnetization of the motor when running with a generative load. This function can improve the OVC function. Increasing the electrical losses in the motor allows the OVC function to increase the braking torque without exceeding the overvoltage limit. Please note that AC brake is not as effective as dynamic braking with resistor. AC brake is for VVC ^{plus} and flux mode in both open-loop and closed-loop.

2-11 Brake Resistor (ohm)		
Range:		Function:
Size related*	[5.00 - 65535.00 Ohm]	

2-12 Brake Power Limit (kW)		
Range:		Function:
Size related*	[0.001 - 2000.000 kW]	

2-13 Brake Power Monitoring		
Option:	Function:	
		This parameter is only active in adjustable frequency drives with an integral dynamic brake. This parameter enables monitoring of the power to the brake resistor. The power is calculated on the basis of the resistance (2-11 Brake Resistor (ohm)), the DC-link voltage, and the resistor duty time.
[0] *	Off	No braking energy monitoring required.
[1]	Warning	Activates a warning on the display when the power transmitted over 120 s exceeds 100% of the monitoring limit (2-12 Brake Power Limit (kW)). The warning disappears when the transmitted power falls below 80% of the monitoring limit.
[2]	Trip	Trips Adjustable frequency drive and displays an alarm when the calculated power exceeds 100% of the monitoring limit.
[3]	Warning and trip	Activates both of the above, including warning, trip and alarm.

If power monitoring is set to *Off* [0] or *Warning* [1], the brake function remains active, even if the monitoring limit is exceeded. This may lead to thermal overload of the resistor. It is also possible to generate a warning via a relay/digital output. The measuring accuracy of the power monitoring depends on the accuracy of the resistance of the resistor (better than $\pm 20\%$).

2-15 Brake Check		
Option:	Function:	
		Select type of test and monitoring function to check the connection to the brake resistor, or whether a brake resistor is present, and then display a warning or an alarm in the event of a fault. NOTE! The brake resistor disconnection function is tested during power-up. However, the brake IGBT test is performed when there is no braking. A warning or trip disconnects the brake function. The testing sequence is as follows:

2-15 Brake Check		
Option:	Function:	
		<ol style="list-style-type: none"> The DC link ripple amplitude is measured for 300 ms without braking. The DC link ripple amplitude is measured for 300 ms with the brake turned on. If the DC link ripple amplitude while braking is lower than the DC link ripple amplitude before braking + 1%: <i>Brake check has failed by returning a warning or alarm.</i> If the DC link ripple amplitude while braking is higher than the DC link ripple amplitude before braking + 1%: <i>Brake check is OK.</i>
[0] *	Off	Monitors brake resistor and brake IGBT for a short-circuit during operation. If a short-circuit occurs, warning 25 appears.
[1]	Warning	Monitors brake resistor and brake IGBT for a short-circuit, and runs a test for brake resistor disconnection during power-up.
[2]	Trip	Monitors for a short-circuit or disconnection of the brake resistor, or a short-circuit of the brake IGBT. If a fault occurs, the Adjustable frequency drive cuts out while displaying an alarm (trip locked).
[3]	Stop and trip	Monitors for a short-circuit or disconnection of the brake resistor, or a short-circuit of the brake IGBT. If a fault occurs, the Adjustable frequency drive ramps down to coast and then trips. A trip lock alarm is displayed (e.g., warning 25, 27 or 28).
[4]	AC brake	Monitors for a short-circuit or disconnection of the brake resistor, or a short-circuit of the brake IGBT. If a fault occurs, the Adjustable frequency drive performs a controlled ramp-down. This option is available for FC 302 only.
[5]	Trip Lock	

NOTE!

Remove a warning arising in connection with *Off* [0] or *Warning* [1] by cycling the line power supply. The fault must be corrected first. For *Off* [0] or *Warning* [1], the Adjustable frequency drive keeps running even if a fault is located.

This parameter is only active in adjustable frequency drives with an integral dynamic brake.

2-16 AC brake Max. Current		
Range:		Function:
100.0 %*	[Application dependant]	

NOTE!

2-16 AC brake Max. Current will not have effect when 1-10 Motor Construction = [1] PM, non-salient SPM.

2-17 Over-voltage Control		
Option:	Function:	
		Overvoltage control (OVC) reduces the risk of the Adjustable frequency drive tripping due to an overvoltage on the DC link caused by generative power from the load.
[0] *	Disabled	No OVC required.
[1]	Enabled (not at stop)	Activates OVC except when using a stop signal to stop the Adjustable frequency drive.
[2]	Enabled	Activates OVC.

NOTE!

OVC must not be enabled in hoisting applications.

2-18 Brake Check Condition		
Range:	Function:	
[0] *	At Power Up	Brake check will be performed at power-up
[1]	After Coast Situations	Brake check will be performed after coast situations

2-19 Over-voltage Gain		
Range:	Function:	
100 %*	[0 - 200 %]	Select overvoltage gain.


3.4.3 2-2* Mechanical Brake

Parameters for controlling operation of an electro-magnetic (mechanical) brake, typically required in hoisting applications.

To control a mechanical brake, a relay output (relay 01 or relay 02) or a programmed digital output (terminal 27 or 29) is required. Normally this output must be closed during periods when the Adjustable frequency drive is unable to 'hold' the motor, e.g., due to an excessive load. Select *Mechanical Brake Control* [32] for applications with an electro-magnetic brake in 5-40 *Function Relay*, 5-30 *Terminal 27 Digital Output*, or 5-31 *Terminal 29 Digital Output*. When selecting *Mechanical brake control* [32], the mechanical brake is closed from start up until the output current is above the level selected in 2-20 *Release Brake Current*. During stop, the mechanical brake activates when the speed falls below the level specified in 2-21 *Activate Brake Speed [RPM]*. If the Adjustable frequency drive enters an alarm condition or an overcurrent or overvoltage situation, the mechanical brake immediately cuts in. This is also the case during safe stop.

NOTE!

Protection mode and trip delay features (14-25 *Trip Delay at Torque Limit* and 14-26 *Trip Delay at Inverter Fault*) may delay the activation of the mechanical brake in an alarm condition. These features must be disabled in hoisting applications.

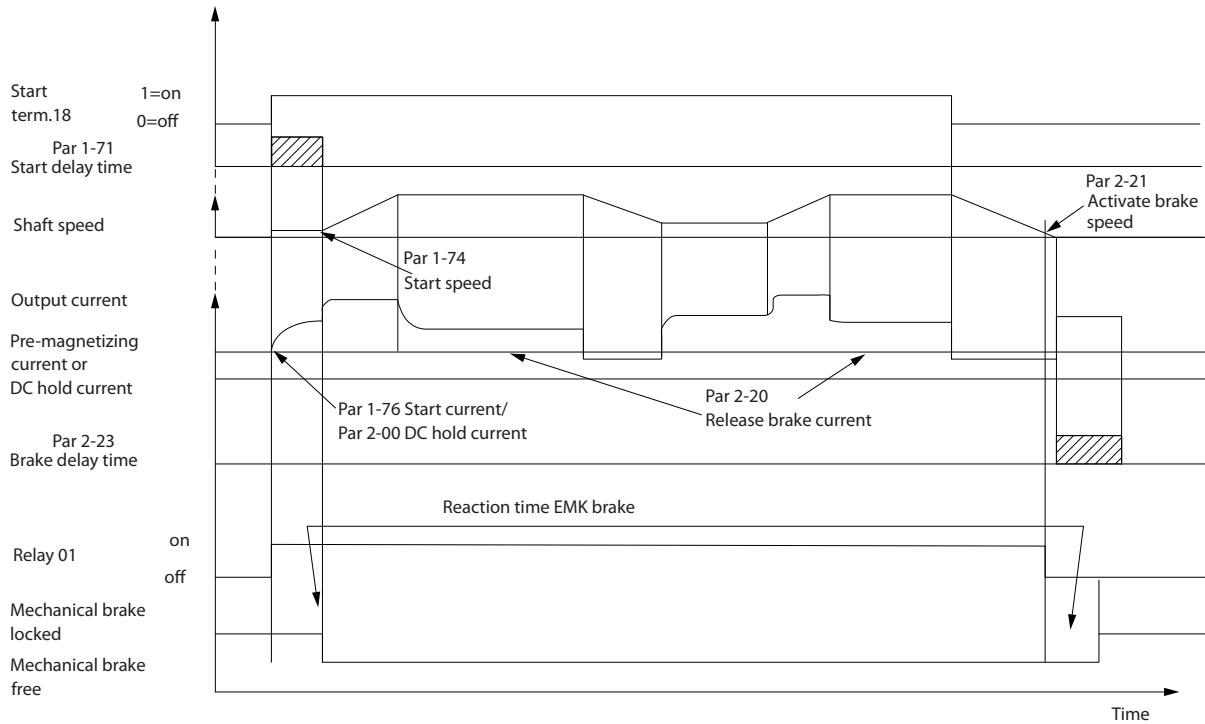

130BA074.12

2-20 Release Brake Current		
Range:	Function:	
Application dependent*	[Application dependant]	Set the motor current for release of the mechanical brake, when a start condition is present. The default value is the maximum current the inverter can provide for the particular power size. The upper limit is specified in <i>16-37 Inv. Max. Current</i> .
<p>NOTE! When Mechanical brake control output is selected but no mechanical brake is connected, the function will not work by default setting due to too low motor current.</p>		

2-21 Activate Brake Speed [RPM]		
Range:	Function:	
Application dependent*	[0 - 30000 RPM]	Set the motor speed for activation of the mechanical brake, when a stop condition is present. The upper speed limit is specified in <i>4-53 Warning Speed High</i> .

2-22 Activate Brake Speed [Hz]		
Range:	Function:	
Application dependent*	[Application dependant]	

2-23 Activate Brake Delay		
Range:	Function:	
0.0 s*	[0.0 - 5.0 s]	Enter the brake delay time of the coast after ramp-down time. The shaft is held at zero speed with full holding torque. Ensure that the mechanical brake has locked the load before the motor enters coast mode. See the <i>Mechanical Brake Control</i> section in the Design Guide.

2-24 Stop Delay		
Range:	Function:	
0.0 s*	[0.0 - 5.0 s]	Set the time interval from the moment when the motor is stopped until the brake closes. This parameter is a part of the stopping function.


2-25 Brake Release Time		
Range:	Function:	
0.20 s*	[0.00 - 5.00 s]	This value defines the time it takes for the mechanical brake to open. This parameter must act as a timeout when brake feedback is activated.

2-26 Torque Ref		
Range:	Function:	
0.00 %*	[Application dependant]	The value defines the torque applied against the closed mechanical brake before release

2-28 Gain Boost Factor		
Range:	Function:	
1.00*	[1.00 - 4.00]	Only active in flux closed-loop. The function ensures a smooth transition from torque control mode to speed control mode when the motor takes over the load from the brake.

2-27 Torque Ramp Time		
Range:	Function:	
0.2 s*	[0.0 - 5.0 s]	The value defines the duration of the torque ramp in clockwise direction.

3

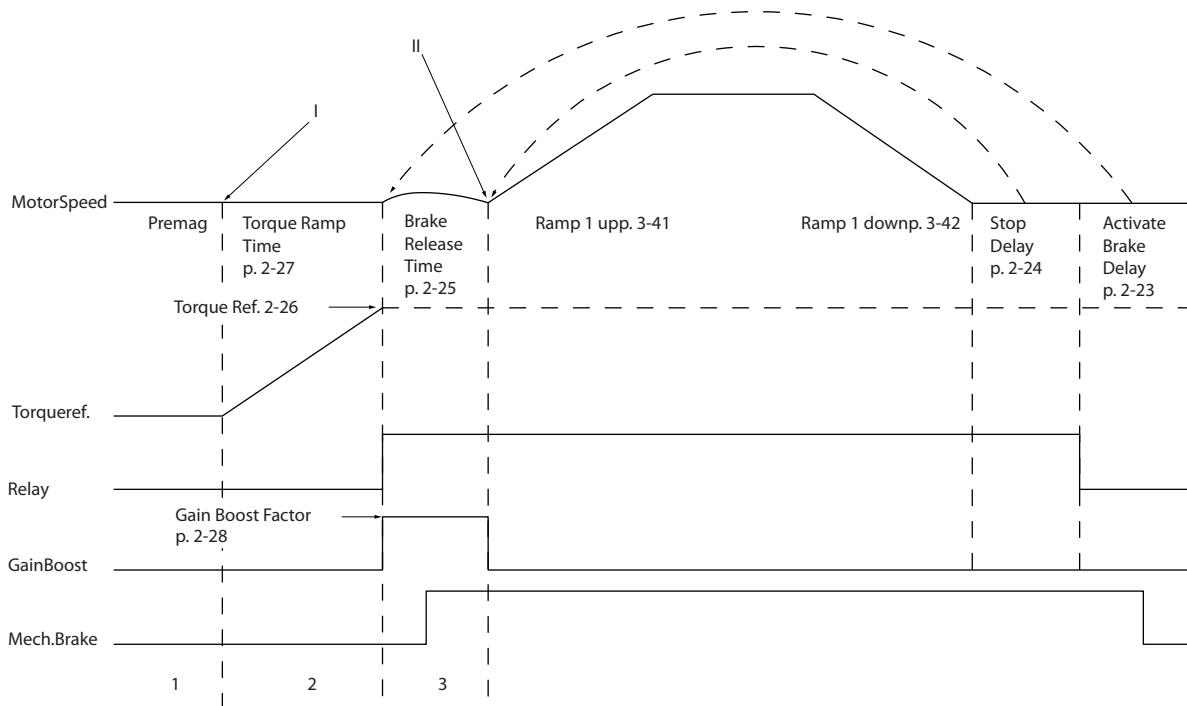

130BA642.12

Figure 3.8 Brake release sequence for hoist mechanical brake control

- I) *Activate brake delay:* The Adjustable frequency drive starts again from the *mechanical brake engaged* position.
- II) *Stop delay:* When the time between successive starts is shorter than the setting in 2-24 *Stop Delay*, the Adjustable frequency drive starts without applying the mechanical brake (e.g., reversing).

3.5 Parameters: 3-** Reference / Ramps

Parameters for reference handling, definition of limitations, and configuration of the reaction of the Adjustable frequency drive to changes.

3.5.1 3-0* Reference Limits

3-00 Reference Range		
Option:	Function:	
		Select the range of the reference signal and the feedback signal. Signal values can be positive only, or positive and negative. The minimum limit may have a negative value, unless <i>Speed closed-loop</i> [1] control or <i>Process</i> [3] is selected in <i>1-00 Configuration Mode</i> .
[0]	Min - Max	Select the range of the reference signal and the feedback signal. Signal values can be positive only, or positive and negative. The minimum limit may have a negative value, unless <i>Speed closed-loop</i> [1] control or <i>Process</i> [3] is selected in <i>1-00 Configuration Mode</i> .
[1] *	-Max - +Max	For both positive and negative values (both directions, relative to <i>4-10 Motor Speed Direction</i>).

3-01 Reference/Feedback Unit		
Option:	Function:	
		Select the unit to be used in process PID control references and feedback. <i>1-00 Configuration Mode</i> must be either [3] <i>Process</i> or [8] <i>Extended PID Control</i> .
[0] *	None	
[1]	%	
[2]	RPM	
[3]	Hz	
[4]	Nm	
[5]	PPM	
[10]	1/min	
[12]	Pulse/s	
[20]	l/s	
[21]	l/min	
[22]	l/h	
[23]	m ³ /s	
[24]	m ³ /min	
[25]	m ³ /h	
[30]	kg/s	
[31]	kg/min	
[32]	kg/h	
[33]	t/min	
[34]	t/h	
[40]	m/s	

3-01 Reference/Feedback Unit		
Option:	Function:	
[41]	m/min	
[45]	m	
[60]	°C	
[70]	mbar	
[71]	bar	
[72]	Pa	
[73]	kPa	
[74]	m WG	
[80]	kW	
[120]	GPM	
[121]	gal/s	
[122]	gal/min	
[123]	gal/h	
[124]	CFM	
[125]	ft ³ /s	
[126]	ft ³ /min	
[127]	ft ³ /h	
[130]	lb/s	
[131]	lb/min	
[132]	lb/h	
[140]	ft/s	
[141]	ft/min	
[145]	ft	
[150]	lb ft	
[160]	°F	
[170]	psi	
[171]	lb/in ²	
[172]	in WG	
[173]	ft WG	
[180]	HP	

3-02 Minimum Reference		
Range:	Function:	
Application dependent*	[Application dependant]	Enter the Minimum Reference. The Minimum Reference is the lowest value obtainable by summing all references. Minimum Reference is active only when <i>3-00 Reference Range</i> is set to <i>Min.- Max.</i> [0]. The minimum reference unit matches: <ul style="list-style-type: none"> The choice of configuration in <i>1-00 Configuration Mode Configuration Mode</i>: for

3-02 Minimum Reference		
Range:	Function:	
	<p>Speed closed-loop [1], RPM; for Torque [2], Nm.</p> <ul style="list-style-type: none"> The unit selected in 3-01 Reference/Feedback Unit. 	

3-03 Maximum Reference		
Range:	Function:	
Application dependent*	[Application dependant]	<p>Enter the maximum reference. The maximum reference is the highest value obtainable by adding all references together.</p> <p>The Maximum Reference unit matches:</p> <ul style="list-style-type: none"> The choice of configuration in 1-00 Configuration Mode: for Speed closed-loop [1], RPM; for Torque [2], Nm. The unit selected in 3-00 Reference Range.


3-04 Reference Function		
Option:	Function:	
[0] *	Sum	Sums both external and preset reference sources.
[1]	External/Preset	Use either the preset or the external reference source. Shift between external and preset via a command on a digital input.

3.5.2 3-1* References

Select the preset reference(s). Select Preset ref. bit 0 / 1 / 2 [16], [17] or [18] for the corresponding digital inputs in parameter group 5-1*.

3-10 Preset Reference		
Array [8]		
Range: 0-7		
Range:	Function:	
0.00 %*	[-100.00 - 100.00 %]	

130BA149.10

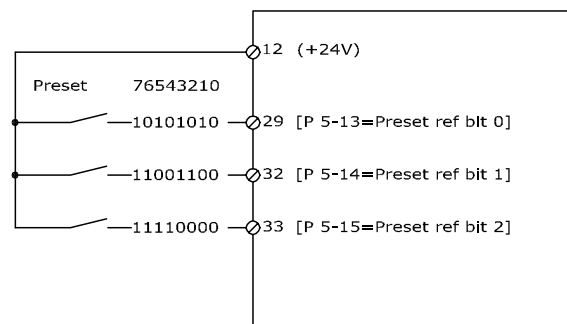

Preset ref. bit	2	1	0
Preset ref. 0	0	0	0
Preset ref. 1	0	0	1
Preset ref. 2	0	1	0
Preset ref. 3	0	1	1
Preset ref. 4	1	0	0
Preset ref. 5	1	0	1
Preset ref. 6	1	1	0
Preset ref. 7	1	1	1

3-11 Jog Speed [Hz]		
Range:	Function:	
Application dependent*	[Application dependant]	The jog speed is a fixed output speed at which the Adjustable frequency drive is running when the jog function is activated. See also 3-80 Jog Ramp Time.



3-12 Catch up/slow Down Value		
Range:	Function:	
0.00 %*	[0.00 - 100.00 %]	

3-13 Reference Site		
Option:	Function:	
		Select which reference site to activate.
[0] *	Linked to Hand / Auto	Use local reference when in hand mode; or remote reference when in auto mode.
[1]	Remote	Use remote reference in both hand mode and auto mode.
[2]	Local	Use local reference in both hand mode and auto mode.

NOTE!
When set to Local [2], the Adjustable frequency drive will start with this setting again following a 'power-down'.

3-14 Preset Relative Reference

Range:	Function:
0.00 %*	[-100.00 - 100.00 %]

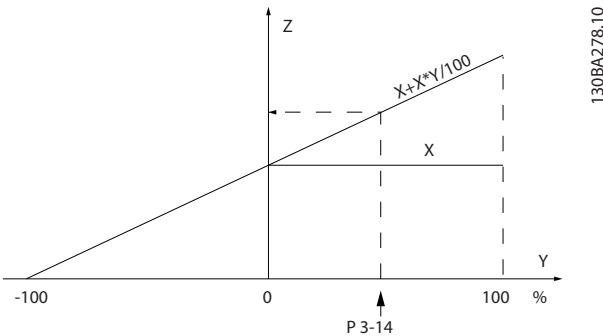

3-15 Reference Resource 1

Option:	Function:
[0]	No function
[1] *	Analog input 53
[2]	Analog input 54
[7]	Frequency input 29
[8]	Frequency input 33
[11]	Local bus reference
[20]	Digital pot.meter
[21]	Analog input X30-11 (General Purpose I/O Option Module)
[22]	Analog input X30-12 (General Purpose I/O Option Module)
[29]	Analog Input X48/2

3-16 Reference Resource 2

Option:	Function:
[0]	No function
[1]	Analog input 53
[2]	Analog input 54
[7]	Frequency input 29
[8]	Frequency input 33
[11] *	Local bus reference
[20]	Digital pot.meter
[21]	Analog input X30-11 (General Purpose I/O Option Module)
[22]	Analog input X30-12 (General Purpose I/O Option Module)
[29]	Analog Input X48/2

3-16 Reference Resource 2


Option:	Function:
[0]	No function
[1]	Analog input 53
[2]	Analog input 54
[7]	Frequency input 29
[8]	Frequency input 33
[11]	Local bus reference
[20] *	Digital pot.meter
[21]	Analog input X30-11
[22]	Analog input X30-12
[29]	Analog Input X48/2

3-17 Reference Resource 3


Option:	Function:
[0]	No function
[1]	Analog input 53
[2]	Analog input 54
[7]	Frequency input 29
[8]	Frequency input 33
[11] *	Local bus reference
[20]	Digital pot.meter
[21]	Analog input X30-11
[22]	Analog input X30-12
[29]	Analog Input X48/2

3-18 Relative Scaling Reference Resource

Option:	Function:
[0] *	No function



3-18 Relative Scaling Reference Resource		
Option:	Function:	
[1]	Analog input 53	
[2]	Analog input 54	
[7]	Frequency input 29	
[8]	Frequency input 33	
[11]	Local bus reference	
[20]	Digital pot.meter	
[21]	Analog input X30-11	
[22]	Analog input X30-12	
[29]	Analog Input X48/2	

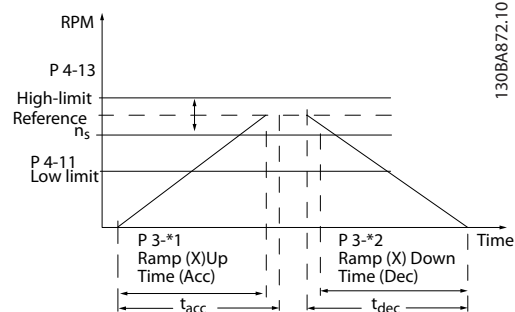


130BA872.10

NOTE!

This parameter cannot be adjusted while the motor is running.

If S-ramps are selected, then set the level of non-linear jerk compensation required. Set jerk compensation by defining the proportion of ramp-up and ramp-down times where acceleration and deceleration are variable (i.e., increasing or decreasing). The S-ramp acceleration and deceleration settings are defined as a percentage of the actual ramp time.

3-19 Jog Speed [RPM]		
Range:	Function:	
Application dependent*	[Application dependant]	Enter a value for the jog speed n_{JOG} , which is a fixed output speed. The Adjustable frequency drive runs at this speed when the jog function is activated. The maximum limit is defined in 4-13 Motor Speed High Limit [RPM]. See also 3-80 Jog Ramp Time.

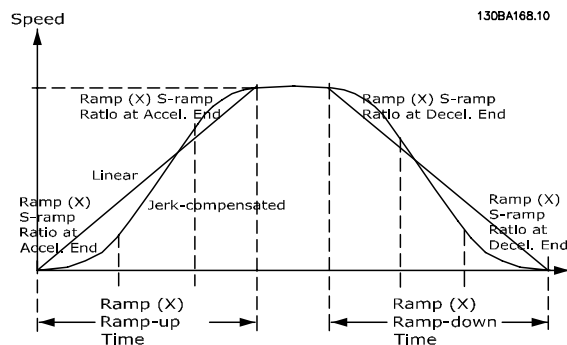

130BA168.10

3.5.3 Ramps
3-4* Ramp 1

For each of four ramps (parameter groups 3-4*, 3-5*, 3-6* and 3-7*), configure the ramp parameters: ramp type, ramping times (duration of acceleration and deceleration) and level of jerk compensation for S ramps.

Start by setting the linear ramping times corresponding to the figures.

3-40 Ramp 1 Type		
Option:	Function:	
[0] *	Linear	Select the ramp type, depending on requirements for acceleration/deceleration. A linear ramp will give constant acceleration during ramping. An S-ramp will give non-linear acceleration, compensating for jerk in the application.
[1]	S-ramp Const Jerk	Acceleration with lowest possible jerk.
[2]	S-ramp Const Time	S-ramp based on the values set in 3-41 Ramp 1 Ramp up Time and 3-42 Ramp 1 Ramp Down Time.

NOTE!

If S-ramp [1] is selected and the reference during ramping is changed, the ramp time may be prolonged in order to realize a jerk-free movement, which may result in a longer start or stop time.

Additional adjustment of the S-ramp ratios or switching initiators may be necessary.

3-41 Ramp 1 Ramp up Time		
Range:		Function:
Application dependent*	[Application dependant]	Enter the ramp-up time, i.e., the acceleration time from 0RPM to the synchronous motor speed n_s . Choose a ramp-up time such that the output current does not exceed the current limit in 4-18 <i>Current Limit</i> during ramping. The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-down time in 3-42 <i>Ramp 1 Ramp Down Time</i> .
$Par. 3 - 41 = \frac{t_{acc}[s] \times n_s [RPM]}{ref [RPM]}$		

3-42 Ramp 1 Ramp Down Time		
Range:		Function:
Application dependent*	[Application dependant]	Enter the ramp-down time, i.e., the deceleration time from the synchronous motor speed n_s to 0 RPM. Choose a ramp-down time such that no overvoltage arises in the inverter due to regenerative operation of the motor, and such that the generated current does not exceed the current limit set in 4-18 <i>Current Limit</i> . The value 0.00 corresponds to 0.01 s in speed mode. See ramp-up time in 3-41 <i>Ramp 1 Ramp up Time</i> .
$Par. 3 - 42 = \frac{t_{dec}[s] \times n_s [RPM]}{ref [RPM]}$		

3-45 Ramp 1 S-ramp Ratio at Accel. Start		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-up time (3-41 <i>Ramp 1 Ramp up Time</i>) in which the acceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks occurring in the application.

3-46 Ramp 1 S-ramp Ratio at Accel. End		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-up time (3-41 <i>Ramp 1 Ramp up Time</i>) in which the acceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3-47 Ramp 1 S-ramp Ratio at Decel. Start		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-down time (3-42 <i>Ramp 1 Ramp Down Time</i>) where the deceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3-48 Ramp 1 S-ramp Ratio at Decel. End		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-down time (3-42 <i>Ramp 1 Ramp Down Time</i>) where the deceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3.5.4 3-5* Ramp 2

Choosing ramp parameters, see parameter group 3-4*.

3-50 Ramp 2 Type		
Option:		Function:
		Select the ramp type, depending on requirements for acceleration/deceleration. A linear ramp will give constant acceleration during ramping. An S-ramp will give non-linear acceleration, compensating for jerk in the application.
[0] *	Linear	
[1]	S-ramp Const Jerk	Acceleration with lowest possible jerk
[2]	S-ramp Const Time	S-ramp based on the values set in 3-51 <i>Ramp 2 Ramp up Time</i> and 3-52 <i>Ramp 2 Ramp down Time</i>

NOTE!

If S-ramp [1] is selected and the reference during ramping is changed, the ramp time may be prolonged in order to realize a jerk-free movement, which may result in a longer start or stop time.

Additional adjustment of the S-ramp ratios or switching initiators may be necessary.

3-51 Ramp 2 Ramp up Time

Range:		Function:
Application dependent*	[Application dependant]	Enter the ramp-up time, i.e., the acceleration time from 0 RPM to the rated motor speed n_s . Choose a ramp-up time such that the output current does not exceed the current limit in 4-18 <i>Current Limit</i> during ramping. The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-down time in 3-52 <i>Ramp 2 Ramp down Time</i> . $Par. 3 - 51 = \frac{t_{acc}[s] \times n_s [RPM]}{ref [RPM]}$

3-52 Ramp 2 Ramp down Time

Range:		Function:
Application dependent*	[Application dependant]	Enter the ramp-down time, i.e., the deceleration time from the rated motor speed n_s to 0 RPM. Choose a ramp-down time such that no overvoltage arises in the inverter due to regenerative operation of the motor, and such that the generated current does not exceed the current limit set in 4-18 <i>Current Limit</i> . The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-up time in 3-51 <i>Ramp 2 Ramp up Time</i> . $Par. 3 - 52 = \frac{t_{dec}[s] \times n_s [RPM]}{ref [RPM]}$

3-55 Ramp 2 S-ramp Ratio at Accel. Start

Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-up time (3-51 <i>Ramp 2 Ramp up Time</i>) in which the acceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3-56 Ramp 2 S-ramp Ratio at Accel. End

Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-up time (3-51 <i>Ramp 2 Ramp up Time</i>) in which the acceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3-57 Ramp 2 S-ramp Ratio at Decel. Start

Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-down time (3-52 <i>Ramp 2 Ramp down Time</i>) where the deceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3-58 Ramp 2 S-ramp Ratio at Decel. End

Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-down time (3-52 <i>Ramp 2 Ramp down Time</i>) where the deceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3.5.5 3-6* Ramp 3

Configure ramp parameters, see 3-4*.

3-60 Ramp 3 Type

Option:	Function:
[0] *	Linear
[1]	S-ramp Const Jerk
[2]	S-ramp Const Time

Select the ramp type, depending on requirements for acceleration and deceleration. A linear ramp will give constant acceleration during ramping. An S-ramp will give non-linear acceleration, compensating for jerk in the application.

Accelerates with lowest possible jerk.

S-ramp based on the values set in 3-61 *Ramp 3 Ramp up Time* and 3-62 *Ramp 3 Ramp down Time*

NOTE!

If S-ramp [1] is selected and the reference during ramping is changed, the ramp time may be prolonged in order to realize a jerk-free movement, which may result in a longer start or stop time.

Additional adjustment of the S-ramp ratios or switching initiators may be necessary.

3-61 Ramp 3 Ramp up Time		
Range:		Function:
Application dependent*	[Application dependant]	Enter the ramp-up time, i.e., the acceleration time from 0 RPM to the rated motor speed n_s . Choose a ramp-up time such that the output current does not exceed the current limit in <i>4-18 Current Limit</i> during ramping. The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-down time in <i>3-62 Ramp 3 Ramp down Time</i> .

3-62 Ramp 3 Ramp down Time		
Range:		Function:
Application dependent*	[Application dependant]	Enter the ramp-down time, i.e., the deceleration time from the rated motor speed n_s to 0 RPM. Choose a ramp-down time such that no overvoltage arises in the inverter due to regenerative operation of the motor, and such that the generated current does not exceed the current limit set in <i>4-18 Current Limit</i> . The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-up time in <i>3-61 Ramp 3 Ramp up Time</i> .
$Par. 3 - 62 = \frac{t_{dec} [s] \times n_s [RPM]}{ref [RPM]}$		

3-65 Ramp 3 S-ramp Ratio at Accel. Start		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-up time (<i>3-61 Ramp 3 Ramp up Time</i>) in which the acceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3-66 Ramp 3 S-ramp Ratio at Accel. End		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-up time (<i>3-61 Ramp 3 Ramp up Time</i>) in which the acceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3-67 Ramp 3 S-ramp Ratio at Decel. Start		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-down time (<i>3-62 Ramp 3 Ramp down Time</i>) where the deceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3-68 Ramp 3 S-ramp Ratio at Decel. End		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-down/decel time (<i>3-62 Ramp 3 Ramp down Time</i>) where the deceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3.5.6 3-7* Ramp 4

Configure ramp parameters, see 3-4*.

3-70 Ramp 4 Type		
Option:	Function:	
		Select the ramp type, depending on requirements for acceleration and deceleration. A linear ramp will give constant acceleration during ramping. An S-ramp will give non-linear acceleration, compensating for jerk in the application.
[0] *	Linear	
[1]	S-ramp Const Jerk	Accelerates with lowest possible jerk.
[2]	S-ramp Const Time	S-ramp based on the values set in <i>3-71 Ramp 4 Ramp up Time</i> and <i>3-72 Ramp 4 Ramp Down Time</i> .

NOTE!

If S-ramp [1] is selected and the reference during ramping is changed, the ramp time may be prolonged in order to realize a jerk-free movement, which may result in a longer start or stop time.

Additional adjustment of the S-ramp ratios or switching initiators may be necessary.

3-71 Ramp 4 Ramp up Time		
Range:		Function:
Application dependent*	[Application dependant]	Enter the ramp-up time, i.e., the acceleration time from 0 RPM to the rated motor speed n_s . Choose a ramp-up time such that the output current does not exceed the current limit in 4-18 <i>Current Limit</i> during ramping. The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-down time in 3-72 <i>Ramp 4 Ramp Down Time</i> .
$Par. 3 - 71 = \frac{t_{acc}[s] \times n_s [RPM]}{ref[RPM]}$		

3-72 Ramp 4 Ramp Down Time		
Range:		Function:
Application dependent*	[Application dependant]	Enter the ramp-down time, i.e., the deceleration time from the rated motor speed n_s to 0 RPM. Choose a ramp-down time such that no overvoltage arises in the inverter due to regenerative operation of the motor, and such that the generated current does not exceed the current limit set in 4-18 <i>Current Limit</i> . The value 0.00 corresponds to 0.01 sec. in speed mode. See ramp-up time in 3-71 <i>Ramp 4 Ramp up Time</i> .
$Par. 3 - 72 = \frac{t_{dec}[s] \times n_s [RPM]}{ref[RPM]}$		

3-75 Ramp 4 S-ramp Ratio at Accel. Start		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-up time (3-71 <i>Ramp 4 Ramp up Time</i>) in which the acceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.



3-76 Ramp 4 S-ramp Ratio at Accel. End		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-up time (3-71 <i>Ramp 4 Ramp up Time</i>) in which the acceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3-77 Ramp 4 S-ramp Ratio at Decel. Start		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-down time (3-72 <i>Ramp 4 Ramp Down Time</i>) where the deceleration torque increases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3-78 Ramp 4 S-ramp Ratio at Decel. End		
Range:		Function:
50 %*	[Application dependant]	Enter the proportion of the total ramp-down time (3-72 <i>Ramp 4 Ramp Down Time</i>) where the deceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3.5.7 3-8* Other Ramps

3-80 Jog Ramp Time		
Range:		Function:
Application dependent*	[0.01 - 3600.00 s]	Enter the jog ramp time, i.e., the acceleration/deceleration time between 0 RPM and the rated motor frequency n_s . Ensure that the resultant output current required for the given jog ramp time does not exceed the current limit in 4-18 <i>Current Limit</i> . The jog ramp time starts upon activation of a jog signal via the LCP, a selected digital input, or the serial communication port. When jog state is disabled, the normal ramping times are valid.

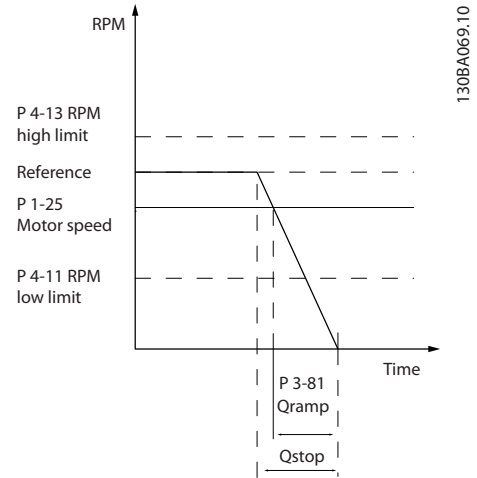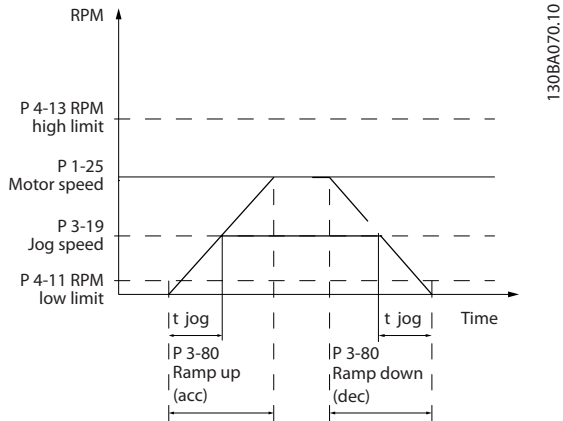

$$Par. 3 - 80 = \frac{t_{jog} [s] \times n_s [RPM]}{\Delta \log speed (par. 3 - 19) [RPM]}$$

3-81 Quick Stop Ramp Time		
Range:	Function:	
Application dependent*	[0.01 - 3600.00 s]	Enter the quick stop ramp-down time, i.e., the deceleration time from the synchronous motor speed to 0 RPM. Ensure that no resultant overvoltage will arise in the inverter due to regenerative operation of the motor required to achieve the given ramp-down time. Ensure also that the generated current required to achieve the given ramp-down time does not exceed the current limit (set in 4-18 Current Limit). Quick stop is activated by means of a signal on a selected digital input, or via the serial communication port.
Application dependent*	[0.01 - 3600.00 s]	Bus only Enter the quick stop ramp-down time, i.e., the deceleration time from the synchronous motor speed to 0 RPM. Ensure that no resultant overvoltage will arise in the inverter due to regenerative operation of the motor required to achieve the given ramp-down time. Ensure also that the generated current required to achieve the given ramp-down time does not exceed the current limit (set in 4-18 Current Limit). Quick stop is activated by means of a signal on a selected digital input, or via the serial communication port.

$$Par. 3 - 81 = \frac{t_{Qstop} [s] \times n_s [RPM]}{\Delta \log ref(par. 3 - 19) [RPM]}$$

3-82 Quick Stop Ramp Type		
Option:	Function:	
		Select the ramp type, depending on requirements for acceleration and deceleration. A linear ramp will give constant acceleration during ramping. An S-ramp will give non-linear acceleration, compensating for jerk in the application.
[0] *	Linear	
[1]	S-ramp Const Jerk	
[2]	S-ramp Const Time	



3-83 Quick Stop S-ramp Ratio at Decel. Start		
Range:	Function:	
50 %*	[Application dependant]	

3-84 Quick Stop S-ramp Ratio at Decel. End		
Range:	Function:	
50 %*	[Application dependant]	Enter the proportion of the total ramp-down time (3-42 Ramp 1 Ramp Down Time) where the deceleration torque decreases. The larger the percentage value, the greater the jerk compensation achieved, and thus the lower the torque jerks in the application.

3.5.8 3-9* Digital Pot. meter

The digital potentiometer function allows the user to increase or decrease the actual reference by adjusting the set-up of the digital inputs using the functions *Increase*,

Decrease or Clear. To activate the function, at least one digital input must be set up to *Increase or Decrease*.

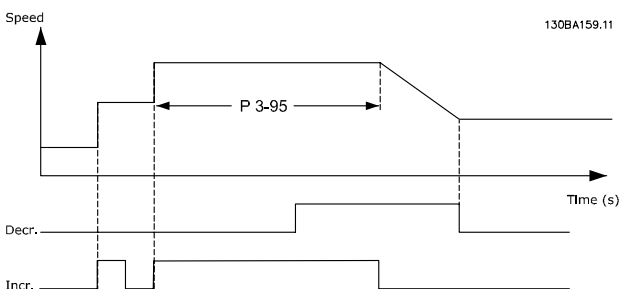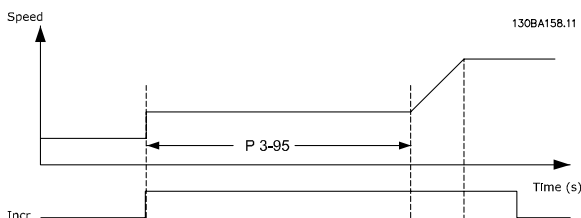

3-90 Step Size	
Range:	Function:
0.10 %*	[0.01 - 200.00 %]

3-91 Ramp Time	
Range:	Function:
1.00 s*	[0.00 - 3600.00 s] Enter the ramp time, i.e., the time for adjustment of the reference from 0% to 100% of the specified digital potentiometer function (Increase, Decrease or Clear). If Increase/Decrease is activated for longer than the ramp delay period specified in 3-95 Ramp Delay, the actual reference will be ramped up/down according to this ramp time. The ramp time is defined as the time used to adjust the reference by the step size specified in 3-90 Step Size.

3-92 Power Restore	
Option:	Function:
[0] *	Off Resets the Digital Potentiometer reference to 0% after power-up.
[1]	On Restores the most recent Digital Potentiometer reference at power-up.

3-93 Maximum Limit	
Range:	Function:
100 %*	[-200 - 200 %] Set the maximum permissible value for the resultant reference. This is advisable if

3-93 Maximum Limit	
Range:	Function:
	the Digital Potentiometer is used for fine tuning of the resulting reference.

3-94 Minimum Limit	
Range:	Function:
-100 %*	[-200 - 200 %] Set the minimum permissible value for the resultant reference. This is advisable if the Digital Potentiometer is used for fine tuning of the resulting reference.

3-95 Ramp Delay	
Range:	Function:
Application dependent*	[Application dependant] Enter the delay required from activation of the digital potentiometer function until the Adjustable frequency drive starts to ramp the reference. With a delay of 0 ms, the reference starts to ramp as soon as INCREASE/DECREASE is activated. See also 3-91 Ramp Time.

3.6 Parameters: 4-** Limits/Warnings

3.6.1 4-1* Motor Limits

Define torque, current and speed limits for the motor, and the reaction of the Adjustable frequency drive when the limits are exceeded.

A limit may generate a message on the display. A warning will always generate a message on the display or on the serial communication bus. A monitoring function may initiate a warning or a trip, upon which the Adjustable frequency drive will stop and generate an alarm message.

4-10 Motor Speed Direction		
Option:	Function:	
		Select the motor speed direction(s) required. Use this parameter to prevent unwanted reversing. When <i>1-00 Configuration Mode</i> is set to <i>Process</i> [3], <i>4-10 Motor Speed Direction</i> is set to <i>Clockwise</i> [0] as default. The setting in <i>4-10 Motor Speed Direction</i> does not limit options for setting <i>4-13 Motor Speed High Limit</i> [RPM].
[0] *	Clockwise	The reference is set to CW rotation. Reversing input (Default term 19) must be open.
[1]	Counter clockwise	The reference is set to CCW rotation. Reversing input (Default term 19) must be closed. If reversing is required when 'Reverse' input is open, the motor direction can be changed by <i>1-06 Clockwise Direction</i>
[2]	Both directions	Allows the motor to rotate in both directions.

NOTE!

This parameter cannot be adjusted while the motor is running.

4-11 Motor Speed Low Limit [RPM]		
Range:	Function:	
Application dependent*	[Application dependant]	

4-12 Motor Speed Low Limit [Hz]		
Range:	Function:	
Application dependent*	[Application dependant]	

4-13 Motor Speed High Limit [RPM]		
Range:	Function:	
Application dependent*	[Application dependant]	

NOTE!

Max. output frequency cannot exceed 10% of the inverter switching frequency (*14-01 Switching Frequency*).

4-14 Motor Speed High Limit [Hz]		
Range:	Function:	
Size related*	[par. 4-12 - par. 4-19 Hz]	

NOTE!

Max. output frequency cannot exceed 10% of the inverter switching frequency (*14-01 Switching Frequency*).

4-16 Torque Limit Motor Mode		
Range:	Function:	
Application dependent*	[Application dependant]	

NOTE!

Changing *4-16 Torque Limit Motor Mode* when *1-00 Configuration Mode* is set to *Speed open-loop* [0], *1-66 Min. Current at Low Speed* is automatically readjusted.

NOTE!

The torque limit reacts on the actual, non-filtrated torque, including torque spikes. This is not the torque that is seen from the LCP or the serial communication bus as that is filtered.

4-17 Torque Limit Generator Mode		
Range:	Function:	
100.0 %*	[Application dependant]	

NOTE!

The torque limit reacts on the actual, non-filtrated torque, including torque spikes. This is not the torque that is seen from the LCP or the serial communication bus as that is filtered.

4-18 Current Limit		
Range:	Function:	
Application dependent*	[Application dependant]	

NOTE!

If [20] is selected in *1-90 Motor Thermal Protection*, *4-18 Current Limit* current limit must be set to 150%.

4-19 Max Output Frequency		
Range:	Function:	
132.0 Hz*	[1.0 - 1000.0 Hz]	Provides a final limit on the output frequency for improved safety in applications where you want to avoid accidental overspeeding. This limit is final in all configurations (independent of the setting in <i>1-00 Configuration Mode</i>).

NOTE!

This parameter cannot be adjusted while the motor is running.

NOTE!

Max. output frequency cannot exceed 10% of the inverter switching frequency (14-01 *Switching Frequency*).

4-20 Torque Limit Factor Source		
Option:	Function:	
		Select an analog input for scaling the settings in 4-16 <i>Torque Limit Motor Mode</i> and 4-17 <i>Torque Limit Generator Mode</i> from 0% to 100% (or inverse). The signal levels corresponding to 0% and 100% are defined in the analog input scaling, e.g., parameter group 6-1*. This parameter is only active when 1-00 <i>Configuration Mode</i> is in <i>Speed Open-loop</i> or <i>Speed Closed-loop</i> .
[0] *	No function	
[2]	Analog in 53	
[4]	Analog in 53 inv	
[6]	Analog in 54	
[8]	Analog in 54 inv	
[10]	Analog in X30-11	
[12]	Analog in X30-11 inv	
[14]	Analog in X30-12	
[16]	Analog in X30-12 inv	

4-21 Speed Limit Factor Source Option		
Option:	Function:	
		Select an analog input for scaling the settings in 4-19 <i>Max Output Frequency</i> from 0% to 100% (or vice versa). The signal levels corresponding to 0% and 100% are defined in the analog input scaling, e.g., parameter group 6-1*. This parameter is only active when 1-00 <i>Configuration Mode</i> is in <i>Torque Mode</i> .
[0] *	No function	
[2]	Analog input 53	
[4]	Analog input 53 inv	
[6]	Analog input 54	
[8]	Analog input 54 inv	
[10]	Analog input X30-11	
[12]	Analog input X30-11 inv	

4-21 Speed Limit Factor Source Option		
Option:	Function:	
[14]	Analog input X30-12	
[16]	Analog input X30-12 inv	


3.6.2 4-3* Motor Feedback Monitoring

The parameter group includes monitoring and handling of motor feedback devices such as encoders, resolvers, etc.

4-30 Motor Feedback Loss Function		
Option:	Function:	
		Select which reaction the Adjustable frequency drive should take if a feedback fault is detected. The selected action is to take place when the feedback signal differs from the output speed where its range is specified in 4-31 <i>Motor Feedback Speed Error</i> during its time frame set in 4-32 <i>Motor Feedback Loss Timeout</i> .
[0]	Disabled	
[1]	Warning	
[2] *	Trip	
[3]	Jog	
[4]	Freeze Output	
[5]	Max Speed	
[6]	Switch to Open Loop	
[7]	Select Setup 1	
[8]	Select Setup 2	
[9]	Select Setup 3	
[10]	Select Setup 4	
[11]	stop & trip	

Warning/Alarm 61 Feedback Error is related to the Motor Feedback Loss Function.

4-31 Motor Feedback Speed Error		
Range:	Function:	
300 RPM*	[1 - 600 RPM]	Select the max. allowed tracking error in speed from the calculated and the actual mechanical shaft output speeds.

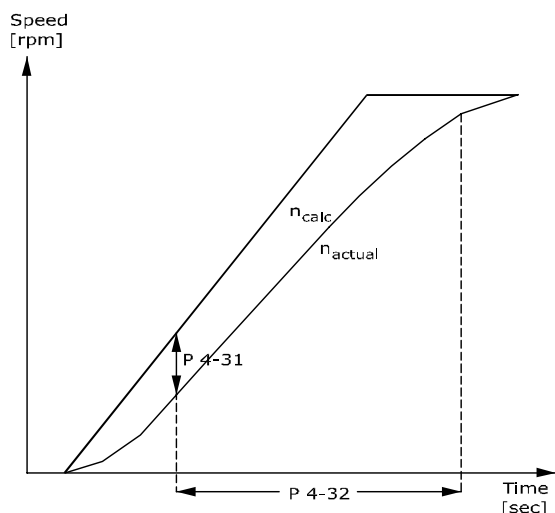

130BA221.10

4-32 Motor Feedback Loss Timeout		
Range:	Function:	
0.05 s*	[0.00 - 60.00 s]	Set the timeout value allowing the speed error set in 4-31 <i>Motor Feedback Speed Error</i> to be exceeded.

4-34 Tracking Error Function		
Option:	Function:	
	<p>Select which reaction the Adjustable frequency drive should take if a tracking error is detected. Closed-loop: The tracking error is measured between the output from the ramp generator and the speed feedback (filtered). Open-loop: The tracking error is measured between the output from the ramp generator - compensated for slip - and the frequency that is sent to the motor (16-13 <i>Frequency</i>). The reaction will be activated if the measured difference is more than specified in 4-35 <i>Tracking Error</i> for the time specified in 4-36 <i>Tracking Error Timeout</i>. A tracking error in closed-loop does not imply that there is a problem with the feedback signal! A tracking error can be the result of torque limit for loads that are too big.</p>	
[0] *	Disable	
[1]	Warning	
[2]	Trip	
[3]	Trip after stop	

Warning/Alarm 78 Tracking Error is related to the Tracking Error Function.

4-35 Tracking Error		
Range:	Function:	
10 RPM*	[1 - 600 RPM]	Enter the maximum permissible speed error between the motor speed and the output of the ramp when not ramping. In open-loop, the motor speed is estimated, and in closed-loop, it is the feedback from encoder/resolver.

4-36 Tracking Error Timeout		
Range:	Function:	
1.00 s*	[0.00 - 60.00 s]	Enter the timeout period during which an error greater than the value set in 4-35 <i>Tracking Error</i> is permissible.

4-37 Tracking Error Ramping		
Range:	Function:	
100 RPM*	[1 - 600 RPM]	Enter the maximum permissible speed error between the motor speed and the output of the ramp when ramping. In open-loop, the motor speed is estimated, and in closed-loop, it is the feedback from encoder/resolver.


4-38 Tracking Error Ramping Timeout		
Range:	Function:	
1.00 s*	[0.00 - 60.00 s]	Enter the timeout period during which an error greater than the value set in 4-37 <i>Tracking Error Ramping</i> while ramping is permissible.

4-39 Tracking Error After Ramping Timeout		
Range:	Function:	
5.00 s*	[0.00 - 60.00 s]	Enter the timeout period after ramping where 4-37 <i>Tracking Error Ramping</i> and 4-38 <i>Tracking Error Ramping Timeout</i> are still active.

3.6.3 4-5* Adjustable Warnings

Use these parameters to adjust warning limits for current, speed, reference and feedback. Warnings that are shown on the display can be programmed as an output or sent via serial bus.

Warnings are shown on display, programmed output or serial bus.

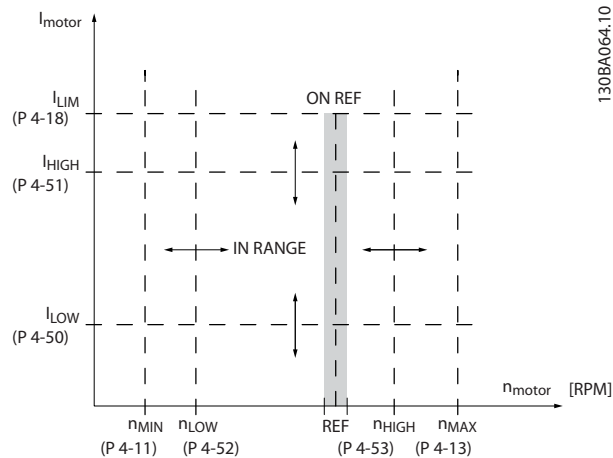

130BA064.10

Figure 3.9 Adjustable Warnings

4-50 Warning Current Low		
Range:	Function:	
0.00 A* [Application dependant]	Enter the I_{LOW} value. When the motor current falls below this limit, the display reads <i>Current Low</i> . The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). Refer to Figure 3.9.	

4-51 Warning Current High		
Range:	Function:	
Application dependent* [Application dependant]	Enter the I_{HIGH} value. When the motor current exceeds this limit, the display reads <i>Current High</i> . The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). Refer to Figure 3.9.	

4-52 Warning Speed Low		
Range:	Function:	
0 RPM* [Application dependant]	Enter the n_{LOW} value. When the motor speed exceeds this limit, the display reads <i>Speed Low</i> . The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only).	

4-53 Warning Speed High		
Range:	Function:	
Application dependent* [Application dependant]	Enter the n_{HIGH} value. When the motor speed exceeds this limit, the display reads <i>Speed High</i> . The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only). Program the upper signal limit of the motor speed, n_{HIGH} , within the normal working range of the Adjustable frequency drive. Refer to Figure 3.9.	

4-54 Warning Reference Low		
Range:	Function:	
-999999.999* [Application dependant]	Enter the lower reference limit. When the actual reference falls below this limit, the display indicates Ref Low. The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only).	

4-55 Warning Reference High		
Range:	Function:	
999999.999* [Application dependant]	Enter the upper reference limit. When the actual reference exceeds this limit, the display reads Ref High. The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only).	

4-56 Warning Feedback Low		
Range:	Function:	
-999999.999 ReferenceFeed-backUnit* [Application dependant]	Enter the lower feedback limit. When the feedback falls below this limit, the display reads Feedb Low. The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only).	

4-57 Warning Feedback High		
Range:		Function:
999999.999	[Application dependant]	Enter the upper feedback limit. When the feedback exceeds this limit, the display reads Feedb High. The signal outputs can be programmed to produce a status signal on terminal 27 or 29 (FC 302 only) and on relay output 01 or 02 (FC 302 only).
ReferenceFeed-backUnit*		

4-58 Missing Motor Phase Function		
Displays an alarm in the event of a missing motor phase (alarm 30, 31 or 32). Select disabled for no missing motor phase alarm. It is strongly recommended to make an active setting to avoid motor damage.		
Option:		Function:
[0] *	Disabled	No alarm is displayed if a missing motor phase occurs.
[1]	Trip 100 ms	Trips after 100 ms. Select 100ms for fast detection of missing motor phase.
[2]	Trip 1000 ms	Trips after 1000ms. Select 1000ms for slow detection of missing motor phase.
[3]	Trip 100ms 3ph detec.	

NOTE!

This parameter cannot be adjusted while the motor is running.

3.6.4 4-6* Speed Bypass

Some systems call for avoiding certain output frequencies or speeds due to resonance problems in the system. A maximum of four frequency or speed ranges can be avoided.

4-60 Bypass Speed From [RPM]		
Array [4]		
Range:		Function:
Application dependent*	[Application dependant]	Some systems call for avoiding certain output speeds due to resonance problems in the system. Enter the lower limits of the speeds to be avoided.

4-61 Bypass Speed From [Hz]		
Array [4]		
Range:		Function:
Size related*	[0.0 - par. 4-14 Hz]	

4-62 Bypass Speed To [RPM]		
Array [4]		
Range:		Function:
Application dependent*	[Application dependant]	Some systems call for avoiding certain output speeds due to resonance problems in the system. Enter the upper limits of the speeds to be avoided.

4-63 Bypass Speed To [Hz]		
Array [4]		
Range:		Function:
Application dependent*	[Application dependant]	Some systems call for avoiding certain output speeds due to resonance problems in the system. Enter the upper limits of the speeds to be avoided.

3.7 Parameters: 5-** Digital In/Out

3.7.1 5-0* Digital I/O Mode

Parameters for configuring the input and output using NPN and PNP.

5-00 Digital I/O Mode		
Option:	Function:	
		Digital inputs and programmed digital outputs are pre-programmable for operation either in PNP or NPN systems.
[0] *	PNP	Action on positive directional pulses (↑). PNP systems are pulled down to GND.
[1]	NPN	Action on negative directional pulses (↓). NPN systems are pulled up to + 24V, internally in the Adjustable frequency drive.

NOTE!

Once this parameter has been changed, it must be activated by performing a power cycle.

5-01 Terminal 27 Mode		
Option:	Function:	
[0] *	Input	Defines terminal 27 as a digital input.
[1]	Output	Defines terminal 27 as a digital output.

5-02 Terminal 29 Mode		
Option:	Function:	
[0] *	Input	Defines terminal 29 as a digital input.
[1]	Output	Defines terminal 29 as a digital output.

This parameter is available for FC 302 only.

3.7.2 Digital Inputs

The digital inputs are used for selecting various functions in the Adjustable frequency drive. All digital inputs can be set to the following functions:

Digital input function	Select	Terminal
No operation	[0]	All *term 32, 33
Reset	[1]	All
Coast inverse	[2]	All *term 27
Coast and reset inverse	[3]	All
Quick stop inverse	[4]	All
DC brake inverse	[5]	All
Stop inverse	[6]	All
Start	[8]	All *term 18
Latched start	[9]	All
Reversing	[10]	All *term 19

Digital input function	Select	Terminal
Start reversing	[11]	All
Enable start forward	[12]	All
Enable start reverse	[13]	All
Jog	[14]	All *term 29
Preset reference on	[15]	All
Preset ref bit 0	[16]	All
Preset ref bit 1	[17]	All
Preset ref bit 2	[18]	All
Freeze reference	[19]	All
Freeze output	[20]	All
Speed up	[21]	All
Slow	[22]	All
Set-up select bit 0	[23]	All
Set-up select bit 1	[24]	All
Precise stop inverse	[26]	18, 19
Precise start, stop	[27]	18, 19
Catch up	[28]	All
Slow-down	[29]	All
Counter input	[30]	29, 33
Pulse input Edge Triggered	[31]	29, 33
Pulse input Time Based	[32]	29, 33
Ramp bit 0	[34]	All
Ramp bit 1	[35]	All
Latched precise start	[40]	18, 19
Latched precise stop inverse	[41]	18, 19
External interlock	[51]	
DigiPot Increase	[55]	All
DigiPot Decrease	[56]	All
DigiPot Clear	[57]	All
Digipot Hoist	[58]	All
Counter A (up)	[60]	29, 33
Counter A (down)	[61]	29, 33
Reset Counter A	[62]	All
Counter B (up)	[63]	29, 33
Counter B (down)	[64]	29, 33
Reset Counter B	[65]	All
Mech. Brake Feedb.	[70]	All
Mech. Brake Feedb. Inv.	[71]	All
PID Error Inv.	[72]	All
PID Reset I-part	[73]	All
PID enable	[74]	All
PTC Card 1	[80]	All
Profidrive OFF2	[91]	
Profidrive OFF3	[92]	
Start edge triggered	[98]	
Safe Option Reset	[100]	

FC 300 standard terminals are 18, 19, 27, 29, 32 and 33.
 MCB 101 terminals are X30/2, X30/3 and X30/4.
 Terminal 29 functions as an output only in FC 302.

Functions dedicated to only one digital input are stated in the associated parameter.

All digital inputs can be programmed to these functions:

[0]	No operation	No reaction to signals transmitted to the terminal.
[1]	Reset	Resets Adjustable frequency drive after a TRIP/ALARM. Not all alarms can be reset.
[2]	Coast inverse	(Default Digital input 27): Coasting stop, inverted input (NC). The Adjustable frequency drive leaves the motor in free mode. Logic '0' => coasting stop.
[3]	Coast and reset inverse	Reset and coasting stop Inverted input (NC). Leaves motor in free mode and resets Adjustable frequency drive. Logic '0' => coasting stop and reset.
[4]	Quick stop inverse	Inverted input (NC). Generates a stop in accordance with the quick-stop ramp time set in 3-81 <i>Quick Stop Ramp Time</i> . When motor stops, the shaft is in free mode. Logic '0' => quick stop.
[5]	DC brake inverse	Inverted input for DC braking (NC). Stops motor by energizing it with a DC current for a certain time period. See 2-01 <i>DC Brake Current</i> to 2-03 <i>DC Brake Cut In Speed [RPM]</i> . The function is only active when the value in 2-02 <i>DC Braking Time</i> is different from 0. Logic '0' => DC braking.
[6]	Stop inverse	Stop Inverted function. Generates a stop function when the selected terminal goes from logical level '1' to '0'. The stop is performed according to the selected ramp time (3-42 <i>Ramp 1 Ramp Down Time</i> , 3-52 <i>Ramp 2 Ramp down Time</i> , 3-62 <i>Ramp 3 Ramp down Time</i> , 3-72 <i>Ramp 4 Ramp Down Time</i>). NOTE! When the Adjustable frequency drive is at the torque limit and has received a stop command, it may not stop by itself. To ensure that the Adjustable frequency drive stops, configure a digital output to <i>Torque limit & stop</i> [27] and connect this digital output to a digital input that is configured as coast.
[8]	Start	(Default Digital input 18): Select start for a start/stop command. Logic '1' = start, logic '0' = stop.
[9]	Latched start	The motor starts, if a pulse is applied for min. 2ms. The motor stops when Stop inverse is activated or a reset command (via DI) is given.

[10]	Reversing	(Default Digital input 19). Change the direction of motor shaft rotation. Select Logic '1' to reverse. The reversing signal only changes the direction of rotation. It does not activate the start function. Select both directions in 4-10 <i>Motor Speed Direction</i> . The function is not active in process closed-loop.
[11]	Start reversing	Used for start/stop and for reversing on the same wire. Signals on start are not allowed at the same time.
[12]	Enable start forward	Disengages the counter-clockwise movement and allows for the clockwise direction.
[13]	Enable start reverse	Disengages the clockwise movement and allows for the counter-clockwise direction.
[14]	Jog	(Default Digital input 29): Use to activate jog speed. See 3-11 <i>Jog Speed [Hz]</i> .
[15]	Preset reference on	Shifts between external reference and preset reference. It is assumed that <i>External/preset</i> [1] has been selected in 3-04 <i>Reference Function</i> . Logic '0' = external reference active; logic '1' = one of the eight preset references is active.
[16]	Preset ref bit 0	Preset ref. bit 0,1, and 2 enables a choice between one of the eight preset references according to the table below.
[17]	Preset ref bit 1	Same as Preset ref bit 0 [16].
[18]	Preset ref bit 2	Same as Preset ref bit 0 [16].

Preset ref. bit	2	1	0
Preset ref. 0	0	0	0
Preset ref. 1	0	0	1
Preset ref. 2	0	1	0
Preset ref. 3	0	1	1
Preset ref. 4	1	0	0
Preset ref. 5	1	0	1
Preset ref. 6	1	1	0
Preset ref. 7	1	1	1

[19]	Freeze ref	Freezes the actual reference, which is now the point of enable/condition for Speed up and Slow to be used. If Speed up/down is used, the speed change always follows ramp 2 (3-51 <i>Ramp 2 Ramp up Time</i> and 3-52 <i>Ramp 2 Ramp down Time</i>) in the range 0 - 3-03 <i>Maximum Reference</i> .
[20]	Freeze output	Freezes the actual motor frequency (Hz), which is now the point of enable/condition for Speed up and Slow to be used. If Speed up/down is used, the speed change always follows ramp 2 (3-51 <i>Ramp 2 Ramp up Time</i> and 3-52 <i>Ramp 2 Ramp down Time</i>) in the range 0 - 1-23 <i>Motor Frequency</i> .




NOTE!

When Freeze output is active, the Adjustable frequency drive cannot be stopped via a low 'start [8]' signal. Stop the Adjustable frequency drive via a terminal programmed for Coasting inverse [2] or Coast and reset, inverse.

[21]	Speed up	Select Speed up and Slow if digital control of the up/down speed is desired (motor potentiometer). Activate this function by selecting either Freeze reference or Freeze output. When Speed up/Slow is activated for less than 400 msec, the resulting reference will be increased/decreased by 0.1%. If Speed up/down is activated for more than 400 msec, the resulting reference will follow the setting in ramping up/down parameter 3-x1/ 3-x2.
------	----------	--

	Shut down	Catch up
Unchanged speed	0	0
Reduced by %-value	1	0
Increased by %-value	0	1
Reduced by %-value	1	1

[22]	Slow	Same as Speed up [21].
[23]	Set-up select bit 0	Select Set-up select bit 0 or Select Set-up select bit 1 to select one of the four set-ups. Set 0-10 Active Set-up to Multi Set-up.
[24]	Set-up select bit 1	(Default Digital input 32): Same as Set-up select bit 0 [23].
[26]	Precise stop inv.	Sends an inverted stop signal when the precise stop function is activated in 1-83 Precise Stop Function. Precise stop inverse function is available for terminals 18 or 19.
[27]	Precise start, stop	Use when Precise ramp stop [0] is selected in 1-83 Precise Stop Function. Precise start, stop is available for terminals 18 and 19. Precise start makes sure that the angle that the rotor turns from standing still to reference is the same for each start (for same ramp time, same set-point). This is the equivalent to the precise stop where the angle that the rotor turns from reference to standing still is the same for each stop. When using for 1-83 Precise Stop Function [1] or [2]: The Adjustable frequency drive needs a Precise Stop signal before the value of 1-84 Precise Stop Counter Value is reached. If this is not supplied, the Adjustable frequency drive will not stop when the value in 1-84 Precise Stop Counter Value is reached.

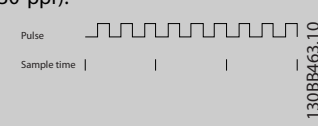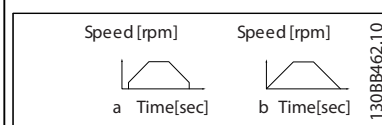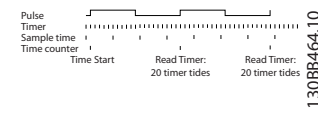		Precise start, stop must be triggered by a digital input and is available for terminals 18 and 19.
[28]	Catch up	Increases reference value by percentage (relative) set in 3-12 Catch up/slow Down Value.
[29]	Slow-down	Reduces reference value by percentage (relative) set in 3-12 Catch up/slow Down Value.
[30]	Counter input	Precise stop function in 1-83 Precise Stop Function acts as counter stop or speed compensated counter stop with or without reset. The counter value must be set in 1-84 Precise Stop Counter Value.
[31]	Pulse edge triggered	Edge-triggered pulse input counts number of pulse flanks per sample time. This gives a higher resolution at high frequencies, but is not as precise at lower frequencies. Use this pulse principle for encoders with very low resolution (e.g., 30 ppr). 
[32]	Pulse time based	Time-based pulse input measures the duration between flanks. This gives a higher resolution at lower frequencies, but is not as precise at higher frequencies. This principle has a cut-off frequency which makes it unsuited for encoders with very low resolutions (e.g., 30 ppr) at low speeds.  a: very low encoder resolution b: standard encoder resolution 
[34]	Ramp bit 0	Enables a choice between one of the four ramps available, according to the table below.
[35]	Ramp bit 1	Same as Ramp bit 0.

Preset ramp bit	1	0
Ramp 1	0	0
Ramp 2	0	1
Ramp 3	1	0
Ramp 4	1	1

[40]	Latched Precise Start	A latched precise start only requires a pulse of 3ms on T18 or T19. When using for 1-83 [1] or [2]: When the reference is reached, the Adjustable frequency drive will internally enable the Precise Stop signal. This means that the Adjustable frequency drive will do the Precise Stop when the counter value of <i>1-84 Precise Stop Counter Value</i> is reached.
[41]	Latched Precise Stop inverse	Sends a latched stop signal when the precise stop function is activated in <i>1-83 Precise Stop Function</i> . The latched precise stop inverse function is available for terminals 18 or 19.
[51]	External interlock	This function makes it possible to give an external fault to the drive. This fault is treated in the same way as an internally generated alarm.
[55]	DigiPot Increase	INCREASE signal to the digital potentiometer function described in parameter group 3-9*.
[56]	DigiPot Decrease	DECREASE signal to the digital potentiometer function described in parameter group 3-9*.
[57]	DigiPot Clear	Clears the digital potentiometer reference described in parameter group 3-9*.
[60]	Counter A	(Terminal 29 or 33 only) Input for increment counting in the SLC counter.
[61]	Counter A	(Terminal 29 or 33 only) Input for decrement counting in the SLC counter.
[62]	Reset Counter A	Input for reset of counter A.
[63]	Counter B	(Terminal 29 or 33 only) Input for increment counting in the SLC counter.
[64]	Counter B	(Terminal 29 or 33 only) Input for decrement counting in the SLC counter.
[65]	Reset Counter B	Input for reset of counter B.
[70]	Mech. Brake Feedback	Brake feedback for hoisting applications: Set <i>1-01 Motor Control Principle</i> to [3] <i>flux w/ motor feedback</i> ; set <i>1-72 Start Function</i> to [6] <i>Hoist mech brake Ref.</i>
[71]	Mech. Brake Feedback inv.	Inverted brake feedback for hoisting applications
[72]	PID error inverse	When enabled, it inverts the resulting error from the process PID controller. Available only if "Configuration Mode" is set to

		"Surface Winder," "Extended PID Speed OL" or "Extended PID Speed CL."
[73]	PID reset I-part	When enabled, resets the I-part of the process PID controller. Equivalent to <i>7-40 Process PID I-part Reset</i> . Available only if "Configuration Mode" is set to "Surface Winder," "Extended PID Speed OL" or "Extended PID Speed CL."
[74]	PID enable	When enabled, enables the extended process PID controller. Equivalent to <i>7-50 Process PID Extended PID</i> . Available only if "Configuration Mode" is set "Extended PID Speed OL" or "Extended PID Speed CL."
[80]	PTC Card 1	All digital inputs can be set to PTC card 1 [80]. However, only one digital input must be set to this choice.
[91]	Profidrive OFF2	The functionality is the same as the according control word bit of the Profibus/Profinet option.
[92]	Profidrive OFF3	The functionality is the same as the according control word bit of the Profibus/Profinet option.
[98]	Start edge triggered	Edge triggered start command. Keeps the start command alive, even if the input is going back to low; can be used for a start push button.
[100]	Safe Option Reset	

5-10 Terminal 18 Digital Input

Option: **Function:**

[8] *	Start	Functions are described under 5-1* <i>Digital Inputs</i>
-------	-------	--

5-11 Terminal 19 Digital Input

Option: **Function:**

[10] *	Reversing	Functions are described under 5-1* <i>Digital Inputs</i>
--------	-----------	--

5-12 Terminal 27 Digital Input

Option: **Function:**

[2] *	Coast inverse	Functions are described under parameter group 5-1* <i>Digital Inputs</i>
-------	---------------	--

5-13 Terminal 29 Digital Input

Option: **Function:**

		Select the function from the available digital input range and the additional options [60], [61], [63] and [64]. Counters are used in Smart Logic Control functions. This parameter is available for FC 302 only.
[14] *	Jog	Functions are described under 5-1* <i>Digital Inputs</i>

5-14 Terminal 32 Digital Input

Option:		Function:
		Select the function from the available digital input range and the additional options [60], [61], [63] and [64]. Counters are used in Smart Logic Control functions.
[0] *	No operation	Functions are described under 5-1* <i>Digital Inputs</i>

5-15 Terminal 33 Digital Input

Option:		Function:
		Select the function from the available digital input range and the additional options [60], [61], [63] and [64]. Counters are used in Smart Logic Control functions.
[0] *	No operation	Functions are described under 5-1* <i>Digital Inputs</i>

5-16 Terminal X30/2 Digital Input

Option:		Function:
[0] *	No operation	This parameter is active when option module MCB101 is installed in the Adjustable frequency drive. Functions are described under 5-1* <i>Digital Inputs</i>

5-17 Terminal X30/3 Digital Input

Option:		Function:
[0] *	No operation	This parameter is active when option module MCB101 is installed in the Adjustable frequency drive. Functions are described under 5-1* <i>Digital Inputs</i>

5-18 Terminal X30/4 Digital Input

Option:		Function:
[0] *	No operation	This parameter is active when option module MCB101 is installed in the Adjustable frequency drive. Functions are described under 5-1* <i>Digital Inputs</i>

5-19 Terminal 37 Safe Stop

Option:		Function:
[1] *	Safe Stop Alarm	Coasts Adjustable frequency drive when safe stop is activated. Manual reset from LCP, digital input or serial communication bus.
[3]	Safe Stop Warning	Coasts Adjustable frequency drive when safe stop is activated (T-37 off). When safe stop circuit is reestablished, the Adjustable frequency drive will continue without manual reset.
[4]	PTC 1 Alarm	Coasts Adjustable frequency drive when safe stop is activated. Manual reset from LCP, digital input or serial communication bus.

5-19 Terminal 37 Safe Stop

Option:		Function:
		Choice 4 is only available when the MCB 112 PTC thermistor card is connected.
[5]	PTC 1 Warning	Coasts Adjustable frequency drive when safe stop is activated (T-37 off). When safe stop circuit is reestablished, the Adjustable frequency drive will continue without manual reset, unless a Digital Input set to PTC Card 1 [80] is still enabled. Choice 5 is only available when the MCB 112 PTC thermistor card is connected.
[6]	PTC 1 & Relay A	This choice is used when the PTC option is gated together with a stop button through a safety relay to T-37. Coasts Adjustable frequency drive when safe stop is activated. Manual reset from LCP, digital input or serial communication bus. Choice 6 is only available when the MCB 112 PTC thermistor card is connected.
[7]	PTC 1 & Relay W	This choice is used when the PTC option is gated together with a stop button through a safety relay to T-37. Coasts Adjustable frequency drive when safe stop is activated (T-37 off). When safe stop circuit is reestablished, the Adjustable frequency drive will continue without manual reset, unless a Digital Input set to PTC Card 1 [80] is (still) enabled. Choice 7 is only available when the MCB 112 PTC thermistor card is connected.
[8]	PTC 1 & Relay A/W	This choice makes it possible to use a combination of alarm and warning. Choice 8 is only available when the MCB 112 PTC thermistor card is connected.
[9]	PTC 1 & Relay W/A	This choice makes it possible to use a combination of alarm and warning. Choice 9 is only available when the MCB 112 PTC thermistor card is connected.

Choices 4–9 are only available when the MCB 112 PTC thermistor card is connected.

NOTE!

When Auto Reset/Warning is selected the Adjustable frequency drive opens up for automatic restart.

Overview of functions, alarms and warnings

Function	No.	PTC	Relay
No Function	[0]	-	-
Safe Stop Alarm	[1]*	-	Safe Stop [A68]
Safe Stop Warning	[3]	-	Safe Stop [W68]
PTC 1 Alarm	[4]	PTC 1 Safe Stop [A71]	-
PTC 1 Warning	[5]	PTC 1 Safe Stop [W71]	-
PTC 1 & Relay A	[6]	PTC 1 Safe Stop [A71]	Safe Stop [A68]
PTC 1 & Relay W	[7]	PTC 1 Safe Stop [W71]	Safe Stop [W68]
PTC 1 & Relay A/W	[8]	PTC 1 Safe Stop [A71]	Safe Stop [W68]
PTC 1 & Relay W/A	[9]	PTC 1 Safe Stop [W71]	Safe Stop [A68]

W means warning, and *A* means alarm. For further information, see *Alarms and Warnings* in section *Troubleshooting in the Design Guide* or in the *Instruction Manual*.

A dangerous failure related to the safe stop will give alarm: Dangerous Failure [A72].

Please refer to in .

5-20 Terminal X46/1 Digital Input

Option: **Function:**

[0] *	No operation	This parameter is active when option module MCB 113 is installed in the Adjustable frequency drive. Functions are described under 5-1* <i>Digital Inputs</i>
-------	--------------	--

5-21 Terminal X46/3 Digital Input

Option: **Function:**

[0] *	No operation	This parameter is active when option module MCB 113 is installed in the Adjustable frequency drive. Functions are described under 5-1* <i>Digital Inputs</i>
-------	--------------	--

5-22 Terminal X46/5 Digital Input

Option: **Function:**

[0] *	No operation	This parameter is active when option module MCB 113 is installed in the Adjustable frequency drive. Functions are described under 5-1* <i>Digital Inputs</i>
-------	--------------	--

5-23 Terminal X46/7 Digital Input

Option: **Function:**

[0] *	No operation	This parameter is active when option module MCB 113 is installed in the Adjustable frequency drive. Functions are described under 5-1* <i>Digital Inputs</i>
-------	--------------	--

5-24 Terminal X46/9 Digital Input

Option: **Function:**

[0] *	No operation	This parameter is active when option module MCB 113 is installed in the Adjustable frequency drive. Functions are described under 5-1* <i>Digital Inputs</i>
-------	--------------	--

5-25 Terminal X46/11 Digital Input

Option: **Function:**

[0] *	No operation	This parameter is active when option module MCB 113 is installed in the Adjustable frequency drive. Functions are described under 5-1* <i>Digital Inputs</i>
-------	--------------	--

5-26 Terminal X46/13 Digital Input

Option: **Function:**

[0] *	No operation	This parameter is active when option module MCB 113 is installed in the Adjustable frequency drive. Functions are described under 5-1* <i>Digital Inputs</i>
-------	--------------	--

3.7.3 5-3* Digital Outputs

The 2 solid-state digital outputs are common for terminals 27 and 29. Set the I/O function for terminal 27 in *5-01 Terminal 27 Mode*, and set the I/O function for terminal 29 in *5-02 Terminal 29 Mode*.

NOTE!

These parameters cannot be adjusted while the motor is running.

[0]	No operation	<i>Default for all digital outputs and relay outputs</i>
[1]	Control ready	The control card is ready. For example, Feedback from a Adjustable frequency drive where the control is supplied by an external 24 V (MCB 107) and the main power to the unit is not detected.
[2]	Drive ready	The Adjustable frequency drive is ready for operation and applies a supply signal on the control board.
[3]	Drive ready / remote control	The Adjustable frequency drive is ready for operation and is in [Auto on] mode.

[4]	Enable / no warning	Ready for operation. No start or stop command is been given (start/disable). No warnings are active.
[5]	VLT running	Motor is running and shaft torque is present.
[6]	Running / no warning	Output speed is higher than the speed set in <i>1-81 Min Speed for Function at Stop [RPM]</i> . The motor is running and there are no warnings.
[7]	Run in range/no warning	Motor is running within the programmed current and speed ranges set in <i>4-50 Warning Current Low</i> to <i>4-53 Warning Speed High</i> . There are no warnings.
[8]	Run on reference / no warning	Motor runs at reference speed. No warnings.
[9]	Alarm	An alarm activates the output. There are no warnings.
[10]	Alarm or warning	An alarm or a warning activates the output.
[11]	At torque limit	The torque limit set in <i>4-16 Torque Limit Motor Mode</i> or <i>4-17 Torque Limit Generator Mode</i> has been exceeded.
[12]	Out of current range	The motor current is outside the range set in <i>4-18 Current Limit</i> .
[13]	Below current, low	Motor current is lower than set in <i>4-50 Warning Current Low</i> .
[14]	Above current, high	Motor current is higher than set in <i>4-51 Warning Current High</i> .
[15]	Out of speed range	Output frequency is outside the frequency ranges set in <i>4-52 Warning Speed Low</i> and <i>4-53 Warning Speed High</i> .
[16]	Below speed, low	Output speed is lower than the setting in <i>4-52 Warning Speed Low</i> .
[17]	Above speed, high	Output speed is higher than the setting in <i>4-53 Warning Speed High</i> .
[18]	Out of feedback range	Feedback is outside the range set in <i>4-56 Warning Feedback Low</i> and <i>4-57 Warning Feedback High</i> .
[19]	Below feedback low	Feedback is below the limit set in <i>4-56 Warning Feedback Low</i> .
[20]	Above feedback high	Feedback is above the limit set in <i>4-57 Warning Feedback High</i> .
[21]	Thermal warning	The thermal warning turns on when the temperature exceeds the limit in the motor, the Adjustable frequency drive, the brake resistor, or the thermistor.
[22]	Ready, no thermal warning	Adjustable frequency drive is ready for operation and there is no over-temperature warning.
[23]	Remote, ready, no thermal warning	Adjustable frequency drive is ready for operation and is in [Auto on] mode. There is no over-temperature warning.

[24]	Ready, voltage OK	Adjustable frequency drive is ready for operation and the AC line voltage is within the specified voltage range (see <i>General Specifications</i> section in the Design Guide).
[25]	Reverse	<i>Reversing</i> . Logic '1' when CW rotation of the motor. Logic '0' when CCW rotation of the motor. If the motor is not rotating, the output will follow the reference.
[26]	Bus OK	Active communication (no timeout) via the serial communication port.
[27]	Torque limit and stop	Use in performing a coasting stop and in torque limit condition. If the Adjustable frequency drive has received a stop signal and is at the torque limit, the signal is Logic '0'.
[28]	Brake, no brake warning	Brake is active and there are no warnings.
[29]	Brake ready, no fault	Brake is ready for operation and there are no faults.
[30]	Brake fault (IGBT)	Output is Logic '1' when the brake IGBT is short-circuited. Use this function to protect the Adjustable frequency drive if there is a fault on the brake modules. Use the output/relay to cut out the AC line voltage from the Adjustable frequency drive.
[31]	Relay 123	The relay is activated when Control Word [0] is selected in parameter group 8-**.
[32]	Mechanical brake control	Enables control of an external mechanical brake, see description in the section <i>Control of Mechanical Brake</i> , and parameter group 2-2*
[33]	Safe stop activated (FC 302 only)	Indicates that the safe stop on terminal 37 has been activated.
[40]	Out of ref range	Active when the actual speed is outside settings in <i>4-52 Warning Speed Low</i> to <i>4-55 Warning Reference High</i> .
[41]	Below reference low	Active when actual speed is below speed reference setting.
[42]	Above reference high	Active when actual speed is above speed reference setting
[43]	Extended PID Limit	
[45]	Bus Ctrl	Controls output via bus. The state of the output is set in <i>5-90 Digital & Relay Bus Control</i> . The output state is retained in the event of bus timeout.
[46]	Bus Ctrl On at timeout	Controls output via bus. The state of the output is set in <i>5-90 Digital & Relay Bus Control</i> . In the event of a bus timeout, the output state is set high (On).

[47]	Bus Ctrl Off at timeout	Controls output via bus. The state of the output is set in 5-90 <i>Digital & Relay Bus Control</i> . In the event of a bus timeout, the output state is set low (Off).
[51]	MCO controlled	Active when a MCO 302 or MCO 305 is connected. The output is controlled from option.
[55]	Pulse output	
[60]	Comparator 0	See parameter group 13-1*. If Comparator 0 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[61]	Comparator 1	See parameter group 13-1*. If Comparator 1 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[62]	Comparator 2	See parameter group 13-1*. If Comparator 2 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[63]	Comparator 3	See parameter group 13-1*. If Comparator 3 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[64]	Comparator 4	See parameter group 13-1*. If Comparator 4 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[65]	Comparator 5	See parameter group 13-1*. If Comparator 5 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[70]	Logic Rule 0	See parameter group 13-4*. If Logic Rule 0 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[71]	Logic Rule 1	See parameter group 13-4*. If Logic Rule 1 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[72]	Logic Rule 2	See parameter group 13-4*. If Logic Rule 2 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[73]	Logic Rule 3	See parameter group 13-4*. If Logic Rule 3 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[74]	Logic Rule 4	See parameter group 13-4*. If Logic Rule 4 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[75]	Logic Rule 5	See parameter group 13-4*. If Logic Rule 5 is evaluated as TRUE, the output will go high. Otherwise, it will be low.
[80]	SL Digital Output A	See 13-52 <i>SL Controller Action</i> . The output will go high whenever the Smart Logic Action [38] <i>Set dig. out.</i> A high is executed. The output will go low whenever the Smart Logic Action [32] <i>Set dig. out.</i> A low is executed.
[81]	SL Digital Output B	See 13-52 <i>SL Controller Action</i> . The input will go high whenever the Smart Logic Action [39] <i>Set dig. out.</i> A high is executed. The input will go low whenever

		the Smart Logic Action [33] <i>Set dig. out.</i> A low is executed.																								
[82]	SL Digital Output C	See 13-52 <i>SL Controller Action</i> . The input will go high whenever the Smart Logic Action [40] <i>Set dig. out.</i> A high is executed. The input will go low whenever the Smart Logic Action [34] <i>Set dig. out.</i> A low is executed.																								
[83]	SL Digital Output D	See 13-52 <i>SL Controller Action</i> . The input will go high whenever the Smart Logic Action [41] <i>Set dig. out.</i> A high is executed. The input will go low whenever the Smart Logic Action [35] <i>Set dig. out.</i> A low is executed.																								
[84]	SL Digital Output E	See 13-52 <i>SL Controller Action</i> . The input will go high whenever the Smart Logic Action [42] <i>Set dig. out.</i> A high is executed. The input will go low whenever the Smart Logic Action [36] <i>Set dig. out.</i> A low is executed.																								
[85]	SL Digital Output F	See 13-52 <i>SL Controller Action</i> . The input will go high whenever the Smart Logic Action [43] <i>Set dig. out.</i> A high is executed. The input will go low whenever the Smart Logic Action [37] <i>Set dig. out.</i> A low is executed.																								
[120]	Local reference active	Output is high when 3-13 <i>Reference Site</i> = [2] Local or when 3-13 <i>Reference Site</i> = [0] <i>Linked to hand auto</i> at the same time as the LCP is in [Hand on] mode. <table border="1" style="margin-top: 10px;"> <thead> <tr> <th>Reference site set in 3-13 <i>Reference Site</i></th> <th>Local reference active [120]</th> <th>Remote reference active [121]</th> </tr> </thead> <tbody> <tr> <td>Reference site: Local 3-13 <i>Reference Site</i> [2]</td> <td>1</td> <td>0</td> </tr> <tr> <td>Reference site: Remote 3-13 <i>Reference Site</i> [1]</td> <td>0</td> <td>1</td> </tr> <tr> <td>Reference site: Linked to Hand/ Auto</td> <td></td> <td></td> </tr> <tr> <td>Hand</td> <td>1</td> <td>0</td> </tr> <tr> <td>Hand -> off</td> <td>1</td> <td>0</td> </tr> <tr> <td>Auto -> off</td> <td>0</td> <td>0</td> </tr> <tr> <td>Auto</td> <td>0</td> <td>1</td> </tr> </tbody> </table>	Reference site set in 3-13 <i>Reference Site</i>	Local reference active [120]	Remote reference active [121]	Reference site: Local 3-13 <i>Reference Site</i> [2]	1	0	Reference site: Remote 3-13 <i>Reference Site</i> [1]	0	1	Reference site: Linked to Hand/ Auto			Hand	1	0	Hand -> off	1	0	Auto -> off	0	0	Auto	0	1
Reference site set in 3-13 <i>Reference Site</i>	Local reference active [120]	Remote reference active [121]																								
Reference site: Local 3-13 <i>Reference Site</i> [2]	1	0																								
Reference site: Remote 3-13 <i>Reference Site</i> [1]	0	1																								
Reference site: Linked to Hand/ Auto																										
Hand	1	0																								
Hand -> off	1	0																								
Auto -> off	0	0																								
Auto	0	1																								

[121]	Remote reference active	Output is high when 3-13 Reference Site = Remote [1] or Linked to hand/auto [0] while the LCP is in [Auto on] mode. See above.
[122]	No alarm	Output is high when no alarm is present.
[123]	Start command active	Output is high when there is an active Start command (i.e., via digital input bus connection or [Hand on] or [Auto on]), and no Stop or Start command is active.
[124]	Running reverse	Output is high when the Adjustable frequency drive is running counter clockwise (the logical product of the status bits 'running' AND 'reverse').
[125]	Drive in hand mode	Output is high when the Adjustable frequency drive is in [Hand on] mode (as indicated by the LED light above [Hand on]).
[126]	Drive in auto mode	Output is high when the Adjustable frequency drive is in [Auto on] mode (as indicated by the LED above [Auto on]).
[151]	ATEX ETR cur. alarm	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1.
[152]	ATEX ETR freq. alarm	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1.
[153]	ATEX ETR cur. warning	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1.
[154]	ATEX ETR freq. warning	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1.
[188]	AHF Capacitor Connect	The capacitors will be turned on at 20% (hysteresis of 50% gives an interval of 10%–30%). The capacitors will be disconnected below 10%. The off delay is 10 s and will restart if the nominal power goes above 10% during the delay. 5-80 AHF Cap Reconnect Delay is used to guarantee a minimum off-time for the capacitors.
[189]	External fan control	The internal logics for the internal fan control is transferred to this output to make it possible to control an external fan (relevant for HP duct cooling).

5-30 Terminal 27 Digital Output

Option:		Function:
[0] *	No operation	Functions are described under 5-3* Digital Outputs

5-31 Terminal 29 Digital Output

Option:		Function:
[0] *	No operation	Functions are described under 5-3* Digital Outputs This parameter only applies to FC 302

5-32 Term X30/6 Digi Out (MCB 101)

Option:		Function:
[0] *	No operation	This parameter is active when option module MCB 101 is mounted in the Adjustable frequency drive. Functions are described under 5-3* Digital Outputs
[1]	Control ready	
[2]	Drive ready	
[3]	Drive rdy/rem ctrl	
[4]	Enable / no warning	
[5]	Running	
[6]	Running / no warning	
[7]	Run in range/no warn	
[8]	Run on ref/no warn	
[9]	Alarm	
[10]	Alarm or warning	
[11]	At torque limit	
[12]	Out of current range	
[13]	Below current, low	
[14]	Above current, high	
[15]	Out of speed range	
[16]	Below speed, low	
[17]	Above speed, high	
[18]	Out of feedb. range	
[19]	Below feedback, low	
[20]	Above feedback, high	
[21]	Thermal warning	
[22]	Ready,no thermal W	
[23]	Remote,ready,no TW	
[24]	Ready, Voltage OK	
[25]	Reverse	
[26]	Bus OK	
[27]	Torque limit & stop	
[28]	Brake, no brake war	
[29]	Brake ready, no fault	
[30]	Brake fault (IGBT)	
[31]	Relay 123	
[32]	Mech brake ctrl	
[33]	Safe stop active	
[38]	Motor feedback error	
[39]	Tracking error	
[40]	Out of ref range	
[41]	Below reference, low	
[42]	Above ref, high	

5-32 Term X30/6 Digi Out (MCB 101)		
Option:	Function:	
[43]	Extended PID Limit	
[45]	Bus ctrl.	
[46]	Bus ctrl, 1 if timeout	
[47]	Bus ctrl, 0 if timeout	
[51]	MCO controlled	
[55]	Pulse output	
[60]	Comparator 0	
[61]	Comparator 1	
[62]	Comparator 2	
[63]	Comparator 3	
[64]	Comparator 4	
[65]	Comparator 5	
[70]	Logic rule 0	
[71]	Logic rule 1	
[72]	Logic rule 2	
[73]	Logic rule 3	
[74]	Logic rule 4	
[75]	Logic rule 5	
[80]	SL digital output A	
[81]	SL digital output B	
[82]	SL digital output C	
[83]	SL digital output D	
[84]	SL digital output E	
[85]	SL digital output F	
[120]	Local ref active	
[121]	Remote ref active	
[122]	No alarm	
[123]	Start command activ	
[124]	Running reverse	
[125]	Drive in hand mode	
[126]	Drive in auto mode	
[151]	ATEX ETR cur. alarm	
[152]	ATEX ETR freq. alarm	
[153]	ATEX ETR cur. warning	
[154]	ATEX ETR freq. warning	
[188]	AHF Capacitor Connect	
[189]	External Fan Control	
[190]	Safe Function active	
[191]	Safe Opt. Reset req.	
[192]	RS Flipflop 0	
[193]	RS Flipflop 1	
[194]	RS Flipflop 2	
[195]	RS Flipflop 3	
[196]	RS Flipflop 4	
[197]	RS Flipflop 5	
[198]	RS Flipflop 6	
[199]	RS Flipflop 7	

5-33 Term X30/7 Digi Out (MCB 101)		
Option:	Function:	
[0] *	No operation	This parameter is active when option module MCB 101 is mounted in the Adjustable frequency drive. Functions are described under 5-3* <i>Digital Outputs</i>
[1]	Control ready	
[2]	Drive ready	
[3]	Drive rdy/rem ctrl	
[4]	Enable / no warning	
[5]	Running	
[6]	Running / no warning	
[7]	Run in range/no warn	
[8]	Run on ref/no warn	
[9]	Alarm	
[10]	Alarm or warning	
[11]	At torque limit	
[12]	Out of current range	
[13]	Below current, low	
[14]	Above current, high	
[15]	Out of speed range	
[16]	Below speed, low	
[17]	Above speed, high	
[18]	Out of feedb. range	
[19]	Below feedback, low	
[20]	Above feedback, high	
[21]	Thermal warning	
[22]	Ready,no thermal W	
[23]	Remote,ready,no TW	
[24]	Ready, Voltage OK	
[25]	Reverse	
[26]	Bus OK	
[27]	Torque limit & stop	
[28]	Brake, no brake war	
[29]	Brake ready, no fault	
[30]	Brake fault (IGBT)	
[31]	Relay 123	
[32]	Mech brake ctrl	
[33]	Safe stop active	
[39]	Tracking error	
[40]	Out of ref range	
[41]	Below reference, low	
[42]	Above ref, high	
[43]	Extended PID Limit	
[45]	Bus ctrl.	
[46]	Bus ctrl, 1 if timeout	
[47]	Bus ctrl, 0 if timeout	
[51]	MCO controlled	
[60]	Comparator 0	

5-33 Term X30/7 Digi Out (MCB 101)		
Option:	Function:	
[61]	Comparator 1	
[62]	Comparator 2	
[63]	Comparator 3	
[64]	Comparator 4	
[65]	Comparator 5	
[70]	Logic rule 0	
[71]	Logic rule 1	
[72]	Logic rule 2	
[73]	Logic rule 3	
[74]	Logic rule 4	
[75]	Logic rule 5	
[80]	SL digital output A	
[81]	SL digital output B	
[82]	SL digital output C	
[83]	SL digital output D	
[84]	SL digital output E	
[85]	SL digital output F	
[120]	Local ref active	
[121]	Remote ref active	
[122]	No alarm	
[123]	Start command activ	
[124]	Running reverse	
[125]	Drive in hand mode	
[126]	Drive in auto mode	
[151]	ATEX ETR cur. alarm	
[152]	ATEX ETR freq. alarm	
[153]	ATEX ETR cur. warning	
[154]	ATEX ETR freq. warning	
[189]	External Fan Control	
[190]	Safe Function active	
[191]	Safe Opt. Reset req.	
[192]	RS Flipflop 0	
[193]	RS Flipflop 1	
[194]	RS Flipflop 2	
[195]	RS Flipflop 3	
[196]	RS Flipflop 4	
[197]	RS Flipflop 5	
[198]	RS Flipflop 6	
[199]	RS Flipflop 7	

3.7.4 5-4* Relays

Parameters for configuring the timing and the output functions for the relays.

5-40 Function Relay		
Option:	Function:	
Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105))		
[0] *	No operation	All digital and relay outputs are default set to "No Operation".
[1]	Control ready	The control card is ready. For example, Feedback from a drive where the control is supplied by an external 24 V (MCB 107) and the main power to drive is not detected.
[2]	Drive ready	Drive is ready to operate. Line power and control supplies are OK.
[3]	Drive rdy/rem ctrl	The Adjustable frequency drive is ready for operation and is in auto on mode
[4]	Enable / no warning	Ready for operation. No start or stop commands have been applied (start/disable). No warnings are active.
[5]	Running	Motor is running, and shaft torque present.
[6]	Running / no warning	Output speed is higher than the speed set in <i>1-81 Min Speed for Function at Stop [RPM]</i> Min Speed for Function at Stop [RPM]. The motor is running and no warnings.
[7]	Run in range/no warn	Motor is running within the programmed current and speed ranges set in <i>4-50 Warning Current Low</i> and <i>4-53 Warning Speed High</i> . No warnings.
[8]	Run on ref/no warn	Motor runs at reference speed. No warnings.
[9]	Alarm	An alarm activates the output. No warnings
[10]	Alarm or warning	An alarm or a warning activates the output.
[11]	At torque limit	The torque limit set in <i>4-16 Torque Limit Motor Mode</i> or <i>4-17 Torque Limit Generator Mode</i> has been exceeded.
[12]	Out of current range	The motor current is outside the range set in <i>4-18 Current Limit</i> .
[13]	Below current, low	Motor current is lower than set in <i>4-50 Warning Current Low</i> .

5-40 Function Relay		
Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105))		
Option:	Function:	
[14]	Above current, high	Motor current is higher than set in 4-51 <i>Warning Current High</i> .
[15]	Out of speed range	Output speed/frequency is outside the frequency ranges set in 4-52 <i>Warning Speed Low</i> and 4-53 <i>Warning Speed High</i> .
[16]	Below speed, low	Output speed is lower than the setting in 4-52 <i>Warning Speed Low</i>
[17]	Above speed, high	Output speed is higher than the setting in 4-53 <i>Warning Speed High</i> .
[18]	Out of feedb. range	Feedback is outside the range set in 4-56 <i>Warning Feedback Low</i> and 4-57 <i>Warning Feedback High</i> .
[19]	Below feedback, low	Feedback is below the limit set in 4-56 <i>Warning Feedback Low</i> .
[20]	Above feedback, high	Feedback is above the limit set in 4-57 <i>Warning Feedback High</i> .
[21]	Thermal warning	Thermal warning turns on when the temperature exceeds the limit either in motor, Adjustable frequency drive, brake resistor, or connected thermistor.
[22]	Ready,no thermal W	Adjustable frequency drive is ready for operation and there is no overtemperature warning.
[23]	Remote,ready,no TW	Adjustable frequency drive is ready for operation and is in auto on mode. There is no overtemperature warning.
[24]	Ready, Voltage OK	Adjustable frequency drive is ready for operation and the AC line voltage is within the specified voltage range (see General Specifications section in Design Guide).
[25]	Reverse	Logic '1' when CW rotation of the motor. Logic '0' when CCW rotation of the motor. If the motor is not rotating, the output will follow the reference.
[26]	Bus OK	Active communication (no timeout) via the serial communication port.

5-40 Function Relay		
Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105))		
Option:	Function:	
[27]	Torque limit & stop	Use in performing a coasted stop and Adjustable frequency drive in torque limit condition. If the Adjustable frequency drive has received a stop signal and is in torque limit, the signal is Logic '0'.
[28]	Brake, no brake war	Brake is active and there are no warnings.
[29]	Brake ready, no fault	Brake is ready for operation and there are no faults.
[30]	Brake fault (IGBT)	Output is Logic '1' when the brake IGBT is short-circuited. Use this function to protect the Adjustable frequency drive if there is a fault on the brake module. Use the digital output/relay to cut out the AC line voltage from the Adjustable frequency drive.
[31]	Relay 123	Digital output/relay is activated when Control Word [0] is selected in parameter group 8-**.
[32]	Mech brake ctrl	Selection of mechanical brake control. When selected parameters in parameter group 2-2* are active. The output must be reinforced to carry the current for the coil in the brake. Usually solved by connecting an external relay to the selected digital output.
[33]	Safe stop active	(FC 302 only) Indicates that the safe stop on terminal 37 has been activated.
[36]	Control word bit 11	Activate relay 1 by control word from the serial communication bus. No other functional impact in the Adjustable frequency drive. Typical application: controlling auxiliary device from the serial communication bus. The function is valid when FC profile [0] in 8-10 <i>Control Word Profile</i> is selected.
[37]	Control word bit 12	Activate relay 2 FC 302 only) by control word from serial communication bus. No other functional

5-40 Function Relay		
Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105))		
Option:	Function:	
	impact in the Adjustable frequency drive. Typical application: controlling auxiliary device from the serial communication bus. The function is valid when FC profile [0] in <i>8-10 Control Word Profile</i> is selected.	
[38]	Motor feedback error	Failure in the speed feedback loop from motor running in closed-loop. The output can eventually be used to prepare switching the drive in open-loop in emergency case.
[39]	Tracking error	When the difference between calculated speed and actual speed in <i>4-35 Tracking Error</i> is larger than selected the digital output/relay is active.
[40]	Out of ref range	Active when the actual speed is outside settings in <i>4-52 Warning Speed Low</i> to <i>4-55 Warning Reference High</i> .
[41]	Below reference, low	Active when actual speed is below speed reference setting.
[42]	Above ref, high	Active when actual speed is above speed reference setting.
[43]	Extended PID Limit	
[45]	Bus ctrl.	Controls digital output/relay via bus. The state of the output is set in <i>5-90 Digital & Relay Bus Control</i> . The output state is retained in the event of bus timeout.
[46]	Bus ctrl, 1 if timeout	Controls output via bus. The state of the output is set in <i>5-90 Digital & Relay Bus Control</i> . In the event of a bus timeout, the output state is set high (On).
[47]	Bus ctrl, 0 if timeout	Controls output via bus. The state of the output is set in <i>5-90 Digital & Relay Bus Control</i> . In the event of a bus timeout, the output state is set low (Off).
[51]	MCO controlled	Active when a MCO 302 or MCO 305 is connected. The output is controlled from option.


5-40 Function Relay		
Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105))		
Option:	Function:	
[60]	Comparator 0	See parameter group 13-1* (Smart Logic Control). If Comparator 0 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[61]	Comparator 1	See parameter group 13-1* (Smart Logic Control). If Comparator 1 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[62]	Comparator 2	See parameter group 13-1* (Smart Logic Control). If Comparator 2 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[63]	Comparator 3	See parameter group 13-1* (Smart Logic Control). If Comparator 3 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[64]	Comparator 4	See parameter group 13-1* (Smart Logic Control). If Comparator 4 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[65]	Comparator 5	See parameter group 13-1* (Smart Logic Control). If Comparator 5 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[70]	Logic rule 0	See parameter group 13-4*(Smart Logic Control). If Logic Rule 0 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[71]	Logic rule 1	See parameter group 13-4*(Smart Logic Control). If Logic Rule 1 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[72]	Logic rule 2	See parameter group 13-4*(Smart Logic Control). If Logic Rule 2 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[73]	Logic rule 3	See parameter group 13-4*(Smart Logic Control). If Logic Rule 3 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[74]	Logic rule 4	See parameter group 13-4*(Smart Logic Control). If Logic Rule 4 in SLC is TRUE, the output will go high. Otherwise, it will be low.

5-40 Function Relay		
Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105))		
Option:	Function:	
[75]	Logic rule 5	See parameter group 13-4*(Smart Logic Control). If Logic Rule 5 in SLC is TRUE, the output will go high. Otherwise, it will be low.
[80]	SL digital output A	See 13-52 SL Controller Action. Output A is low on Smart Logic Action [32]. Output A is high on Smart Logic Action [38].
[81]	SL digital output B	See 13-52 SL Controller Action. Output B is low on Smart Logic Action [33]. Output B is high on Smart Logic Action [39].
[82]	SL digital output C	See 13-52 SL Controller Action. Output C is low on Smart Logic Action [34]. Output C is high on Smart Logic Action [40].
[83]	SL digital output D	See 13-52 SL Controller Action. Output D is low on Smart Logic Action [35]. Output D is high on Smart Logic Action [41].
[84]	SL digital output E	See 13-52 SL Controller Action. Output E is low on Smart Logic Action [36]. Output E is high on Smart Logic Action [42].
[85]	SL digital output F	See 13-52 SL Controller Action. Output F is low on Smart Logic Action [37]. Output F is high on Smart Logic Action [43].
[120]	Local ref active	Output is high when 3-13 Reference Site = [2] Local or when 3-13 Reference Site = [0] Linked to hand auto at the same time as the LCP is in [Hand on] mode.

5-40 Function Relay				
Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105))				
Option:	Function:			
		Reference site set in 3-13 Reference Site	Local reference active [120]	Remote reference active [121]
		Reference site: Local 3-13 Reference Site [2]	1	0
		Reference site: Remote 3-13 Reference Site [1]	0	1
		Reference site: Linked to Hand/Auto		
		Hand	1	0
		Hand -> off	1	0
		Auto -> off	0	0
		Auto	0	1
[121]	Remote ref active	Output is high when 3-13 Reference Site = Remote [1] or Linked to hand/auto [0] while the LCP is in [Auto on] mode. See above.		
[122]	No alarm	Output is high when no alarm is present.		
[123]	Start command activ	Output is high when the Start command high (i.e., via digital input, bus connection or [Hand on] or [Auto on]), and a Stop has been last command.		
[124]	Running reverse	Output is high when the Adjustable frequency drive is running counter clockwise (the logical product of the status bits 'running' AND 'reverse').		
[125]	Drive in hand mode	Output is high when the Adjustable frequency drive is in [Hand on] mode (as indicated by the LED above [Hand on]).		
[126]	Drive in auto mode	Output is high when the Adjustable frequency drive is in 'Auto' mode (as indicated by LED on above [Auto on]).		


5-40 Function Relay		
Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2] (MCB 113), Relay 4 [3] (MCB 113), Relay 5 [4] (MCB 113), Relay 6 [5] (MCB 113), Relay 7 [6] (MCB 105), Relay 8 [7] (MCB 105), Relay 9 [8] (MCB 105))		
Option:	Function:	
[151]	ATEX ETR cur. alarm	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1.
[152]	ATEX ETR freq. alarm	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1.
[153]	ATEX ETR cur. warning	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1.
[154]	ATEX ETR freq. warning	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1.
[188]	AHF Capacitor Connect	
[189]	External Fan Control	The internal logics for the internal fan control is transferred to this output to make it possible to control an external fan (relevant for HP duct cooling).
[192]	RS Flipflop 0	
[193]	RS Flipflop 1	
[194]	RS Flipflop 2	
[195]	RS Flipflop 3	
[196]	RS Flipflop 4	
[197]	RS Flipflop 5	
[198]	RS Flipflop 6	
[199]	RS Flipflop 7	

5-41 On Delay, Relay		
Array [9], (Relay 1 [0], Relay 2 [1], Relay 3 [2], Relay 4 [3], Relay 5 [4], Relay 6 [5], Relay 7 [6], Relay 8 [7], Relay 9 [8])		
Range:	Function:	
0.01 s*	[0.01 - 600.00 s]	Enter the delay of the relay cut-in time. Select one of available mechanical relays and MCB 105 in an array function. See 5-40 Function Relay. Relay 3-6 are included in MCB 113.

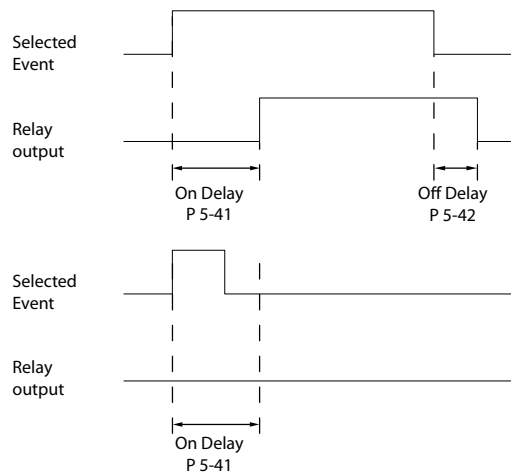

130BA171.10

5-42 Off Delay, Relay		
Array [9] (Relay 1 [0], Relay 2 [1], Relay 3 [2], Relay 4 [3], Relay 5 [4], Relay 6 [5], Relay 7 [6], Relay 8 [7], Relay 9 [8])		
Range:	Function:	
0.01 s*	[0.01 - 600.00 s]	Enter the delay of the relay cut-out time. Select one of available mechanical relays and MCB 105 in an array function. See 5-40 Function Relay.

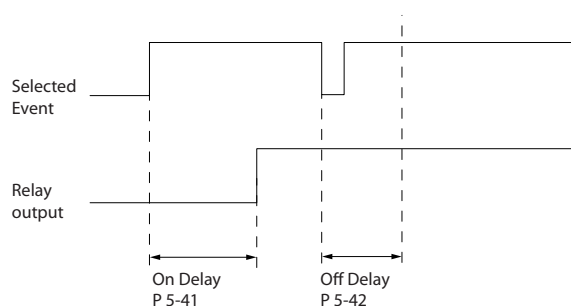


130BA172.10

If the selected event condition changes before the on or off delay timer expires, the relay output is unaffected.

3.7.5 5-5* Pulse Input

The pulse input parameters are used to define an appropriate window for the impulse reference area by configuring the scaling and filter settings for the pulse inputs. Input terminals 29 or 33 act as frequency reference inputs. Set terminal 29 (5-13 Terminal 29 Digital Input) or terminal 33 (5-15 Terminal 33 Digital Input) to Pulse input [32]. If terminal 29 is used as an input, then set 5-01 Terminal 27 Mode to Input [0].

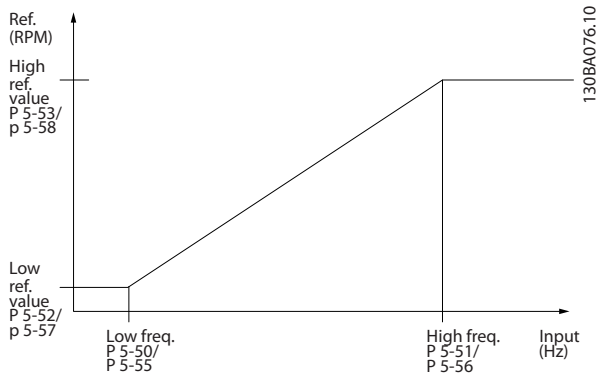

5-50 Term. 29 Low Frequency		
Range:	Function:	
100 Hz* [0 - 110000 Hz]	Enter the low frequency limit corresponding to the low motor shaft speed (i.e., low reference value) in 5-52 Term. 29 Low Ref./Feedb. Value. Refer to the diagram in this section. This parameter is available for FC 302 only.	

5-51 Term. 29 High Frequency		
Range:	Function:	
100 Hz* [0 - 110000 Hz]	Enter the high frequency limit corresponding to the high motor shaft speed (i.e. high reference value) in 5-53 Term. 29 High Ref./Feedb. Value. This parameter is available for FC 302 only.	

5-52 Term. 29 Low Ref./Feedb. Value		
Range:	Function:	
0.000 Reference-FeedbackUnit* [-999999.999 - 999999.999 ReferenceFeed-backUnit]	Enter the low reference value limit for the motor shaft speed [RPM]. This is also the lowest feedback value, see also 5-57 Term. 33 Low Ref./Feedb. Value. Set terminal 29 to digital input (5-02 Terminal 29 Mode =input [0] (default) and 5-13 Terminal 29 Digital Input = applicable value). This parameter is available for FC 302 only.	

5-53 Term. 29 High Ref./Feedb. Value		
Range:	Function:	
Application dependent* [-999999.999 - 999999.999 ReferenceFeed-backUnit]	Enter the high reference value [RPM] for the motor shaft speed and the high feedback value, see also 5-58 Term. 33 High Ref./Feedb. Value. Select terminal 29 as a digital input (5-02 Terminal 29 Mode =input [0] (default) and 5-13 Terminal 29 Digital Input = applicable value). This parameter is available for FC 302 only.	
Application dependent* [-999999.999 - 999999.999 ReferenceFeed-backUnit]		

5-54 Pulse Filter Time Constant #29		
Range:	Function:	
100 ms* [1 - 1000 ms]	Enter the pulse filter time constant. The pulse filter dampens oscillations of the feedback signal, which is an advantage if there is a lot of noise in the system. A high time constant value results in better damping, but also increases the time delay through the filter. This parameter is available for FC 302 only. This parameter cannot be adjusted while the motor is running.	

5-55 Term. 33 Low Frequency		
Range:	Function:	
100 Hz* [0 - 110000 Hz]	Enter the low frequency corresponding to the low motor shaft speed (i.e., low reference value) in 5-57 Term. 33 Low Ref./Feedb. Value.	

5-56 Term. 33 High Frequency		
Range:	Function:	
100 Hz* [0 - 110000 Hz]	Enter the high frequency corresponding to the high motor shaft speed (i.e., high reference value) in 5-58 Term. 33 High Ref./Feedb. Value.	

5-57 Term. 33 Low Ref./Feedb. Value		
Range:		Function:
0.000 *	[-999999.999 - 999999.999]	Enter the low reference value [RPM] for the motor shaft speed. This is also the low feedback value, see also 5-52 Term. 29 Low Ref./Feedb. Value.

5-58 Term. 33 High Ref./Feedb. Value		
Range:		Function:
Application dependent*	[-999999.999 - 999999.999 ReferenceFeedbackUnit]	Enter the high reference value [RPM] for the motor shaft speed. See also 5-53 Term. 29 High Ref./Feedb. Value.
Application dependent*	[-999999.999 - 999999.999 ReferenceFeedbackUnit]	

5-59 Pulse Filter Time Constant #33		
Range:		Function:
100 ms*	[1 - 1000 ms]	Enter the pulse filter time constant. The low-pass filter reduces the influence on, and dampens oscillations in, the feedback signal from the control. This is an advantage, if, for example, there is a great amount of noise in the system.

NOTE!


This parameter cannot be adjusted while the motor is running.

3.7.6 5-6* Pulse Outputs

These parameters are to configure pulse outputs with their functions and scaling. Terminal 27 and 29 are allocated to pulse output via 5-01 Terminal 27 Mode and 5-02 Terminal 29 Mode, respectively.

NOTE!

These parameters cannot be adjusted while the motor is running.

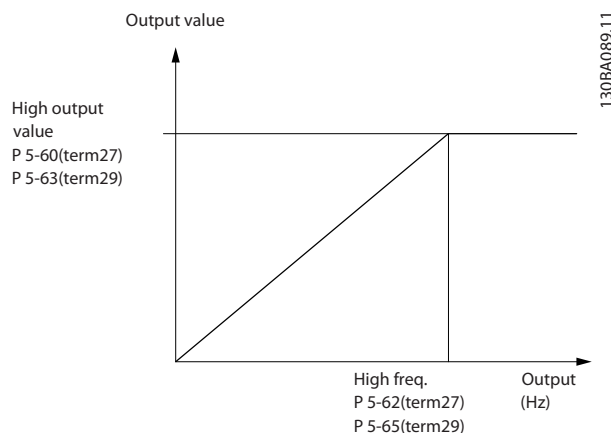

130BA089.11

Options for readout output variables:

		Parameters for configuring the scaling and output functions of pulse outputs. The pulse outputs are designated for terminals 27 or 29. Select terminal 27 output in 5-01 Terminal 27 Mode and terminal 29 output in 5-02 Terminal 29 Mode.
[0]	No operation	
[45]	Bus control	
[48]	Bus control timeout	
[51]	MCO controlled	
[100]	Output frequency	
[101]	Reference	
[102]	Feedback	
[103]	Motor current	
[104]	Torque relative to limit	
[105]	Torque relative to rated	
[106]	Power	
[107]	Speed	
[108]	Torque	
[109]	Max Out Freq	

5-60 Terminal 27 Pulse Output Variable		
Option:		Function:
[0] *	No operation	Select the desired display output for terminal 27.
[45]	Bus ctrl.	
[48]	Bus ctrl., timeout	
[51]	MCO controlled	
[100]	Output frequency	
[101]	Reference	
[102]	Feedback	
[103]	Motor current	
[104]	Torque rel to limit	
[105]	Torq relate to rated	

5-60 Terminal 27 Pulse Output Variable		
Option:	Function:	
[106]	Power	
[107]	Speed	
[108]	Torque	
[109]	Max Out Freq	
[119]	Torque % lim	

5-62 Pulse Output Max Freq #27		
Range:	Function:	
Application dependent*	[0 - 32000 Hz]	Set the maximum frequency for terminal 27, corresponding to the output variable selected in <i>5-60 Terminal 27 Pulse Output Variable</i> .
5000. Hz*	[0 - 32000 Hz]	Set the maximum frequency for terminal 27, corresponding to the output variable selected in <i>5-60 Terminal 27 Pulse Output Variable</i> .

5-63 Terminal 29 Pulse Output Variable		
Option:	Function:	
[0] *	No operation	Select the desired display output for terminal 29. This parameter is available for FC 302 only.
[45]	Bus ctrl.	
[48]	Bus ctrl., timeout	
[51]	MCO controlled	
[100]	Output frequency	
[101]	Reference	
[102]	Feedback	
[103]	Motor current	
[104]	Torque rel to limit	
[105]	Torq relate to rated	
[106]	Power	
[107]	Speed	
[108]	Torque	
[109]	Max Out Freq	
[119]	Torque % lim	

5-65 Pulse Output Max Freq #29		
Set the maximum frequency for terminal 29 corresponding to the output variable set in <i>5-63 Terminal 29 Pulse Output Variable</i> .		
Range:	Function:	
5000 Hz*	[0 - 32000 Hz]	


5-66 Terminal X30/6 Pulse Output Variable		
Select the variable for read-out on terminal X30/6. This parameter is active when option module MCB 101 is installed in the Adjustable frequency drive. Same options and functions as parameter group 5-6*.		
Option:	Function:	
[0] *	No operation	
[45]	Bus ctrl.	
[48]	Bus ctrl., timeout	
[51]	MCO controlled	
[100]	Output frequency	
[101]	Reference	
[102]	Feedback	
[103]	Motor current	
[104]	Torque rel to limit	
[105]	Torq relate to rated	
[106]	Power	
[107]	Speed	
[108]	Torque	
[109]	Max Out Freq	
[119]	Torque % lim	

5-68 Pulse Output Max Freq #X30/6		
Select the maximum frequency on terminal X30/6 referring to the output variable in <i>5-66 Terminal X30/6 Pulse Output Variable</i> . This parameter cannot be adjusted while the motor is running. This parameter is active when option module MCB 101 is mounted in the Adjustable frequency drive.		
Range:	Function:	
Application dependent*	[0 - 32000 Hz]	


3.7.7 5-7* 24 V Encoder Input

Connect the 24 V encoder to terminal 12 (24V DC supply), terminal 32 (Channel A), terminal 33 (Channel B), and terminal 20 (GND). The digital inputs 32/33 are active for encoder inputs when *24V encoder* is selected in *1-02 Flux Motor Feedback Source* and *7-00 Speed PID Feedback Source*. The encoder used is a dual channel (A and B) 24V type. Max input frequency: 110kHz.


Encoder Connection to the Adjustable frequency drive
24V incremental encoder. Max. cable length 16 ft [5 m].

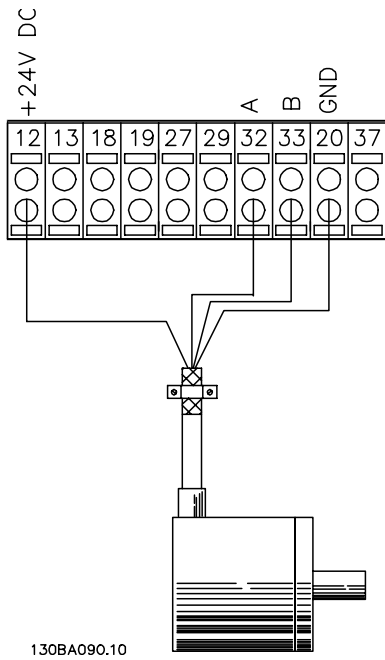

130BA090.10

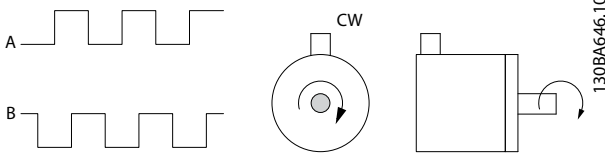

130BA646.10

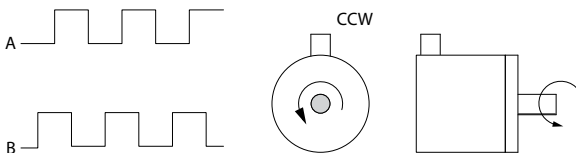

5-70 Term 32/33 Pulses per Revolution		
Range:	Function:	
1024*	[1 - 4096]	Set the encoder pulses per revolution on the motor shaft. Read the correct value from the encoder. This parameter cannot be adjusted while the motor is running.

NOTE!

This parameter cannot be adjusted while the motor is running.

5-71 Term 32/33 Encoder Direction		
Option:	Function:	
[0] *	Clockwise	Change the detected encoder rotation direction without changing the wiring to the encoder. Sets channel A 90° (electrical degrees) behind channel B upon clockwise rotation of the encoder shaft.
[1]	Counter clockwise	Sets channel A 90° (electrical degrees) ahead of channel B upon clockwise rotation of the encoder shaft.

NOTE!

This parameter cannot be adjusted while the motor is running.

3.7.8 5-8* I/O Options

5-80 AHF Cap Reconnect Delay		
Range:	Function:	
25 s*	[1 - 120] s	Guarantees a minimum off-time for the capacitors. The timer starts once the AHF capacitor disconnects and needs to expire before the output is allowed to be on again. It will only turn on again if the drive power is between 20% and 30%.

3.7.9 5-9* Bus Controlled

This parameter group selects digital and relay outputs via a serial communication bus setting.

5-90 Digital & Relay Bus Control		
Range:	Function:	
0*	[0 - 2147483647]	This parameter holds the state of the digital outputs and relays that is controlled by bus. A logical '1' indicates that the output is high or active. A logical '0' indicates that the output is low or inactive.

Bit 0	Digital Output Terminal 27
Bit 1	Digital Output Terminal 29
Bit 2	Digital Output Terminal X 30/6
Bit 3	Digital Output Terminal X 30/7
Bit 4	Relay 1 output terminal
Bit 5	Relay 2 output terminal
Bit 6	Option B Relay 1 output terminal
Bit 7	Option B Relay 2 output terminal
Bit 8	Option B Relay 3 output terminal
Bit 9-15	Reserved for future terminals
Bit 16	Option C Relay 1 output terminal
Bit 17	Option C Relay 2 output terminal
Bit 18	Option C Relay 3 output terminal
Bit 19	Option C Relay 4 output terminal
Bit 20	Option C Relay 5 output terminal
Bit 21	Option C Relay 6 output terminal
Bit 22	Option C Relay 7 output terminal
Bit 23	Option C Relay 8 output terminal
Bit 24-31	Reserved for future terminals

5-93 Pulse Out #27 Bus Control		
Range:		Function:
0.00 %*	[0.00 - 100.00 %]	

5-94 Pulse Out #27 Timeout Preset		
Range:		Function:
0.00 %*	[0.00 - 100.00 %]	

5-95 Pulse Out #29 Bus Control		
Range:		Function:
0.00 %*	[0.00 - 100.00 %]	

5-96 Pulse Out #29 Timeout Preset		
Range:		Function:
0.00 %*	[0.00 - 100.00 %]	

5-97 Pulse Out #X30/6 Bus Control		
Range:		Function:
0.00 %*	[0.00 - 100.00 %]	

5-98 Pulse Out #X30/6 Timeout Preset		
Range:		Function:
0.00 %*	[0.00 - 100.00 %]	

3.8 Parameters: 6-** Analog In/Out

3.8.1 6-0* Analog I/O Mode

The analog inputs can freely be allocated to be either voltage (FC 301: 0..10V, FC 302: 0..+/- 10V) or current (FC 301/FC 302: 0/4..20mA) input.

NOTE!

Thermistors may be connected to either an analog or a digital input.


6-00 Live Zero Timeout Time		
Range:	Function:	
10 s* [1 - 99 s]	Enter the Live Zero Timeout time period. Live Zero Timeout Time is active for analog inputs, i.e., terminal 53 or terminal 54, used as reference or feedback sources. If the reference signal value associated with the selected current input falls below 50% of the value set in <i>6-10 Terminal 53 Low Voltage</i> , <i>6-12 Terminal 53 Low Current</i> , <i>6-20 Terminal 54 Low Voltage</i> or <i>6-22 Terminal 54 Low Current</i> for a time period longer than the time set in <i>6-00 Live Zero Timeout Time</i> , the function selected in <i>6-01 Live Zero Timeout Function</i> will be activated.	

6-01 Live Zero Timeout Function		
Option:	Function:	
	Select the timeout function. The function set in <i>6-01 Live Zero Timeout Function</i> will be activated if the input signal on terminal 53 or 54 is below 50% of the value in <i>6-10 Terminal 53 Low Voltage</i> , <i>6-12 Terminal 53 Low Current</i> , <i>6-20 Terminal 54 Low Voltage</i> or <i>6-22 Terminal 54 Low Current</i> for a time period defined in <i>6-00 Live Zero Timeout Time</i> . If several timeouts occur simultaneously, the Adjustable frequency drive prioritizes the timeout functions as follows: <ol style="list-style-type: none"> 6-01 Live Zero Timeout Function 8-04 Control Word Timeout Function 	
[0] *	Off	
[1]	Freeze output	Frozen at the present value
[2]	Stop	Overruled to stop
[3]	Jogging	Overruled to jog speed
[4]	Max. speed	Overruled to max. speed
[5]	Stop and trip	Overruled to stop with subsequent trip
[20]	Coast	

6-01 Live Zero Timeout Function		
Option:	Function:	
[21]	Coast and trip	

3.8.2 6-1* Analog Input 1

Parameters for configuring the scaling and limits for analog input 1 (terminal 53).

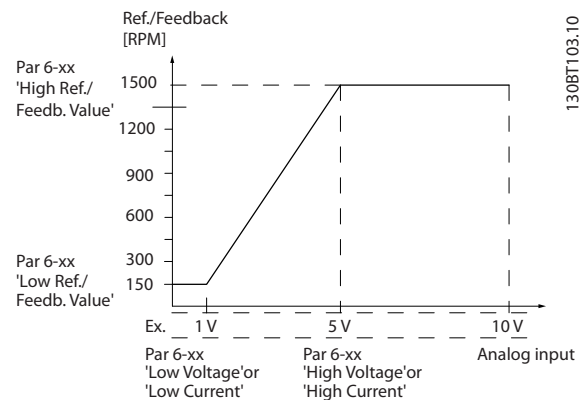

6-10 Terminal 53 Low Voltage		
Range:	Function:	
0.07 V*	[Application dependant]	Enter the low voltage value. This analog input scaling value should correspond to the minimum reference value, set in <i>6-14 Terminal 53 Low Ref./Feedb. Value</i> . See also the section <i>Reference Handling</i> .

6-11 Terminal 53 High Voltage		
Range:	Function:	
10.00 V*	[par. 6-10 - 10.00 V]	Enter the high voltage value. This analog input scaling value should correspond to the high reference/ feedback value set in <i>6-15 Terminal 53 High Ref./Feedb. Value</i> .

6-12 Terminal 53 Low Current		
Range:	Function:	
0.14 mA*	[Application dependant]	Enter the low current value. This reference signal should correspond to the minimum reference value, set in <i>3-02 Minimum Reference</i> . The value must be set at >2mA in order to activate the Live Zero Timeout Function in <i>6-01 Live Zero Timeout Function</i> .

6-13 Terminal 53 High Current		
Range:	Function:	
20.00 mA*	[par. 6-12 - 20.00 mA]	Enter the high current value corresponding to the high reference/feedback set in <i>6-15 Terminal 53 High Ref./Feedb. Value</i> .

6-14 Terminal 53 Low Ref./Feedb. Value		
Range:	Function:	
0.000 *	[-999999.999 - 999999.999]	Enter the analog input scaling value that corresponds to the low voltage/low current set in <i>6-10 Terminal 53 Low Voltage</i> and <i>6-12 Terminal 53 Low Current</i> .

6-15 Terminal 53 High Ref./Feedb. Value		
Range:	Function:	
Application dependent*	[-999999.999 - 999999.999 ReferenceFeed-backUnit]	Enter the analog input scaling value that corresponds to the maximum reference feedback value set in <i>6-11 Terminal 53 High Voltage</i> and <i>6-13 Terminal 53 High Current</i> .
Application dependent*	[-999999.999 - 999999.999 ReferenceFeed-backUnit]	Enter the analog input scaling value that corresponds to the maximum reference feedback value set in <i>6-11 Terminal 53 High Voltage</i> and <i>6-13 Terminal 53 High Current</i> .

6-16 Terminal 53 Filter Time Constant		
Range:	Function:	
0.001 s*	[0.001 - 10.000 s]	Enter the time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal 53. A high time constant value improves dampening but also increases the time delay through the filter.

NOTE!

This parameter cannot be adjusted while the motor is running.

3.8.3 6-2* Analog Input 2

Parameters for configuring the scaling and limits for analog input 2 (terminal 54).

6-20 Terminal 54 Low Voltage		
Range:	Function:	
0.07 V*	[Application dependant]	Enter the low voltage value. This analog input scaling value should correspond to the minimum reference value, set in <i>3-02 Minimum Reference</i> . See also the section <i>Reference Handling</i> .

6-21 Terminal 54 High Voltage		
Range:	Function:	
10.00 V*	[par. 6-20 - 10.00 V]	Enter the high voltage value. This analog input scaling value should correspond to the high reference/feedback value set in <i>6-25 Terminal 54 High Ref./Feedb. Value</i> .

6-22 Terminal 54 Low Current		
Range:	Function:	
0.14 mA*	[Application dependant]	Enter the low current value. This reference signal should correspond to the minimum reference value, set in <i>3-02 Minimum Reference</i> . The value must be set at >2mA in order to activate the Live Zero Timeout Function in <i>6-01 Live Zero Timeout Function</i> .

6-23 Terminal 54 High Current		
Range:	Function:	
20.00 mA*	[par. 6-22 - 20.00 mA]	Enter the high current value corresponding to the high reference/feedback value set in <i>6-25 Terminal 54 High Ref./Feedb. Value</i> .

6-24 Terminal 54 Low Ref./Feedb. Value		
Range:	Function:	
0 ReferenceFeed-backUnit*	[-999999.999 - 999999.999 ReferenceFeed-backUnit]	Enter the analog input scaling value that corresponds to the minimum reference feedback value set in <i>3-02 Minimum Reference</i> .

6-25 Terminal 54 High Ref./Feedb. Value		
Range:		Function:
Application dependent*	[-999999.999 - 999999.999 ReferenceFeed-backUnit]	Enter the analog input scaling value that corresponds to the maximum reference feedback value set in 3-03 <i>Maximum Reference</i> .
Application dependent*	[-999999.999 - 999999.999 ReferenceFeed-backUnit]	Enter the analog input scaling value that corresponds to the maximum reference feedback value set in 3-03 <i>Maximum Reference</i> .

6-26 Terminal 54 Filter Time Constant		
Range:		Function:
0.001 s*	[0.001 - 10.000 s]	Enter the time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal 54. A high time constant value improves dampening but also increases the time delay through the filter.

NOTE!

This parameter cannot be adjusted while the motor is running.

3.8.4 6-3* Analog Input 3 MCB 101

Parameter group for configuring the scale and limits for analog input 3 (X30/11) placed on option module MCB 101.

6-30 Terminal X30/11 Low Voltage		
Range:		Function:
0.07 V*	[0.00 - par. 6-31 V]	Sets the analog input scaling value to correspond to the low reference/feedback value (set in 6-34 <i>Term. X30/11 Low Ref./Feedb. Value</i>).

6-31 Terminal X30/11 High Voltage		
Range:		Function:
10.00 V*	[par. 6-30 - 10.00 V]	Sets the analog input scaling value to correspond to the high reference/feedback value (set in 6-35 <i>Term. X30/11 High Ref./Feedb. Value</i>).

6-34 Term. X30/11 Low Ref./Feedb. Value		
Range:		Function:
0.000 *	[-999999.999 - 999999.999]	Sets the analog input scaling value to correspond to the low voltage value (set in 6-30 <i>Terminal X30/11 Low Voltage</i>).

6-35 Term. X30/11 High Ref./Feedb. Value		
Range:		Function:
100.000 *	[-999999.999 - 999999.999]	Sets the analog input scaling value to correspond to the high voltage value (set in 6-31 <i>Terminal X30/11 High Voltage</i>).

6-36 Term. X30/11 Filter Time Constant		
Range:		Function:
0.001 s*	[0.001 - 10.000 s]	A 1 st order digital low pass filter time constant for suppressing electrical noise on terminal X30/11.

NOTE!

This parameter cannot be changed while the motor is running.

3.8.5 6-4* Analog Input 4 MCB 101

Parameter group for configuring the scale and limits for analog input 4 (X30/12) placed on option module MCB 101.

6-40 Terminal X30/12 Low Voltage		
Range:		Function:
0.07 V*	[0.00 - par. 6-41 V]	Sets the analog input scaling value to correspond to the low reference/feedback value set in 6-44 <i>Term. X30/12 Low Ref./Feedb. Value</i> .

6-41 Terminal X30/12 High Voltage		
Range:		Function:
10.00 V*	[par. 6-40 - 10.00 V]	Sets the analog input scaling value to correspond to the high reference/feedback value set in 6-45 <i>Term. X30/12 High Ref./Feedb. Value</i> .

6-44 Term. X30/12 Low Ref./Feedb. Value		
Range:		Function:
0.000 *	[-999999.999 - 999999.999]	Sets the analog output scaling value to correspond to the low voltage value set in 6-40 <i>Terminal X30/12 Low Voltage</i> .

6-45 Term. X30/12 High Ref./Feedb. Value		
Range:	Function:	
100.000 *	[-999999.999 - 999999.999]	Sets the analog input scaling value to correspond to the high voltage value set in <i>6-41 Terminal X30/12 High Voltage</i> .

6-46 Term. X30/12 Filter Time Constant		
Range:	Function:	
0.001 s*	[0.001 - 10.000 s]	A 1 st order digital low pass filter time constant for suppressing electrical noise on terminal X30/12.

NOTE!

This parameter cannot be changed while the motor is running.

3.8.6 6-5* Analog Output 1

Parameters for configuring the scaling and limits for analog output 1, i.e., Terminal 42. Analog outputs are current outputs: 0/4 – 20mA. Common terminal (terminal 39) is the same terminal and has the same electrical potential for analog common and digital common connection. Resolution on analog output is 12 bit.

6-50 Terminal 42 Output		
Option:	Function:	
		Select the function of Terminal 42 as an analog current output. Depending on the selection the output is either a 0-20mA or 4-20mA output. The current value can be read out in LCP in <i>16-65 Analog Output 42 [mA]</i> .
[0] *	No operation	When no signal on the analog output.
[52]	MCO 0-20mA	
[53]	MCO 4-20mA	
[100]	Output frequency	0Hz = 0mA; 100Hz = 20mA.
[101]	Reference	<i>3-00 Reference Range</i> [Min - Max] 0% = 0mA; 100% = 20mA <i>3-00 Reference Range</i> [-Max - Max] -100% = 0mA; 0% = 10mA; +100% = 20 mA
[102]	Feedback	
[103]	Motor current	Value is taken from <i>16-37 Inv. Max. Current</i> . Inverter max. current (160% current) is equal to 20mA.


6-50 Terminal 42 Output		
Option:	Function:	
		Example: Inverter norm current (11kW) = 24A. 160% = 38.4A. Motor norm current = 22A Readout 11.46mA. $\frac{20 \text{ mA} \times 22 \text{ A}}{38.4 \text{ A}} = 11.46 \text{ mA}$ In case the norm motor current is equal to 20mA, the output setting of <i>6-52 Terminal 42 Output Max Scale</i> is: $\frac{I_{VLT_Max} \times 100}{I_{Motor_Norm}} = \frac{38.4 \times 100}{22} = 175 \%$
[104]	Torque rel to limit	The torque setting is related to setting in <i>4-16 Torque Limit Motor Mode</i>
[105]	Torq relate to rated	The torque is related to the motor torque setting.
[106]	Power	Taken from <i>1-20 Motor Power [kW]</i> .
[107]	Speed	Taken from <i>3-03 Maximum Reference</i> . 20mA = value in <i>3-03 Maximum Reference</i>
[108]	Torque	Torque reference related to 160% torque.
[109]	Max Out Freq	0Hz = 0mA, <i>4-19 Max Output Frequency</i> = 20mA.
[113]	PID Clamped Output	
[119]	Torque % lim	
[130]	Output freq. 4-20mA	0Hz = 4mA, 100Hz = 20mA
[131]	Reference 4-20mA	<i>3-00 Reference Range</i> [Min-Max] 0% = 4mA; 100% = 20mA <i>3-00 Reference Range</i> [-Max-Max] -100% = 4mA; 0% = 12 mA; +100% = 20 mA
[132]	Feedback 4-20mA	
[133]	Motor cur. 4-20mA	Value is taken from <i>16-37 Inv. Max. Current</i> . Inverter max. current (160% current) is equal to 20mA. Example: Inverter norm current (11kW) = 24A. 160% = 38.4A. Motor norm current = 22A Readout 11.46mA. $\frac{16 \text{ mA} \times 22 \text{ A}}{38.4 \text{ A}} + 4 \text{ mA} = 13.17 \text{ mA}$ In case the norm motor current is equal to 20mA, the output setting of <i>6-62 Terminal X30/8 Max. Scale</i> is: $\frac{I_{VLT_Max} \times 100}{I_{Motor_Norm}} = \frac{38.4 \times 100}{22} = 175 \%$

6-50 Terminal 42 Output		
Option:	Function:	
[134] Torq.% lim 4-20 mA	The torque setting is related to setting in 4-16 Torque Limit Motor Mode.	
[135] Torq.% nom 4-20 mA	The torque setting is related to the motor torque setting.	
[136] Power 4-20mA	Taken from 1-20 Motor Power [kW]	
[137] Speed 4-20mA	Taken from 3-03 Maximum Reference. 20mA = Value in 3-03 Maximum Reference.	
[138] Torque 4-20mA	Torque reference related to 160% torque.	
[139] Bus ctrl. 0-20 mA	An output value set from serial communication bus process data. The output will work independently of internal functions in the Adjustable frequency drive.	
[140] Bus ctrl. 4-20 mA	An output value set from serial communication bus process data. The output will work independently of internal functions in the Adjustable frequency drive.	
[141] Bus ctrl 0-20mA t.o.	4-54 Warning Reference Low defines the behavior of the analog output in case of bus timeout.	
[142] Bus ctrl 4-20mA t.o.	4-54 Warning Reference Low defines the behavior of the analog output in case of bus timeout.	
[149] Torque % lim 4-20mA	<p>Analog output at zero torque = 12mA. Motoric torque will increase the output current to max torque limit 20mA (set in 4-16 Torque Limit Motor Mode). Generative torque will decrease the output to torque limit Generator Mode (set in 4-17 Torque Limit Generator Mode)</p> <p>Ex: 4-16 Torque Limit Motor Mode : 200% and 4-17 Torque Limit Generator Mode: 200%. 20mA = 200% Motoric and 4mA = 200% Generative.</p>	
[150] Max Out Fr 4-20mA	0Hz = 0mA, 4-19 Max Output Frequency = 20mA.	

6-51 Terminal 42 Output Min Scale		
Range:	Function:	
0.00 %*	[0.00 - 200.00 %]	

6-52 Terminal 42 Output Max Scale		
Range:	Function:	
100.00 %*	[0.00 - 200.00 %]	

20 mA / desired maximum current x 100 %
 i.e. 10 mA : $\frac{20}{10} \times 100 = 200\%$

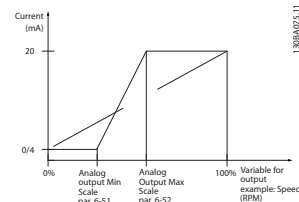

3

6-53 Terminal 42 Output Bus Control		
Range:	Function:	
0.00 %*	[0.00 - 100.00 %]	

6-54 Terminal 42 Output Timeout Preset		
Range:	Function:	
0.00 %*	[0.00 - 100.00 %]	

6-55 Analog Output Filter																				
Option:	Function:																			
	The following readout analog parameters from selection in 6-50 Terminal 42 Output have a filter selected when 6-55 Analog Output Filter is on:																			
		<table border="1"> <thead> <tr> <th>Selection</th> <th>0-20mA</th> <th>4-20mA</th> </tr> </thead> <tbody> <tr> <td>Motor current (0 - I_{max})</td> <td>[103]</td> <td>[133]</td> </tr> <tr> <td>Torque limit (0 - T_{lim})</td> <td>[104]</td> <td>[134]</td> </tr> <tr> <td>Rated torque (0 - T_{nom})</td> <td>[105]</td> <td>[135]</td> </tr> <tr> <td>Power (0 - P_{nom})</td> <td>[106]</td> <td>[136]</td> </tr> <tr> <td>Speed (0 - Speedmax)</td> <td>[107]</td> <td>[137]</td> </tr> </tbody> </table>	Selection	0-20mA	4-20mA	Motor current (0 - I _{max})	[103]	[133]	Torque limit (0 - T _{lim})	[104]	[134]	Rated torque (0 - T _{nom})	[105]	[135]	Power (0 - P _{nom})	[106]	[136]	Speed (0 - Speedmax)	[107]	[137]
Selection	0-20mA	4-20mA																		
Motor current (0 - I _{max})	[103]	[133]																		
Torque limit (0 - T _{lim})	[104]	[134]																		
Rated torque (0 - T _{nom})	[105]	[135]																		
Power (0 - P _{nom})	[106]	[136]																		
Speed (0 - Speedmax)	[107]	[137]																		
[0] *	Off	Filter off																		
[1]	On	Filter on																		

3.8.7 6-6* Analog Output 2 MCB 101

Analog outputs are current outputs: 0/4 - 20mA. Common terminal (terminal X30/8) is the same terminal and electrical potential for analog common connection. Resolution on analog output is 12 bit.

6-60 Terminal X30/8 Output		
Option:	Function:	
	Select the function of Terminal X30/8 as an analog current output. Depending on the selection the output is either a 0-20mA or 4-20mA output. The current value can be	

6-60 Terminal X30/8 Output		
Option:	Function:	
		read out in LCP in 16-65 Analog Output 42 [mA].
[0] *	No operation	When no signal on the analog output.
[52]	MCO 0-20mA	
[100]	Output frequency	0hz = 0mA; 100hz = 20mA.
[101]	Reference	3-00 Reference Range [Min - Max] 0% = 0mA; 100% = 20mA 3-00 Reference Range [-Max - Max] -100% = 0mA; 0% = 10mA; +100% = 20 mA
[102]	Feedback	
[103]	Motor current	Value is taken from 16-37 Inv. Max. Current. Inverter max. current (160% current) is equal to 20mA. Example: Inverter norm current (15 hp [11 kW]) = 24 A. 160% = 38.4 A. Motor norm current = 22 A Readout 11.46mA. $\frac{20 \text{ mA} \times 22 \text{ A}}{38.4 \text{ A}} = 11.46 \text{ mA}$ If the norm motor current is equal to 20mA, the output setting of 6-62 Terminal X30/8 Max. Scale is: $\frac{I_{VLT_Max} \times 100}{I_{Motor\ Norm}} = \frac{38.4 \times 100}{22} = 175 \%$
[104]	Torque rel to limit	The torque setting is related to setting in 4-16 Torque Limit Motor Mode.
[105]	Torq relate to rated	The torque is related to the motor torque setting.
[106]	Power	Taken from 1-20 Motor Power [kW].
[107]	Speed	Taken from 3-03 Maximum Reference. 20mA = value in 3-03 Maximum Reference
[108]	Torque	Torque reference related to 160% torque.
[109]	Max Out Freq	In relation to 4-19 Max Output Frequency.
[113]	PID Clamped Output	
[119]	Torque % lim	
[130]	Output freq. 4-20mA	0hz = 4mA, 100hz = 20mA

6-60 Terminal X30/8 Output		
Option:	Function:	
[131]	Reference 4-20mA	3-00 Reference Range [Min-Max] 0% = 4mA; 100% = 20mA 3-00 Reference Range [-Max-Max] -100% = 4mA; 0% = 12 mA; +100% = 20 mA
[132]	Feedback 4-20mA	
[133]	Motor cur. 4-20mA	Value is taken from 16-37 Inv. Max. Current. Inverter max. current (160% current) is equal to 20mA. Example: Inverter norm current (15 hp [11 kW]) = 24 A. 160% = 38.4 A. Motor norm current = 22 A Readout 11.46mA. $\frac{16 \text{ mA} \times 22 \text{ A}}{38.4 \text{ A}} = 9.17 \text{ mA}$ If the norm motor current is equal to 20mA, the output setting of 6-62 Terminal X30/8 Max. Scale is: $\frac{I_{VLT_Max} \times 100}{I_{Motor\ Norm}} = \frac{38.4 \times 100}{22} = 175 \%$
[134]	Torq.% lim 4-20 mA	The torque setting is related to setting in 4-16 Torque Limit Motor Mode.
[135]	Torq.% nom 4-20 mA	The torque setting is related to the motor torque setting.
[136]	Power 4-20mA	Taken from 1-20 Motor Power [kW]
[137]	Speed 4-20mA	Taken from 3-03 Maximum Reference. 20mA = Value in 3-03 Maximum Reference.
[138]	Torque 4-20mA	Torque reference related to 160% torque.
[139]	Bus ctrl. 0-20 mA	An output value set from serial communication bus process data. The output will work independently of internal functions in the Adjustable frequency drive.
[140]	Bus ctrl. 4-20 mA	An output value set from serial communication bus process data. The output will work independently of internal functions in the Adjustable frequency drive.
[141]	Bus ctrl 0-20mA t.o.	4-54 Warning Reference Low defines the behavior of the analog output in case of bus timeout.
[142]	Bus ctrl 4-20mA t.o.	4-54 Warning Reference Low defines the behavior of the analog output in case of bus timeout.
[149]	Torque % lim 4-20mA	Torque% Lim 4-20mA: Torque reference. 3-00 Reference Range [Min-Max] 0% = 4mA; 100% = 20mA

6-60 Terminal X30/8 Output		
Option:	Function:	
	3-00 Reference Range [-Max - Max] -100% = 4mA; 0% = 12 mA; +100% = 20 mA	
[150]	Max Out Fr 4-20mA	In relation to 4-19 Max Output Frequency.

6-61 Terminal X30/8 Min. Scale		
Range:	Function:	
0.00 %*	[0.00 - 200.00 %]	

6-62 Terminal X30/8 Max. Scale		
Range:	Function:	
100.00 %*	[0.00 - 200.00 %]	

$20 \text{ mA} / \text{desired maximum current} \times 100 \%$

i.e. $10 \text{ mA} : \frac{20 - 4}{10} \times 100 = 160 \%$

6-63 Terminal X30/8 Bus Control		
Range:	Function:	
0.00 %*	[0.00 - 100.00 %]	

6-64 Terminal X30/8 Output Timeout Preset		
Range:	Function:	
0.00 %*	[0.00 - 100.00 %]	

3.8.8 6-7* Analog Output 3 MCB 113

Parameters for configuring the scaling and limits for analog output 3, Terminal X45/1 and X45/2. Analog outputs are current outputs: 0/4 – 20mA. Resolution on analog output is 11 bit.

6-70 Terminal X45/1 Output		
Option:	Function:	
	Select the function of Terminal X45/1 as an analog current output.	
[0]	No operation	When no signal on the analog output.
[52]	MCO 305 0-20mA	
[53]	MCO 305 4-20mA	
[100]	Output frequency 0-20mA	0hz = 0mA; 100hz = 20mA.
[101]	Reference 0-20mA	3-00 Reference Range [Min - Max] 0% = 0mA; 100% = 20mA 3-00 Reference Range [-Max - Max] -100% = 0mA; 0% = 10mA; +100% = 20 mA
[102]	Feedback	
[103]	Motor current 0-20mA	Value is taken from 16-37 Inv. Max. Current. Inverter max. current (160% current) is equal to 20mA.


6-70 Terminal X45/1 Output		
Option:	Function:	
	Example: Inverter norm current (15 hp [11 kW]) = 24 A. 160% = 38.4 A. Motor norm current = 22 A Readout 11.46mA. $\frac{20 \text{ mA} \times 22 \text{ A}}{38.4 \text{ A}} = 11.46 \text{ mA}$ If the norm motor current is equal to 20mA, the output setting of 6-52 Terminal 42 Output Max Scale is: $\frac{I_{VLT \text{ Max}} \times 100}{I_{\text{Motor Norm}}} = \frac{38.4 \times 100}{22} = 175 \%$	
[104]	Torque rel to lim 0-20mA	The torque setting is related to setting in 4-16 Torque Limit Motor Mode
[105]	Torque rel to rated motor torque 0-20mA	The torque is related to the motor torque setting.
[106]	Power 0-20mA	Taken from 1-20 Motor Power [kW].
[107]	Speed 0-20mA	Taken from 3-03 Maximum Reference. 20mA = value in 3-03 Maximum Reference
[108]	Torque ref. 0-20mA	Torque reference related to 160% torque.
[109]	Max Out Freq 0-20mA	In relation to 4-19 Max Output Frequency.
[130]	Output freq. 4-20 mA	0hz = 4mA, 100hz = 20mA
[131]	Reference 4-20 mA	3-00 Reference Range [Min-Max] 0% = 4mA; 100% = 20mA 3-00 Reference Range [-Max-Max] -100% = 4mA; 0% = 12 mA; +100% = 20 mA
[132]	Feedback 4-20 mA	
[133]	Motor cur. 4-20 mA	Value is taken from 16-37 Inv. Max. Current. Inverter max. current (160% current) is equal to 20mA. Example: Inverter norm current (15 hp [11 kW]) = 24 A. 160% = 38.4 A. Motor norm current = 22 A Readout 11.46mA. $\frac{16 \text{ mA} \times 22 \text{ A}}{38.4 \text{ A}} = 9.17 \text{ mA}$ If the norm motor current is equal to 20mA, the output setting of 6-52 Terminal 42 Output Max Scale is: $\frac{I_{VLT \text{ Max}} \times 100}{I_{\text{Motor Norm}}} = \frac{38.4 \times 100}{22} = 175 \%$
[134]	Torque% lim. 4-20mA	The torque setting is related to setting in 4-16 Torque Limit Motor Mode.

6-70 Terminal X45/1 Output		
Option:	Function:	
[135]	Torque% nom 4-20mA	The torque setting is related to the motor torque setting.
[136]	Power 4–20 mA	Taken from 1-20 Motor Power [kW]
[137]	Speed 4–20 mA	Taken from 3-03 Maximum Reference. 20mA = Value in 3-03 Maximum Reference.
[138]	Torque 4–20 mA	Torque reference related to 160% torque.
[139]	Bus ctrl. 0-20 mA	An output value set from the serial communication bus process data. The output will work independently of internal functions in the Adjustable frequency drive.
[140]	Bus ctrl. 4-20 mA	An output value set from the serial communication bus process data. The output will work independently of internal functions in the Adjustable frequency drive.
[141]	Bus ctrl. 0-20mA, timeout	4-54 Warning Reference Low defines the behavior of the analog output in case of bus timeout.
[142]	Bus ctrl. 4-20mA, timeout	4-54 Warning Reference Low defines the behavior of the analog output in case of bus timeout.
[150]	Max Out Freq 4-20mA	In relation to 4-19 Max Output Frequency.

6-71 Terminal X45/1 Output Min Scale		
Range:	Function:	
0.00%*	[0.00– 200.00%]	Scale the minimum output of the selected analog signal at terminal X45/1 as a percentage of the maximum signal value, e.g., if 0mA (or 0hz) is desired at 25% of the maximum output value, then program 25%. Scaling values up to 100% can never be higher than the corresponding setting in 6-72 Terminal X45/1 Max. Scale.

6-72 Terminal X45/1 Output Max Scale		
Range:	Function:	
100%*	[0.00– 200.00%]	Scale the maximum output of the selected analog signal at terminal X45/1. Set the value to the maximum value of the current signal output. Scale the output to give a current lower than 20 mA at full scale, or 20 mA at an output below 100% of the maximum signal value. If 20mA is the desired output current at a value between 0–100% of the full-scale output, program the percentage value in the parameter, i.e., 50% = 20mA. If a current between 4 and 20mA is desired at

6-72 Terminal X45/1 Output Max Scale		
Range:	Function:	
	maximum output (100%), calculate the percentage value as follows (example where desired max. output is 10mA):	
	$\frac{I_{RANGE} [mA]}{I_{DESIRED MAX} [mA]} \times 100\%$ $= \frac{20 - 4 mA}{10 mA} \times 100\% = 160\%$	

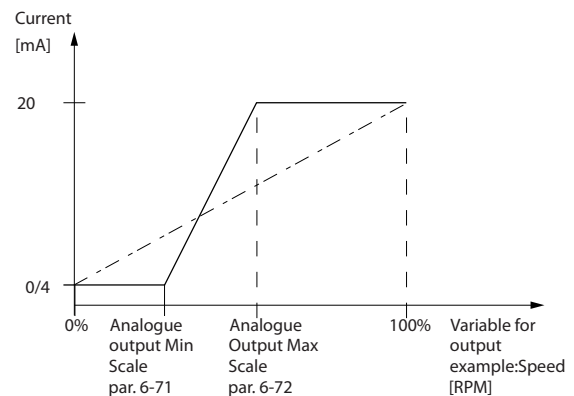

6-73 Terminal X45/1 Output Bus Control		
Range:	Function:	
0.00%*	[0.00–100.00%]	Holds the level of Analog Output 3 (terminal X45/1) if controlled by bus.

6-74 Terminal X45/1 Output Timeout Preset		
Range:	Function:	
0.00%*	[0.00– 100.00%]	Holds the preset level of Analog Output 3 (terminal X45/1). In case of a bus timeout and a timeout function is selected in 6-70 Terminal X45/1 Output the output will preset to this level.

3.8.9 6-8* Analog Output 4 MCB 113

Parameters for configuring the scaling and limits for analog output 4. Terminal X45/3 and X45/4. Analog outputs are current outputs: 0/4 – 20mA. Resolution on analog output is 11 bit.

6-80 Terminal X45/3 Output		
Option:	Function:	
		Select the function of Terminal X45/3 as an analog current output.
[0] *	No operation	Same selections available as for 6-70 Terminal X45/1 Output

6-81 Terminal X45/3 Output Min Scale

Option:	Function:
[0.00%] * 0.00– 200.00%	Scales the minimum output of the selected analog signal on terminal X45/3. Scale the minimum value as a percentage of the maximum signal value, i.e., 0mA (or 0hz) is desired at 25% of the maximum output value and 25% is programmed. The value can never be higher than the corresponding setting in <i>6-82 Terminal X45/3 Max. Scale</i> if value is below 100%. This parameter is active when option module MCB 113 is mounted in the Adjustable frequency drive.

6-82 Terminal X45/3 Output Max Scale

Option:	Function:
[0.00%] * 0.00– 200.00%	Scales the maximum output of the selected analog signal on terminal X45/3. Scale the value to the desired maximum value of the current signal output. Scale the output to give a lower current than 20mA at full scale or 20mA at an output below 100% of the maximum signal value. If 20mA is the desired output current at a value between 0–100% of the full-scale output, program the percentage value in the parameter, i.e., 50% = 20mA. If a current between 4 and 20mA is desired at maximum output (100%), calculate the percentage value as follows (example where desired max. output is 10mA):
	$\frac{I_{RANGE} [mA]}{I_{DESIRED MAX} [mA]} \times 100 \%$ $= \frac{20 - 4 mA}{10 mA} \times 100 \% = 160 \%$

6-83 Terminal X45/3 Output Bus Control

Option:	Function:
[0.00%] * 0.00–100.00%	Holds the level of output 4 (X45/3) if controlled by bus.

6-84 Terminal X45/3 Output Timeout Preset

Option:	Function:
[0.00%] * 0.00–100.00%	Holds the present level of output 4 (X45/3). If a bus timeout and a timeout function are selected in <i>6-80 Terminal X45/3 Output</i> , the output will preset to this level.

3.9 Parameters: 7-** Controllers

3.9.1 7-0* Speed PID Ctrl.

7-00 Speed PID Feedback Source		
Option:	Function:	
		Select the encoder for closed-loop feedback. The feedback may come from a different encoder (typically mounted on the application itself) than the motor mounted encoder feedback selected in <i>1-02 Flux Motor Feedback Source</i> .
[0] *	Motor feedb. P1-02	
[1]	24V encoder	
[2]	MCB 102	
[3]	MCB 103	
[4]	MCO Encoder 1 X56	
[5]	MCO Encoder 2 X55	
[6]	Analog input 53	
[7]	Analog input 54	
[8]	Frequency input 29	
[9]	Frequency input 33	

NOTE!

This parameter cannot be adjusted while the motor is running.

NOTE!

If separate encoders are used (FC 302 only), the ramp settings parameters in the following groups: 3-4*, 3-5*, 3-6*, 3-7* and 3-8* must be adjusted according to the gear ratio between the two encoders.

7-02 Speed PID Proportional Gain		
Range:	Function:	
Application dependent*	[0.000 - 1.000]	Enter the speed controller proportional gain. The proportional gain amplifies the error (i.e., the deviation between the feedback signal and the setpoint). This parameter is used with <i>1-00 Configuration Mode Speed open-loop</i> [0] and <i>Speed closed-loop</i> [1] control. Quick control is obtained at high amplification. However, if the amplification is too great, the process may become unstable. Use this parameter for values with three decimals. For a selection with four decimals, use <i>3-83 Quick Stop S-ramp Ratio at Decel. Start</i> .

7-02 Speed PID Proportional Gain		
Range:	Function:	
0 N/A*	[0.000 - 1.000 N/A]	Enter the speed controller proportional gain. The proportional gain amplifies the error (i.e., the deviation between the feedback signal and the setpoint). This parameter is used with <i>1-00 Configuration Mode Speed open-loop</i> [0] and <i>Speed closed-loop</i> [1] control. Quick control is obtained at high amplification. However, if the amplification is too great, the process may become unstable. If the selection is xxx.xxx, use this parameter. If the selection is xxx.xxxx, use <i>3-83 Quick Stop S-ramp Ratio at Decel. Start</i> .

7-03 Speed PID Integral Time		
Range:	Function:	
Application dependent*	[2.0 - 20000.0 ms]	
Application dependent*	[2.0 - 20000.0 ms]	Enter the speed controller integral time, which determines the time the internal PID control takes to correct errors. The greater the error, the more quickly the gain increases. The integral time causes a delay of the signal and therefore a damping effect, and can be used to eliminate steady state speed error. Obtain quick control through a short integral time, though if the integral time is too short, the process becomes unstable. An excessively long integral time disables the integral action, leading to major deviations from the required reference, since the process regulator takes too long to regulate errors. This parameter is used with <i>Speed open-loop</i> [0] and <i>Speed closed-loop</i> [1] control, set in <i>1-00 Configuration Mode</i> .

7-04 Speed PID Differentiation Time		
Range:	Function:	
Application dependent*	[0.0 - 200.0 ms]	Enter the speed controller differentiation time. The differentiator does not react to constant error. It provides gain proportional to the rate of change of the speed feedback. The quicker the error changes, the stronger the gain from the differen-


7-04 Speed PID Differentiation Time		
Range:		Function:
		tiator. The gain is proportional with the speed at which errors change. Setting this parameter to zero disables the differentiator. This parameter is used with <i>1-00 Configuration Mode Speed closed-loop</i> [1] control.
Application dependent*	[0.0 - 200.0 ms]	Enter the speed controller differentiation time. The differentiator does not react to constant error. It provides gain proportional to the rate of change of the speed feedback. The quicker the error changes, the stronger the gain from the differentiator. The gain is proportional with the speed at which errors change. Setting this parameter to zero disables the differentiator. This parameter is used with <i>1-00 Configuration Mode Speed closed-loop</i> [1] control.

7-05 Speed PID Diff. Gain Limit		
Range:		Function:
5.0*	[1.0 - 20.0]	Set a limit for the gain provided by the differentiator. Since the differential gain increases at higher frequencies, limiting the gain may be useful. For example, set up a pure D-link at low frequencies and a constant D-link at higher frequencies. This parameter is used with <i>1-00 Configuration Mode Speed closed-loop</i> [1] control.



7-06 Speed PID Lowpass Filter Time		
Range:		Function:
Application dependent*	[1.0 - 100.0 ms]	
Application dependent*	[1.0 - 100.0 ms]	Set a time constant for the speed control low-pass filter. The low-pass filter improves steady-state performance and dampens oscillations on the feedback signal. This is an advantage if there is a great amount on noise in the system; see figure below. For example, if a time constant (τ) of 100 ms is programmed, the cut-off frequency for the low-pass filter will be $1/0.1 = 10$ RAD/sec., corresponding to $(10/2 \times \pi) = 1.6$ Hz. The PID regulator only regulates a feedback signal that varies by a frequency of less than 1.6 Hz. If the feedback signal varies by a frequency

7-06 Speed PID Lowpass Filter Time												
Range:		Function:										
		higher than 1.6 Hz, the PID regulator does not react. Practical settings of <i>7-06 Speed PID Lowpass Filter Time</i> taken from the number of pulses per revolutions from encoder:										
		<table border="1"> <thead> <tr> <th>Encoder PPR</th> <th>7-06 Speed PID Lowpass Filter Time</th> </tr> </thead> <tbody> <tr> <td>512</td> <td>10 ms</td> </tr> <tr> <td>1,024</td> <td>5 ms</td> </tr> <tr> <td>2,048</td> <td>2 ms</td> </tr> <tr> <td>4,096</td> <td>1 ms</td> </tr> </tbody> </table>	Encoder PPR	7-06 Speed PID Lowpass Filter Time	512	10 ms	1,024	5 ms	2,048	2 ms	4,096	1 ms
Encoder PPR	7-06 Speed PID Lowpass Filter Time											
512	10 ms											
1,024	5 ms											
2,048	2 ms											
4,096	1 ms											
		Note that severe filtering can be detrimental to dynamic performance. This parameter is used with <i>1-00 Configuration Mode Speed closed-loop</i> [1] and <i>Torque</i> [2] control. The filter time in flux sensorless must be adjusted to 3–5 ms.										


3

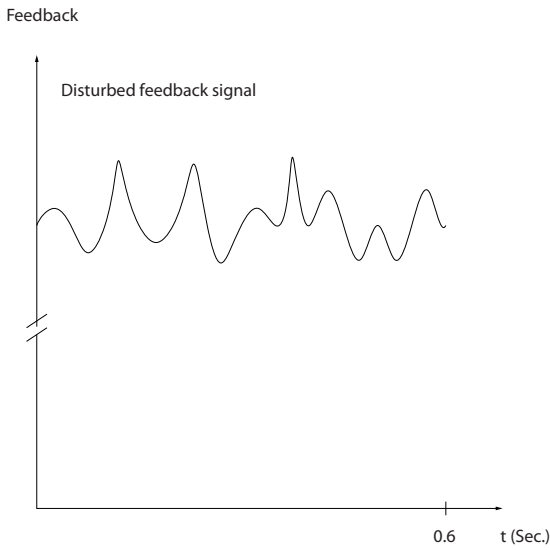

175ZA293.11

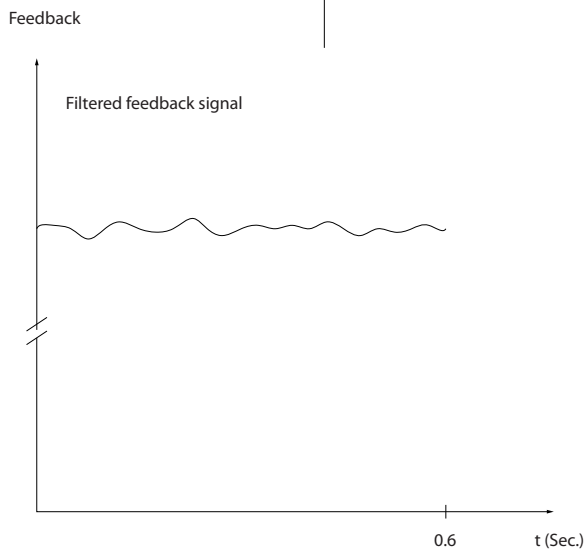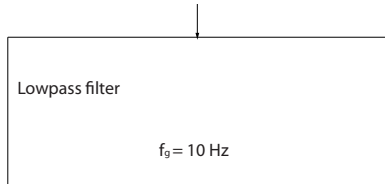


7-07 Speed PID Feedback Gear Ratio		
Range:	Function:	
1.0000*	[Application dependant]	

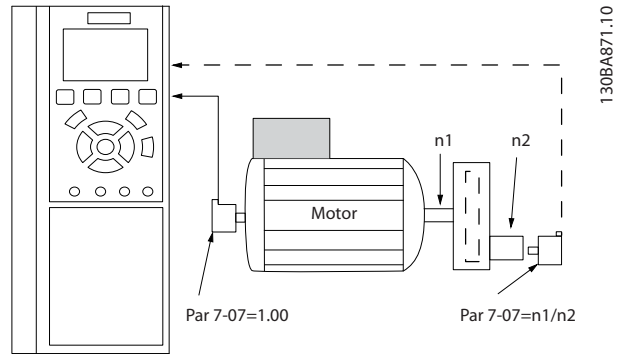

7-08 Speed PID Feed Forward Factor		
Range:	Function:	
0 %*	[0 - 500 %]	The reference signal bypasses the speed controller by the amount specified. This feature increases the dynamic performance of the speed control loop.

7-09 Speed PID Error Correction w/ Ramp		
Range:	Function:	
300 RPM*	[10 - 100000 RPM]	The speed error between ramp and actual speed is held up against the setting in this parameter. If the speed error exceeds this parameter entry, the speed error will be corrected via ramping in a controlled way.

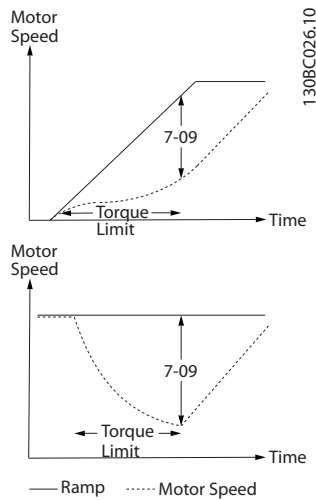

3.9.2 7-1* Torque PI Control

Parameters for configuring the torque PI control in torque open-loop (1-00 Configuration Mode).

7-12 Torque PI Proportional Gain		
Range:	Function:	
100 %*	[0 - 500 %]	Enter the proportional gain value for the torque controller. Selection of a high value makes the controller react faster. Too high a setting leads to controller instability.

7-13 Torque PI Integration Time		
Range:	Function:	
0.020 s*	[0.002 - 2.000 s]	Enter the integration time for the torque controller. Selecting a low value causes the controller to react faster. Too low a setting leads to control instability.

3.9.3 7-2* Process Ctrl. Feedb.

Select the feedback sources for the process PID control, and the way in which this feedback should be handled.

7-20 Process CL Feedback 1 Resource		
Option:	Function:	
		The effective feedback signal is made up of the sum of up to two different input signals. Select which Adjustable frequency drive input should be treated as the source of the first of these signals. The second input signal is defined in 7-22 <i>Process CL Feedback 2 Resource</i> .
[0] *	No function	
[1]	Analog input 53	
[2]	Analog input 54	
[3]	Frequency input 29	
[4]	Frequency input 33	
[7]	Analog input X30/11	
[8]	Analog input X30/12	
[15]	Analog Input X48/2	

7-22 Process CL Feedback 2 Resource		
Option:	Function:	
		The effective feedback signal is made up of the sum of up to two different input signals. Select which Adjustable frequency drive input should be treated as the source of the second of these signals. The first input signal is defined in 7-20 <i>Process CL Feedback 1 Resource</i> .
[0] *	No function	
[1]	Analog input 53	
[2]	Analog input 54	

7-22 Process CL Feedback 2 Resource		
Option:	Function:	
[3]	Frequency input 29	
[4]	Frequency input 33	
[7]	Analog input X30/11	
[8]	Analog input X30/12	
[15]	Analog Input X48/2	

3.9.4 7-3* Process PID Ctrl.

7-30 Process PID Normal/Inverse Control		
Option:	Function:	
		Normal and inverse control are implemented by introducing a difference between the reference signal and the feedback signal.
[0] *	Normal	Sets process control in order to increase the output frequency.
[1]	Inverse	Sets process control in order to reduce the output frequency.

7-31 Process PID Anti Windup		
Option:	Function:	
[0]	Off	Continues regulation of an error even when the output frequency cannot be increased or decreased.
[1] *	On	Ceases regulation of an error when the output frequency can no longer be adjusted.

7-32 Process PID Start Speed		
Range:	Function:	
0 RPM*	[0 - 6000 RPM]	Enter the motor speed to be attained as a start signal for commencement of PID control. When the power is switched on, the Adjustable frequency drive will commence ramping and then operate under speed open-loop control. Thereafter, when the process PID start speed is reached, the Adjustable frequency drive will change over to process PID control.

7-33 Process PID Proportional Gain		
Range:	Function:	
0.01*	[0.00 - 10.00]	Enter the PID proportional gain. The proportional gain multiplies the error between the setpoint and the feedback signal.

7-34 Process PID Integral Time		
Range:	Function:	
10000.00 s*	[0.01 - 10000.00 s]	Enter the PID integral time. The integrator provides an increasing gain at a constant error between

7-34 Process PID Integral Time		
Range:	Function:	
		the setpoint and the feedback signal. The integral time is the time needed by the integrator to reach the same gain as the proportional gain.

7-35 Process PID Differentiation Time		
Range:	Function:	
0.00 s* [0.00 - 10.00 s]		Enter the PID differentiation time. The differentiator does not react to a constant error, but provides a gain only when the error changes. The shorter the PID differentiation time, the stronger the gain from the differentiator.

7-36 Process PID Diff. Gain Limit		
Range:	Function:	
5.0* [1.0 - 50.0]		Enter a limit for the differentiator gain (DG). If there is no limit, the DG will increase when there are fast changes. Limit the DG to obtain a pure differentiator gain at slow changes, and a constant differentiator gain where fast changes occur.

7-38 Process PID Feed Forward Factor		
Range:	Function:	
0 %* [0 - 200 %]		Enter the PID feed forward (FF) factor. The FF factor sends a constant fraction of the reference signal to bypass PID control, which means that PID control only affects the remaining fraction of the control signal. Any change to this parameter will thus affect the motor speed. When the FF factor is activated it provides less overshoot, and high dynamics when changing the setpoint. <i>7-38 Process PID Feed Forward Factor is active when 1-00 Configuration Mode is set to [3] Process.</i>

7-39 On Reference Bandwidth		
Range:	Function:	
5 %* [0 - 200 %]		Enter the On Reference bandwidth. When the PID control error (the difference between the reference and the feedback) is less than the set value of this parameter, the On Reference status bit is high, i.e., it equals 1.

3.9.5 7-4* Advanced Process PID Ctrl.

Parameter group 7-4* is only used if *1-00 Configuration Mode* is set to [7] Extended PID speed CL or [8] Extended PID Speed OL.

7-40 Process PID I-part Reset		
Option:	Function:	
[0] * No		
[1] Yes		Select Yes [1] to reset the I-part of the process PID controller. The selection will automatically revert to No [0]. Resetting the I-part makes it possible to start from a well-defined point after changing something in the process, e.g., changing a textile roll.

7-41 Process PID Output Neg. Clamp		
Range:	Function:	
-100 %* [Application dependant]		Enter a negative limit for the process PID controller output.

7-42 Process PID Output Pos. Clamp		
Range:	Function:	
100 %* [Application dependant]		Enter a positive limit for the process PID controller output.

7-43 Process PID Gain Scale at Min. Ref.		
Range:	Function:	
100 %* [0 - 100 %]		Enter a scaling percentage to apply to the process PID output when operating at the minimum reference. The scaling percentage will be adjusted linearly between the scale at min. ref. (<i>7-43 Process PID Gain Scale at Min. Ref.</i>) and the scale at max. ref. (<i>7-44 Process PID Gain Scale at Max. Ref.</i>).

7-44 Process PID Gain Scale at Max. Ref.		
Range:	Function:	
100 %* [0 - 100 %]		Enter a scaling percentage to apply to the process PID output when operating at the maximum reference. The scaling percentage will be adjusted linearly between the scale at min. ref. (<i>7-43 Process PID Gain Scale at Min. Ref.</i>) and the scale at max. ref. (<i>7-44 Process PID Gain Scale at Max. Ref.</i>).

7-45 Process PID Feed Fwd Resource		
Option:	Function:	
[0] * No function		Select which drive input should be used as the feed forward factor. The FF factor is added directly to the output of the PID controller. This increases dynamic performance.

7-45 Process PID Feed Fwd Resource		
Option:	Function:	
[1]	Analog input 53	
[2]	Analog input 54	
[7]	Frequency input 29	
[8]	Frequency input 33	
[11]	Local bus reference	
[20]	Digital pot.meter	
[21]	Analog input X30-11	
[22]	Analog input X30-12	
[32]	Bus PCD	Selects a bus reference configured by 8-02 <i>Control Word Source</i> . Change 8-42 <i>PCD write configuration</i> for the bus used in order to make the feed-forward available in 7-48 <i>PCD Feed Forward</i> . Use index 1 for feed-forward [748] (and index 2 for reference [1682]).

7-46 Process PID Feed Fwd Normal/ Inv. Ctrl.		
Option:	Function:	
[0] *	Normal	Select Normal [0] to set the feed forward factor to treat the FF resource as a positive value.
[1]	Inverse	Select Inverse [1] to treat the FF resource as a negative value.

7-48 PCD Feed Forward		
Range:	Function:	
0*	[0 - 65535]	Read-out parameter where the bus 7-45 <i>Process PID Feed Fwd Resource</i> [32] can be read.

7-49 Process PID Output Normal/ Inv. Ctrl.		
Option:	Function:	
[0] *	Normal	Select Normal [0] to use the resulting output from the process PID controller as is.
[1]	Inverse	Select Inverse [1] to invert the resulting output from the process PID controller. This operation is performed after the feed forward factor is applied.

3.9.6 7-5* Process PID Ctrl.

Parameter group 7-5* is only used if 1-00 *Configuration Mode* is set to [7] *Extended PID speed CL* or [8] *Extended PID Speed OL*.

7-50 Process PID Extended PID		
Option:	Function:	
[0]	Disabled	Disables the extended parts of the process PID controller.
[1] *	Enabled	Enables the extended parts of the PID controller.

7-51 Process PID Feed Fwd Gain		
Range:	Function:	
1.00*	[0.00 - 100.00]	The feed forward is used to obtain the desired level, based on a well-known signal available. The PID controller then only takes care of the smaller part of the control, necessary because of unknown characters. The standard feed fwd factor in 7-38 <i>Process PID Feed Forward Factor</i> is always related to the reference whereas 7-51 <i>Process PID Feed Fwd Gain</i> has more choices. In winder applications, the feed fwd factor will typically be the line speed of the system.

7-52 Process PID Feed Fwd Ramp up		
Range:	Function:	
0.01 s*	[0.01 - 10.00 s]	Controls the dynamics of the feed forward signal when ramping up.

7-53 Process PID Feed Fwd Ramp down		
Range:	Function:	
0.01 s*	[0.01 - 10.00 s]	Controls the dynamics of the feed forward signal when ramping down.

7-56 Process PID Ref. Filter Time		
Range:	Function:	
0.001 s*	[0.001 - 1.000 s]	Set a time constant for the reference first order low-pass filter. The low-pass filter improves steady-state performance and dampens oscillations on the reference/ feedback signals. However, severe filtering can be detrimental to dynamic performance.

7-57 Process PID Fb. Filter Time		
Range:	Function:	
0.001 s*	[0.001 - 1.000 s]	Set a time constant for the feedback first order low-pass filter. The low-pass filter improves steady-state performance and dampens oscillations on the reference/ feedback signals. However, severe filtering can be detrimental to dynamic performance.

3.10 Parameters: 8-** Communications and Options

3.10.1 8-0* General Settings

8-01 Control Site		
Option:	Function:	
		The setting in this parameter overrides the settings in <i>8-50 Coasting Select</i> to <i>8-56 Preset Reference Select</i> .
[0] *	Digital and ctrl.word	Control by using both digital input and control word.
[1]	Digital only	Control by using digital inputs only.
[2]	Controlword only	Control by using control word only.

8-02 Control Word Source		
Select the source of the control word: one of two serial interfaces or four installed options. During initial power-up, the Adjustable frequency drive automatically sets this parameter to <i>Option A</i> [3] if it detects a valid Serial communication bus option installed in slot A. If the option is removed, the Adjustable frequency drive detects a change in the configuration, sets <i>8-02 Control Word Source</i> back to default setting RS-485, and the Adjustable frequency drive then trips. If an option is installed after initial power-up, the setting of <i>8-02 Control Word Source</i> will not change but the Adjustable frequency drive will trip and display: <i>Alarm 67 Option Changed</i> . When you retrofit a bus option into a Adjustable frequency drive that did not have a bus option installed to begin with, you must take an ACTIVE decision to move the control to bus-based. This is done for safety reasons in order to avoid an accidental change.		
Option:	Function:	
[0]	None	
[1]	FC RS485	
[2]	FC USB	
[3] *	Option A	
[4]	Option B	
[5]	Option C0	
[6]	Option C1	
[30]	External Can	

NOTE!

This parameter cannot be adjusted while the motor is running.

8-03 Control Word Timeout Time		
Range:	Function:	
1.0 s*	[Application dependant]	Enter the maximum time expected to pass between the reception of two consecutive messages. If this time is exceeded, it indicates that the serial

8-03 Control Word Timeout Time		
Range:	Function:	
		communication has stopped. The function selected in <i>8-04 Control Word Timeout Function</i> will then be carried out. The timeout counter is triggered by a valid control word.

8-04 Control Word Timeout Function		
Select the timeout function. The timeout function activates when the control word fails to be updated within the time period specified in <i>8-03 Control Word Timeout Time</i> .		
Option:	Function:	
[0] *	Off	Resumes control via serial bus (Serial communication bus or standard) using the most recent control word.
[1]	Freeze output	Freezes output frequency until communication resumes.
[2]	Stop	Stops with auto-restart when communication resumes.
[3]	Jogging	Runs the motor at JOG frequency until communication resumes.
[4]	Max. speed	Runs the motor at maximum frequency until communication resumes.
[5]	Stop and trip	Stops the motor, then resets the Adjustable frequency drive in order to restart: via the Serial communication bus, via the reset button on the LCP or via a digital input.
[7]	Select setup 1	Changes the set-up upon reestablishment of communication following a control word timeout. If communication resumes causing the timeout situation to disappear, <i>8-05 End-of-Timeout Function</i> defines whether to resume the set-up used before the timeout or to retain the set-up endorsed by the timeout function.
[8]	Select setup 2	See [7] <i>Select setup 1</i>
[9]	Select setup 3	See [7] <i>Select setup 1</i>
[10]	Select setup 4	See [7] <i>Select setup 1</i>
[26]	Trip	

NOTE!

The following configuration is required in order to change the set-up after a timeout:

Set *0-10 Active Set-up* to [9] *Multi set-up* and select the relevant link in *0-12 This Set-up Linked to*.

8-05 End-of-Timeout Function		
Option:	Function:	
		Select the action after receiving a valid control word following a timeout. This parameter is active only when <i>8-04 Control Timeout Function</i> is set to [Set-up 1-4].
[0]	Hold set-up	Retains the set-up selected in <i>8-04 Control Timeout Function</i> and displays a warning, until <i>8-06 Reset Control Timeout</i> toggles. Then the Adjustable frequency drive resumes its original set-up.
[1] *	Resume set-up	Resumes the set-up active prior to the timeout.

8-06 Reset Control Word Timeout		
This parameter is active only when <i>Hold set-up</i> [0] has been selected in <i>8-05 End-of-Timeout Function</i> .		
Option:	Function:	
[0] *	Do not reset	Retains the set-up specified in <i>8-04 Control Word Timeout Function</i> , following a control word timeout.
[1]	Do reset	Returns the Adjustable frequency drive to the original set-up following a control word timeout. The Adjustable frequency drive performs the reset and then immediately reverts to the <i>Do not reset</i> [0] setting

8-07 Diagnosis Trigger		
Option:	Function:	
		This parameter enables and controls the Adjustable frequency drive diagnosis function and permits expansion of the diagnosis data to 24 byte.
NOTE! This is only valid for Profibus.		
<ul style="list-style-type: none"> - <i>Disable</i> [0]: Do not send extended diagnosis data even if they appear in the Adjustable frequency drive. - <i>Trigger on alarms</i> [1]: Send extended diagnosis data when one or more alarms appear in alarm <i>16-90 Alarm Word</i> or <i>9-53 Profibus Warning Word</i>. - <i>Trigger alarms/warn.</i> [2]: Send extended diagnosis data if one or more alarms or warnings appear in alarm <i>16-90 Alarm Word</i>, <i>9-53 Profibus Warning Word</i>, or warning <i>16-92 Warning Word</i>. 		
The content of the extended diagnosis frame is as follows:		

8-07 Diagnosis Trigger				
Option:	Function:			
		Byte	Content	Description
		0-5	Standard DP Diagnose Data	Standard DP Diagnose Data
		6	PDU length xx	Header of extended diagnostic data
		7	Status type = 0x81	Header of extended diagnostic data
		8	Slot = 0	Header of extended diagnostic data
		9	Status info = 0	Header of extended diagnostic data
		10-13	VLT <i>16-92 Warning Word</i>	VLT warning word
		14-17	VLT <i>16-03 Status Word</i>	VLT status word
		18-21	VLT <i>16-90 Alarm Word</i>	VLT alarm word
		22-23	VLT <i>9-53 Profibus Warning Word</i>	Communication warning word (Profibus)
Enabling diagnosis may cause increased bus traffic. Diagnosis functions are not supported by all serial communication bus types.				
[0] *	Disable			
[1]	Trigger on alarms			
[2]	Trigger alarm/warn.			

8-08 Readout Filtering		
The function is used if the speed feedback value readouts on serial communication bus are fluctuating. Select filtered if the function is required. A power-cycle is required for changes to take effect.		
Option:	Function:	
[0] *	Motor Data Std-Filt.	Select [0] for normal bus readouts.
[1]	Motor Data LP-Filter	Select [1] for filtered bus readouts of the following parameters: <i>16-10 Power [kW]</i> <i>16-11 Power [hp]</i>

8-08 Readout Filtering	
The function is used if the speed feedback value readouts on serial communication bus are fluctuating. Select filtered if the function is required. A power-cycle is required for changes to take effect.	
Option:	Function:
	16-12 Motor Voltage 16-14 Motor Current 16-16 Torque [Nm] 16-17 Speed [RPM] 16-22 Torque [%] 16-25 Torque [Nm] High

3.10.2 8-1* Ctrl. Word Settings

8-10 Control Word Profile	
Select the interpretation of the control and status words corresponding to the installed Serial communication bus. Only the selections valid for the Serial communication bus installed in slot A will be visible in the LCP display.	
For guidelines in selection of <i>FC profile</i> [0] and <i>PROFdrive profile</i> [1] please refer to the <i>Serial communication via RS 485 Interface</i> section.	
For additional guidelines in the selection of <i>PROFdrive profile</i> [1], <i>ODVA</i> [5] and <i>CANopen DSP 402</i> [7], please refer to the Instruction Manual for the installed Serial communication bus.	
Option:	Function:
[0] *	FC profile
[1]	PROFdrive profile
[5]	ODVA
[7]	CANopen DSP 402
[8]	MCO

8-13 Configurable Status Word STW	
Option:	Function:
[0]	No function The input is always low.
[1] *	Profile Default Depended on the profile set in <i>8-10 Control Profile</i> .
[2]	Alarm 68 Only The input will go high whenever Alarm 68 is active and will go low whenever no alarm 68 is active
[3]	Trip excl Alarm 68 The input will go high whenever Trip on other alarms is active, and then Alarm 68 is active.
[10]	T18 DI status The input will go high whenever T18 has 24 V and will go low whenever T18 has 0 V.
[11]	T19 DI status The input will go high whenever T19 has 24 V and will go low whenever T19 has 0 V.

8-13 Configurable Status Word STW	
Option:	Function:
[12]	T27 DI status The input will go high whenever T27 has 24 V and will go low whenever T27 has 0 V.
[13]	T29 DI status The input will go high whenever T29 has 24 V and will go low whenever T29 has 0 V.
[14]	T32 DI status The input will go high whenever T32 has 24 V and will go low whenever T32 has 0 V.
[15]	T33 DI status The input will go high whenever T33 has 24 V and will go low whenever T33 has 0 V.
[16]	T37 DI status The input will go high whenever T37 has 0 V and will go low whenever T37 has 24 V
[21]	Thermal warning The thermal warning turns on when the temperature exceeds the limit in the motor, the Adjustable frequency drive, the brake resistor, or the thermistor.
[30]	Brake fault (IGBT) Will go high when the brake IGBT is short-circuited.
[40]	Out of ref range If Comparator 0 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[60]	Comparator 0 If Comparator 0 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[61]	Comparator 1 If Comparator 1 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[62]	Comparator 2 If Comparator 2 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[63]	Comparator 3 If Comparator 3 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[64]	Comparator 4 If Comparator 4 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[65]	Comparator 5 If Comparator 5 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[70]	Logic Rule 0 If Logic Rule 0 is evaluated as TRUE, the input will go high. Otherwise, it will be low.

8-13 Configurable Status Word STW		
Option:	Function:	
[71]	Logic Rule 1	If Logic Rule 1 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[72]	Logic Rule 2	If Logic Rule 2 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[73]	Logic Rule 3	If Logic Rule 3 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[74]	Logic Rule 4	If Logic Rule 4 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[75]	Logic Rule 5	If Logic Rule 5 is evaluated as TRUE, the input will go high. Otherwise, it will be low.
[80]	SL digital out A	SL Controller Action. The input will go high whenever the Smart Logic Action [38] Set dig. out. A high is executed. The input will go low whenever the Smart Logic Action [32] Set dig. out. A low is executed.
[81]	SL digital out B	SL Controller Action. The input will go high whenever the Smart Logic Action [39] Set dig. out. A high is executed. The input will go low whenever the Smart Logic Action [33] Set dig. out. A low is executed.
[82]	SL digital out C	SL Controller Action. The input will go high whenever the Smart Logic Action [40] Set dig. out. A high is executed. The input will go low whenever the Smart Logic Action [34] Set dig. out. A low is executed.
[83]	SL digital out D	SL Controller Action. The input will go high whenever the Smart Logic Action [41] Set dig. out. A high is executed. The input will go low whenever the Smart Logic Action [35] Set dig. out. A low is executed.
[84]	SL digital out E	SL Controller Action. The input will go high whenever the Smart Logic Action [42] Set dig. out. A high is executed. The input will go low whenever the Smart Logic Action [36] Set dig. out. A low is executed.
[85]	SL digital out F	SL Controller Action. The input will go high whenever the Smart Logic Action [43] Set dig. out. A high is executed. The

8-13 Configurable Status Word STW		
Option:	Function:	
		input will go low whenever the Smart Logic Action [37] Set dig. out. A low is executed
[86]	ATEX ETR cur. alarm	Selectable if par. 1-90 is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1.
[87]	ATEX ETR freq. alarm	Selectable if par. 1-90 is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1.
[88]	ATEX ETR cur. warning	Selectable if par. 1-90 is set to [20] or [21]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1.
[89]	ATEX ETR freq. warning	Selectable if par. 1-90 is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1.
[90]	Safe Function active	
[91]	Safe Opt. Reset req.	

8-14 Configurable Control Word CTW		
Option:	Function:	
		Selection of control word bit 10 if it is active low or active high
[0]	None	
[1] *	Profile default	
[2]	CTW Valid, active low	
[3]	Safe Option Reset	
[4]	PID error inverse	When enabled, it inverts the resulting error from the process PID controller. Available only if "Configuration Mode" is set to "Surface Winder," "Extended PID Speed OL" or "Extended PID Speed CL."
[5]	PID reset I part	When enabled, resets the I-part of the process PID controller. Equivalent to 7-40 Process PID I-part Reset. Available only if "Configuration Mode" is set to "Surface Winder," "Extended PID Speed OL" or "Extended PID Speed CL."
[6]	PID enable	When enabled, enables the extended process PID controller. Equivalent to 7-50 Process PID Extended PID. Available only if "Configuration Mode" is set "Extended PID Speed OL" or "Extended PID Speed CL."

3.10.3 8-3* FC Port Settings

8-30 Protocol		
Option:	Function:	
[0] *	FC	Communication according to the FC Protocol as described in the <i>VLT AutomationDrive Design Guide, RS485 Installation and Set-up</i> .
[1]	FC MC	Select the protocol for the FC (standard) port.
[2] *	Modbus RTU	

8-31 Address		
Range:	Function:	
Size related*	[1. - 255.]	

8-32 FC Port Baud Rate		
Option:	Function:	
[0]	2400 Baud	Baud rate selection for the FC (standard) port.
[1]	4800 Baud	
[2] *	9600 Baud	
[3]	19200 Baud	
[4]	38400 Baud	
[5]	57600 Baud	
[6]	76800 Baud	
[7]	115200 Baud	

8-33 Parity / Stop Bits		
Option:	Function:	
[0] *	Even Parity, 1 Stop Bit	
[1]	Odd Parity, 1 Stop Bit	
[2]	No Parity, 1 Stop Bit	
[3]	No Parity, 2 Stop Bits	

8-34 Estimated cycle time		
Range:	Function:	
0 ms*	[0 - 1000000 ms]	In a noisy environments, the interface may be blocked by due to overload of bad frames. This parameter specifies the time between two consecutive frames on the network. If the interface does not detect valid frames in that time it flushes the receive buffer.

8-35 Minimum Response Delay		
Range:	Function:	
10 ms*	[Application dependant]	Specify the minimum delay time between receiving a request and transmitting a response. This is used for overcoming modem turnaround delays.

8-36 Max Response Delay		
Range:	Function:	
Application dependent*	[Application dependant]	Specify the maximum permissible delay time between transmitting a request and receiving a response. Exceeding this delay time will cause control word timeout.

8-37 Max Inter-Char Delay		
Range:	Function:	
Application dependent*	[Application dependant]	Specify the maximum permissible time interval between receiving two bytes. This parameter activates timeout if transmission is interrupted. This parameter is active only when 8-30 Protocol is set to FC MC [1] protocol.

3.10.4 8-4* FC MC protocol set

8-40 Telegram selection		
Option:	Function:	
[1] *	Standard telegram 1	Enables use of freely configurable messages or standard messages for the FC port.
[100]	None	
[101]	PPO 1	
[102]	PPO 2	
[103]	PPO 3	
[104]	PPO 4	
[105]	PPO 5	
[106]	PPO 6	
[107]	PPO 7	
[108]	PPO 8	
[200]	Custom telegram 1	Enables use of freely configurable messages or standard messages for the FC port.
[202]	Custom telegram 3	

8-41 Parameters for signals		
Option:	Function:	
[0] *	None	This parameter contains a list of signals available for selection in 8-42 PCD write configuration and 8-43 PCD read configuration.

8-41 Parameters for signals		
Option:	Function:	
[15]	Readout: actual setup	
[302]	Minimum Reference	
[303]	Maximum Reference	
[312]	Catch up/slow Down Value	
[341]	Ramp 1 Ramp up Time	
[342]	Ramp 1 Ramp Down Time	
[351]	Ramp 2 Ramp up Time	
[352]	Ramp 2 Ramp down Time	
[380]	Jog Ramp Time	
[381]	Quick Stop Ramp Time	
[411]	Motor Speed Low Limit [RPM]	
[412]	Motor Speed Low Limit [Hz]	
[413]	Motor Speed High Limit [RPM]	
[414]	Motor Speed High Limit [Hz]	
[416]	Torque Limit Motor Mode	
[417]	Torque Limit Generator Mode	
[590]	Digital & Relay Bus Control	
[593]	Pulse Out #27 Bus Control	
[595]	Pulse Out #29 Bus Control	
[597]	Pulse Out #X30/6 Bus Control	
[653]	Term 42 Output Bus Ctrl	
[663]	Terminal X30/8 Bus Control	
[673]	Terminal X45/1 Bus Control	
[683]	Terminal X45/3 Bus Control	
[748]	PCD Feed Forward	
[890]	Bus Jog 1 Speed	
[891]	Bus Jog 2 Speed	
[1472]	Legacy Alarm Word	
[1473]	Legacy Warning Word	
[1474]	Leg. Ext. Status Word	
[1500]	Operating Hours	
[1501]	Running Hours	
[1502]	kWh Counter	
[1600]	Control Word	
[1601]	Reference [Unit]	
[1602]	Reference %	
[1603]	Status Word	
[1605]	Main Actual Value [%]	
[1609]	Custom Readout	
[1610]	Power [kW]	
[1611]	Power [hp]	
[1612]	Motor Voltage	
[1613]	Frequency	
[1614]	Motor Current	
[1615]	Frequency [%]	
[1616]	Torque [Nm]	
[1617]	Speed [RPM]	
[1618]	Motor Thermal	
[1619]	KTY sensor temperature	
[1620]	Motor Angle	

8-41 Parameters for signals		
Option:	Function:	
[1621]	Torque [%] High Res.	
[1622]	Torque [%]	
[1625]	Torque [Nm] High	
[1630]	DC Link Voltage	
[1632]	Brake Energy /s	
[1633]	Brake Energy /2 min	
[1634]	Heatsink Temp.	
[1635]	Inverter Thermal	
[1638]	SL Controller State	
[1639]	Control Card Temp.	
[1650]	External Reference	
[1651]	Pulse Reference	
[1652]	Feedback [Unit]	
[1653]	Digi Pot Reference	
[1657]	Feedback [RPM]	
[1660]	Digital Input	
[1661]	Terminal 53 Switch Setting	
[1662]	Analog Input 53	
[1663]	Terminal 54 Switch Setting	
[1664]	Analog Input 54	
[1665]	Analog Output 42 [mA]	
[1666]	Digital Output [bin]	
[1667]	Freq. Input #29 [Hz]	
[1668]	Freq. Input #33 [Hz]	
[1669]	Pulse Output #27 [Hz]	
[1670]	Pulse Output #29 [Hz]	
[1671]	Relay Output [bin]	
[1672]	Counter A	
[1673]	Counter B	
[1674]	Prec. Stop Counter	
[1675]	Analog In X30/11	
[1676]	Analog In X30/12	
[1677]	Analog Out X30/8 [mA]	
[1678]	Analog Out X45/1 [mA]	
[1679]	Analog Out X45/3 [mA]	
[1680]	Fieldbus CTW 1	
[1682]	Fieldbus REF 1	
[1684]	Comm. Option STW	
[1685]	FC Port CTW 1	
[1686]	FC Port REF 1	
[1690]	Alarm Word	
[1691]	Alarm Word 2	
[1692]	Warning Word	
[1693]	Warning Word 2	
[1694]	Ext. Status Word	
[1860]	Digital Input 2	
[3310]	Sync Factor Master	
[3311]	Sync Factor Slave	
[3401]	PCD 1 Write to MCO	
[3402]	PCD 2 Write to MCO	

8-41 Parameters for signals	
Option:	Function:
[3403]	PCD 3 Write to MCO
[3404]	PCD 4 Write to MCO
[3405]	PCD 5 Write to MCO
[3406]	PCD 6 Write to MCO
[3407]	PCD 7 Write to MCO
[3408]	PCD 8 Write to MCO
[3409]	PCD 9 Write to MCO
[3410]	PCD 10 Write to MCO
[3421]	PCD 1 Read from MCO
[3422]	PCD 2 Read from MCO
[3423]	PCD 3 Read from MCO
[3424]	PCD 4 Read from MCO
[3425]	PCD 5 Read from MCO
[3426]	PCD 6 Read from MCO
[3427]	PCD 7 Read from MCO
[3428]	PCD 8 Read from MCO
[3429]	PCD 9 Read from MCO
[3430]	PCD 10 Read from MCO
[3440]	Digital Inputs
[3441]	Digital Outputs
[3450]	Actual Position
[3451]	Commanded Position
[3452]	Actual Master Position
[3453]	Slave Index Position
[3454]	Master Index Position
[3455]	Curve Position
[3456]	Track Error
[3457]	Synchronizing Error
[3458]	Actual Velocity
[3459]	Actual Master Velocity
[3460]	Synchronizing Status
[3461]	Axis Status
[3462]	Program Status
[3464]	MCO 302 Status
[3465]	MCO 302 Control
[3470]	MCO Alarm Word 1
[3471]	MCO Alarm Word 2
[4280]	Safe Option Status
[4285]	Active Safe Func.
[4286]	Safe Option Info

8-42 PCD write configuration	
Range:	Function:
Application dependent*	[0 - 9999] Select the parameters to be assigned to the PCD's messages. The number of available PCDs depends on the message type. The values in the PCDs will then be

8-42 PCD write configuration	
Range:	Function:
	written to the selected parameters as data values.

8-43 PCD read configuration	
Range:	Function:
Application dependent*	[0 - 9999] Select the parameters to be assigned to PCDs of the messages. The number of available PCDs depends on the message type. PCDs contain the actual data values of the selected parameters.

3.10.5 8-5* Digital/Bus

Parameters for configuring the control word Digital/Bus merging.

NOTE!

These parameters are active only when 8-01 Control Site is set to [0] Digital and control word.

8-50 Coasting Select		
Option:	Function:	
		Select control of the coasting function via the terminals (digital input) and/or via the bus.
[0]	Digital input	Activates Start command via a digital input.
[1]	Bus	Activates Start command via the serial communication port or serial communication option.
[2]	Logic AND	Activates Start command via the serial communication bus/serial communication port, AND additionally via one of the digital inputs.
[3] *	Logic OR	Activates Start command via the serial communication bus/serial communication port OR via one of the digital inputs.

8-51 Quick Stop Select		
Select control of the quick stop function via the terminals (digital input) and/or via the bus.		
Option:	Function:	
[0]	Digital input	
[1]	Bus	
[2]	Logic AND	
[3] *	Logic OR	

8-52 DC Brake Select		
Option:	Function:	
		Select control of the DC brake via the terminals (digital input) and/or via the serial communication bus.
		NOTE! Only selection [0] Digital input is available when 1-10 Motor Construction is set to [1] PM non-salient SPM.
[0]	Digital input	Activates Start command via a digital input.
[1]	Bus	Activates Start command via the serial communication port or serial communication option.

8-52 DC Brake Select		
Option:	Function:	
[2]	Logic AND	Activates Start command via the serial communication bus/serial communication port, AND additionally via one of the digital inputs.
[3] *	Logic OR	Activates Start command via the serial communication bus/serial communication port OR via one of the digital inputs.

8-53 Start Select		
Option:	Function:	
		Select control of the Adjustable frequency drive start function via the terminals (digital input) and/or via the serial communication bus.
[0]	Digital input	Activates Start command via a digital input.
[1]	Bus	Activates Start command via the serial communication port or serial communication option.
[2]	Logic AND	Activates Start command via the serial communication bus/serial communication port, AND additionally via one of the digital inputs.
[3] *	Logic OR	Activates Start command via the serial communication bus/serial communication port OR via one of the digital inputs.

8-54 Reversing Select		
Option:	Function:	
[0]	Digital input	Select control of the Adjustable frequency drive reverse function via the terminals (digital input) and/or via the Serial communication bus.
[1]	Bus	Activates the Reverse command via the serial communication port or Serial communication bus option .
[2]	Logic AND	Activates the Reverse command via the Serial communication bus/serial communication port, AND additionally via one of the digital inputs.
[3] *	Logic OR	Activates the Reverse command via the Serial communication bus/serial communication port OR via one of the digital inputs.

8-55 Set-up Select		
Option:	Function:	
		Select control of the Adjustable frequency drive set-up selection via the terminals (digital input) and/or via the serial communication bus.
[0]	Digital input	Activates the set-up selection via a digital input.

8-55 Set-up Select		
Option:	Function:	
[1]	Bus	Activates the set-up selection via the serial communication port or serial communication option.
[2]	Logic AND	Activates the set-up selection via the serial communication bus/serial communication port, AND additionally via one of the digital inputs.
[3] *	Logic OR	Activate the set-up selection via the serial communication bus/serial communication port OR via one of the digital inputs.

8-56 Preset Reference Select		
Option:	Function:	
		Select control of the Adjustable frequency drive Preset Reference selection via the terminals (digital input) and/or via the serial communication bus.
[0]	Digital input	Activates Preset Reference selection via a digital input.
[1]	Bus	Activates Preset Reference selection via the serial communication port or serial communication option.
[2]	Logic AND	Activates Preset Reference selection via the serial communication bus/serial communication port, AND additionally via one of the digital inputs.
[3] *	Logic OR	Activates the Preset Reference selection via the serial communication bus/serial communication port OR via one of the digital inputs.

8-57 Profdrive OFF2 Select		
Select control of the drive OFF2 selection via the terminals (digital input) and/or via the serial communication bus. This parameter is active only when par. 8-01 Control Site is set to [0] Digital and ctrl. word and par. 8-10 is set to [1] Profdrive profile.		
Option:	Function:	
[0]	Digital input	
[1]	Bus	
[2]	Logic AND	
[3] *	Logic OR	

8-58 Profdrive OFF3 Select		
Select control of the drive OFF3 selection via the terminals (digital input) and/or via the serial communication bus. This parameter is active only when par. 8-01 Control Site is set to [0] Digital and control word and par. 8-10 is set to [1] Profdrive profile.		
Option:	Function:	
[0]	Digital input	
[1]	Bus	

8-58 Profdrive OFF3 Select		
Select control of the drive OFF3 selection via the terminals (digital input) and/or via the serial communication bus. This parameter is active only when par. 8-01 Control Site is set to [0] Digital and control word and par. 8-10 is set to [1] Profdrive profile.		
Option:	Function:	
[2]	Logic AND	
[3] *	Logic OR	

3.10.6 8-8* AFD Port Diagnos.

These parameters are used for monitoring the bus communication via the Adjustable Frequency Drive Port.

8-80 Bus Message Count		
Range:	Function:	
0 *	[0 - 0]	This parameter shows the number of valid messages detected on the bus.

8-81 Bus Error Count		
Range:	Function:	
0 *	[0 - 0]	This parameter shows the number of messages with faults (e.g., CRC fault), detected on the bus.

8-82 Slave Messages Rcvd		
Range:	Function:	
0 *	[0 - 0]	This parameter shows the number of valid messages addressed to the slave, sent by the Adjustable frequency drive.

8-83 Slave Error Count		
Range:	Function:	
0 *	[0 - 0]	This parameter shows the number of error messages, which could not be executed by the Adjustable frequency drive.

3.10.7 8-9* Bus Jog

8-90 Bus Jog 1 Speed		
Range:	Function:	
100 RPM*	[0 - par. 4-13 RPM]	Enter the jog speed. This is a fixed jog speed activated via the serial port or serial communication bus option.

8-91 Bus Jog 2 Speed		
Range:		Function:
200 RPM*	[0 - par. 4-13 RPM]	Enter the jog speed. This is a fixed jog speed activated via the serial port or serial communication bus option.

3.11 Parameters: 9-** Profibus

9-00 Setpoint		
Range:	Function:	
0* [0 - 65535]	This parameter receives cyclical reference from a Master Class 2. If the control priority is set to Master Class 2, the reference for the Adjustable frequency drive is taken from this parameter, whereas the cyclical reference will be ignored.	

9-07 Actual Value		
Range:	Function:	
0* [0 - 65535]	This parameter delivers the MAV for a Master Class 2. The parameter is valid if the control priority is set to Master Class 2.	

9-15 PCD Write Configuration		
Array [10]		
Option:	Function:	
	Select the parameters to be assigned to PCD 3 to 10 of the messages. The number of available PCDs depends on the message type. The values in PCD 3 to 10 will then be written to the selected parameters as data values. Alternatively, specify a standard Profibus message in <i>9-22 Telegram Selection</i> .	
[0] *	None	
[302]	Minimum Reference	
[303]	Maximum Reference	
[312]	Catch up/slow Down Value	
[341]	Ramp 1 Ramp up Time	
[342]	Ramp 1 Ramp Down Time	
[351]	Ramp 2 Ramp up Time	
[352]	Ramp 2 Ramp down Time	
[380]	Jog Ramp Time	
[381]	Quick Stop Ramp Time	
[411]	Motor Speed Low Limit [RPM]	
[412]	Motor Speed Low Limit [Hz]	
[413]	Motor Speed High Limit [RPM]	
[414]	Motor Speed High Limit [Hz]	
[416]	Torque Limit Motor Mode	
[417]	Torque Limit Generator Mode	
[590]	Digital & Relay Bus Control	
[593]	Pulse Out #27 Bus Control	
[595]	Pulse Out #29 Bus Control	
[597]	Pulse Out #X30/6 Bus Control	

9-15 PCD Write Configuration		
Array [10]		
Option:	Function:	
[653]	Term 42 Output Bus Ctrl	
[663]	Terminal X30/8 Bus Control	
[673]	Terminal X45/1 Bus Control	
[683]	Terminal X45/3 Bus Control	
[748]	PCD Feed Forward	
[890]	Bus Jog 1 Speed	
[891]	Bus Jog 2 Speed	
[1680]	Fieldbus CTW 1	
[1682]	Fieldbus REF 1	
[1685]	FC Port CTW 1	
[1686]	FC Port REF 1	
[3310]	Sync Factor Master	
[3311]	Sync Factor Slave	
[3401]	PCD 1 Write to MCO	
[3402]	PCD 2 Write to MCO	
[3403]	PCD 3 Write to MCO	
[3404]	PCD 4 Write to MCO	
[3405]	PCD 5 Write to MCO	
[3406]	PCD 6 Write to MCO	
[3407]	PCD 7 Write to MCO	
[3408]	PCD 8 Write to MCO	
[3409]	PCD 9 Write to MCO	
[3410]	PCD 10 Write to MCO	

9-16 PCD Read Configuration		
Array [10]		
Option:	Function:	
	Select the parameters to be assigned to PCD 3 to 10 of the messages. The number of available PCDs depends on the message type. PCDs 3 to 10 contain the actual data values of the selected parameters. For standard Profibus messages, see <i>9-22 Telegram Selection</i> .	
[0] *	None	
[15]	Readout: actual setup	
[1472]	Legacy Alarm Word	
[1473]	Legacy Warning Word	
[1474]	Leg. Ext. Status Word	
[1500]	Operating Hours	
[1501]	Running Hours	
[1502]	kWh Counter	
[1600]	Control Word	
[1601]	Reference [Unit]	
[1602]	Reference %	

9-16 PCD Read Configuration		
Array [10]		
Option:	Function:	
[1603]	Status Word	
[1605]	Main Actual Value [%]	
[1609]	Custom Readout	
[1610]	Power [kW]	
[1611]	Power [hp]	
[1612]	Motor Voltage	
[1613]	Frequency	
[1614]	Motor Current	
[1615]	Frequency [%]	
[1616]	Torque [Nm]	
[1617]	Speed [RPM]	
[1618]	Motor Thermal	
[1619]	KTY sensor temperature	
[1620]	Motor Angle	
[1621]	Torque [%] High Res.	
[1622]	Torque [%]	
[1625]	Torque [Nm] High	
[1630]	DC Link Voltage	
[1632]	Brake Energy /s	
[1633]	Brake Energy /2 min	
[1634]	Heatsink Temp.	
[1635]	Inverter Thermal	
[1638]	SL Controller State	
[1639]	Control Card Temp.	
[1650]	External Reference	
[1651]	Pulse Reference	
[1652]	Feedback [Unit]	
[1653]	Digi Pot Reference	
[1657]	Feedback [RPM]	
[1660]	Digital Input	
[1661]	Terminal 53 Switch Setting	
[1662]	Analog Input 53	
[1663]	Terminal 54 Switch Setting	
[1664]	Analog Input 54	
[1665]	Analog Output 42 [mA]	
[1666]	Digital Output [bin]	
[1667]	Freq. Input #29 [Hz]	
[1668]	Freq. Input #33 [Hz]	
[1669]	Pulse Output #27 [Hz]	
[1670]	Pulse Output #29 [Hz]	
[1671]	Relay Output [bin]	
[1672]	Counter A	
[1673]	Counter B	
[1674]	Prec. Stop Counter	
[1675]	Analog In X30/11	
[1676]	Analog In X30/12	
[1677]	Analog Out X30/8 [mA]	
[1678]	Analog Out X45/1 [mA]	

9-16 PCD Read Configuration		
Array [10]		
Option:	Function:	
[1679]	Analog Out X45/3 [mA]	
[1684]	Comm. Option STW	
[1690]	Alarm Word	
[1691]	Alarm Word 2	
[1692]	Warning Word	
[1693]	Warning Word 2	
[1694]	Ext. Status Word	
[1860]	Digital Input 2	
[3421]	PCD 1 Read from MCO	
[3422]	PCD 2 Read from MCO	
[3423]	PCD 3 Read from MCO	
[3424]	PCD 4 Read from MCO	
[3425]	PCD 5 Read from MCO	
[3426]	PCD 6 Read from MCO	
[3427]	PCD 7 Read from MCO	
[3428]	PCD 8 Read from MCO	
[3429]	PCD 9 Read from MCO	
[3430]	PCD 10 Read from MCO	
[3440]	Digital Inputs	
[3441]	Digital Outputs	
[3450]	Actual Position	
[3451]	Commanded Position	
[3452]	Actual Master Position	
[3453]	Slave Index Position	
[3454]	Master Index Position	
[3455]	Curve Position	
[3456]	Track Error	
[3457]	Synchronizing Error	
[3458]	Actual Velocity	
[3459]	Actual Master Velocity	
[3460]	Synchronizing Status	
[3461]	Axis Status	
[3462]	Program Status	
[3464]	MCO 302 Status	
[3465]	MCO 302 Control	
[3470]	MCO Alarm Word 1	
[3471]	MCO Alarm Word 2	
[4280]	Safe Option Status	
[4285]	Active Safe Func.	
[4286]	Safe Option Info	

9-18 Node Address		
Range:	Function:	
126 * [0 - 126.]	Enter the station address in this parameter or alternatively in the hardware switch. In order to adjust the station address in <i>9-18 Node Address</i> , the hardware switch must be set to 126 or 127 (i.e. all switches set to 'on'). Otherwise this parameter will display the actual setting of the switch.	

9-22 Telegram Selection		
Displays the Profibus telegram configuration.		
Option:	Function:	
[1]	Standard telegram 1	
[100] *	None	
[101]	PPO 1	
[102]	PPO 2	
[103]	PPO 3	
[104]	PPO 4	
[105]	PPO 5	
[106]	PPO 6	
[107]	PPO 7	
[108] *	PPO 8	Read only.
[200]	Custom telegram 1	
[202]	Custom telegram 3	

9-23 Parameters for Signals		
Array [1000]		
Read only		
Option:	Function:	
	This parameter contains a list of signals available for selection in <i>9-15 PCD Write Configuration</i> and <i>9-16 PCD Read Configuration</i> .	
[0] *	None	
[15]	Readout: actual setup	
[302]	Minimum Reference	
[303]	Maximum Reference	
[312]	Catch up/slow Down Value	
[341]	Ramp 1 Ramp up Time	
[342]	Ramp 1 Ramp Down Time	
[351]	Ramp 2 Ramp up Time	
[352]	Ramp 2 Ramp down Time	
[380]	Jog Ramp Time	
[381]	Quick Stop Ramp Time	
[411]	Motor Speed Low Limit [RPM]	
[412]	Motor Speed Low Limit [Hz]	
[413]	Motor Speed High Limit [RPM]	
[414]	Motor Speed High Limit [Hz]	

9-23 Parameters for Signals		
Array [1000]		
Read only		
Option:	Function:	
[416]	Torque Limit Motor Mode	
[417]	Torque Limit Generator Mode	
[590]	Digital & Relay Bus Control	
[593]	Pulse Out #27 Bus Control	
[595]	Pulse Out #29 Bus Control	
[597]	Pulse Out #X30/6 Bus Control	
[653]	Term 42 Output Bus Ctrl	
[663]	Terminal X30/8 Bus Control	
[673]	Terminal X45/1 Bus Control	
[683]	Terminal X45/3 Bus Control	
[748]	PCD Feed Forward	
[890]	Bus Jog 1 Speed	
[891]	Bus Jog 2 Speed	
[1472]	Legacy Alarm Word	
[1473]	Legacy Warning Word	
[1474]	Leg. Ext. Status Word	
[1500]	Operating Hours	
[1501]	Running Hours	
[1502]	kWh Counter	
[1600]	Control Word	
[1601]	Reference [Unit]	
[1602]	Reference %	
[1603]	Status Word	
[1605]	Main Actual Value [%]	
[1609]	Custom Readout	
[1610]	Power [kW]	
[1611]	Power [hp]	
[1612]	Motor Voltage	
[1613]	Frequency	
[1614]	Motor Current	
[1615]	Frequency [%]	
[1616]	Torque [Nm]	
[1617]	Speed [RPM]	
[1618]	Motor Thermal	
[1619]	KTY sensor temperature	
[1620]	Motor Angle	
[1621]	Torque [%] High Res.	
[1622]	Torque [%]	
[1625]	Torque [Nm] High	
[1630]	DC Link Voltage	
[1632]	Brake Energy /s	
[1633]	Brake Energy /2 min	
[1634]	Heatsink Temp.	
[1635]	Inverter Thermal	
[1638]	SL Controller State	
[1639]	Control Card Temp.	
[1650]	External Reference	

9-23 Parameters for Signals		
Array [1000]		
Read only		
Option:	Function:	
[1651]	Pulse Reference	
[1652]	Feedback [Unit]	
[1653]	Digi Pot Reference	
[1657]	Feedback [RPM]	
[1660]	Digital Input	
[1661]	Terminal 53 Switch Setting	
[1662]	Analog Input 53	
[1663]	Terminal 54 Switch Setting	
[1664]	Analog Input 54	
[1665]	Analog Output 42 [mA]	
[1666]	Digital Output [bin]	
[1667]	Freq. Input #29 [Hz]	
[1668]	Freq. Input #33 [Hz]	
[1669]	Pulse Output #27 [Hz]	
[1670]	Pulse Output #29 [Hz]	
[1671]	Relay Output [bin]	
[1672]	Counter A	
[1673]	Counter B	
[1674]	Prec. Stop Counter	
[1675]	Analog In X30/11	
[1676]	Analog In X30/12	
[1677]	Analog Out X30/8 [mA]	
[1678]	Analog Out X45/1 [mA]	
[1679]	Analog Out X45/3 [mA]	
[1680]	Fieldbus CTW 1	
[1682]	Fieldbus REF 1	
[1684]	Comm. Option STW	
[1685]	FC Port CTW 1	
[1686]	FC Port REF 1	
[1690]	Alarm Word	
[1691]	Alarm Word 2	
[1692]	Warning Word	
[1693]	Warning Word 2	
[1694]	Ext. Status Word	
[1860]	Digital Input 2	
[3310]	Sync Factor Master	
[3311]	Sync Factor Slave	
[3401]	PCD 1 Write to MCO	
[3402]	PCD 2 Write to MCO	
[3403]	PCD 3 Write to MCO	
[3404]	PCD 4 Write to MCO	
[3405]	PCD 5 Write to MCO	
[3406]	PCD 6 Write to MCO	
[3407]	PCD 7 Write to MCO	
[3408]	PCD 8 Write to MCO	
[3409]	PCD 9 Write to MCO	
[3410]	PCD 10 Write to MCO	

9-23 Parameters for Signals		
Array [1000]		
Read only		
Option:	Function:	
[3421]	PCD 1 Read from MCO	
[3422]	PCD 2 Read from MCO	
[3423]	PCD 3 Read from MCO	
[3424]	PCD 4 Read from MCO	
[3425]	PCD 5 Read from MCO	
[3426]	PCD 6 Read from MCO	
[3427]	PCD 7 Read from MCO	
[3428]	PCD 8 Read from MCO	
[3429]	PCD 9 Read from MCO	
[3430]	PCD 10 Read from MCO	
[3440]	Digital Inputs	
[3441]	Digital Outputs	
[3450]	Actual Position	
[3451]	Commanded Position	
[3452]	Actual Master Position	
[3453]	Slave Index Position	
[3454]	Master Index Position	
[3455]	Curve Position	
[3456]	Track Error	
[3457]	Synchronizing Error	
[3458]	Actual Velocity	
[3459]	Actual Master Velocity	
[3460]	Synchronizing Status	
[3461]	Axis Status	
[3462]	Program Status	
[3464]	MCO 302 Status	
[3465]	MCO 302 Control	
[3470]	MCO Alarm Word 1	
[3471]	MCO Alarm Word 2	
[4280]	Safe Option Status	
[4285]	Active Safe Func.	
[4286]	Safe Option Info	

9-27 Parameter Edit		
Option:	Function:	
	Parameters can be edited via Profibus, the standard RS485 interface, or the LCP.	
[0]	Disabled	Disables editing via Profibus.
[1] *	Enabled	Enables editing via Profibus.

9-28 Process Control		
Option:	Function:	
		Process control (setting of the control word, speed reference, and process data) is possible via either Profibus or standard serial communication bus but not both simultaneously. Local control is always possible via the LCP. Control via process control is possible via either terminals or serial communication bus depending on the settings in 8-50 <i>Coasting Select</i> to 8-56 <i>Preset Reference Select</i> .
[0]	Disable	Disables process control via Profibus, and enables process control via standard serial communication bus or Profibus Master class 2.
[1] *	Enable cyclic master	Enables process control via Profibus Master Class 1, and disables process control via standard serial communication bus or Profibus Master class 2.

9-44 Fault Message Counter		
Range:	Function:	
0*	[0 - 65535]	This parameter displays the number of error events stored in 9-45 <i>Fault Code</i> and 9-47 <i>Fault Number</i> . The maximum buffer capacity is eight error events. The buffer and counter are set to 0 upon reset or power-up.

9-45 Fault Code		
Range:	Function:	
0*	[0 - 0]	This buffer contains the alarm word for all alarms and warnings that have occurred since the last reset or power-up. The maximum buffer capacity is eight error events.

9-47 Fault Number		
Range:	Function:	
0*	[0 - 0]	This buffer contains the alarm number (e.g., 2 for live zero error, 4 for line phase loss) for all alarms and warnings that have occurred since last reset or power-up. The maximum buffer capacity is eight error events.

9-52 Fault Situation Counter		
Range:	Function:	
0*	[0 - 1000]	This parameter displays the number of error events which have occurred since the last reset of power-up.

9-53 Profibus Warning Word		
Range:	Function:	
0 *	[0 - 65535]	This parameter displays Profibus communication warnings. Please refer to the <i>Profibus Instruction Manual</i> for further information.

Read only

Bit:	Meaning:
0	Connection with DP master is not ok
1	Not used
2	FDLNDL (Serial Communication Bus Data link Layer) is not ok
3	Clear data command received
4	Actual value is not updated
5	Baudrate search
6	PROFIBUS ASIC is not transmitting
7	Initialization of PROFIBUS is not ok
8	Adjustable frequency drive is tripped
9	Internal CAN error
10	Wrong configuration data from PLC
11	Wrong ID sent by PLC
12	Internal error occurred
13	Not configured
14	Timeout active
15	Warning 34 active

9-63 Actual Baud Rate		
Option:	Function:	
		This parameter displays the actual Profibus baud rate. The Profibus Master automatically sets the baud rate.
[0]	9,6 kbit/s	
[1]	19,2 kbit/s	
[2]	93,75 kbit/s	
[3]	187,5 kbit/s	
[4]	500 kbit/s	
[6]	1500 kbit/s	
[7]	3000 kbit/s	
[8]	6000 kbit/s	
[9]	12000 kbit/s	
[10]	31,25 kbit/s	
[11]	45,45 kbit/s	
[255] *	No baudrate found	

9-64 Device Identification		
Range:	Function:	
0*	[0 - 0]	This parameter displays the device identification. Please refer to the <i>Instruction Manual for Profibus, MG.33.CX.YY</i> for further explanation.

9-65 Profile Number		
Range:	Function:	
0 *	[0 - 0]	This parameter contains the profile identification. Byte 1 contains the profile number and byte 2 the version number of the profile.

NOTE!

This parameter is not visible via LCP.

9-67 Control Word 1		
Range:	Function:	
0*	[0 - 65535]	This parameter accepts the control word from a Master Class 2 in the same format as PCD 1.

9-68 Status Word 1		
Range:	Function:	
0*	[0 - 65535]	This parameter delivers the status word for a Master Class 2 in the same format as PCD 2.

9-70 Programming Set-up		
Option:	Function:	
		Select the set-up to be edited.
[0]	Factory setup	Uses default data. This option can be used as a data source to return the other set-ups to a known state.
[1]	Set-up 1	Edits Set-up 1.
[2]	Set-up 2	Edits Set-up 2.
[3]	Set-up 3	Edits Set-up 3.
[4]	Set-up 4	Edits Set-up 4.
[9] *	Active Set-up	Follows the active set-up selected in 0-10 Active Set-up.

This parameter is unique to LCP and serial communication busses. See also 0-11 Programming Set-up.

9-71 Profibus Save Data Values		
Option:	Function:	
		Parameter values changed via Profibus are not automatically stored in non-volatile memory. Use this parameter to activate a function that stores parameter values in the EEPROM non-volatile memory, so changed parameter values will be retained at power-down.
[0] *	Off	Deactivates the non-volatile storage function.
[1]	Store all setups	Stores all parameter values for all set-ups in the non-volatile memory. The selection returns to Off [0] when all parameter values have been stored.

9-71 Profibus Save Data Values		
Option:	Function:	
[2]	Store all setups	Stores all parameter values for all set-ups in the non-volatile memory. The selection returns to Off [0] when all parameter values have been stored.

9-72 ProfibusDriveReset		
Option:	Function:	
[0] *	No action	
[1]	Power-on reset	Resets Adjustable frequency drive upon power-up, as for power-cycle.
[3]	Comm option reset	Resets the Profibus option only, useful after changing certain settings in parameter group 9-**, e.g., 9-18 Node Address. When reset, the Adjustable frequency drive disappears from the serial communication bus, which may cause a communication error from the master.

9-75 DO Identification		
Range:	Function:	
0*	[0 - 65535]	Provides information about the DO (Drive Object).

9-80 Defined Parameters (1)		
Array [116]		
No LCP access		
Read only		
Range:	Function:	
0 *	[0 - 9999]	This parameter displays a list of all the defined Adjustable frequency drive parameters available for Profibus.

9-81 Defined Parameters (2)		
Array [116]		
No LCP access		
Read only		
Range:	Function:	
0 *	[0 - 9999]	This parameter displays a list of all the defined Adjustable frequency drive parameters available for Profibus.

9-82 Defined Parameters (3)		
Array [116]		
No LCP access		
Read only		
Range:	Function:	
0 *	[0 - 9999]	This parameter displays a list of all the defined Adjustable frequency drive parameters available for Profibus.

9-83 Defined Parameters (4)		
Array [116] No LCP access Read only		
Range:		Function:
0 *	[0 - 9999]	This parameter displays a list of all the defined Adjustable frequency drive parameters available for Profibus.

9-84 Defined Parameters (5)		
Range:		Function:
0*	[0 - 9999]	This parameter displays a list of all the defined Adjustable frequency drive parameters available for Profibus.

9-90 Changed Parameters (1)		
Array [116] No LCP access Read only		
Range:		Function:
0 *	[0 - 9999]	This parameter displays a list of all the Adjustable frequency drive parameters deviating from default setting.

9-91 Changed Parameters (2)		
Array [116] No LCP access Read only		
Range:		Function:
0 *	[0 - 9999]	This parameter displays a list of all the Adjustable frequency drive parameters deviating from default setting.

9-92 Changed Parameters (3)		
Array [116] No LCP access Read only		
Range:		Function:
0 *	[0 - 9999]	This parameter displays a list of all the Adjustable frequency drive parameters deviating from default setting.

9-94 Changed Parameters (5)		
Array [116] No LCP Address Read only		
Range:		Function:
0 *	[0 - 9999]	This parameter displays a list of all the Adjustable frequency drive parameters deviating from default setting.

3.12 Parameters: 10-** DeviceNet CAN Fieldbus

3.12.1 10-0* Common Settings

10-00 CAN Protocol		
Option:	Function:	
[0]	CANopen	
[1] *	DeviceNet	View the active CAN protocol.

NOTE!

The options depend on installed option.

10-01 Baud Rate Select		
Select the serial communication bus transmission speed. The selection must correspond to the transmission speed of the master and the other serial communication bus nodes.		
Option:	Function:	
[16]	10 Kbps	
[17]	20 Kbps	
[18]	50 Kbps	
[19]	100 Kbps	
[20] *	125 Kbps	
[21]	250 Kbps	
[22]	500 Kbps	

10-02 MAC ID		
Range:	Function:	
Application dependent*	[Application dependant]	Selection of station address. Every station connected to the same network must have an unambiguous address.

10-05 Readout Transmit Error Counter		
Range:	Function:	
0 *	[0 - 255]	View the number of CAN control transmission errors since the last power-up.

10-06 Readout Receive Error Counter		
Range:	Function:	
0 *	[0 - 255]	View the number of CAN control receipt errors since the last power-up.

10-07 Readout Bus Off Counter		
Range:	Function:	
0*	[0 - 255]	View the number of Bus Off events since the last power-up.

3.12.2 10-1* DeviceNet

10-10 Process Data Type Selection		
Option:	Function:	
		Select the Instance (message) for data transmission. The instances available are dependent upon the setting of <i>8-10 Control Profile</i> . When <i>8-10 Control Profile</i> is set to [0] <i>FC profile</i> , <i>10-10 Process Data Type Selection</i> options [0] and [1] are available. When <i>8-10 Control Profile</i> is set to [5] <i>ODVA</i> , <i>10-10 Process Data Type Selection</i> options [2] and [3] are available. Instances 100/150 and 101/151 are Danfoss-specific. Instances 20/70 and 21/71 are ODVA-specific AC Drive profiles. For guidelines in message selection, please refer to the <i>DeviceNet Instruction Manual</i> . Note that a change to this parameter will be executed immediately.
[0] *	INSTANCE 100/150	
[1]	INSTANCE 101/151	
[2]	INSTANCE 20/70	
[3]	INSTANCE 21/71	

10-11 Process Data Config Write		
Select the process write data for I/O assembly instances 101/151. Elements [2] and [3] of this array can be selected. Elements [0] and [1] of the array are fixed.		
Option:	Function:	
[0] *	None	
[302]	Minimum Reference	
[303]	Maximum Reference	
[312]	Catch up/slow Down Value	
[341]	Ramp 1 Ramp up Time	
[342]	Ramp 1 Ramp Down Time	
[351]	Ramp 2 Ramp up Time	
[352]	Ramp 2 Ramp down Time	
[380]	Jog Ramp Time	
[381]	Quick Stop Ramp Time	
[411]	Motor Speed Low Limit [RPM]	
[412]	Motor Speed Low Limit [Hz]	
[413]	Motor Speed High Limit [RPM]	
[414]	Motor Speed High Limit [Hz]	
[416]	Torque Limit Motor Mode	
[417]	Torque Limit Generator Mode	
[590]	Digital & Relay Bus Control	

10-11 Process Data Config Write

Select the process write data for I/O assembly instances 101/151. Elements [2] and [3] of this array can be selected. Elements [0] and [1] of the array are fixed.

Option:	Function:	
[593]	Pulse Out #27 Bus Control	
[595]	Pulse Out #29 Bus Control	
[597]	Pulse Out #X30/6 Bus Control	
[653]	Term 42 Output Bus Ctrl	
[663]	Terminal X30/8 Bus Control	
[673]	Terminal X45/1 Bus Control	
[683]	Terminal X45/3 Bus Control	
[748]	PCD Feed Forward	
[890]	Bus Jog 1 Speed	
[891]	Bus Jog 2 Speed	
[1680]	Fieldbus CTW 1	
[1682]	Fieldbus REF 1	
[1685]	FC Port CTW 1	
[1686]	FC Port REF 1	
[3310]	Sync Factor Master	
[3311]	Sync Factor Slave	
[3401]	PCD 1 Write to MCO	
[3402]	PCD 2 Write to MCO	
[3403]	PCD 3 Write to MCO	
[3404]	PCD 4 Write to MCO	
[3405]	PCD 5 Write to MCO	
[3406]	PCD 6 Write to MCO	
[3407]	PCD 7 Write to MCO	
[3408]	PCD 8 Write to MCO	
[3409]	PCD 9 Write to MCO	
[3410]	PCD 10 Write to MCO	

10-12 Process Data Config Read

Select the process read data for I/O assembly instances 101/151. Elements [2] and [3] of this array can be selected. Elements [0] and [1] of the array are fixed.

Option:	Function:	
[0] *	None	
[15]	Readout: actual setup	
[1472]	Legacy Alarm Word	
[1473]	Legacy Warning Word	
[1474]	Leg. Ext. Status Word	
[1500]	Operating Hours	
[1501]	Running Hours	
[1502]	kWh Counter	
[1600]	Control Word	
[1601]	Reference [Unit]	
[1602]	Reference %	
[1603]	Status Word	
[1605]	Main Actual Value [%]	
[1609]	Custom Readout	

10-12 Process Data Config Read

Select the process read data for I/O assembly instances 101/151. Elements [2] and [3] of this array can be selected. Elements [0] and [1] of the array are fixed.

Option:	Function:	
[1610]	Power [kW]	
[1611]	Power [hp]	
[1612]	Motor Voltage	
[1613]	Frequency	
[1614]	Motor Current	
[1615]	Frequency [%]	
[1616]	Torque [Nm]	
[1617]	Speed [RPM]	
[1618]	Motor Thermal	
[1619]	KTY sensor temperature	
[1620]	Motor Angle	
[1621]	Torque [%] High Res.	
[1622]	Torque [%]	
[1625]	Torque [Nm] High	
[1630]	DC Link Voltage	
[1632]	Brake Energy /s	
[1633]	Brake Energy /2 min	
[1634]	Heatsink Temp.	
[1635]	Inverter Thermal	
[1638]	SL Controller State	
[1639]	Control Card Temp.	
[1650]	External Reference	
[1651]	Pulse Reference	
[1652]	Feedback [Unit]	
[1653]	Digi Pot Reference	
[1657]	Feedback [RPM]	
[1660]	Digital Input	
[1661]	Terminal 53 Switch Setting	
[1662]	Analog Input 53	
[1663]	Terminal 54 Switch Setting	
[1664]	Analog Input 54	
[1665]	Analog Output 42 [mA]	
[1666]	Digital Output [bin]	
[1667]	Freq. Input #29 [Hz]	
[1668]	Freq. Input #33 [Hz]	
[1669]	Pulse Output #27 [Hz]	
[1670]	Pulse Output #29 [Hz]	
[1671]	Relay Output [bin]	
[1672]	Counter A	
[1673]	Counter B	
[1674]	Prec. Stop Counter	
[1675]	Analog In X30/11	
[1676]	Analog In X30/12	
[1677]	Analog Out X30/8 [mA]	
[1678]	Analog Out X45/1 [mA]	
[1679]	Analog Out X45/3 [mA]	

10-12 Process Data Config Read

Select the process read data for I/O assembly instances 101/151. Elements [2] and [3] of this array can be selected. Elements [0] and [1] of the array are fixed.

Option:	Function:
[1684]	Comm. Option STW
[1690]	Alarm Word
[1691]	Alarm Word 2
[1692]	Warning Word
[1693]	Warning Word 2
[1694]	Ext. Status Word
[1860]	Digital Input 2
[3421]	PCD 1 Read from MCO
[3422]	PCD 2 Read from MCO
[3423]	PCD 3 Read from MCO
[3424]	PCD 4 Read from MCO
[3425]	PCD 5 Read from MCO
[3426]	PCD 6 Read from MCO
[3427]	PCD 7 Read from MCO
[3428]	PCD 8 Read from MCO
[3429]	PCD 9 Read from MCO
[3430]	PCD 10 Read from MCO
[3440]	Digital Inputs
[3441]	Digital Outputs
[3450]	Actual Position
[3451]	Commanded Position
[3452]	Actual Master Position
[3453]	Slave Index Position
[3454]	Master Index Position
[3455]	Curve Position
[3456]	Track Error
[3457]	Synchronizing Error
[3458]	Actual Velocity
[3459]	Actual Master Velocity
[3460]	Synchronizing Status
[3461]	Axis Status
[3462]	Program Status
[3464]	MCO 302 Status
[3465]	MCO 302 Control
[3470]	MCO Alarm Word 1
[3471]	MCO Alarm Word 2
[4280]	Safe Option Status
[4285]	Active Safe Func.
[4286]	Safe Option Info

10-13 Warning Parameter

Range:	Function:
0* [0 - 65535]	View a DeviceNet-specific warning word. One bit is assigned to every warning. Please refer to the DeviceNet Instruction Manual (MG.33.DX.YY) for further information.

10-13 Warning Parameter

Range:	Function:																																		
	<table border="1"> <thead> <tr> <th>Bit:</th> <th>Meaning:</th> </tr> </thead> <tbody> <tr><td>0</td><td>BusNetwork not active</td></tr> <tr><td>1</td><td>Explicit connection timeout</td></tr> <tr><td>2</td><td>I/O connection</td></tr> <tr><td>3</td><td>Retry limit reached</td></tr> <tr><td>4</td><td>Actual is not updated</td></tr> <tr><td>5</td><td>CAN bus off</td></tr> <tr><td>6</td><td>I/O send error</td></tr> <tr><td>7</td><td>Initialization error</td></tr> <tr><td>8</td><td>No bus supply</td></tr> <tr><td>9</td><td>Bus off</td></tr> <tr><td>10</td><td>Error passive</td></tr> <tr><td>11</td><td>Error warning</td></tr> <tr><td>12</td><td>Duplicate MAC ID Error</td></tr> <tr><td>13</td><td>RX queue overrun</td></tr> <tr><td>14</td><td>TX queue overrun</td></tr> <tr><td>15</td><td>CAN overrun</td></tr> </tbody> </table>	Bit:	Meaning:	0	BusNetwork not active	1	Explicit connection timeout	2	I/O connection	3	Retry limit reached	4	Actual is not updated	5	CAN bus off	6	I/O send error	7	Initialization error	8	No bus supply	9	Bus off	10	Error passive	11	Error warning	12	Duplicate MAC ID Error	13	RX queue overrun	14	TX queue overrun	15	CAN overrun
Bit:	Meaning:																																		
0	BusNetwork not active																																		
1	Explicit connection timeout																																		
2	I/O connection																																		
3	Retry limit reached																																		
4	Actual is not updated																																		
5	CAN bus off																																		
6	I/O send error																																		
7	Initialization error																																		
8	No bus supply																																		
9	Bus off																																		
10	Error passive																																		
11	Error warning																																		
12	Duplicate MAC ID Error																																		
13	RX queue overrun																																		
14	TX queue overrun																																		
15	CAN overrun																																		

10-14 Net Reference

Read only from LCP

Option:	Function:
	Select the reference source in instance 21/71 and 20/70.
[0] * Off	Enables reference via analog/digital inputs.
[1] On	Enables reference via the serial communication bus.

10-15 Net Control

Read only from LCP

Option:	Function:
	Select the control source in Instance 21/71 and 20/70.
[0] * Off	Enables control via analog/digital inputs.
[1] On	Enable control via the serial communication bus.

3.12.3 10-2* COS Filters

10-20 COS Filter 1

Range:	Function:
0* [0 - 65535]	Enter the value for COS Filter 1 to set up the filter mask for the status word. When operating in COS (Change-Of-State), this function filters out bits in the status word that should not be sent if they change.

10-21 COS Filter 2		
Range:	Function:	
0*	[0 - 65535]	Enter the value for COS Filter 2, to set up the filter mask for the Main Actual Value. When operating in COS (Change-Of-State), this function filters out bits in the Main Actual Value that should not be sent if they change.

10-22 COS Filter 3		
Range:	Function:	
0*	[0 - 65535]	Enter the value for COS Filter 3, to set up the filter mask for PCD 3. When operating in COS (Change-Of-State), this function filters out bits in PCD 3 that should not be sent if they change.

10-23 COS Filter 4		
Range:	Function:	
0*	[0 - 65535]	Enter the value for COS Filter 4 to set up the filter mask for PCD 4. When operating in COS (Change-Of-State), this function filters out bits in PCD 4 that should not be sent if they change.

3.12.4 10-3* Parameter Access

Parameter group providing access to indexed parameters and defining programming set-up.

10-30 Array Index		
Range:	Function:	
0*	[0 - 255]	View array parameters. This parameter is valid only when a DeviceNet serial communication bus is installed.

10-31 Store Data Values		
Option:	Function:	
		Parameter values changed via DeviceNet are not automatically stored in non-volatile memory. Use this parameter to activate a function that stores parameter values in the EEPROM non-volatile memory, so that changed parameter values will be retained at power-down.
[0] *	Off	Deactivates the non-volatile storage function.
[1]	Store all setups	Stores all parameter values from the active set-up in the non-volatile memory. The selection returns to Off [0] when all values have been stored.
[2]	Store all setups	Stores all parameter values for all set-ups in the non-volatile memory. The selection returns to

10-31 Store Data Values		
Option:	Function:	
		Off [0] when all parameter values have been stored.

10-32 Devicenet Revision		
Range:	Function:	
Application dependent*	[0 - 65535]	View the DeviceNet revision number. This parameter is used for EDS file creation.
Application dependent*	[0 - 65535]	View the DeviceNet revision number. This parameter is used for EDS file creation.

10-33 Store Always		
Option:	Function:	
[0] *	Off	Deactivates non-volatile storage of data.
[1]	On	Stores parameter data received via DeviceNet in EEPROM non-volatile memory as default.

10-39 Devicenet F Parameters		
Range:	Function:	
0 *	[0 - 0]	This parameter is used to configure the Adjustable frequency drive via DeviceNet and build the EDS file.

3.13 Parameters: 12-** Ethernet

3.13.1 12-0* IP Settings

12-00 IP Address Assignment

Option: **Function:**

		Selects the IP address assignment method.
[0] *	Manual	IP-address can be set in <i>12-01 IP Address</i> IP Address.
[1]	DHCP	The IP address is assigned via DHCP server.
[2]	BOOTP	The IP address is assigned via BOOTP server.

12-01 IP Address

Range: **Function:**

	[000.000.000.000–255.255.255.255]	Configure the IP address of the option. Read-only if <i>12-00 IP Address Assignment</i> set to DHCP or BOOTP.
--	-----------------------------------	---

12-02 Subnet Mask

Range: **Function:**

	[000.000.000.000–255.255.255.255]	Configure the IP subnet mask of the option. Read-only if <i>12-00 IP Address Assignment</i> set to DHCP or BOOTP.
--	-----------------------------------	---

12-03 Default Gateway

Range: **Function:**

	[000.000.000.000 – 255.255.255.255]	Configure the IP default gateway of the option. Read-only if <i>12-00 IP Address Assignment</i> set to DHCP or BOOTP.
--	-------------------------------------	---

12-04 DHCP Server

Range: **Function:**

	[000.000.000.000–255.255.255.255]	Read only. Displays the IP address of the found DHCP or BOOTP server.
--	-----------------------------------	---

NOTE!

A power cycle is necessary after setting the IP parameters manually.

12-05 Lease Expires

Range: **Function:**

	[dd:hh:mm:ss]	Read only. Displays the lease time left for the current DHCP-assigned IP address.
--	---------------	---

12-06 Name Servers

Option: **Function:**

		IP addresses of Domain Name Servers. Can be automatically assigned when using DHCP.
[0]	Primary DNS	
[1]	Secondary DNS	

12-07 Domain Name

Range: **Function:**

Blank	[0–19 characters]	Domain name of the attached network. Can be automatically assigned when using DHCP.
-------	-------------------	---

12-08 Host Name

Range: **Function:**

Blank	[0–19 characters]	Logical (given) name of option.
-------	-------------------	---------------------------------

12-09 Physical Address

Range: **Function:**

	[00:1B:08:00:00:00–00:1B:08:FF:FF:FF]	Read only: Displays the Physical (MAC) address of the option.
--	---------------------------------------	---

3.13.2 12-1* Ethernet Link Parameters

12-1* Ethernet link parameters

Option: **Function:**

		Applies for whole parameter group.
[0]	Port 1	
[1]	Port 2	

12-10 Link Status

Option: **Function:**

		Read only. Displays the link status of the Ethernet ports.
[0]	No link	
[1]	Link	

12-11 Link Duration

Option: **Function:**

	Link Duration Port 1 (dd:hh:mm:ss)	Read only. Displays the duration of the present link on each port in dd:hh:mm:ss.
--	------------------------------------	---

12-12 Auto Negotiation

Option: **Function:**

		Configures Auto Negotiation of Ethernet link parameters, for each port: ON or OFF.
[0]	Off	<i>Link Speed</i> and <i>Link Duplex</i> can be configured in <i>12-13 Link Speed</i> and <i>12-14 Link Duplex</i> .
[1]	On	

12-13 Link Speed

Option: **Function:**

		Forces the link speed for each port at 10 or 100 Mbps. If <i>12-12 Auto Negotiation</i> is set to: ON, this parameter is read only and displays the actual link speed. "None" is displayed if no link is present.
[0] *	None	
[1]	10 Mbps	

12-13 Link Speed
Option: **Function:**

[2]	100 Mbps	
-----	----------	--

12-14 Link Duplex
Option: **Function:**

		Forces the duplex for each port to full or half duplex. If <i>12-12 Auto Negotiation</i> is set to: ON, this parameter is read-only.
[0]	Half duplex	
[1] *	Full duplex	

3.13.3 12-2* Process Data
12-20 Control Instance
Range: **Function:**

	[None, 20, 21, 100, 101, 103]	Read only. Displays the originator-to-target connection point. If no CIP connection is present, "None" is displayed.
--	-------------------------------	--

12-21 Process Data Config Write
Range: **Function:**

	[[0-9] PCD read 0-9]	Configuration of readable process data.
--	----------------------	---

NOTE!

To configure 2-word (32-bit) parameters for read/write, use two consecutive arrays in *12-21 Process Data Config Write* and *12-22 Process Data Config Read*.

12-22 Process Data Config Read
Range: **Function:**

	[[0-9] PCD read 0-9]	Configuration of readable process data.
--	----------------------	---

12-23 Process Data Config Write Size
Range: **Function:**

16*	[1 - 32]	Sets the number of bits being sent from the drive as process data. The setting counts from right (LSB). The value 1 means that only the least significant bit of the signal will be transferred from the drive.
-----	-----------	---

12-24 Process Data Config Read Size
Range: **Function:**

16*	[1 - 32]	Sets the number of bits being sent to the drive as process data. The setting counts from right (LSB). The value 1 means that only the least significant bit of the signal will be transferred to the drive. The preceding bits will be set to zero.
-----	-----------	---

12-27 Primary Master
Range: **Function:**

0*	[0 - 4294967295]	Controls the master's access to the process data. The value zero (0.0.0.0) means that other masters can take control of the drive immediately if the connection is lost or closed. Setting an IP number means that only a master with this value can establish a connection for controlling the drive. In systems with backup masters, this parameter should be left to the value zero (0.0.0.0).
----	-------------------	---

12-28 Store Data Values
Option: **Function:**

		This parameter activates a function that stores all parameter values in the non-volatile memory (EEPROM) thus retaining parameter values at power-down. The parameter returns to "Off".
[0] *	Off	The store function is inactive.
[1]	Store all set-ups	All parameter value will be stored in the non-volatile memory in all four set-ups.

12-29 Store Always
Option: **Function:**

		Activates function that will always store received parameter data in non-volatile memory (EEPROM).
[0] *	Off	
[1]	On	

3.13.4 12-3* EtherNet/IP

12-30 Warning parameter																																			
Range:	Function:																																		
[0000–FFFF hex]	Read only. Displays the EtherNet/IP specific 16-bit status word.																																		
	<table border="1"> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr><td>0</td><td>Owned</td></tr> <tr><td>1</td><td>Not used</td></tr> <tr><td>2</td><td>Configured</td></tr> <tr><td>3</td><td>Not used</td></tr> <tr><td>4</td><td>Not used</td></tr> <tr><td>5</td><td>Not used</td></tr> <tr><td>6</td><td>Not used</td></tr> <tr><td>7</td><td>Not used</td></tr> <tr><td>8</td><td>Minor recoverable fault</td></tr> <tr><td>9</td><td>Minor unrecoverable fault</td></tr> <tr><td>10</td><td>Major recoverable fault</td></tr> <tr><td>11</td><td>Major unrecoverable fault</td></tr> <tr><td>12</td><td>Not used</td></tr> <tr><td>13</td><td>Not used</td></tr> <tr><td>14</td><td>Not used</td></tr> <tr><td>15</td><td>Not used</td></tr> </tbody> </table>	Bit	Description	0	Owned	1	Not used	2	Configured	3	Not used	4	Not used	5	Not used	6	Not used	7	Not used	8	Minor recoverable fault	9	Minor unrecoverable fault	10	Major recoverable fault	11	Major unrecoverable fault	12	Not used	13	Not used	14	Not used	15	Not used
Bit	Description																																		
0	Owned																																		
1	Not used																																		
2	Configured																																		
3	Not used																																		
4	Not used																																		
5	Not used																																		
6	Not used																																		
7	Not used																																		
8	Minor recoverable fault																																		
9	Minor unrecoverable fault																																		
10	Major recoverable fault																																		
11	Major unrecoverable fault																																		
12	Not used																																		
13	Not used																																		
14	Not used																																		
15	Not used																																		

12-31 Net Reference	
Option:	Function:
	Read only. Displays the reference source in Instance 21/71.
[0] * Off	Reference from the network is not active.
[1] On	Reference from the network is active.

12-32 Net Control	
Option:	Function:
	Read only. Displays the control source in Instance 21/71.
[0] * Off	Control via the network is not active.
[1] On	Control via the network is active

12-33 CIP Revision	
Option:	Function:
	Read only. Displays the CIP version of the option software.
[0] Major version (00–99)	
[1] Minor version (00–99)	

12-34 CIP Product Code	
Range:	Function:
1100 (FC 302) 1110 (FC 301)*	[0 – 9999] Read only. Displays the CIP product code.

12-37 COS Inhibit Timer	
Range:	Function:
[0–65.535 ms]	Read-only Change-Of-State inhibit timer. If the option is configured for COS operation, this inhibit timer can be configured in the Forward Open message to prevent that continuously changing PCD data generates extensive network traffic. The inhibit time is in milliseconds, 0 = disabled.

12-38 COS Filters	
Range:	Function:
[[0–9] Filter 0–9 (0000–FFFFhex)]	Change-Of-State PCD filters. Sets up a filter mask for each word of process data when operating in COS mode. Single bits in the PCDs can be filtered in/out.

12-50 Configured Station Alias	
Range:	Function:
0* [0 - 65535]	The parameter shows the configured EtherCAT station alias for the Adjustable frequency drive. Changes will first be active after a power cycle.

12-51 Configured Station Address	
Range:	Function:
0* [0 - 65535]	The parameter shows the configured station address. The parameter can only be set by the master at power-up.

12-59 EtherCAT Status	
Range:	Function:
0* [0 - 4294967295]	This parameter contains status information on the EtherCAT interface. Refer to the EtherCAT manual for detailed information.

12-80 FTP Server	
Option:	Function:
[0] * Disable	Disables the built-in FTP server.
[1] Enable	Enables the built-in FTP server.

12-81 HTTP Server	
Option:	Function:
[0] * Disable	Disables the built-in HTTP (web) server.
[1] Enable	Enables the built-in HTTP (web) server.

12-82 SMTP Service	
Option:	Function:
[0] * Disable	Disables the SMTP (e-mail) service on the option.
[1] Enable	Enables the SMTP (e-mail) service on the option.

12-89 Transparent Socket Channel Port

Range:		Function:
0*	[0 – 9999]	Configures the TCP port number for the transparent socket channel. This enables FC messages to be sent transparently on Ethernet via TCP. Default value is 4000, 0 means disabled.

12-90 Cable Diagnostics

Option:		Function:
		Enables/disables advanced cable diagnosis function. If enabled, the distance to cable errors can be read out in <i>12-93 Cable Error Length</i> . The parameter resumes to the default setting of Disable after the diagnostics have finished.
[0] *	Disable	
[1]	Enable	

NOTE!

The cable diagnostics function will only be issued on ports where there is no link (see *12-10 Link Status, Link Status*)

12-91 Auto Cross-Over

Option:		Function:
[0]	Disable	Disables the auto cross-over function.
[1] *	Enable	Enables the auto cross-over function.

NOTE!

Disabling of the auto cross-over function will require crossed Ethernet cables for daisy-chaining the options.

12-92 IGMP Snooping

Option:		Function:
		This prevents flooding of the Ethernet protocol stack by only forwarding multicast packets to ports that are a member of the multicast group
[0]	Disable	Disables the IGMP snooping function.
[1] *	Enable	Enables the IGMP snooping function.

12-93 Cable Error Length

Option:		Function:
		If Cable Diagnostics is enabled in 12-90, the built-in switch is able via Time Domain Reflectometry (TDR). This is a measurement technique which detects common cabling problems such as open circuits, short circuits and impedance mismatches or breaks in transmission cables. The distance from the option to the error is displayed in meters [feet] with an accuracy of +/- 2 m [6.5 ft]. The value 0 means no errors detected.

12-93 Cable Error Length

Option:		Function:
[0]	Error length Port 1 (0–656 ft [0–200 m])	
[1]	Error length Port 2 (0–656 ft [0–200 m])	

12-94 Broadcast Storm Protection

Option:		Function:
		The built-in switch is capable of protecting the switch system from receiving too many broadcast packages, which can use up network resources. The value indicates a percentage of the total bandwidth that is allowed for broadcast messages. Example: The “OFF” means that the filter is disabled, and all broadcast messages will be passed through. The value “0%” means that no broadcast messages will be passed through. A value of “10%” means that 10% of the total bandwidth is allowed for broadcast messages. If the amount of broadcast messages increases above the 10% threshold, they will be blocked.
[0]	Protection Value Port 1 (*Off – 20%)	
[1]	Protection Value Port 2 (*Off – 20%)	

12-95 Broadcast Storm Filter

Option:		Function:
		Applies to <i>12-94 Broadcast Storm Protection</i> ; if Broadcast Storm Protection should also include Multicast messages.
[0]	Broadcast only	
[1]	Broadcast & Multicast	

12-96 Port Config

Enables/disables port mirroring function. For troubleshooting with a network analyzer tool.

Option:		Function:
[0] *	Normal	No port mirroring
[1]	Mirror Port 1 to 2	All network traffic on port 1 will be mirrored to port 2.

12-96 Port Config

Enables/disables port mirroring function. For troubleshooting with a network analyzer tool.

Option:
Function:

[2]	Mirror Port 2 to 1	All network traffic on port 2 will be mirrored to port 1.
[254]	Mirror Int. Port to 1	
[255]	Mirror Int. Port to 2	

12-98 Interface Counters
Option:
Function:

		Read only. Advanced interface counters from the built-in switch can be used for low-level troubleshooting. The parameter shows the sum of port 1 + port 2.
[0]	In Octets	
[1]	In Unicast Packets	
[2]	In Non-Unicast Packets	
[3]	In Discards	
[4]	In Errors	
[5]	In Unknown Protocols	
[6]	Out Octets	
[7]	Out Unicast Packets	
[8]	Out Non-Unicast Packets	
[9]	Out Discards	
[10]	Out Errors	

12-99 Media Counters
Option:
Function:

		Read only. Advanced interface counters from the built-in switch can be used for low-level troubleshooting. The parameter shows the sum of port 1 + port 2.
[0]	Alignment Errors	
[1]	FCS Errors	
[2]	Single Collisions	
[3]	Multiple Collisions	
[4]	SQE Test Errors	
[5]	Deferred Errors	
[6]	Late Collisions	
[7]	Excessive Collisions	
[8]	MAC Transmit Errors	
[9]	Carrier Sense Errors	
[10]	Frame Too Long	
[11]	MAC Receive Errors	


3.14 Parameters: 13-** Smart Logic Control

3.14.1 Prog. Features


3

Smart Logic Control (SLC) is essentially a sequence of user-defined actions (see 13-52 *SL Controller Action [x]*) executed by the SLC when the associated user-defined event (see 13-51 *SL Controller Event [x]*) is evaluated as TRUE by the SLC .

The condition for an event can be a particular status or that the output from a logic rule or a comparator operand becomes TRUE. That will lead to an associated action as illustrated:

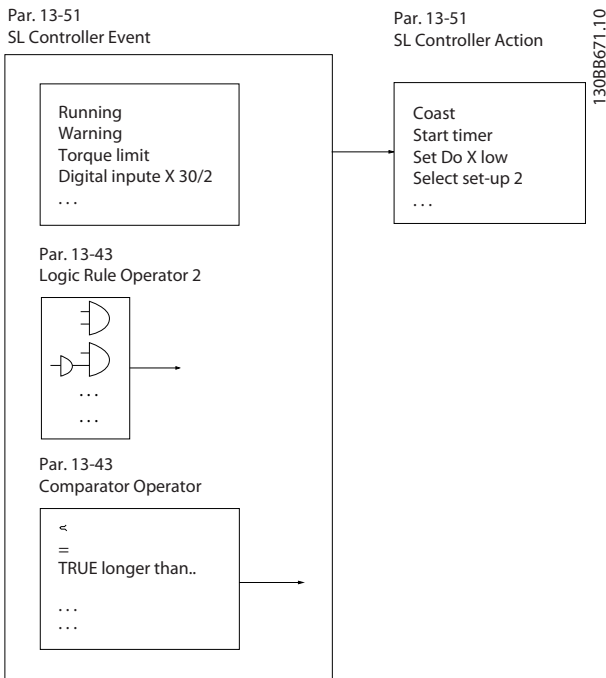

Events and actions are each numbered and linked together in pairs (states). This means that when event [0] is fulfilled (attains the value TRUE), action [0] is executed. After this, the conditions of event [1] will be evaluated and if evaluated TRUE, action [1] will be executed and so on. Only one event will be evaluated at any time. If an event is evaluated as FALSE, nothing happens (in the SLC) during the current scan interval and no other events will be evaluated. This means that when the SLC starts, it evaluates event [0] (and only event [0]) each scan interval. Only when event [0] is evaluated TRUE, will the SLC execute action [0] and start evaluating event [1]. It is possible to program from 1 to 20 events and actions. When the last event / action has been executed, the sequence starts over again from event [0] / action [0]. The figure shows an example with three events/actions:

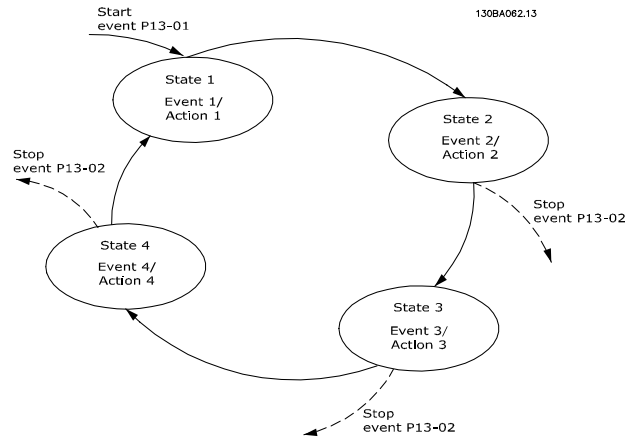

Starting and stopping the SLC:

Starting and stopping the SLC can be done by selecting .On [1]. or .Off [0]. in 13-00 *SL Controller Mode*. The SLC always starts in state 0 (where it evaluates event [0]). The SLC starts when the Start Event (defined in 13-01 *Start Event*) is evaluated as TRUE (provided that On [1] is selected in 13-00 *SL Controller Mode*). The SLC stops when the Stop Event (13-02 *Stop Event*) is TRUE. 13-03 *Reset SLC* resets all SLC parameters and start programming from scratch.

3.14.2 13-0* SLC Settings

Use the SLC settings to activate, deactivate and reset the Smart Logic Control sequence. The logic functions and comparators are always running in the background, which opens for separate control of digital inputs and outputs.

13-00 SL Controller Mode		
Option:	Function:	
[0]	Off	Disables the Smart Logic Controller.
[1]	On	Enables the Smart Logic Controller.

13-01 Start Event		
Option:	Function:	
[0] *	False	Select the Boolean (TRUE or FALSE) input to activate Smart Logic Control. <i>False</i> [0] enters the fixed value - FALSE
[1]	True	<i>True</i> [1] enters the fixed value - TRUE.
[2]	Running	<i>Running</i> [2] The motor is running.
[3]	In range	<i>In range</i> [3] The motor is running within the programmed current and speed ranges set in 4-50 <i>Warning Current Low</i> to 4-53 <i>Warning Speed High</i> .

13-01 Start Event		
Option:	Function:	
[4]	On reference	<i>On reference</i> [4] The motor is running on reference.
[5]	Torque limit	<i>Torque limit</i> [5] The torque limit, set in 4-16 <i>Torque Limit Motor Mode</i> or 4-17 <i>Torque Limit Generator Mode</i> , has been exceeded.
[6]	Current limit	<i>Current limit</i> [6] The motor current limit, set in 4-18 <i>Current Limit</i> , has been exceeded.
[7]	Out of current range	<i>Out of current range</i> [7] The motor current is outside the range set in 4-18 <i>Current Limit</i> .
[8]	Below I low	<i>Below I low</i> [8] The motor current is lower than set in 4-50 <i>Warning Current Low</i> .
[9]	Above I high	<i>Above I high</i> [9] The motor current is higher than set in 4-51 <i>Warning Current High</i> .
[10]	Out of speed range	<i>Out of speed range</i> [10] The speed is outside the range set in 4-52 <i>Warning Speed Low</i> and 4-53 <i>Warning Speed High</i> .
[11]	Below speed low	<i>Below speed low</i> [11] The output speed is lower than the setting in 4-52 <i>Warning Speed Low</i> .
[12]	Above speed high	<i>Above speed high</i> [12] The output speed is higher than the setting in 4-53 <i>Warning Speed High</i> .
[13]	Out of feedb. range	<i>Out of feedb. Range</i> [13] The feedback is outside the range set in 4-56 <i>Warning Feedback Low</i> and 4-57 <i>Warning Feedback High</i> .
[14]	Below feedb. low	<i>Below feedb. Low</i> [14] The feedback is below the limit set in 4-56 <i>Warning Feedback Low</i> .
[15]	Above feedb. high	<i>Above feedb. High</i> [15] The feedback is above the limit set in 4-57 <i>Warning Feedback High</i> .
[16]	Thermal warning	<i>Thermal warning</i> [16] The thermal warning turns on when the temperature exceeds the limit in the motor, the Adjustable frequency drive, the brake resistor or the thermistor.
[17]	Mains out of range	<i>Mains out of range</i> [17] The AC line voltage is outside the specified voltage range.

13-01 Start Event		
Option:	Function:	
[18]	Reversing	<i>Reverse</i> [18] The output is high when the Adjustable frequency drive is running counter clockwise (the logical product of the status bits "running" AND "reverse").
[19]	Warning	<i>Warning</i> [19] A warning is active.
[20]	Alarm (trip)	<i>Alarm (trip)</i> [20] A (trip) alarm is active.
[21]	Alarm (trip lock)	<i>Alarm (trip lock)</i> [21] A (Trip lock) alarm is active.
[22]	Comparator 0	<i>Comparator 0</i> [22] Use the result of comparator 0.
[23]	Comparator 1	<i>Comparator 1</i> [23] Use the result of comparator 1.
[24]	Comparator 2	<i>Comparator 2</i> [24] Use the result of comparator 2.
[25]	Comparator 3	<i>Comparator 3</i> [25] Use the result of comparator 3.
[26]	Logic rule 0	<i>Logic rule 0</i> [26] Use the result of logic rule 0.
[27]	Logic rule 1	<i>Logic rule 1</i> [27] Use the result of logic rule 1.
[28]	Logic rule 2	<i>Logic rule 2</i> [28] Use the result of logic rule 2.
[29]	Logic rule 3	<i>Logic rule 3</i> [29] Use the result of logic rule 3.
[33]	Digital input DI18	<i>Digital input DI18</i> [33] Use the result of digital input 18.
[34]	Digital input DI19	<i>Digital input DI19</i> [34] Use the result of digital input 19.
[35]	Digital input DI27	<i>Digital input DI27</i> [35] Use the result of digital input 27.
[36]	Digital input DI29	<i>Digital input DI27</i> [35] Use the result of digital input 29.
[37]	Digital input DI32	<i>Digital input DI32</i> [37] Use the result of digital input 32.
[38]	Digital input DI33	<i>Digital input DI33</i> [38] Use the result of digital input 33.
[39]	Start command	<i>Start command</i> [39] A start command is issued.
[40]	Drive stopped	<i>Drive stopped</i> [40] A stop command (Jog, Stop, Qstop, Coast) is issued – and not from the SLC itself.
[41]	Reset Trip	<i>Reset Trip</i> [41] A reset is issued

13-01 Start Event		
Option:	Function:	
[42]	Auto-reset Trip	<i>Auto-reset Trip</i> [42]: an auto reset is performed.
[43]	Ok key	<i>OK key</i> [43] The [OK] key is pressed.
[44]	Reset key	<i>Reset key</i> [44] The [Reset] key is pressed.
[45]	Left key	<i>Left key</i> [45] The [◀] key is pressed.
[46]	Right key	<i>Right key</i> [46] The [▶] key is pressed.
[47]	Up key	<i>Up key</i> [47] The [▲] key is pressed.
[48]	Down key	<i>Down key</i> [48] The [▼] key is pressed.
[50]	Comparator 4	<i>Comparator 4</i> [50] Use the result of comparator 4.
[51]	Comparator 5	<i>Comparator 5</i> [51] Use the result of comparator 5.
[60]	Logic rule 4	<i>Logic rule 4</i> [60] Use the result of logic rule 4.
[61]	Logic rule 5	<i>Logic rule 5</i> [61] Use the result of logic rule 5.
[94]	RS Flipflop 0	
[95]	RS Flipflop 1	
[96]	RS Flipflop 2	
[97]	RS Flipflop 3	
[98]	RS Flipflop 4	
[99]	RS Flipflop 5	
[100]	RS Flipflop 6	
[101]	RS Flipflop 7	

13-02 Stop Event		
Select the Boolean (TRUE or FALSE) input to activate Smart Logic Control.		
Option:	Function:	
[0] *	False	For descriptions [0] - [61], see <i>13-01 Start Event Start Event</i>
[1]	True	
[2]	Running	
[3]	In range	
[4]	On reference	
[5]	Torque limit	
[6]	Current limit	
[7]	Out of current range	
[8]	Below I low	
[9]	Above I high	
[10]	Out of speed range	
[11]	Below speed low	
[12]	Above speed high	
[13]	Out of feedb. range	


13-02 Stop Event		
Select the Boolean (TRUE or FALSE) input to activate Smart Logic Control.		
Option:	Function:	
[14]	Below feedb. low	
[15]	Above feedb. high	
[16]	Thermal warning	
[17]	Mains out of range	
[18]	Reversing	
[19]	Warning	
[20]	Alarm (trip)	
[21]	Alarm (trip lock)	
[22]	Comparator 0	
[23]	Comparator 1	
[24]	Comparator 2	
[25]	Comparator 3	
[26]	Logic rule 0	
[27]	Logic rule 1	
[28]	Logic rule 2	
[29]	Logic rule 3	
[30]	SL Time-out 0	
[31]	SL Time-out 1	
[32]	SL Time-out 2	
[33]	Digital input DI18	
[34]	Digital input DI19	
[35]	Digital input DI27	
[36]	Digital input DI29	
[37]	Digital input DI32	
[38]	Digital input DI33	
[39]	Start command	
[40]	Drive stopped	
[41]	Reset Trip	
[42]	Auto-reset Trip	
[43]	Ok key	
[44]	Reset key	
[45]	Left key	
[46]	Right key	
[47]	Up key	
[48]	Down key	
[50]	Comparator 4	
[51]	Comparator 5	
[60]	Logic rule 4	
[61]	Logic rule 5	
[70]	SL Time-out 3	<i>SL Timeout 3</i> [70] Smart Logic Controller timer 3 is timed out.
[71]	SL Time-out 4	<i>SL Timeout 4</i> [71] Smart Logic Controller timer 4 is timed out.
[72]	SL Time-out 5	<i>SL Timeout 5</i> [72] Smart Logic Controller timer 5 is timed out.

13-02 Stop Event		
Select the Boolean (TRUE or FALSE) input to activate Smart Logic Control.		
Option:	Function:	
[73]	SL Time-out 6	SL- Timeout 6 [73] Smart Logic Controller timer 6 is timed out.
[74]	SL Time-out 7	SL Timeout 7 [74] Smart Logic Controller timer 7 is timed out.
[75]	Start command given	
[76]	Digital input x30/2	
[77]	Digital input x30/3	
[78]	Digital input x30/4	
[79]	Digital input x46/1	
[80]	Digital input x46/3	
[81]	Digital input x46/5	
[82]	Digital input x46/7	
[83]	Digital input x46/9	
[84]	Digital input x46/11	
[85]	Digital input x46/13	
[90]	ATEX ETR cur. warning	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1.
[91]	ATEX ETR cur. alarm	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1.
[92]	ATEX ETR freq. warning	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1.
[93]	ATEX ETR freq. alarm	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1.
[94]	RS Flipflop 0	
[95]	RS Flipflop 1	
[96]	RS Flipflop 2	
[97]	RS Flipflop 3	
[98]	RS Flipflop 4	
[99]	RS Flipflop 5	
[100]	RS Flipflop 6	
[101]	RS Flipflop 7	

13-03 Reset SLC		
Option:	Function:	
[0] *	Do not reset SLC	Retains programmed settings in all group 13 parameters (13-**).
[1]	Reset SLC	Resets all group 13 parameters (13-**) to default settings.

3.14.3 13-1* Comparators

Comparators are used for comparing continuous variables (i.e., output frequency, output current, analog input, etc.) to fixed preset values.

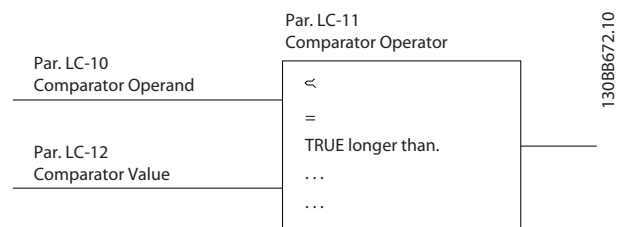

In addition, there are digital values that will be compared to fixed time values. See explanation in 13-10 Comparator Operand. Comparators are evaluated once in each scan interval. Use the result (TRUE or FALSE) directly. All parameters in this parameter group are array parameters with index 0 to 5. Select index 0 to program Comparator 0, select index 1 to program Comparator 1, etc.

13-10 Comparator Operand		
Array [6]		
Option:	Function:	
[0] *	DISABLED	DISABLED [0] The comparator is disabled.
[1]	Reference	Reference [1] The resulting remote reference (not local) as a percentage.
[2]	Feedback	Feedback [2] In the unit [RPM] or [Hz]
[3]	Motor speed	Motor speed [3] [RPM] or [Hz]
[4]	Motor current	Motor current [4] [A]
[5]	Motor torque	Motor torque [5] [Nm]

13-10 Comparator Operand		
Array [6]		
Option:	Function:	
[6]	Motor power	<i>Motor power</i> [6] [kW] or [hp]
[7]	Motor voltage	<i>Motor voltage</i> [7] [V]
[8]	DC-link voltage	<i>DC-link voltage</i> [8] [V]
[9]	Motor thermal	<i>Motor thermal</i> [9] Expressed as a percentage.
[10]	Drive thermal	<i>VLT thermal</i> [10] Expressed as a percentage.
[11]	Heat sink temp.	<i>Heatsink temp</i> [11] Expressed as a percentage.
[12]	Analog input AI53	<i>Analog input AI53</i> [12] Expressed as a percentage.
[13]	Analog input AI54	<i>Analog input AI54</i> [13] Expressed as a percentage.
[14]	Analog input AIFB10	<i>Analog input AIFB10</i> [14] [V]. AIFB10 is internal 10V supply.
[15]	Analog input AIS24V	<i>Analog input AIS24V</i> [15] [V] Analog input AICCT [17] [°]. AIS24V is switch mode power supply: SMPS 24V.
[17]	Analog input AICCT	Analog input AICCT [17] [°]. AICCT is control card temperature.
[18]	Pulse input FI29	<i>Pulse input FI29</i> [18] Expressed as a percentage.
[19]	Pulse input FI33	<i>Pulse input FI33</i> [19] Expressed as a percentage.
[20]	Alarm number	<i>Alarm number</i> [20] The error number.
[21]	Warning number	
[22]	Analog input x30 11	
[23]	Analog input x30 12	
[30]	Counter A	<i>Counter A</i> [30] Number of counts
[31]	Counter B	<i>Counter B</i> [31] Number of counts
[50]	FALSE	<i>False</i> [50] Enters the fixed value of false in the comparator.
[51]	TRUE	<i>True</i> [51] Enters the fixed value of true in the comparator.
[52]	Control ready	<i>Control ready</i> [52] The control board receives supply voltage
[53]	Drive ready	<i>Drive ready</i> [53] The Adjustable frequency drive is ready for operation and applies a supply signal on the control board.

13-10 Comparator Operand		
Array [6]		
Option:	Function:	
[54]	Running	<i>Running</i> [54] The motor is running.
[55]	Reversing	<i>Reversing</i> [55] The output is high when the Adjustable frequency drive is running counter clockwise (the logical product of the status bits "running" AND "reverse")
[56]	In range	<i>In range</i> [56] The motor is running within the programmed current and speed ranges set in 4-50 <i>Warning Current Low</i> to 4-53 <i>Warning Speed High</i> .
[60]	On reference	<i>On reference</i> [60] The motor is running on reference.
[61]	Below reference, low	<i>Below reference, low</i> [61] The motor is running below the value given in 4-54 <i>Warning Reference Low</i>
[62]	Above ref, high	<i>Above reference, high</i> [62] The motor is running above the value given in 4-55 <i>Warning Reference High</i>
[65]	Torque limit	<i>Torque limit</i> [65] The torque limit, set in 4-16 <i>Torque Limit Motor Mode</i> or 4-17 <i>Torque Limit Generator Mode</i> , has been exceeded.
[66]	Current limit	<i>Current limit</i> [66] The motor current limit, set in 4-18 <i>Current Limit</i> , has been exceeded.
[67]	Out of current range	<i>Out of current range</i> [67] The motor current is outside the range set in 4-18 <i>Current Limit</i> .
[68]	Below I low	<i>Below I low</i> [68] The motor current is lower than set in 4-50 <i>Warning Current Low</i> .
[69]	Above I high	<i>Above I high</i> [69] The motor current is higher than set in 4-51 <i>Warning Current High</i> .
[70]	Out of speed range	<i>Out of speed range</i> [70] The speed is outside the range set in 4-52 <i>Warning Speed Low</i> and 4-53 <i>Warning Speed High</i> .
[71]	Below speed low	<i>Below speed low</i> [71] The output speed is lower than the setting in 4-52 <i>Warning Speed Low</i> .
[72]	Above speed high	<i>Above speed high</i> [72] The output speed is higher than the setting in 4-53 <i>Warning Speed High</i> .
[75]	Out of feedb. range	<i>Out of feedb. Range</i> [75] The feedback is outside the range set in 4-56 <i>Warning</i>

13-10 Comparator Operand		
Array [6]		
Option:	Function:	
		<i>Feedback Low</i> and 4-57 <i>Warning Feedback High</i> .
[76]	Below feedb. low	<i>Below feedb. Low</i> [76] The feedback is below the limit set in 4-56 <i>Warning Feedback Low</i> .
[77]	Above feedb. high	<i>Above feedb. High</i> [77] The feedback is above the limit set in 4-57 <i>Warning Feedback High</i> .
[80]	Thermal warning	<i>Thermal warning</i> [80] The thermal warning turns on when the temperature exceeds the limit in the motor, the Adjustable frequency drive, the brake resistor or thermistor.
[82]	Mains out of range	<i>Line power out of range</i> [82] The AC line voltage is outside the specified voltage range.
[85]	Warning	<i>Warning</i> [85] A warning is active.
[86]	Alarm (trip)	<i>Alarm (trip)</i> [86] A (trip) alarm is active.
[87]	Alarm (trip lock)	<i>Alarm (trip lock)</i> [87] A (Trip lock) alarm is active.
[90]	Bus OK	<i>Bus OK</i> [90] Active communication (no timeout) via the serial communication port.
[91]	Torque limit & stop	<i>Torque limit & stop</i> [91] If the Adjustable frequency drive has received a stop signal and is at the torque limit, the signal is logic "0".
[92]	Brake fault (IGBT)	<i>Brake fault (IGBT)</i> [92] The brake IGBT is short circuited.
[93]	Mech. brake control	<i>Mech. brake control</i> [93] The mechanical brake is active.
[94]	Safe stop active	
[100]	Comparator 0	<i>Comparator 0</i> [100] The result of comparator 0.
[101]	Comparator 1	<i>Comparator 1</i> [101] The result of comparator 1.
[102]	Comparator 2	<i>Comparator 2</i> [102] The result of comparator 2.
[103]	Comparator 3	<i>Comparator 3</i> [103] The result of comparator 3.
[104]	Comparator 4	<i>Comparator 4</i> [104] The result of comparator 4.
[105]	Comparator 5	<i>Comparator 5</i> [105] The result of comparator 5.

13-10 Comparator Operand		
Array [6]		
Option:	Function:	
[110]	Logic rule 0	<i>Logic rule 0</i> [110] The result of logic rule 0.
[111]	Logic rule 1	<i>Logic rule 1</i> [111] The result of logic rule 1.
[112]	Logic rule 2	<i>Logic rule 2</i> [112] The result of logic rule 2.
[113]	Logic rule 3	<i>Logic rule 3</i> [113] The result of logic rule 3.
[114]	Logic rule 4	<i>Logic rule 4</i> [114] The result of logic rule 4.
[115]	Logic rule 5	<i>Logic rule 5</i> [115] The result of logic rule 5.
[120]	SL Time-out 0	<i>SL Timeout 0</i> [120] The result of SLC timer 0.
[121]	SL Time-out 1	<i>SL Timeout 1</i> [121] The result of SLC timer 1.
[122]	SL Time-out 2	<i>SL Timeout 2</i> [122] The result of SLC timer 2.
[123]	SL Time-out 3	<i>SL Timeout 3</i> [123] The result of SLC timer 3.
[124]	SL Time-out 4	<i>SL Timeout 4</i> [124] The result of SLC timer 4.
[125]	SL Time-out 5	<i>SL Timeout 5</i> [125] The result of SLC timer 5.
[126]	SL Time-out 6	<i>SL Timeout 6</i> [126] The result of SLC timer 6.
[127]	SL Time-out 7	<i>SL Timeout 7</i> [127] The result of SLC timer 7.
[130]	Digital input DI18	<i>Digital input DI18</i> [130] Digital input 18. High = True.
[131]	Digital input DI19	<i>Digital input DI19</i> [131] Digital input 19. High = True.
[132]	Digital input DI27	<i>Digital input DI27</i> [132] Digital input 27. High = True.
[133]	Digital input DI29	<i>Digital input DI29</i> [133] Digital input 29. High = True.
[134]	Digital input DI32	<i>Digital input DI32</i> [134] Digital input 32. High = True.
[135]	Digital input DI33	<i>Digital input DI33</i> [135] Digital input 33. High = True.
[150]	SL digital output A	<i>SL digital output A</i> [150] Use the result of the SLC output A.

13-10 Comparator Operand		
Array [6]		
Option:	Function:	
[151]	SL digital output B	<i>SL digital output B</i> [151] Use the result of the SLC output B.
[152]	SL digital output C	<i>SL digital output C</i> [152] Use the result of the SLC output C.
[153]	SL digital output D	<i>SL digital output D</i> [153] Use the result of the SLC output D.
[154]	SL digital output E	<i>SL digital output E</i> [154] Use the result of the SLC output E.
[155]	SL digital output F	<i>SL digital output F</i> [155] Use the result of the SLC output F.
[160]	Relay 1	<i>Relay 1</i> [160] Relay 1 is active
[161]	Relay 2	<i>Relay 2</i> [161] Relay 2 is active
[180]	Local ref. active	<i>Local ref. active</i> [180] High when 3-13 Reference Site = [2] Local or when 3-13 Reference Site is [0] Linked to hand auto, at the same time as the LCP is in hand on mode.
[181]	Remote ref. active	<i>Remote ref. active</i> [181] High when 3-13 Reference Site= [1] Remote or [0] Linked to hand/auto, while the LCP is in auto on mode.
[182]	Start command	<i>Start command</i> [182] High when there is an active start command and no stop command.
[183]	Drive stopped	<i>Drive stopped</i> [183] A stop command (Jog, Stop, Qstop, Coast) is issued – and not from the SLC itself.
[185]	Drive in hand mode	<i>Drive in hand mode</i> [185] High when the Adjustable frequency drive is in hand mode.
[186]	Drive in auto mode	<i>Drive in auto mode</i> [186] High when the Adjustable frequency drive is in auto mode.
[187]	Start command given	
[190]	Digital input x30 2	
[191]	Digital input x30 3	
[192]	Digital input x30 4	
[193]	Digital input x46 1	
[194]	Digital input x46 2	


13-10 Comparator Operand		
Array [6]		
Option:	Function:	
[195]	Digital input x46 3	
[196]	Digital input x46 4	
[197]	Digital input x46 5	
[198]	Digital input x46 6	
[199]	Digital input x46 7	

13-11 Comparator Operator		
Array [6]		
Option:	Function:	
		Select the operator to be used in the comparison. This is an array parameter containing comparator operators 0 to 5.
[0]	<	Select < [0] for the result of the evaluation to be TRUE, when the variable selected in 13-10 Comparator Operand is smaller than the fixed value in 13-12 Comparator Value. The result will be FALSE, if the variable selected in 13-10 Comparator Operand is greater than the fixed value in 13-12 Comparator Value.
[1] *	≈ (equal)	Select ≈ [1] for the result of the evaluation to be TRUE, when the variable selected in 13-10 Comparator Operand is approximately equal to the fixed value in 13-12 Comparator Value.
[2]	>	Select > [2] for the inverse logic of option < [0].
[5]	TRUE longer than..	
[6]	FALSE longer than..	
[7]	TRUE shorter than..	
[8]	FALSE shorter than..	


13-12 Comparator Value		
Array [6]		
Range:		Function:
Size related*	[-100000.000 - 100000.000]	Enter the 'trigger level' for the variable that is monitored by this comparator. This is an array parameter containing comparator values 0 to 5.
Application dependent*	[-100000.000 - 100000.000]	Enter the 'trigger level' for the variable that is monitored by this comparator. This is an array parameter containing comparator values 0 to 5.

3.14.4 13-1* RS Flip Flops

The Reset-Set Flip Flops hold the signal until set/reset.

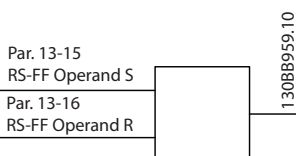

Two parameters are used and the output can be used in the logic rules and as events.

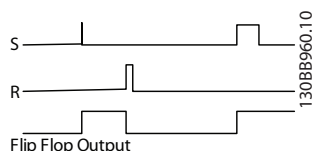

The two operators can be selected from a long list. As a special case, the same digital input can be used as both Set and Reset, making it possible to use the same digital input as start/stop. The following settings can be used to set up the same digital input as start/stop (example given with DI32 but is not a requirement).

Parameter	Setting	Notes
13-00 <i>SL Controller Mode</i>	On	
13-01 <i>Start Event</i>	TRUE	
13-02 <i>Stop Event</i>	FALSE	
13-40 <i>Logic Rule Boolean 1</i> [0]	[37] Digital Input DI32	
13-42 <i>Logic Rule Boolean 2</i> [0]	[2] Running	
13-41 <i>Logic Rule Operator 1</i> [0]	[3] AND NOT	

Parameter	Setting	Notes
13-40 <i>Logic Rule Boolean 1</i> [1]	[37] Digital Input DI32	
13-42 <i>Logic Rule Boolean 2</i> [1]	[2] Running	
13-41 <i>Logic Rule Operator 1</i> [1]	[1] AND	
13-15 <i>RS-FF Operand S</i> [0]	[26] Logic rule 0	Output from 13-41 [0]
13-16 <i>RS-FF Operand R</i> [0]	[27] Logic rule 1	Output from 13-41 [1]
13-51 <i>SL Controller Event</i> [0]	[94] RS Flipflop 0	Output from evaluating 13-15 and 13-16
13-52 <i>SL Controller Action</i> [0]	[22] Run	
13-51 <i>SL Controller Event</i> [1]	[27] Logic rule 1	
13-52 <i>SL Controller Action</i> [1]	[24] Stop	

13-15 RS-FF Operand S		
Option:	Function:	
[0]	False	
[1]	True	
[2]	Running	
[3]	In range	
[4]	On reference	
[5]	Torque limit	
[6]	Current limit	
[7]	Out of current range	
[8]	Below I low	
[9]	Above I high	
[10]	Out of speed range	
[11]	Below speed low	
[12]	Above speed high	
[13]	Out of feedb. range	
[14]	Below feedb. low	
[15]	Above feedb. high	
[16]	Thermal warning	
[17]	Mains out of range	
[18]	Reversing	
[19]	Warning	
[20]	Alarm (trip)	
[21]	Alarm (trip lock)	
[22]	Comparator 0	
[23]	Comparator 1	
[24]	Comparator 2	
[25]	Comparator 3	
[26]	Logic rule 0	
[27]	Logic rule 1	
[28]	Logic rule 2	

13-15 RS-FF Operand S		
Option:	Function:	
[29]	Logic rule 3	
[30]	SL Time-out 0	
[31]	SL Time-out 1	
[32]	SL Time-out 2	
[33]	Digital input DI18	
[34]	Digital input DI19	
[35]	Digital input DI27	
[36]	Digital input DI29	
[37]	Digital input DI32	
[38]	Digital input DI33	
[39]	Start command	
[40]	Drive stopped	
[41]	Reset Trip	
[42]	Auto-reset Trip	
[43]	Ok key	
[44]	Reset key	
[45]	Left key	
[46]	Right key	
[47]	Up key	
[48]	Down key	
[50]	Comparator 4	
[51]	Comparator 5	
[60]	Logic rule 4	
[61]	Logic rule 5	
[70]	SL Time-out 3	
[71]	SL Time-out 4	
[72]	SL Time-out 5	
[73]	SL Time-out 6	
[74]	SL Time-out 7	
[75]	Start command given	
[76]	Digital input x30/2	
[77]	Digital input x30/3	
[78]	Digital input x30/4	
[79]	Digital input x46/1	
[80]	Digital input x46/3	
[81]	Digital input x46/5	
[82]	Digital input x46/7	
[83]	Digital input x46/9	
[84]	Digital input x46/11	
[85]	Digital input x46/13	
[90]	ATEX ETR cur. warning	
[91]	ATEX ETR cur. alarm	
[92]	ATEX ETR freq. warning	
[93]	ATEX ETR freq. alarm	
[94]	RS Flipflop 0	
[95]	RS Flipflop 1	
[96]	RS Flipflop 2	
[97]	RS Flipflop 3	
[98]	RS Flipflop 4	

13-15 RS-FF Operand S		
Option:	Function:	
[99]	RS Flipflop 5	
[100]	RS Flipflop 6	
[101]	RS Flipflop 7	

13-16 RS-FF Operand R		
Option:	Function:	
[0]	False	
[1]	True	
[2]	Running	
[3]	In range	
[4]	On reference	
[5]	Torque limit	
[6]	Current limit	
[7]	Out of current range	
[8]	Below I low	
[9]	Above I high	
[10]	Out of speed range	
[11]	Below speed low	
[12]	Above speed high	
[13]	Out of feedb. range	
[14]	Below feedb. low	
[15]	Above feedb. high	
[16]	Thermal warning	
[17]	Mains out of range	
[18]	Reversing	
[19]	Warning	
[20]	Alarm (trip)	
[21]	Alarm (trip lock)	
[22]	Comparator 0	
[23]	Comparator 1	
[24]	Comparator 2	
[25]	Comparator 3	
[26]	Logic rule 0	
[27]	Logic rule 1	
[28]	Logic rule 2	
[29]	Logic rule 3	
[30]	SL Time-out 0	
[31]	SL Time-out 1	
[32]	SL Time-out 2	
[33]	Digital input DI18	
[34]	Digital input DI19	
[35]	Digital input DI27	
[36]	Digital input DI29	
[37]	Digital input DI32	
[38]	Digital input DI33	
[39]	Start command	
[40]	Drive stopped	
[41]	Reset Trip	
[42]	Auto-reset Trip	

13-16 RS-FF Operand R		
Option:	Function:	
[43]	Ok key	
[44]	Reset key	
[45]	Left key	
[46]	Right key	
[47]	Up key	
[48]	Down key	
[50]	Comparator 4	
[51]	Comparator 5	
[60]	Logic rule 4	
[61]	Logic rule 5	
[70]	SL Time-out 3	
[71]	SL Time-out 4	
[72]	SL Time-out 5	
[73]	SL Time-out 6	
[74]	SL Time-out 7	
[75]	Start command given	
[76]	Digital input x30/2	
[77]	Digital input x30/3	
[78]	Digital input x30/4	
[79]	Digital input x46/1	
[80]	Digital input x46/3	
[81]	Digital input x46/5	
[82]	Digital input x46/7	
[83]	Digital input x46/9	
[84]	Digital input x46/11	
[85]	Digital input x46/13	
[90]	ATEX ETR cur. warning	
[91]	ATEX ETR cur. alarm	
[92]	ATEX ETR freq. warning	
[93]	ATEX ETR freq. alarm	
[94]	RS Flipflop 0	
[95]	RS Flipflop 1	
[96]	RS Flipflop 2	
[97]	RS Flipflop 3	
[98]	RS Flipflop 4	
[99]	RS Flipflop 5	
[100]	RS Flipflop 6	
[101]	RS Flipflop 7	

3.14.5 13-2* Timers


Use the result (TRUE or FALSE) from *timers* directly to define an *event* (see 13-51 *SL Controller Event*), or as Boolean input in a *logic rule* (see 13-40 *Logic Rule Boolean 1*, 13-42 *Logic Rule Boolean 2* or 13-44 *Logic Rule Boolean 3*). A timer is only FALSE when started by an action (i.e., Start timer 1 [29]) until the timer value entered in this parameter is elapsed. Then it becomes TRUE again.

All parameters in this parameter group are array parameters with index 0 to 2. Select index 0 to program Timer 0, select index 1 to program Timer 1, and so on.

13-20 SL Controller Timer		
Range:	Function:	
Application dependent*	[Application dependant]	Enter the value to define the duration of the FALSE output from the programmed timer. A timer is only FALSE if it is started by an action (i.e., Start timer 1 [29]) and until the given timer value has elapsed.

3.14.6 13-4* Logic Rules

Combine up to three boolean inputs (TRUE / FALSE inputs) from timers, comparators, digital inputs, status bits and events using the logical operators AND, OR, and NOT. Select Boolean inputs for the calculation in 13-40 *Logic Rule Boolean 1*, 13-42 *Logic Rule Boolean 2* and 13-44 *Logic Rule Boolean 3*. Define the operators used to logically combine the selected inputs in 13-41 *Logic Rule Operator 1* and 13-43 *Logic Rule Operator 2*.

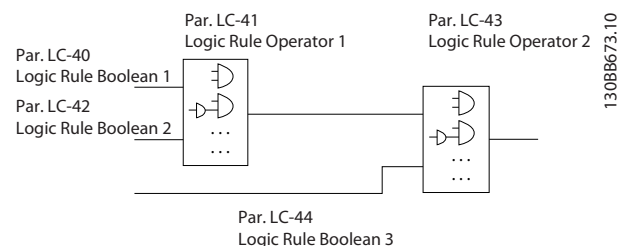

Priority of calculation

The results of 13-40 *Logic Rule Boolean 1*, 13-41 *Logic Rule Operator 1* and 13-42 *Logic Rule Boolean 2* are calculated first. The outcome (TRUE / FALSE) of this calculation is combined with the settings of 13-43 *Logic Rule Operator 2* and 13-44 *Logic Rule Boolean 3*, yielding the final result (TRUE / FALSE) of the logic rule.

13-40 Logic Rule Boolean 1		
Array [6]		
Option:	Function:	
[0] *	False	Select the first Boolean (TRUE or FALSE) input for the selected logic rule. See 13-01 <i>Start Event</i> ([0] - [61]) and 13-02 <i>Stop Event</i> ([70] - [75]) for further description.
[1]	True	
[2]	Running	

13-40 Logic Rule Boolean 1		
Array [6]		
Option:	Function:	
[3]	In range	
[4]	On reference	
[5]	Torque limit	
[6]	Current limit	
[7]	Out of current range	
[8]	Below I low	
[9]	Above I high	
[10]	Out of speed range	
[11]	Below speed low	
[12]	Above speed high	
[13]	Out of feedb. range	
[14]	Below feedb. low	
[15]	Above feedb. high	
[16]	Thermal warning	
[17]	Mains out of range	
[18]	Reversing	
[19]	Warning	
[20]	Alarm (trip)	
[21]	Alarm (trip lock)	
[22]	Comparator 0	
[23]	Comparator 1	
[24]	Comparator 2	
[25]	Comparator 3	
[26]	Logic rule 0	
[27]	Logic rule 1	
[28]	Logic rule 2	
[29]	Logic rule 3	
[30]	SL Time-out 0	
[31]	SL Time-out 1	
[32]	SL Time-out 2	
[33]	Digital input DI18	
[34]	Digital input DI19	
[35]	Digital input DI27	
[36]	Digital input DI29	
[37]	Digital input DI32	
[38]	Digital input DI33	
[39]	Start command	
[40]	Drive stopped	
[41]	Reset Trip	
[42]	Auto-reset Trip	
[43]	Ok key	
[44]	Reset key	
[45]	Left key	
[46]	Right key	
[47]	Up key	
[48]	Down key	
[50]	Comparator 4	
[51]	Comparator 5	

13-40 Logic Rule Boolean 1		
Array [6]		
Option:	Function:	
[60]	Logic rule 4	
[61]	Logic rule 5	
[70]	SL Time-out 3	
[71]	SL Time-out 4	
[72]	SL Time-out 5	
[73]	SL Time-out 6	
[74]	SL Time-out 7	
[75]	Start command given	
[76]	Digital input x30/2	
[77]	Digital input x30/3	
[78]	Digital input x30/4	
[79]	Digital input x46/1	
[80]	Digital input x46/3	
[81]	Digital input x46/5	
[82]	Digital input x46/7	
[83]	Digital input x46/9	
[84]	Digital input x46/11	
[85]	Digital input x46/13	
[90]	ATEX ETR cur. warning	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1.
[91]	ATEX ETR cur. alarm	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1.
[92]	ATEX ETR freq. warning	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1.
[93]	ATEX ETR freq. alarm	Selectable if 1-90 Motor Thermal Protection is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1.
[94]	RS Flipflop 0	
[95]	RS Flipflop 1	
[96]	RS Flipflop 2	
[97]	RS Flipflop 3	
[98]	RS Flipflop 4	
[99]	RS Flipflop 5	
[100]	RS Flipflop 6	
[101]	RS Flipflop 7	

13-41 Logic Rule Operator 1		
Array [6]		
Option:	Function:	
		Select the first logical operator to use on the Boolean inputs from <i>13-40 Logic Rule Boolean 1</i> and <i>13-42 Logic Rule Boolean 2</i> . [13-**] signifies the Boolean input of parameter group 13-**.
[0] *	DISABLED	Ignores <i>13-42 Logic Rule Boolean 2</i> , <i>13-43 Logic Rule Operator 2</i> , and <i>13-44 Logic Rule Boolean 3</i> .
[1]	AND	Evaluates the expression [13-40] AND [13-42].
[2]	OR	evaluates the expression [13-40] OR [13-42].
[3]	AND NOT	evaluates the expression [13-40] AND NOT [13-42].
[4]	OR NOT	evaluates the expression [13-40] OR NOT [13-42].
[5]	NOT AND	evaluates the expression NOT [13-40] AND [13-42].
[6]	NOT OR	evaluates the expression NOT [13-40] OR [13-42].
[7]	NOT AND NOT	evaluates the expression NOT [13-40] AND NOT [13-42].
[8]	NOT OR NOT	evaluates the expression NOT [13-40] OR NOT [13-42].

13-42 Logic Rule Boolean 2		
Array [6]		
Option:	Function:	
[0] *	False	Select the second Boolean (TRUE or FALSE) input for the selected logic rule. See <i>13-01 Start Event</i> ([0] - [61]) and <i>13-02 Stop Event</i> ([70] - [75]) for further description.
[1]	True	
[2]	Running	
[3]	In range	
[4]	On reference	
[5]	Torque limit	
[6]	Current limit	
[7]	Out of current range	
[8]	Below I low	
[9]	Above I high	
[10]	Out of speed range	
[11]	Below speed low	
[12]	Above speed high	
[13]	Out of feedb. range	
[14]	Below feedb. low	

13-42 Logic Rule Boolean 2		
Array [6]		
Option:	Function:	
[15]	Above feedb. high	
[16]	Thermal warning	
[17]	Mains out of range	
[18]	Reversing	
[19]	Warning	
[20]	Alarm (trip)	
[21]	Alarm (trip lock)	
[22]	Comparator 0	
[23]	Comparator 1	
[24]	Comparator 2	
[25]	Comparator 3	
[26]	Logic rule 0	
[27]	Logic rule 1	
[28]	Logic rule 2	
[29]	Logic rule 3	
[30]	SL Time-out 0	
[31]	SL Time-out 1	
[32]	SL Time-out 2	
[33]	Digital input DI18	
[34]	Digital input DI19	
[35]	Digital input DI27	
[36]	Digital input DI29	
[37]	Digital input DI32	
[38]	Digital input DI33	
[39]	Start command	
[40]	Drive stopped	
[41]	Reset Trip	
[42]	Auto-reset Trip	
[43]	Ok key	
[44]	Reset key	
[45]	Left key	
[46]	Right key	
[47]	Up key	
[48]	Down key	
[50]	Comparator 4	
[51]	Comparator 5	
[60]	Logic rule 4	
[61]	Logic rule 5	
[70]	SL Time-out 3	
[71]	SL Time-out 4	
[72]	SL Time-out 5	
[73]	SL Time-out 6	
[74]	SL Time-out 7	
[75]	Start command given	
[76]	Digital input x30/2	
[77]	Digital input x30/3	
[78]	Digital input x30/4	
[79]	Digital input x46/1	

13-42 Logic Rule Boolean 2		
Array [6]		
Option:	Function:	
[80]	Digital input x46/3	
[81]	Digital input x46/5	
[82]	Digital input x46/7	
[83]	Digital input x46/9	
[84]	Digital input x46/11	
[85]	Digital input x46/13	
[90]	ATEX ETR cur. warning	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1.
[91]	ATEX ETR cur. alarm	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1.
[92]	ATEX ETR freq. warning	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1.
[93]	ATEX ETR freq. alarm	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1.
[94]	RS Flipflop 0	
[95]	RS Flipflop 1	
[96]	RS Flipflop 2	
[97]	RS Flipflop 3	
[98]	RS Flipflop 4	
[99]	RS Flipflop 5	
[100]	RS Flipflop 6	
[101]	RS Flipflop 7	

13-43 Logic Rule Operator 2		
Array [6]		
Option:	Function:	
		Select the second logical operator to be used on the Boolean input calculated in <i>13-40 Logic Rule Boolean 1</i> , <i>13-41 Logic Rule Operator 1</i> , and <i>13-42 Logic Rule Boolean 2</i> , and the Boolean input coming from <i>13-42 Logic Rule Boolean 2</i> . [13-44] signifies the Boolean input of <i>13-44 Logic Rule Boolean 3</i> . [13-40/13-42] signifies the Boolean input calculated in <i>13-40 Logic Rule Boolean 1</i> ,

13-43 Logic Rule Operator 2		
Array [6]		
Option:	Function:	
		<i>13-41 Logic Rule Operator 1</i> , and <i>13-42 Logic Rule Boolean 2</i> . DISABLED [0] (factory setting). select this option to ignore <i>13-44 Logic Rule Boolean 3</i> .
[0] *	DISABLED	
[1]	AND	
[2]	OR	
[3]	AND NOT	
[4]	OR NOT	
[5]	NOT AND	
[6]	NOT OR	
[7]	NOT AND NOT	
[8]	NOT OR NOT	

13-44 Logic Rule Boolean 3		
Array [6]		
Option:	Function:	
[0] *	False	Select the third Boolean (TRUE or FALSE) input for the selected logic rule. See <i>13-01 Start Event</i> ([0] - [61]) and <i>13-02 Stop Event</i> ([70] - [75]) for further description.
[1]	True	
[2]	Running	
[3]	In range	
[4]	On reference	
[5]	Torque limit	
[6]	Current limit	
[7]	Out of current range	
[8]	Below I low	
[9]	Above I high	
[10]	Out of speed range	
[11]	Below speed low	
[12]	Above speed high	
[13]	Out of feedb. range	
[14]	Below feedb. low	
[15]	Above feedb. high	
[16]	Thermal warning	
[17]	Mains out of range	
[18]	Reversing	
[19]	Warning	
[20]	Alarm (trip)	
[21]	Alarm (trip lock)	
[22]	Comparator 0	
[23]	Comparator 1	
[24]	Comparator 2	
[25]	Comparator 3	
[26]	Logic rule 0	

13-44 Logic Rule Boolean 3		
Array [6]		
Option:	Function:	
[27]	Logic rule 1	
[28]	Logic rule 2	
[29]	Logic rule 3	
[30]	SL Time-out 0	
[31]	SL Time-out 1	
[32]	SL Time-out 2	
[33]	Digital input DI18	
[34]	Digital input DI19	
[35]	Digital input DI27	
[36]	Digital input DI29	
[37]	Digital input DI32	
[38]	Digital input DI33	
[39]	Start command	
[40]	Drive stopped	
[41]	Reset Trip	
[42]	Auto-reset Trip	
[43]	Ok key	
[44]	Reset key	
[45]	Left key	
[46]	Right key	
[47]	Up key	
[48]	Down key	
[50]	Comparator 4	
[51]	Comparator 5	
[60]	Logic rule 4	
[61]	Logic rule 5	
[70]	SL Time-out 3	
[71]	SL Time-out 4	
[72]	SL Time-out 5	
[73]	SL Time-out 6	
[74]	SL Time-out 7	
[75]	Start command given	
[76]	Digital input x30/2	
[77]	Digital input x30/3	
[78]	Digital input x30/4	
[79]	Digital input x46/1	
[80]	Digital input x46/3	
[81]	Digital input x46/5	
[82]	Digital input x46/7	
[83]	Digital input x46/9	
[84]	Digital input x46/11	
[85]	Digital input x46/13	
[90]	ATEX ETR cur. warning	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1.

13-44 Logic Rule Boolean 3		
Array [6]		
Option:	Function:	
[91]	ATEX ETR cur. alarm	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1.
[92]	ATEX ETR freq. warning	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1.
[93]	ATEX ETR freq. alarm	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1.
[94]	RS Flipflop 0	
[95]	RS Flipflop 1	
[96]	RS Flipflop 2	
[97]	RS Flipflop 3	
[98]	RS Flipflop 4	
[99]	RS Flipflop 5	
[100]	RS Flipflop 6	
[101]	RS Flipflop 7	

3.14.7 13-5* States

13-51 SL Controller Event		
Array [20]		
Option:	Function:	
[0] *	False	Select the Boolean input (TRUE or FALSE) to define the Smart Logic Controller event. See <i>13-01 Start Event</i> ([0] - [61]) and <i>13-02 Stop Event</i> ([70] - [74]) for further description.
[1]	True	
[2]	Running	
[3]	In range	
[4]	On reference	
[5]	Torque limit	
[6]	Current limit	
[7]	Out of current range	
[8]	Below I low	
[9]	Above I high	
[10]	Out of speed range	
[11]	Below speed low	
[12]	Above speed high	

13-51 SL Controller Event		
Array [20]		
Option:	Function:	
[13]	Out of feedb. range	
[14]	Below feedb. low	
[15]	Above feedb. high	
[16]	Thermal warning	
[17]	Mains out of range	
[18]	Reversing	
[19]	Warning	
[20]	Alarm (trip)	
[21]	Alarm (trip lock)	
[22]	Comparator 0	
[23]	Comparator 1	
[24]	Comparator 2	
[25]	Comparator 3	
[26]	Logic rule 0	
[27]	Logic rule 1	
[28]	Logic rule 2	
[29]	Logic rule 3	
[30]	SL Time-out 0	
[31]	SL Time-out 1	
[32]	SL Time-out 2	
[33]	Digital input DI18	
[34]	Digital input DI19	
[35]	Digital input DI27	
[36]	Digital input DI29	
[37]	Digital input DI32	
[38]	Digital input DI33	
[39]	Start command	
[40]	Drive stopped	
[41]	Reset Trip	
[42]	Auto-reset Trip	
[43]	Ok key	
[44]	Reset key	
[45]	Left key	
[46]	Right key	
[47]	Up key	
[48]	Down key	
[50]	Comparator 4	
[51]	Comparator 5	
[60]	Logic rule 4	
[61]	Logic rule 5	
[70]	SL Time-out 3	
[71]	SL Time-out 4	
[72]	SL Time-out 5	
[73]	SL Time-out 6	
[74]	SL Time-out 7	
[75]	Start command given	
[76]	Digital input x30/2	
[77]	Digital input x30/3	

13-51 SL Controller Event		
Array [20]		
Option:	Function:	
[78]	Digital input x30/4	
[79]	Digital input x46/1	
[80]	Digital input x46/3	
[81]	Digital input x46/5	
[82]	Digital input x46/7	
[83]	Digital input x46/9	
[84]	Digital input x46/11	
[85]	Digital input x46/13	
[90]	ATEX ETR cur. warning	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 164 ATEX ETR cur.lim.alarm is active, the output will be 1.
[91]	ATEX ETR cur. alarm	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 166 ATEX ETR freq.lim.alarm is active, the output will be 1.
[92]	ATEX ETR freq. warning	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the alarm 163 ATEX ETR cur.lim.warning is active, the output will be 1.
[93]	ATEX ETR freq. alarm	Selectable if <i>1-90 Motor Thermal Protection</i> is set to [20] or [21]. If the warning 165 ATEX ETR freq.lim.warning is active, the output will be 1.
[94]	RS Flipflop 0	
[95]	RS Flipflop 1	
[96]	RS Flipflop 2	
[97]	RS Flipflop 3	
[98]	RS Flipflop 4	
[99]	RS Flipflop 5	
[100]	RS Flipflop 6	
[101]	RS Flipflop 7	

13-52 SL Controller Action		
Array [20]		
Option:	Function:	
[0] *	DISABLED	Select the action corresponding to the SLC event. Actions are executed when the corresponding event (defined in <i>13-51 SL Controller Event</i>) is evaluated as true. The following actions are available for selection: *DISABLED [0]
[1]	No action	No action [1]

13-52 SL Controller Action		
Array [20]		
Option:	Function:	
[2]	Select set-up 1	<i>Select set-up 1</i> [2] - changes the active set-up (0-10 Active Set-up) to '1'. If the set-up is changed, it will merge with other set-up commands coming from either the digital inputs or via a serial communication bus.
[3]	Select set-up 2	<i>Select set-up 2</i> [3] - changes the active set-up (0-10 Active Set-up) to '2'. If the set-up is changed, it will merge with other set-up commands coming from either the digital inputs or via a serial communication bus.
[4]	Select set-up 3	<i>Select set-up 3</i> [4] - changes the active set-up (0-10 Active Set-up) to '3'. If the set-up is changed, it will merge with other set-up commands coming from either the digital inputs or via a serial communication bus.
[5]	Select set-up 4	<i>Select set-up 4</i> [5] - changes the active set-up (0-10 Active Set-up) to '4'. If the set-up is changed, it will merge with other set-up commands coming from either the digital inputs or via a serial communication bus.
[10]	Select preset ref 0	<i>Select preset reference 0</i> [10] – selects preset reference 0. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a serial communication bus.
[11]	Select preset ref 1	<i>Select preset reference 1</i> [11] – selects preset reference 1. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a serial communication bus.
[12]	Select preset ref 2	<i>Select preset reference 2</i> [12] – selects preset reference 2. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a serial communication bus.
[13]	Select preset ref 3	<i>Select preset reference 3</i> [13] – selects preset reference 3. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a serial communication bus.

13-52 SL Controller Action		
Array [20]		
Option:	Function:	
[14]	Select preset ref 4	<i>Select preset reference 4</i> [14] – selects preset reference 4. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a serial communication bus.
[15]	Select preset ref 5	<i>Select preset reference 5</i> [15] – selects preset reference 5. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a serial communication bus.
[16]	Select preset ref 6	<i>Select preset reference 6</i> [16] – selects preset reference 6. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a serial communication bus.
[17]	Select preset ref 7	<i>Select preset reference 7</i> [17] - selects preset reference 7. If the active preset reference is changed, it will merge with other preset reference commands coming from either the digital inputs or via a serial communication bus.
[18]	Select ramp 1	<i>Select ramp 1</i> [18] - selects ramp 1.
[19]	Select ramp 2	<i>Select ramp 2</i> [19] - selects ramp 2.
[20]	Select ramp 3	<i>Select ramp 3</i> [20] - selects ramp 3.
[21]	Select ramp 4	<i>Select ramp 4</i> [21] - selects ramp 4.
[22]	Run	<i>Run</i> [22] - issues a start command to the Adjustable frequency drive.
[23]	Run reverse	<i>Run reverse</i> [23] - issues a start reverse command to the Adjustable frequency drive.
[24]	Stop	<i>Stop</i> [24] - issues a stop command to the Adjustable frequency drive.
[25]	Qstop	<i>Q stop</i> [25] - issues a quick stop command to the Adjustable frequency drive.
[26]	Dcstop	<i>Dcstop</i> [26] - issues a DC stop command to the Adjustable frequency drive.
[27]	Coast	<i>Coast</i> [27] - the Adjustable frequency drive coasts immediately. All stop commands including the coast command stop the SLC.
[28]	Freeze output	<i>Freeze output</i> [28] - freezes the output frequency of the Adjustable frequency drive.

13-52 SL Controller Action		
Array [20]		
Option:	Function:	
[29]	Start timer 0	<i>Start timer 0</i> [29] - starts timer 0, see <i>13-20 SL Controller Timer</i> for further description.
[30]	Start timer 1	<i>Start timer 1</i> [30] - starts timer 1, see <i>13-20 SL Controller Timer</i> for further description.
[31]	Start timer 2	<i>Start timer 2</i> [31] - starts timer 2, see <i>13-20 SL Controller Timer</i> for further description.
[32]	Set digital out A low	<i>Set digital output A low</i> [32] - any output with SL output A will be low.
[33]	Set digital out B low	<i>Set digital output B low</i> [33] - any output with SL output B will be low.
[34]	Set digital out C low	<i>Set digital output C low</i> [34] - any output with SL output C will be low.
[35]	Set digital out D low	<i>Set digital output D low</i> [35] - any output with SL output D will be low.
[36]	Set digital out E low	<i>Set digital output E low</i> [36] - any output with SL output E will be low.
[37]	Set digital out F low	<i>Set digital output F low</i> [37] - any output with SL output F will be low.
[38]	Set digital out A high	<i>Set digital output A high</i> [38] - any output with SL output A will be high.
[39]	Set digital out B high	<i>Set digital output B high</i> [39] - any output with SL output B will be high.
[40]	Set digital out C high	<i>Set digital output C high</i> [40] - any output with SL output C will be high.
[41]	Set digital out D high	<i>Set digital output D high</i> [41] - any output with SL output D will be high.
[42]	Set digital out E high	<i>Set digital output E high</i> [42] - any output with SL output E will be high.
[43]	Set digital out F high	<i>Set digital output F high</i> [43] - any output with SL output F will be high.
[60]	Reset Counter A	<i>Reset Counter A</i> [60] - resets Counter A to zero.
[61]	Reset Counter B	<i>Reset Counter B</i> [61] - resets Counter B to zero.
[70]	Start timer 3	<i>Start Timer 3</i> [70] - Start Timer 3, see <i>13-20 SL Controller Timer</i> for further description.
[71]	Start timer 4	<i>Start Timer 4</i> [71] - Start Timer 4, see <i>13-20 SL Controller Timer</i> for further description.

13-52 SL Controller Action		
Array [20]		
Option:	Function:	
[72]	Start timer 5	<i>Start Timer 5</i> [72] - Start Timer 5, see <i>13-20 SL Controller Timer</i> for further description.
[73]	Start timer 6	<i>Start Timer 6</i> [73] - Start Timer 6, see <i>13-20 SL Controller Timer</i> for further description.
[74]	Start timer 7	<i>Start Timer 7</i> [74] - Start Timer 7, see <i>p13-20 SL Controller Timer</i> for further description.

3.15 Parameters: 14-** Special Functions

3.15.1 14-0* Inverter Switching

14-00 Switching Pattern		
Option:	Function:	
[0] *	60 AVM	Select the switching pattern: 60° AVM or SFAVM.
[1] *	SFAVM	

NOTE!

The output frequency value of the Adjustable frequency drive must never exceed 1/10 of the switching frequency. When the motor is running, adjust the switching frequency in *4-11 Motor Speed Low Limit [RPM]* until the motor is as noiseless as possible. See also *14-00 Switching Pattern* and the section *Special Conditions* in the VLT AutomationDrive Design Guide, MG33BXYY.

14-01 Switching Frequency		
Select the inverter switching frequency. Changing the switching frequency can help to reduce acoustic noise from the motor. Default depend on power size.		
Option:	Function:	
[0]	1.0 kHz	
[1]	1.5 kHz	Default switching frequency for 500–1,600 hp [355–1,200 kW], 690 V
[2]	2.0 kHz	Default switching frequency for 350–1,075 hp [250–800 kW], 400 V and 50–400 hp [37–315 kW], 690 V
[3]	2.5 kHz	
[4]	3.0 kHz	Default switching frequency for 25–50 hp [18.5–37 kW], 200 V and 50–300 hp [37–200 kW], 400 V
[5]	3.5 kHz	
[6]	4.0 kHz	Default switching frequency for 7.5–20 hp [5.5–15 kW], 200 V and 15–40 hp [11–30 kW], 400 V
[7] *	5.0 kHz	Default switching frequency for 0.34 - 4.96 kW hp [0.25–3.7 kW], 200 V and 0.496–10 hp [0.37–7.5 kW], 400 V
[8]	6.0 kHz	
[9]	7.0 kHz	
[10]	8.0 kHz	
[11]	10.0 kHz	
[12]	12.0 kHz	
[13]	14.0 kHz	
[14]	16.0 kHz	

NOTE!

The output frequency value of the Adjustable frequency drive must never exceed 1/10 of the switching frequency. When the motor is running, adjust the switching frequency in *4-11 Motor Speed Low Limit [RPM]* until the motor is as noiseless as possible. See also *14-00 Switching Pattern* and the section *Special conditions* in the VLT AutomationDrive Design Guide, MG33BXYY.

NOTE!

Switching frequencies higher than 5.0 kHz lead to automatic derating of the maximum output of the Adjustable frequency drive.

14-03 Overmodulation		
Option:	Function:	
[0]	Off	Select <i>Off</i> [0] for no overmodulation of the output voltage, in order to avoid torque ripple on the motor shaft. This feature may be useful for applications such as grinding machines.
[1] *	On	Select <i>On</i> [1] to enable the overmodulation function for the output voltage. This is the right choice when it is required that the output voltage is higher than 95% of the input voltage (typical when running oversynchronously). The output voltage is increased according to the degree of overmodulation. Overmodulation leads to increased torque ripple as harmonics are increased. Control in FLUX mode provides an output current of up to 98% of the input current, regardless of <i>14-03 Overmodulation</i> .
[2]	Optimal	

14-04 PWM Random		
Option:	Function:	
[0] *	Off	No change of the acoustic motor switching noise.
[1]	On	Transforms the acoustic motor switching noise from a clear ringing tone to a less noticeable 'white' noise. This is achieved by slightly and randomly altering the synchronism of the pulse width modulated output phases.

14-06 Dead Time Compensation		
Option:	Function:	
[0]	Off	No compensation.
[1] *	On	Activates dead time compensation.

3.15.2 14-1* Mains On/Off

Parameters for configuring line failure monitoring and handling. If a line failure appears, the Adjustable frequency drive will try to continue in a controlled way until the power in the DC link has been exhausted.

14-10 Mains Failure	
Option:	Function:
	<p>14-10 Mains Failure is typically used where very short line power interruptions (voltage dips) are present. At 100% load and a short voltage interruption, the DC voltage on the main capacitors drops quickly. For larger drives it only takes a few milliseconds before the DC level is down to about 373 V DC and the main IGBT cuts off and loses the control over the motor. When the mains is restored, and the IGBT starts again, the output frequency and voltage vector does not correspond to the speed/frequency of the motor, and the result is normally an overvoltage or overcurrent, mostly resulting in a trip lock. 14-10 Mains Failure can be programmed to avoid this situation.</p> <p>Select the function to which the Adjustable frequency drive must act when the threshold in 14-11 Mains Voltage at Mains Fault has been reached.</p> <p>14-10 Mains Failure cannot be changed while motor is running.</p> <p>Controlled ramp-down: The Adjustable frequency drive will perform a controlled ramp-down. If 2-10 Brake Function is <i>Off</i> [0] or <i>AC brake</i> [2], the ramp will follow the Overvoltage Ramping. If 2-10 Brake Function is [1] <i>Resistor Brake</i>, the ramp will follow the setting in 3-81 Quick Stop Ramp Time.</p> <p>Controlled ramp-down [1]: After power-up, the Adjustable frequency drive is ready for start. Controlled ramp-down and trip [2]: After power-up, the Adjustable frequency drive needs a reset for starting.</p>

14-10 Mains Failure	
Option:	Function:
	<ol style="list-style-type: none"> The power is back before the energy from DC / moment of inertia from load is too low. The Adjustable frequency drive will perform a controlled ramp-down when 14-11 Mains Voltage at Mains Fault level has been reached. The Adjustable frequency drive will perform a controlled ramp-down as long as energy in the DC link is present. After this point, the motor will be coasted. <p>Kinetic backup: The Adjustable frequency drive will perform a kinetic backup. If 2-10 Brake Function is <i>Off</i> [0] or <i>AC brake</i> [2], the ramp will follow the overvoltage ramping. If 2-10 Brake Function is [1] <i>Resistor Brake</i>, the ramp will follow the setting in 3-81 Quick Stop Ramp Time.</p> <p>Kinetic Backup [4]: The Adjustable frequency drive will keep on running as long as there is energy in the system due to the moment of inertia produced by the load.</p> <p>Kinetic Backup [5]: The Adjustable frequency drive will ride through on speed as long as the energy is present from moment of inertia from the load. If the DC voltage goes below 14-11 Mains Voltage at Mains Fault, the Adjustable frequency drive will perform a trip.</p>

14-10 Mains Failure		
Option:	Function:	
		NOTE! For the best kinetic backup performance, the advanced motor data parameters, 1-30 Stator Resistance (Rs) to 1-35 Main Reactance (Xh), must be accurate.
[0] *	No function	This selection does not present a danger to the Adjustable frequency drive, but a trip lock would normally be the result of the short voltage interruptions.
[1]	Ctrl. ramp-down	This selection will keep the output frequency following the motor speed. The IGBT will not lose the connection to the motor, but will follow the slow. This is particularly useful in pump applications where the inertia is low and the friction is high. When line power is restored, the output frequency will ramp the motor up to the reference speed (if the line power interruption is prolonged, the controlled ramp-down might take the output frequency all the way down to 0 rpm, and when line power is restored, the application is ramped up from 0 rpm to the previous reference speed via the normal ramp-up).
[2]	Ctrl. ramp-down, trip	
[3]	Coasting	Centrifuges can run for an hour without power supply. In those situations, it is possible to select a coast function at line power interruption, together with a flying start which occurs when line power is restored.
[4]	Kinetic back-up	Kinetic backup will maintain the DC level as long as possible, by converting the mechanical energy from the motor to the DC level supply. Fans normally can extend line power interruptions for several seconds. Pumps can normally only extend the interruptions for 1-2 seconds or fractions of seconds. Compressors only for fractions of seconds.
[5]	Kinetic back-up, trip	
[6]	Alarm	
[7]	Kin. back-up, trip w recovery	

14-11 Mains Voltage at Mains Fault		
Range:	Function:	
Size related*	[180 - 600 V]	This parameter defines the threshold voltage at which the selected function in 14-10 Mains Failure should be activated. The detection level is at a factor sqrt(2) of the value in 14-11 Mains Voltage at Mains Fault.
		NOTE! Note for converting between VLT 5000 and FC 300: Even though the setting of the AC Line Voltage at Line Power Fault is the same for VLT 5000 and FC 300, the detection level is different. Use the following formula to obtain the same detection level as in VLT 5000: 14-11 (VLT 5000 level) = Value used in VLT 5000 * 1.35/sqrt(2).

14-12 Function at Mains Imbalance		
Operating under severe line imbalance conditions reduces the lifetime of the motor. Conditions are considered severe if the motor operates continuously near nominal load (such as when a pump or fan runs near full speed).		
Option:	Function:	
[0] *	Trip	Trips the Adjustable frequency drive
[1]	Warning	Issues a warning.
[2]	Disabled	No action

14-14 Kin. Backup Time Out		
Range:	Function:	
60 s*	[0 - 60 s]	This parameter defines the Kinetic Backup Timeout in flux mode when running on low voltage grids. If the supply voltage does not increase above the value defined in 14-11 Mains Voltage at Mains Fault + 5% within the specified time, the drive will then automatically run a controlled ramp-down profile prior to stop.

Parameters for configuring auto reset handling, special trip handling and control card self test or initialization.

14-20 Reset Mode		
Option:	Function:	
		Select the reset function after tripping. Once reset, the Adjustable frequency drive can be restarted.

14-20 Reset Mode		
Option:	Function:	
[0] *	Manual reset	Select <i>Manual reset</i> [0], to perform a reset via [RESET] or via the digital inputs.
[1]	Automatic reset x 1	Select <i>Automatic reset x 1...x20</i> [1]-[12] to perform between one and twenty automatic resets after tripping.
[2]	Automatic reset x 2	
[3]	Automatic reset x 3	
[4]	Automatic reset x 4	
[5]	Automatic reset x 5	
[6]	Automatic reset x 6	
[7]	Automatic reset x 7	
[8]	Automatic reset x 8	
[9]	Automatic reset x 9	
[10]	Automatic reset x 10	
[11]	Automatic reset x 15	
[12]	Automatic reset x 20	
[13]	Infinite auto reset	Select <i>Infinite Automatic Reset</i> [13] for continuous resetting after tripping.
[14]	Reset at power-up	

NOTE!

The motor may start without warning. If the specified number of AUTOMATIC RESEts is reached within 10 minutes, the Adjustable frequency drive enters Manual reset [0] mode. After the Manual reset is performed, the setting of 14-20 Reset Mode reverts to the original selection. If the number of automatic resets is not reached within 10 minutes, or when a manual reset is performed, the internal AUTOMATIC RESEt counter returns to zero.

NOTE!

Automatic reset will also be active for resetting safe stop function in firmware version < 4.3x.

14-21 Automatic Restart Time		
Range:	Function:	
10 s*	[0 - 600 s]	Enter the time interval from trip to start of the automatic reset function. This parameter is active when 14-20 Reset Mode is set to <i>Automatic reset</i> [1] - [13].

NOTE!

Remember to set switches S201 (A53) and S202 (A54) as specified below when performing a control card test in 14-22 Operation Mode [1]. Otherwise, the test will fail!

14-22 Operation Mode		
Option:	Function:	
		<p>Use this parameter to specify normal operation, to perform tests, or to initialize all parameters except 15-03 Power Up's, 15-04 Over Temp's and 15-05 Over Volt's. This function is active only when the power is cycled to the Adjustable frequency drive. Select <i>Normal operation</i> [0] for normal operation of the Adjustable frequency drive with the motor in the selected application. Select <i>Control card test</i> [1] to test the analog and digital inputs and outputs and the +10 V control voltage. The test requires a test connector with internal connections. Use the following procedure for the control card test:</p> <ol style="list-style-type: none"> 1. Select <i>Control card test</i> [1]. 2. Disconnect the line power supply and wait for the light in the display to go out. 3. Set switches S201 (A53) and S202 (A54) = 'ON' / I. 4. Insert the test plug (see below). 5. Connect to the line power supply. 6. Carry out various tests. 7. The results are displayed on the LCP and the Adjustable frequency drive moves into an infinite loop. 8. 14-22 Operation Mode is automatically set to Normal operation. Carry out a power cycle to start up in normal operation after a control card test. <p>If the test is OK LCP readout: Control Card OK. Disconnect the line power supply and remove the test plug. The green LED on the control card will light up.</p> <p>If the test fails LCP readout: Control Card I/O failure. Replace the Adjustable frequency drive or control card. The red LED on the control card is turned on. Test plugs (connect the following terminals to each other): 18 - 27 - 32; 19 - 29 - 33; 42 - 53 - 54</p>

14-22 Operation Mode	
Option:	Function:
	<p>Select <i>Initialization</i> [2] to reset all parameter values to default settings, except for 15-03 <i>Power Up's</i>, 15-04 <i>Over Temp's</i>, and 15-05 <i>Over Volt's</i>. The Adjustable frequency drive will reset during the next power-up. 14-22 <i>Operation Mode</i> will also revert to the default setting <i>Normal operation</i> [0].</p>
[0] *	Normal operation
[1]	Control card test
[2]	Initialisation
[3]	Boot mode

14-24 Trip Delay at Current Limit	
Range:	Function:
60 s* [0 - 60 s]	Enter the current limit trip delay in seconds. When the output current reaches the current limit (4-18 <i>Current Limit</i>), a warning is triggered. When the current limit warning has been continuously present for the period specified in this parameter, the Adjustable frequency drive trips. Disable the trip delay by setting the parameter to 60 sec. = OFF. Thermal monitoring of the Adjustable frequency drive will still remain active.

14-25 Trip Delay at Torque Limit	
Range:	Function:
60 s* [0 - 60 s]	Enter the torque limit trip delay in seconds. When the output torque reaches the torque limits (4-16 <i>Torque Limit Motor Mode</i> and 4-17 <i>Torque Limit Generator Mode</i>), a warning is triggered. When the torque limit warning has been continuously present for the period specified in this parameter, the Adjustable frequency drive trips. Disable the trip delay by

14-25 Trip Delay at Torque Limit	
Range:	Function:
	setting the parameter to 60 sec. = OFF. Thermal monitoring of the Adjustable frequency drive will still remain active.

14-26 Trip Delay at Inverter Fault	
Range:	Function:
Application dependent* [0 - 35 s]	When the Adjustable frequency drive detects an overvoltage in the set time, tripping will be effected after the set time. If value = 0, <i>protection mode</i> is disabled NOTE! It is recommended to disable <i>protection mode</i> in hoisting applications.
0. s* [0 - 35 s]	When the Adjustable frequency drive detects an overvoltage in the set time, tripping will be effected after the set time. If value = 0, <i>protection mode</i> is disabled NOTE! It is recommended to disable <i>protection mode</i> in hoisting applications.

14-29 Service Code	
Range:	Function:
0* [-2147483647 - 2147483647]	For internal service only.

3.15.3 14-3* Current Limit Control

The Adjustable frequency drive features an integral current limit controller which is activated when the motor current, and thus the torque, is higher than the torque limits set in 4-16 *Torque Limit Motor Mode* and 4-17 *Torque Limit Generator Mode*.

When the current limit is reached during motor operation or regenerative operation, the Adjustable frequency drive will try to reduce torque below the preset torque limits as quickly as possible without losing control of the motor. While the current control is active, the Adjustable frequency drive can only be stopped by setting a digital input to *Coast inverse* [2] or *Coast and reset inv.* [3]. Any signal on terminals 18 to 33 will not be active until the Adjustable frequency drive is no longer near the current limit.

By using a digital input set to *Coast inverse* [2] or *Coast and reset inv.* [3], the motor does not use the ramp-down time, since the Adjustable frequency drive is coasted. If a quick stop is necessary, use the mechanical brake control function along with an external electro-mechanical brake attached to the application.

14-30 Current Lim Ctrl, Proportional Gain		
Range:		Function:
100 %*	[0 - 500 %]	Enter the proportional gain value for the current limit controller. Selection of a high value makes the controller react faster. Too high a setting leads to controller instability.

14-31 Current Lim Ctrl, Integration Time		
Range:		Function:
Size related*	[0.002 - 2.000 s]	Controls the current limit control integration time. Setting it to a lower value makes it react faster. A setting too low leads to control instability.

14-32 Current Lim Ctrl, Filter Time		
Range:		Function:
1.0 ms*	[1.0 - 100.0 ms]	

14-35 Stall Protection		
Option:	Function:	
	Select Enable [1] to enable the stall protection in field-weakening in flux mode. Select Disable [0] if you desire to disable it. This might cause the motor to be lost. <i>14-35 Stall Protection</i> is active in flux mode only.	
[0]	Disabled	
[1] *	Enabled	

3.15.4 14-4* Energy Optimizing

Parameters for adjusting the energy optimization level in both Variable Torque (VT) and Automatic Energy Optimization (AEO) mode in *1-03 Torque Characteristics*.

14-40 VT Level		
Range:		Function:
66 %*	[40 - 90 %]	

NOTE!

This parameter cannot be adjusted while the motor is running.

NOTE!

This parameter is not active when *1-10 Motor Construction* is set to [1] PM non-salient SPM.

14-41 AEO Minimum Magnetisation		
Range:		Function:
Size related*	[40 - 75 %]	Enter the minimum allowable magnetization for AEO. Selection of a low value reduces energy loss in the motor, but can also reduce resistance to sudden load changes.

NOTE!

This parameter is not active when *1-10 Motor Construction* is set to [1] PM non-salient SPM.

14-42 Minimum AEO Frequency		
Range:		Function:
10 Hz*	[5 - 40 Hz]	Enter the minimum frequency at which the Automatic Energy Optimization (AEO) is to be active.

NOTE!


This parameter is not active when *1-10 Motor Construction* is set to [1] PM non-salient SPM.

14-43 Motor Cosphi		
Range:		Function:
Application dependent*	[0.40 - 0.95]	The Cos(phi) setpoint is automatically set for optimum AEO performance. This parameter should normally not be altered. However, in some situations it may be necessary to enter a new value to fine tune.
Application dependent*	[0.40 - 0.95]	The Cos(phi) setpoint is automatically set for optimum AEO performance. This parameter should normally not be altered. However, in some situations it may be necessary to enter a new value to fine tune.

3.15.5 14-5* Environment

These parameters help the Adjustable frequency drive to operate under special environmental conditions.

14-50 RFI Filter		
This parameter is only available for FC 302. It is not relevant to FC 301 due to different design and shorter motor cables.		
Option:	Function:	
[0]	Off	Select <i>Off</i> [0] if the Adjustable frequency drive is fed by an isolated line power source (IT line power). If a filter is used, select <i>Off</i> [0] during charging to prevent a high leakage current making the RCD switch. In this mode, the internal RFI filter capacitors between chassis and the line power RFI filter circuit are cut-out to reduce the ground capacity currents.
[1] *	On	Select <i>On</i> [1] to ensure that the Adjustable frequency drive complies with EMC standards.

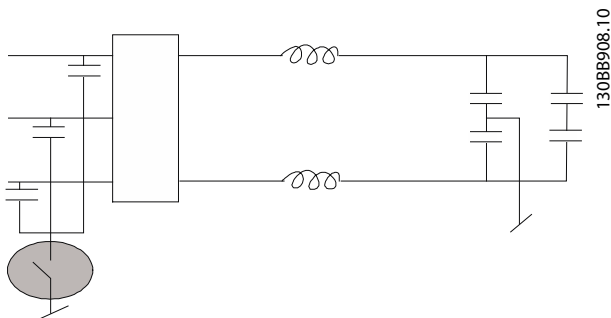

14-51 DC Link Compensation		
Option:	Function:	
[0]	Off	Disables DC Link Compensation.
[1] *	On	Enables DC Link Compensation.

14-52 Fan Control		
Select minimum speed of the main fan.		
Option:	Function:	
[0] *	Auto	Select <i>Auto</i> [0] to run fan only when internal temperature in Adjustable frequency drive is in the range 95°F [35°C] to approx. 131°F [55°C]. Fan runs at low speed below 95°F [35°C], and at full speed at approx. 131°F [55°C].
[1]	On 50%	
[2]	On 75%	
[3]	On 100%	
[4]	Auto (Low temp env.)	

14-53 Fan Monitor		
Option:	Function:	
		Select which reaction the Adjustable frequency drive should take in case a fan fault is detected.
[0]	Disabled	
[1] *	Warning	
[2]	Trip	

14-55 Output Filter		
Option:	Function:	
		Select the type of output filter connected. This parameter cannot be adjusted while motor is running.
[0]	No Filter	This is the default setting and should be used with dU/dt filters or high frequency common mode (HF-CM) filters.
[1]	Sine-Wave Filter	This setting is only for backwards compatibility. It enables operation with FLUX control principle when the parameters <i>14-56 Capacitance Output Filter</i> and <i>14-57 Inductance Output Filter</i> are programmed with the output filter capacitance and inductance. It DOES NOT limit the range of the switching frequency.
[2]	Sine-Wave Filter Fixed	This parameter sets a minimum allowed limit to the switching frequency and ensures that the filter will be operated within the safe range of switching frequencies. Operation is possible with all control principles. For the FLUX control principle, the parameters <i>14-56 Capacitance Output Filter</i> and <i>14-57 Inductance Output Filter</i> have to be programmed (these parameters have no effect in VVC ^{plus} and U/f). The modulation patten will be set to SFAVM which gives the lowest acoustic noise in the filter. Remember to always set <i>14-55 Output Filter</i> to sine-wave fixed when you use a sine-wave filter.

14-56 Capacitance Output Filter		
Compensation function of the LC filter requires the per phase equivalent star connected capacitance of the filter (3 times the capacity between two phases when capacitance is 'Delta' connection).		
Range:	Function:	
Application dependent*	[0.1 - 6500.0 uF]	Set the capacitance of the output filter. The value can be found on the filter label.

14-56 Capacitance Output Filter		
Compensation function of the LC filter requires the per phase equivalent star connected capacitance of the filter (3 times the capacity between two phases when capacitance is 'Delta' connection).		
Range:		Function:
		NOTE! This is required for correct compensation in flux mode (1-01 Motor Control Principle)
Application dependent*	[0.1 - 6500.0 uF]	

14-57 Inductance Output Filter		
Range:		Function:
Application dependent*	[0.001 - 65.000 mH]	
Application dependent*	[0.001 - 65.000 mH]	Set the inductance of the output filter. The value can be found on the filter label. NOTE! This is required for correct compensation in flux mode (1-01 Motor Control Principle)

3.15.6 14-7* Compatibility

The parameters in this group are for setting of compatibility for VLT 3000, VLT 5000 to FC 300.

14-72 VLT Alarm Word		
Option:		Function:
[0]	0-4294967295	Read out the alarm word corresponding to VLT 5000.

14-73 VLT Warning Word		
Option:		Function:
[0]	0-4294967295	Read out the warning word corresponding to VLT 5000.

14-74 Leg. Ext. Status Word		
Range:		Function:
0*	[0 - 4294967295]	Read out the ext. status word corresponding to VLT 5000

3.15.7 14-8* Options

14-80 Option Supplied by External 24VDC		
Option:		Function:
[0]	No	Select No [0] to use the adjustable frequency drive's 24V DC supply.
[1] *	Yes	Select Yes [1] if an external 24V DC supply will be used to power the option. Inputs/outputs will be galvanically isolated from the drive when operated from an external supply.

NOTE!

This parameter is only changing function by performing a power cycle.

14-89 Option Detection		
Selects the behavior of the Adjustable frequency drive when a change in the option configuration is detected.		
Option:		Function:
[0] *	Protect Option Config.	Freezes the current settings and prevents unwanted changes when missing or defective options are detected.
[1]	Enable Option Change	Changes drive settings and is used when modifying the system configuration. This parameter setting will return to [0] after an option change.

14-90 Fault Level		
Option:		Function:
[0] *	Off	Use this parameter to customize fault levels. Use [0] "Off" with caution as it will ignore all warnings and alarms for the chosen source.
[1]	Warning	
[2]	Trip	
[3]	Trip Lock	

Failure	Alarm	Off	Warning	Trip	Trip Lock
10 V low	1	X	D		
24 V low	47	X			D
1.8V supply low	48	X			D
Voltage limit	64	X	D		
Ground fault during ramping	14			D	X
Ground fault 2 during cont. operation	45			D	X
Torque Limit	12	X	D		
Overcurrent	13			X	D
Short Circuit	16			X	D
Heatsink temperature	29			X	D
Heatsink sensor	39			X	D
Control card temperature	65			X	D
Power card temperature	6		²⁾	X	D
Heatsink temperature ¹⁾	244			X	D
Heatsink sensor ¹⁾	245			X	D
Power card temperature ¹⁾	247				

Table 3.3 Table for selection of choice of action when selected alarm appears

D = Default setting. x = possible selection.

1) Only high power drives

In FC small and medium A69 is only a warning

3.16 Parameters: 15-** Drive Information

3.16.1 15-0* Operating Data

15-00 Operating Hours		
Range:	Function:	
0 h*	[0 - 2147483647 h]	View how many hours the Adjustable frequency drive has run. The value is saved when the Adjustable frequency drive is turned off.

15-01 Running Hours		
Range:	Function:	
0 h*	[0 - 2147483647 h]	View how many hours the motor has run. Reset the counter in <i>15-07 Reset Running Hours Counter</i> . The value is saved when the Adjustable frequency drive is turned off.

15-02 kWh Counter		
Range:	Function:	
0 kWh*	[0 - 2147483647 kWh]	Registering the power consumption of the motor as a mean value over one hour. Reset the counter in <i>15-06 Reset kWh Counter</i> .

15-03 Power Up's		
Range:	Function:	
0 *	[0 - 2147483647]	View the number of times the Adjustable frequency drive has been powered up.

15-04 Over Temp's		
Range:	Function:	
0 *	[0 - 65535]	View the number of Adjustable frequency drive temperature faults which have occurred.

15-05 Over Volt's		
Range:	Function:	
0 *	[0 - 65535]	View the number of Adjustable frequency drive overvoltages which have occurred.

15-06 Reset kWh Counter		
Option:	Function:	
[0] *	Do not reset	Select <i>Do not reset</i> [0] if no reset of the kWh counter is desired.
[1]	Reset counter	Select <i>Reset</i> [1] and press [OK] to reset the kWh counter to zero (see <i>15-02 kWh Counter</i>).

NOTE!

The reset is carried out by pressing [OK].

15-07 Reset Running Hours Counter		
Option:	Function:	
[0] *	Do not reset	
[1]	Reset counter	Select <i>Reset</i> [1] and press [OK] to reset the Running Hours counter to zero (see <i>15-01 Running Hours</i>). This parameter cannot be selected via the serial port, RS-485. Select <i>Do not reset</i> [0] if no reset of the Running Hours counter is desired.

3.16.2 15-1* Data Log Settings

The Data Log enables continuous logging of up to 4 data sources (*15-10 Logging Source*) at individual rates (*15-11 Logging Interval*). A trigger event (*15-12 Trigger Event*) and window (*15-14 Samples Before Trigger*) are used to start and stop the logging conditionally.

15-10 Logging Source		
Array [4]		
Option:	Function:	
		Select which variables are to be logged.
[0] *	None	
[15]	Readout: actual setup	
[1472]	Legacy Alarm Word	
[1473]	Legacy Warning Word	
[1474]	Leg. Ext. Status Word	
[1600]	Control Word	
[1601]	Reference [Unit]	
[1602]	Reference %	
[1603]	Status Word	
[1610]	Power [kW]	
[1611]	Power [hp]	
[1612]	Motor Voltage	
[1613]	Frequency	
[1614]	Motor Current	
[1616]	Torque [Nm]	
[1617]	Speed [RPM]	
[1618]	Motor Thermal	
[1621]	Torque [%] High Res.	
[1622]	Torque [%]	
[1625]	Torque [Nm] High	
[1630]	DC Link Voltage	
[1632]	Brake Energy /s	
[1633]	Brake Energy /2 min	
[1634]	Heatsink Temp.	
[1635]	Inverter Thermal	

15-10 Logging Source		
Array [4]		
Option:	Function:	
[1650]	External Reference	
[1651]	Pulse Reference	
[1652]	Feedback [Unit]	
[1657]	Feedback [RPM]	
[1660]	Digital Input	
[1662]	Analog Input 53	
[1664]	Analog Input 54	
[1665]	Analog Output 42 [mA]	
[1666]	Digital Output [bin]	
[1675]	Analog In X30/11	
[1676]	Analog In X30/12	
[1677]	Analog Out X30/8 [mA]	
[1690]	Alarm Word	
[1692]	Warning Word	
[1694]	Ext. Status Word	
[1860]	Digital Input 2	
[3110]	Bypass Status Word	
[3470]	MCO Alarm Word 1	
[3471]	MCO Alarm Word 2	

15-11 Logging Interval		
Range:	Function:	
Size related*	[0.000 - 0.000]	

15-12 Trigger Event		
Select the trigger event. When the trigger event occurs, a window is applied to freeze the log. The log will then retain a specified percentage of samples before the occurrence of the trigger event (<i>15-14 Samples Before Trigger</i>).		
Option:	Function:	
[0] *	False	
[1]	True	
[2]	Running	
[3]	In range	
[4]	On reference	
[5]	Torque limit	
[6]	Current limit	
[7]	Out of current range	
[8]	Below l low	
[9]	Above l high	
[10]	Out of speed range	
[11]	Below speed low	
[12]	Above speed high	
[13]	Out of feedb. range	
[14]	Below feedb. low	
[15]	Above feedb. high	
[16]	Thermal warning	
[17]	Mains out of range	
[18]	Reversing	

15-12 Trigger Event		
Select the trigger event. When the trigger event occurs, a window is applied to freeze the log. The log will then retain a specified percentage of samples before the occurrence of the trigger event (<i>15-14 Samples Before Trigger</i>).		
Option:	Function:	
[19]	Warning	
[20]	Alarm (trip)	
[21]	Alarm (trip lock)	
[22]	Comparator 0	
[23]	Comparator 1	
[24]	Comparator 2	
[25]	Comparator 3	
[26]	Logic rule 0	
[27]	Logic rule 1	
[28]	Logic rule 2	
[29]	Logic rule 3	
[33]	Digital input DI18	
[34]	Digital input DI19	
[35]	Digital input DI27	
[36]	Digital input DI29	
[37]	Digital input DI32	
[38]	Digital input DI33	
[50]	Comparator 4	
[51]	Comparator 5	
[60]	Logic rule 4	
[61]	Logic rule 5	

15-13 Logging Mode		
Option:	Function:	
[0] *	Log always	Select <i>Log always</i> [0] for continuous logging.
[1]	Log once on trigger	Select <i>Log once on trigger</i> [1] to conditionally start and stop logging using <i>15-12 Trigger Event</i> and <i>15-14 Samples Before Trigger</i> .

15-14 Samples Before Trigger		
Range:	Function:	
50*	[0 - 100]	Enter the percentage of all samples prior to a trigger event which are to be retained in the log. See also <i>15-12 Trigger Event</i> and <i>15-13 Logging Mode</i> .

3.16.3 15-2* Historic Log

View up to 50 logged data items via the array parameters in this parameter group. For all parameters in the group, [0] is the most recent data and [49] the oldest data. Data is logged every time an *event* occurs (not to be confused

with SLC events). *Events* in this context are defined as a change in one of the following areas:

1. Digital input
2. Digital outputs (not monitored in this SW release)
3. Warning word
4. Alarm word
5. Status word
6. Control word
7. Extended status word

Events are logged with value, and time stamp in msec. The time interval between two events depends on how often *events* occur (maximum once every scan time). Data logging is continuous but if an alarm occurs, the log is saved and the values can be viewed on the display. This feature is useful, for example when carrying out service following a trip. View the historic log contained in this parameter via the serial communication port or via the display.

15-20 Historic Log: Event		
Array [50]		
Range:	Function:	
0 * [0 - 255]	View the event type of the logged events.	

15-21 Historic Log: Value		
Array [50]		
Range:	Function:	
0 * [0 - 2147483647]	View the value of the logged event. Interpret the event values according to this table:	
	Digital input	Decimal value. See <i>16-60 Digital Input</i> for description after converting to binary value.
	Digital output (not monitored in this SW release)	Decimal value. See <i>16-66 Digital Output [bin]</i> for description after converting to binary value.
	Warning word	Decimal value. See <i>16-92 Warning Word</i> for description.
	Alarm word	Decimal value. See <i>16-90 Alarm Word</i> for description.

15-21 Historic Log: Value		
Array [50]		
Range:	Function:	
	Status word	Decimal value. See <i>16-03 Status Word</i> for description after converting to binary value.
	Control word	Decimal value. See <i>16-00 Control Word</i> for description.
	Extended status word	Decimal value. See <i>16-94 Ext. Status Word</i> for description.

15-22 Historic Log: Time		
Array [50]		
Range:	Function:	
0 ms* [0 - 2147483647 ms]	View the time at which the logged event occurred. Time is measured in ms since Adjustable frequency drive start. The max. value corresponds to approx. 24 days which means that the count will restart at zero after this time period.	

3.16.4 15-3* Alarm Log

Parameters in this group are array parameters, where up to 10 fault logs can be viewed. [0] is the most recent logged data, and [9] the oldest. Error codes, values and time stamp can be viewed for all logged data.

15-30 Fault Log: Error Code		
Array [10]		
Range:	Function:	
0* [0 - 255]	View the error code and look up its meaning in the <i>Troubleshooting</i> chapter of the FC 300 Design Guide, MG33BXY.	

15-31 Alarm Log: Value		
Array [10]		
Range:	Function:	
0 * [-32767 - 32767]	View an extra description of the error. This parameter is mostly used in combination with alarm 38 'internal fault'.	

15-32 Alarm Log: Time		
Array [10]		
Range:	Function:	
0 s*	[0 - 2147483647 s]	View the time when the logged event occurred. Time is measured in seconds from Adjustable frequency drive start-up.

3.16.5 15-4* Drive Identification

Parameters containing read-only information about the hardware and software configuration of the Adjustable frequency drive.

15-40 FC Type		
Range:	Function:	
0*	[0 - 0]	View the Adjustable frequency drive type. The readout is identical to the FC 300 Series power field of the type code definition, characters 1-6.

15-41 Power Section		
Range:	Function:	
0*	[0 - 0]	View the FC type. The readout is identical to the FC 300 Series power field of the type code definition, characters 7-10.

15-42 Voltage		
Range:	Function:	
0*	[0 - 0]	View the FC type. The readout is identical to the FC 300 Series power field of the type code definition, characters 11-12.

15-43 Software Version		
Range:	Function:	
0 *	[0 - 0]	View the combined SW version (or 'package version') consisting of power SW and control SW.

15-44 Ordered Typecode String		
Range:	Function:	
0 *	[0 - 0]	View the type code string used for re-ordering the Adjustable frequency drive in its original configuration.

15-45 Actual Typecode String		
Range:	Function:	
0 *	[0 - 0]	View the actual string.

15-46 Frequency Converter Ordering No		
Range:	Function:	
0 *	[0 - 0]	View the 8-digit ordering number used for re-ordering the Adjustable frequency drive in its original configuration.

15-47 Power Card Ordering No		
Range:	Function:	
0 *	[0 - 0]	View the power card ordering number.

15-48 LCP Id No		
Range:	Function:	
0 *	[0 - 0]	View the LCP ID number.

15-49 SW ID Control Card		
Range:	Function:	
0 *	[0 - 0]	View the control card software version number.

15-50 SW ID Power Card		
Range:	Function:	
0 *	[0 - 0]	View the power card software version number.

15-51 Frequency Converter Serial Number		
Range:	Function:	
0 *	[0 - 0]	View the Adjustable frequency drive serial number.

15-53 Power Card Serial Number		
Range:	Function:	
0 *	[0 - 0]	View the power card serial number.

15-59 CSIV Filename		
Range:	Function:	
Application dependent*	[0 - 0]	Shows the currently used CSIV (Customer Specific Initial Values) filename.

3.16.6 15-6* Option Ident.

This read-only parameter group contains information about the hardware and software configuration of the options installed in slots A, B, C0 and C1.

15-60 Option Mounted		
Range:	Function:	
0 *	[0 - 0]	View the installed option type.

15-61 Option SW Version		
Range:	Function:	
0 *	[0 - 0]	View the installed option software version.

15-62 Option Ordering No		
Range:	Function:	
0 *	[0 - 0]	Shows the ordering number for the installed options.

15-63 Option Serial No		
Range:	Function:	
0 *	[0 - 0]	View the installed option serial number.

15-92 Defined Parameters		
Array [1000]		
Range:	Function:	
0 *	[0 - 9999]	View a list of all defined parameters in the Adjustable frequency drive. The list ends with 0.

15-93 Modified Parameters		
Array [1000]		
Range:	Function:	
0 *	[0 - 9999]	View a list of the parameters that have been changed from their default setting. The list ends with 0. Changes may not be visible until up to 30 sec. after implementation.

15-99 Parameter Metadata		
Array [30]		
Range:	Function:	
0*	[0 - 9999]	This parameter contains data used by the MCT 10 Set-up Software.

3.17 Parameters: 16-** Data Read-outs

16-00 Control Word		
Range:	Function:	
0 * [0 - 65535]	View the control word sent from the Adjustable frequency drive via the serial communication port in hex code.	

16-01 Reference [Unit]		
Range:	Function:	
0.000 Reference-FeedbackUnit*	[-999999.000 - 999999.000 ReferenceFeed-backUnit]	View the present reference value applied on impulse or analog basis in the unit resulting from the configuration selected in <i>1-00 Configuration Mode</i> (Hz, Nm or RPM).

16-02 Reference [%]		
Range:	Function:	
0.0 %*	[-200.0 - 200.0 %]	

16-03 Status Word		
Range:	Function:	
0 * [0 - 65535]	View the status word sent from the Adjustable frequency drive via the serial communication port in hex code.	

16-05 Main Actual Value [%]		
Range:	Function:	
0.00 %*	[-100.00 - 100.00 %]	View the two-byte word sent with the status word to the bus master reporting the main actual value.

16-09 Custom Readout		
Range:	Function:	
0.00 CustomReadoutUnit*	[0.00 - 0.00 CustomReadoutUnit]	View the value of custom readout from <i>0-30 Unit for User-defined Readout</i> to <i>0-32 Custom Readout Max Value</i>

3.17.1 16-1* Motor Status

16-10 Power [kW]		
Range:	Function:	
0.00 kW*	[0.00 - 10000.00 kW]	Displays motor power in kW. The value shown is calculated on the basis of the actual motor voltage and motor current. The value is filtered, and therefore approx.

16-10 Power [kW]		
Range:	Function:	
		30ms may pass from when an input value changes to when the data readout values change. The resolution of readout value on serial communication bus is in 10 W steps.

16-11 Power [hp]		
Range:	Function:	
0.00 hp*	[0.00 - 10000.00 hp]	View the motor power in HP. The value shown is calculated on the basis of the actual motor voltage and motor current. The value is filtered, and therefore approximately 30ms may pass from when an input value changes to when the data readout values change.

16-12 Motor Voltage		
Range:	Function:	
0.0 V*	[0.0 - 6000.0 V]	View the motor voltage, a calculated value used for controlling the motor.

16-13 Frequency		
Range:	Function:	
0.0 Hz*	[0.0 - 6500.0 Hz]	View the motor frequency, without resonance dampening.

16-14 Motor Current		
Range:	Function:	
0.00 A*	[0.00 - 10000.00 A]	View the motor current measured as a mean value, IRMS. The value is filtered, and thus approximately 30ms may pass from when an input value changes to when the data readout values change.

16-15 Frequency [%]		
Range:	Function:	
0.00 %*	[-100.00 - 100.00 %]	

16-16 Torque [Nm]		
Range:	Function:	
0.0 Nm*	[-3000.0 - 3000.0 Nm]	View the torque value with sign, applied to the motor shaft. Linearity is not exact between 160% motor current and torque in relation to the rated torque. Some motors supply more than 160% torque. Consequently, the min. value and the max. value will depend on the max. motor current as well as the motor used. The value is filtered, and thus approx. 30ms may pass

16-16 Torque [Nm]		
Range:	Function:	
	from when an input changes value to when the data readout values change.	

16-17 Speed [RPM]		
Range:	Function:	
0 RPM*	[-30000 - 30000 RPM]	View the actual motor RPM. In open-loop or closed-loop process control, the motor RPM is estimated. In speed closed-loop modes, the motor RPM is measured.

16-18 Motor Thermal		
Range:	Function:	
0 %*	[0 - 100 %]	View the calculated thermal load on the motor. The cut-out limit is 100%. The basis for calculation is the ETR function selected in <i>1-90 Motor Thermal Protection</i> .

16-19 KTY sensor temperature		
Range:	Function:	
0 C*	[0 - 0 C]	

16-20 Motor Angle		
Range:	Function:	
0*	[0 - 65535]	View the current encoder/resolver angle offset relative to the index position. The value range of 0-65535 corresponds to 0-2*pi (radians).

16-21 Torque [%] High Res.		
Range:	Function:	
0.0 %*	[-200.0 - 200.0 %]	

16-22 Torque [%]		
Range:	Function:	
0 %*	[-200 - 200 %]	Value shown is the torque as a percentage of nominal torque, with sign, applied to the motor shaft.

16-25 Torque [Nm] High		
Range:	Function:	
0.0 Nm*	[-200000000.0 - 200000000.0 Nm]	View the torque value with sign, applied to the motor shaft. Some motors supply more than 160% torque. Consequently, the min. value and the max. value will depend on the max. motor current as well as the motor used. This specific readout has been adapted to show higher values than the standard readout in <i>16-16 Torque [Nm]</i> .

3.17.2 16-3* Drive Status

16-30 DC Link Voltage		
Range:	Function:	
0 V*	[0 - 10000 V]	View a measured value. The value is filtered with an 30ms time constant.

16-32 Brake Energy /s		
Range:	Function:	
0.000 kW*	[0.000 - 10000.000 kW]	View the braking energy transmitted to an external brake resistor, stated as an instantaneous value.

16-33 Brake Energy /2 min		
Range:	Function:	
0.000 kW*	[0.000 - 10000.000 kW]	View the braking energy transmitted to an external brake resistor. The mean power is calculated on an average basis for the most recent 120 sec.

16-34 Heatsink Temp.		
Range:	Function:	
0 °C*	[0 - 255 °C]	

16-35 Inverter Thermal		
Range:	Function:	
0 %*	[0 - 100 %]	View the percentage load on the inverter.

16-36 Inv. Nom. Current		
Range:	Function:	
Application dependent*	[0.01 - 10000.00 A]	View the inverter nominal current, which should match the nameplate data on the connected motor. The data are used for calculation of torque, motor protection, etc.
Application dependent*	[0.01 - 10000.00 A]	View the inverter nominal current, which should match the nameplate data on the connected motor. The data are used for calculation of torque, motor protection, etc.

16-37 Inv. Max. Current		
Range:	Function:	
Application dependent*	[0.01 - 10000.00 A]	View the inverter maximum current, which should match the nameplate data on the

16-37 Inv. Max. Current		
Range:		Function:
		connected motor. The data are used for calculation of torque, motor protection, etc.
Application dependent*	[0.01 - 10000.00 A]	View the inverter maximum current, which should match the nameplate data on the connected motor. The data are used for calculation of torque, motor protection, etc.

16-38 SL Controller State		
Range:		Function:
0*	[0 - 100]	View the state of the event under execution by the SL controller.

16-39 Control Card Temp.		
Range:		Function:
0 °C*	[0 - 100 °C]	

16-40 Logging Buffer Full		
Option:		Function:
		View whether the logging buffer is full (see parameter group 15-1*). The logging buffer will never be full when 15-13 <i>Logging Mode</i> is set to <i>Log always</i> [0].
[0] *	No	
[1]	Yes	

16-49 Current Fault Source		
Range:		Function:
0*	[0 - 8]	Value indicates source of current faults including short circuit, overcurrent, and phase imbalance (from left): 1-4 Inverter 5-8 Rectifier 0 No fault recorded

16-51 Pulse Reference		
Range:		Function:
		can also reflect the impulses from an incremental encoder.

16-52 Feedback [Unit]		
Range:		Function:
0.000 Reference-FeedbackUnit*	[-999999.999 - 999999.999 ReferenceFeedbackUnit]	View the feedback unit resulting from the selection of unit and scaling in 3-00 <i>Reference Range</i> , 3-01 <i>Reference/Feedback Unit</i> , 3-02 <i>Minimum Reference</i> and 3-03 <i>Maximum Reference</i> .

16-53 Digi Pot Reference		
Range:		Function:
0.00*	[-200.00 - 200.00]	View the contribution of the digital potentiometer to the actual reference.

16-57 Feedback [RPM]		
Range:		Function:
0 RPM*	[-30000 - 30000 RPM]	Readout parameter where the actual motor RPM from the feedback source can be read in both closed-loop and open-loop. The feedback source is selected by 7-00 <i>Speed PID Feedback Source</i> .

3.17.3 16-5* Ref. & Feedb.

16-50 External Reference		
Range:		Function:
0.0*	[-200.0 - 200.0]	View the total reference, the sum of digital, analog, preset, bus and freeze references, plus catch-up and slow-down.

16-51 Pulse Reference		
Range:		Function:
0.0*	[-200.0 - 200.0]	View the reference value from programmed digital input(s). The readout

3.17.4 16-6* Inputs & Outputs

16-60 Digital Input		
Range:	Function:	
0 * [0 - 1023]	View the signal states from the active digital inputs. Example: Input 18 corresponds to bit no. 5, '0' = no signal, '1' = connected signal. Bit 6 works in the opposite way, on = '0', off = '1' (safe stop input).	
Bit 0	Digital input term. 33	
Bit 1	Digital input term. 32	
Bit 2	Digital input term. 29	
Bit 3	Digital input term. 27	
Bit 4	Digital input term. 19	
Bit 5	Digital input term. 18	
Bit 6	Digital input term. 37	
Bit 7	Digital input GP I/O term. X30/4	
Bit 8	Digital input GP I/O term. X30/3	
Bit 9	Digital input GP I/O term. X30/2	
Bit 10-63	Reserved for future terminals	

Diagram showing digital input lines from DI X46/1 to DI T-33 connected to a 130BA894.10 terminal block.

16-61 Terminal 53 Switch Setting		
Option:	Function:	
	View the setting of input terminal 53. Current = 0; Voltage = 1.	
[0] *	Current	
[1]	Voltage	
[2]	Pt 1000 [°C]	
[3]	Pt 1000 [°F]	
[4]	Ni 1000 [°C]	
[5]	Ni 1000 [°F]	

16-62 Analog Input 53		
Range:	Function:	
0.000*	[-20.000 - 20.000]	View the actual value at input 53.

16-63 Terminal 54 Switch Setting		
Option:	Function:	
	View the setting of input terminal 54. Current = 0; Voltage = 1.	
[0] *	Current	
[1]	Voltage	
[2]	Pt 1000 [°C]	
[3]	Pt 1000 [°F]	
[4]	Ni 1000 [°C]	
[5]	Ni 1000 [°F]	

16-64 Analog Input 54		
Range:	Function:	
0.000*	[-20.000 - 20.000]	View the actual value at input 54.

16-65 Analog Output 42 [mA]		
Range:	Function:	
0.000*	[0.000 - 30.000]	View the actual value at output 42 in mA. The value shown reflects the selection in 6-50 Terminal 42 Output.

16-66 Digital Output [bin]		
Range:	Function:	
0*	[0 - 15]	View the binary value of all digital outputs.

16-67 Pulse Input #29 [Hz]		
Range:	Function:	
0 *	[0 - 130000]	View the actual frequency rate on terminal 29.

16-68 Freq. Input #33 [Hz]		
Range:	Function:	
0*	[0 - 130000]	View the actual value of the frequency applied at terminal 33 as an impulse input.

16-69 Pulse Output #27 [Hz]		
Range:	Function:	
0*	[0 - 40000]	View the actual value of pulses applied to terminal 27 in digital output mode.

16-70 Pulse Output #29 [Hz]		
Range:	Function:	
0*	[0 - 40000]	View the actual value of pulses at terminal 29 in digital output mode. This parameter is available for FC 302 only.

16-71 Relay Output [bin]		
Range:	Function:	
0 * [0 - 511]	View the settings of all relays.	
	<p>Readout choice (Par. 16-71): Relay output (bin):</p>	

16-72 Counter A		
Range:	Function:	
0* [-2147483648 - 2147483647]	View the present value of Counter A. Counters are useful as comparator operands, see <i>13-10 Comparator Operand</i> . The value can be reset or changed either via digital inputs (parameter group 5-1*) or by using an SLC action (<i>13-52 SL Controller Action</i>).	

16-73 Counter B		
Range:	Function:	
0* [-2147483648 - 2147483647]	View the present value of Counter B. Counters are useful as comparator operands (<i>13-10 Comparator Operand</i>). The value can be reset or changed either via digital inputs (parameter group 5-1*) or by using an SLC action (<i>13-52 SL Controller Action</i>).	

16-74 Prec. Stop Counter		
Range:	Function:	
0* [0 - 2147483647]	Returns the actual counter value of precise counter (<i>1-84 Precise Stop Counter Value</i>).	

16-75 Analog In X30/11		
Range:	Function:	
0.000 * [-20.000 - 20.000]	View the actual value at input X30/11 of MCB 101.	

16-76 Analog In X30/12		
Range:	Function:	
0.000 * [-20.000 - 20.000]	View the actual value at input X30/12 of MCB 101.	

16-77 Analog Out X30/8 [mA]		
Range:	Function:	
0.000 * [0.000 - 30.000]	View the actual value at input X30/8 in mA.	

16-78 Analog Out X45/1 [mA]		
Range:	Function:	
0.000* [0.000 - 30.000]	View the actual value at output X45/1. The value shown reflects the selection in <i>6-70 Terminal X45/1 Output</i> .	

16-79 Analog Out X45/3 [mA]		
Range:	Function:	
0.000* [0.000 - 30.000]	View the actual value at output X45/3. The value shown reflects the selection in <i>6-80 Terminal X45/3 Output</i> .	

3.17.5 16-8* Serial communication bus & FC Port

Parameters for reporting the BUS references and control words.

16-80 Fieldbus CTW 1		
Range:	Function:	
0 * [0 - 65535]	View the two-byte control word (CTW) received from the bus master. Interpretation of the control word depends on the Serial communication bus option installed and the control word profile selected in <i>8-10 Control Profile</i> . For more information, please refer to the relevant Serial communication bus manual.	

16-82 Fieldbus REF 1		
Range:	Function:	
0 * [-200 - 200]	View the two-byte word sent with the control word form the bus master to set the reference value. For more information, refer to the relevant serial communication bus manual.	

16-84 Comm. Option STW		
Range:	Function:	
0 * [0 - 65535]	View the extended Serial communication bus comm. option status word. For more information, please refer to the relevant Serial communication bus manual.	

16-85 FC Port CTW 1		
Range:	Function:	
0 * [0 - 65535]	View the two-byte control word (CTW) received from the bus master. Interpretation of the control word depends on the Serial communication bus option installed and the control word profile selected in <i>8-10 Control Profile</i> .	

16-86 FC Port REF 1		
Range:	Function:	
0 * [-200 - 200]	View the two-byte status word (STW) sent to the bus master. Interpretation of the status word depends on the serial communication bus option installed and the control word profile selected in <i>8-10 Control Profile</i> .	

3.17.6 16-9* Diagnosis Readouts

16-90 Alarm Word		
Range:	Function:	
0 * [0 - 4294967295]	View the alarm word sent via the serial communication port in hex code.	

16-91 Alarm Word 2		
Range:	Function:	
0* [0 - 4294967295]	View the alarm word sent via the serial communication port in hex code.	

16-92 Warning Word		
Range:	Function:	
0 * [0 - 4294967295]	View the warning word sent via the serial communication port in hex code.	

16-93 Warning Word 2		
Range:	Function:	
0* [0 - 4294967295]	View the warning word sent via the serial communication port in hex code.	

16-94 Ext. Status Word		
Range:	Function:	
0* [0 - 4294967295]	Returns the extended warning word sent via the serial communication port in hex code.	

16-95 Ext. Status Word 2		
Range:	Function:	
0 * [0 - 4294967295]	Returns the extended warning word 2 sent via the serial communication port in hex code.	

16-96 Maintenance Word					
Range:	Function:				
0 [0 - 4294967295]	Readout of the Preventive Maintenance Word. The bits reflect the status for the programmed preventive maintenance events in parameter group 23-1*. 13 bits represent combinations of all the possible items:				
*	<ul style="list-style-type: none"> • Bit 0: Motor bearings • Bit 1: Pump bearings • Bit 2: Fan bearings • Bit 3: Valve • Bit 4: Pressure transmitter • Bit 5: Flow transmitter • Bit 6: Temperature transmitter • Bit 7: Pump seals • Bit 8: Fan belt • Bit 9: Filter • Bit 10: Drive cooling fan • Bit 11: Drive system health check • Bit 12: Warranty • Bit 13: Maintenance Text 0 • Bit 14: Maintenance Text 1 • Bit 15: Maintenance Text 2 • Bit 16: Maintenance Text 3 • Bit 17: Maintenance Text 4 				
	Position 4 →	Valve	Fan bearing s	Pump bearing s	Motor bearing s
	Position 3 →	Pump seals	Temperature transmitter	Flow transmitter	Pressure transmitter
	Position 2 →	Drive system health check	Drive cooling fan	Filter	Fan belt
	Position 1 →				Warranty
	0 _{hex}	-	-	-	-
	1 _{hex}	-	-	-	+
	2 _{hex}	-	-	+	-
	3 _{hex}	-	-	+	+
	4 _{hex}	-	+	-	-
	5 _{hex}	-	+	-	+
	6 _{hex}	-	+	+	-

16-96 Maintenance Word														
Range:	Function:													
7 _{hex}	-	+	+	+										
8 _{hex}	+	-	-	-										
9 _{hex}	+	-	-	+										
A _{hex}	+	-	+	-										
B _{hex}	+	-	+	+										
C _{hex}	+	+	-	-										
D _{hex}	+	+	-	+										
E _{hex}	+	+	+	-										
F _{hex}	+	+	+	+										
<p>Example: The Preventive Maintenance Word shows 040A_{hex}.</p> <table border="1"> <thead> <tr> <th>Position</th> <th>1</th> <th>2</th> <th>3</th> <th>4</th> </tr> </thead> <tbody> <tr> <td>hex value</td> <td>0</td> <td>4</td> <td>0</td> <td>A</td> </tr> </tbody> </table> <p>The first digit 0 indicates that no items from the fourth row requires maintenance The second digit 4 refers to the third row indicating that the drive cooling fan requires maintenance The third digit 0 indicates that no items from the second row require maintenance The fourth digit A refers to the top row indicating that the valve and the pump bearings require maintenance</p>					Position	1	2	3	4	hex value	0	4	0	A
Position	1	2	3	4										
hex value	0	4	0	A										

3.18 Parameters: 17-** Motor Feedb. Option

Additional parameters to configure the Encoder (MCB 102) or the Resolver (MCB 103) Feedback Option.

3.18.1 17-1* Inc. Enc. Interface

Parameters in this group configure the incremental interface of the MCB 102 option. Note that both the incremental and absolute interfaces are active at the same time.

NOTE!

These parameters cannot be adjusted while the motor is running.

17-10 Signal Type		
Select the incremental type (A/B channel) of the encoder in use. Find the information on the encoder data sheet.		
Select <i>None</i> [0] if the feedback sensor is an absolute encoder only.		
Option:	Function:	
[0]	None	
[1] *	RS422 (5V TTL)	
[2]	Sinusoidal 1Vpp	

17-11 Resolution (PPR)		
Range:	Function:	
1024*	[10 - 10000]	

3.18.2 17-2* Abs. Enc. Interface

Parameters in this group configure the absolute interface of the MCB 102 option. Note that both the incremental and absolute interfaces are active at the same time.

17-20 Protocol Selection		
Select HIPERFACE [1] if the encoder is absolute only.		
Select <i>None</i> [0] if the feedback sensor is an incremental encoder only.		
Option:	Function:	
[0] *	None	
[1]	HIPERFACE	
[2]	EnDat	
[4]	SSI	

NOTE!

This parameter cannot be adjusted while the motor is running.

17-21 Resolution (Positions/Rev)		
Select the resolution of the absolute encoder, i.e., the number of counts per revolution.		
The value depends on setting in <i>17-20 Protocol Selection</i> .		
Range:	Function:	
Application dependent*	[Application dependant]	

NOTE!

This parameter cannot be adjusted while the motor is running.

17-24 SSI Data Length		
Range:	Function:	
13*	[13 - 25]	Set the number of bits for the SSI message. Choose 13 bits for single-turn encoders and 25 bits for multi-turn encoder.

17-25 Clock Rate		
Range:	Function:	
Application dependent*	[Application dependant]	Set the SSI clock rate. With long encoder cables the clock rate must be reduced.

17-26 SSI Data Format		
Option:	Function:	
[0] *	Gray code	
[1]	Binary code	Set the data format of the SSI data. Choose between Gray or Binary format.

17-34 HIPERFACE Baudrate		
Select the baud rate of the attached encoder.		
The parameter is only accessible when <i>17-20 Protocol Selection</i> is set to HIPERFACE [1].		
Option:	Function:	
[0]	600	
[1]	1200	
[2]	2400	
[3]	4800	
[4] *	9600	
[5]	19200	
[6]	38400	

NOTE!

This parameter cannot be adjusted while the motor is running.

3.18.3 17-5* Resolver Interface

Parameter group 17-5* is used for setting parameters for the MCB 103 resolver option.

Usually the resolver feedback is used as motor feedback from permanent magnet motors with *1-01 Motor Control Principle* set to Flux with motor feedback.

Resolver parameters cannot be adjusted while the motor is running.

17-50 Poles		
Range:	Function:	
2* [2 - 2]	Set the number of poles on the resolver. The value is stated in the data sheet for resolvers.	

17-51 Input Voltage		
Range:	Function:	
7.0 V* [2.0 - 8.0 V]	Set the input voltage to the resolver. The voltage is stated as an RMS value. The value is stated in the data sheet for resolvers.	

17-52 Input Frequency		
Range:	Function:	
10.0 kHz* [2.0 - 15.0 kHz]	Set the input frequency to the resolver. The value is stated in the data sheet for resolvers.	

17-53 Transformation Ratio		
Range:	Function:	
0.5* [0.1 - 1.1]	Set the transformation ratio for the resolver. The transformation ration is: $T_{ratio} = \frac{V_{Out}}{V_{In}}$ The value is stated in the data sheet for resolvers.	

17-56 Encoder Sim. Resolution		
Set the resolution and activate the encoder emulation function (generation of encoder signals from the measured position from a resolver). Needed when necessary to transfer the speed or position information from one drive to another. To disable the function, select [0].		
Option:	Function:	
[0] *	Disabled	
[1]	512	
[2]	1024	
[3]	2048	
[4]	4096	

17-59 Resolver Interface		
Activate the MCB 103 resolver option when the resolver parameters are selected. To avoid damage to resolvers, <i>17-50 Poles – 17-53 Transformation Ratio</i> must be adjusted before activating this parameter.		
Option:	Function:	
[0] *	Disabled	
[1]	Enabled	

3.18.4 17-6* Monitoring and Application

This parameter group is used for selecting additional functions when the MCB 102 Encoder option or MCB 103 Resolver option is fitted into option slot B as speed feedback.

Monitoring and application parameters cannot be adjusted while the motor is running.

17-60 Feedback Direction		
Change the detected encoder rotation direction without changing the wiring to the encoder.		
Option:	Function:	
[0] *	Clockwise	
[1]	Counter clockwise	

NOTE!

This parameter cannot be adjusted while the motor is running.

17-61 Feedback Signal Monitoring		
Select which reaction the Adjustable frequency drive should take if a faulty encoder signal is detected. The encoder function in <i>17-61 Feedback Signal Monitoring</i> is an electrical check of the hardware circuit in the encoder system.		
Option:	Function:	
[0]	Disabled	
[1] *	Warning	
[2]	Trip	
[3]	Jog	
[4]	Freeze Output	
[5]	Max Speed	
[6]	Switch to Open Loop	
[7]	Select Setup 1	
[8]	Select Setup 2	
[9]	Select Setup 3	
[10]	Select Setup 4	
[11]	stop & trip	

3.19 Parameters: 18-** Data Readouts 2

18-36 Analog Input X48/2 [mA]		
Range:		Function:
0.000*	[-20.000 - 20.000]	View the actual current measured at input X48/2.

18-37 Temp. Input X48/4		
Range:		Function:
0*	[-500 - 500]	View the actual temperature measured at input X48/4. The temperature unit is based on the selection in <i>35-00 Term. X48/4 Temp. Unit.</i>

18-38 Temp. Input X48/7		
Range:		Function:
0*	[-500 - 500]	View the actual temperature measured at input X48/7. The temperature unit is based on the selection in <i>35-02 Term. X48/7 Temp. Unit.</i>

18-39 Temp. Input X48/10		
Range:		Function:
0*	[-500 - 500]	View the actual temperature measured at input X48/10. The temperature unit is based on the selection in <i>35-04 Term. X48/10 Temp. Unit.</i>

18-60 Digital Input 2		
Range:		Function:
0*	[0 - 65535]	View the signal states from the active digital inputs. '0' = no signal, '1' = connected signal.

18-90 Process PID Error		
Range:		Function:
0.0 %*	[-200.0 - 200.0 %]	

18-91 Process PID Output		
Range:		Function:
0.0 %*	[-200.0 - 200.0 %]	


18-92 Process PID Clamped Output		
Range:		Function:
0.0 %*	[-200.0 - 200.0 %]	

18-93 Process PID Gain Scaled Output		
Range:		Function:
0.0 %*	[-200.0 - 200.0 %]	

3.20 Parameters: 30-** Special Features

3.20.1 30-0* Wobble Function

The wobble function is primarily used for synthetic yarn winding applications. The wobble option is to be installed in the Adjustable frequency drive controlling the traverse drive. The traverse drive Adjustable frequency drive will move the yarn back and forth in a diamond pattern across the surface of the yarn package. To prevent a buildup of yarn at the same points at the surface, this pattern must be altered. The wobble option can accomplish this by continuously varying the traverse velocity in a programmable cycle. The wobble function is created by superimposing a delta frequency around a center frequency. To compensate for the inertia in the system a quick frequency jump can be included. Especially suitable for elastic yarn applications, the option features a randomized wobble ratio.

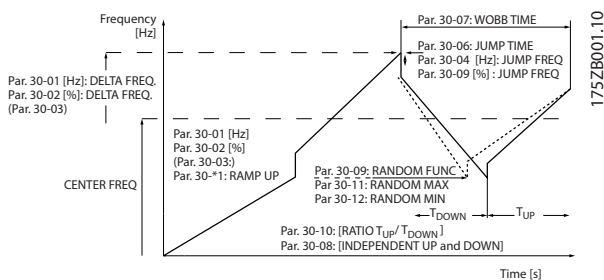

30-00 Wobble Mode		
Option:	Function:	
	The standard speed open-loop mode in 1-00 Configuration Mode is extended with a wobble function. In this parameter, it is possible to select which method to be used for the wobblers. The parameters can be set as absolute values (direct frequencies) or as relative values (percentage of other parameters). The wobble cycle time can be set as an absolute value or as independent up and down times. When using an absolute cycle time, the up and down times are configured through the wobble ratio.	
[0] *	Abs. Freq., Abs. Time	
[1]	Abs. Freq., Up/ Down Time	
[2]	Rel. Freq., Abs. Time	

30-00 Wobble Mode		
Option:	Function:	
[3]	Rel. Freq., Up/ Down Time	

3

NOTE!

This parameter cannot be set while running.

NOTE!

The setting of "Center Frequency" takes place via the normal reference handling parameter group, 3-1*

30-01 Wobble Delta Frequency [Hz]		
Range:	Function:	
5.0 Hz*	[0.0 - 25.0 Hz]	The delta frequency is determining the magnitude of the wobble frequency. The delta frequency is superimposed on the center frequency. 30-01 Wobble Delta Frequency [Hz] selects both the positive and negative delta frequency. The setting of 30-01 Wobble Delta Frequency [Hz] must thus not be higher than the setting of the center frequency. The initial ramp-up time from standstill until the wobble sequence is running is determined by parameter group 3-1*.

30-02 Wobble Delta Frequency [%]		
Range:	Function:	
25 %*	[0 - 100 %]	

30-03 Wobble Delta Freq. Scaling Resource		
Option:	Function:	
	Select which drive input should be used to scale the delta frequency setting.	
[0] *	No function	
[1]	Analog input 53	
[2]	Analog input 54	
[3]	Frequency input 29	FC 302 only
[4]	Frequency input 33	
[7]	Analog input X30/11	
[8]	Analog input X30/12	
[15]	Analog Input X48/2	

30-04 Wobble Jump Frequency [Hz]		
Range:	Function:	
0.0 Hz*	[Application dependant]	The jump frequency is used to compensate for the inertia in the traverse system. If a jump in the output frequency is required in the top and in the bottom of the wobble sequence, the frequency

30-04 Wobble Jump Frequency [Hz]		
Range:		Function:
		jump is set in this parameter. If the traverse system has a very high inertia a high jump frequency may create a torque limit warning or trip (warning/alarm 12) or an overvoltage warning or trip (warning/alarm 7). This parameter can only be changed in stop mode

30-05 Wobble Jump Frequency [%]		
Range:		Function:
0 %*	[0 - 100 %]	

30-06 Wobble Jump Time		
Range:		Function:
Application dependent*	[Application dependant]	This parameter determines the slope of the jump ramp at the max. and min. wobble frequency.

30-07 Wobble Sequence Time		
Range:		Function:
10.0 s*	[1.0 - 1000.0 s]	This parameter determines the wobble sequence period. This parameter can only be changed in stop mode. Wobble time = $t_{up} + t_{down}$

30-08 Wobble Up/ Down Time		
Range:		Function:
5.0 s*	[0.1 - 1000.0 s]	Defines the individual up and down times for each wobble cycle.

30-09 Wobble Random Function		
Option:		Function:
[0] *	Off	
[1]	On	

30-10 Wobble Ratio		
Range:		Function:
1.0*	[0.1 - 10.0]	If the ratio 0.1 is selected: t_{down} is 10 times greater than t_{up} . If the ratio 10 is selected: t_{up} is 10 times greater than t_{down} .

30-11 Wobble Random Ratio Max.		
Range:		Function:
10.0*	[Application dependant]	Enter the maximum allowed wobble ratio.

30-12 Wobble Random Ratio Min.		
Range:		Function:
0.1*	[Application dependant]	Enter the minimum allowed wobble ratio.

30-19 Wobble Delta Freq. Scaled		
Range:		Function:
0.0 Hz*	[0.0 - 1000.0 Hz]	Readout parameter. View the actual wobble delta frequency after scaling has been applied.

3.20.2 30-2* Adv. Start Adjust

30-20 High Starting Torque Time [s]		
Range:		Function:
0.00 s*	[0.00 - 60.00 s]	High starting torque time for PM motor in flux mode without feedback. This parameter is available for FC 302 only.

30-21 High Starting Torque Current [%]		
Range:		Function:
100.0 %*	[Application dependant]	High starting torque current for PM motor in flux mode without feedback. This parameter is available for FC 302 only.

30-22 Locked Rotor Protection		
Locked Rotor Protection for PM motor in flux mode without feedback. This parameter is available for FC 302 only.		
Option:		Function:
[0] *	Off	
[1]	On	

30-23 Locked Rotor Detection Time [s]		
Locked Rotor Detection Time for PM motor in flux mode without feedback. This parameter is available for FC 302 only.		
Range:		Function:
0.10 s*	[0.05 - 1.00 s]	

3.20.3 30-8* Compatibility

30-80 d-axis Inductance (Ld)		
Range:		Function:
Application dependent*	[Application dependant]	Enter the value of the d-axis inductance. Obtain the value from the permanent magnet motor data sheet. The d-axis inductance cannot be found by performing an AMA.

30-81 Brake Resistor (ohm)		
Range:		Function:
Application dependent*	[Application dependant]	Set the brake resistor value in Ohms. This value is used for monitoring the power to the brake resistor in 2-13 <i>Brake Power Monitoring</i> . This parameter is only active in drives with an integral dynamic brake.

30-83 Speed PID Proportional Gain		
Range:		Function:
Application dependent*	[0.0000 - 1.0000]	Enter the speed controller proportional gain. Quick control is obtained at high amplification. However, if the amplification is too great, the process may become unstable.
Application dependent*	[0.0000 - 1.0000]	Enter the speed controller proportional gain. Quick control is obtained at high amplification. However, if the amplification is too great, the process may become unstable.

30-84 Process PID Proportional Gain		
Range:		Function:
0.100*	[0.000 - 10.000]	Enter the process controller proportional gain. Quick control is obtained at high amplification. However, if the amplification is too great, the process may become unstable.

3.21 Parameters: 35-** Sensor Input Option

3.21.1 35-0* Temp. Input Mode (MCB 114)

35-00 Term. X48/4 Temp. Unit		
Select the unit to be used with temperature input X48/4 settings and readouts:		
Option:	Function:	
[60] *	°C	
[160]	°F	

35-01 Term. X48/4 Input Type		
View the temperature sensor type detected at input X48/4:		
Option:	Function:	
[0] *	Not Connected	
[1]	PT100 2-wire	
[3]	PT1000 2-wire	
[5]	PT100 3-wire	
[7]	PT1000 3-wire	

35-02 Term. X48/7 Temp. Unit		
Select the unit to be used with temperature input X48/7 settings and readouts:		
Option:	Function:	
[60] *	°C	
[160]	°F	

35-03 Term. X48/7 Input Type		
View the temperature sensor type detected at input X48/7:		
Option:	Function:	
[0] *	Not Connected	
[1]	PT100 2-wire	
[3]	PT1000 2-wire	
[5]	PT100 3-wire	
[7]	PT1000 3-wire	

35-04 Term. X48/10 Temp. Unit		
Select the unit to be used with temperature input X48/10 settings and readouts:		
Option:	Function:	
[60] *	°C	
[160]	°F	

35-05 Term. X48/10 Input Type		
View the temperature sensor type detected at input X48/10:		
Option:	Function:	
[0] *	Not Connected	
[1]	PT100 2-wire	
[3]	PT1000 2-wire	
[5]	PT100 3-wire	
[7]	PT1000 3-wire	

35-06 Temperature Sensor Alarm Function		
Select the alarm function:		
Option:	Function:	
[0]	Off	
[2]	Stop	
[5] *	Stop and trip	

3.21.2 35-1* Temp. Input X48/4 (MCB 114)

35-14 Term. X48/4 Filter Time Constant		
Range:	Function:	
0.001 s*	[0.001 - 10.000 s]	Enter the filter time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal X48/4. A high time constant value improves dampening but also increases the time delay through the filter.

35-15 Term. X48/4 Temp. Monitor		
This parameter gives the possibility of enabling or disabling the temperature monitor for terminal X48/4. The temperature limits can be set in 35-16 Term. X48/4 Low Temp. Limit and 35-17 Term. X48/4 High Temp. Limit.		
Option:	Function:	
[0] *	Disabled	
[1]	Enabled	

35-16 Term. X48/4 Low Temp. Limit		
Range:	Function:	
Application dependent*	[Application dependant]	

35-17 Term. X48/4 High Temp. Limit		
Range:	Function:	
Application dependent*	[Application dependant]	

3.21.3 35-2* Temp. Input X48/7 (MCB 114)

35-24 Term. X48/7 Filter Time Constant		
Range:	Function:	
0.001 s*	[0.001 - 10.000 s]	Enter the filter time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal X48/7. A high time constant value improves dampening but also increases the time delay through the filter.

35-25 Term. X48/7 Temp. Monitor		
This parameter gives the possibility of enabling or disabling the temperature monitor for terminal X48/7. The temperature limits can be set in 35-26 Term. X48/7 Low Temp. Limit and 35-27 Term. X48/7 High Temp. Limit.		
Option:		Function:
[0] *	Disabled	
[1]	Enabled	

35-26 Term. X48/7 Low Temp. Limit		
Range:		Function:
Application dependent*	[Application dependant]	

35-27 Term. X48/7 High Temp. Limit		
Range:		Function:
Application dependent*	[Application dependant]	

3.21.4 35-3* Temp. Input X48/10 (MCB 114)

35-34 Term. X48/10 Filter Time Constant		
Range:		Function:
0.001 s*	[0.001 - 10.000 s]	Enter the filter time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal X48/10. A high time constant value improves dampening but also increases the time delay through the filter.

35-35 Term. X48/10 Temp. Monitor		
This parameter gives the possibility of enabling or disabling the temperature monitor for terminal X48/10. The temperature limits can be set in 35-36 Term. X48/10 Low Temp. Limit/35-37 Term. X48/10 High Temp. Limit.		
Option:		Function:
[0] *	Disabled	
[1]	Enabled	

35-36 Term. X48/10 Low Temp. Limit		
Range:		Function:
Application dependent*	[Application dependant]	

35-37 Term. X48/10 High Temp. Limit		
Range:		Function:
Application dependent*	[Application dependant]	

3.21.5 35-4* Analog Input X48/2 (MCB 114)

35-42 Term. X48/2 Low Current		
Range:		Function:
4.00 mA*	[Application dependant]	Enter the current (mA) that corresponds to the low reference value, set in 35-44 Term. X48/2 Low Ref./Feedb. Value. The value must be set at > 2mA in order to activate the Live Zero Timeout Function in 6-01 Live Zero Timeout Function.

35-43 Term. X48/2 High Current		
Range:		Function:
20.00 mA*	[Application dependant]	Enter the current (mA) that corresponds to the high reference value (set in 35-45 Term. X48/2 High Ref./Feedb. Value).

35-44 Term. X48/2 Low Ref./Feedb. Value		
Range:		Function:
0.000*	[-999999.999 - 999999.999]	Enter the reference or feedback value (in RPM, Hz, bar, etc.) that corresponds to the voltage or current set in 35-42 Term. X48/2 Low Current.

35-45 Term. X48/2 High Ref./Feedb. Value		
Range:		Function:
100.000*	[-999999.999 - 999999.999]	Enter the reference or feedback value (in RPM, Hz, bar, etc.) that corresponds to the voltage or current set in 35-43 Term. X48/2 High Current.

35-46 Term. X48/2 Filter Time Constant		
Range:		Function:
0.001 s*	[0.001 - 10.000 s]	Enter the filter time constant. This is a first-order digital low pass filter time constant for suppressing electrical noise in terminal X48/2. A high time constant value improves dampening but also increases the time delay through the filter.

4 Parameter Lists

FC Series

All = valid for FC 301 and FC 302 series

01 = valid for FC 301 only

02 = valid for FC 302 only

Changes during operation

"TRUE" means that the parameter can be changed while the adjustable frequency drive is in operation, and "FALSE" means that the adjustable frequency drive must be stopped before a change can be made.

4-Set-up

'All set-ups': the parameter can be set individually in each of the four set-ups, i.e., one single parameter can have four different data values.

'1 set-up': the data value will be the same in all set-ups.

Data type	Description	Type
2	Integer 8	Int8
3	Integer 16	Int16
4	Integer 32	Int32
5	Unsigned 8	UInt8
6	Unsigned 16	UInt16
7	Unsigned 32	UInt32
9	Visible String	VisStr
33	Normalized value 2 bytes	N2
35	Bit sequence of 16 boolean variables	V2
54	Time difference w/o date	TimD

Conversion index	Conversion factor
100	
75	
74	
67	
6	1000000
5	100000
4	10000
3	1000
2	100
1	10
0	1
-1	0.1
-2	0.01
-3	0.001
-4	0.0001
-5	0.00001
-6	0.000001
-7	0.0000001

Table 4.1 Conversion table

4.1.1 Conversion

The various attributes of each parameter are displayed in the section Factory Settings. Parameter values are transferred as whole numbers only. Conversion factors are therefore used to transfer decimals.

4-12 Motor Speed Low Limit [Hz] has a conversion factor of 0.1.

To preset the minimum frequency to 10 Hz, transfer the value 100. A conversion factor of 0.1 means that the value transferred is multiplied by 0.1. The value 100 is thus perceived as 10.0.

Examples:

0s --> conversion index 0

0.00s --> conversion index -2

0ms --> conversion index -3

0.00ms --> conversion index -5

4.1.2 Active/Inactive Parameters in Different Drive Control Modes

+ = active

- = not active

1-10 Motor Construction	AC motor				PM Non-salient Motor		
	U/f mode	VVC+	Flux open-loop	Flux closed-loop	U/f mode	Flux open-loop	Flux closed-loop
1-00 Configuration Mode							
[0] Speed Open-loop	+	+	+	-			
[1] Speed Closed-loop	-	+	-	+			
[2] Torque	-	-	-	+			
[3] Process	+	+	+	-			
[4] Torque Open-loop	-	+	-	-			
[5] Wobble	+	+	+	+			
[6] Surface Winder	+	+	+	-			
[7] Ext. PID Open-loop	+	+	+	-			
[8] Ext. PID Closed-loop	-	+	-	+			
1-02 Flux Motor Feedback Source							
1-02 Flux Motor Feedback Source	-	-	-	+			
1-03 Torque Characteristics							
1-03 Torque Characteristics	-	+	+	+			
		see 1, 2, 3)	see 1, 3, 4)	see 1, 3, 4)			
1-04 Overload Mode							
1-04 Overload Mode	+	+	+	+	+	+	+
1-05 Local Mode Configuration							
1-05 Local Mode Configuration	+	+	+	+	+	+	+
1-06 Clockwise Direction							
1-06 Clockwise Direction	+	+	+	+	+	+	+
1-20 Motor Power [kW]							
1-20 Motor Power [kW] (Par. 023 = International)	+	+	+	+			
1-21 Motor Power [HP]							
1-21 Motor Power [HP] (Par. 023 = US)	+	+	+	+			
1-22 Motor Voltage							
1-22 Motor Voltage	+	+	+	+			
1-23 Motor Frequency							
1-23 Motor Frequency	+	+	+	+			
1-24 Motor Current							
1-24 Motor Current	+	+	+	+			
1-25 Motor Nominal Speed							
1-25 Motor Nominal Speed	+	+	+	+			
1-26 Motor Cont. Rated Torque							
1-26 Motor Cont. Rated Torque	-	-	-	-	+	+	+
1-29 Automatic Motor Adaptation (AMA)							
1-29 Automatic Motor Adaptation (AMA)	+	+	+	+			
1-30 Stator Resistance (Rs)							
1-30 Stator Resistance (Rs)	+	+	+	+	+		
1-31 Rotor Resistance (Rr)							
1-31 Rotor Resistance (Rr)	-	+	+	+			
		see 5)					
1-33 Stator Leakage Reactance (X1)							
1-33 Stator Leakage Reactance (X1)	+	+	+	+	+		
1-34 Rotor Leakage Reactance (X2)							
1-34 Rotor Leakage Reactance (X2)	-	+	+	+			
		see 5)					
1-35 Main Reactance (Xh)							
1-35 Main Reactance (Xh)	+	+	+	+	+		
1-36 Iron Loss Resistance (Rfe)							
1-36 Iron Loss Resistance (Rfe)	-	-	+	+	-	-	-
1-37 d-axis Inductance (Ld)							
1-37 d-axis Inductance (Ld)	-	-	-	-		+	+
1-39 Motor Poles							
1-39 Motor Poles	+	+	+	+			
1-40 Back EMF at 1000 RPM							
1-40 Back EMF at 1000 RPM	-	-	-	-	+	+	+
1-41 Motor Angle Offset							
1-41 Motor Angle Offset	-	-	-	-			+

1) Constant torque

2) Variable torque

3) AEO

4) Constant power

5) Used in flystart

1-10 <i>Motor Construction</i>	AC motor				PM Non-salient Motor		
	U/f mode	VVC+	Flux open-loop	Flux closed-loop	U/f mode	Flux open-loop	Flux closed-loop
1-50 <i>Motor Magnetisation at Zero Speed</i>	-	+	-	-	-	-	-
1-51 <i>Min Speed Normal Magnetising [RPM](Par. 002 = rmp)</i>	-	+	-	-	-	-	-
1-52 <i>Min Speed Normal Magnetising [Hz](Par. 002 = Hz)</i>	-	+	-	-	-	-	-
1-53 <i>Model Shift Frequency</i>	-	-	+	+	-	+	+
1-54 <i>Voltage reduction in fieldweakening</i>	-	-	+ see 6)	+	-	-	-
1-55 <i>U/f Characteristic - U</i>	+	-	-	-	+	-	-
1-56 <i>U/f Characteristic - F</i>	+	-	-	-	+	-	-
1-58 <i>Flystart Test Pulses Current</i>	-	+	-	-	-	-	-
1-59 <i>Flystart Test Pulses Frequency</i>	-	+	-	-	-	-	-
1-60 <i>Low Speed Load Compensation</i>	-	+	-	-	-	-	-
1-61 <i>High Speed Load Compensation</i>	-	+	-	-	-	-	-
1-62 <i>Slip Compensation</i>	-	+ see 7)	+	-	-	-	-
1-63 <i>Slip Compensation Time Constant</i>	+ see 8)	+	+ see 8)	-	+ see 8)	+ see 8)	-
1-64 <i>Resonance Dampening</i>	+	+	+	-	+	+	-
1-65 <i>Resonance Dampening Time Constant</i>	+	+	+	-	+	+	-
1-66 <i>Min. Current at Low Speed</i>	-	-	+	+	-	+	+
1-67 <i>Load Type</i>	-	-	+	-	-	-	-
1-68 <i>Minimum Inertia</i>	-	-	+	-	-	-	-
1-69 <i>Maximum Inertia</i>	-	-	+	-	-	-	-
1-71 <i>Start Delay</i>	+	+	+	+	+	+	+
1-72 <i>Start Function</i>	+	+	+	+	+	+	+
1-73 <i>Flying Start</i>	-	+	+	+	-	-	-
1-74 <i>Start Speed [RPM](Par. 002 = rmp)</i>	-	+	-	-	-	-	-
1-75 <i>Start Speed [Hz](Par. 002 = Hz)</i>	-	+	-	-	-	-	-
1-76 <i>Start Current</i>	-	+	-	-	-	-	-

6) Used when 1-03 Torque Characteristics is constant power

7) Not used when 1-03 Torque Characteristics = VT

8) Part of resonance damping

1-10 <i>Motor Construction</i>	AC motor				PM Non-salient Motor		
1-01 <i>Motor Control Principle</i>	U/f mode	VVC+	Flux open-loop	Flux closed-loop	U/f mode	Flux open-loop	Flux closed-loop
1-80 <i>Function at Stop</i>	+	+	+	+	+	+	+
1-81 <i>Min Speed for Function at Stop [RPM]</i> (Par. 002 = rpm)	+	+	+	+	+	+	+
1-82 <i>Min Speed for Function at Stop [Hz]</i> (Par. 002 = Hz)	+	+	+	+	+	+	+
1-83 <i>Precise Stop Function</i>	+	+	+	+	+	+	+
1-84 <i>Precise Stop Counter Value</i>	+	+	+	+	+	+	+
1-85 <i>Precise Stop Speed Compensation Delay</i>	+	+	+	+	+	+	+
1-90 <i>Motor Thermal Protection</i>	+	+	+	+			
1-91 <i>Motor External Fan</i>	+	+	+	+			
1-93 <i>Thermistor Resource</i>	+	+	+	+			
1-95 <i>KTY Sensor Type</i>	+	+	+	+			
1-96 <i>KTY Thermistor Resource</i>	+	+	+	+			
1-97 <i>KTY Threshold level</i>	+	+	+	+			
1-98 <i>ATEX ETR interpol. points freq.</i>	+	+	+	+			
1-99 <i>ATEX ETR interpol points current</i>	+	+	+	+			
2-00 <i>DC Hold Current</i>	+	+	+	+			
2-01 <i>DC Brake Current</i>	+	+	+	+			
2-02 <i>DC Braking Time</i>	+	+	+	+			
2-03 <i>DC Brake Cut In Speed [RPM]</i>	+	+	+	+			
2-04 <i>DC Brake Cut In Speed [Hz]</i>	+	+	+	+			
2-05 <i>Maximum Reference</i>	+	+	+	+			
2-10 <i>Brake Function</i>	+	+	+	+			
	see 9)						
2-11 <i>Brake Resistor (ohm)</i>	+	+	+	+			
2-12 <i>Brake Power Limit (kW)</i>	+	+	+	+			
2-13 <i>Brake Power Monitoring</i>	+	+	+	+			
2-15 <i>Brake Check</i>	+	+	+	+			
	see 9)						
2-16 <i>AC brake Max. Current</i>	-	+	+	+			
2-17 <i>Over-voltage Control</i>	+	+	+	+			
2-18 <i>Brake Check Condition</i>	+	+	+	+			
2-19 <i>Over-voltage Gain</i>	+	+	+	-			
2-20 <i>Release Brake Current</i>	+	+	+	+			
2-21 <i>Activate Brake Speed [RPM]</i>	+	+	+	+			
2-22 <i>Activate Brake Speed [Hz]</i>	+	+	+	+			
2-23 <i>Activate Brake Delay</i>	+	+	+	+			
2-24 <i>Stop Delay</i>	-	-	-	+			
2-25 <i>Brake Release Time</i>	-	-	-	+			
2-26 <i>Torque Ref</i>	-	-	-	+			
2-27 <i>Torque Ramp Time</i>	-	-	-	+			
2-28 <i>Gain Boost Factor</i>	-	-	-	+			

9) Not AC brake

4.1.3 0-** Operation/Display

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
0-0* Basic Settings							
0-01	Language	[0] English	1 set-up		TRUE	-	Uint8
0-02	Motor Speed Unit	[0] RPM	2 set-ups		FALSE	-	Uint8
0-03	Regional Settings	[0] International	2 set-ups		FALSE	-	Uint8
0-04	Operating State at Power-up (Hand)	[1] Forced stop, ref=old	All set-ups		TRUE	-	Uint8
0-09	Performance Monitor	0.0 %	All set-ups		TRUE	-1	Uint16
0-1* Set-up Operations							
0-10	Active Set-up	[1] Set-up 1	1 set-up		TRUE	-	Uint8
0-11	Edit Set-up	[1] Set-up 1	All set-ups		TRUE	-	Uint8
0-12	This Set-up Linked to	[0] Not linked	All set-ups		FALSE	-	Uint8
0-13	Readout: Linked Set-ups	0 N/A	All set-ups		FALSE	0	Uint16
0-14	Readout: Edit Set-ups / Channel	0 N/A	All set-ups		TRUE	0	Int32
0-15	Readout: actual setup	0 N/A	All set-ups		FALSE	0	Uint8
0-2* LCP Display							
0-20	Display Line 1.1 Small	1617	All set-ups		TRUE	-	Uint16
0-21	Display Line 1.2 Small	1614	All set-ups		TRUE	-	Uint16
0-22	Display Line 1.3 Small	1610	All set-ups		TRUE	-	Uint16
0-23	Display Line 2 Large	1613	All set-ups		TRUE	-	Uint16
0-24	Display Line 3 Large	1602	All set-ups		TRUE	-	Uint16
0-25	My Personal Menu	ExpressionLimit	1 set-up		TRUE	0	Uint16
0-3* LCP Cust. Readout							
0-30	Unit for User-defined Readout	[0] None	All set-ups		TRUE	-	Uint8
0-31	Min Value of User-defined Readout	0.00 CustomReadoutUnit	All set-ups		TRUE	-2	Int32
0-32	Max Value of User-defined Readout	100.00 CustomReadoutUnit	All set-ups		TRUE	-2	Int32
0-37	Display Text 1	0 N/A	1 set-up		TRUE	0	VisStr[25]
0-38	Display Text 2	0 N/A	1 set-up		TRUE	0	VisStr[25]
0-39	Display Text 3	0 N/A	1 set-up		TRUE	0	VisStr[25]
0-4* LCP Keypad							
0-40	[Hand on] Key on LCP	null	All set-ups		TRUE	-	Uint8
0-41	[Off] Key on LCP	null	All set-ups		TRUE	-	Uint8
0-42	[Auto on] Key on LCP	null	All set-ups		TRUE	-	Uint8
0-43	[Reset] Key on LCP	null	All set-ups		TRUE	-	Uint8
0-44	[Off/Reset] Key on LCP	null	All set-ups		TRUE	-	Uint8
0-45	[Drive Bypass] Key on LCP	null	All set-ups		TRUE	-	Uint8
0-5* Copy/Save							
0-50	LCP Copy	[0] No copy	All set-ups		FALSE	-	Uint8
0-51	Set-up Copy	[0] No copy	All set-ups		FALSE	-	Uint8
0-6* Password							
0-60	Main Menu Password	100 N/A	1 set-up		TRUE	0	Int16
0-61	Access to Main Menu w/o Password	[0] Full access	1 set-up		TRUE	-	Uint8
0-65	Quick Menu Password	200 N/A	1 set-up		TRUE	0	Int16
0-66	Access to Quick Menu w/o Password	[0] Full access	1 set-up		TRUE	-	Uint8
0-67	Bus Password Access	0 N/A	All set-ups		TRUE	0	Uint16

4.1.4 1-** Load/Motor

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
1-0* General Settings							
1-00	Configuration Mode	null	All set-ups		TRUE	-	UInt8
1-01	Motor Control Principle	null	All set-ups		FALSE	-	UInt8
1-02	Flux Motor Feedback Source	[1] 24V encoder	All set-ups	x	FALSE	-	UInt8
1-03	Torque Characteristics	[0] Constant torque	All set-ups		TRUE	-	UInt8
1-04	Overload Mode	[0] High torque	All set-ups		FALSE	-	UInt8
1-05	Local Mode Configuration	[2] As mode par 1-00	All set-ups		TRUE	-	UInt8
1-06	Clockwise Direction	[0] Normal	All set-ups		FALSE	-	UInt8
1-1* Motor Selection							
1-10	Motor Construction	[0] Asynchron	All set-ups		FALSE	-	UInt8
1-2* Motor Data							
1-20	Motor Power [kW]	ExpressionLimit	All set-ups		FALSE	1	UInt32
1-21	Motor Power [HP]	ExpressionLimit	All set-ups		FALSE	-2	UInt32
1-22	Motor Voltage	ExpressionLimit	All set-ups		FALSE	0	UInt16
1-23	Motor Frequency	ExpressionLimit	All set-ups		FALSE	0	UInt16
1-24	Motor Current	ExpressionLimit	All set-ups		FALSE	-2	UInt32
1-25	Motor Nominal Speed	ExpressionLimit	All set-ups		FALSE	67	UInt16
1-26	Motor Cont. Rated Torque	ExpressionLimit	All set-ups		FALSE	-1	UInt32
1-29	Automatic Motor Adaptation (AMA)	[0] Off	All set-ups		FALSE	-	UInt8
1-3* Addl. Motor Data							
1-30	Stator Resistance (Rs)	ExpressionLimit	All set-ups		FALSE	-4	UInt32
1-31	Rotor Resistance (Rr)	ExpressionLimit	All set-ups		FALSE	-4	UInt32
1-33	Stator Leakage Reactance (X1)	ExpressionLimit	All set-ups		FALSE	-4	UInt32
1-34	Rotor Leakage Reactance (X2)	ExpressionLimit	All set-ups		FALSE	-4	UInt32
1-35	Main Reactance (Xh)	ExpressionLimit	All set-ups		FALSE	-4	UInt32
1-36	Iron Loss Resistance (Rfe)	ExpressionLimit	All set-ups		FALSE	-3	UInt32
1-37	d-axis Inductance (Ld)	ExpressionLimit	All set-ups	x	FALSE	-4	Int32
1-39	Motor Poles	ExpressionLimit	All set-ups		FALSE	0	UInt8
1-40	Back EMF at 1000 RPM	ExpressionLimit	All set-ups	x	FALSE	0	UInt16
1-41	Motor Angle Offset	0 N/A	All set-ups		FALSE	0	Int16
1-5* Load-Indep. Setting							
1-50	Motor Magnetization at Zero Speed	100 %	All set-ups		TRUE	0	UInt16
1-51	Min Speed Normal Magnetizing [RPM]	ExpressionLimit	All set-ups		TRUE	67	UInt16
1-52	Min Speed Normal Magnetizing [Hz]	ExpressionLimit	All set-ups		TRUE	-1	UInt16
1-53	Model Shift Frequency	ExpressionLimit	All set-ups	x	FALSE	-1	UInt16
1-54	Voltage reduction in fieldweakening	0 V	All set-ups		FALSE	0	UInt8
1-55	U/f Characteristic - U	ExpressionLimit	All set-ups		TRUE	-1	UInt16
1-56	U/f Characteristic - F	ExpressionLimit	All set-ups		TRUE	-1	UInt16
1-58	Flystart Test Pulses Current	30 %	All set-ups		FALSE	0	UInt16
1-59	Flystart Test Pulses Frequency	200 %	All set-ups		FALSE	0	UInt16
1-6* Load-Depend. Settg.							
1-60	Low Speed Load Compensation	100 %	All set-ups		TRUE	0	Int16
1-61	High Speed Load Compensation	100 %	All set-ups		TRUE	0	Int16
1-62	Slip Compensation	ExpressionLimit	All set-ups		TRUE	0	Int16
1-63	Slip Compensation Time Constant	ExpressionLimit	All set-ups		TRUE	-2	UInt16
1-64	Resonance Dampening	100 %	All set-ups		TRUE	0	UInt16

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
1-65	Resonance Dampening Time Constant	5 ms	All set-ups		TRUE	-3	Uint8
1-66	Min. Current at Low Speed	100 %	All set-ups	x	TRUE	0	Uint32
1-67	Load Type	[0] Passive load	All set-ups	x	TRUE	-	Uint8
1-68	Minimum Inertia	ExpressionLimit	All set-ups	x	FALSE	-4	Uint32
1-69	Maximum Inertia	ExpressionLimit	All set-ups	x	FALSE	-4	Uint32
1-7* Start Adjustments							
1-71	Start Delay	0.0 s	All set-ups		TRUE	-1	Uint8
1-72	Start Function	[2] Coast/delay time	All set-ups		TRUE	-	Uint8
1-73	Flying Start	null	All set-ups		FALSE	-	Uint8
1-74	Start Speed [RPM]	ExpressionLimit	All set-ups		TRUE	67	Uint16
1-75	Start Speed [Hz]	ExpressionLimit	All set-ups		TRUE	-1	Uint16
1-76	Start Current	0.00 A	All set-ups		TRUE	-2	Uint32
1-8* Stop Adjustments							
1-80	Function at Stop	[0] Coast	All set-ups		TRUE	-	Uint8
1-81	Min Speed for Function at Stop [RPM]	ExpressionLimit	All set-ups		TRUE	67	Uint16
1-82	Min Speed for Function at Stop [Hz]	ExpressionLimit	All set-ups		TRUE	-1	Uint16
1-83	Precise Stop Function	[0] Precise ramp stop	All set-ups		FALSE	-	Uint8
1-84	Precise Stop Counter Value	100000 N/A	All set-ups		TRUE	0	Uint32
1-85	Precise Stop Speed Compensation Delay	10 ms	All set-ups		TRUE	-3	Uint8
1-9* Motor Temperature							
1-90	Motor Thermal Protection	[0] No protection	All set-ups		TRUE	-	Uint8
1-91	Motor External Fan	[0] No	All set-ups		TRUE	-	Uint16
1-93	Thermistor Resource	[0] None	All set-ups		TRUE	-	Uint8
1-94	ATEX ETR cur.lim. speed reduction	0.0 %	2 set-ups	x	TRUE	-1	Uint16
1-95	KTY Sensor Type	[0] KTY Sensor 1	All set-ups	x	TRUE	-	Uint8
1-96	KTY Thermistor Resource	[0] None	All set-ups	x	TRUE	-	Uint8
1-97	KTY Threshold level	80 °C	1 set-up	x	TRUE	100	Int16
1-98	ATEX ETR interpol. points freq.	ExpressionLimit	1 set-up	x	TRUE	-1	Uint16
1-99	ATEX ETR interpol points current	ExpressionLimit	2 set-ups	x	TRUE	0	Uint16

4.1.5 2-** Brakes

4

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
2-0* DC Brake							
2-00	DC Hold Current	50 %	All set-ups		TRUE	0	Uint8
2-01	DC Brake Current	50 %	All set-ups		TRUE	0	Uint16
2-02	DC Braking Time	10.0 s	All set-ups		TRUE	-1	Uint16
2-03	DC Brake Cut-in Speed [RPM]	ExpressionLimit	All set-ups		TRUE	67	Uint16
2-04	DC Brake Cut-in Speed [Hz]	ExpressionLimit	All set-ups		TRUE	-1	Uint16
2-05	Maximum Reference	MaxReference (P303)	All set-ups		TRUE	-3	Int32
2-1* Brake Energy Funct.							
2-10	Brake Function	null	All set-ups		TRUE	-	Uint8
2-11	Brake Resistor (ohm)	ExpressionLimit	All set-ups		TRUE	0	Uint16
2-12	Brake Power Limit (kW)	ExpressionLimit	All set-ups		TRUE	0	Uint32
2-13	Brake Power Monitoring	[0] Off	All set-ups		TRUE	-	Uint8
2-15	Brake Check	[0] Off	All set-ups		TRUE	-	Uint8
2-16	AC brake Max. Current	100.0 %	All set-ups		TRUE	-1	Uint32
2-17	Over-voltage Control	[0] Disabled	All set-ups		TRUE	-	Uint8
2-18	Brake Check Condition	[0] At Power-up	All set-ups		TRUE	-	Uint8
2-19	Over-voltage Gain	100 %	All set-ups		TRUE	0	Uint16
2-2* Mechanical Brake							
2-20	Release Brake Current	ImaxVLT (P1637)	All set-ups		TRUE	-2	Uint32
2-21	Activate Brake Speed [RPM]	ExpressionLimit	All set-ups		TRUE	67	Uint16
2-22	Activate Brake Speed [Hz]	ExpressionLimit	All set-ups		TRUE	-1	Uint16
2-23	Activate Brake Delay	0.0 s	All set-ups		TRUE	-1	Uint8
2-24	Stop Delay	0.0 s	All set-ups		TRUE	-1	Uint8
2-25	Brake Release Time	0.20 s	All set-ups		TRUE	-2	Uint16
2-26	Torque Ref	0.00 %	All set-ups		TRUE	-2	Int16
2-27	Torque Ramp Time	0.2 s	All set-ups		TRUE	-1	Uint8
2-28	Gain Boost Factor	1.00 N/A	All set-ups		TRUE	-2	Uint16

4.1.6 3-** Reference / Ramps

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
3-0* Reference Limits							
3-00	Reference Range	null	All set-ups		TRUE	-	UInt8
3-01	Reference/Feedback Unit	null	All set-ups		TRUE	-	UInt8
3-02	Minimum Reference	ExpressionLimit	All set-ups		TRUE	-3	Int32
3-03	Maximum Reference	ExpressionLimit	All set-ups		TRUE	-3	Int32
3-04	Reference Function	[0] Sum	All set-ups		TRUE	-	UInt8
3-1* References							
3-10	Preset Reference	0.00 %	All set-ups		TRUE	-2	Int16
3-11	Jog Speed [Hz]	ExpressionLimit	All set-ups		TRUE	-1	UInt16
3-12	Catch up/slow-down Value	0.00 %	All set-ups		TRUE	-2	Int16
3-13	Reference Site	[0] Linked to Hand / Auto	All set-ups		TRUE	-	UInt8
3-14	Preset Relative Reference	0.00 %	All set-ups		TRUE	-2	Int32
3-15	Reference Resource 1	null	All set-ups		TRUE	-	UInt8
3-16	Reference Resource 2	null	All set-ups		TRUE	-	UInt8
3-17	Reference Resource 3	null	All set-ups		TRUE	-	UInt8
3-18	Relative Scaling Reference Resource	[0] No function	All set-ups		TRUE	-	UInt8
3-19	Jog Speed [RPM]	ExpressionLimit	All set-ups		TRUE	67	UInt16
3-4* Ramp 1							
3-40	Ramp 1 Type	[0] Linear	All set-ups		TRUE	-	UInt8
3-41	Ramp 1 Ramp-up Time	ExpressionLimit	All set-ups		TRUE	-2	UInt32
3-42	Ramp 1 Ramp-down Time	ExpressionLimit	All set-ups		TRUE	-2	UInt32
3-45	Ramp 1 S-ramp Ratio at Accel. Start	50 %	All set-ups		TRUE	0	UInt8
3-46	Ramp 1 S-ramp Ratio at Accel. End	50 %	All set-ups		TRUE	0	UInt8
3-47	Ramp 1 S-ramp Ratio at Decel. Start	50 %	All set-ups		TRUE	0	UInt8
3-48	Ramp 1 S-ramp Ratio at Decel. End	50 %	All set-ups		TRUE	0	UInt8
3-5* Ramp 2							
3-50	Ramp 2 Type	[0] Linear	All set-ups		TRUE	-	UInt8
3-51	Ramp 2 Ramp-up Time	ExpressionLimit	All set-ups		TRUE	-2	UInt32
3-52	Ramp 2 Ramp-down Time	ExpressionLimit	All set-ups		TRUE	-2	UInt32
3-55	Ramp 2 S-ramp Ratio at Accel. Start	50 %	All set-ups		TRUE	0	UInt8
3-56	Ramp 2 S-ramp Ratio at Accel. End	50 %	All set-ups		TRUE	0	UInt8
3-57	Ramp 2 S-ramp Ratio at Decel. Start	50 %	All set-ups		TRUE	0	UInt8
3-58	Ramp 2 S-ramp Ratio at Decel. End	50 %	All set-ups		TRUE	0	UInt8
3-6* Ramp 3							
3-60	Ramp 3 Type	[0] Linear	All set-ups		TRUE	-	UInt8
3-61	Ramp 3 Ramp-up Time	ExpressionLimit	All set-ups		TRUE	-2	UInt32
3-62	Ramp 3 Ramp-down Time	ExpressionLimit	All set-ups		TRUE	-2	UInt32
3-65	Ramp 3 S-ramp Ratio at Accel. Start	50 %	All set-ups		TRUE	0	UInt8
3-66	Ramp 3 S-ramp Ratio at Accel. End	50 %	All set-ups		TRUE	0	UInt8
3-67	Ramp 3 S-ramp Ratio at Decel. Start	50 %	All set-ups		TRUE	0	UInt8
3-68	Ramp 3 S-ramp Ratio at Decel. End	50 %	All set-ups		TRUE	0	UInt8
3-7* Ramp 4							
3-70	Ramp 4 Type	[0] Linear	All set-ups		TRUE	-	UInt8
3-71	Ramp 4 Ramp-up Time	ExpressionLimit	All set-ups		TRUE	-2	UInt32
3-72	Ramp 4 Ramp-down Time	ExpressionLimit	All set-ups		TRUE	-2	UInt32
3-75	Ramp 4 S-ramp Ratio at Accel. Start	50 %	All set-ups		TRUE	0	UInt8

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
3-76	Ramp 4 S-ramp Ratio at Accel. End	50 %	All set-ups		TRUE	0	Uint8
3-77	Ramp 4 S-ramp Ratio at Decel. Start	50 %	All set-ups		TRUE	0	Uint8
3-78	Ramp 4 S-ramp Ratio at Decel. End	50 %	All set-ups		TRUE	0	Uint8
3-8* Other Ramps							
3-80	Jog Ramp Time	ExpressionLimit	All set-ups		TRUE	-2	Uint32
3-81	Quick Stop Ramp Time	ExpressionLimit	2 set-ups		TRUE	-2	Uint32
3-82	Quick Stop Ramp Type	[0] Linear	All set-ups		TRUE	-	Uint8
3-83	Quick Stop S-ramp Ratio at Decel. Start	50 %	All set-ups		TRUE	0	Uint8
3-84	Quick Stop S-ramp Ratio at Decel. End	50 %	All set-ups		TRUE	0	Uint8
3-9* Digital Pot. meter							
3-90	Step Size	0.10 %	All set-ups		TRUE	-2	Uint16
3-91	Ramp Time	1.00 s	All set-ups		TRUE	-2	Uint32
3-92	Power Restore	[0] Off	All set-ups		TRUE	-	Uint8
3-93	Maximum Limit	100 %	All set-ups		TRUE	0	Int16
3-94	Minimum Limit	-100 %	All set-ups		TRUE	0	Int16
3-95	Ramp Delay	ExpressionLimit	All set-ups		TRUE	-3	TimD

4.1.7 4-** Limits / Warnings

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
4-1* Motor Limits							
4-10	Motor Speed Direction	null	All set-ups		FALSE	-	Uint8
4-11	Motor Speed Low Limit [RPM]	ExpressionLimit	All set-ups		TRUE	67	Uint16
4-12	Motor Speed Low Limit [Hz]	ExpressionLimit	All set-ups		TRUE	-1	Uint16
4-13	Motor Speed High Limit [RPM]	ExpressionLimit	All set-ups		TRUE	67	Uint16
4-14	Motor Speed High Limit [Hz]	ExpressionLimit	All set-ups		TRUE	-1	Uint16
4-16	Torque Limit Motor Mode	ExpressionLimit	All set-ups		TRUE	-1	Uint16
4-17	Torque Limit Generator Mode	100.0 %	All set-ups		TRUE	-1	Uint16
4-18	Current Limit	ExpressionLimit	All set-ups		TRUE	-1	Uint32
4-19	Max Output Frequency	132.0 Hz	All set-ups		FALSE	-1	Uint16
4-2* Limit Factors							
4-20	Torque Limit Factor Source	[0] No function	All set-ups		TRUE	-	Uint8
4-21	Speed Limit Factor Source	[0] No function	All set-ups		TRUE	-	Uint8
4-3* Motor Speed Mon.							
4-30	Motor Feedback Loss Function	[2] Trip	All set-ups		TRUE	-	Uint8
4-31	Motor Feedback Speed Error	300 RPM	All set-ups		TRUE	67	Uint16
4-32	Motor Feedback Loss Timeout	0.05 s	All set-ups		TRUE	-2	Uint16
4-34	Tracking Error Function	null	All set-ups		TRUE	-	Uint8
4-35	Tracking Error	10 RPM	All set-ups		TRUE	67	Uint16
4-36	Tracking Error Timeout	1.00 s	All set-ups		TRUE	-2	Uint16
4-37	Tracking Error Ramping	100 RPM	All set-ups		TRUE	67	Uint16
4-38	Tracking Error Ramping Timeout	1.00 s	All set-ups		TRUE	-2	Uint16
4-39	Tracking Error After Ramping Timeout	5.00 s	All set-ups		TRUE	-2	Uint16
4-5* Adj. Warnings							
4-50	Warning Current Low	0.00 A	All set-ups		TRUE	-2	Uint32
4-51	Warning Current High	I _{maxVLT} (P1637)	All set-ups		TRUE	-2	Uint32
4-52	Warning Speed Low	0 RPM	All set-ups		TRUE	67	Uint16
4-53	Warning Speed High	outputSpeedHighLimit (P413)	All set-ups		TRUE	67	Uint16
4-54	Warning Reference Low	-999999.999 N/A	All set-ups		TRUE	-3	Int32
4-55	Warning Reference High	999999.999 N/A	All set-ups		TRUE	-3	Int32
4-56	Warning Feedback Low	-999999.999 Reference-FeedbackUnit	All set-ups		TRUE	-3	Int32
4-57	Warning Feedback High	999999.999 Reference-FeedbackUnit	All set-ups		TRUE	-3	Int32
4-58	Missing Motor Phase Function	null	All set-ups		TRUE	-	Uint8
4-6* Speed Bypass							
4-60	Bypass Speed From [RPM]	ExpressionLimit	All set-ups		TRUE	67	Uint16
4-61	Bypass Speed From [Hz]	ExpressionLimit	All set-ups		TRUE	-1	Uint16
4-62	Bypass Speed to [RPM]	ExpressionLimit	All set-ups		TRUE	67	Uint16
4-63	Bypass Speed To [Hz]	ExpressionLimit	All set-ups		TRUE	-1	Uint16

4.1.8 5-** Digital In/Out

4

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
5-0* Digital I/O mode							
5-00	Digital I/O Mode	[0] PNP	All set-ups		FALSE	-	UInt8
5-01	Terminal 27 Mode	[0] Input	All set-ups		TRUE	-	UInt8
5-02	Terminal 29 Mode	[0] Input	All set-ups	x	TRUE	-	UInt8
5-1* Digital Inputs							
5-10	Terminal 18 Digital Input	null	All set-ups		TRUE	-	UInt8
5-11	Terminal 19 Digital Input	null	All set-ups		TRUE	-	UInt8
5-12	Terminal 27 Digital Input	null	All set-ups		TRUE	-	UInt8
5-13	Terminal 29 Digital Input	null	All set-ups	x	TRUE	-	UInt8
5-14	Terminal 32 Digital Input	null	All set-ups		TRUE	-	UInt8
5-15	Terminal 33 Digital Input	null	All set-ups		TRUE	-	UInt8
5-16	Terminal X30/2 Digital Input	null	All set-ups		TRUE	-	UInt8
5-17	Terminal X30/3 Digital Input	null	All set-ups		TRUE	-	UInt8
5-18	Terminal X30/4 Digital Input	null	All set-ups		TRUE	-	UInt8
5-19	Terminal 37 Safe Stop	null	1 set-up		TRUE	-	UInt8
5-20	Terminal X46/1 Digital Input	[0] No operation	All set-ups		TRUE	-	UInt8
5-21	Terminal X46/3 Digital Input	[0] No operation	All set-ups		TRUE	-	UInt8
5-22	Terminal X46/5 Digital Input	[0] No operation	All set-ups		TRUE	-	UInt8
5-23	Terminal X46/7 Digital Input	[0] No operation	All set-ups		TRUE	-	UInt8
5-24	Terminal X46/9 Digital Input	[0] No operation	All set-ups		TRUE	-	UInt8
5-25	Terminal X46/11 Digital Input	[0] No operation	All set-ups		TRUE	-	UInt8
5-26	Terminal X46/13 Digital Input	[0] No operation	All set-ups		TRUE	-	UInt8
5-3* Digital Outputs							
5-30	Terminal 27 Digital Output	null	All set-ups		TRUE	-	UInt8
5-31	Terminal 29 digital Output	null	All set-ups	x	TRUE	-	UInt8
5-32	Term X30/6 Digi Out (MCB 101)	null	All set-ups		TRUE	-	UInt8
5-33	Term X30/7 Digi Out (MCB 101)	null	All set-ups		TRUE	-	UInt8
5-4* Relays							
5-40	Function Relay	null	All set-ups		TRUE	-	UInt8
5-41	On Delay, Relay	0.01 s	All set-ups		TRUE	-2	UInt16
5-42	Off Delay, Relay	0.01 s	All set-ups		TRUE	-2	UInt16
5-5* Pulse Input							
5-50	Term. 29 Low Frequency	100 Hz	All set-ups	x	TRUE	0	UInt32
5-51	Term. 29 High Frequency	100 Hz	All set-ups	x	TRUE	0	UInt32
5-52	Term. 29 Low Ref./Feedb. Value	0.000 ReferenceFeed-backUnit	All set-ups	x	TRUE	-3	Int32
5-53	Term. 29 High Ref./Feedb. Value	ExpressionLimit	All set-ups	x	TRUE	-3	Int32
5-54	Pulse Filter Time Constant #29	100 ms	All set-ups	x	FALSE	-3	UInt16
5-55	Term. 33 Low Frequency	100 Hz	All set-ups		TRUE	0	UInt32
5-56	Term. 33 High Frequency	100 Hz	All set-ups		TRUE	0	UInt32
5-57	Term. 33 Low Ref./Feedb. Value	0.000 ReferenceFeed-backUnit	All set-ups		TRUE	-3	Int32
5-58	Term. 33 High Ref./Feedb. Value	ExpressionLimit	All set-ups		TRUE	-3	Int32
5-59	Pulse Filter Time Constant #33	100 ms	All set-ups		FALSE	-3	UInt16
5-6* Pulse Output							
5-60	Terminal 27 Pulse Output Variable	null	All set-ups		TRUE	-	UInt8

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
5-62	Pulse Output Max Freq #27	ExpressionLimit	All set-ups		TRUE	0	Uint32
5-63	Terminal 29 Pulse Output Variable	null	All set-ups	x	TRUE	-	Uint8
5-65	Pulse Output Max Freq #29	ExpressionLimit	All set-ups	x	TRUE	0	Uint32
5-66	Terminal X30/6 Pulse Output Variable	null	All set-ups		TRUE	-	Uint8
5-68	Pulse Output Max Freq #X30/6	ExpressionLimit	All set-ups		TRUE	0	Uint32
5-7* 24V Encoder Input							
5-70	Term 32/33 Pulses per Revolution	1024 N/A	All set-ups		FALSE	0	Uint16
5-71	Term 32/33 Encoder Direction	[0] Clockwise	All set-ups		FALSE	-	Uint8
5-8* I/O Options							
5-80	AHF Cap Reconnect Delay	25 s	2 set-ups	x	TRUE	0	Uint16
5-9* Bus Controlled							
5-90	Digital & Relay Bus Control	0 N/A	All set-ups		TRUE	0	Uint32
5-93	Pulse Out #27 Bus Control	0.00 %	All set-ups		TRUE	-2	N2
5-94	Pulse Out #27 Timeout Preset	0.00 %	1 set-up		TRUE	-2	Uint16
5-95	Pulse Out #29 Bus Control	0.00 %	All set-ups	x	TRUE	-2	N2
5-96	Pulse Out #29 Timeout Preset	0.00 %	1 set-up	x	TRUE	-2	Uint16
5-97	Pulse Out #X30/6 Bus Control	0.00 %	All set-ups		TRUE	-2	N2
5-98	Pulse Out #X30/6 Timeout Preset	0.00 %	1 set-up		TRUE	-2	Uint16

4.1.9 6-** Analog In/Out

4

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
6-0* Analog I/O Mode							
6-00	Live Zero Timeout Time	10 s	All set-ups		TRUE	0	Uint8
6-01	Live Zero Timeout Function	[0] Off	All set-ups		TRUE	-	Uint8
6-1* Analog Input 1							
6-10	Terminal 53 Low Voltage	0.07 V	All set-ups		TRUE	-2	Int16
6-11	Terminal 53 High Voltage	10.00 V	All set-ups		TRUE	-2	Int16
6-12	Terminal 53 Low Current	0.14 mA	All set-ups		TRUE	-5	Int16
6-13	Terminal 53 High Current	20.00 mA	All set-ups		TRUE	-5	Int16
6-14	Terminal 53 Low Ref./Feedb. Value	0 ReferenceFeedbackUnit	All set-ups		TRUE	-3	Int32
6-15	Terminal 53 High Ref./Feedb. Value	ExpressionLimit	All set-ups		TRUE	-3	Int32
6-16	Terminal 53 Filter Time Constant	0.001 s	All set-ups		TRUE	-3	Uint16
6-2* Analog Input 2							
6-20	Terminal 54 Low Voltage	0.07 V	All set-ups		TRUE	-2	Int16
6-21	Terminal 54 High Voltage	10.00 V	All set-ups		TRUE	-2	Int16
6-22	Terminal 54 Low Current	0.14 mA	All set-ups		TRUE	-5	Int16
6-23	Terminal 54 High Current	20.00 mA	All set-ups		TRUE	-5	Int16
6-24	Terminal 54 Low Ref./Feedb. Value	0 ReferenceFeedbackUnit	All set-ups		TRUE	-3	Int32
6-25	Terminal 54 High Ref./Feedb. Value	ExpressionLimit	All set-ups		TRUE	-3	Int32
6-26	Terminal 54 Filter Time Constant	0.001 s	All set-ups		TRUE	-3	Uint16
6-3* Analog Input 53							
6-30	Terminal X30/11 Low Voltage	0.07 V	All set-ups		TRUE	-2	Int16
6-31	Terminal X30/11 High Voltage	10.00 V	All set-ups		TRUE	-2	Int16
6-34	Term. X30/11 Low Ref./Feedb. Value	0 ReferenceFeedbackUnit	All set-ups		TRUE	-3	Int32
6-35	Term. X30/11 High Ref./Feedb. Value	ExpressionLimit	All set-ups		TRUE	-3	Int32
6-36	Term. X30/11 Filter Time Constant	0.001 s	All set-ups		TRUE	-3	Uint16
6-4* Analog Input 4							
6-40	Terminal X30/12 Low Voltage	0.07 V	All set-ups		TRUE	-2	Int16
6-41	Terminal X30/12 High Voltage	10.00 V	All set-ups		TRUE	-2	Int16
6-44	Term. X30/12 Low Ref./Feedb. Value	0 ReferenceFeedbackUnit	All set-ups		TRUE	-3	Int32
6-45	Term. X30/12 High Ref./Feedb. Value	ExpressionLimit	All set-ups		TRUE	-3	Int32
6-46	Term. X30/12 Filter Time Constant	0.001 s	All set-ups		TRUE	-3	Uint16
6-5* Analog Output 1							
6-50	Terminal 42 Output	null	All set-ups		TRUE	-	Uint8
6-51	Terminal 42 Output Min Scale	0.00 %	All set-ups		TRUE	-2	Int16
6-52	Terminal 42 Output Max Scale	100.00 %	All set-ups		TRUE	-2	Int16
6-53	Terminal 42 Output Bus Control	0.00 %	All set-ups		TRUE	-2	N2
6-54	Terminal 42 Output Timeout Preset	0.00 %	1 set-up		TRUE	-2	Uint16
6-55	Terminal 42 Output Filter	[0] Off	1 set-up		TRUE	-	Uint8
6-6* Analog Output 2							
6-60	Terminal X30/8 Output	null	All set-ups		TRUE	-	Uint8
6-61	Terminal X30/8 Min. Scale	0.00 %	All set-ups		TRUE	-2	Int16
6-62	Terminal X30/8 Max. Scale	100.00 %	All set-ups		TRUE	-2	Int16
6-63	Terminal X30/8 Bus Control	0.00 %	All set-ups		TRUE	-2	N2
6-64	Terminal X30/8 Output Timeout Preset	0.00 %	1 set-up		TRUE	-2	Uint16
6-7* Analog Output 3							
6-70	Terminal X45/1 Output	null	All set-ups		TRUE	-	Uint8

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
6-71	Terminal X45/1 Min. Scale	0.00 %	All set-ups		TRUE	-2	Int16
6-72	Terminal X45/1 Max. Scale	100.00 %	All set-ups		TRUE	-2	Int16
6-73	Terminal X45/1 Bus Control	0.00 %	All set-ups		TRUE	-2	N2
6-74	Terminal X45/1 Output Timeout Preset	0.00 %	1 set-up		TRUE	-2	Uint16
6-8* Analog Output 4							
6-80	Terminal X45/3 Output	null	All set-ups		TRUE	-	Uint8
6-81	Terminal X45/3 Min. Scale	0.00 %	All set-ups		TRUE	-2	Int16
6-82	Terminal X45/3 Max. Scale	100.00 %	All set-ups		TRUE	-2	Int16
6-83	Terminal X45/3 Bus Control	0.00 %	All set-ups		TRUE	-2	N2
6-84	Terminal X45/3 Output Timeout Preset	0.00 %	1 set-up		TRUE	-2	Uint16

4.1.10 7-** Controllers

4

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
7-0* Speed PID Ctrl.							
7-00	Speed PID Feedback Source	null	All set-ups		FALSE	-	Uint8
7-02	Speed PID Proportional Gain	ExpressionLimit	All set-ups		TRUE	-3	Uint16
7-03	Speed PID Integral Time	ExpressionLimit	All set-ups		TRUE	-4	Uint32
7-04	Speed PID Differentiation Time	ExpressionLimit	All set-ups		TRUE	-4	Uint16
7-05	Speed PID Diff. Gain Limit	5.0 N/A	All set-ups		TRUE	-1	Uint16
7-06	Speed PID Lowpass Filter Time	ExpressionLimit	All set-ups		TRUE	-4	Uint16
7-07	Speed PID Feedback Gear Ratio	1.0000 N/A	All set-ups		FALSE	-4	Uint32
7-08	Speed PID Feed Forward Factor	0 %	All set-ups		FALSE	0	Uint16
7-09	Speed PID Error Correction w/ Ramp	300 RPM	All set-ups		TRUE	67	Uint32
7-1* Torque PI Ctrl.							
7-12	Torque PI Proportional Gain	100 %	All set-ups		TRUE	0	Uint16
7-13	Torque PI Integration Time	0.020 s	All set-ups		TRUE	-3	Uint16
7-2* Process Ctrl. Feedb							
7-20	Process CL Feedback 1 Resource	[0] No function	All set-ups		TRUE	-	Uint8
7-22	Process CL Feedback 2 Resource	[0] No function	All set-ups		TRUE	-	Uint8
7-3* Process PID Ctrl.							
7-30	Process PID Normal/Inverse Control	[0] Normal	All set-ups		TRUE	-	Uint8
7-31	Process PID Anti Windup	[1] On	All set-ups		TRUE	-	Uint8
7-32	Process PID Controller Start Value	0 RPM	All set-ups		TRUE	67	Uint16
7-33	Process PID Proportional Gain	0.01 N/A	All set-ups		TRUE	-2	Uint16
7-34	Process PID Integral Time	10000.00 s	All set-ups		TRUE	-2	Uint32
7-35	Process PID Differentiation Time	0.00 s	All set-ups		TRUE	-2	Uint16
7-36	Process PID Differentiation Gain Limit	5.0 N/A	All set-ups		TRUE	-1	Uint16
7-38	Process PID Feed Forward Factor	0 %	All set-ups		TRUE	0	Uint16
7-39	On Reference Bandwidth	5 %	All set-ups		TRUE	0	Uint8
7-4* Adv. Process PID I							
7-40	Process PID I-part Reset	[0] No	All set-ups		TRUE	-	Uint8
7-41	Process PID Output Neg. Clamp	-100 %	All set-ups		TRUE	0	Int16
7-42	Process PID Output Pos. Clamp	100 %	All set-ups		TRUE	0	Int16
7-43	Process PID Gain Scale at Min. Ref.	100 %	All set-ups		TRUE	0	Int16
7-44	Process PID Gain Scale at Max. Ref.	100 %	All set-ups		TRUE	0	Int16
7-45	Process PID Feed Fwd Resource	[0] No function	All set-ups		TRUE	-	Uint8
7-46	Process PID Feed Fwd Normal/ Inv. Ctrl.	[0] Normal	All set-ups		TRUE	-	Uint8
7-48	PCD Feed Forward	0 N/A	All set-ups	x	TRUE	0	Uint16
7-49	Process PID Output Normal/ Inv. Ctrl.	[0] Normal	All set-ups		TRUE	-	Uint8
7-5* Adv. Process PID II							
7-50	Process PID Extended PID	[1] Enabled	All set-ups		TRUE	-	Uint8
7-51	Process PID Feed Fwd Gain	1.00 N/A	All set-ups		TRUE	-2	Uint16
7-52	Process PID Feed Fwd Ramp-up	0.01 s	All set-ups		TRUE	-2	Uint32
7-53	Process PID Feed Fwd Ramp-down	0.01 s	All set-ups		TRUE	-2	Uint32
7-56	Process PID Ref. Filter Time	0.001 s	All set-ups		TRUE	-3	Uint16
7-57	Process PID Fb. Filter Time	0.001 s	All set-ups		TRUE	-3	Uint16

4.1.11 8-** Comm. and Options

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
8-0* General Settings							
8-01	Control Site	[0] Digital and ctrl. word	All set-ups		TRUE	-	Uint8
8-02	Control Word Source	null	All set-ups		TRUE	-	Uint8
8-03	Control Word Timeout Time	1.0 s	1 set-up		TRUE	-1	Uint32
8-04	Control Word Timeout Function	null	1 set-up		TRUE	-	Uint8
8-05	End-of-Timeout Function	[1] Resume set-up	1 set-up		TRUE	-	Uint8
8-06	Reset Control Word Timeout	[0] Do not reset	All set-ups		TRUE	-	Uint8
8-07	Diagnosis Trigger	[0] Disable	2 set-ups		TRUE	-	Uint8
8-08	Readout Filtering	null	All set-ups		TRUE	-	Uint8
8-1* Ctrl. Word Settings							
8-10	Control Word Profile	[0] FC profile	All set-ups		TRUE	-	Uint8
8-13	Configurable Status Word STW	null	All set-ups		TRUE	-	Uint8
8-14	Configurable Control Word CTW	[1] Profile default	All set-ups		TRUE	-	Uint8
8-3* FC Port Settings							
8-30	Protocol	[0] FC	1 set-up		TRUE	-	Uint8
8-31	Address	1 N/A	1 set-up		TRUE	0	Uint8
8-32	FC Port Baud Rate	null	1 set-up		TRUE	-	Uint8
8-33	Parity / Stop Bits	[0] Ev. Par. 1 Stop Bit	1 set-up		TRUE	-	Uint8
8-34	Estimated cycle time	0 ms	2 set-ups		TRUE	-3	Uint32
8-35	Minimum Response Delay	10 ms	All set-ups		TRUE	-3	Uint16
8-36	Max Response Delay	ExpressionLimit	1 set-up		TRUE	-3	Uint16
8-37	Max Inter-Char Delay	ExpressionLimit	1 set-up		TRUE	-5	Uint16
8-4* FC MC protocol set							
8-40	Telegram selection	[1] Standard telegram 1	2 set-ups		TRUE	-	Uint8
8-41	Parameters for signals	0	All set-ups		FALSE	-	Uint16
8-42	PCD write configuration	ExpressionLimit	All set-ups		TRUE	0	Uint16
8-43	PCD read configuration	ExpressionLimit	All set-ups		TRUE	0	Uint16
8-5* Digital/Bus							
8-50	Coasting Select	[3] Logic OR	All set-ups		TRUE	-	Uint8
8-51	Quick Stop Select	[3] Logic OR	All set-ups		TRUE	-	Uint8
8-52	DC Brake Select	[3] Logic OR	All set-ups		TRUE	-	Uint8
8-53	Start Select	[3] Logic OR	All set-ups		TRUE	-	Uint8
8-54	Reverse Select	[3] Logic OR	All set-ups		TRUE	-	Uint8
8-55	Set-up Select	[3] Logic OR	All set-ups		TRUE	-	Uint8
8-56	Preset Reference Select	[3] Logic OR	All set-ups		TRUE	-	Uint8
8-57	Profdrive OFF2 Select	[3] Logic OR	All set-ups		TRUE	-	Uint8
8-58	Profdrive OFF3 Select	[3] Logic OR	All set-ups		TRUE	-	Uint8
8-8* AFD Port Diagnostics							
8-80	Bus Message Count	0 N/A	All set-ups		TRUE	0	Uint32
8-81	Bus Error Count	0 N/A	All set-ups		TRUE	0	Uint32
8-82	Slave Messages Rcvd	0 N/A	All set-ups		TRUE	0	Uint32
8-83	Slave Error Count	0 N/A	All set-ups		TRUE	0	Uint32
8-9* Bus Jog							
8-90	Bus Jog 1 Speed	100 RPM	All set-ups		TRUE	67	Uint16
8-91	Bus Jog 2 Speed	ExpressionLimit	All set-ups		TRUE	67	Uint16

4.1.12 9-** Profibus

4

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
9-00	Setpoint	0 N/A	All set-ups		TRUE	0	Uint16
9-07	Actual Value	0 N/A	All set-ups		FALSE	0	Uint16
9-15	PCD Write Configuration	ExpressionLimit	1 set-up		TRUE	-	Uint16
9-16	PCD Read Configuration	ExpressionLimit	2 set-ups		TRUE	-	Uint16
9-18	Node Address	126 N/A	1 set-up		TRUE	0	Uint8
9-22	Telegram Selection	[100] None	1 set-up		TRUE	-	Uint8
9-23	Parameters for Signals	0	All set-ups		TRUE	-	Uint16
9-27	Parameter Edit	[1] Enabled	2 set-ups		FALSE	-	Uint16
9-28	Process Control	[1] Enable cyclic master	2 set-ups		FALSE	-	Uint8
9-44	Fault Message Counter	0 N/A	All set-ups		TRUE	0	Uint16
9-45	Fault Code	0 N/A	All set-ups		TRUE	0	Uint16
9-47	Fault Number	0 N/A	All set-ups		TRUE	0	Uint16
9-52	Fault Situation Counter	0 N/A	All set-ups		TRUE	0	Uint16
9-53	Profibus Warning Word	0 N/A	All set-ups		TRUE	0	V2
9-63	Actual Baud Rate	[255] No baud rate found	All set-ups		TRUE	-	Uint8
9-64	Device Identification	0 N/A	All set-ups		TRUE	0	Uint16
9-65	Profile Number	0 N/A	All set-ups		TRUE	0	OctStr[2]
9-67	Control Word 1	0 N/A	All set-ups		TRUE	0	V2
9-68	Status Word 1	0 N/A	All set-ups		TRUE	0	V2
9-71	Profibus Save Data Values	[0] Off	All set-ups		TRUE	-	Uint8
9-72	ProfibusDriveReset	[0] No action	1 set-up		FALSE	-	Uint8
9-75	DO Identification	0 N/A	All set-ups		TRUE	0	Uint16
9-80	Defined Parameters (1)	0 N/A	All set-ups		FALSE	0	Uint16
9-81	Defined Parameters (2)	0 N/A	All set-ups		FALSE	0	Uint16
9-82	Defined Parameters (3)	0 N/A	All set-ups		FALSE	0	Uint16
9-83	Defined Parameters (4)	0 N/A	All set-ups		FALSE	0	Uint16
9-84	Defined Parameters (5)	0 N/A	All set-ups		FALSE	0	Uint16
9-90	Changed Parameters (1)	0 N/A	All set-ups		FALSE	0	Uint16
9-91	Changed Parameters (2)	0 N/A	All set-ups		FALSE	0	Uint16
9-92	Changed Parameters (3)	0 N/A	All set-ups		FALSE	0	Uint16
9-93	Changed Parameters (4)	0 N/A	All set-ups		FALSE	0	Uint16
9-94	Changed parameters (5)	0 N/A	All set-ups		FALSE	0	Uint16
9-99	Profibus Revision Counter	0 N/A	All set-ups		TRUE	0	Uint16

4.1.13 10-** CAN Ser. Com. Bus

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
10-0* Common Settings							
10-00	CAN Protocol	null	2 set-ups		FALSE	-	Uint8
10-01	Baud Rate Select	null	2 set-ups		TRUE	-	Uint8
10-02	MAC ID	ExpressionLimit	2 set-ups		TRUE	0	Uint8
10-05	Readout Transmit Error Counter	0 N/A	All set-ups		TRUE	0	Uint8
10-06	Readout Receive Error Counter	0 N/A	All set-ups		TRUE	0	Uint8
10-07	Readout Bus Off Counter	0 N/A	All set-ups		TRUE	0	Uint8
10-1* DeviceNet							
10-10	Process Data Type Selection	null	All set-ups		TRUE	-	Uint8
10-11	Process Data Config Write	ExpressionLimit	All set-ups		TRUE	-	Uint16
10-12	Process Data Config Read	ExpressionLimit	All set-ups		TRUE	-	Uint16
10-13	Warning Parameter	0 N/A	All set-ups		TRUE	0	Uint16
10-14	Net Reference	[0] Off	2 set-ups		TRUE	-	Uint8
10-15	Net Control	[0] Off	2 set-ups		TRUE	-	Uint8
10-2* COS Filters							
10-20	COS Filter 1	0 N/A	All set-ups		FALSE	0	Uint16
10-21	COS Filter 2	0 N/A	All set-ups		FALSE	0	Uint16
10-22	COS Filter 3	0 N/A	All set-ups		FALSE	0	Uint16
10-23	COS Filter 4	0 N/A	All set-ups		FALSE	0	Uint16
10-3* Parameter Access							
10-30	Array Index	0 N/A	2 set-ups		TRUE	0	Uint8
10-31	Store Data Values	[0] Off	All set-ups		TRUE	-	Uint8
10-32	Devicenet Revision	ExpressionLimit	All set-ups		TRUE	0	Uint16
10-33	Store Always	[0] Off	1 set-up		TRUE	-	Uint8
10-34	DeviceNet Product Code	ExpressionLimit	1 set-up		TRUE	0	Uint16
10-39	Devicenet F Parameters	0 N/A	All set-ups		TRUE	0	Uint32
10-5* CANopen							
10-50	Process Data Config Write.	ExpressionLimit	2 set-ups		TRUE	-	Uint16
10-51	Process Data Config Read.	ExpressionLimit	2 set-ups		TRUE	-	Uint16

4.1.14 12-** Ethernet

4

Par. No.	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
12-0* IP Settings							
12-00	IP Address Assignment	null	2 set-ups		TRUE	-	UInt8
12-01	IP Address	0 N/A	1 set-up		TRUE	0	OctStr[4]
12-02	Subnet Mask	0 N/A	1 set-up		TRUE	0	OctStr[4]
12-03	Default Gateway	0 N/A	1 set-up		TRUE	0	OctStr[4]
12-04	DHCP Server	0 N/A	2 set-ups		TRUE	0	OctStr[4]
12-05	Lease Expires	ExpressionLimit	All set-ups		TRUE	0	TimD
12-06	Name Servers	0 N/A	1 set-up		TRUE	0	OctStr[4]
12-07	Domain Name	0 N/A	1 set-up		TRUE	0	VisStr[48]
12-08	Host Name	0 N/A	1 set-up		TRUE	0	VisStr[48]
12-09	Physical Address	0 N/A	1 set-up		TRUE	0	VisStr[17]
12-1* Eth link par							
12-10	Link Status	[0] No Link	All set-ups		TRUE	-	UInt8
12-11	Link Duration	ExpressionLimit	All set-ups		TRUE	0	TimD
12-12	Auto Negotiation	[1] On	2 set-ups		TRUE	-	UInt8
12-13	Link Speed	[0] None	2 set-ups		TRUE	-	UInt8
12-14	Link Duplex	[1] Full Duplex	2 set-ups		TRUE	-	UInt8
12-2* Process Data							
12-20	Control Instance	ExpressionLimit	1 set-up		TRUE	0	UInt8
12-21	Process Data Config Write	ExpressionLimit	All set-ups		TRUE	-	UInt16
12-22	Process Data Config Read	ExpressionLimit	All set-ups		TRUE	-	UInt16
12-23	Process Data Config Write Size	16 N/A	All set-ups		TRUE	0	UInt32
12-24	Process Data Config Read Size	16 N/A	All set-ups		TRUE	0	UInt32
12-27	Master Address	0 N/A	2 set-ups		FALSE	0	OctStr[4]
12-28	Store Data Values	[0] Off	All set-ups		TRUE	-	UInt8
12-29	Store Always	[0] Off	1 set-up		TRUE	-	UInt8
12-3* EtherNet/IP							
12-30	Warning Parameter	0 N/A	All set-ups		TRUE	0	UInt16
12-31	Net Reference	[0] Off	2 set-ups		TRUE	-	UInt8
12-32	Net Control	[0] Off	2 set-ups		TRUE	-	UInt8
12-33	CIP Revision	ExpressionLimit	All set-ups		TRUE	0	UInt16
12-34	CIP Product Code	ExpressionLimit	1 set-up		TRUE	0	UInt16
12-35	EDS Parameter	0 N/A	All set-ups		TRUE	0	UInt32
12-37	COS Inhibit Timer	0 N/A	All set-ups		TRUE	0	UInt16
12-38	COS Filter	0 N/A	All set-ups		TRUE	0	UInt16
12-4* Modbus TCP							
12-40	Status Parameter	0 N/A	All set-ups		TRUE	0	UInt16
12-41	Slave Message Count	0 N/A	All set-ups		TRUE	0	UInt32
12-42	Slave Exception Message Count	0 N/A	All set-ups		TRUE	0	UInt32
12-5* EtherCAT							
12-50	Configured Station Alias	0 N/A	1 set-up		FALSE	0	UInt16
12-51	Configured Station Address	0 N/A	All set-ups		TRUE	0	UInt16
12-59	EtherCAT Status	0 N/A	All set-ups		TRUE	0	UInt32
12-8* Oth. Eth. services							
12-80	FTP Server	[0] Disabled	2 set-ups		TRUE	-	UInt8

Par. No.	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
12-81	HTTP Server	[0] Disabled	2 set-ups		TRUE	-	Uint8
12-82	SMTP Service	[0] Disabled	2 set-ups		TRUE	-	Uint8
12-89	Transparent Socket Channel Port	ExpressionLimit	2 set-ups		TRUE	0	Uint16
12-9* Adv. Eth. services							
12-90	Cable Diagnostic	[0] Disabled	2 set-ups		TRUE	-	Uint8
12-91	MDI-X	[1] Enabled	2 set-ups		TRUE	-	Uint8
12-92	IGMP Snooping	[1] Enabled	2 set-ups		TRUE	-	Uint8
12-93	Cable Error Length	0 N/A	1 set-up		TRUE	0	Uint16
12-94	Broadcast Storm Protection	-1 %	2 set-ups		TRUE	0	Int8
12-95	Broadcast Storm Filter	[0] Broadcast only	2 set-ups		TRUE	-	Uint8
12-96	Port Config	null	2 set-ups		TRUE	-	Uint8
12-98	Interface Counters	4000 N/A	All set-ups		TRUE	0	Uint32
12-99	Media Counters	0 N/A	All set-ups		TRUE	0	Uint32

4.1.15 13-** Smart Logic

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
13-0* SLC Settings							
13-00	SL Controller Mode	null	2 set-ups		TRUE	-	UInt8
13-01	Start Event	null	2 set-ups		TRUE	-	UInt8
13-02	Stop Event	null	2 set-ups		TRUE	-	UInt8
13-03	Reset SLC	[0] Do not reset SLC	All set-ups		TRUE	-	UInt8
13-1* Comparators							
13-10	Comparator Operand	null	2 set-ups		TRUE	-	UInt8
13-11	Comparator Operator	null	2 set-ups		TRUE	-	UInt8
13-12	Comparator Value	ExpressionLimit	2 set-ups		TRUE	-3	Int32
13-1* RS Flip Flops							
13-15	RS-FF Operand S	null	2 set-ups		TRUE	-	UInt8
13-16	RS-FF Operand R	null	2 set-ups		TRUE	-	UInt8
13-2* Timers							
13-20	SL Controller Timer	ExpressionLimit	1 set-up		TRUE	-3	TimD
13-4* Logic Rules							
13-40	Logic Rule Boolean 1	null	2 set-ups		TRUE	-	UInt8
13-41	Logic Rule Operator 1	null	2 set-ups		TRUE	-	UInt8
13-42	Logic Rule Boolean 2	null	2 set-ups		TRUE	-	UInt8
13-43	Logic Rule Operator 2	null	2 set-ups		TRUE	-	UInt8
13-44	Logic Rule Boolean 3	null	2 set-ups		TRUE	-	UInt8
13-5* States							
13-51	SL Controller Event	null	2 set-ups		TRUE	-	UInt8
13-52	SL Controller Action	null	2 set-ups		TRUE	-	UInt8

4.1.16 14-** Special Functions

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
14-0* Inverter Switching							
14-00	Switching Pattern	null	All set-ups		TRUE	-	UInt8
14-01	Switching Frequency	null	All set-ups		TRUE	-	UInt8
14-03	Overmodulation	[1] On	All set-ups		FALSE	-	UInt8
14-04	PWM Random	[0] Off	All set-ups		TRUE	-	UInt8
14-06	Dead Time Compensation	[1] On	All set-ups		TRUE	-	UInt8
14-1* Mains On/Off							
14-10	Line Failure	[0] No function	All set-ups		FALSE	-	UInt8
14-11	Line Voltage at Line Fault	ExpressionLimit	All set-ups		TRUE	0	UInt16
14-12	Function at Mains Imbalance	[0] Trip	All set-ups		TRUE	-	UInt8
14-13	Line Failure Step Factor	1.0 N/A	All set-ups		TRUE	-1	UInt8
14-14	Kin. Backup Time Out	60 s	All set-ups		TRUE	0	UInt8
14-15	Kin. Backup Trip Recovery Level	ExpressionLimit	All set-ups		TRUE	-3	UInt32
14-2* Trip Reset							
14-20	Reset Mode	[0] Manual reset	All set-ups		TRUE	-	UInt8
14-21	Automatic Restart Time	ExpressionLimit	All set-ups		TRUE	0	UInt16
14-22	Operation Mode	[0] Normal operation	All set-ups		TRUE	-	UInt8
14-23	Typecode Setting	null	2 set-ups		FALSE	-	UInt8
14-24	Trip Delay at Current Limit	60 s	All set-ups		TRUE	0	UInt8
14-25	Trip Delay at Torque Limit	60 s	All set-ups		TRUE	0	UInt8
14-26	Trip Delay at Inverter Fault	ExpressionLimit	All set-ups		TRUE	0	UInt8
14-28	Production Settings	[0] No action	All set-ups		TRUE	-	UInt8
14-29	Service Code	0 N/A	All set-ups		TRUE	0	Int32
14-3* Current Limit Ctrl.							
14-30	Current Lim Ctrl, Proportional Gain	100 %	All set-ups		FALSE	0	UInt16
14-31	Current Lim Ctrl, Integration Time	0.020 s	All set-ups		FALSE	-3	UInt16
14-32	Current Lim Ctrl, Filter Time	1.0 ms	All set-ups		TRUE	-4	UInt16
14-35	Stall Protection	[1] Enabled	All set-ups		FALSE	-	UInt8
14-4* Energy Optimizing							
14-40	VT Level	66 %	All set-ups		FALSE	0	UInt8
14-41	AEO Minimum Magnetization	ExpressionLimit	All set-ups		TRUE	0	UInt8
14-42	Minimum AEO Frequency	10 Hz	All set-ups		TRUE	0	UInt8
14-43	Motor Cos-Phi	ExpressionLimit	All set-ups		TRUE	-2	UInt16
14-5* Environment							
14-50	RFI 1	[1] On	1 set-up	x	FALSE	-	UInt8
14-51	DC Link Compensation	[1] On	1 set-up		TRUE	-	UInt8
14-52	Fan Control	[0] Auto	All set-ups		TRUE	-	UInt8
14-53	Fan Monitor	[1] Warning	All set-ups		TRUE	-	UInt8
14-55	Output Filter	[0] No Filter	All set-ups		FALSE	-	UInt8
14-56	Capacitance Output Filter	ExpressionLimit	All set-ups		FALSE	-7	UInt16
14-57	Inductance Output Filter	ExpressionLimit	All set-ups		FALSE	-6	UInt16
14-59	Actual Number of Inverter Units	ExpressionLimit	1 set-up	x	FALSE	0	UInt8
14-7* Compatibility							
14-72	VLT Alarm Word	0 N/A	All set-ups		FALSE	0	UInt32
14-73	VLT Warning Word	0 N/A	All set-ups		FALSE	0	UInt32
14-74	VLT Ext. Status Word	0 N/A	All set-ups		FALSE	0	UInt32

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
14-8* Options							
14-80	Option Supplied by External 24 V DC	[1] Yes	2 set-ups		FALSE	-	Uint8
14-89	Option Detection	[0] Protect Option Config.	1 set-up		TRUE	-	Uint8
14-9* Fault Settings							
14-90	Fault Level	null	1 set-up		TRUE	-	Uint8

4.1.17 15-** Drive Information

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
15-0* Operating Data							
15-00	Operating Hours	0 h	All set-ups		FALSE	74	Uint32
15-01	Running Hours	0 h	All set-ups		FALSE	74	Uint32
15-02	kWh Counter	0 kWh	All set-ups		FALSE	75	Uint32
15-03	Power-ups	0 N/A	All set-ups		FALSE	0	Uint32
15-04	Over Temps	0 N/A	All set-ups		FALSE	0	Uint16
15-05	Over Volts	0 N/A	All set-ups		FALSE	0	Uint16
15-06	Reset kWh Counter	[0] Do not reset	All set-ups		TRUE	-	Uint8
15-07	Reset Running Hours Counter	[0] Do not reset	All set-ups		TRUE	-	Uint8
15-1* Data Log Settings							
15-10	Logging Source	0	2 set-ups		TRUE	-	Uint16
15-11	Logging Interval	ExpressionLimit	2 set-ups		TRUE	-3	TimD
15-12	Trigger Event	[0] FALSE	1 set-up		TRUE	-	Uint8
15-13	Logging Mode	[0] Log always	2 set-ups		TRUE	-	Uint8
15-14	Samples Before Trigger	50 N/A	2 set-ups		TRUE	0	Uint8
15-2* Historic Log							
15-20	Historic Log: Event	0 N/A	All set-ups		FALSE	0	Uint8
15-21	Historic Log: Value	0 N/A	All set-ups		FALSE	0	Uint32
15-22	Historic Log: Time	0 ms	All set-ups		FALSE	-3	Uint32
15-3* Fault Log							
15-30	Fault Log: Error Code	0 N/A	All set-ups		FALSE	0	Uint8
15-31	Fault Log: Value	0 N/A	All set-ups		FALSE	0	Int16
15-32	Fault Log: Time	0 s	All set-ups		FALSE	0	Uint32
15-4* Drive Identification							
15-40	FC Type	0 N/A	All set-ups		FALSE	0	VisStr[6]
15-41	Power Section	0 N/A	All set-ups		FALSE	0	VisStr[20]
15-42	Voltage	0 N/A	All set-ups		FALSE	0	VisStr[20]
15-43	Software Version	0 N/A	All set-ups		FALSE	0	VisStr[5]
15-44	Ordered Typecode String	0 N/A	All set-ups		FALSE	0	VisStr[40]
15-45	Actual Typecode String	0 N/A	All set-ups		FALSE	0	VisStr[40]
15-46	Adj Freq Dr Ordering No.	0 N/A	All set-ups		FALSE	0	VisStr[8]
15-47	Power Card Ordering No.	0 N/A	All set-ups		FALSE	0	VisStr[8]
15-48	LCP ID Num.	0 N/A	All set-ups		FALSE	0	VisStr[20]
15-49	SW ID Control Card	0 N/A	All set-ups		FALSE	0	VisStr[20]
15-50	SW ID Power Card	0 N/A	All set-ups		FALSE	0	VisStr[20]
15-51	Adj Freq Dr Serial No.	0 N/A	All set-ups		FALSE	0	VisStr[10]
15-53	Power Card Serial Number	0 N/A	All set-ups		FALSE	0	VisStr[19]
15-58	Smart Setup Filename	ExpressionLimit	1 set-up		FALSE	0	VisStr[16]
15-59	CSIV Filename	ExpressionLimit	1 set-up		FALSE	0	VisStr[16]
15-6* Option Ident							
15-60	Option Mounted	0 N/A	All set-ups		FALSE	0	VisStr[30]
15-61	Option SW Version	0 N/A	All set-ups		FALSE	0	VisStr[20]
15-62	Option Ordering No	0 N/A	All set-ups		FALSE	0	VisStr[8]
15-63	Option Serial No	0 N/A	All set-ups		FALSE	0	VisStr[18]
15-70	Option in Slot A	0 N/A	All set-ups		FALSE	0	VisStr[30]
15-71	Slot A Option SW Version	0 N/A	All set-ups		FALSE	0	VisStr[20]

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
15-72	Option in Slot B	0 N/A	All set-ups		FALSE	0	VisStr[30]
15-73	Slot B Option SW Version	0 N/A	All set-ups		FALSE	0	VisStr[20]
15-74	Option in Slot C0	0 N/A	All set-ups		FALSE	0	VisStr[30]
15-75	Slot C0 Option SW Version	0 N/A	All set-ups		FALSE	0	VisStr[20]
15-76	Option in Slot C1	0 N/A	All set-ups		FALSE	0	VisStr[30]
15-77	Slot C1 Option SW Version	0 N/A	All set-ups		FALSE	0	VisStr[20]
15-9* Parameter Info							
15-92	Defined Parameters	0 N/A	All set-ups		FALSE	0	UInt16
15-93	Modified Parameters	0 N/A	All set-ups		FALSE	0	UInt16
15-98	Drive Identification	0 N/A	All set-ups		FALSE	0	VisStr[40]
15-99	Parameter Metadata	0 N/A	All set-ups		FALSE	0	UInt16

4.1.18 16-** Data Readouts

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
16-0* General Status							
16-00	Control Word	0 N/A	All set-ups		FALSE	0	V2
16-01	Reference [Unit]	0.000 ReferenceFeed-backUnit	All set-ups		FALSE	-3	Int32
16-02	Reference %	0.0 %	All set-ups		FALSE	-1	Int16
16-03	Status Word	0 N/A	All set-ups		FALSE	0	V2
16-05	Main Actual Value [%]	0.00 %	All set-ups		FALSE	-2	N2
16-09	Custom Readout	0.00 CustomReadoutUnit	All set-ups		FALSE	-2	Int32
16-1* Motor Status							
16-10	Power [kW]	0.00 kW	All set-ups		FALSE	1	Int32
16-11	Power [hp]	0.00 hp	All set-ups		FALSE	-2	Int32
16-12	Motor voltage	0.0 V	All set-ups		FALSE	-1	UInt16
16-13	Frequency	0.0 Hz	All set-ups		FALSE	-1	UInt16
16-14	Motor Current	0.00 A	All set-ups		FALSE	-2	Int32
16-15	Frequency [%]	0.00 %	All set-ups		FALSE	-2	N2
16-16	Torque [Nm]	0.0 Nm	All set-ups		FALSE	-1	Int16
16-17	Speed [RPM]	0 RPM	All set-ups		FALSE	67	Int32
16-18	Motor Thermal	0 %	All set-ups		FALSE	0	UInt8
16-19	KTY sensor temperature	0 °C	All set-ups		FALSE	100	Int16
16-20	Motor Angle	0 N/A	All set-ups		TRUE	0	UInt16
16-21	Torque [%] High Res.	0.0 %	All set-ups		FALSE	-1	Int16
16-22	Torque [%]	0 %	All set-ups		FALSE	0	Int16
16-25	Torque [Nm] High	0.0 Nm	All set-ups		FALSE	-1	Int32
16-3* Drive Status							
16-30	DC Link Voltage	0 V	All set-ups		FALSE	0	UInt16
16-32	Brake Energy /s	0.000 kW	All set-ups		FALSE	0	UInt32
16-33	Brake Energy /2 min	0.000 kW	All set-ups		FALSE	0	UInt32
16-34	Heatsink Temp.	0 °C	All set-ups		FALSE	100	UInt8
16-35	Inverter Thermal	0 %	All set-ups		FALSE	0	UInt8
16-36	Inv. Nom. Current	ExpressionLimit	All set-ups		FALSE	-2	UInt32
16-37	Inv. Max. Current	ExpressionLimit	All set-ups		FALSE	-2	UInt32
16-38	SL Controller State	0 N/A	All set-ups		FALSE	0	UInt8
16-39	Control Card Temp.	0 °C	All set-ups		FALSE	100	UInt8
16-40	Logging Buffer Full	[0] No	All set-ups		TRUE	-	UInt8
16-41	LCP Bottom Statusline	0 N/A	All set-ups		TRUE	0	VisStr[50]
16-49	Current Fault Source	0 N/A	All set-ups	x	TRUE	0	UInt8
16-5* Ref. & Feedb.							
16-50	External Reference	0.0 N/A	All set-ups		FALSE	-1	Int16
16-51	Pulse Reference	0.0 N/A	All set-ups		FALSE	-1	Int16
16-52	Feedback [Unit]	0.000 ReferenceFeed-backUnit	All set-ups		FALSE	-3	Int32
16-53	Digi Pot Reference	0.00 N/A	All set-ups		FALSE	-2	Int16
16-57	Feedback [RPM]	0 RPM	All set-ups		FALSE	67	Int32
16-6* Inputs & Outputs							
16-60	Digital Input	0 N/A	All set-ups		FALSE	0	UInt16

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
16-61	Terminal 53 Switch Setting	[0] Current	All set-ups		FALSE	-	Uint8
16-62	Analog Input 53	0.000 N/A	All set-ups		FALSE	-3	Int32
16-63	Terminal 54 Switch Setting	[0] Current	All set-ups		FALSE	-	Uint8
16-64	Analog Input 54	0.000 N/A	All set-ups		FALSE	-3	Int32
16-65	Analog Output 42 [mA]	0.000 N/A	All set-ups		FALSE	-3	Int16
16-66	Digital Output [bin]	0 N/A	All set-ups		FALSE	0	Int16
16-67	Freq. Input #29 [Hz]	0 N/A	All set-ups	x	FALSE	0	Int32
16-68	Freq. Input #33 [Hz]	0 N/A	All set-ups		FALSE	0	Int32
16-69	Pulse Output #27 [Hz]	0 N/A	All set-ups		FALSE	0	Int32
16-70	Pulse Output #29 [Hz]	0 N/A	All set-ups	x	FALSE	0	Int32
16-71	Relay Output [bin]	0 N/A	All set-ups		FALSE	0	Int16
16-72	Counter A	0 N/A	All set-ups		TRUE	0	Int32
16-73	Counter B	0 N/A	All set-ups		TRUE	0	Int32
16-74	Prec. Stop Counter	0 N/A	All set-ups		TRUE	0	Uint32
16-75	Analog In X30/11	0.000 N/A	All set-ups		FALSE	-3	Int32
16-76	Analog In X30/12	0.000 N/A	All set-ups		FALSE	-3	Int32
16-77	Analog Out X30/8 [mA]	0.000 N/A	All set-ups		FALSE	-3	Int16
16-78	Analog Out X45/1 [mA]	0.000 N/A	All set-ups		FALSE	-3	Int16
16-79	Analog Out X45/3 [mA]	0.000 N/A	All set-ups		FALSE	-3	Int16
16-8* Fieldbus & FC Port							
16-80	Fieldbus CTW 1	0 N/A	All set-ups		FALSE	0	V2
16-82	Fieldbus REF 1	0 N/A	All set-ups		FALSE	0	N2
16-84	Comm. Option Status	0 N/A	All set-ups		FALSE	0	V2
16-85	FC Port CTW 1	0 N/A	All set-ups		FALSE	0	V2
16-86	FC Port REF 1	0 N/A	All set-ups		FALSE	0	N2
16-9* Diagnosis Readouts							
16-90	Alarm Word	0 N/A	All set-ups		FALSE	0	Uint32
16-91	Alarm word 2	0 N/A	All set-ups		FALSE	0	Uint32
16-92	Warning Word	0 N/A	All set-ups		FALSE	0	Uint32
16-93	Warning word 2	0 N/A	All set-ups		FALSE	0	Uint32
16-94	Ext. Status Word	0 N/A	All set-ups		FALSE	0	Uint32

4.1.19 17-** Motor Feedb.Option

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
17-1* Inc. Enc. Interface							
17-10	Signal Type	[1] TTL (5V, RS4222)	All set-ups		FALSE	-	Uint8
17-11	Resolution (PPR)	1024 N/A	All set-ups		FALSE	0	Uint16
17-2* Abs. Enc. Interface							
17-20	Protocol Selection	[0] None	All set-ups		FALSE	-	Uint8
17-21	Resolution (Positions/Rev)	ExpressionLimit	All set-ups		FALSE	0	Uint32
17-24	SSI Data Length	13 N/A	All set-ups		FALSE	0	Uint8
17-25	Clock Rate	ExpressionLimit	All set-ups		FALSE	3	Uint16
17-26	SSI Data Format	[0] Gray code	All set-ups		FALSE	-	Uint8
17-34	HIPERFACE Baud rate	[4] 9600	All set-ups		FALSE	-	Uint8
17-5* Resolver Interface							
17-50	Poles	2 N/A	1 set-up		FALSE	0	Uint8
17-51	Input Voltage	7.0 V	1 set-up		FALSE	-1	Uint8
17-52	Input Frequency	10.0 kHz	1 set-up		FALSE	2	Uint8
17-53	Transformation Ratio	0.5 N/A	1 set-up		FALSE	-1	Uint8
17-56	Encoder Sim. Resolution	[0] Disabled	1 set-up		FALSE	-	Uint8
17-59	Resolver Interface	[0] Disabled	All set-ups		FALSE	-	Uint8
17-6* Monitoring and App.							
17-60	Feedback Direction	[0] Clockwise	All set-ups		FALSE	-	Uint8
17-61	Feedback Signal Monitoring	[1] Warning	All set-ups		TRUE	-	Uint8

4.1.20 18-** Data Readouts 2

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
18-3* Analog Readouts							
18-36	Analog Input X48/2 [mA]	0.000 N/A	All set-ups		TRUE	-3	Int32
18-37	Temp. Input X48/4	0 N/A	All set-ups		TRUE	0	Int16
18-38	Temp. Input X48/7	0 N/A	All set-ups		TRUE	0	Int16
18-39	Temp. Input X48/10	0 N/A	All set-ups		TRUE	0	Int16
18-6* Inputs & Outputs 2							
18-60	Digital Input 2	0 N/A	All set-ups		FALSE	0	Uint16
18-9* PID Readouts							
18-90	Process PID Error	0.0 %	All set-ups		FALSE	-1	Int16
18-91	Process PID Output	0.0 %	All set-ups		FALSE	-1	Int16
18-92	Process PID Clamped Output	0.0 %	All set-ups		FALSE	-1	Int16
18-93	Process PID Gain Scaled Output	0.0 %	All set-ups		FALSE	-1	Int16

4.1.21 30-** Special Features

4

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
30-0* Wobbler							
30-00	Wobble Mode	[0] Abs. Freq., Abs. Time	All set-ups		FALSE	-	Uint8
30-01	Wobble Delta Frequency [Hz]	5.0 Hz	All set-ups		TRUE	-1	Uint8
30-02	Wobble Delta Frequency [%]	25 %	All set-ups		TRUE	0	Uint8
30-03	Wobble Delta Freq. Scaling Resource	[0] No function	All set-ups		TRUE	-	Uint8
30-04	Wobble Jump Frequency [Hz]	0.0 Hz	All set-ups		TRUE	-1	Uint8
30-05	Wobble Jump Frequency [%]	0 %	All set-ups		TRUE	0	Uint8
30-06	Wobble Jump Time	ExpressionLimit	All set-ups		TRUE	-3	Uint16
30-07	Wobble Sequence Time	10.0 s	All set-ups		TRUE	-1	Uint16
30-08	Wobble Up/Down Time	5.0 s	All set-ups		TRUE	-1	Uint16
30-09	Wobble Random Function	[0] Off	All set-ups		TRUE	-	Uint8
30-10	Wobble Ratio	1.0 N/A	All set-ups		TRUE	-1	Uint8
30-11	Wobble Random Ratio Max.	10.0 N/A	All set-ups		TRUE	-1	Uint8
30-12	Wobble Random Ratio Min.	0.1 N/A	All set-ups		TRUE	-1	Uint8
30-19	Wobble Delta Freq. Scaled	0.0 Hz	All set-ups		FALSE	-1	Uint16
30-2* Adv. Start Adjust							
30-20	High Starting Torque Time [s]	0.00 s	All set-ups	x	TRUE	-2	Uint16
30-21	High Starting Torque Current [%]	100.0 %	All set-ups	x	TRUE	-1	Uint32
30-22	Locked Rotor Protection	[0] Off	All set-ups	x	TRUE	-	Uint8
30-23	Locked Rotor Detection Time [s]	0.10 s	All set-ups	x	TRUE	-2	Uint8
30-8* Compatibility (I)							
30-80	d-axis inductance (Ld)	ExpressionLimit	All set-ups	x	FALSE	-6	Int32
30-81	Brake Resistor (ohm)	ExpressionLimit	1 set-up		TRUE	-2	Uint32
30-83	Speed PID Proportional Gain	ExpressionLimit	All set-ups		TRUE	-4	Uint32
30-84	Process PID Proportional Gain	0.100 N/A	All set-ups		TRUE	-3	Uint16

4.1.22 32-** MCO Basic Settings

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
32-0* Encoder 2							
32-00	Incremental Signal Type	[1] TTL (5V, RS4222)	2 set-ups		TRUE	-	UInt8
32-01	Incremental Resolution	1024 N/A	2 set-ups		TRUE	0	UInt32
32-02	Absolute Protocol	[0] None	2 set-ups		TRUE	-	UInt8
32-03	Absolute Resolution	8192 N/A	2 set-ups		TRUE	0	UInt32
32-04	Absolute Encoder Baudrate X55	[4] 9600	All set-ups		FALSE	-	UInt8
32-05	Absolute Encoder Data Length	25 N/A	2 set-ups		TRUE	0	UInt8
32-06	Absolute Encoder Clock Frequency	262.000 kHz	2 set-ups		TRUE	0	UInt32
32-07	Absolute Encoder Clock Generation	[1] On	2 set-ups		TRUE	-	UInt8
32-08	Absolute Encoder Cable Length	0 m	2 set-ups		TRUE	0	UInt16
32-09	Encoder Monitoring	[0] Off	2 set-ups		TRUE	-	UInt8
32-10	Rotational Direction	[1] No action	2 set-ups		TRUE	-	UInt8
32-11	User Unit Denominator	1 N/A	2 set-ups		TRUE	0	UInt32
32-12	User Unit Numerator	1 N/A	2 set-ups		TRUE	0	UInt32
32-13	Enc.2 Control	[0] No soft changing	2 set-ups		TRUE	-	UInt8
32-14	Enc.2 node ID	127 N/A	2 set-ups		TRUE	0	UInt8
32-15	Enc.2 CAN guard	null	2 set-ups		TRUE	-	UInt8
32-3* Encoder 1							
32-30	Incremental Signal Type	[1] TTL (5V, RS4222)	2 set-ups		TRUE	-	UInt8
32-31	Incremental Resolution	1024 N/A	2 set-ups		TRUE	0	UInt32
32-32	Absolute Protocol	[0] None	2 set-ups		TRUE	-	UInt8
32-33	Absolute Resolution	8192 N/A	2 set-ups		TRUE	0	UInt32
32-35	Absolute Encoder Data Length	25 N/A	2 set-ups		TRUE	0	UInt8
32-36	Absolute Encoder Clock Frequency	262.000 kHz	2 set-ups		TRUE	0	UInt32
32-37	Absolute Encoder Clock Generation	[1] On	2 set-ups		TRUE	-	UInt8
32-38	Absolute Encoder Cable Length	0 m	2 set-ups		TRUE	0	UInt16
32-39	Encoder Monitoring	[0] Off	2 set-ups		TRUE	-	UInt8
32-40	Encoder Termination	[1] On	2 set-ups		TRUE	-	UInt8
32-43	Enc.1 Control	[0] No soft changing	2 set-ups		TRUE	-	UInt8
32-44	Enc.1 node ID	127 N/A	2 set-ups		TRUE	0	UInt8
32-45	Enc.1 CAN guard	null	2 set-ups		TRUE	-	UInt8
32-5* Feedback Source							
32-50	Source Slave	[2] Encoder 2	2 set-ups		TRUE	-	UInt8
32-51	MCO 302 Last Will	[1] Trip	2 set-ups		TRUE	-	UInt8
32-52	Source Master	[1] Encoder 1 X56	2 set-ups		TRUE	-	UInt8
32-6* PID Controller							
32-60	Proportional factor	30 N/A	2 set-ups		TRUE	0	UInt32
32-61	Derivative factor	0 N/A	2 set-ups		TRUE	0	UInt32
32-62	Integral factor	0 N/A	2 set-ups		TRUE	0	UInt32
32-63	Limit Value for Integral Sum	1000 N/A	2 set-ups		TRUE	0	UInt16
32-64	PID Bandwidth	1000 N/A	2 set-ups		TRUE	0	UInt16
32-65	Velocity Feed-Forward	0 N/A	2 set-ups		TRUE	0	UInt32
32-66	Acceleration Feed-Forward	0 N/A	2 set-ups		TRUE	0	UInt32
32-67	Max. Tolerated Position Error	20000 N/A	2 set-ups		TRUE	0	UInt32
32-68	Reverse Behavior for Slave	[0] Reversing allowed	2 set-ups		TRUE	-	UInt8
32-69	Sampling Time for PID Control	1 ms	2 set-ups		TRUE	-3	UInt16

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
32-70	Scan Time for Profile Generator	1 ms	2 set-ups		TRUE	-3	UInt8
32-71	Size of the Control Window (Activation)	0 N/A	2 set-ups		TRUE	0	UInt32
32-72	Size of the Control Window (Deactiv.)	0 N/A	2 set-ups		TRUE	0	UInt32
32-73	Integral limit filter time	0 ms	2 set-ups		TRUE	-3	Int16
32-74	Position error filter time	0 ms	2 set-ups		TRUE	-3	Int16
32-8* Velocity & Accel.							
32-80	Maximum Velocity (Encoder)	1500 RPM	2 set-ups		TRUE	67	UInt32
32-81	Shortest Ramp	1.000 s	2 set-ups		TRUE	-3	UInt32
32-82	Ramp Type	[0] Linear	2 set-ups		TRUE	-	UInt8
32-83	Velocity Resolution	100 N/A	2 set-ups		TRUE	0	UInt32
32-84	Default Velocity	50 N/A	2 set-ups		TRUE	0	UInt32
32-85	Default Acceleration	50 N/A	2 set-ups		TRUE	0	UInt32
32-86	Acc. up for limited jerk	100 ms	2 set-ups		TRUE	-3	UInt32
32-87	Acc. down for limited jerk	0 ms	2 set-ups		TRUE	-3	UInt32
32-88	Dec. up for limited jerk	0 ms	2 set-ups		TRUE	-3	UInt32
32-89	Dec. down for limited jerk	0 ms	2 set-ups		TRUE	-3	UInt32
32-9* Development							
32-90	Debug Source	[0] Controlcard	2 set-ups		TRUE	-	UInt8

4.1.23 33-** MCO Adv. Settings

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
33-0* Home Motion							
33-00	Force HOME	[0] Home not forced	2 set-ups		TRUE	-	UInt8
33-01	Zero Point Offset from Home Pos.	0 N/A	2 set-ups		TRUE	0	Int32
33-02	Ramp for Home Motion	10 N/A	2 set-ups		TRUE	0	UInt32
33-03	Velocity of Home Motion	10 N/A	2 set-ups		TRUE	0	Int32
33-04	Behavior during Home Motion	[0] Reverse and index	2 set-ups		TRUE	-	UInt8
33-1* Synchronization							
33-10	Synchronization Factor Master (M:S)	1 N/A	2 set-ups		TRUE	0	Int32
33-11	Synchronization Factor Slave (M:S)	1 N/A	2 set-ups		TRUE	0	Int32
33-12	Position Offset for Synchronization	0 N/A	2 set-ups		TRUE	0	Int32
33-13	Accuracy Window for Position Sync.	1000 N/A	2 set-ups		TRUE	0	Int32
33-14	Relative Slave Velocity Limit	0 %	2 set-ups		TRUE	0	UInt8
33-15	Marker Number for Master	1 N/A	2 set-ups		TRUE	0	UInt16
33-16	Marker Number for Slave	1 N/A	2 set-ups		TRUE	0	UInt16
33-17	Master Marker Distance	4096 N/A	2 set-ups		TRUE	0	UInt32
33-18	Slave Marker Distance	4096 N/A	2 set-ups		TRUE	0	UInt32
33-19	Master Marker Type	[0] Encoder Z positive	2 set-ups		TRUE	-	UInt8
33-20	Slave Marker Type	[0] Encoder Z positive	2 set-ups		TRUE	-	UInt8
33-21	Master Marker Tolerance Window	0 N/A	2 set-ups		TRUE	0	UInt32
33-22	Slave Marker Tolerance Window	0 N/A	2 set-ups		TRUE	0	UInt32
33-23	Start Behavior for Marker Sync	[0] Start Function 1	2 set-ups		TRUE	-	UInt16
33-24	Marker Number for Fault	10 N/A	2 set-ups		TRUE	0	UInt16
33-25	Marker Number for Ready	1 N/A	2 set-ups		TRUE	0	UInt16
33-26	Velocity Filter	0 us	2 set-ups		TRUE	-6	Int32
33-27	Offset Filter Time	0 ms	2 set-ups		TRUE	-3	UInt32
33-28	Marker Filter Configuration	[0] Marker filter 1	2 set-ups		TRUE	-	UInt8
33-29	Filter Time for Marker Filter	0 ms	2 set-ups		TRUE	-3	Int32
33-30	Maximum Marker Correction	0 N/A	2 set-ups		TRUE	0	UInt32
33-31	Synchronization Type	[0] Standard	2 set-ups		TRUE	-	UInt8
33-32	Feed Forward Velocity Adaptation	0 N/A	2 set-ups		TRUE	0	UInt32
33-33	Velocity Filter Window	0 N/A	2 set-ups		TRUE	0	UInt32
33-34	Slave Marker filter time	0 ms	2 set-ups		TRUE	-3	UInt32
33-4* Limit Handling							
33-40	Behavior at End Limit Switch	[0] Call error handler	2 set-ups		TRUE	-	UInt8
33-41	Negative Software End Limit	-500000 N/A	2 set-ups		TRUE	0	Int32
33-42	Positive Software End Limit	500000 N/A	2 set-ups		TRUE	0	Int32
33-43	Negative Software End Limit Active	[0] Inactive	2 set-ups		TRUE	-	UInt8
33-44	Positive Software End Limit Active	[0] Inactive	2 set-ups		TRUE	-	UInt8
33-45	Time in Target Window	0 ms	2 set-ups		TRUE	-3	UInt8
33-46	Target Window LimitValue	1 N/A	2 set-ups		TRUE	0	UInt16
33-47	Size of Target Window	0 N/A	2 set-ups		TRUE	0	UInt16
33-5* I/O Configuration							
33-50	Terminal X57/1 Digital Input	[0] No function	2 set-ups		TRUE	-	UInt8
33-51	Terminal X57/2 Digital Input	[0] No function	2 set-ups		TRUE	-	UInt8
33-52	Terminal X57/3 Digital Input	[0] No function	2 set-ups		TRUE	-	UInt8
33-53	Terminal X57/4 Digital Input	[0] No function	2 set-ups		TRUE	-	UInt8

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
33-54	Terminal X57/5 Digital Input	[0] No function	2 set-ups		TRUE	-	Uint8
33-55	Terminal X57/6 Digital Input	[0] No function	2 set-ups		TRUE	-	Uint8
33-56	Terminal X57/7 Digital Input	[0] No function	2 set-ups		TRUE	-	Uint8
33-57	Terminal X57/8 Digital Input	[0] No function	2 set-ups		TRUE	-	Uint8
33-58	Terminal X57/9 Digital Input	[0] No function	2 set-ups		TRUE	-	Uint8
33-59	Terminal X57/10 Digital Input	[0] No function	2 set-ups		TRUE	-	Uint8
33-60	Terminal X59/1 and X59/2 Mode	[1] Output	2 set-ups		FALSE	-	Uint8
33-61	Terminal X59/1 Digital Input	[0] No function	2 set-ups		TRUE	-	Uint8
33-62	Terminal X59/2 Digital Input	[0] No function	2 set-ups		TRUE	-	Uint8
33-63	Terminal X59/1 Digital Output	[0] No function	2 set-ups		TRUE	-	Uint8
33-64	Terminal X59/2 Digital Output	[0] No function	2 set-ups		TRUE	-	Uint8
33-65	Terminal X59/3 Digital Output	[0] No function	2 set-ups		TRUE	-	Uint8
33-66	Terminal X59/4 Digital Output	[0] No function	2 set-ups		TRUE	-	Uint8
33-67	Terminal X59/5 Digital Output	[0] No function	2 set-ups		TRUE	-	Uint8
33-68	Terminal X59/6 Digital Output	[0] No function	2 set-ups		TRUE	-	Uint8
33-69	Terminal X59/7 Digital Output	[0] No function	2 set-ups		TRUE	-	Uint8
33-70	Terminal X59/8 Digital Output	[0] No function	2 set-ups		TRUE	-	Uint8
33-8* Global Parameters							
33-80	Activated Program Number	-1 N/A	2 set-ups		TRUE	0	Int8
33-81	Power-up State	[1] Motor ON	2 set-ups		TRUE	-	Uint8
33-82	Drive Status Monitoring	[1] On	2 set-ups		TRUE	-	Uint8
33-83	Behavior After Error	[0] Coast	2 set-ups		TRUE	-	Uint8
33-84	Behavior afterEsc.	[0] Controlled stop	2 set-ups		TRUE	-	Uint8
33-85	MCO Supplied by External 24VDC	[0] No	2 set-ups		TRUE	-	Uint8
33-86	Terminal at alarm	[0] Relay 1	2 set-ups		TRUE	-	Uint8
33-87	Terminal state at alarm	[0] Do nothing	2 set-ups		TRUE	-	Uint8
33-88	Status word at alarm	0 N/A	2 set-ups		TRUE	0	Uint16
33-9* MCO Port Settings							
33-90	X62 MCO CAN node ID	127 N/A	2 set-ups		TRUE	0	Uint8
33-91	X62 MCO CAN baud rate	[20] 125 Kbps	2 set-ups		TRUE	-	Uint8
33-94	X60 MCO RS485 serial termination	[0] Off	2 set-ups		TRUE	-	Uint8
33-95	X60 MCO RS485 serial baud rate	[2] 9600 Baud	2 set-ups		TRUE	-	Uint8

4.1.24 34-** MCO Data Readouts

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
34-0* PCD Write Par.							
34-01	PCD 1 Write to MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-02	PCD 2 Write to MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-03	PCD 3 Write to MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-04	PCD 4 Write to MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-05	PCD 5 Write to MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-06	PCD 6 Write to MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-07	PCD 7 Write to MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-08	PCD 8 Write to MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-09	PCD 9 Write to MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-10	PCD 10 Write to MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-2* PCD Read Par.							
34-21	PCD 1 Read from MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-22	PCD 2 Read from MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-23	PCD 3 Read from MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-24	PCD 4 Read from MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-25	PCD 5 Read from MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-26	PCD 6 Read from MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-27	PCD 7 Read from MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-28	PCD 8 Read from MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-29	PCD 9 Read from MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-30	PCD 10 Read from MCO	0 N/A	All set-ups		TRUE	0	Uint16
34-4* Inputs & Outputs							
34-40	Digital Inputs	0 N/A	All set-ups		TRUE	0	Uint16
34-41	Digital Outputs	0 N/A	All set-ups		TRUE	0	Uint16
34-5* Process Data							
34-50	Actual Position	0 N/A	All set-ups		TRUE	0	Int32
34-51	Commanded Position	0 N/A	All set-ups		TRUE	0	Int32
34-52	Actual Master Position	0 N/A	All set-ups		TRUE	0	Int32
34-53	Slave Index Position	0 N/A	All set-ups		TRUE	0	Int32
34-54	Master Index Position	0 N/A	All set-ups		TRUE	0	Int32
34-55	Curve Position	0 N/A	All set-ups		TRUE	0	Int32
34-56	Track Error	0 N/A	All set-ups		TRUE	0	Int32
34-57	Synchronizing Error	0 N/A	All set-ups		TRUE	0	Int32
34-58	Actual Velocity	0 N/A	All set-ups		TRUE	0	Int32
34-59	Actual Master Velocity	0 N/A	All set-ups		TRUE	0	Int32
34-60	Synchronizing Status	0 N/A	All set-ups		TRUE	0	Int32
34-61	Axis Status	0 N/A	All set-ups		TRUE	0	Int32
34-62	Program Status	0 N/A	All set-ups		TRUE	0	Int32
34-64	MCO 302 Status	0 N/A	All set-ups		TRUE	0	Uint16
34-65	MCO 302 Control	0 N/A	All set-ups		TRUE	0	Uint16
34-7* Diagnosis readouts							
34-70	MCO Alarm Word 1	0 N/A	All set-ups		FALSE	0	Uint32
34-71	MCO Alarm Word 2	0 N/A	All set-ups		FALSE	0	Uint32

4.1.25 35-** Sensor Input Option

4

Par. No. #	Parameter description	Default value	4-set-up	FC 302 only	Change during operation	Conversion index	Type
35-0* Temp. Input Mode							
35-00	Term. X48/4 Temp. Unit	[60] °C	All set-ups		TRUE	-	Uint8
35-01	Term. X48/4 Input Type	[0] Not Connected	All set-ups		TRUE	-	Uint8
35-02	Term. X48/7 Temp. Unit	[60] °C	All set-ups		TRUE	-	Uint8
35-03	Term. X48/7 Input Type	[0] Not Connected	All set-ups		TRUE	-	Uint8
35-04	Term. X48/10 Temp. Unit	[60] °C	All set-ups		TRUE	-	Uint8
35-05	Term. X48/10 Input Type	[0] Not Connected	All set-ups		TRUE	-	Uint8
35-06	Temperature Sensor Alarm Function	[5] Stop and trip	All set-ups		TRUE	-	Uint8
35-1* Temp. Input X48/4							
35-14	Term. X48/4 Filter Time Constant	0.001 s	All set-ups		TRUE	-3	Uint16
35-15	Term. X48/4 Temp. Monitor	[0] Disabled	All set-ups		TRUE	-	Uint8
35-16	Term. X48/4 Low Temp. Limit	ExpressionLimit	All set-ups		TRUE	0	Int16
35-17	Term. X48/4 High Temp. Limit	ExpressionLimit	All set-ups		TRUE	0	Int16
35-2* Temp. Input X48/7							
35-24	Term. X48/7 Filter Time Constant	0.001 s	All set-ups		TRUE	-3	Uint16
35-25	Term. X48/7 Temp. Monitor	[0] Disabled	All set-ups		TRUE	-	Uint8
35-26	Term. X48/7 Low Temp. Limit	ExpressionLimit	All set-ups		TRUE	0	Int16
35-27	Term. X48/7 High Temp. Limit	ExpressionLimit	All set-ups		TRUE	0	Int16
35-3* Temp. Input X48/10							
35-34	Term. X48/10 Filter Time Constant	0.001 s	All set-ups		TRUE	-3	Uint16
35-35	Term. X48/10 Temp. Monitor	[0] Disabled	All set-ups		TRUE	-	Uint8
35-36	Term. X48/10 Low Temp. Limit	ExpressionLimit	All set-ups		TRUE	0	Int16
35-37	Term. X48/10 High Temp. Limit	ExpressionLimit	All set-ups		TRUE	0	Int16
35-4* Analog Input X48/2							
35-42	Term. X48/2 Low Current	4.00 mA	All set-ups		TRUE	-5	Int16
35-43	Term. X48/2 High Current	20.00 mA	All set-ups		TRUE	-5	Int16
35-44	Term. X48/2 Low Ref./Feedb. Value	0.000 N/A	All set-ups		TRUE	-3	Int32
35-45	Term. X48/2 High Ref./Feedb. Value	100.000 N/A	All set-ups		TRUE	-3	Int32
35-46	Term. X48/2 Filter Time Constant	0.001 s	All set-ups		TRUE	-3	Uint16

5 Troubleshooting

5.1.1 Warnings/Alarm Messages

A warning or an alarm is signaled by the relevant LED on the front of the Adjustable frequency drive and indicated by a code on the display.

A warning remains active until its cause is no longer present. Under certain circumstances operation of the motor may still be continued. Warning messages may be critical, but are not necessarily so.

In the event of an alarm, the Adjustable frequency drive will have tripped. Alarms must be reset to restart operation once their cause has been rectified.

This may be done in three ways:

1. By using the [RESET] control button on the LCP.
2. Via a digital input with the "Reset" function.
3. Via serial communication/optional serial communication bus.

NOTE!

After a manual reset using the [RESET] button on the LCP, the [AUTO ON] button must be pressed to restart the motor.

If an alarm cannot be reset, the reason may be that its cause has not been rectified, or the alarm is trip-locked (see also table on following page).

Alarms that are trip-locked offer additional protection, meaning that the line power supply must be switched off before the alarm can be reset. After being switched back on, the Adjustable frequency drive is no longer blocked and may be reset as described above once the cause has been rectified.

Alarms that are not trip-locked can also be reset using the automatic reset function in *14-20 Reset Mode* (Warning: automatic wake-up is possible!)

If a warning and alarm are marked against a code in the table on the following page, this means that either a warning occurs before an alarm, or that you can specify whether it is a warning or an alarm that is to be displayed for a given fault.

This is possible, for instance, in *1-90 Motor Thermal Protection*. After an alarm or trip, the motor carries on coasting, and the alarm and warning flash. Once the problem has been rectified, only the alarm continues flashing until the Adjustable frequency drive is reset.

No.	Description	Warning	Alarm/Trip	Alarm/Trip Lock	Parameter Reference
1	10 Volts low	X			
2	Live zero error	(X)	(X)		6-01 <i>Live Zero Timeout Function</i>
3	No motor	(X)			1-80 <i>Function at Stop</i>
4	Line phase loss	(X)	(X)	(X)	14-12 <i>Function at Mains Imbalance</i>
5	DC link voltage high	X			
6	DC link voltage low	X			
7	DC overvoltage	X	X		
8	DC under-voltage	X	X		
9	Inverter overloaded	X	X		
10	Motor ETR over-temperature	(X)	(X)		1-90 <i>Motor Thermal Protection</i>
11	Motor thermistor over-temperature	(X)	(X)		1-90 <i>Motor Thermal Protection</i>
12	Torque limit	X	X		
13	Overcurrent	X	X	X	
14	Ground Fault	X	X	X	
15	Hardware mismatch		X	X	
16	Short Circuit		X	X	

No.	Description	Warning	Alarm/Trip	Alarm/Trip Lock	Parameter Reference
17	Control word timeout	(X)	(X)		8-04 <i>Control Word Timeout Function</i>
20	Temp. Input Error				
21	Param Error				
22	Hoist Mech. Brake	(X)	(X)		Parameter group 2-2*
23	Internal Fans	X			
24	External Fans	X			
25	Brake resistor short-circuited	X			
26	Brake resistor power limit	(X)	(X)		2-13 <i>Brake Power Monitoring</i>
27	Brake chopper short-circuited	X	X		
28	Brake check	(X)	(X)		2-15 <i>Brake Check</i>
29	Heatsink temp	X	X	X	
30	Motor phase U missing	(X)	(X)	(X)	4-58 <i>Missing Motor Phase Function</i>
31	Motor phase V missing	(X)	(X)	(X)	4-58 <i>Missing Motor Phase Function</i>
32	Motor phase W missing	(X)	(X)	(X)	4-58 <i>Missing Motor Phase Function</i>
33	Soft-charge Fault		X	X	
34	Fieldbus communication fault	X	X		
35	Option Fault				
36	Line failure	X	X		
37	Phase imbalance		X		
38	Internal Fault		X	X	
39	Heatsink sensor		X	X	
40	Overload of Digital Output Terminal 27	(X)			5-00 <i>Digital I/O Mode</i> , 5-01 <i>Terminal 27 Mode</i>
41	Overload of Digital Output Terminal 29	(X)			5-00 <i>Digital I/O Mode</i> , 5-02 <i>Terminal 29 Mode</i>
42	Ovrlid X30/6-7	(X)			
43	Ext. Supply (option)				
45	Ground Fault 2	X	X	X	
46	Pwr. card supply		X	X	
47	24 V supply low	X	X	X	
48	1.8 V supply low		X	X	
49	Speed limit	X			
50	AMA calibration failed		X		
51	AMA check U_{nom} and I_{nom}		X		
52	AMA low I_{nom}		X		
53	AMA motor too big		X		
54	AMA motor too small		X		
55	AMA parameter out of range		X		
56	AMA interrupted by user		X		
57	AMA timeout		X		
58	AMA internal fault	X	X		
59	Current limit	X			
60	External Interlock	X	X		

No.	Description	Warning	Alarm/Trip	Alarm/Trip Lock	Parameter Reference
61	Feedback Error	(X)	(X)		4-30 <i>Motor Feedback Loss Function</i>
62	Output Frequency at Maximum Limit	X			
63	Mechanical Brake Low		(X)		2-20 <i>Release Brake Current</i>
64	Voltage Limit	X			
65	Control Board Over-temperature	X	X	X	
66	Heat sink Temperature Low	X			
67	Option Configuration has Changed		X		
68	Safe Stop	(X)	(X) ¹⁾		5-19 <i>Terminal 37 Safe Stop</i>
69	Pwr. Card Temp		X	X	
70	Illegal FC configuration			X	
71	PTC 1 Safe Stop				
72	Dangerous failure				
73	Safe Stop Auto Restart	(X)	(X)		5-19 <i>Terminal 37 Safe Stop</i>
74	PTC Thermistor			X	
75	Illegal Profile Sel.		X		
76	Power Unit Set-up	X			
77	Reduced power mode	X			14-59 <i>Actual Number of Inverter Units</i>
78	Tracking Error	(X)	(X)		4-34 <i>Tracking Error Function</i>
79	Illegal PS config		X	X	
80	Drive Initialized to Default Value		X		
81	CSIV corrupt		X		
82	CSIV param error		X		
83	Illegal Option Combination			X	
84	No Safety Option		X		
88	Option Detection			X	
89	Mechanical Brake Sliding	X			
90	Feedback Monitor	(X)	(X)		17-61 <i>Feedback Signal Monitoring</i>
91	Analog input 54 wrong settings			X	S202
163	ATEX ETR cur.lim.warning	X			
164	ATEX ETR cur.lim.alarm		X		
165	ATEX ETR freq.lim.warning	X			
166	ATEX ETR freq.lim.alarm		X		
243	Brake IGBT	X	X	X	
244	Heatsink temp	X	X	X	
245	Heatsink sensor		X	X	
246	Pwr.card supply			X	
247	Pwr.card temp		X	X	
248	Illegal PS config			X	
249	Rect. low temp.	X			
250	New spare parts			X	

No.	Description	Warning	Alarm/Trip	Alarm/Trip Lock	Parameter Reference
251	New Type Code		X	X	

Table 5.1 Alarm/Warning code list

(X) Dependent on parameter

1) Cannot be Auto reset via 14-20 Reset Mode

A trip is the action when an alarm has appeared. The trip will coast the motor and can be reset by pressing the reset button or make a reset by a digital input (parameter group 5-1* [1]). The original event that caused an alarm cannot damage the Adjustable frequency drive or cause dangerous conditions. A trip lock is an action when an

alarm occurs that may cause damage to the Adjustable frequency drive or connected parts. A trip lock situation can only be reset by power cycling.

LED indication	
Warning	yellow
Alarm	flashing red
Trip locked	yellow and red

5

Bit	Hex	Dec	Alarm Word	Alarm Word 2	Warning Word	Warning Word 2	Extended Status Word
Alarm Word Extended Status Word							
0	00000001	1	Brake Check (A28)	ServiceTrip, Read/Write	Brake Check (W28)	reserved	Ramping
1	00000002	2	Heatsink temp. (A29)	ServiceTrip, (reserved)	Heatsink temp. (W29)	reserved	AMA Running
2	00000004	4	Ground Fault (A14)	ServiceTrip, Typecode/ Sparepart	Ground Fault (W14)	reserved	Start CW/CCW NOT start_possible start_possible is active, when the DI selections [12] OR [13] are active and the requested direction matches the reference sign.
3	00000008	8	Ctrl.Card Temp (A65)	ServiceTrip, (reserved)	Ctrl.Card Temp (W65)	reserved	Slow-down slow-down command active, e.g., via CTW bit 11 or DI
4	00000010	16	Ctrl. Word TO (A17)	ServiceTrip, (reserved)	Ctrl. Word TO (W17)		Catch Up catch up command active, e.g., via CTW bit 12 or DI
5	00000020	32	Overcurrent (A13)	reserved	Overcurrent (W13)	reserved	Feedback High feedback > p4-57
6	00000040	64	Torque Limit (A12)	reserved	Torque Limit (W12)	reserved	Feedback Low feedback < p4-56
7	00000080	128	Motor Th Over (A11)	reserved	Motor Th Over (W11)	reserved	Output Current High current > p4-51
8	00000100	256	Motor ETR Over (A10)	reserved	Motor ETR Over (W10)	reserved	Output Current Low current < p4-50
9	00000200	512	Inverter Overld. (A9)	reserved	Inverter Overld (W9)	reserved	Output Freq High speed > p4-53
10	00000400	1,024	DC under-volt (A8)	reserved	DC under-volt (W8)		Output Freq Low speed < p4-52
11	00000800	2,048	DC overvoltage (A7)	reserved	DC overvoltage (W7)		Brake Check OK brake test NOT ok

Bit	Hex	Dec	Alarm Word	Alarm Word 2	Warning Word	Warning Word 2	Extended Status Word
12	00001000	4,096	Short Circuit (A16)	reserved	DC Voltage Low (W6)	reserved	Braking Max BrakePower > BrakePowerLimit (p212)
13	00002000	8,192	Soft-charge Fault (A33)	reserved	DC Voltage High (W5)		Braking
14	00004000	16,384	Line Ph. Loss (A4)	reserved	Line Ph. Loss (W4)		Out of Speed Range
15	00008000	32,768	AMA Not OK	reserved	No Motor (W3)		OVC Active
16	00010000	65,536	Live Zero Error (A2)	reserved	Live Zero Error (W2)		AC Brake
17	00020000	131,072	Internal Fault (A38)	KTY error	10 V Low (W1)	KTY Warn	Password Timelock number of allowed password trials exceeded - timelock active
18	00040000	262,144	Brake Overload (A26)	Fans error	Brake Overload (W26)	Fans Warn	Password Protection p0-61 = ALL_NO_ACCESS OR BUS_NO_ACCESS OR BUS_READONLY
19	00080000	524,288	U phase Loss (A30)	ECB error	Brake Resistor (W25)	ECB Warn	Reference High reference > p4-55
20	00100000	1,048,576	V phase Loss (A31)	reserved	Brake IGBT (W27)	reserved	Reference Low reference < p4-54
21	00200000	2,097,152	W phase Loss (A32)	reserved	Speed Limit (W49)	reserved	Local Reference reference site = REMOTE -> auto on pressed & active
22	00400000	4,194,304	Serial communication bus Fault (A34)	reserved	Serial communication bus Fault (W34)	reserved	Protection Mode
23	00800000	8,388,608	24 V Supply Low (A47)	reserved	24 V Supply Low (W47)	reserved	Unused
24	01000000	16,777,216	Line Failure (A36)	reserved	Line Failure (W36)	reserved	Unused
25	02000000	33,554,432	1.8 V Supply Low (A48)	reserved	Current Limit (W59)	reserved	Unused
26	04000000	67,108,864	Brake Resistor (A25)	reserved	Low Temp (W66)	reserved	Unused
27	08000000	134,217,728	Brake IGBT (A27)	reserved	Voltage Limit (W64)	reserved	Unused
28	10,000,000	268,435,456	Option Change (A67)	reserved	Encoder loss (W90)	reserved	Unused
29	20,000,000	536,870,912	Drive Initialized (A80)	Feedback Fault (A61, A90)	Feedback Fault (W61, W90)		Unused
30	40,000,000	1,073,741,824	Safe Stop (A68)	PTC 1 Safe Stop (A71)	Safe Stop (W68)	PTC 1 Safe Stop (W71)	Unused
31	80,000,000	2,147,483,648	Mech. brake low (A63)	Dangerous Failure (A72)	Extended Status Word		Unused

Table 5.2 Description of Alarm Word, Warning Word and Extended Status Word

The alarm words, warning words and extended status words can be read out via serial bus or optional serial communication bus for diagnosis. See also 16-94 Ext. Status Word.

WARNING 1, 10 Volts low

The control card voltage is below 10 V from terminal 50. Remove some of the load from terminal 50, as the 10 V supply is overloaded. Max. 15 mA or minimum 590Ω.

This condition can be caused by a short in a connected potentiometer or improper wiring of the potentiometer.

Troubleshooting: Remove the wiring from terminal 50. If the warning clears, the problem is with the customer wiring. If the warning does not clear, replace the control card.

WARNING/ALARM 2, Live zero error

This warning or alarm will only appear if programmed by the user in *6-01 Live Zero Timeout Function*. The signal on one of the analog inputs is less than 50% of the minimum value programmed for that input. This condition can be caused by broken wiring or faulty device sending the signal.

Troubleshooting

Check connections on all the analog input terminals. Control card terminals 53 and 54 for signals, terminal 55 common. MCB 101 terminals 11 and 12 for signals, terminal 10 common. MCB 109 terminals 1, 3, 5 for signals, terminals 2, 4, 6 common).

Check that the Adjustable frequency drive programming and switch settings match the analog signal type.

Perform Input Terminal Signal Test.

WARNING/ALARM 3, No motor

No motor has been connected to the output of the Adjustable frequency drive.

WARNING/ALARM 4, Mains phase loss

A phase is missing on the supply side, or the line voltage imbalance is too high. This message also appears for a fault in the input rectifier on the Adjustable frequency drive. Options are programmed at *14-12 Function at Mains Imbalance*.

Troubleshooting: Check the supply voltage and supply currents to the Adjustable frequency drive.

WARNING 5, DC link voltage high

The intermediate circuit voltage (DC) is higher than the high voltage warning limit. The limit is dependent on the Adjustable frequency drive voltage rating. The unit is still active.

WARNING 6, DC link voltage low

The intermediate circuit voltage (DC) is lower than the low voltage warning limit. The limit is dependent on the Adjustable frequency drive voltage rating. The unit is still active.

WARNING/ALARM 7, DC overvoltage

If the intermediate circuit voltage exceeds the limit, the Adjustable frequency drive trips after a time.

Troubleshooting

Connect a brake resistor

Extend the ramp time

Change the ramp type

Activate the functions in *2-10 Brake Function*

Increase *14-26 Trip Delay at Inverter Fault*

WARNING/ALARM 8, DC undervoltage

If the intermediate circuit voltage (DC link) drops below the under voltage limit, the Adjustable frequency drive checks if a 24V DC backup supply is connected. If no 24V DC backup supply is connected, the Adjustable frequency drive trips after a fixed time delay. The time delay varies with unit size.

Troubleshooting:

Check that the supply voltage matches the Adjustable frequency drive voltage.

Perform input voltage test

Perform soft charge circuit test

WARNING/ALARM 9, Inverter overload

The Adjustable frequency drive is about to cut out because of an overload (too high current for too long). The counter for electronic, thermal inverter protection gives a warning at 98% and trips at 100%, while giving an alarm. The Adjustable frequency drive *cannot* be reset until the counter is below 90%.

The fault is that the Adjustable frequency drive is overloaded by more than 100% for too long.

Troubleshooting

Compare the output current shown on the LCP with the Adjustable frequency drive rated current.

Compare the output current shown on the LCP with measured motor current.

Display the Thermal Drive Load on the LCP and monitor the value. When running above the Adjustable frequency drive continuous current rating, the counter should increase. When running below the Adjustable frequency drive continuous current rating, the counter should decrease.

See the derating section in the *Design Guide* for more details if a high switching frequency is required.

WARNING/ALARM 10, Motor overload temperature

According to the electronic thermal protection (ETR), the motor is too hot. Select whether the Adjustable frequency drive gives a warning or an alarm when the counter reaches 100% in *1-90 Motor Thermal Protection*. The fault

occurs when the motor is overloaded by more than 100% for too long.

Troubleshooting

- Check for motor overheating.
- Check if the motor is mechanically overloaded.
- Check that the motor current set in *1-24 Motor Current* is correct.
- Ensure that Motor data in parameters 1-20 through 1-25 are set correctly.
- If an external fan is in use, check in *1-91 Motor External Fan* that it is selected.
- Running AMA in *1-29 Automatic Motor Adaptation (AMA)* may tune the Adjustable frequency drive to the motor more accurately and reduce thermal loading.

WARNING/ALARM 11, Motor thermistor over temp

The thermistor might be disconnected. Select whether the Adjustable frequency drive gives a warning or an alarm in *1-90 Motor Thermal Protection*.

Troubleshooting

- Check for motor overheating.
- Check if the motor is mechanically overloaded.
- When using terminal 53 or 54, check that the thermistor is connected correctly between either terminal 53 or 54 (analog voltage input) and terminal 50 (+10V supply) and that the terminal switch for 53 or 54 is set for voltage. Check *1-93 Thermistor Source* selects terminal 53 or 54.
- When using digital inputs 18 or 19, check that the thermistor is connected correctly between either terminal 18 or 19 (digital input PNP only) and terminal 50. Check *1-93 Thermistor Source* selects terminal 18 or 19.

WARNING/ALARM 12, Torque limit

The torque has exceeded the value in *4-16 Torque Limit Motor Mode* or the value in *4-17 Torque Limit Generator Mode*. *14-25 Trip Delay at Torque Limit* can change this from a warning only condition to a warning followed by an alarm.

Troubleshooting

- If the motor torque limit is exceeded during ramp-up, extend the ramp-up time.
- If the generator torque limit is exceeded during ramp-down, extend the ramp-down time.
- If torque limit occurs while running, possibly increase the torque limit. Be sure the system can operate safely at a higher torque.

Check the application for excessive current draw on the motor.

WARNING/ALARM 13, Overcurrent

The inverter peak current limit (approximately 200% of the rated current) is exceeded. The warning lasts about 1.5 secs., then the Adjustable frequency drive trips and issues an alarm. This fault may be caused by shock loading or fast acceleration with high inertia loads. If extended mechanical brake control is selected, trip can be reset externally.

Troubleshooting:

- Remove power and check if the motor shaft can be turned.
- Check that the motor size matches the Adjustable frequency drive.
- Check parameters 1-20 through 1-25 for correct motor data.

ALARM 14, Ground fault

There is current from the output phases to ground, either in the cable between the Adjustable frequency drive and the motor or in the motor itself.

Troubleshooting:

- Remove power to the Adjustable frequency drive and repair the ground fault.
- Check for ground faults in the motor by measuring the resistance to ground of the motor leads and the motor with a megohmmeter.

ALARM 15, Hardware mismatch

A fitted option is not operational with the present control board hardware or software.

Record the value of the following parameters and contact your Danfoss supplier:

- 15-40 FC Type*
- 15-41 Power Section*
- 15-42 Voltage*
- 15-43 Software Version*
- 15-45 Actual Typecode String*
- 15-49 SW ID Control Card*
- 15-50 SW ID Power Card*
- 15-60 Option Mounted*
- 15-61 Option SW Version* (for each option slot)

ALARM 16, Short circuit

There is short-circuiting in the motor or motor wiring. Remove power to the Adjustable frequency drive and repair the short circuit.

WARNING/ALARM 17, Control word timeout

There is no communication to the Adjustable frequency drive.

The warning will only be active when *8-04 Control Word Timeout Function* is NOT set to OFF.

If *8-04 Control Word Timeout Function* is set to *Stop* and *Trip*, a warning appears and the Adjustable frequency drive ramps down until it stops then displays an alarm.

Troubleshooting:

Check connections on the serial communication cable.

Increase *8-03 Control Word Timeout Time*

Check the operation of the communication equipment.

Verify a proper installation based on EMC requirements.

WARNING/ALARM 20, Temp. input error

The temperature sensor is not connected.

WARNING/ALARM 21, Parameter error

The parameter is out of range. The parameter number is reported in the LCP. The affected parameter must be set to a valid value.

WARNING/ALARM 22, Hoist mechanical brake

Report value will show what kind it is. 0 = The torque ref. was not reached before timeout. 1 = There was no brake feedback before timeout.

WARNING 23, Internal fan fault

The fan warning function is an extra protective function that checks if the fan is running/mounted. The fan warning can be disabled in *14-53 Fan Monitor* ([0] Disabled).

For the D, E, and F Frame filters, the regulated voltage to the fans is monitored.

Troubleshooting:

Check for proper fan operation.

Cycle power to the Adjustable frequency drive and make sure that the fan operates briefly at start-up.

Check the sensors on the heatsink and control card.

WARNING 24, External fan fault

The fan warning function is an extra protective function that checks if the fan is running/mounted. The fan warning can be disabled in *14-53 Fan Monitor* ([0] Disabled).

Troubleshooting:

Check for proper fan operation.

Cycle power to the Adjustable frequency drive and make sure that the fan operates briefly at start-up.

Check the sensors on the heatsink and control card.

WARNING 25, Brake resistor short circuit

The brake resistor is monitored during operation. If a short circuit occurs, the brake function is disabled and the warning appears. The Adjustable frequency drive is still operational but without the brake function. Remove power to the Adjustable frequency drive and replace the brake resistor (see *2-15 Brake Check*).

WARNING/ALARM 26, Brake resistor power limit

The power transmitted to the brake resistor is calculated as a mean value over the last 120 seconds of run time. The calculation is based on the intermediate circuit voltage and the brake resistance value set in *2-16 AC brake Max. Current*. The warning is active when the dissipated braking is higher than 90% of the brake resistance power. If *Trip* [2] is selected in *2-13 Brake Power Monitoring*, the Adjustable frequency drive will trip when the dissipated braking energy reaches 100%.

WARNING/ALARM 27, Brake chopper fault

The brake transistor is monitored during operation and if a short circuit occurs, the brake function is disabled and a warning is issued. The Adjustable frequency drive is still operational but, since the brake transistor has short-circuited, substantial power is transmitted to the brake resistor, even if it is inactive.

Remove power to the Adjustable frequency drive and remove the brake resistor.

WARNING/ALARM 28, Brake check failed

The brake resistor is not connected or not working. Check *2-15 Brake Check*.

ALARM 29, Heatsink temp

The maximum temperature of the heatsink has been exceeded. The temperature fault will not reset until the temperature falls below a defined heatsink temperature. The trip and reset points are different based on the Adjustable frequency drive power size.

Troubleshooting:

Check for the following conditions.

Ambient temperature too high.

Motor cable too long.

Incorrect airflow clearance above and below the Adjustable frequency drive

Blocked airflow around the Adjustable frequency drive.

Damaged heatsink fan.

Dirty heatsink.

ALARM 30, Motor phase U missing

Motor phase U between the Adjustable frequency drive and the motor is missing.

Remove power from the Adjustable frequency drive and check motor phase U.

ALARM 31, Motor phase V missing

Motor phase V between the Adjustable frequency drive and the motor is missing.

Remove power from the Adjustable frequency drive and check motor phase V.

ALARM 32, Motor phase W missing

Motor phase W between the Adjustable frequency drive and the motor is missing.

Remove power from the Adjustable frequency drive and check motor phase W.

ALARM 33, Inrush fault

Too many power-ups have occurred within a short time period. Let the unit cool to operating temperature.

WARNING/ALARM 34, communication fault

The serial communication bus on the communication option card is not working.

WARNING/ALARM 35, Option fault

An option alarm is received. The alarm is option specific. The most likely cause is a power-up or a communication fault.

WARNING/ALARM 36, Mains failure

This warning/alarm is only active if the supply voltage to the Adjustable frequency drive is lost and *14-10 Mains Failure* is NOT set to [0] *No Function*. Check the fuses to the Adjustable frequency drive and line power supply to the unit.

ALARM 37, Imb of sup volt

There is a current imbalance between the power units

ALARM 38, Internal fault

When an internal fault occurs, a code number defined in the table below is displayed.

Troubleshooting

- Cycle power
- Check that the option is properly installed
- Check for loose or missing wiring

It may be necessary to contact your Danfoss supplier or service department. Note the code number for further troubleshooting directions.

No.	Text
0	Serial port cannot be initialized. Contact yourDanfoss supplier or DanfossService Department.
256-258	Power EEPROM data is defect or too old
512-519	Internal fault. Contact yourDanfoss supplier or Danfoss Service Department.
783	Parameter value outside of min/max limits

No.	Text
1024-1284	Internal fault. Contact your Danfoss supplier or the Danfoss Service Department.
1299	Option SW in slot A is too old
1300	Option SW in slot B is too old
1302	Option SW in slot C1 is too old
1315	Option SW in slot A is not supported (not allowed)
1316	Option SW in slot B is not supported (not allowed)
1318	Option SW in slot C1 is not supported (not allowed)
1379-2819	Internal fault. Contact yourDanfoss supplier or DanfossService Department.
2820	LCP stack overflow
2821	Serial port overflow
2822	USB port overflow
3072-5122	Parameter value is outside its limits
5123	Option in slot A: Hardware incompatible with control board hardware
5124	Option in slot B: Hardware incompatible with control board hardware
5125	Option in slot C0: Hardware incompatible with control board hardware
5126	Option in slot C1: Hardware incompatible with control board hardware
5376-6231	Internal fault. Contact yourDanfoss supplier or DanfossService Department.

ALARM 39, Heatsink sensor

No feedback from the heatsink temperature sensor.

The signal from the IGBT thermal sensor is not available on the power card. The problem could be on the power card, on the gate drive card, or the ribbon cable between the power card and gate drive card.

WARNING 40, Overload of digital output terminal 27

Check the load connected to terminal 27 or remove short-circuit connection. Check *5-00 Digital I/O Mode* and *5-01 Terminal 27 Mode*.

WARNING 41, Overload of digital output terminal 29

Check the load connected to terminal 29 or remove short-circuit connection. Check *5-00 Digital I/O Mode* and *5-02 Terminal 29 Mode*.

WARNING 42, Overload of digital output on X30/6 or overload of digital output on X30/7

For X30/6, check the load connected to X30/6 or remove short-circuit connection. Check *5-32 Term X30/6 Digi Out (MCB 101)*.

For X30/7, check the load connected to X30/7 or remove short-circuit connection. Check *5-33 Term X30/7 Digi Out (MCB 101)*.

ALARM 43, Ext. supply

MCB 113 Ext. Relay Option is mounted without ext. 24 V DC. Either connect an ext. 24 V DC supply or specify that no external supply is used via *14-80 Option Supplied by External 24VDC* [0]. A change in *14-80 Option Supplied by External 24VDC* requires a power cycle.

ALARM 45, Earth Fault 2

Ground fault on start-up.

Troubleshooting

Check for proper grounding and loose connections.

Check for proper wire size.

Check motor cables for short-circuits or leakage currents.

ALARM 46, Power card supply

The supply on the power card is out of range.

There are three power supplies generated by the switch mode power supply (SMPS) on the power card: 24V, 5V, +/- 18V. When powered with 24V DC with the MCB 107 option, only the 24V and 5V supplies are monitored. When powered with three-phase AC line voltage, all three supplied are monitored.

Troubleshooting

Check for a defective power card.

Check for a defective control card.

Check for a defective option card.

If a 24V DC power supply is used, verify proper supply power.

WARNING 47, 24V supply low

The 24 V DC is measured on the control card. The external 24V DC backup power supply may be overloaded; otherwise, contact your Danfoss supplier.

WARNING 48, 1.8V supply low

The 1.8V DC supply used on the control card is outside of allowable limits. The power supply is measured on the control card. Check for a defective control card. If an option card is present, check for an overvoltage condition.

WARNING 49, Speed limit

When the speed is not within the specified range in *4-11 Motor Speed Low Limit [RPM]* and *4-13 Motor Speed High Limit [RPM]*, the Adjustable frequency drive will show a warning. When the speed is below the specified limit in *1-86 Trip Speed Low [RPM]* (except when starting or stopping) the Adjustable frequency drive will trip.

ALARM 50, AMA calibration failed

Contact your Danfoss supplier or Danfoss Service Department.

ALARM 51, AMA check U_{nom} and I_{nom}

The settings for motor voltage, motor current, and motor power are wrong. Check the settings in parameters 1-20 to 1-25.

ALARM 52, AMA low I_{nom}

The motor current is too low. Check the setting in *4-18 Current Limit*.

ALARM 53, AMA motor too big

The motor is too big for the AMA to operate.

ALARM 54, AMA motor too small

The motor is too small for the AMA to operate.

ALARM 55, AMA Parameter out of range

The parameter values of the motor are outside of the acceptable range. AMA will not run.

ALARM 56, AMA interrupted by user

The AMA has been interrupted by the user.

ALARM 57, AMA timeout

Try to restart AMA again. Repeated restarts may overheat the motor.

ALARM 58, AMA internal fault

Contact your Danfoss supplier.

WARNING 59, Current limit

The current is higher than the value in *4-18 Current Limit*. Ensure that Motor data in parameters 1-20 through 1-25 are set correctly. Possibly increase the current limit. Be sure the system can operate safely at a higher limit.

WARNING 60, External interlock

A digital input signal is indicating a fault condition external to the Adjustable frequency drive. An external interlock has commanded the Adjustable frequency drive to trip. Clear the external fault condition. To resume normal operation, apply 24V DC to the terminal programmed for external interlock. Reset the Adjustable frequency drive.

WARNING/ALARM 61, Tracking error

An error between calculated speed and speed measurement from feedback device. The function Warning/Alarm/Disabling setting is in *4-30 Motor Feedback Loss Function*. Accepted error setting in *4-31 Motor Feedback Speed Error* and the allowed time the error occur setting in *4-32 Motor Feedback Loss Timeout*. During a commissioning procedure the function may be effective.

WARNING 62, Output frequency at maximum limit

The output frequency has reached the value set in *4-19 Max Output Frequency*. Check the application to determine the cause. Possibly increase the output frequency limit. Be sure the system can operate safely at a higher output frequency. The warning will clear when the output drops below the maximum limit.

ALARM 63, Mechanical brake low

The actual motor current has not exceeded the “release brake” current within the “Start delay” time window.

WARNING/ALARM 65, Control card over temperature

The cutout temperature of the control card is 176°F [80°C].

Troubleshooting

- Check that the ambient operating temperature is within limits.
- Check for clogged filters.
- Check fan operation.
- Check the control card.

WARNING 66, Heatsink temperature low

The Adjustable frequency drive is too cold to operate. This warning is based on the temperature sensor in the IGBT module.

Increase the ambient temperature of the unit. Also, a trickle amount of current can be supplied to the Adjustable frequency drive whenever the motor is stopped by setting *2-00 DC Hold/Preheat Current* at 5% and *1-80 Function at Stop*

ALARM 67, Option module configuration has changed

One or more options have either been added or removed since the last power-down. Check that the configuration change is intentional and reset the unit.

ALARM 68, Safe stop activated

Loss of the 24V DC signal on terminal 37 has caused the filter to trip. To resume normal operation, apply 24V DC to terminal 37 and reset the filter.

ALARM 69, Power card temperaturePower card temperature

The temperature sensor on the power card is either too hot or too cold.

Troubleshooting

- Check that the ambient operating temperature is within limits.
- Check for clogged filters.
- Check fan operation.
- Check the power card.

ALARM 70, Illegal FC configuration

The control card and power card are incompatible. Contact your supplier with the type code of the unit from the nameplate and the part numbers of the cards to check compatibility.

ALARM 71, PTC 1 safe stop

Safe Stop has been activated from the PTC Thermistor Card (motor too warm). Normal operation can be resumed when the applies 24 V DC to T-37 again (when the motor temperature reaches an acceptable level) and when the digital Input from the is deactivated. When that happens, a

reset signal must be is be sent (via Bus, Digital I/O, or by pressing [RESET]).

ALARM 72, Dangerous failure

Safe Stop with Trip Lock. The dangerous failure alarm is issued if the combination of safe stop commands is unexpected. This is the case if the VLT enables X44/10 but safe stop is somehow not enabled. Furthermore, if the is the only device using safe stop (specified through selection [4] or [5] in *5-19 Terminal 37 Safe Stop*), an unexpected combination is activation of safe stop without the X44/10 being activated. The following table summarizes the unexpected combinations that lead to Alarm 72. Note that if X44/10 is activated in selection 2 or 3, this signal is ignored! However, the will still be able to activate Safe Stop.

WARNING 73, Safe stop auto restart

Safe stopped. Note that with automatic restart enabled, the motor may start when the fault is cleared.

ALARM 74, PTC Thermistor

Alarm related to the ATEX option. The PTC is not working.

ALARM 75, Illegal profile sel.

Parameter value must not be written while motor is running. Stop motor before writing MCO profile to *8-10 Control Word Profile* for instance.

WARNING 76, Power unit set-up

The required number of power units does not match the detected number of active power units.

Troubleshooting:

When replacing an F-frame module, this will occur if the power specific data in the module power card does not match the rest of the Adjustable frequency drive. Please confirm the spare part and its power card are the correct part number.

77 WARNING, Reduced power mode

This warning indicates that the Adjustable frequency drive is operating in reduced power mode (i.e., less than the allowed number of inverter sections). This warning will be generated on power cycle when the Adjustable frequency drive is set to run with fewer inverters and will remain on.

ALARM 78, Tracking error

The difference between setpoint value and actual value has exceeded the value in *4-35 Tracking Error*. Disable the function by *4-34 Tracking Error Function* or select an alarm/warning also in *4-34 Tracking Error Function*. Investigate the mechanics around the load and motor. Check feedback connections from motor – encoder – to Adjustable frequency drive. Select motor feedback function in *4-30 Motor Feedback Loss Function*. Adjust tracking error band in *4-35 Tracking Error* and *4-37 Tracking Error Ramping*.

ALARM 79, Illegal power section configuration

The scaling card is the incorrect part number or not installed. Also MK102 connector on the power card could not be installed.

ALARM 80, Unit initialized to default value

Parameter settings are initialized to default settings after a manual reset. Reset the unit to clear the alarm.

ALARM 81, CSIV corrupt

CSIV file has syntax errors.

ALARM 82, CSIV par. err.

CSIV failed to init a parameter.

ALARM 83, Illegal option combination

The mounted options are not supported to work together.

ALARM 84, No safety option

The safety option was removed without applying a general reset. Reconnect the safety option.

ALARM 88, Option detection

A change in the option layout has been detected. This alarm occurs when *14-89 Option Detection* is set to [0] *Frozen configuration* and the option layout for some reason has changed. An option layout change has to be enabled in *14-89 Option Detection* before the change is accepted. If the change of configuration is not accepted, it is only possible to reset Alarm 88 (Trip-lock) when the option configuration has been re-established/corrected.

WARNING 89, Mechanical brake sliding

The hoist brake monitor has detected a motor speed > 10rpm.

ALARM 90, Feedback mon.

Check the connection to encoder/ resolver option and eventually replace the MCB 102 or MCB 103.

ALARM 91, Analogue input 54 wrong settings

Switch S202 has to be set in position OFF (voltage input) when a KTY sensor is connected to analog input terminal 54.

ALARM 92, No flow

A no-flow condition has been detected in the system. *22-23 No-Flow Function* is set for alarm. Troubleshoot the system and reset the Adjustable frequency drive after the fault has been cleared.

ALARM 93, Dry pump

A no-flow condition in the system with the Adjustable frequency drive operating at high speed may indicate a dry pump. *22-26 Dry Pump Function* is set for alarm. Troubleshoot the system and reset the Adjustable frequency drive after the fault has been cleared.

ALARM 94, End of curve

Feedback is lower than the setpoint. This may indicate leakage in the system. *22-50 End of Curve Function* is set for alarm. Troubleshoot the system and reset the Adjustable frequency drive after the fault has been cleared.

ALARM 95, Broken belt

Torque is below the torque level set for no load, indicating a broken belt. *22-60 Broken Belt Function* is set for alarm. Troubleshoot the system and reset the Adjustable frequency drive after the fault has been cleared.

ALARM 96, Start delayed

Motor start has been delayed due to short-cycle protection. *22-76 Interval between Starts* is enabled. Troubleshoot the system and reset the Adjustable frequency drive after the fault has been cleared.

WARNING 97, Stop delayed

Stopping the motor has been delayed due to short cycle protection. *22-76 Interval between Starts* is enabled. Troubleshoot the system and reset the Adjustable frequency drive after the fault has been cleared.

WARNING 98, Clock fault

Time is not set or the RTC clock has failed. Reset the clock in *0-70 Date and Time*.

WARNING 163, ATEX ETR cur.lim.warning

The warning limit of ATEX ETR rated current curve has been reached. The warning is activated at 83% and deactivated at 65% of the permitted thermal overload.

ALARM 164, ATEX ETR cur.lim.alarm

The ATEX ETR permitted thermal overload has been exceeded.

WARNING 165, ATEX ETR freq.lim.warning

The Adjustable frequency drive is running more than 50 sec. below the permitted minimum frequency (*1-98 ATEX ETR interpol. points freq. [0]*).

ALARM 166, ATEX ETR freq.lim.alarm

The Adjustable frequency drive has operated more than 60 sec. (in a period of 600 sec.) below the permitted minimum frequency (*1-98 ATEX ETR interpol. points freq. [0]*).

ALARM 243, Brake IGBT

This alarm is only for F Frame drives. It is equivalent to Alarm 27. The report value in the alarm log indicates which power module generated the alarm:

ALARM 244, Heatsink temperature

This alarm is only for F Frame adjustable frequency drives. It is equivalent to Alarm 29. The report value in the alarm log indicates which power module generated the alarm.

ALARM 245, Heatsink sensor

This alarm is only for F Frame adjustable frequency drives. It is equivalent to Alarm 39. The report value in the alarm log indicates which power module generated the alarm.

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 Adjustable frequency drive.
- 2 = right inverter module in F1 or F3 Adjustable frequency drive.
- 3 = right inverter module in F2 or F4 Adjustable frequency drive.
- 5 = rectifier module.

ALARM 246, Power card supply

This alarm is only for F Frame Adjustable frequency drive. It is equivalent to Alarm 46. The report value in the alarm log indicates which power module generated the alarm.

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 Adjustable frequency drive.
- 2 = right inverter module in F1 or F3 Adjustable frequency drive.
- 3 = right inverter module in F2 or F4 Adjustable frequency drive.
- 5 = rectifier module.

ALARM 69, Power card temperaturePower card temperature

This alarm is only for F Frame Adjustable frequency drive. It is equivalent to Alarm 69. The report value in the alarm log indicates which power module generated the alarm.

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 Adjustable frequency drive.
- 2 = right inverter module in F1 or F3 Adjustable frequency drive.
- 3 = right inverter module in F2 or F4 Adjustable frequency drive.
- 5 = rectifier module.

ALARM 248, Illegal power section configuration

This alarm is only for F Frame adjustable frequency drives. It is equivalent to Alarm 79. The report value in the alarm log indicates which power module generated the alarm:

- 1 = left most inverter module.
- 2 = middle inverter module in F2 or F4 Adjustable frequency drive.
- 2 = right inverter module in F1 or F3 Adjustable frequency drive.
- 3 = right inverter module in F2 or F4 Adjustable frequency drive.
- 5 = rectifier module.

WARNING 249, Rect. low temperature
IGBT sensor fault (highpower units only).

WARNING 250, New spare part

A component in the Adjustable frequency drive has been replaced. Reset the Adjustable frequency drive for normal operation.

WARNING 251, New type code

The power card or other components have been replaced and the type code changed. Reset to remove the warning and resume normal operation.

Index
A

Abbreviations	0-1
Alarm	
Log.....	2-138
Messages.....	4-1
Word.....	2-85
Analog Inputs	0-2, 4-6

B

Braking	
Braking.....	4-8
Energy.....	0-3
Break-away Torque	0-2
Bus Controlled	2-67

C

Cabling	2-108
Catch Up	2-51
Change-Of-State	2-107
Changing	
A Group Of Numeric Data Values.....	1-8
A Text Value.....	1-8
Data.....	1-8
Clockwise	2-21
Coasting	0-2, 1-3
Communication Option	4-9
Configuration	2-84, 2-106
Control Cables	0-7
Cooling	2-26
Current Rating	4-6

D

Data Log Settings	2-136
DC Link	4-6
Default Settings	1-1
Definitions	0-2
Derating	4-6
DeviceNet	2-101
Digital Input	4-7
Display	
Mode.....	1-4
Mode - Selection Of Readouts.....	1-4
Drive Identification	2-139

E

Electrical Terminals	0-6
Encoder Pulses	2-67
Environment	2-133
Ethernet	2-105, 2-108
EtherNet/IP	2-107
ETR	2-142

F

Feedback	4-9, 4-12
Forward Open	2-107
Freeze Output	0-2
Fuses	4-9

G

Graphical Display	1-1
--------------------------------	-----

H

Historic Log	2-137
---------------------------	-------

I

IGMP	2-108
Incremental Encoder	2-143
Indexed Parameters	1-9
Infinitely Variable Change Of Numeric Data Value	1-9
Initialization	1-1
Input Terminals	4-6

J

Jog	0-2
------------------	-----

L

Language	
Package 1.....	2-2
Package 2.....	2-2
Package 3.....	2-2
Package 4.....	2-2
LCP	1-1
LEDs	1-1, 1-2
Line Power Supply	0-4
Local	
Control Keys.....	1-1
Reference.....	2-3

M
Main

Menu.....	1-5
Menu Mode.....	1-2, 1-8
Reactance.....	2-16

MCB

113.....	2-54, 2-59, 2-75, 2-76
114.....	2-154

Motor

Current.....	4-6, 4-10
Data.....	4-7, 4-10
Power.....	4-10
Protection.....	2-24
Status.....	2-141

Multicast	2-108
------------------------	-------

N

Network	2-105, 2-107, 2-108
----------------------	---------------------

Numerical Local Control Panel	1-9
--	-----

O

Operating Mode	2-3
-----------------------------	-----

Option Ident	2-139
---------------------------	-------

Output

Current.....	4-6
Speed.....	2-21

P
Parameter

Access.....	2-104
Info.....	2-140
Selection.....	1-8
Set-up.....	1-5

Password	2-11
-----------------------	------

Potentiometer Reference	0-8
--------------------------------------	-----

Programming	4-6
--------------------------	-----

Protection Mode	0-5
------------------------------	-----

Pulse Start/Stop	0-8
-------------------------------	-----

Q
Quick

Menu.....	1-2, 1-5
Menu Mode.....	1-2, 1-5
Transfer Of Parameter Settings Between Multiple Adjustable Frequency Drives.....	1-3

R

Rated Motor Speed	0-2
--------------------------------	-----

RCD	0-3
------------------	-----

Reference	2-107
------------------------	-------

Relay Outputs	2-54
----------------------------	------

Reset	4-6, 4-12, 1-3
--------------------	----------------

S

Safety Precautions	0-4
---------------------------------	-----

Serial Communication	0-2
-----------------------------------	-----

Shielded/armored	0-7
-------------------------------	-----

Speed Up/Down	0-8
----------------------------	-----

Start

Delay.....	2-21
------------	------

Function.....	2-21
---------------	------

Start/Stop	0-7
-------------------------	-----

Stator Leakage Reactance	2-16
---------------------------------------	------

Status

Status.....	1-2
-------------	-----

Messages.....	1-1
---------------	-----

Step-by-Step	1-9
---------------------------	-----

Supply Voltage	4-9
-----------------------------	-----

Switching Frequency	4-6
----------------------------------	-----

Symbols	0-1
----------------------	-----

Synchronous Motor Speed	0-2
--------------------------------------	-----

T
Terminal

X45/1 Output Min Scale, 6-71.....	2-76
-----------------------------------	------

X45/3 Output Min Scale, 6-81.....	2-77
-----------------------------------	------

Thermal Load	2-142
---------------------------	-------

Thermistor	2-24, 0-4
-------------------------	-----------

Thrmstr	4-7
----------------------	-----

Trip Reset	2-129
-------------------------	-------

V

Value	1-9
--------------------	-----

Voltage Reference Via A Potentiometer	0-8
--	-----

VCplus	0-4
---------------------	-----

W

Warning Word	2-85
---------------------------	------

Warnings	4-1
-----------------------	-----



www.danfoss.com/drives

Danfoss shall not be responsible for any errors in catalogs, brochures or other printed material. Danfoss reserves the right to alter its products at any time without notice, provided that alterations to products already on order shall not require material changes in specifications previously agreed upon by Danfoss and the Purchaser. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.

Danfoss Drives

4401 N. Bell School Rd.
Loves Park IL 61111 USA
Phone: 1-800-432-6367
1-815-639-8600
Fax: 1-815-639-8000
www.danfossdrives.com

Danfoss Drives

8800 W. Bradley Rd.
Milwaukee, WI 53224 USA
Phone: 1-800-621-8806
1-414-355-8800
Fax: 1-414-355-6117
www.danfossdrives.com



