WIRE COLOR SCHEME TERMINAL IDENTIFICATION BLACK - LINE VOLTAGE RED - AC CONTROL - DRIVE TERMINAL WHITE - AC GROUNDED - CUSTOMER TERMINAL CIRCUIT CONDUCTOR
BLUE - DC CONTROL GREEN - CHASSIS GROUND EARTH GROUND EARTH GROUND \neg 4T1 (L1) M2 4T2 (L2) (T2) 2T1 * AC MOTOR 1 *CUSTOMER 3L1 (U1) (U2) 4L1 (F16A) 5L1 L1/R/91 VLT (L1) (T1) 1T1 (L1) T1 INPUT SUPPLIED T1/U/96 3L2 (V1) (V2) 4L2 (F16B) 5L2 (L2/S/92 POWER ADJUSTABLE FREQUENCY (L2) (T2) 1T2 (L2) T2 2T2 FEEDER BLK 2L2 T2/V/97 3 PH, 480V, 3L3 (W1) (W2) 4L3 (F16C) 5L3 (L2/5/92) 1.3/T/93 DRIVE 2T3 (L3) (T3) 1T3 (L3) T3 CIRCUIT BLK 2L3 4T3 (L3) (T3) PROTECTION · :__\ T3/W/98 (AFD) 60Hz (SEE NOTE 3) CB1 INPUT DRIVE INPUT FUSES DRIVE CIRCUIT DISCONNECT REACTOR BREAKER (L1) (T1) (L2) (T2) *AC MOTOR 2 EARTH GROUND GRN (L3) (T3) (L3) (T3) 3T3 (L3) 163 RED X2 100 WHT F12 115VAC 250V CR6 (12) 5 (11) TS1 HEATER (SET: 65° F) CR6 167 (1)-2)FAN 1 (SET: 80° F) (9) (5) (23) (24) TB2 TS1 TO SHEET 2 TO SHEET 2

WARNING!

THE FOLLOWING TABLE LISTS THE PARAMETERS THAT ARE SET DIFFERENT FROM THE DRIVE DEFAULT SETTINGS. ADDITIONAL PARAMETER SETTINGS MAY BE REQUIRED FOR YOUR APPLICATION.


1. * INDICATES COMPONENTS NOT SUPPLIED BY MANUFACTURER.

- REFER TO THE INSTALLATION AND OPERATION MANUAL FOR DRIVE FUNCTIONS AND PARAMETER SETTINGS.
- 3. FEEDER CIRCUIT PROTECTION, INPUT POWER AND MOTOR WRING MUST BE SELECTED IN ACCORDANCE WITH THE N.E.C., ANY APPLICATION LOCAL CODES AND THE LOAD CURRENT RATING.
- 4. REPLACE JUMPER 'J1' WITH NORMALLY CLOSED SAFETY INTERLOCK CONTACT AS NECESSARY. CONTACT MUST BE RATED 1/4 HP @ 120VAC MINIMUM.
- 5. PANEL MAY REQUIRE DERATING, CONSULT DRIVE MANUAL OR FACTORY FOR FOLLOWING CONDITIONS: 5.1. HIGHER SWITCHING FREQUENCY THAN DRIVE DEFAULT
- HIGHER THAN PANEL LISTED AMBIENT TEMPERATURES
- 5.3. ELEVATION ABOVE 3300 FEET (1000 METERS)
- 5.4. LONG MOTOR LEAD LENGTHS

DRIVE PARAMETER SETTINGS

PARAMETER #	NAME	SETTING	VALUE
0-02	MOTOR SPEED UNIT	1	HZ
0-03	REGIONAL SETTINGS	1	NORTH AMERICA
1-03	TORQUE CHAR.	3	AUTO ENERGY OPTIM VT
5-02	TERMINAL 29 TYPE	1	OUTPUT
5-31	TERMINAL 29	5	RUNNING
14-20	RESET MODE	13	INFINITE AUTO REST

В			- NOTICE - THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.	DRN	NAME	NI	EMA 3R,480V,2C			- Les
Α	SP10119	11/10	IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED	DIM			DRIVE DISC, DR			Janjuss
DR	SP10076	09/10	IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED	APR	MODEL	,JMB1,IR,CUN	TACT MOTOR SE	LEUI,I	5,1116	
REV	ECN	DATE	TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES AND SHALL BE RETURNED UPON REQUEST.	D TM	MODEL	VLT	PAGE <u>1</u> OF <u>2</u>	SIZE	DWG 18	5BU593

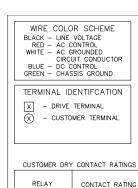

CR1, CR6

В

Α

DR

REV

SP10119

SP10076

ECN

11/10



X INDICATES CONTACT CLOSED					
POSITION					
CONTACT	DRIVE	OFF	BYPASS		
13-14			Χ		
23-24	Χ				

CONTACT SEQUENCE CHART FOR S1

5A @ 120VAC

1/10 HP @ 120VAC 10A @ 120/240VAC

CONTACT SEQUENCE CHART FOR S2

X INDICATES CONTACT CLOSED					
POSITION					
CONTACT	MOTOR 1	AUTO	MOTOR 2		
11-12	X	 X			
13-14			Χ		
21-22		X	X		
23-24	Х				

- NOTICE -

IT IS LOANED BY DANFOSS DRIVES SUBJECT TO THE CONDITIONS THAT IT AND

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION OF DANFOSS DRIVES.

THE INFORMATION EMBODIED THEREIN SHALL BE USED ONLY FOR RECORD AND REFERENCE PURPOSES, SHALL NOT BE USED OR CAUSED TO BE USED

IN ANY WAY PREJUDICIAL TO THE INTERESTS OF DANFOSS DRIVES, SHALL

TO ANYONE WITHOUT THE DIRECT WRITTEN PERMISSION OF DANFOSS DRIVES

NOT BE REPRODUCED OR COPIED IN WHOLE OR IN PART, OR DISCLOSED


AND SHALL BE RETURNED UPON REQUEST.

DRN

APR

DTM

DTM

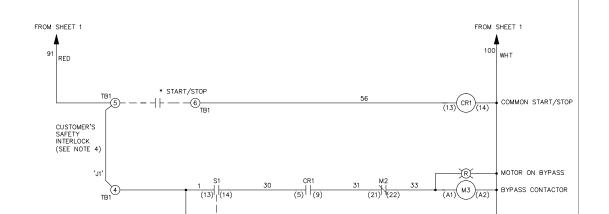


NEMA 3R,480V,2C

,MAIN CB, DRIVE DISC, DRIVE FUSE

,3MB1,IR,CONTACT MOTOR SELECT,1 FAN

PAGE <u>2</u> OF <u>2</u>

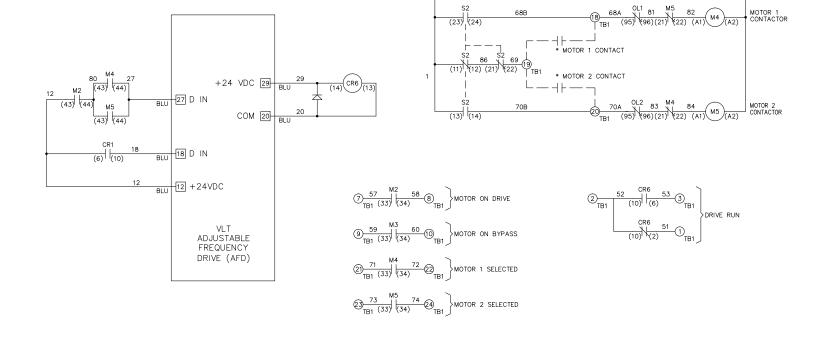

NAME

MODEL

VLT